



## 8. Valve Clearance

### A: INSPECTION

- 1) Disconnect the ground cable from battery.
- 2) Remove the engine from vehicle. <Ref. to ME(STI)-30, REMOVAL, Engine Assembly.>
- 3) Remove the timing belt cover RH. <Ref. to ME(STI)-50, REMOVAL, Timing Belt Cover.>
- 4) When inspecting #1 and #3 cylinders
  - (1) Disconnect the connector (A) from the exhaust camshaft position sensor RH and the connector (B) from the exhaust oil flow control solenoid valve RH.

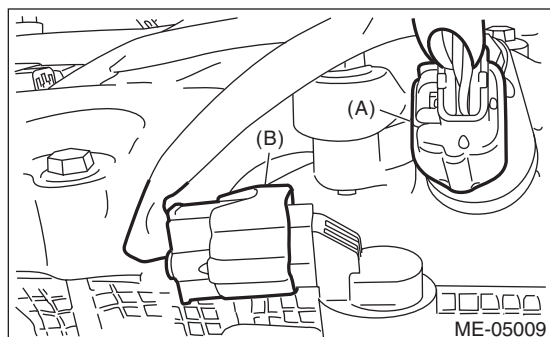

- (2) Remove the clip (A) which hold the engine harness to the rocker cover RH.

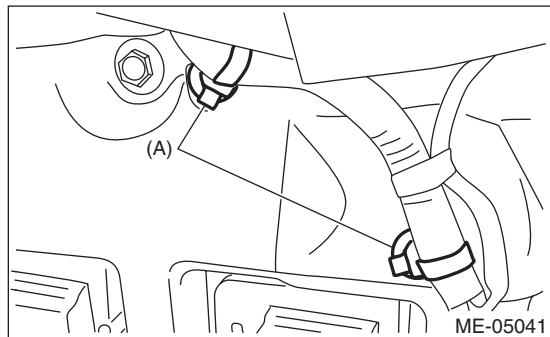



- (3) Remove the ignition coil. <Ref. to IG(STI)-7, REMOVAL, Ignition Coil.>

- (4) Disconnect PCV hose (A) and vacuum hose (B) from the rocker cover RH.


#### NOTE:

Pinch the clamp by fitting the cut out in the ST with the protrusion on the clamp as shown in the figure, and unlock the clamp.


ST 18353AA000 CLAMP PLIERS

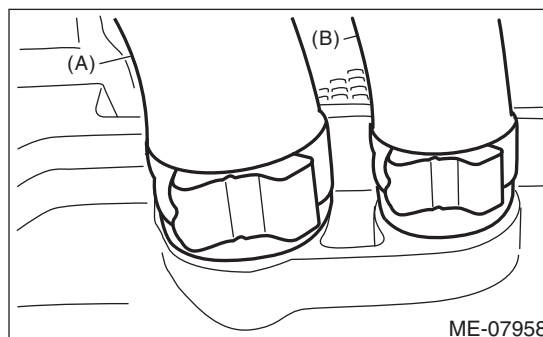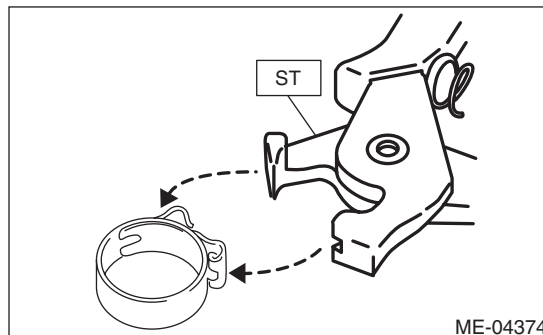

- (5) Remove the rocker cover RH.
- 5) When inspecting #2 and #4 cylinders
  - (1) Remove the secondary air pump. <Ref. to EC(STI)-53, REMOVAL, Secondary Air Pump.>
  - (2) Disconnect the connector (A) from the exhaust camshaft position sensor LH and the connector (B) from the exhaust oil flow control solenoid valve LH.

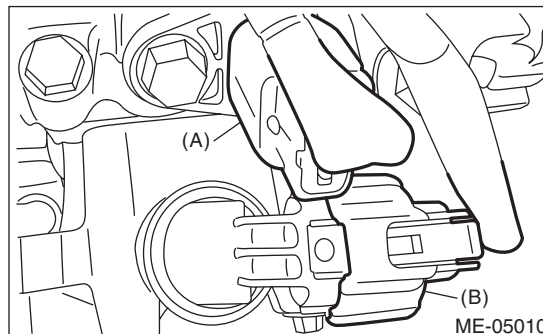

- (3) Remove the air duct B (B) from the rocker cover LH and the air duct A (A).

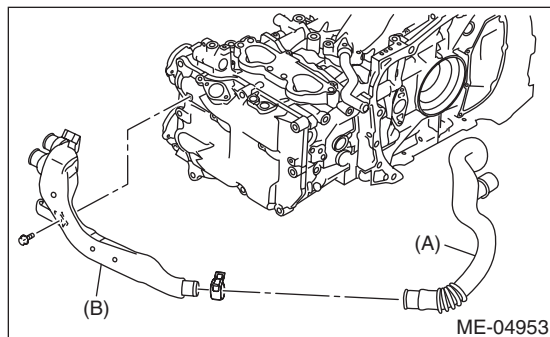



- (4) Remove the ignition coil. <Ref. to IG(STI)-7, REMOVAL, Ignition Coil.>

- (5) Disconnect PCV hose (A) and vacuum hose (B) from the rocker cover LH.

**NOTE:**

Pinch the clamp by fitting the cut out in the ST with the protrusion on the clamp as shown in the figure, and unlock the clamp.

ST 18353AA000 CLAMP PLIERS

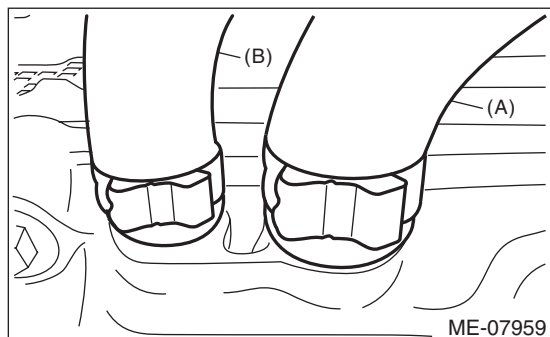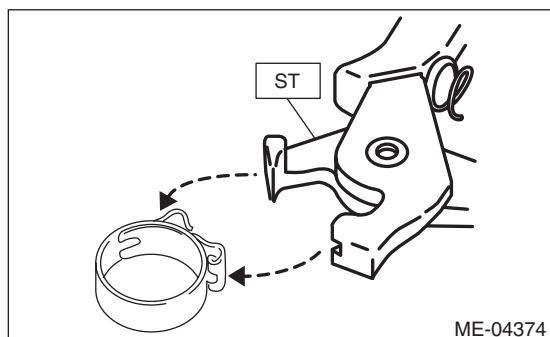


- (6) Remove the rocker cover LH.

- 6) Turn the crank pulley clockwise until the round mark on the camshaft sprocket is set to position shown in the figure.


**NOTE:**

Turn the crank pulley using a socket wrench.


- Measurement of clearance of #1 cylinder intake valve and #3 cylinder exhaust valve

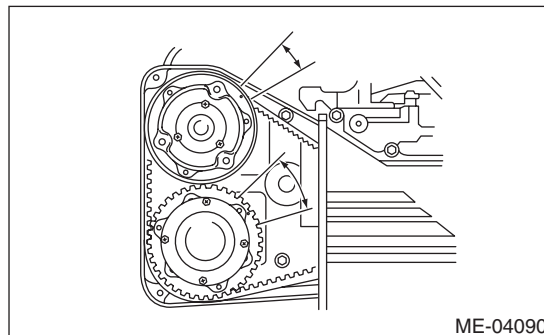


- Measurement of clearance of #2 cylinder exhaust valve and #3 cylinder intake valve

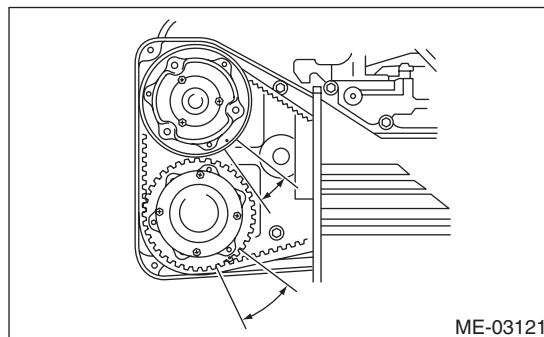

- Measurement of clearance of #2 cylinder intake valve and #4 cylinder exhaust valve

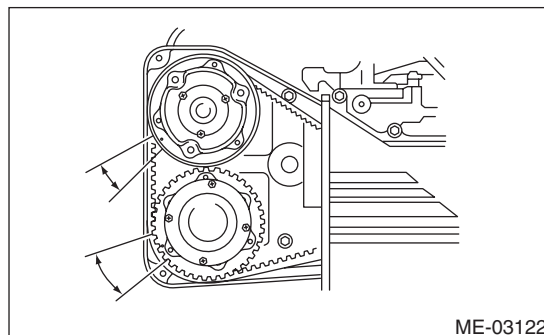

- Measurement of clearance of #1 cylinder exhaust valve and #4 cylinder intake valve

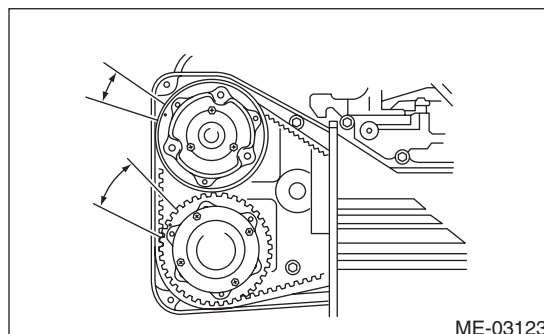

# Valve Clearance

## MECHANICAL

7) Measure the clearance of intake valve and exhaust valve using thickness gauge (A).

### NOTE:

- Insert a thickness gauge in a direction as horizontal as possible with respect to the valve lifter.
- Lift up the vehicle, and then measure the exhaust valve clearances.
- If the measured value is not within the inspection value, take notes of the value in order to adjust the valve clearance later on.


### Valve clearance (inspection value):

#### Intake

$0.20^{+0.04}_{-0.06}$  mm ( $0.0079^{+0.0016}_{-0.0024}$  in)

#### Exhaust

$0.35 \pm 0.05$  mm ( $0.0138 \pm 0.0020$  in)

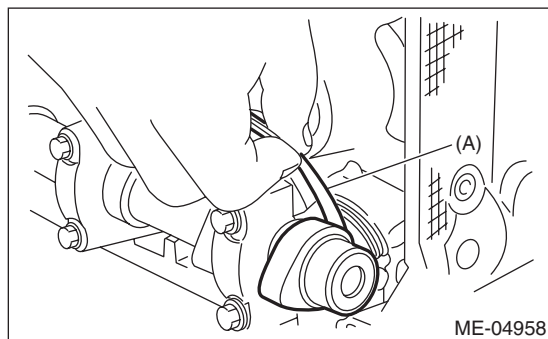



8) If necessary, adjust the valve clearance. <Ref. to ME(STI)-29, ADJUSTMENT, Valve Clearance.>

9) After inspection, install the related parts in the reverse order of removal.

### NOTE:


- Refer to "Camshaft" when installing the rocker cover. <Ref. to ME(STI)-64, INSTALLATION, Camshaft.>
- Use a new clamp, fit the cut out in the ST with the protrusion on the clamp as shown in the figure, and lock the clamp.

ST 18353AA000 CLAMP PLIERS

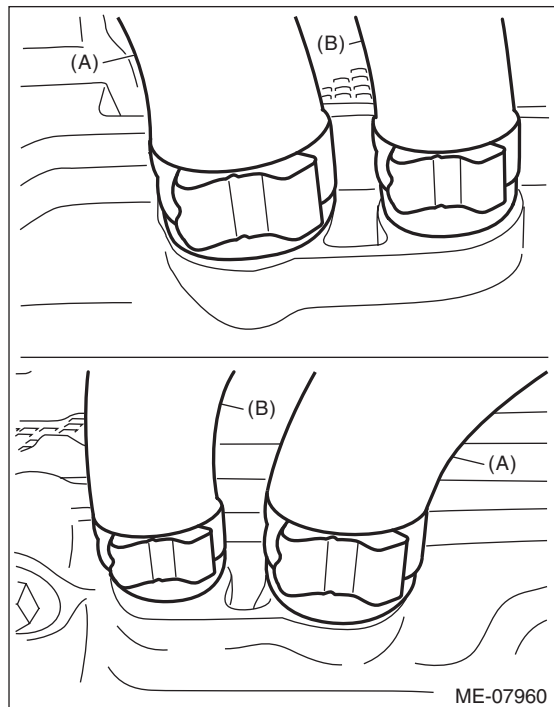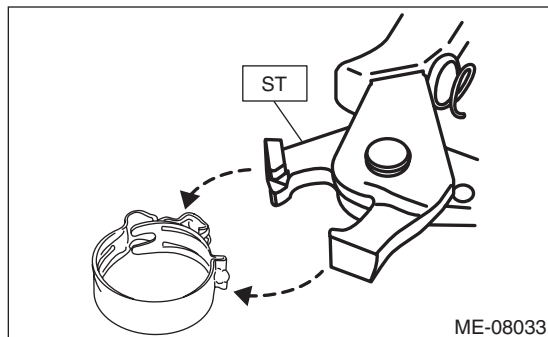

### Tightening torque:

**6.4 N·m (0.7 kgf-m, 4.7 ft-lb)**

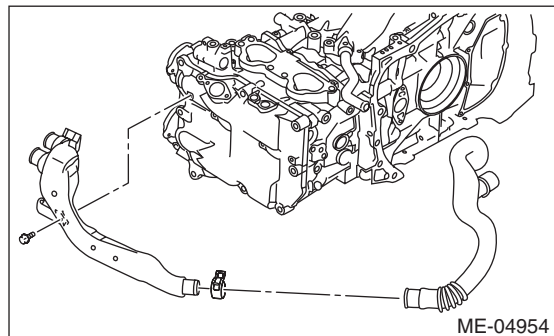


## B: ADJUSTMENT

1) Measure all the valve clearances. <Ref. to ME(STI)-26, INSPECTION, Valve Clearance.>

### NOTE:


Record the measured value of each valve clearance.

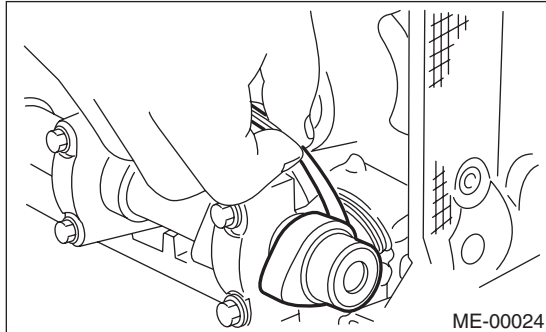

2) Remove the camshaft. <Ref. to ME(STI)-62, REMOVAL, Camshaft.>

3) Remove the valve lifter.

4) Measure the thickness of valve lifter using micrometer.

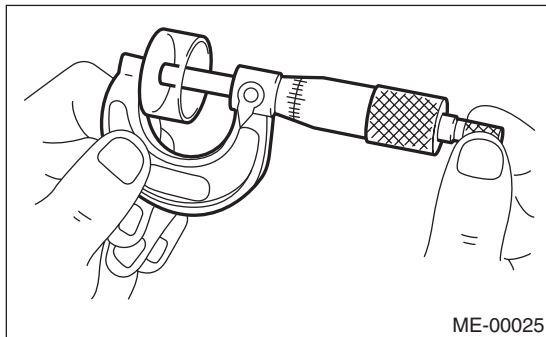

5) Select a valve lifter of suitable thickness using the measured valve clearance and valve lifter thickness, and install it.

### NOTE:

Use a new valve lifter.

Unit: mm (in)
Intake valve: $S = (V + T) - 0.19$ (0.0075)
Exhaust valve: $S = (V + T) - 0.35$ (0.0138)
S: Valve lifter thickness required
V: Measured valve clearance
T: Valve lifter thickness to be used

6) Install the camshaft. <Ref. to ME(STI)-64, INSTALLATION, Camshaft.>

7) Install the cam sprocket. <Ref. to ME(STI)-60, INSTALLATION, Cam Sprocket.>

8) Install the timing belt. <Ref. to ME(STI)-54, TIMING BELT, INSTALLATION, Timing Belt.>

9) Measure all valves for valve clearance again at this time. If the valve clearance is not within the adjustment value, repeat the procedure over again from step 2).

### Valve clearance (adjustment value):

#### Intake

$0.20^{+0.01}_{-0.03}$  mm ( $0.0079^{+0.0004}_{-0.0012}$  in)

#### Exhaust

$0.35 \pm 0.02$  mm ( $0.0138 \pm 0.0008$  in)

10) After adjustment, install the related parts in the reverse order of removal.