

# **SIEMENS**



## **BACnet PTEC Controller**

## **Unit Conditioner - Electronic Output**

## **Owner's Manual**



# Table of Contents

<b>How To Use This Manual .....</b>	<b>5</b>
<b>Chapter 1 – Product Overview .....</b>	<b>7</b>
Hardware Inputs .....	8
Hardware Outputs.....	10
Ordering Notes .....	10
Power Wiring .....	12
Communication Wiring.....	12
Temperature Sensors .....	12
Room Temperature Sensor .....	12
Duct Temperature Sensor .....	13
Actuators.....	13
Related Equipment .....	13
<b>Chapter 2 – Applications.....</b>	<b>14</b>
Basic Operation .....	14
Control Temperature Setpoints .....	14
Day/Night Mode.....	14
Calibration .....	14
Fail-Mode Operation.....	14
Heating and Cooling Switchover .....	14
Electric Reheat .....	15
Staged Cooling.....	15
Fan Operation .....	15
Notes .....	15
Application 6640/6642 Variable Air Volume Pressure Dependent Cooling or Heating .....	16
Application 6641/6643 Variable Air Volume Pressure Dependent with Hot Water Heat ..	18
Application 6650/6644 Two-Pipe Fan Coil Unit Cooling or Heating .....	20
Application 6651/6645 Fan Coil Unit Cooling and Heating .....	21
Application 6652/6646 Fan Coil Unit Two-Stage Cooling and Electric Heat.....	22
Application 6653/6647 Fan Coil Unit Two-Stage Cooling and Hot Water Heat .....	23
Application 6654/6648 Fan Coil Unit Cooling and Electric Heat or VAV Pressure Dependent with Electric Heat.....	24
Application 6689/6691 Slave Mode .....	26
<b>Chapter 3 – Point Database .....</b>	<b>27</b>
<b>Chapter 4 – Basic Service and Maintenance .....</b>	<b>35</b>
Basic Service Information .....	35
Preventive Maintenance .....	35
Safety Features .....	36
<b>Glossary.....</b>	<b>37</b>

<b>Index</b>	<b>.....41</b>
--------------	----------------

# How To Use This Manual

This manual is written for the owner and user of the Siemens BACnet PTEC Unit Conditioner Controller. It is designed to help you become familiar with the Siemens BACnet PTEC and its applications.

This section covers manual organization, manual conventions, symbols used in the manual, and other information that will help you use this manual.

## Manual Organization


This manual contains the following chapters:

- *Chapter 1 - Hardware*, describes the hardware components and the accessories that are used with the BACnet PTEC.
- *Chapter 2 - Applications*, describes the control applications available in the model of the BACnet PTEC that includes a terminal block for wireable input/output connections.
- *Chapter 3 - Point Database*, defines the point database descriptors and includes address and applications.
- *Chapter 4 - Basic Service and Maintenance*, describes basic corrective measures you can take should you encounter a problem when using the BACnet PTEC. For issues not covered in this chapter, consult your local Siemens Industry representative.
- The *Glossary* describes the terms and acronyms used in this manual.
- The *Index* helps you locate information presented in this manual.

## Manual Conventions




The following table lists conventions to help you use this manual in a quick and efficient manner.

Convention	Examples
Numbered Lists (1, 2, 3...) indicate a procedure with sequential steps.	1. Turn OFF power to the field panel. 2. Turn ON power to the field panel. 3. Contact the local Siemens Industry representative.
Conditions that must be completed or met before beginning a task are designated with a ▷. Intermediate results (what will happen following the execution of a step), are designated with a ⇨. Results, which inform the user that a task was completed successfully, are designated with a ⇒.	▷Composer software is properly installed. ▷A Valid license is available. 1. Select <b>Start &gt; Programs &gt; Siemens &gt; GMS &gt; Composer</b> . ⇨The Project Management window displays. 2. Open an existing project or create a new one. ⇒The project window displays.
Actions that should be performed are specified in boldface font.	Type <b>F</b> for Field panels. Click <b>OK</b> to save changes and close the dialog box.
Error and system messages are displayed in Courier New font.	The message <code>Report Definition successfully renamed</code> displays in the status bar.
New terms appearing for the first time are	The field panel continuously executes a user-

Convention	Examples
italicized.	defined set of instructions called the <i>control program</i> .
	This symbol signifies Notes. Notes provide additional information or helpful hints.
Cross references to other information are indicated with an arrow and the page number, enclosed in brackets: [→92]	For more information on creating flowcharts, see Flowcharts [→92].
Placeholders indicate text that can vary based on your selection. Placeholders are specified by italicized letters, and enclosed with brackets [ ].	Type <b>A C D H</b> [ <i>username</i> ] [ <i>field panel #</i> ].

## Manual Symbols

The following table lists the safety symbols used in this manual to draw attention to important information.

Symbol	Meaning	Description
<b>NOTICE</b>	CAUTION	Equipment damage may occur if a procedure or instruction is not followed as specified. (For online documentation, the NOTICE displays in white with a blue background.)
	CAUTION	Minor or moderate injury may occur if a procedure or instruction is not followed as specified.
	WARNING	Personal injury or property damage may occur if a procedure or instruction is not followed as specified.
	DANGER	Electric shock, death, or severe property damage may occur if a procedure or instruction is not followed as specified.

## Getting Help

For more information about the Siemens BACnet PTEC Unit Conditioner Controller, contact your local Siemens Industry representative.

## Where to Send Comments

Your feedback is important to us. If you have comments about this manual, please submit them to [SBT\\_technical.editor.us.sbt@siemens.com](mailto:SBT_technical.editor.us.sbt@siemens.com)

# Chapter 1 – Product Overview

The Siemens BACnet PTEC Unit Conditioner Controller is used in pressure dependent terminal box, fan coil unit, and unit conditioner applications. It provides Direct Digital Control (DDC) for seven applications and is available in both short and long board hardware assemblies.

- The controller can operate as an independent, stand-alone, DDC room controller or it can be networked with a field panel.
- The controller provides all termination, input/output, system and local communication connections.
- The controller hardware consists of the controller with cover and mounting bracket (See Figure Siemens BACnet PTEC Unit Conditioner Controller).

The following applications are covered:

## Pressure Dependent Terminal Boxes

- Cooling or Heating (Application 6640-short board, Application 6642-long board)
- Cooling and Hot Water Heat (Application 6641-short board, Application 6643-long board)

## Fan Coil / Unit Conditioners

- Two-pipe Cooling or Heating with additional Hot Water Coil (Application 6650-short board, Application 6644-long board)
- Cooling and Heating (Application 6651-short board, Application 6645-long board)
- Two-stage Cooling and Electric Heat (Application 6652-short board, Application 6646-long board)
- Two-stage Cooling and Hot Water Heat (Application 6653-short board, Application 6647-long board)
- Cooling and Electric Heat or VAV Pressure Dependent with Electric Heat (Application 6654-short board, Application 6648-long board)
- Slave Mode (Application 6689-short board, Application 6691-long board)
- Slave Mode (No control; available for set up and point extension device) (Application 6689-short board, Application 6691-long board)



### NOTE:

Application 6654-short board, Application 6648-long board can also control a Variable Air Volume pressure dependent terminal box with electric heat. See the application description for Application 6654-short board, Application 6648-long board.

## Programmability

The Programmable BACnet TEC (PTEC) tool allows the introduction of custom PPCL into a BACnet TEC. This software allows you to create your own custom application and is used to add, remove, modify, back up and restore BACnet Programmable TECs.

Standard BACnet TEC applications reside in the PTEC and can run alongside the custom PPCL. It is important that BACnet TEC custom PPCL applications command points at priority 15 or higher.

The custom PPCL can be used one of the following ways:

- With the PTEC in slave mode, it is controlled exclusively by the custom PPCL.
- PPCL can be used to exclusively control spare I/O.
- With a standard PTEC application running, custom PPCL can command points at a higher priority which will override points in the application.

Insight and Commissioning Tool (CT) view the PTEC as a regular BACnet TEC.

For more information on programmability, see the *BACnet PTEC Tool User Manual* (125-5051).

## Hardware Inputs

### Analog

	Short Board	Long Board
Duct temperature sensor	Application 6640	Application 6642
Room temperature sensor	Application 6640	Application 6642
	Application 6641	Application 6643
	Application 6650	Application 6644
	Application 6651	Application 6645
	Application 6652	Application 6646
	Application 6653	Application 6647
Room temperature setpoint dial (optional)	Application 6654	Application 6648
	Application 6640	Application 6642
	Application 6641	Application 6643
	Application 6650	Application 6644
	Application 6651	Application 6645
	Application 6652	Application 6646
Pipe temperature sensor	Application 6653	Application 6647
	Application 6654	Application 6648
	Application 6640	Application 6642
	Application 6641	Application 6643
	Application 6650	Application 6644
	Application 6651	Application 6645
Spare AI 3 temperature sensor (10K or 100K thermistor, software selectable)	Application 6652	Application 6646
	Application 6653	Application 6647
	Application 6654	Application 6648
	Application 6640	Application 6642
	Application 6641	Application 6643
	Application 6650	Application 6644
Spare AI 3 switch selectable 0-10V, 4-20 mA	Application 6651	Application 6645
	Application 6652	Application 6646
	Application 6653	Application 6647
	Application 6654	Application 6648
	Application 6640	Application 6642
	Application 6641	Application 6643
Spare AI 4 temperature sensor (10K or 100K thermistor, software selectable)	Application 6650	Application 6644
	Application 6651	Application 6645
	Application 6652	Application 6646
	Application 6653	Application 6647
	Application 6654	Application 6648
	Application 6640	Application 6642



Spare AI 5 temperature sensor (10K or 100K thermistor, software selectable)

Application 6642  
Application 6643  
Application 6644  
Application 6645  
Application 6646  
Application 6647  
Application 6648

RM RH (set per STAT SUPV table)

Application 6640  
Application 6641  
Application 6650  
Application 6651  
Application 6652  
Application 6653  
Application 6654

Application 6642  
Application 6643  
Application 6644  
Application 6645  
Application 6646  
Application 6647  
Application 6648

RH CO2 (set per STAT SUPV table)

Application 6640  
Application 6641  
Application 6650  
Application 6651  
Application 6652  
Application 6653  
Application 6654

Application 6642  
Application 6643  
Application 6644  
Application 6645  
Application 6646  
Application 6647  
Application 6648

## Digital

### Short Board

### Long Board

Night mode override (optional)

Application 6640  
Application 6641  
Application 6650  
Application 6651  
Application 6652  
Application 6653  
Application 6654

Application 6642  
Application 6643  
Application 6644  
Application 6645  
Application 6646  
Application 6647  
Application 6648

Wall switch (optional)

Application 6640  
Application 6641  
Application 6650  
Application 6651  
Application 6652  
Application 6653  
Application 6654

Application 6642  
Application 6643  
Application 6644  
Application 6645  
Application 6646  
Application 6647  
Application 6648

## Hardware Outputs

### Analog


	Short Board	Long Board
Spare 0-10 Vdc (3)		Application 6642 Application 6643 Application 6644 Application 6645 Application 6646 Application 6647 Application 6648

### Digital


	Short Board	Long Board
Damper actuator	Application 6640 Application 6641 Application 6654	Application 6642 Application 6643 Application 6648
Fan (switched 24 Vac, pilot duty)	Application 6650 Application 6651 Application 6652 Application 6653 Application 6654	Application 6644 Application 6645 Application 6646 Application 6647 Application 6648
Cooling valve actuator	Application 6651	Application 6645
Heating valve actuator (1st)	Application 6651 Application 6653	Application 6645 Application 6647
2nd heating valve actuator	Application 6641 Application 6650	Application 6643 Application 6644
Cooling/Heating valve actuator	Application 6650	Application 6644
Stage 1 cooling (2-position valve actuator or cooling compressor)	Application 6652 Application 6653	Application 6646 Application 6647
Stage 2 cooling (2-position valve actuator or cooling compressor)	Application 6653 Application 6653	Application 6646 Application 6647
Stage 1 electric heat	Application 6652 Application 6654	Application 6646 Application 6648
Stage 2 electric heat	Application 6652 Application 6654	Application 6646 Application 6648
Stage 3 electric heat	Application 6652 Application 6654	Application 6646 Application 6648

## Ordering Notes

Siemens BACnet PTEC Unit Conditioner Controller	550-433PA-short board, 550-496PA-long board
Enclosure	540-155

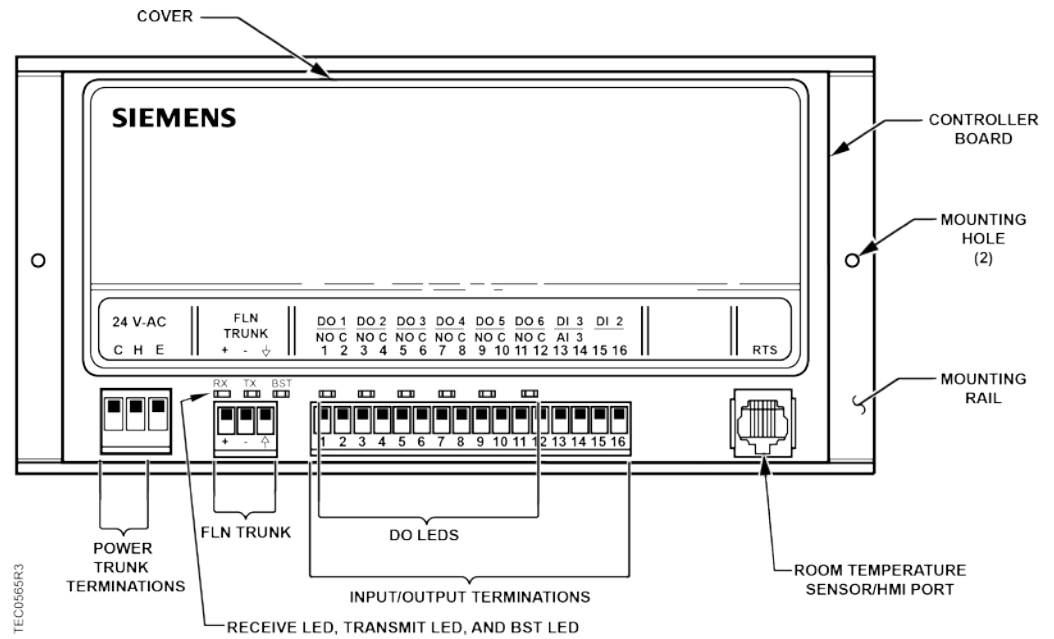

Generic Controller I/O Layout. See *Wiring Diagram* for application specific details.

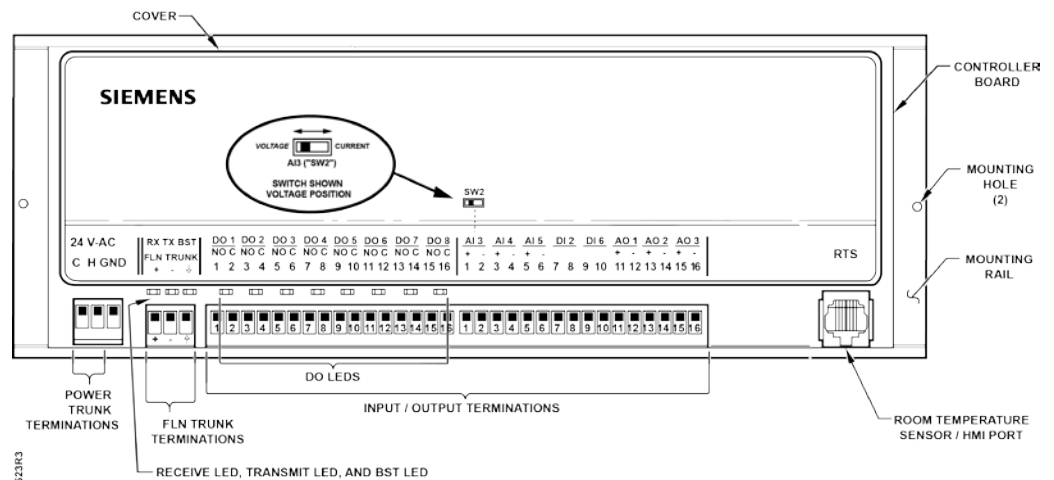

Generic Controller I/O Layout. See *Wiring Diagram* for application specific details.




**NOTE:**

Applications 6642 to 6648 on long board.  
Applications 6640/6641 and 6650 to 6654 on short board.


## Power Wiring

The controller is powered by 24 Vac. Power wiring connects to the three screw terminals on the controller board labeled “C” (Common), “H” (Hot), and “E” (Earth Ground) on the terminal block labeled “24 Vac”.

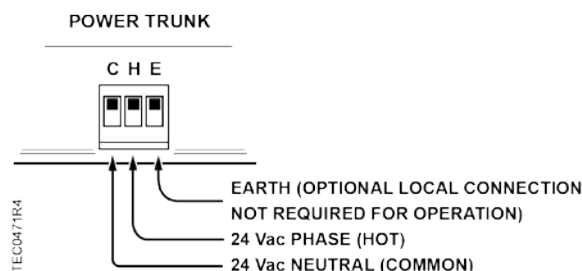

## Communication Wiring

The controller connects to the field panel by means of a Floor Level Network (FLN) trunk. Communication wiring connects to the three screw terminals on the controller labeled “+” (positive), “-” (negative), and “↓” (reference).

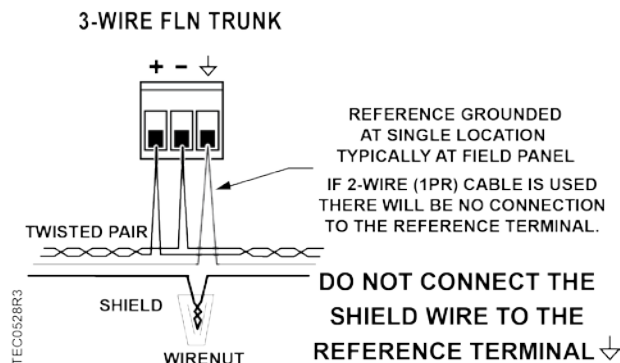

## Temperature Sensors

Temperature sensors used with the Siemens BACnet PTEC Unit Conditioner Controller include an electronic room temperature sensor and an optional duct temperature sensor.

### Room Temperature Sensor

The room temperature sensor connects to the controller by means of a cable terminated at both ends with a six-conductor RJ-11 plug-in connector.

See the Ordering Notes section for the location of the room temperature sensor/Human Machine Interface (HMI) port.

## Duct Temperature Sensor

An optional duct temperature sensor provides duct air temperature sensing inputs to the controller.

For more information about temperature sensors, contact your local Siemens Industry representative.

## Actuators

Actuators used with the Siemens BACnet PTEC Unit Conditioner Controller include electronic damper motors, electronic valve motors, and electronic valve assemblies. These actuators are powered through the controller to position cooling and/or reheat valves or supply air dampers.

## Related Equipment

- Damper Actuator(s)
- Duct Temperature Sensor (10K or 100K  $\Omega$ ) (optional)
- Pipe Temperature Sensor (optional)
- Room Temperature Sensor
- Valve Actuator(s)

Contact your local Siemens Industry representative for product numbers and more information.

## Chapter 2 – Applications

### Basic Operation

The Siemens BACnet PTEC Unit Conditioner Controller provides Direct Digital Control (DDC) technology for fan coil and unit conditioner applications. The fan coil and unit conditioner applications control temperature with hot water or up to three stages of electric reheat, chilled water, or up to two stages of two position or direct expansion cooling.

### Control Temperature Setpoints

The controller maintains a specified temperature setpoint based on Day/Night mode, the heating/cooling mode, or the setpoint dial (if used).

### Day/Night Mode

The controller maintains the specified day setpoint temperature during daytime hours and the specified night setpoint at night.

### Night Mode Override Switch

If the Room Temperature Sensor (RTS) has an override switch, it can be used to command the controller into day mode for an adjustable amount of time. This only affects a controller in night mode.

### Calibration

Valve calibration may be set to take place automatically or manually.

#### Valve

Calibration of a hot or chill water valve (if used) is done by briefly commanding the valve closed.

Additional calibration is provided by driving the valve or damper fully closed or open, whenever they are commanded to 0 or 100 percent.

### Fail-Mode Operation

If the RTS or the setpoint dial fails, then the controller operates using the last known temperature value.

### Heating and Cooling Switchover

The heating/cooling switchover determines whether the controller is in heating or cooling mode by monitoring the room temperature and the demand for heating and cooling (as determined by the temperature control loops).

Heating/cooling switchover for applications that utilize a supply (air or water) sensor is determined by the status of available heating or cooling media.

## Electric Reheat



### ⚠ CAUTION

Verify that the equipment is supplied with safeties by others, to ensure there is airflow across the heating coils when they are to be energized.

The heating loop controls up to three stages of electric reheat to warm up the room. The electric reheat is time modulated using a duty cycle. When the controller is in cooling mode, the electric heat is OFF at all times.

## Staged Cooling

When the controller is in cooling mode, up to three stages of cooling can be cycled to maintain temperature. In heating mode, the cooling stages are off.

## Fan Operation

### Day Mode

The fan can be set to be ON all the time or cycle on when heating or cooling is needed. Up to three stages of fan may be controlled, or alternatively, a variable speed fan can be controlled.

### Night Mode


The fan cycles ON when heating or cooling is needed.

## Notes

1. If the temperature swings in the room are excessive, or if there is trouble in maintaining the setpoint, contact your local Siemens Industry representative for more information.
2. The Siemens BACnet PTEC Unit Conditioner Controller, as shipped from the factory, keeps all associated equipment OFF. The controller and its equipment are released to application control at start-up.


## Application 6640/6642 Variable Air Volume Pressure Dependent Cooling or Heating

In Application 6640-short board, Application 6642-long board, the controller modulates the supply air damper of the terminal box for cooling and heating. In order for it to work properly, the central air-handling unit must provide cool supply air in the cooling mode and warm supply air in the heating mode.

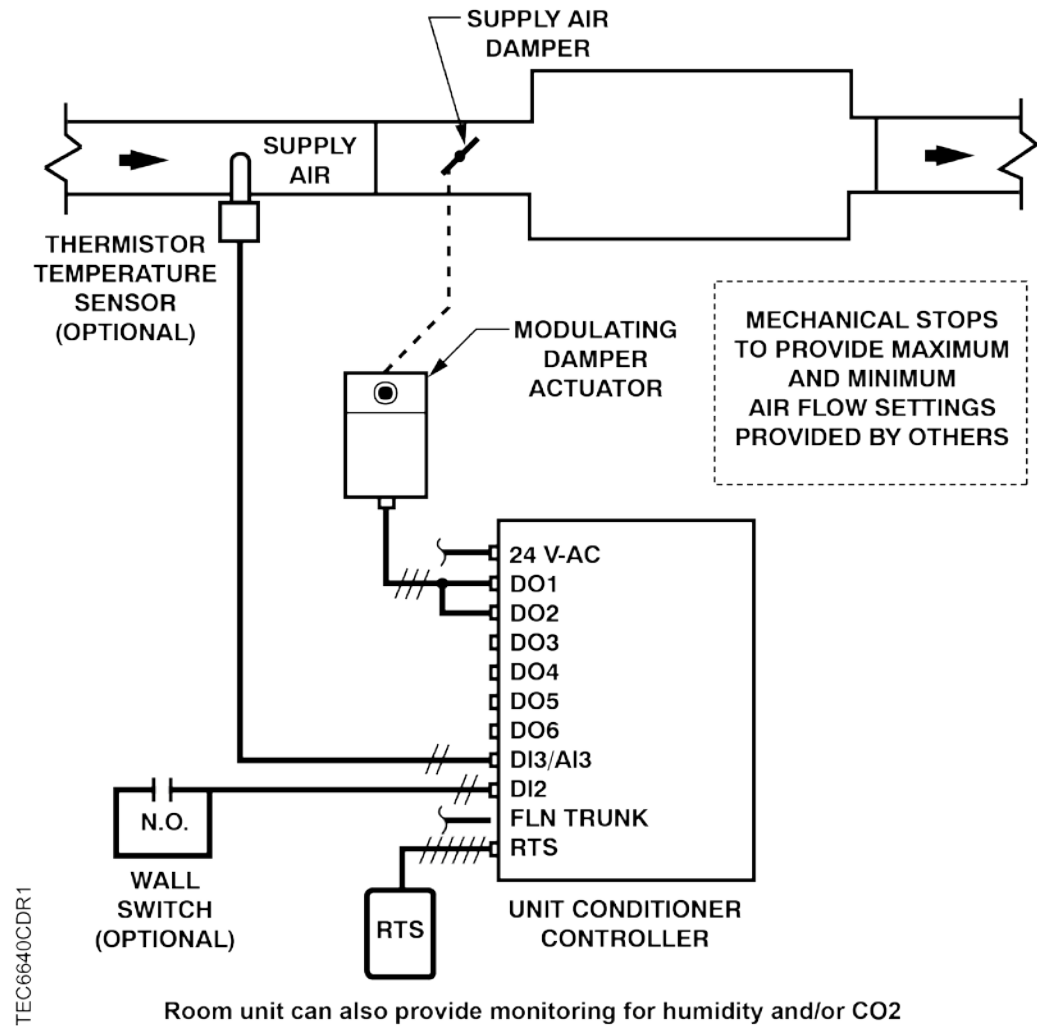

*Application 6640 – VAV Pressure Dependent Cooling or Heating.*




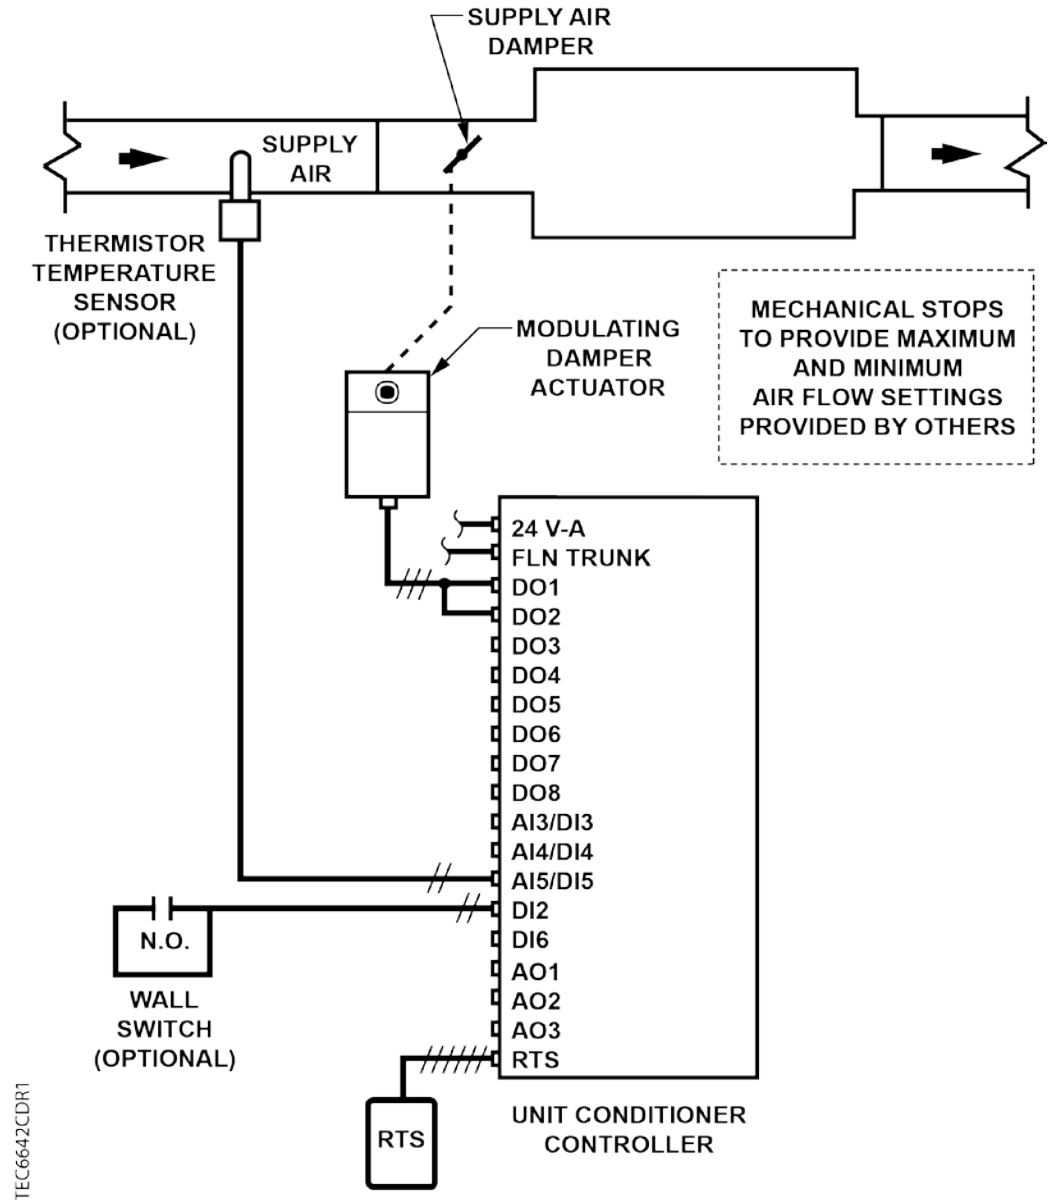


Application 6642 – VAV Pressure Dependent Cooling or Heating.

## Application 6641/6643 Variable Air Volume Pressure Dependent with Hot Water Heat

In Application 6641-short board, Application 6643-long board, the controller modulates the supply air damper of the terminal box for cooling and modulates a reheat valve(s) for heating. When in heating, minimum airflow (limited by a mechanical stop on the terminal box) is provided to the room. In order for the terminal box to work properly, the central air-handling unit must provide cool supply air.

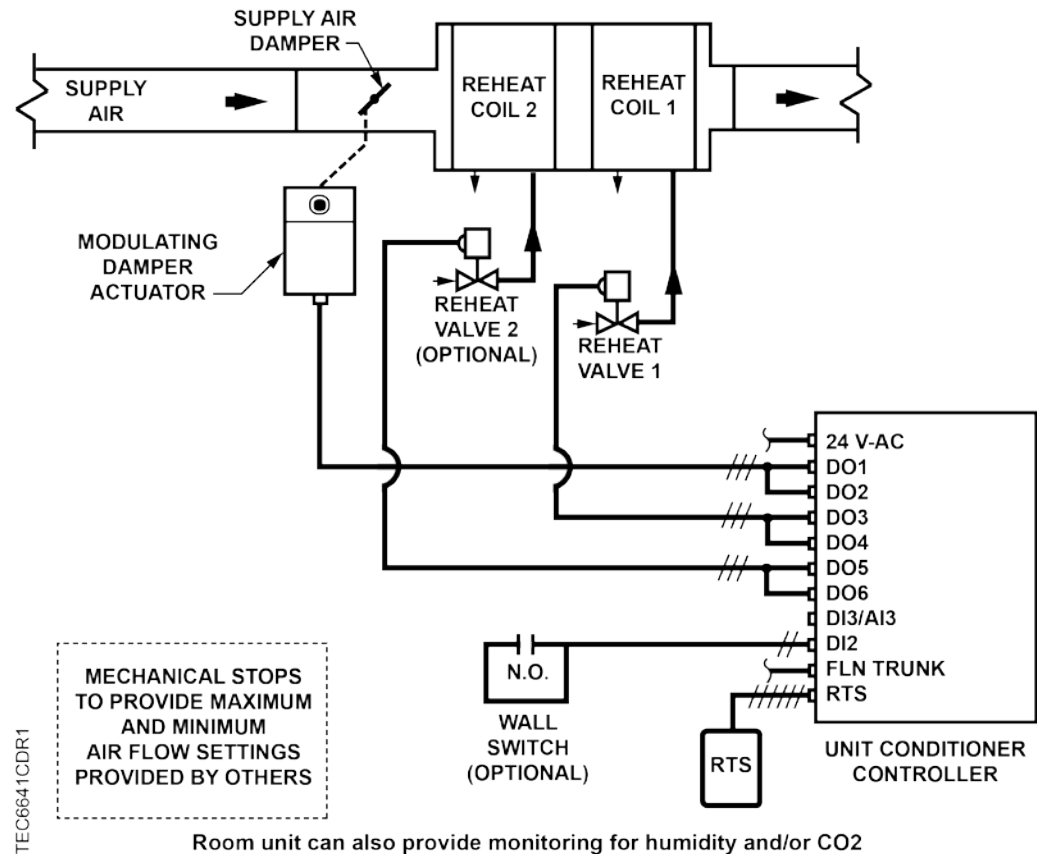

Application 6641 – VAV Pressure Dependent with Hot Water Reheat.

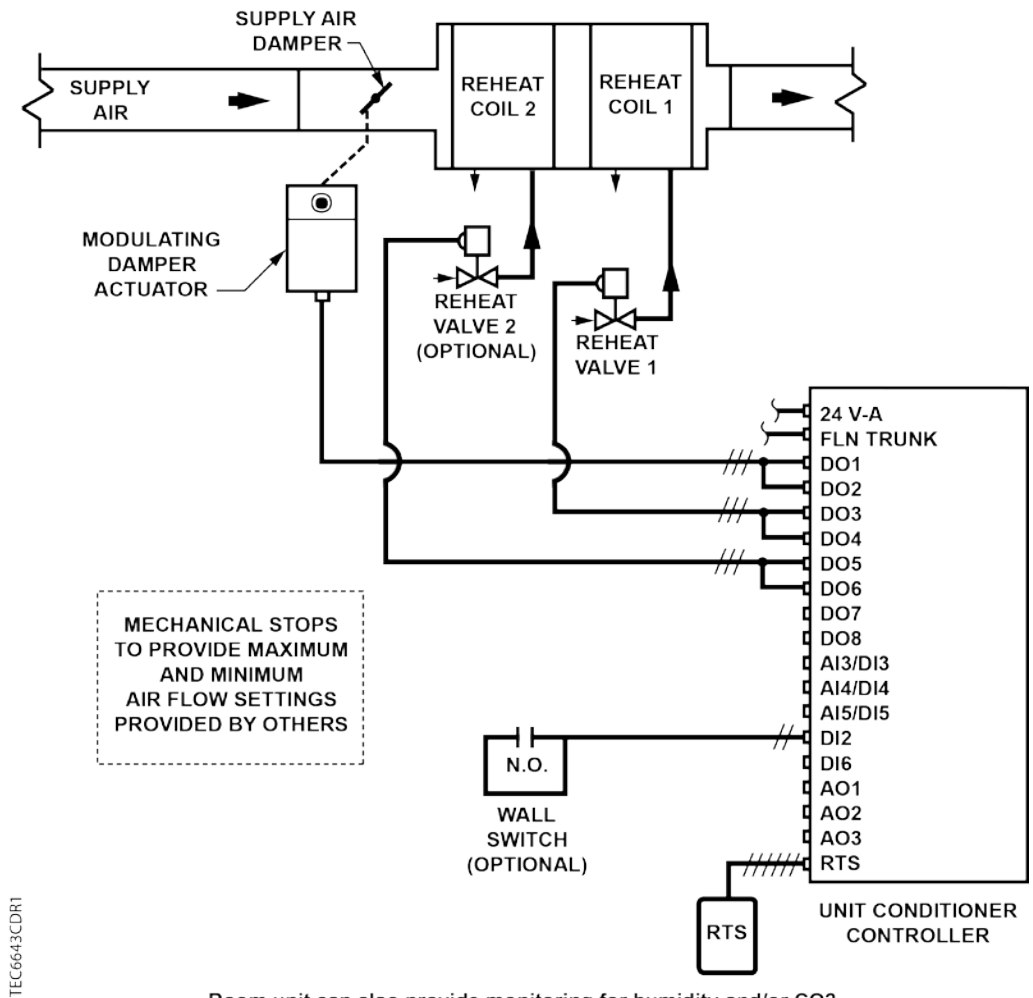


Room unit can also provide monitoring for humidity and/or CO2


*Application 6643 – VAV Pressure Dependent with Hot Water Reheat.*

## Application 6650/6644 Two-Pipe Fan Coil Unit Cooling or Heating

In Application 6650-short board, Application 6644-long board, the controller modulates a valve in the fan coil unit for heating or cooling mode. It can also control an optional second valve for heating. The fan coil unit also has a fan to circulate room air. In order for the fan coil unit to work properly, the central plant must provide chilled water in the cooling mode and hot water in the heating mode.

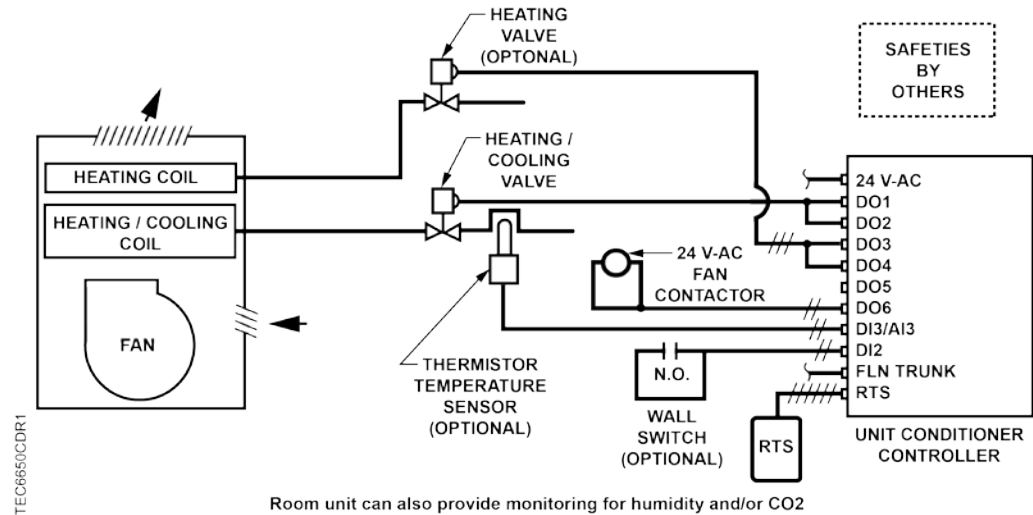


Application 6650 – Two-Pipe Fan Coil Unit Cooling or Heating.

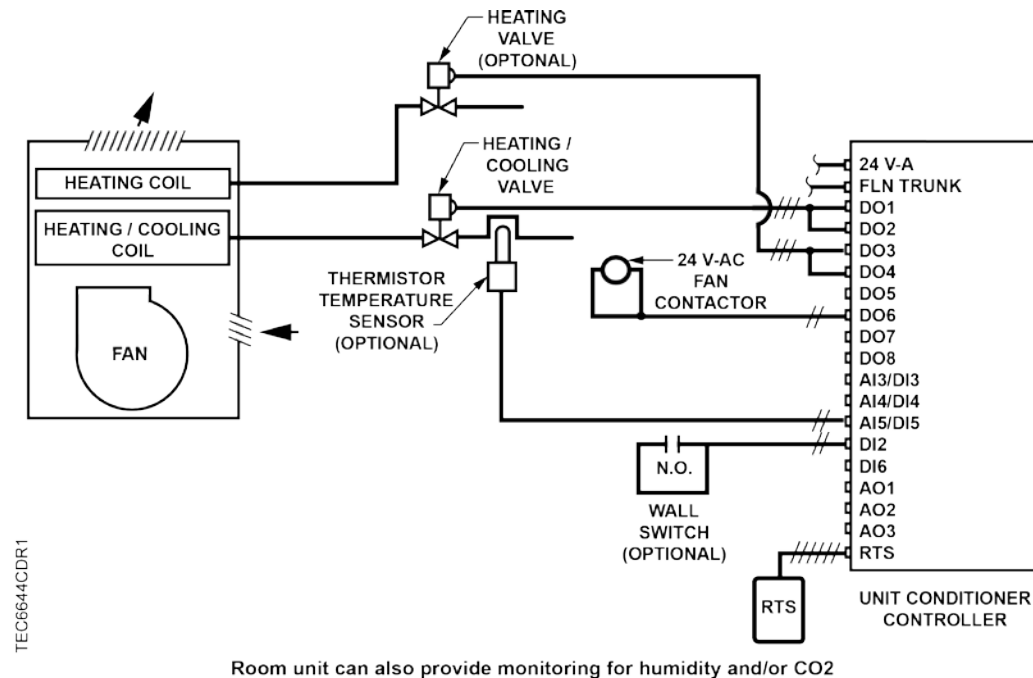


Application 6644 – Two-Pipe Fan Coil Unit Cooling or Heating.

## Application 6651/6645 Fan Coil Unit Cooling and Heating

In Application 6651-short board, Application 6645-long board, the controller modulates separate valves in the fan coil unit for cooling and heating. The fan coil unit also has a fan to circulate room air. In order for the fan coil unit to work properly, the central plant must provide chilled and hot water.

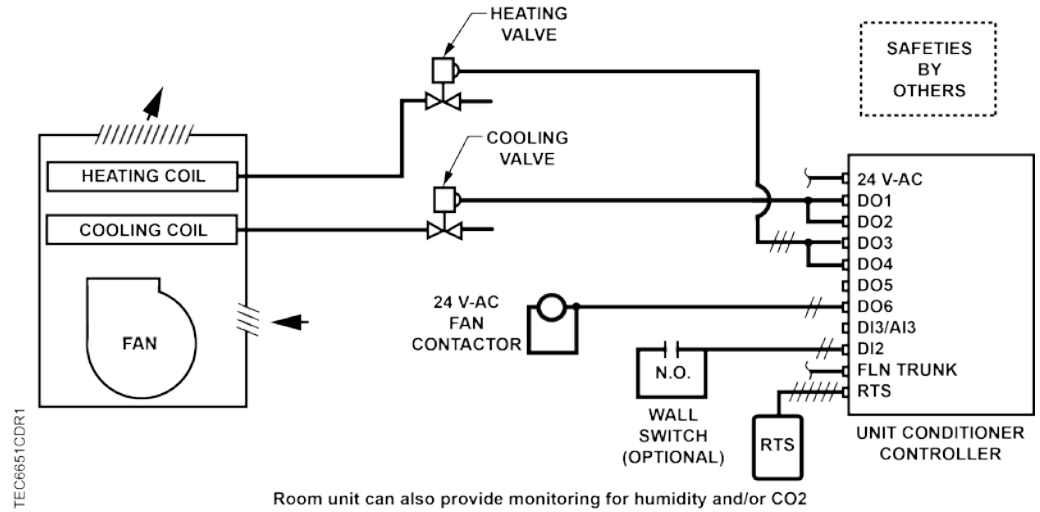


Application 6651 – Fan Coil Unit Cooling and Heating.

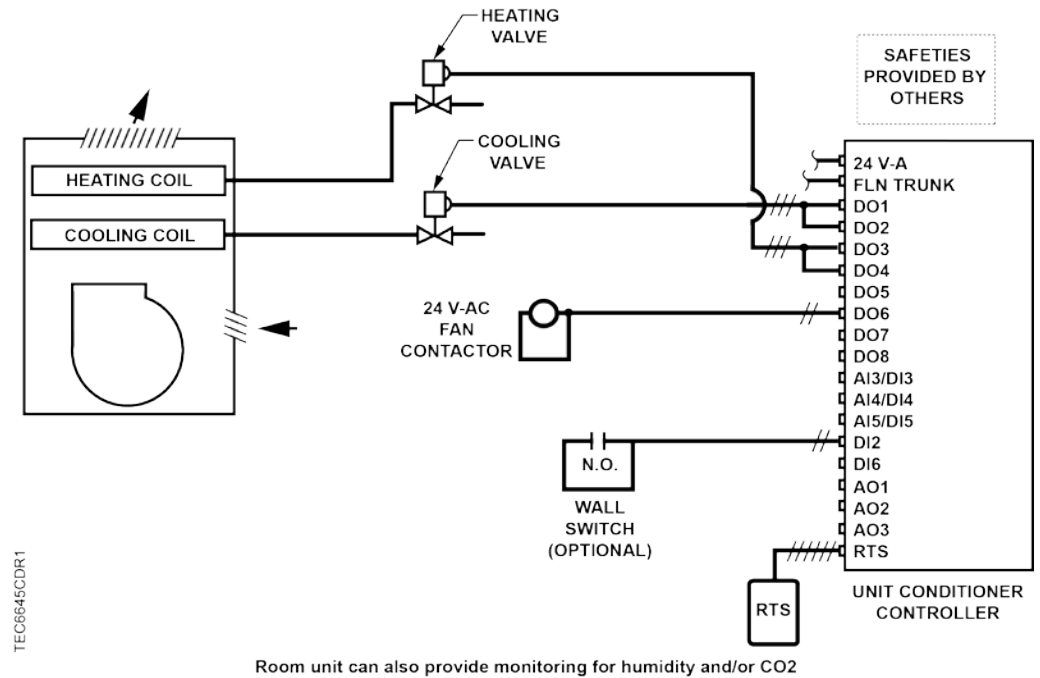


Application 6645 – Fan Coil Unit Cooling and Heating.

## Application 6652/6646 Fan Coil Unit Two-Stage Cooling and Electric Heat

In Application 6652-short board, Application 6646-long board, the controller energizes a maximum of two stages of cooling and a maximum of three stages of electric heat in the fan coil unit. The fan coil unit also has a fan to circulate room air.

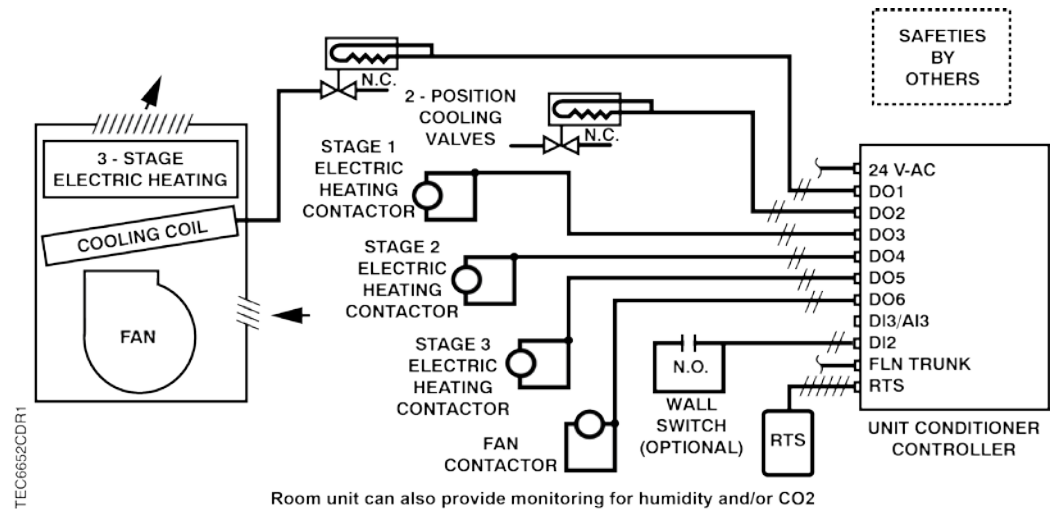


*Application 6652 – Fan Coil Unit Two-Stage Cooling and Electric Heat.*

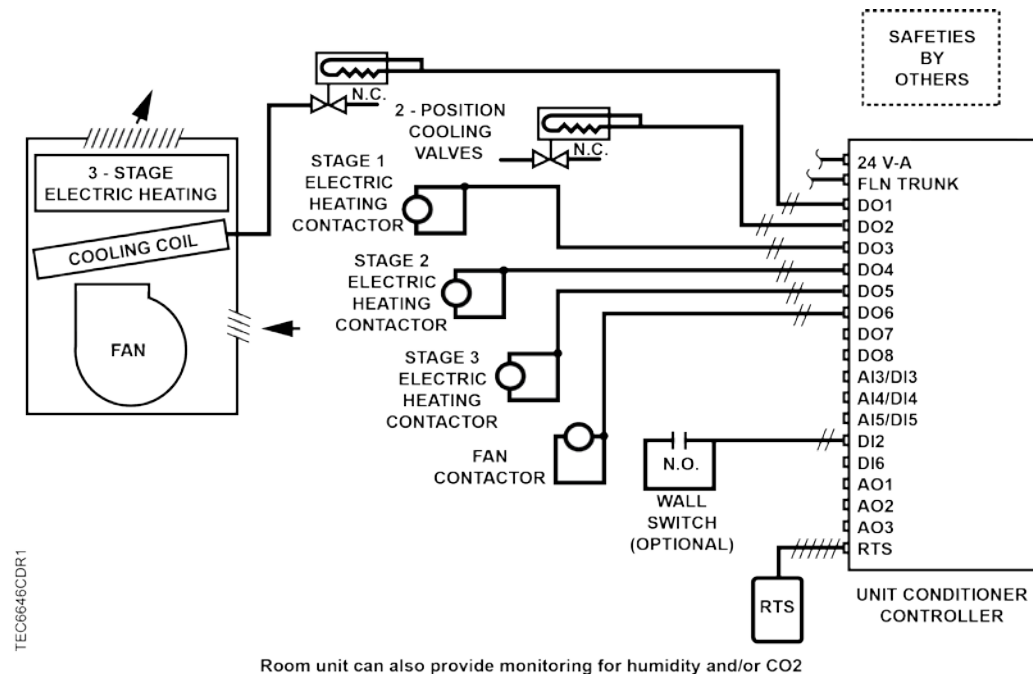


*Application 6646 – Fan Coil Unit Two-Stage Cooling and Electric Heat.*

## Application 6653/6647 Fan Coil Unit Two-Stage Cooling and Hot Water Heat

In Application 6653- short board, Application 6647-long board, the controller energizes a maximum of two stages of cooling and a hot water valve for heating in the fan coil unit. The fan coil unit also has a fan to circulate room air. In order for the fan coil unit to work properly, the central plant must provide hot water for heating and cold water or DX for cooling.

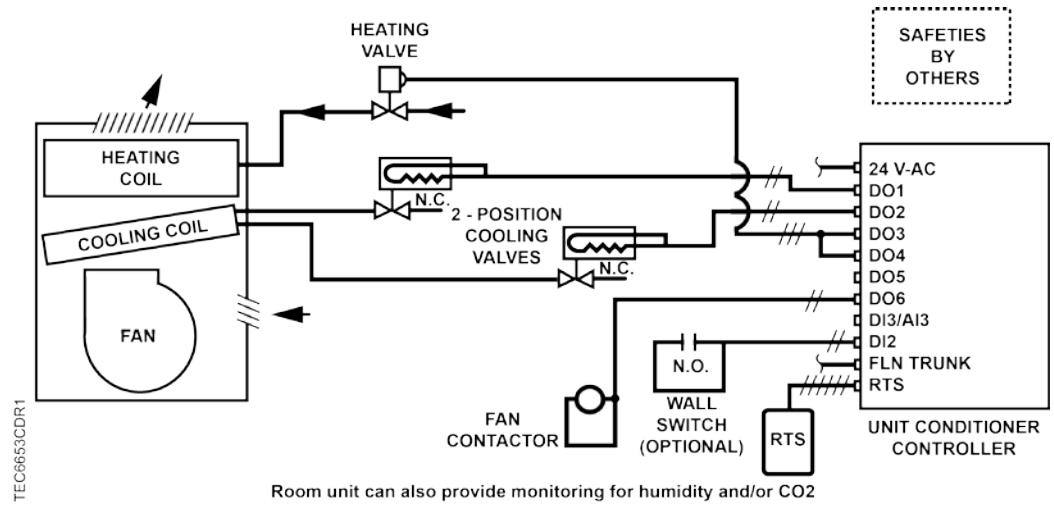


Application 6653 – Fan Coil Unit Two-Stage Cooling and Hot Water Heat.

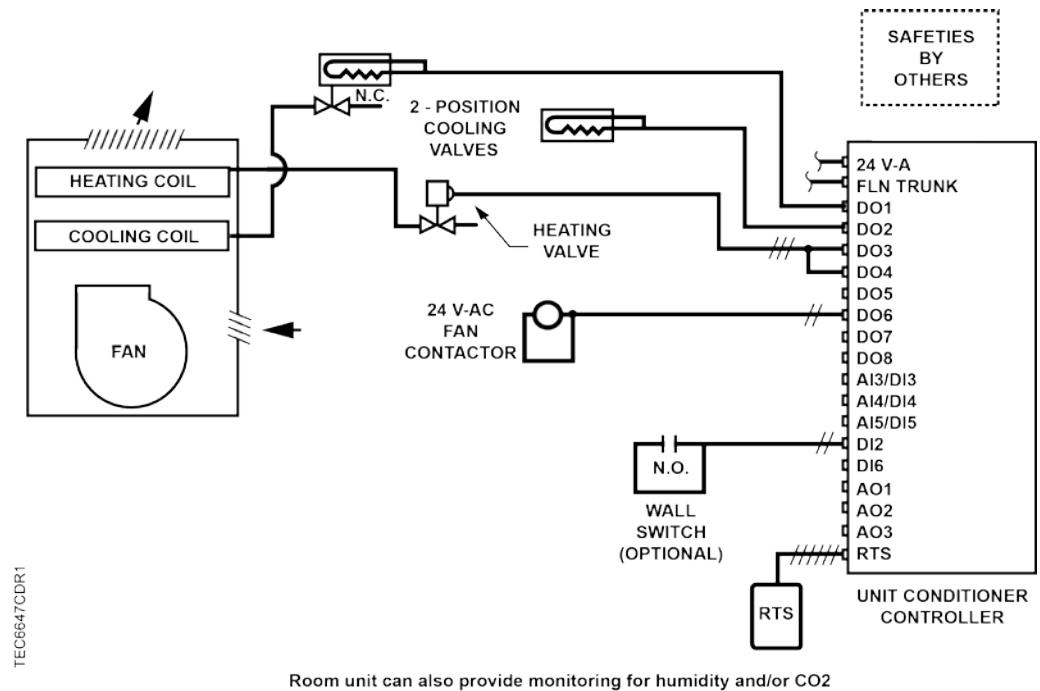


Application 6647 – Fan Coil Unit Two-Stage Cooling and Hot Water Heat.

## Application 6654/6648 Fan Coil Unit Cooling and Electric Heat or VAV Pressure Dependent with Electric Heat

In Application 6654-short board, Application 6648-long board, the controller energizes a valve or damper for cooling and controls a maximum of three stages of electric heat for heating in the fan coil unit. The fan coil unit also has a fan to circulate room air. This application can also be used to control a pressure-dependent terminal box with electric heat. If a damper is being controlled, the central plant must supply chilled air in order for the terminal box to work properly.

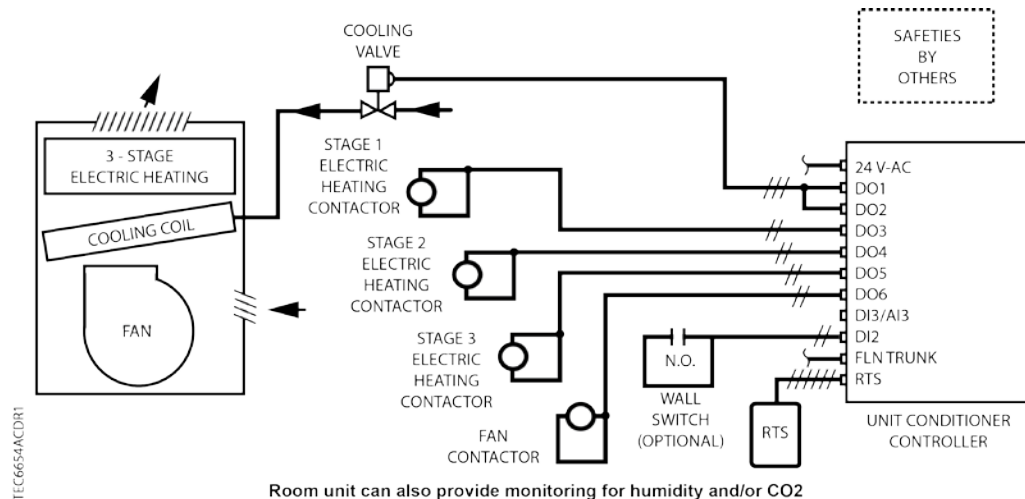


Application 6654 – Fan Coil Unit Cooling Valve and Electric Heat.

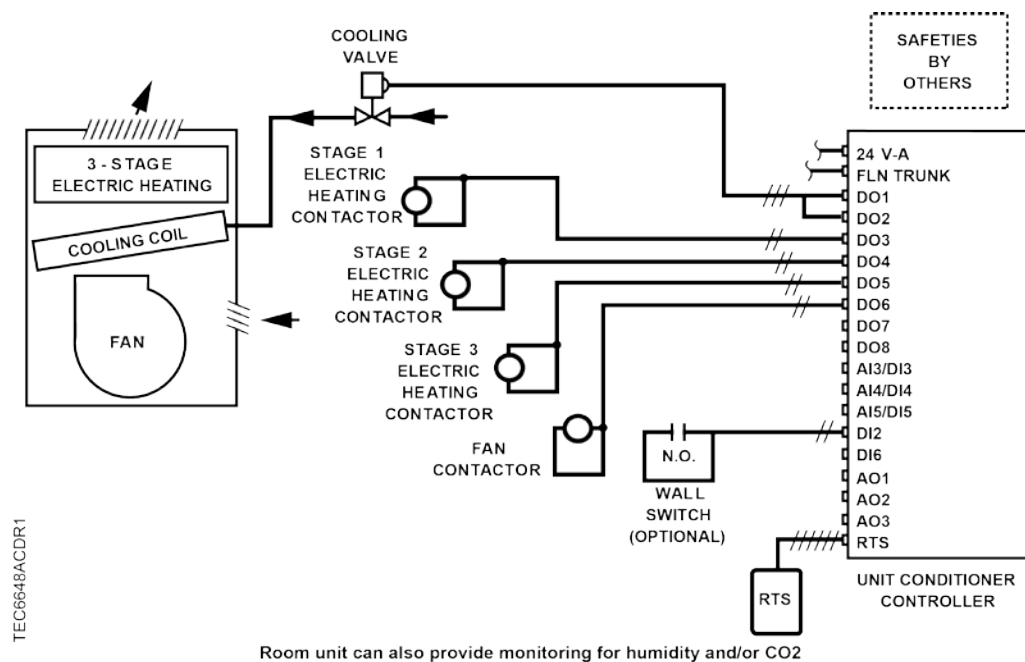


Application 6648 – Fan Coil Unit Cooling Valve and Electric Heat.



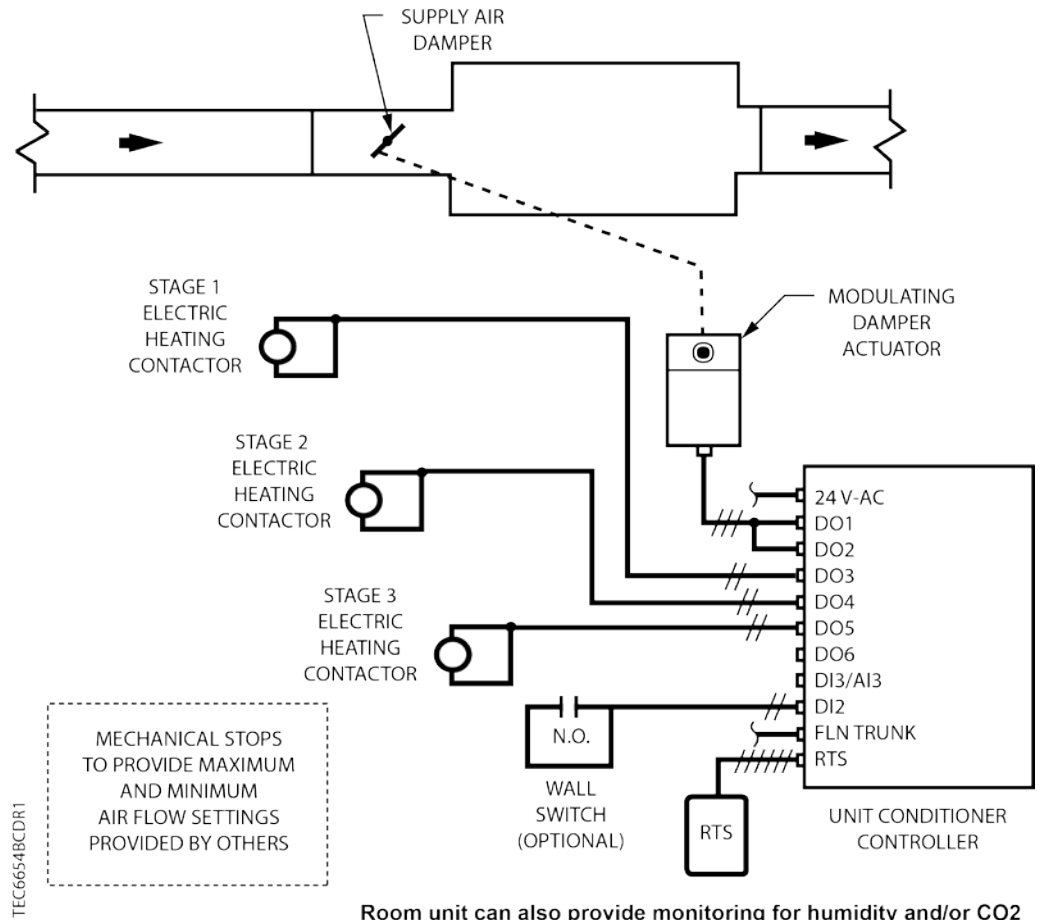

Room unit can also provide monitoring for humidity and/or CO2

*Application 6654 – Fan Coil Unit Cooling Damper and Electric Heat.*

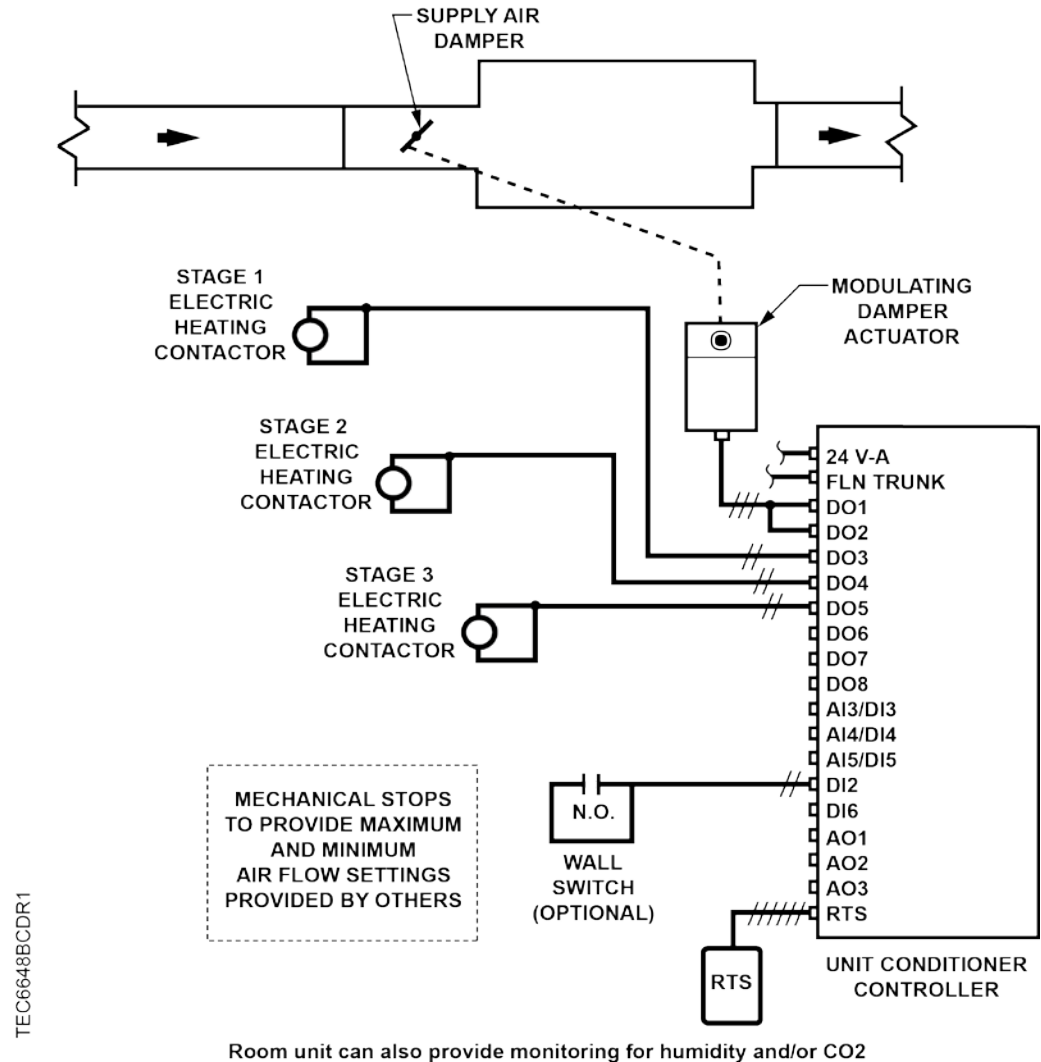

Application 6648 – Fan Coil Unit Cooling Damper and Electric Heat.

## Application 6689/6691 Slave Mode

Application 6689-short board, Application 6691-long board is the slave mode application for the BACnet PTEC (see Ordering Notes for product numbers). Slave mode is the default application that comes up when power is first applied to the controller. Slave mode provides no control. Its purpose is to allow the operator to perform equipment checkout before a control application is put into effect and to set some basic controller parameters (CTLR ADDRESS, APPLICATION, etc.).

## Chapter 3 – Point Database

This chapter presents a description of the Siemens BACnet PTEC Unit Conditioner Controller database including point descriptors, point addresses, and a listing of applications in which each point is found.

Descriptor	Address <sup>1</sup>	Application (short board)	Application (long board)	Description
CTLR ADDRESS	01	All	All	Identifies the controller on the FLN trunk.
APPLICATION	02	All	All	The identification number of the program running in the controller.
RMTMP OFFSET	03	All	All	Compensates for deviations between the value of ROOM TEMP and the actual room temperature. This corrected value is displayed in CTL TEMP. RMTMP OFFSET + ROOM TEMP = CTL TEMP
ROOM TEMP	{04} <sup>2</sup>	All	All	Actual reading from the room temperature sensor.
HEAT.COOL	{05}	All <i>except</i> 6689	All <i>except</i> 6691	Current mode of operation for applications that can be in either a heating mode or a cooling mode.
DAY CLG STPT	06	All <i>except</i> 6689	All <i>except</i> 6691	The temperature setpoint, in degrees, that the controller maintains during day periods in cooling mode if a room temperature sensor setpoint dial is not present or is not used. See <i>STPT DIAL</i> .
DAY HTG STPT	07	All <i>except</i> 6689	All <i>except</i> 6691	The temperature setpoint, in degrees, that the controller maintains during day periods in heating mode if a room temperature sensor setpoint dial is not present or is not used. See <i>STPT DIAL</i> .
NGT CLG STPT	08	All <i>except</i> 6689	All <i>except</i> 6691	The temperature setpoint, in degrees, that the controller maintains during night periods in cooling mode.
NGT HTG STPT	09	All <i>except</i> 6689	All <i>except</i> 6691	The temperature setpoint, in degrees, that the controller maintains during night periods in heating mode.
RM STPT MIN	11	All <i>except</i> 6689	All <i>except</i> 6691	The minimum temperature setpoint, in degrees, that the controller can use from the setpoint dial. This overrides any temperature setpoint from the setpoint dial that falls below this minimum.
RM STPT MAX	12	All <i>except</i> 6689	All <i>except</i> 6691	The maximum temperature setpoint, in degrees, that the controller can use from the setpoint dial. This overrides any temperature setpoint from the setpoint dial that falls above this maximum.
RM STPT DIAL	{13} <sup>2</sup>	All	All	The temperature setpoint, in degrees, from the room temperature sensor (not available on all temperature sensor models). This setpoint will be used for control in day mode (heating or cooling) when enabled by STPT DIAL.
STPT DIAL	14	All <i>except</i> 6689	All <i>except</i> 6691	YES indicates that there is a room setpoint dial on the room temperature sensor and it is to be used as the temperature setpoint for control in day mode. NO indicates that the appropriate preset setpoint will be used as the temperature setpoint for control in day heating mode or cooling mode.

Descriptor	Address <sup>1</sup>	Application (short board)	Application (long board)	Description
				Valid input. YES or NO.
AUX TEMP	{15}	All <i>except</i> 6640, 6650	All <i>except</i> 6642, 6644	Actual reading from a 10K or 100K $\Omega$ thermistor connected to the controllers AI 3 input (short board). When a thermistor is connected at AI 3, DI 3 is not available. See <i>DI 3</i> .
SUPPLY TEMP	{15}	6640, 6650	6642, 6644	Actual reading from a 10K or 100K $\Omega$ thermistor connected to the controller's AI 3 input (short board). The controller uses this value to determine whether it is in heating mode or cooling mode.
VLV 1 START	16	6641, 6650	6643, 6644	When HTG LOOPOUT is above this value, Valve 1 starts to open.
VLV 1 END	17	6641, 6650	6643, 6644	When HTG LOOPOUT is below this value, valve 1 is at the end of its stroke.
WALL SWITCH	18	All	All	YES indicates that the controller is to monitor the status of a wall switch that is connected to DI 2. NO indicates that the controller will not monitor the status of a wall switch, even if one is connected. Valid input: YES or NO.
DI OVRD SW	{19} <sup>2</sup>	All	All	Actual indication of the status of the override switch (not physically available on all temperature sensor models) at the room temperature sensor. ON indicates that the switch is being pressed. OFF indicates that the switch is released. Valid input: ON or OFF.
OVRD TIME	20	All <i>except</i> 6689	All <i>except</i> 6691	The amount of time, in hours, that the controller will operate in day mode when the override switch is pressed while the controller is in night mode.
NGT OVRD	{21}	All <i>except</i> 6689	All <i>except</i> 6691	Indicates the mode that the controller is operating in with respect to the override switch. NIGHT indicates that the switch has not been pressed and the override timer is not active. DAY indicates that the switch has been pressed and the override timer is active. The controller then uses a day mode temperature setpoint. This point is only in effect when DAY.NGT indicates night mode.
VLV 2 START	22	6641, 6650	6643, 6644	When HTG LOOPOUT is above this value, Valve 2 starts to open.
VLV 2 END	23	6641, 6650	6643, 6644	When HTG LOOPOUT is below this value, valve 2 is at the end of its stroke.
DI 2	{24}	All	All	Actual status of a contact connected to the controller at DI 2. ON indicates that the contact is closed; OFF indicates that the contact is open. If a wall switch is used, then it is connected to DI 2. See <i>WALL SWITCH</i> .
DI 3	{25} <sup>2</sup>	All <i>except</i> 6640, 6650	All	Actual status of a contact connected to the controller at DI 3/AI 3. ON indicates that the contact is closed; OFF indicates that the contact is open. When a contact is connected at DI 3, AI 3 is not available. See <i>AUX TEMP</i> .
DI 4	{26}	None	All	Actual status of a contact connected to the controller at AI 4/DI 4. ON indicates that the contact is closed; OFF indicates that the contact is open. When a

Descriptor	Address <sup>1</sup>	Application (short board)	Application (long board)	Description
				contact is connected at DI 4, AI 4 is not available.
DI 5	{27}	None	All except 6642, 6644	Actual status of a contact connected to the controller at AI 5/DI 5. ON indicates that the contact is closed; OFF indicates that the contact is open. When a contact is connected at DI 5, AI 5 is not available. See <i>AUX TEMP</i> .
DI 6	{28}	None	All	Actual status of a contact connected to the controller at DI 6. ON indicates that the contact is closed; OFF indicates that the contact is open.
DAY.NGT	{29}	All	All	Indicates the mode in which the controller is operating. Day temperature setpoints will be used in day mode. Night temperature setpoints will be used in night mode. This point is normally set by the field panel.
AI 3	{30}	None	All	Analog input, percent.
AI 4	{31}	None	All	Analog input, Deg F (C).
AOV1	{32}	None	All	Analog output, 0-10 Vdc.
AOV2	{33}	None	All	Analog output, 0-10 Vdc.
AOV3	{34}	None	All	Analog output, 0-10 Vdc.
MTR 3 COMD	{37}	6640, 6689	6642, 6691	The value to which the Motor 3 actuator is commanded in percent of full value.
VLV 2 COMD	{37}	6641	6643	The value to which the Valve 2 actuator is commanded in percent of full travel for applications using a second water valve.
MTR 3 POS	{38}	6640, 6689	6642, 6691	The current position of the Motor 3 actuator in percent of full travel. This value is calculated based on motor run time.
VLV 2 POS	{38}	6641	6643	The current position of Valve 2 in percent of full travel. This value is calculated based on valve run time.
MTR 3 TIMING	39	6640, 6641, 6689	6642, 6643, 6691	The time, in seconds, required for the Motor 3 actuator to travel from the full closed position to the full open position.
CLG STG 1	{41}	6652, 6653	6646, 6647	This point is DO 1 in applications with staged cooling. This digital output controls the contactor for the first cooling stage and has a status of ON or OFF.
DO 1	{41}	All except 6652, 6653	All except 6646, 6647	Digital output 1 controls a 24 Vac load with an ON or OFF status. If Motor 1 is enabled, then DO 1 is coupled with DO 2 to control an actuator.
CLG STG 2	{42}	6652, 6653	6646, 6647	This point is DO 2 in applications with staged cooling. This digital output controls the contactor for the second cooling stage and has a status of ON or OFF.
DO 2	{42}	All except 6652, 6653	All except 6646, 6647	Digital output 2 controls a 24 Vac load with an ON or OFF status. If Motor 1 is enabled, then DO 2 is coupled with DO 1 to control an actuator.
DO 3	{43}	All except 6652, 6654	All except 6646, 6648	Digital output 3 controls a 24 Vac load with an ON or OFF status. If Motor 2 is enabled, then DO 3 is

Descriptor	Address <sup>1</sup>	Application (short board)	Application (long board)	Description
				coupled with DO 4 to control an actuator.
HTG STG 1	{43}	6652, 6654	6646, 6648	This point is DO 3 in applications with electric reheat. This digital output controls the contact for the first stage of heating and has a status of ON or OFF.
DO 4	{44}	All <i>except</i> 6652, 6654	All <i>except</i> 6646, 6648	Digital output 4 controls a 24 Vac load with an ON or OFF status. If Motor 2 is enabled, then DO 4 is coupled with DO 3 to control an actuator.
HTG STG 2	{44}	6652, 6654	6646, 6648	This point is DO 4 in applications with electric reheat. This digital output controls the contact for the second stage of heating and has a status of ON or OFF.
DO 5	{45}	All <i>except</i> 6652, 6654	All <i>except</i> 6646, 6648	Digital output 5 controls a 24 Vac load with an ON or OFF status. If Motor 3 is enabled, then DO 5 is coupled with DO 6 to control an actuator.
HTG STG 3	{45}	6652, 6654	6646, 6648	This point is DO 5 in applications with electric reheat. This digital output controls the contact for the third stage of heating and has a status of ON or OFF.
DO 6	{46}	6640, 6641, 6689	6642, 6643, 6691	Digital output 6 controls a 24 Vac load with an ON or OFF status. If Motor 3 is enabled, then DO 6 is coupled with DO 5 to control an actuator.
FAN	{46}	All <i>except</i> 6640, 6641, 6689	All <i>except</i> 6642, 6643, 6691	This point is a digital output used to control the fan. ON indicates that the DO is energized; OFF indicates that the DO is de-energized.
DO 7	{47}	None	All	Digital output (spare).
DMPR COMD	{48}	6640, 6641	6642, 6643	The value to which the damper motor is commanded in percent of full travel.
VLV 1 COMD	{48}	6650, 6651	6644, 6645	The value to which the Valve 1 actuator is commanded in percent of full travel for applications using a water valve.
VLV COMD	{48}	6654	6648	The value to which the valve actuator is commanded in percent of full travel for applications using a water valve.
MTR 1 COMD	{48}	6689	6691	The value to which the Motor 1 actuator is commanded in percent of full travel.
DMPR POS	{49}	6640, 6641	6642, 6643	The current position of the damper motor in percent of full travel. This value is calculated based on motor run time.
VLV POS	{49}	6654	6648	The current position of the valve in percent of full travel for applications using a water valve. This value is calculated based on motor run time.
VLV 1 POS	{49}	6650, 6651	6644, 6645	The current position of Valve 1 in percent of full travel for applications using a water valve. This value is calculated based on motor run time.
MTR 1 POS	{49}	6689	6691	The current position of damper Motor 1 in percent of full travel. This value is calculated based on motor run time. See <i>MTR1 TIMING</i> .
DO 8	{50}	None	All	Digital output (spare).
MTR 1 TIMING	51	All <i>except</i>	All <i>except</i>	The time, in seconds, required for the Motor 1

Descriptor	Address <sup>1</sup>	Application (short board)	Application (long board)	Description
		6651, 6652, 6653	6646, 6647	actuator to travel from full closed to the full open position.
MTR 2 COMD	{52}	6640, 6689	6642, 6691	The value to which the Motor 2 actuator is commanded in percent of full travel (for use as an auxiliary slave point).
VLV COMD	{52}	6653	6647	The value to which the valve actuator is commanded in percent of full travel for applications using a water valve.
VLV 1 COMD	{52}	6641	6643	The value to which the Valve 1 actuator is commanded in percent of full travel for applications using a water valve.
VLV 2 COMD	{52}	6650, 6651	6644, 6645	The value to which the Valve 2 actuator is commanded in percent of full travel for applications using a water valve.
MTR 2 POS	{53}	6640, 6689	6642, 6691	The current position of the Motor 2 actuator in percent of full travel (for use as an auxiliary slave point). This value is calculated based on motor run time. See <i>MTR2 TIMING</i> .
VLV POS	{53}	6653	6647	The current position of the valve in percent of full travel for applications using a water valve. This value is calculated based on motor run time.
VLV 1 POS	{53}	6641	6643	The current position of Valve 1 in percent of full travel for applications using a water valve. This value is calculated based on motor run time.
VLV 2 POS	{53}	6650, 6651	6644, 6645	The current position of Valve 2 in percent of full travel for applications using a water valve. This value is calculated based on motor run time.
MTR 2 TIMING	55	All except 6652, 6654	All except 6646, 6648	The time, in seconds, required for the Motor 2 actuator to travel from full closed to the full open position.
MTR1 ROT ANG	56	All except 6652, 6653	All except 6646, 6647	The number of degrees that Motor 1 is free to travel.
MTR2 ROT ANG	57	All except 6652, 6654	All except 6646, 6648	The number of degrees that Motor 2 is free to travel.
MTR SETUP	58	All	All	The configuration setup code for Motors 1, 2, and 3. This enables the motors individually and sets each motor to be either direct or reverse acting. <b>Note:</b> When a motor is enabled, its associated DOs are enabled. <b>Note:</b> Used to enable AOs.
DO DIR.REV	59	All	All	The configuration setup code for DOs. Allows the DOs to be direct or reverse acting (enabled equals energized or disabled equals de-energized).
CYCLE FAN	60	All except 6640, 6641, 6689	All except 6642, 6643, 6691	ON indicates the fan will cycle during day mode. OFF indicates the fan is on all the time in day mode.
COOL TEMP	61	6640, 6650	6642, 6644	The discharge air or supply water temperature where the controller will switch from heating mode to cooling mode. Used only in applications with SUPPLY TEMP.
HEAT TEMP	62	6640, 6650	6642, 6644	The discharge air or supply water temperature where the controller will switch from cooling mode to

Descriptor	Address <sup>1</sup>	Application (short board)	Application (long board)	Description
				heating mode. Used only in applications with SUPPLY TEMP.
CLG P GAIN	63	All <i>except</i> 6689	All <i>except</i> 6691	The proportional gain value for the cooling temperature control loop.
CLG I GAIN	64	All <i>except</i> 6689	All <i>except</i> 6691	The integral gain value for the cooling temperature control loop.
CLG D GAIN	65	All <i>except</i> 6689	All <i>except</i> 6691	The derivative gain value for the cooling temperature control loop.
CLG BIAS	66	All <i>except</i> 6689	All <i>except</i> 6691	The biasing of the cooling temperature control loop. See <i>CLG LOOPOUT</i> .
HTG P GAIN	67	All <i>except</i> 6689	All <i>except</i> 6691	The proportional gain value for the heating temperature control loop.
HTG I GAIN	68	All <i>except</i> 6689	All <i>except</i> 6691	The integral gain value for the heating temperature control loop.
HTG D GAIN	69	All <i>except</i> 6689	All <i>except</i> 6691	The derivative gain value for the heating temperature control loop.
HTG BIAS	70	All <i>except</i> 6689	All <i>except</i> 6691	The biasing of the heating temperature control loop. See <i>HTG LOOPOUT</i> .
CLG 1 ON	71	6652, 6653	6646, 6647	The value, in percent, which the cooling loop (CLG LOOPOUT) must exceed for the first stage of cooling to turn ON.
CLG 1 OFF	72	6652, 6653	6646, 6647	The value, in percent, which the cooling loop (CLG LOOPOUT) must go below for the first stage of cooling to turn OFF.
CLG 2 ON	73	6652, 6653	6646, 6647	The value, in percent, which the cooling loop (CLG LOOPOUT) must exceed for the second stage of cooling to turn ON.
CLG 2 OFF	74	6652, 6653	6646, 6647	The value, in percent, which the cooling loop (CLG LOOPOUT) must go below for the second stage of cooling to turn OFF.
CLG STG CNT	75	6652, 6653	6646, 6647	The number of cooling stages used by the application. DOs associated with unused stages may be used as spare DOs.
CLG MIN ON	76	6652, 6653	6646, 6647	The minimum time, in minutes, which the cooling stages will remain ON before turning OFF.
CLG MIN OFF	77	6652, 6653	6646, 6647	The minimum time, in minutes, which the cooling stages will remain OFF before turning ON.
CTL TEMP	{78}	All <i>except</i> 6689	All <i>except</i> 6691	The temperature used as input for the temperature control loops. This value will be the same as the value in ROOM TEMP + RMTMP OFFSET unless it is overridden.
CLG LOOPOUT	{79}	All <i>except</i> 6689	All <i>except</i> 6691	The cooling temperature control loop output value, in percent.
HTG LOOPOUT	{80}	All <i>except</i> 6689	All <i>except</i> 6691	The heating temperature control loop output value, in percent.
AVG HEAT OUT	{81}	6652, 6654	6646, 6648	This value is equal to HTG LOOPOUT x HTG STG CNT in applications with electric heat. It is used to determine what stages of electric heat are used for a given loop output value. The ranges for the value



Descriptor	Address <sup>1</sup>	Application (short board)	Application (long board)	Description
				are determined by the number of stages used: 0 to 100 for 1 stage of electric heat, 0 to 200 for 2 stages of electric heat, and 0 to 300 for 3 stages of electric heat.
HTG STG MAX	82	6652, 6654	6646, 6648	The value, in percent, which the heating loop (HTG LOOPOUT) must exceed for the electric heat to be ON for the full duty cycle (HTG STG TIME).
HTG STG MIN	83	6652, 6654	6646, 6648	The value, in percent, which the heating loop (HTG LOOPOUT) must go below for the electric heat to be OFF for the full duty cycle (HTG STG TIME).
STAGE FAN	84	<i>All except</i> 6640, 6641, 6689	<i>All except</i> 6642, 6643, 6691	The value that the output of the current temperature loop must exceed in order for the fan to turn ON in night mode.
SWITCH LIMIT	85	<i>All except</i> 6640, 6689	<i>All except</i> 6642, 6691	The active temperature control loop output must be less than this value to switch between cooling mode and heating mode. Actual switchover depends on SWITCH DBAND being exceeded and is subject to SWITCH TIME being expired.
SWITCH TIME	86	<i>All except</i> 6640, 6650, 6689	<i>All except</i> 6642, 6644, 6691	The time, in minutes, before the heat/cool mode can change over when the other parameters are appropriate.
HTG STG CNT	88	6552, 6554	6646, 6648	The number of electric heating stages used by the application. DOs associated with unused stages may be used as spare DOs.
VALVE CNT	88	6641, 6650	6643, 6644	The number of heating valves available.
HTG STG TIME	89	6652, 6654	6646, 6648	The cycle time, in minutes, for the electric reheat stages. For example, if there are three stages of electric heat and STAGE TIME=10 minutes, HTG STG CNT=3, and AVG HEAT OUT=150% then, Stage 1 will be ON for 10 minutes (100% of the time), Stage 2 will be ON for 5 minutes (50% of 10 minutes) and OFF for 5 minutes, and Stage 3 will be OFF.
SWITCH DBAND	90	<i>All except</i> 6640, 6650, 6689	<i>All except</i> 6642, 6644, 6691	The temperature range, in degrees, which is compared to the difference between CTL TEMP and CTL STPT. The difference must exceed this value for temperature control mode to change over. Changeover is also subject to SWITCH TIME being expired.
CTL STPT	{92}	<i>All except</i> 6689	<i>All except</i> 6691	The actual setpoint value being used as input for the active temperature control loop.
CAL TIMER	96	All	All	Time interval, in hours, between the calibration sequences.
LOOP TIME	98	<i>All except</i> 6689	<i>All except</i> 6691	The time, in seconds, between control loop calculations.
ERROR STATUS	{99}	All	All	The status code indicating any errors detected during controller power up. A status of 0 indicates there are no problems.
STPT SPAN	106	All	All	The configuration value for room units to function in warmer/cooler adjustments. A value of 0 allows room units to function in standard/absolute temperature setpoint mode.

Descriptor	Address <sup>1</sup>	Application (short board)	Application (long board)	Description
DEW POINT	{121}	All	All	Dew point temperature calculation using room temperature (CTL TEMP) and room humidity (RM RH).
SENSOR SEL	124	All	All	Used to determine which version of room unit is connected and how the SENSOR SEL point responds to a possible communication loss between the controller and the room unit. The different versions of room units (legacy Series 1000 and 2000 stats; and the Series 2200 and 2300 stats) display the communication failure uniquely. This is an indicator for the occupant to know that there is a communication problem between the controller and room unit.
RM CO2	{125}	All	All	This point may be used in a control strategy as occupancy increases (CO2 levels increase) in the room being controlled.
RM RH	{126}	All	All	This point may be used in a control strategy as humidity levels varies in the room being controlled.
PPCL STATE	{127}	All	All	This point is an indicator that customized programming has been added in addition to the normal control strategy of the application being used. This point is read as LOADED or EMPTY. A status of LOADED indicates that there is PPCL programming in the controller, and it is providing unique control to meet a customer's job specification. A status of EMPTY indicates that no unique programming is present.

- 1) Points not listed are not used in this application.
- 2) Point numbers that appear in brackets { } may be unbundled at the field panel.

## Chapter 4 – Basic Service and Maintenance

This chapter describes basic service and maintenance measures you can take when using a BACnet PTEC.

You may want to contact your local Siemens Industry representative if a problem occurs or you have any questions about the controller.



---

**NOTE:**

When troubleshooting, record the problem and what actions were performed immediately before the problem occurred. Being able to describe the problem in detail is important should you need assistance from your local Siemens Industry representative.

---

### Basic Service Information

Always remove power to the BACnet PTEC when installing or replacing it. Since the controller does not have a power switch, the recommended method of removing power to a locally powered controller is to turn OFF the power to the 24 Vac transformer. The recommended method of removing power to a controller on a power cable (even to service a single controller) is to turn OFF the power at the transformer.



---

**NOTE:**

When removing power to a controller to perform maintenance or service, make sure that the person in charge of the facility is aware of this and that appropriate steps are taken to keep the building in control.

---

Never remove the cover from the BACnet PTEC. There are no serviceable parts inside. If a problem is found with this device, contact your local Siemens Industry representative for replacement. An anti-static wrist strap is recommended when installing or replacing controllers.

### Preventive Maintenance

Most controller components are designed so that, under normal circumstances, they do not require preventive maintenance. Periodic inspections, voltage checks, and point checks are normally not required. The rugged design makes most preventive maintenance unnecessary. However, devices that are exposed to dusty or dirty environments may require periodic cleaning to function properly.

## Safety Features

The controller board stores the controller's address, applications, and point values. In the event of a power failure or a reset, these values are retrieved from the controller's permanent memory and are used by the controller unless overridden by a field panel. If one of the following conditions occurs, the controller will activate safety features present in its fail-safe mode.

- Sensor failure.
- Loss of power. Upon controller power loss, communication with the controller is also lost. The controller will appear as failed (\*F\*) at the field panel.

## Glossary

This glossary contains the collected terms and acronyms that are used in Siemens BACnet PTEC and TEC Controllers. For definitions of point database descriptors, see Chapter 3 - Point Database, in this manual.

### **airflow**

Rate at which a volume of air moves through a duct. Usually expressed in cubic feet per minute (cfm) or liters per second (lps).

### **algorithm**

Mathematical formula and control logic that uses varying inputs to calculate an output value.

### **AVS**

Air Velocity Sensor. An electronic device that converts differential pressure from a pilot tube or multi-point pickup to an analog rate of fluid flow (air velocity in fpm, m/s) to provide calculations of air volume rate (cfm, lps) in a duct. The air velocity sensor may be an external device or an internal component of a controller.

### **centralized control**

Type of control offered by a controller that is connected by means of Field Level Network (FLN).

### **cfm**

Cubic Feet per Minute.

### **Chilled Beam**

A cooling device that provides a cooling system by taking care of both the sensible and latent heat gains of a room in a single package by a series of chilled water coils mounted near or in the ceiling. Coupled with a CV or VAV terminal ventilation system, a chilled beam induces air movement over the coil in the way that it discharges fresh air into the room. This allows for both fresh air and cooling to be taken care of at the same time.

### **control loop**

An algorithm, such as PI or PID, that is used to control an output based on a setpoint and an input reading from a sensor.

### **CO<sub>2</sub>**

Carbon dioxide, a naturally occurring chemical compound composed of two oxygen atoms and a single carbon atom. Among other production sources, carbon dioxide is produced as the result of breathing of humans and animals and can therefore be an indirect indication of the concentration of humans in a zone.

### **CV**

Constant air volume. Ventilation system that provides a fixed air volume supplied to and exhausted from the rooms served. The fixed volume may be different during occupied and unoccupied times

**Demand Control Ventilation**

A control algorithm that provides for the control or reduction of outdoor air intake below design rates when the actual occupancy of spaces served by the system is at less than design occupancy.

**DCV**

Demand Control Ventilation.

**DDC**

Direct Digital Control.

**Direct digital control**

The automated control of a condition or process by a digital device (computer).

**DO**

Digital Output. Physical output point that sends a two-state signal (ON/OFF, OPEN/CLOSED, YES/NO).

**English units**

The foot-pound-second system of units for weights and measurements.

**equipment controller**

FLN device, such as a BACnet PTEC or ATEC, that provides individual room or mechanical equipment control or additional point capacity to a field panel.

**field panel**

A DDC control device containing a microprocessor for centralized control and monitoring of system components and equipment controllers.

**Floating Control**

The combination of a modulating controlled device with the use of a pair of two position outputs. The control signal will either activate one or the other outputs to drive the controlled device towards its open or closed position. When both outputs are off, the controlled device maintains its last position. Also referred to as tri-state control.

**FLN**

Field Level Network. Network consisting of equipment controllers, FLN end devices, fume hoods, etc.

**lps**

Liters per Second.

**loopout**

Output of the control loop expressed as a percentage.

**Heat pump**

An HVAC device used for both space heating and space cooling. When a heat pump is used for heating, it employs the same basic refrigeration-type cycle used by an air conditioner but in the opposite direction, releasing heat into the conditioned-space

rather than the surrounding environment. In this use, heat pumps generally draw heat from the cooler external air or from the ground.

**HMI**

Human Machine Interface. Terminal and its interface program that allows you to communicate with a field panel or equipment controller.

**Occupancy sensor**

A control device that detects presence of people in a space by using infrared or ultrasonic technology. Occupancy sensors are used to save energy by controlling lighting and temperature and, along with CO2 sensors, to provide control input of demand control ventilation (DCV) algorithms.

**override switch**

Button on a room temperature sensor that an occupant can press to change the status of a room from unoccupied to occupied (or from night to day) for a predetermined time.

**pressure dependent**

Variable Air Volume (VAV) room temperature control system in which the temperature drives a damper such that the air volume delivered to the space at any damper position is dependent on the duct static pressure.

**pressure independent**

Variable Air Volume (VAV) room temperature control system in which the temperature drives an airflow setpoint such that the air volume delivered to the space is independent of variations in the duct static pressure.

**PID**

Proportional, Integral, Derivative.

**RTS**

Room Temperature Sensor.

**setpoint**

Data point that stores a value such as a temperature setting. In contrast, points that monitor inputs, such as temperature, report actual values.

**SI units**

Système International d'Unités. The international metric system.

**slave mode**

Default application that displays when power is first applied to an equipment controller. No control action is initiated in the slave mode. Input and output points in the slave application can be monitored or controlled by a field panel (or by PPCL in a BACnet PTEC controller).

**stand-alone control**

Type of control offered by a controller that is providing independent DDC control to a space.

## **Terminal Equipment Controller**

Siemens Industry, Inc. product family of equipment controllers (one is the Siemens BACnet PTEC Unit Conditioner Controller) that house the applications software used to control terminal units, such as heat pumps, VAV terminal boxes, fan coil units, unit ventilators, etc.

## **UI**

Universal Input. Can be used as an AI or DI. An AI input is a point receiving a signal that represents a condition that has more than two states. A DI input is a physical input point that receives a two-state signal.

## **unbundle**

Term used to describe the entering of a point that resides in a controller's database into the field panel's database so that it can be monitored and controlled from the field panel.

## **VAV**

Variable air volume. Ventilation system that changes the amount of air supplied to and exhausted from the rooms served.



# Index

## A

### actuators, 13

- damper actuator, 13, 14
- valve actuator, 13, 31

### address descriptions, 27

### algorithm, 37

### application, slave mode

- overview, 26

### applications

- basic operation, 14
- calibration, 14
- control temperature setpoints, 14
- day/night mode, 14
- electric reheat, 15
- fail-safe operation, 14
- fan operation, 15
- heating and cooling switchover, 14
- hot water reheat, 7
- night mode override switch, 14
- notes, 15, 15

## B

### basic operation, 14

### basic service information, 35

## C

### calibration, 14

### centralized control, 37

### Chilled Beam, 37

### CO<sub>2</sub>, 37

### control loop, 37

### controller

- Terminal Equipment Controller, 7
- Unit Conditioner Controller, 7

### CV, 37

## D

### database(see point database), 27

### DCV, 38

### DDC, 38

### Demand Control Ventilation, 38

### Direct Digital Control, 7, 38

### Direct Digital Control (DDC), 14

### DO, 38

## E

### electric reheat, 15

### English units, 38

### equipment controller, 38, 40

## F

### fail-safe operation, 14

### fan operation, 15

### field panel, 7, 29

### FLN, 38

### Floating Control, 38

### Floor Level Network (FLN), 12

## H

### hardware

- actuators, 13
- temperature sensors, 12, 13

### heating and cooling switchover, 14

## L

### loopout, 38

## M

### mounting bracket, 7

## O

### override switch, 39, 39

## P

### PID, 39

### point database, 27

- point addresses, 27
- point descriptors, 27

### preventive maintenance, 35

## R

### RTS, 39

## S

- safety features, 36
- secure mode applications, 7
- service information, basic, 35
- setpoint, 39
  - dial, 14
- SI units, 39
- slave mode, 39
- slave mode application, 26
- staged cooling, 15
- stand-alone, 7
- stand-alone control, 39
- standard applications, 7
- static discharge, 35

## T

- temperature sensor, 12
- temperature sensors
  - duct temperature sensor, 12, 13
  - room temperature sensor, 12
  - RTS, 12
- troubleshooting
  - basic service information, 35

## U

- unbundle, 40
- Unit Conditioner Controller
  - applications:secure mode, 7
  - applications:standard, 7
  - calibration, 14
  - product overview, 7
  - related equipment, 13
- units, English, 38

## V

- valve
  - 2-position heating, 29

Issued by  
Siemens Industry, Inc.  
Building Technologies Division  
1000 Deerfield Pkwy  
Buffalo Grove IL 60089  
Tel. +1 847-215-1000

© 2014 Copyright Siemens Industry, Inc.  
Technical specifications and availability subject to change without notice.