

UART VVC – Quick Reference

uart_transmit (VVCT, vvc_instance_idx, channel, data, msg)

Example: uart_transmit(UART_VVCT, 1, TX, x"AF", "Sending data to Peripheral 1");


uart_receive (VVCT, vvc_instance_idx, channel, msg, [alert_level])

Example: uart_receive(UART_VVCT, 1, RX, "Receive from Peripheral 1");

uart_expect (VVCT, vvc_instance_idx, channel, data, msg, [max_receptions, [timeout, [alert_level]]])

Example: uart_expect(UART_VVCT, 1, RX, x"42", "Expect data from Peripheral 1");

VVC

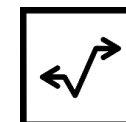

uart_vvc.vhd
uart_rx_vvc.vhd
uart_tx_vvc.vhd

UART VVC Configuration record **'vvc_config'**

Parameter name	Type	C_UART_VVC_CONFIG_DEFAULT
inter_bfm_delay	t_inter_bfm_delay	C_UART_INTER_BFM_DELAY_DEFAULT
cmd_queue_count_max	natural	C_CMD_QUEUE_COUNT_MAX
cmd_queue_count_threshold	natural	C_CMD_QUEUE_COUNT_THRESHOLD
cmd_queue_count_threshold_severity	t_alert_level	C_CMD_QUEUE_COUNT_THRESHOLD_SEVERITY
bfm_config	t_uart_bfm_config	C_UART_BFM_CONFIG_DEFAULT
msg_id_panel	t_msg_id_panel	C_VVC_MSG_ID_PANEL_DEFAULT

UART VVC Status record signal **'vvc_status'**

Parameter name	Type
current_cmd_idx	natural
previous_cmd_idx	natural
pending_cmd_cnt	natural

Common VVC procedures applicable for this VVC

- See UVVM Methods QuickRef for details.

await_completion()

enable_log_msg()

disable_log_msg()

fetch_result()

flush_command_queue()

terminate_current_command()

terminate_all_commands()

insert_delay()



UVVM™

VVC target parameters

Name	Type	Example(s)	Description
VVCT	t_vvc_target_record	UART_VVCT	VVC target type compiled into each VVC in order to differentiate between VVCs.
vvc_instance_idx	integer	1	Instance number of the VVC
channel	t_channel	TX, RX or ALL_CHANNELS	The VVC channel of the VVC instance

VVC functional parameters

Name	Type	Example(s)	Description
data	std_logic_vector	x"FF"	The data to be transmitted (in uart_transmit) or the expected data (in uart_expect).
msg	string	"Send to peripheral 1"	A custom message to be appended in the log/alert
alert_level	t_alert_level	ERROR or TB_WARNING	Set the severity for the alert that may be asserted by the method.
max_receptions	natural	1	The maximum number of receptions before the expected data must be found. Exceeding this limit results in an alert 'alert_level'.
timeout	time	100 ns	The maximum time to pass before the expected data must be found. Exceeding this limit results in an alert 'alert_level'.

VVC entity signals

Name	Type	Direction	Description
clk	std_logic	Input	VVC Clock signal
uart_vvc_rx	std_logic	Input	UART VVC RX signal
uart_vvc_tx	std_logic	Inout	UART VVC TX signal

VVC entity generic constants

Name	Type	Default	Description
GC_DATA_WIDTH	natural	8	Bits in the UART byte
GC_INSTANCE_IDX	natural	1	Instance number to assign the VVC
GC_CHANNEL	t_channel	TX/RX	Channel to be assigned to this leaf VVC (only used in TX or RX implementations, not in the uart_vvc.vhd wrapper).
GC_UART_CONFIG	t_uart_bfm_config	C_UART_BFM_CONFIG_DEFAULT	Configuration for the UART BFM, see UART BFM documentation.
GC_CMD_QUEUE_COUNT_MAX	natural	1000	Absolute maximum number of commands in the VVC command queue
GC_CMD_QUEUE_COUNT_THRESHOLD	natural	950	An alert will be generated when reaching this threshold to indicate that the command queue is almost full. The queue will still accept new commands until it reaches C_CMD_QUEUE_COUNT_MAX.
GC_CMD_QUEUE_COUNT_THRESHOLD_SEVERITY	t_alert_level	WARNING	Alert severity which will be used when command queue reaches GC_CMD_QUEUE_COUNT_THRESHOLD.

VVC details

All VVC procedures are defined in `vvv_methods_pkg` (dedicated this VVC), and `uvvm_vvc_framework.uvvm_methods_pkg` and `uvvm_vvc_framework.uvvm_support_pkg` (common VVC procedures)

1 VVC procedure details and examples

Procedure	Description
uart_transmit()	<p>The <code>uart_transmit()</code> VVC procedure adds a transmit command to the UART TX VVC executor queue, that will run as soon as all preceding commands have completed. When the transmit command is scheduled to run, the executor calls the UART BFM <code>uart_transmit()</code> procedure, described in the UART BFM QuickRef. The <code>uart_transmit()</code> procedure can only be called using the UART TX channel, i.e. setting 'channel' to 'TX'.</p> <p>uart_transmit (VVCT, instance_idx, channel, data, msg) e.g.:</p> <ul style="list-style-type: none"> - <code>uart_transmit(UART_VVCT, 1, TX, x"0D", "Transmitting carriage return to Peripheral 1");</code>
uart_receive()	<p>The <code>uart_receive()</code> VVC procedure adds a receive command to the UART RX VVC executor queue, that will run as soon as all preceding commands have completed. When the receive command is scheduled to run, the executor calls the UART BFM <code>uart_receive()</code> procedure, described in the UART BFM QuickRef.</p> <p>The received data will not be returned in this procedure call since it is non-blocking for the sequencer/caller, but the received data will be stored in the VVC for a potential future fetch. The data will be available until overwritten by new read-data depending on the read-data buffer size. The <code>uart_receive()</code> procedure can only be called using the UART RX channel, i.e. setting 'channel' to 'RX'.</p> <p>uart_receive (VVCT, instance_idx, channel, msg, [alert_level]) e.g.</p> <ul style="list-style-type: none"> - <code>uart_receive (UART_VVCT, 1, RX, "Receiving from Peripheral 1");</code> <p>The procedure can also be called with the optional parameters, e.g.:</p> <ul style="list-style-type: none"> - <code>uart_receive (UART_VVCT, 1, RX, "Receiving from Peripheral 1", ERROR);</code>
uart_expect()	<p>The <code>uart_expect()</code> VVC procedure adds an expect command to the UART VVC executor queue, which will run as soon as all preceding commands have completed. When the expect command is scheduled to run, the executor calls the UART BFM <code>uart_expect()</code> procedure, described in the UART BFM QuickRef. The received data will not be stored by this procedure. The <code>uart_expect()</code> procedure can only be called using the UART RX channel, i.e. setting 'channel' to 'RX'.</p> <p>uart_expect (VVCT, instance_idx, channel, data, msg, [max_receptions, [timeout, [alert_level]]]) e.g.</p> <ul style="list-style-type: none"> - <code>uart_expect(UART_VVCT, 1, RX, x"0D", "Expecting carriage return from Peripheral 1");</code> <p>The procedure can also be called with the optional parameters, e.g.:</p> <ul style="list-style-type: none"> - <code>uart_expect(UART_VVCT, 1, RX, C_CR_BYTE, "Expecting carriage return from Peripheral 1", 5, 10 ms, ERROR);</code>

2 VVC Configuration

Name	Type	C_UART_VVC_CONFIG_DEFAULT	Description
inter_bfm_delay	t_inter_bfm_delay	C_UART_INTER_BFM_DELAY_DEFAULT	Specified delay between BFM accesses from the VVC. If parameter delay_type is set to NO_DELAY, BFM accesses will be back to back, i.e. no delay.
cmd_queue_count_max	natural	C_MAX_COMMAND_QUEUE	Maximum pending number in command queue before queue is full. Adding additional commands will result in an ERROR.
cmd_queue_count_threshold	natural	C_CMD_QUEUE_COUNT_THRESHOLD	An alert with severity "cmd_queue_count_threshold_severity" will be issued if command queue exceeds this count. Used for early warning if command queue is almost full. Will be ignored if set to 0.
cmd_queue_count_threshold_severity	t_alert_level	C_CMD_QUEUE_COUNT_THRESHOLD_SEVERITY	Severity of alert to be triggered if command count exceeding cmd_queue_count_threshold
bfm_config	t_uart_bfm_config	C_UART_BFM_CONFIG_DEFAULT	Configuration for UART BFM. See QuickRef for UART BFM
msg_id_panel	t_msg_id_panel	C_VVC_MSG_ID_PANEL_DEFAULT	VVC dedicated message ID panel

The configuration record can be accessed from the Central Testbench Sequencer through the shared variable array, e.g.:

```
shared_uart_vvc_config(TX,1).inter_bfm_delay.delay_in_time := 10 ms;
shared_uart_vvc_config(RX,1).bfm_config.num_data_bits      := 8;
```

3 VVC Status

The current status of the VVC can be retrieved during simulation. This is done by reading from the shared variable shared_uart_vvc_status record from the test sequencer. The record contains status for both channels, specified with the channel axis of the shared_uart_vvc_status array. The record contents can be seen below:

Name	Type	Description
current_cmd_idx	natural	Command index currently running
previous_cmd_idx	natural	Previous command index to run
pending_cmd_cnt	natural	Pending number of commands in the command queue

4 Additional Documentation

Additional documentation about UVVM and its features can be found under "/uvvm_vvc_framework/doc/".

For additional documentation on the UART protocol, please see the UART specification.

5 Compilation

The UART VVC must be compiled with VHDL 2008.

It is dependent on the following libraries

- **UVVM Utility Library (UVVM-Util), version 1.0.0 and up**
- **UVVM VVC Framework, version 1.0.0 and up**
- **UART BFM**

Before compiling the UART VVC, make sure that uvvm_vvc_framework and uvvm_util have been compiled.

Compile order for the UART VVC:

Compile to library	File	Comment
bitvis_vip_uart	uart_bfm_pkg.vhd	UART BFM
bitvis_vip_uart	vvc_cmd_pkg.vhd	UART VVC command types and operations
bitvis_vip_uart	../uvvm_vvc_framework/src_target_dependent/td_target_support_pkg.vhd	UVVM VVC target support package, compiled into the UART VVC library.
bitvis_vip_uart	../uvvm_vvc_framework/src_target_dependent/td_vvc_framework_common_methods_pkg.vhd	UVVM framework common methods compiled into the UART VVC library
bitvis_vip_uart	vvc_methods_pkg.vhd	UART VVC methods
bitvis_vip_uart	../uvvm_vvc_framework/src_target_dependent/td_vvc_entity_support_pkg.vhd	UVVM VVC entity methods compiled into the UART VVC library
bitvis_vip_uart	uart_rx_vvc.vhd	UART RX VVC
bitvis_vip_uart	uart_tx_vvc.vhd	UART TX VVC
bitvis_vip_uart	uart_vvc.vhd	UART VVC wrapper for the RX and TX VVCs

6 Simulator compatibility and setup

This VVC has been compiled and tested with Modelsim version 10.3d and Riviera-PRO version 2015.10.85.

For required simulator setup see **UVVM-Util** Quick reference.

IMPORTANT

This is a simplified Verification IP (VIP) for UART TX and RX.

The given VIP complies with the basic UART protocol and thus allows a normal access towards a UART interface. This VIP is not a UART protocol checker.

For a more advanced VIP please contact Bitvis AS at support@bitvis.no

INTELLECTUAL PROPERTY

Disclaimer: This IP and any part thereof are provided "as is", without warranty of any kind, express or implied, including but not limited to the warranties of merchantability, fitness for a particular purpose and noninfringement. In no event shall the authors or copyright holders be liable for any claim, damages or other liability, whether in an action of contract, tort or otherwise, arising from, out of or in connection with this IP.