



USB BASIC v1.3

Supplemental BASIC Commands for Aquarius MX
Aquarius System Development
Sean Harrington, Designer



OVERVIEW

USB BASIC is a set of commands and functions that extend the original Aquarius BASIC language for use with the Aquarius MX expander.


- Works on Aquarius MX and Micro Expander modules
- Leverages USB drive for rapid access to digital storage
- Implements a RTC (Real Time Clock) for TimeDate functionality
- Expands addressing capabilities of BASIC commands
- Runs as a ROM, so Ext BASIC is not accessible (Aquarius II and modded Aquarius)



NEW FEATURES

- Numeric references in most BASIC commands updated
 - Can accept signed integers (-32768 to 32767)
 - Can accept unsigned integers (0 to 65355)
 - Can accept hexadecimal values (\$0000 to \$FFFF)
- Support for Dallas DS1244Y RTC (RealTime Clock) for DateTime functions
- PEEK & POKE commands expanded
 - Can accept auto-incrementing start address with multiple trailing values
 - Can accept start address and TO keyword with end address for repeated single value
 - Can accept STEP keywords for counts, followed by one or more bytes
- PT3 Player has been migrated to a standalone ROM file (PT3PLAY.ROM)



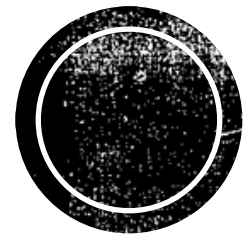


SCHEDULE

Plan for roll-out of USB BASIC v1.3

TESTING & ROLLOUT

- Alpha Testers needed to run test plans on real and emulated hardware
 - 2 MAY 2023 – Test plans ready; Test ROM available to download and burn
 - 8 MAY 2023 – Alpha Testing complete
- Beta Testers needed to run unstructured tests on real and emulated hardware
 - 9 MAY 2023 – Final ROM and documentation ready to download and test
 - 16 MAY 2023 – All testing complete
- 17 MAY 2023 – General Release (TARGET)
 - Integrators to begin offering replacement ROMs
 - Instructions on RTC installation for existing Hardware complete

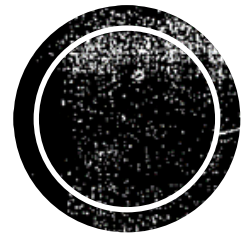

COMMANDS

Review of Original and New USB BASIC Commands

COMMANDS - ORIGINAL

- ATN()
- CALL xx
- CAT
- CD " "
- CLS x
- DEBUG
- DEC()
- DEEK()
- DEF FN
- DEL " "
- DIR
- DOKE xx, zz
- DTM\$()
- EDIT
- HEX\$()
- IN()
- JOY()
- KEY()
- LOAD " ", x
- LOCATE x,y
- OUT x, z
- PSG()
- RUN " "
- SAVE " ", xx, z
- SDTM " "
- VER()

COMMANDS – **NEW, v1.3**

- **ATN()**
- CALL xx
- CAT
- CD " "
- **CLS x**
- DEBUG
- **DEC()**
- **DEEK()**
- **DEF FN**
- DEL " "
- DIR
- **DOKE xx, zz**
- **DTM\$()**
- EDIT
- HEX\$()
- IN()
- JOY()
- KEY()
- LOAD " ", x
- LOCATE x,y
- OUT x, z
- PSG()
- RUN " "
- SAVE " ", xx, z
- **SDTM " "**
- **VER()**

ATN()

Mathematical function that returns the arctangent of a number. The result is the angle (in radians) whose tangent is the number fed to the function.

EXAMPLES:

```
PRINT ATN(0)
```

```
10 J=12
```

```
20 X=ATN(J)*180/3.14159
```

CALL xx

Causes the Aquarius to jump to a machine code routine at the address given.

EXAMPLES:

```
CALL 8192
```

```
20 CALL $4000
```



CAT

Displays a brief listing of the files in the current directory of the USB drive (immediate mode only!).

EXAMPLE:

```
CAT
<..      > <DATA      > RUN-ME    BAS
<SCR     >
```

CD " "

Changes the Current Directory of the USB drive to the one supplied, otherwise, displays the name of the Current Directory.

EXAMPLES:

```
CD "DATA"
```

```
CD  
/DATA
```

```
CD ".." (Goes to previous directory)
```

CLS

Clears the screen of all color and text to a default black text on cyan background (value 6), unless a value for color is supplied: $(FG * 16) + BG$

EXAMPLES:

```
CLS
```

```
10 CLS 9
```


```
10 CLS $0006
```

DEBUG

Launches the built-in AquBug Debugger in the Aquarius MX ROM.

EXAMPLE:

DEBUG

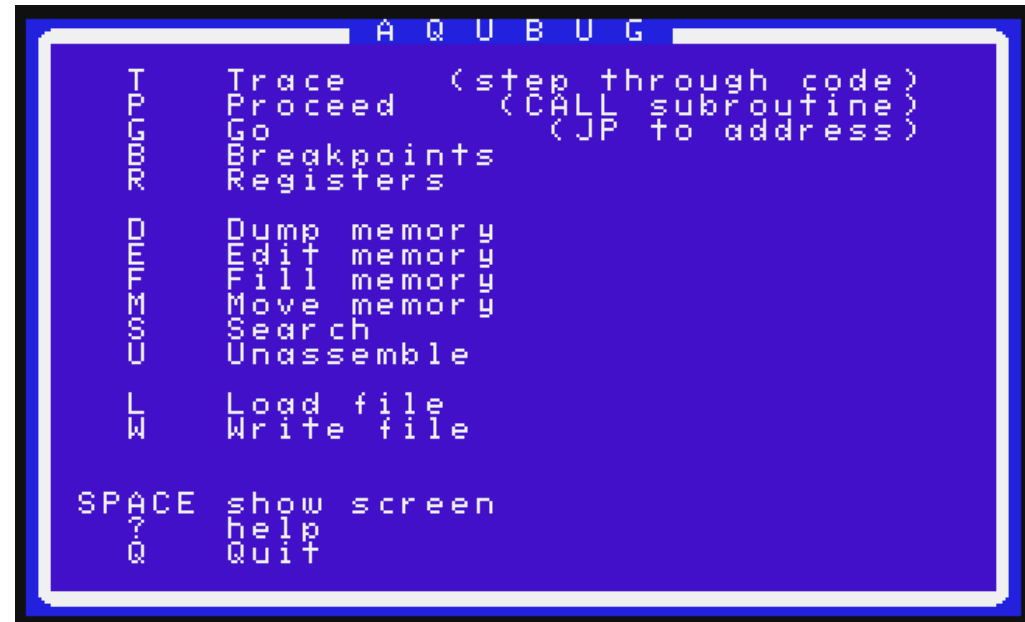

DEC()

Returns the DECimal value of the hexadecimal number in <string>.

EXAMPLES:

```
PRINT DEC ("FFFF")
```

Prints 65535

```
10 A$=HEX$(32)
```

```
20 PRINT DEC (A$)
```

Prints 32

DEEK() – “DOUBLE PEEK”

Reads a word from memory location <address>, returning a number between 0 and 65535.

EXAMPLES:

```
POKE DEEK(14337),PEEK(14349)
```

Remove cursor from screen

```
10 PRINT DEEK($384B)
```

Prints the top of BASIC memory address

DEF FN / FN

This sets up a user-defined function that can be used later in the program. The function can consist of any mathematical formula.

EXAMPLES:

```
10 DEF FN A(X)=X+7
```

```
20 PRINT FN A(9)
```

Prints 16 (9 + 7)

DEL " "

Deletes the file or directory supplied in quotes.

EXAMPLES:

```
DEL "RUN-ME.BAS"
```

Deletes file named `run-me.bas`

```
20 A$="data.bin"
```

```
10 DEL A$
```

Deletes filename in `A$`, `data.bin`

DIR

Displays a complete listing of the files in the current directory of the USB drive, with file type and size (immediate mode only!).

EXAMPLE:

```
DIR
..          <dir>   data          <dir>
run-me      BAS   139   splash      SCR  2048
Ok
```

DOKE xx,zz – “DOUBLE POKE”

Write 16 bit (2 byte) word to Memory Location(s).

EXAMPLES:

DOKE 14340,1382

Set USR() function address

DOKE \$3028,\$6162

Put the characters ab at the top left of the screen

DTM\$()

If a RTC (Real Time Clock) is installed, returns a DateTime string in one of two formats.

EXAMPLES:

```
PRINT DTM$(0)
```

Prints 23051208140700 (YYMMDDHHSSMMCC)

```
10 A$=DTM$(1)
```

```
20 PRINT LEFT$(A$,10)
```

Prints 2023-05-12

```
30 PRINT RIGHT$(A$,8)
```

Prints 08:14:07

EDIT

Activates the built-in, single line BASIC editor in the Aquarius MX ROM.

DETAILS:

CURSOR is shown as BLUE box
with WHITE text

CTRL + P = cursor left

CTRL + / = cursor right

DELETE/BKSP = delete char left of cursor

text keyed = adds text at cursor

RETURN = enters/commits edits

```
1000 REM US DateTime
1010 DIM DTM$(12)
1020 FOR I=0 TO 11
1030   DTM$(I)=""
1040 NEXT I
1050 PRINT "Enter Date and Time (MM/DD/YYYY HH:MM:SS):"
1060 FOR I=0 TO 11
1070   INPUT DTM$(I)
1080 NEXT I
1090 STR$="(DD)+ " "+M$(MM)+STR$(YY)
1100 PRINT STR$
1110 RETURN
```

HEX\$()

Returns string containing <number> in two-byte hexadecimal format.

EXAMPLES:

```
PRINT HEX$(255)
```

Prints 00FF

```
10 PRINT HEX$(PEEK(12288))
```

Prints 0020

IN()

Reads a byte from the I/O port specified by LSB of <address>.

EXAMPLES:

```
PRINT IN(252)
```

Prints cassette port input status

```
10 S=IN($FE)
```

Set variable S to Printer Ready status

JOY()

Reads an input value from the joystick(s).

EXAMPLES:

```
PRINT JOY(0)
```

Prints value from either joystick/control pad

```
10 Z=JOY(1)
```

Set variable Z to value from left joystick/control pad

```
50 PRINT HEX$(JOY(2))
```

Prints hex value from right joystick/control pad

KEY()

Reads a key value input from the keyboard.

EXAMPLES:

```
PRINT HEX$(KEY(0))
```

Wait until a key is pushed and print hex value

```
10 A=KEY(1000)
```

Scan the keyboard up to 1000 times or until a key is pushed, and assign the value to variable a

LOAD " ", aa

Loads a file into memory at the specified address. The following filetypes don't require an address, as the system knows where to load them: .CAQ, .ROM, .BAS, .SCR.

EXAMPLES:

```
LOAD "RUN-ME.BAS"
```

Loads file named `run-me.bas`

```
20 LOAD "data.bin",8192
```

Loads file named `data.bin` to address 8192

```
40 LOAD "splash.scr"
```

Loads file named `splash.scr` to CHRRAM and COLRAM

LOCATE x,y

Moves the cursor to a specified column and row on the screen. Note that in immediate mode, the cursor returns to the next row, so the command is more useful in a BASIC program loop.

EXAMPLES:

```
LOCATE 1,0
```

Moves cursor to first character of top row

```
10 LOCATE 20,12
```

```
20 PRINT CHR$(KEY(0))
```

Moves cursor to the middle of the screen
and prints the character of the first key pressed

OUT x,z

Sends a value (z) to the specified IO device (x).

EXAMPLES:

```
OUT 246, 12
```

Send a value of 12 to the SOUND chip

```
10 X=14:OUT $FC, X
```

Send a value of 14 to the Cassette
sound port

PSG x,z,...

Send a value (z) to the specified sound chip register (x). Multiple pairs of values may be strung together separated by commas.

EXAMPLES:

```
PSG 8,15,9,15,10,15
```

Set volume of all sound channels to 15 (max)

```
10 PSG 8,15,0,148,1,1,7,56
```

Play a Db4 on channel A, and wait for a key press before stopping the sound

```
20 A=KEY(0):PSG 8,0
```

RUN " "

Loads a file into memory and runs it. Only works properly with the following filetypes: .CAQ, .ROM, .BAS. (Note that old program will be overwritten!)

EXAMPLES:

```
RUN "SNAFU.ROM"
```

Loads and runs file named SNAFU.rom

```
20 RUN "game.bas"
```

Loads and runs file named game.bas

SAVE " ",aa,zz

Saves a file from memory address (aa) for a specified length (zz). If no address and length are given, it assumed to save from BASIC program space, and should be given a .BAS suffix by user when named.

EXAMPLES:

```
SAVE "TESTER.BAS"
```

Saves the current BASIC program to a file
named TESTER.BAS

```
20 SAVE "DATA.BIN", $8000, 32
```

Saves 32 bytes of memory starting at \$8000
to a file named DATA.BIN

SDTM “ ”

If a RTC (Real Time Clock) is installed, sets the date when the string is entered in the format “YYMMDDHHMMSS”. Note that the century is assumed to be 20, and the centiseconds are assumed to be 00.

EXAMPLES:

SDTM “230512081407” Sets RTC to 2023-05-12 08:14:07

10 SDTM “010101000000” Sets RTC to 2001-01-01 00:00:00

VER()

Returns the current version of USB BASIC. The value in parenthesis is typically 0, but can be any integer between -32768 and 65355.

EXAMPLES:

```
PRINT HEX$(VER(0))
```

Prints 0103 for USB BASIC v1.3

```
20 A=VAL(HEX$(VER(0)))
```

```
30 IF A<103 THEN PRINT "No"
```

Checks version and prints No if less than 103.

QUESTIONS?

- Visit GitHub site at <https://github.com/1stage/Aquarius-MX>
- Email Sean Harrington, sph@1stage.com

