

ESP32-radio

This document describes the realization of an Internet radio based on an ESP32 WiFi module.

The ESP32 is the successor of the ESP8266. For the ESP8266 an Internet radio was build and now the software is ported to the ESP32. The Internet radio described here uses the ESP32 as well as a VS1053 module to decrypt the MP3 stream and a 1.8 TFT color display to give some information about the radio station that's playing. This display has also a SD card slot. Mp3 tracks on an SD card can be played by the ESP32-radio.

Features:

- Can connect to thousands of Internet radio stations that broadcast MP3 audio streams.
- Can connect to a standalone mp3-file on a server.
- mp3 playlists supported.
- Can play MP3 files from SD card.
- Uses a minimal number of components.
- Has a preset list of a maximum of 100 favorite radio stations as preferences in flash.
- Can be controlled by a tablet or other device through the built-in webserver.
- Can be controlled by MQTT commands. Status info is published by using MQTT.
- Can be controlled by commands on the serial input.
- Can be controlled by IR.
- Can be controlled by rotary switch encoder.
- Up to 14 input ports can be configured as control buttons like volume, skip to the next/previous/first/favorite preset station.
- I/O pins for TFT, VS1053, IR and rotary encoder can be configured in preferences.
- The strongest available WiFi network is automatically selected. Passwords are kept as preferences in flash. Heavily commented source code, easy to add extra functionality.
- Debug information through serial output.
- 2nd processor is used for smooth playback.
- Update of software over WiFi (OTA).
- Parameters like WiFi information and presets can be edited in the web interface.
- Plays iHeartRadio streams.
- Preset, volume, bass and treble settings are saved in preferences.
- Displays time of day on TFT.
- Optional displays remaining battery charge.

Software:

The software for the radio is supplied as an Arduino sketch that can be compiled for the ESP32 using the Arduino IDE version 1.8.5. No Arduino is required in this project.

The following libraries are used:

- WiFi – for establishing the communication with WiFi, part of ESP32 core library
- SPI – for communication with VS1053 and TFT display, part of ESP32 core library
- WiFiMulti - to select the strongest WiFi network
- Adafruit_GFX – for writing info on the TFT screen (if configured), see:
<https://github.com/adafruit/Adafruit-GFX-Library>
- TFT_ILI9163C – driver for the TFT screen (if configured), see:
https://github.com/sumotoy/TFT_ILI9163C
- ArduinoOTA for software update over WiFi.
- PubSubClient to handle MQTT messages, see:
<https://github.com/knolleary/pubsubclient>
- SD and FS for reading from SD card.

The map with the ESP32-radio sketch must also contain the supplied headerfiles “index_html.h”, “favicon_ico.h”, “radio_css.h”, “config_html.h”, “defaultprefs.h”, “mp3play_html.h” and “about_html.h”. These files are included for the webinterface in PROGMEM.

Preferences

Preferences for ESP32-Radio are kept in Flash memory (NVS).

You may change the contents of NVS with the “Config”-button in the web interface. An example of the contents is:

```
bat0    = 2178    # ADC for 0% battery capacity left
bat100  = 3256    # ADC for 100% battery capacity
#
clk_dst = 1
clk_offset = -1
clk_server = pool.ntp.org
#
gpio_00 = uppreset = 1
gpio_12 = upvolume = 2
gpio_13 = downvolume = 2
#
ir_40BF = upvolume = 2
ir_C03F = downvolume = 2
#
mqttbroker = mqtt.smallenburg.nl
mqttpasswd = *****
mqttpport = 1883
mqttuser = edzelf
#
pin_enc_clk = 25    # GPIO rotary encoder CLK
pin_enc_dt = 26     # GPIO rotary encoder DT
pin_enc_sw = 27     # GPIO rotary encoder SW
pin_ir = 35         # GPIO IR receiver VS1838B
pin_sd_cs = 21      # GPIO SD card CS
pin_tft_cs = 15     # GPIO TFT CS
pin_tft_dc = 2      # GPIO TFT DC
pin_vs_cs = 5       # GPIO VS1053 CS
pin_vs_dcs = 16     # GPIO VS1053 DCS
pin_vs_dreq = 4     # GPIO VS1053 DREQ
#
preset = 4
preset_00 = 109.206.96.34:8100          # 0 - NAXI LOVE RADIO, Belgrade, Serbia
preset_01 = airspectrum.cdnstream1.com:8114/1648_128 # 1 - Easy Hits Florida 128k
preset_02 = us2.internet-radio.com:8050  # 2 - CLASSIC ROCK MIAMI 256k
preset_03 = airspectrum.cdnstream1.com:8000/1261_192 # 3 - Magic Oldies Florida
preset_04 = airspectrum.cdnstream1.com:8008/1604_128 # 4 - Magic 60s Florida 60s Classic Rock
preset_05 = us1.internet-radio.com:8105   # 5 - Classic Rock Florida - SHE Radio
preset_06 = icecast.omroep.nl:80/radio1-bb-mp3 # 6 - Radio 1, NL
preset_07 = 205.164.62.15:10032          # 7 - 1.FM - GAIA, 64k
preset_08 = skonto.ls.lv:8002/mp3        # 8 - Skonto 128k
preset_09 = 94.23.66.155:8106            # 9 - *ILR CHILL and GROOVE
preset_10 = ihr/IHR_IEDM                 # 10 - iHeartRadio IHR_IEDM
preset_11 = ihr/IHR_TRAN                  # 11 - iHeartRadio IHR_TRAN
preset_12 = www.classicfm.nl/player/classicfm.m3u # 12 - Playlist Classic FM
#
toneha = 0
tonehf = 0
tonela = 0
tonelf = 0
#
volume = 72
#
wifi_00 = ADSL-11_plus/*****
wifi_01 = NETGEAR-11/*****
wifi_02 = ADSL-11/*****
```

Not that the size of the NVS is limited to 20 kB.

Lines starting with “#” are comment lines and are ignored. Comments per line (after “#”) will also be ignored, except for the “preset_” lines. The comments on the “preset_” lines are used to identify the presets in the web interface.

The maximum line length is 150 characters.

Note that the preset numbers ranges from 00 to 99. If the highest numbered station is reached, the next station will be 00 again. URLs with mp3 files or mp3 playlists (.m3u) are allowed.

Presets starting with "ihr/" are iHeartRadio stations.

"pin_ir", " pin_enc_clk", " pin_enc_dt", " pin_enc_sw", " pin_tft_cs", " pin_tft_dc", " pin_sd_cs", " pin_vs_cs", " pin_vs_dcs" en " pin_vs_dreq" specify the GPIO pins that are wired to the various devices. For a FEATERBOARD you have to change some settings, especially for TFT and SD card. The pins for SPI default to SCK=18, MISO=19 and

MOSI=23, but they may be configured by "pin_spi_sck", "pin_spi_miso" and "pin_spi_mosi" respectively. Remove the lines if a device is not connected.

"pin_shutdown" is the pin that will be set if the radio is not playing. This output-pin can be used to shut down the amplifier. The pin will be HIGH to shut down the amplifier.

"pin_shutdownx" has the same function. The output signal is inversed: the pin will be LOW to shut down the amplifier.

The "gpio_" lines specify input pins and the command that is executed if the input pin goes from HIGH to LOW.

The "touch_" lines specify the GPIO input pins for this signal and the command that is executed if the input pin is activated.

The "ir_XXXX" lines specify IR-codes and the command that is executed if the IR-code is received. The code part is a hexadecimal number in upper-case characters.

The "clk_" lines are used for the display of the current time on the TFT. Please change the values for your timezone. The values in the example are valid for the Netherlands.

The "bat0" and "bat100" lines are for displaying the remaining battery capacity on the display. See the details at the paragraph with optional features.

The preferences can be edited in the web interface. Changes will in some cases be effective after restart of the Esp-radio. If the list of preferences is empty (first start), you may use the default button. The list will show some default values which can be edited.

Using Winamp to find out the correct preset line for a station.



Press Alt-3 in the main window (left picture). You will see info for the playing station (right picture). The top line (with “http”) will contain the information for the preset, in this example:

“us1.internet-radio.com:8105”. The complete line for this station in the preferences would be:

```
preset_05 = us1.internet-radio.com:8105 # 5 - Classic Rock Florida - SHE Radio
```

Optional features:

Digital control through input pins:

Normally the radio is controlled by the web interface. However, free digital inputs (GPIO) may be connected to buttons to control the radio. Their function can be programmed using the webinterface.

You can assign commands to the digital inputs by adding lines in the configuration (Webinterface, "Config" page).

Examples:

```
gpio_00 = uppreset = 1
gpio_12 = upvolume = 2
gpio_13 = downvolume = 2
gpio_14 = stop
gpio_17 = resume
gpio_21 = station = icecast.omroep.nl:80/radio1-bb-mp3
```

In this example the ESP32-Radio will execute the command "uppreset=1" if GPIO00 will go from HIGH to LOW. The commands are equal to the commands that are handled by the serial input or by the MQTT interface.

The same format can be used for the touch-inputs:

```
touch_04 = uppreset = 1
touch_13 = upvolume = 2
```

In this example the ESP32-Radio will execute the command "uppreset=1" if TOUCH0 (GPIO04) will be activated. The commands are equal to the commands that are handled by the serial input or by the MQTT interface.

IR Interface.

The radio can be controlled by an IR remote control like this:



To use this interface, the "out" pin of a VS1838B receiver must be connected to a GPIO pin of the ESP32:



Add the assigned GPIO pin to the preferences through the config page in the web interface. Example:

```
pin_ir = 35 # GPIO Pin number for IR receiver VS1838B
```

VCC is connected to 3.3 Volt. A 220 μ F capacitor should be connected between VCC and GND.

The software will read the raw code of the IR transmitter, making it possible to use virtually any remote control to be used. I tested it with the 21 button remote as well as with an LG TV remote.

To assign functions to the buttons, watch the debug log output while pressing a button. For example, press the +volume button. You will see something like:

```
D: IR code 807F received, but not found in preferences!
```

Now add the command:

```
ir_807F = upvolume = 2
```

to the preferences in the config page of the web interface. Likewise you can assign functions to all buttons, for example:

```
ir_8A31 = uppreset = 1
ir_719A = station = us1.internet-radio.com:8105
ir_1F6B = mute
```

Display remaining battery capacity:

The remaining battery capacity is computed by measuring the battery voltage on pin GPIO36 (ADC0).

The battery voltage must be supplied to ADC0 through a resistor voltage divider. The maximum voltage for this

input is 1.0 volt. I used 100 k Ω and 22 k Ω for this purpose.

Furthermore you need to specify ADC value for both the full and the empty voltages. These values must be in the preferences like:

```
bat0    = 2178    # ADC for 0% battery capacity left  
bat100  = 2690    # ADC for 100% battery capacity
```

To calibrate the settings you may use the “TEST” command in the serial monitor. This will display the current reading of the ADC0 pin. Do this for a fully charge battery and for an (almost) empty one.



Note that it will take about 6 seconds before the reading is stable. This is a result of a filter in the measurement of the ADC.

The remaining capacity is displayed as a green/red bar near the top of the display.


Hardware:

The radio is built with the following widely available hardware:


- An ESP-32 module. This is basically an ESP32 on a small print. I used a DOIT ESP32 Development Board. See figure 1 below. The ESP32 is running on 160 MHz.
- A VS1053 module. See figure 2.
- A 1.8 inch color TFT display. Optional, see figure 3.
- Two small speakers.
- A Class D stereo amplifier to drive the speakers. Best quality if powered by a separate power source.
- A rotary encoder switch. Optional, see figure 4.
- A IR receiver. Optional, see figure 5.

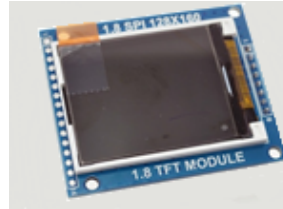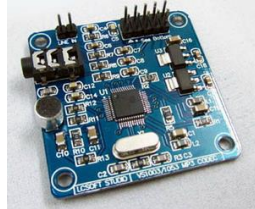

Here is a picture of the radio in a test configuration. Only the VS1053 is connected.

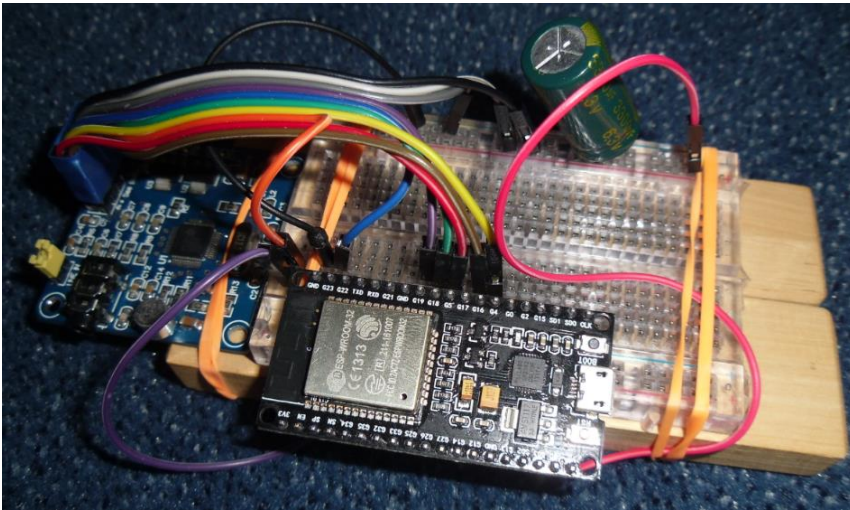

The module is not very breadboard friendly. The (hanging over) +5 Volt of the ESP32 is wired to the 5Volt rail of the breadboard. The big capacitor (3300 μ F) is added to allow powering the module from USB. Without it, the USB has insufficient power to drive the ESP32.

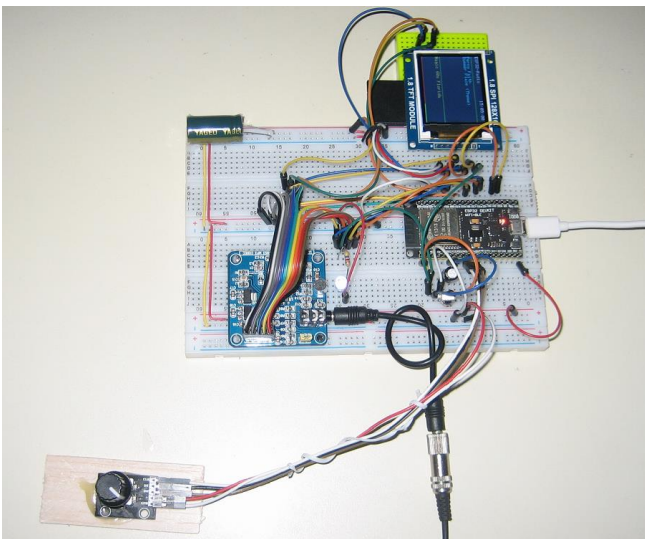

Another prototype. This time with SD-card, TFT, IR and rotary switch.

The radio may be powered by a 5 V adapter. The radio will function on single LiPo cell as well, so I added a small charge circuit powered by the 5 V input. The amplifier uses a separate LiPo cell to minimize noise caused by the ESP32. The TFT and VS1053 work on 3.8 to 5 Volt.

I used a small perforated board to connect the ESP32 module and the TFT and to mount it in a small speaker box. The TFT is visible through a hole in the front of the box:

Wiring:

The logic wiring in the table below. The analog amplifier and the speakers are not included.

Note that the GPIO pins are just an example. The assignment of GPIO pins is defined in the preferences that can be edited in the "config" page of the web interface.


| ESP32dev | Signal | Wired to LCD | Wired to VS1053 | SDCARD | Wired to the rest |
|----------|--------|--------------|-----------------|--------|---------------------------|
| ----- | ----- | ----- | ----- | ----- | ----- |
| GPIO16 | - | - | pin 1 XDCS | - | - |
| GPIO5 | - | - | pin 2 XCS | - | - |
| GPIO4 | - | - | pin 4 DREQ | - | - |
| GPIO2 | - | pin 3 D/C | - | - | - |
| GPIO18 | SCLK | pin 5 CLK | pin 5 SCK | CLK | - |
| GPIO19 | MISO | - | pin 7 MISO | MISO | - |
| GPIO23 | MOSI | pin 4 DIN | pin 6 MOSI | MOSI | - |
| GPIO21 | - | - | - | CS | - |
| GPIO15 | - | pin 2 CS | - | - | - |
| GPIO3 | RXD0 | - | - | - | Reserved serial input |
| GPIO1 | TXD0 | - | - | - | Reserved serial output |
| GPIO34 | - | - | - | - | Optional pull-up resistor |
| GPIO35 | - | - | - | - | Infrared receiver VS1838B |
| GPIO25 | - | - | - | - | Rotary encoder CLK |
| GPIO26 | - | - | - | - | Rotary encoder DT |
| GPIO27 | - | - | - | - | Rotary encoder SW |
| ----- | ----- | ----- | ----- | ----- | ----- |
| GND | - | pin 8 GND | pin 8 GND | | Power supply GND |
| VCC 5 V | - | pin 7 BL | - | | Power supply |
| VCC 5 V | - | pin 6 VCC | pin 9 5V | | Power supply |
| EN | - | pin 1 RST | pin 3 Xrst | | |

Amplifier and power circuit.

The amplifier is a class D stereo amplifier. If the power is shared with the power supply of the radio, you will hear much noise. So I used a separate LiPo battery (Batt 2) for the amplifier.

During operation only Batt 1 will be charged. If the radio is switched off, both batteries will be recharged by the LiPo charger. S1a, S1b and S1c is a triple On-On switch.

Note that there may be high currents in the “off”-position if Batt 1 is fully discharged. Use protected batteries only!

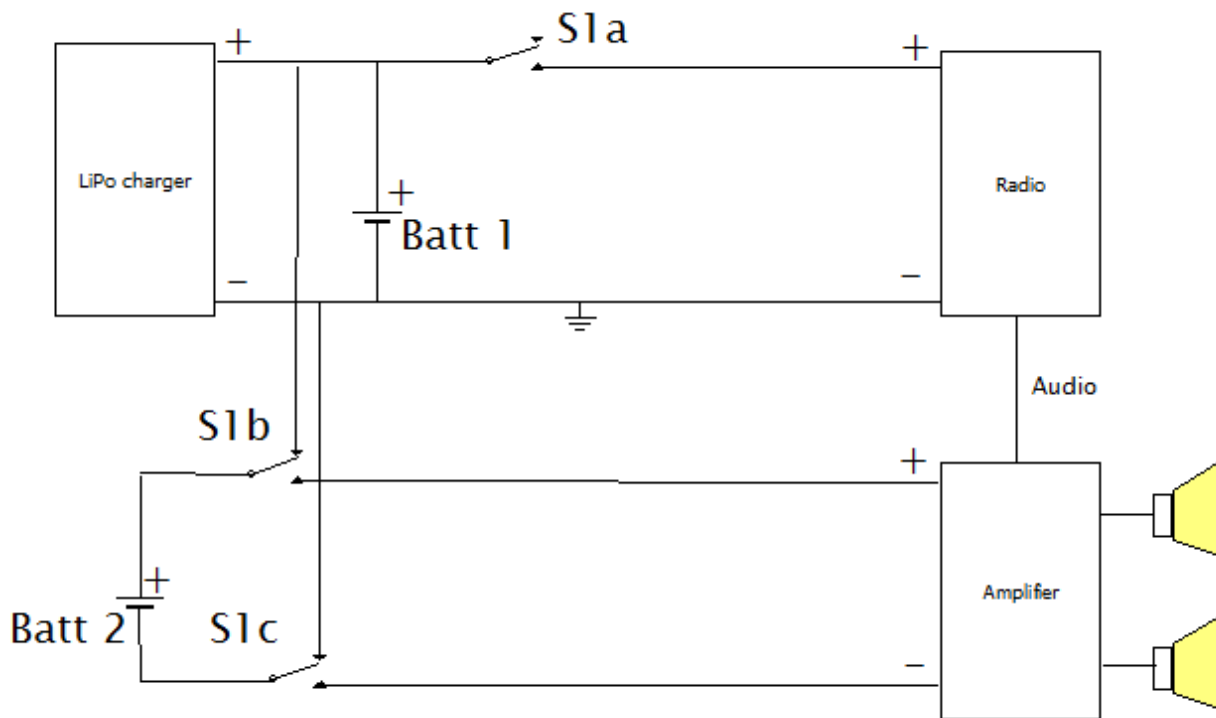

Web interface.

The web interface is simple and can be adapted to your needs. The basic idea is to have a html page with embedded javascript that displays an interface to the radio. Command to the radio can be sent to the http server on the ESP32. The IP address of the webserver will be displayed on the TFT during startup. The webpages are defined in PROGMEM.

Capabilities of the webserver:

Let's assume that the IP of the ESP32-radio is 192.168.2.12. From your browser you can show a simple root page by entering the following URL: <http://192.168.2.12>. This will display the index_html.h page from the PROGMEM as well as favicon_ico.h.

If your computer is configured for mDNS, you can also use <http://ESP32Radio.local> in your browser.

The following simple web interface will be displayed:

ESP32 Radio Control Config MP3 player About

**** ESP32 Radio ****

PREV NEXT VOL- VOL+ MUTE STOP RESUME STATUS TEST

Preset:
6 - Radio 1, NL

Treble Gain: Off Treble Freq: 1 kHz
Bass Gain: Off Bass Freq: 10 Hz

Enter a station/file here.... **PLAY**

Waiting for a command....

Find new radio stations at <http://www.internet-radio.com>
Examples: us1.internet-radio.com:8105, skonto.ls.lv:8002/mp3, 85.17.121.103:8800

Clicking on one of the available buttons will control the ESP32-radio. The reply of the webserver will be visible in the status box below the buttons. A click will be translated into a command to the ESP32-radio in the form:

`http://192.168.2.13/?<parameter>=<value>`

For example: <http://192.168.2.13/?upvolume=2>

The "STATUS" and "TEST" buttons give some info about the playing stream/file.

Not all functions are available as buttons in the web interface shown above. Commands may also come from MQTT or serial input. Not all commands are meaningful on MQTT or serial input. Working commands are:

| | | |
|------------|---------------------|--|
| preset | = 12 | Select start preset to connect to |
| uppreset | = 1 | Select next preset or playlist entry |
| downpreset | = 1 | Select previous preset or playlist entry |
| preset_00 | = <mp3 stream> | Specify station for a preset 00-99 |
| volume | = 95 | Percentage between 0 and 100 |
| upvolume | = 2 | Add percentage to current volume |
| downvolume | = 2 | Subtract percentage from current volume |
| toneha | = <0..15> | Setting treble gain |
| tonehf | = <0..15> | Setting treble frequency |
| tonela | = <0..15> | Setting bass gain |
| tonelf | = <0..15> | Setting treble frequency |
| station | = <mp3 stream> | Select new station (will not be saved) |
| station | = <URL>.mp3 | Play standalone .mp3 file (not saved) |
| station | = <URL>.m3u | Select playlist (will not be saved) |
| xml | = <Mountpoint> | Select iHeartRadio station (not saved) |
| mute | | Mute (or unmute) the music |
| stop | | Stop player |
| resume | | Resume player |
| wifi_00 | = mySSID/mypassword | Set WiFi SSID and password *) |
| mqttbroker | = mybroker.com | Set MQTT broker to use *) |
| mqttport | = 1883 | Set MQTT port (default 1883) to use *) |
| mqttuser | = myuser | Set MQTT user for authentication *) |
| mqttpasswd | = mypassword | Set MQTT password for authentication*) |
| mqttprefix | = none | Set MQTT prefix for pub/sub. |
| clk_server | = pool.ntp.org | Time server to be used *) |
| clk_offset | = <-11...+14> | Offset with respect to UTC in hours *) |
| clk_dst | = <1..2> | Offset during DST in hours *) |
| mp3track | = <nodeID> or 0 | Play MP3 track from SD card, 0 = random |
| status | | Show current URL to play |
| test | | For test purposes |
| debug | = 0 or 1 | Switch debugging on or off |
| reset | | Restart the ESP32 |

Commands marked with "*" are sensible during power-up only.

Station may also be of the form "skonto.ls.lv:8002/mp3". The default port is 80.

Station may also point to an mp3 playlist. Example: "www.rockantenne.de/webradio/rockantenne.m3u".

Station may be an .mp3-file on a remote server. Example: "www.stephaniequinn.com/Music/Rondeau.mp3".

Station may also point to a local .mp3-file on SD card. Example: "localhost/friendly.mp3".

It is allowed to have multiple (max 100) "preset_" lines. The number after the "_" will be used as the preset number.

The comment part (after the "#") will be shown in the webinterface.

It is also allowed to have multiple "wifi_" lines. The strongest Wifi access point will be used.

Configuration

The "Config" button will bring up a second screen. Here you can edit the preferences. The available Wifi networks are listed as well. The config screen will be shown automatically if the ESP32 cannot connect to one of the WiFi stations specified in the preferences. In that case the ESP32 will act as an accesspoint with the name "ESP32Radio". You have to connect to this AP with password "ESP32Radio". Then the ESP32-radio can be reached at <http://192.168.4.1>.

NOTE: It is strongly advised to change the default AP network name and password in the source code.

Change the line with:

```
WiFi.softAP ( NAME, NAME ) ;
```

to (for example):

```
WiFi.softAP ( "NW2356", "Q8QPREP" ) ;
```

Then you have the opportunity to edit the preferences. A "default" button is available to fill the editbox with some example data. To a quick start, just fill in you WiFi network name and password and click "Save". Restart the radio afterwards.

Note that passwords are hidden in this screen to give some protection against abuses. You may however change them here. If unchanged, the original values are preserved.

After changing the contents of this page, it must be saved to the preferences by clicking the "Save" button. Changes will have effect on the next restart of the ESP-radio, so click the "Restart" button.

ESP32 Radio

Control

Config

MP3 player

About

**** ESP32 Radio ****

You can edit the configuration here. *Note that this will be effective on the next restart of the radio.*
Stopping the radio first will result in faster loading of this page.

Available WiFi networks

ADSL-11_plus

```
mqttbroker = mqtt.somebroker.nl
mqttport = 1883
mqttuser = edzelf
mqttpasswd = *****
#
wifi_00 = ADSL-11_plus/*****
wifi_01 = NETGEAR-11/*****
wifi_02 = ADSL-11/*****
#
volume = 70
toneha = 0
tonehf = 0
tonela = 0
tonelf = 0
#
preset = 6
#
preset_00 = 109.206.96.34:8100 # 0 - NAXI LOVE RADIO, Belgrade, Serbia
preset_01 = airspectrum.cdnstream1.com:8114/1648_128 # 1 - Easy Hits Florida 128k
preset_02 = us2.internet-radio.com:8050 # 2 - CLASSIC ROCK MIAMI 256k
preset_03 = airspectrum.cdnstream1.com:8000/1261_192 # 3 - Magic Oldies Florida
```

Save

Restart

Default

Command accepted

It may take some time to fill this screen.

MP3 player

ESP32-Radio can also be used as an mp3 player if an SD card interface is available. The screen will look like this:



When this page is called for the first time, a search for all tracks on the SD card will be executed. This may take some time. All found tracks will be available in the drop-down list on the screen. You may pick a track and it will play. When the track has finished, the next track in the drop-down list will be played automatically.

You may also click the "RANDOM" button and a random track will be played. If the track has finished a new random song will be selected.

It may take some time to fill this page because the directories on the SD card are searched for MP3 tracks.

Rotary encoder interface.

The rotary encoder switch can control some essential functions of the ESP32-radio. The "GND"- and "+"-pins must be connected to ground and 3.3 Volt pins of the ESP32 DEV module.

The default function is volume control. Turning the knob will result in lower or higher volume. Pressing the knob will mute/unmute the signal. The text "Mute" or "Unmute" will be shown on the TFT during 4 seconds.

A double click selects the preset-mode. Rotation of the switch will select one of the preset stations. The preset will be shown on the TFT. Once a preset is selected, you can activate this preset by a single click.

Without rotation, the next preset is selected.

A triple click will select the mp3-player (SD card required). Rotation of the switch will select one of the tracks on the SD card. The track will be displayed on the TFT. Once a track is selected, you can activate it by a single click.

Without rotation, the next track is selected.

After the triple click the player stops, as reading filenames will overload the SD card I/O.

A long click (longer than 1 second) will start playing random tracks from SD card.

After an inactivity of 4 seconds the rotary encoder will return to its default function (VOLUME).

MQTT interface.

The MQTT interface can handle the same commands as the web interface.


As publish command on a Linux system may look like:

```
$ mosquitto_pub -h broker.hivemq.com -t espradio -m volume=80
```

Note that `broker.hivemq.com` is heavily used, this may cause some delay. If you use your own broker the reaction on commands will be much better.

Remove the lines starting with “mqtt” if no MQTT is required or set `mqttbroker` to “none”.

You can use an MQTT client like <https://kamilfb.github.io/mqtt-spy/> to view the MQTT interface.

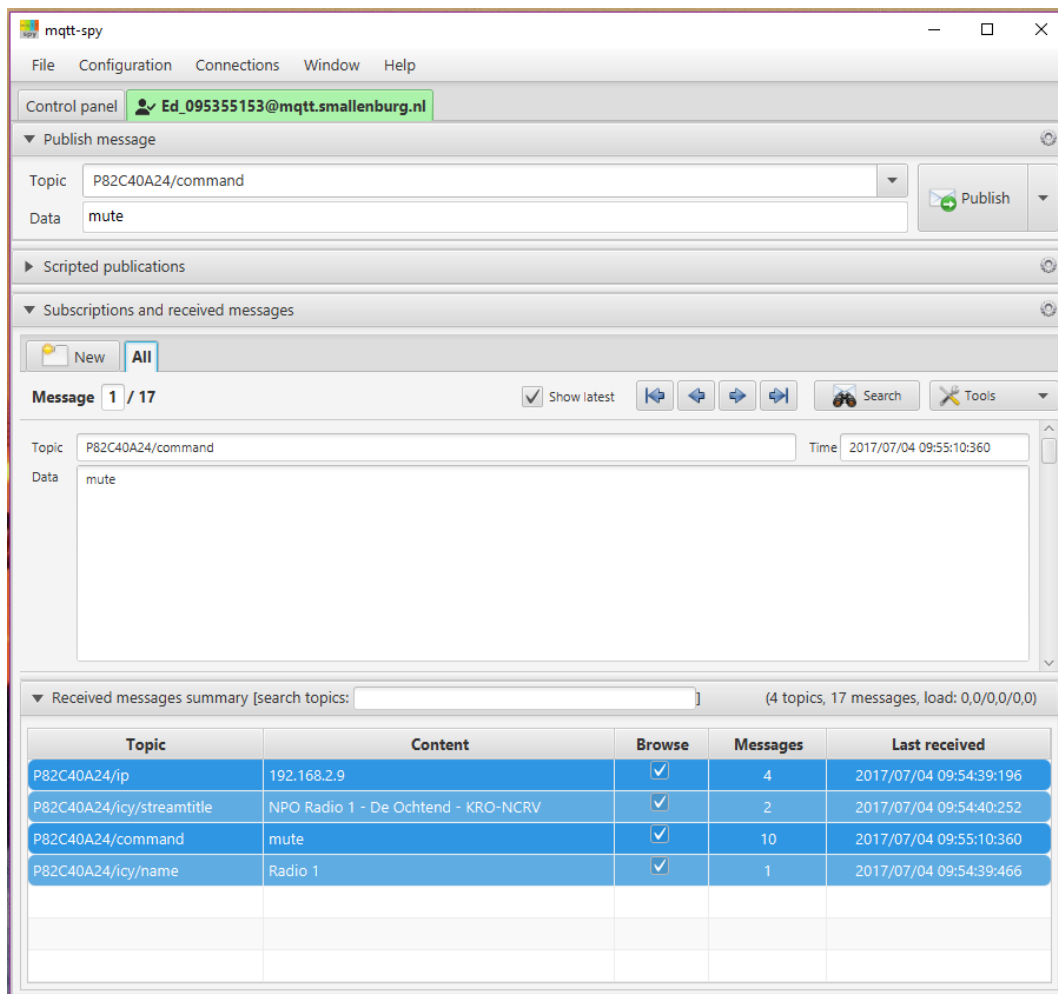

Subscribe to “P82C40A24/ip” and you will see the IP-address of your radio. You will see the IP address of your radio or the IP address of a different user. So be sure to use unique names for your topics. This can be accomplished by specifying a unique prefix in the preferences, see below.

The parameters in preferences for this example are:

```
# MQTT broker, credentials and topic to subscribe
mqttbroker = broker.hivemq.com      # Broker to connect with
mqttprefix = P82C40A24              # Prefix for pub/sub. Default is part of MAC-address.
mqttpport = 1883                    # Portnumber (1883 is default)
mqttuser = none                     # (No) username for broker
mqttpasswd = none                   # (No) password for broker
#
```

In this example I published the command “mute” to the radio. The radio published the IP-address 192.168.2.8 to the broker (once every 10 minutes).

MQTT PUB topics.

In this version 7 topics will be published to MQTT and can be subscribed to by an MQTT client:

| | |
|------------------------|-----------------------------------|
| prefix/ip | The IP-address of the ESP32-Radio |
| prefix/icy/name | The name of the station |
| prefix/icy/streamtitle | The name of the stream |
| prefix/nowplaying | Track information |
| prefix/preset | Preset currently plaing |
| prefix/volume | Current volume setting |
| prefix/playing | 1 if playing, 0 if stopped |

Command to control the ESP32-Radio can be published to "prefix/command".

TFT library patches.

The display is used in mode "3". The TFT-library has a bug for this mode. Height and width are reversed here.

To correct it, find the source code TFT_ILI9163C.cpp on your computer (mine is at "documents/Arduino/libraries/TFT_ILI9163C-master") and change the 2 lines 1096 and 1097 to:

```
_width  = _TFTHEIGHT; //-__OFFSET;  
_height = _TFTWIDTH;
```

Find TFT_ILI9163C_settings.h and edit it so that the right board will be selected. As an example you will find the configuration for the "blue 1.8 SPI 128x160 board" in the TFT_ILI9163C-master.zip file.

Alternative way of configuration.

An extra sketch "Esp32_radio_init" is supplied as an alternative to initialize the preferences (in Non-Volatile Storage of the ESP32). Just change lines 39 and 40 (the specs for WiFi networks) to match your network(s).

Upload and run the sketch once and then load the ESP32-Radio.

Debug (serial 115200 Baud) output.

This is an example of the debug output.

ets Jun 8 2016 00:22:57

```
rst:0x10 (RTCWDT_RTC_RESET),boot:0x17 (SPI_FAST_FLASH_BOOT)
configsip: 0, SPIWP:0xee
clk_drv:0x00,q_drv:0x00,d_drv:0x00,cs0_drv:0x00,hd_drv:0x00,wp_drv:0x00
mode:DIO, clock div:1
load:0x3fff0018,len:4
load:0x3fff001c,len:952
load:0x40078000,len:6084
load:0x40080000,len:7936
entry 0x40080310
```

```
D: Starting ESP32-radio running on CPU 1 at 240 MHz. Version Mon, 30 July 2018 09:30:00 GMT. Free memory 233664
D: Display type is BLUETFT
D: Partition nvs found, 20480 bytes
D: Read 48 keys from NVS
D: pin_ir set to 35
D: pin_enc_clk set to 25
D: pin_enc_dt set to 26
D: pin_enc_sw set to 27
D: pin_tft_cs set to 15
D: pin_tft_dc set to 2
D: pin_tft_scl set to 13
D: pin_tft_sda set to 14
D: pin_sd_cs set to 21
D: pin_vs_cs set to 5
D: pin_vs_dcs set to 16
D: pin_vs_dreq set to 4
D: pin_shutdown set to -1
D: pin_shutdownx set to -1
D: pin_spi_sck set to 18
D: pin_spi_miso set to 19
D: pin_spi_mosi set to 23
D: GPIO0 is HIGH
D: GPIO2 is HIGH
D: GPIO4 is HIGH
D: GPIO5 is HIGH
D: GPIO12 is HIGH
D: GPIO13 is HIGH
D: GPIO14 is HIGH
D: GPIO15 is HIGH
D: GPIO16 is HIGH
D: GPIO17 is HIGH
D: GPIO18 is HIGH
D: GPIO19 is HIGH
D: GPIO21 is HIGH
D: GPIO22 is HIGH
D: GPIO23 is HIGH
D: GPIO25 is HIGH
D: GPIO26 is HIGH
D: GPIO27 is HIGH
D: GPIO32 is HIGH
D: GPIO33 is HIGH
D: GPIO34 is LOW, probably no PULL-UP
D: GPIO35 is HIGH
D: GPIO39 is LOW, probably no PULL-UP
D: gpio_00 will execute upvolume = 1
D: touch_05 will execute upvolume = 1
D: Level is now 65
D: Enable pin 35 for IR
D: Start display
D: Locate mp3 files on SD, may take a while...
D: 495 tracks on SD
D: Create list with acceptable WiFi networks
D: Added NETGEAR-11 to list of networks
D: Added SSID2 to list of networks
D: Added test to list of networks
D: Added ITG to list of networks
D: End adding networks
D: Scan Networks
D: Scan completed
D: Number of available networks: 8
D: 1 - NETGEAR-11 Signal: -66 dBm, Encryption WPA2_PSK, Acceptable
D: 2 - KPN Fon Signal: -80 dBm, Encryption OPEN,
D: 3 - ADSL-11 Signal: -83 dBm, Encryption WPA_WPA2_PSK,
D: 4 - Roulet 9 Signal: -86 dBm, Encryption WPA2_PSK,
D: 5 - Roulet 9 Gast Signal: -88 dBm, Encryption WPA_WPA2_PSK,
D: 6 - Ziggo Signal: -89 dBm, Encryption ????,
D: 7 - ADSL-11-EXT Signal: -91 dBm, Encryption WPA_WPA2_PSK,
D: 8 - Ziggo45631 Signal: -92 dBm, Encryption WPA2_PSK,
D: End of list
D: Command: clk_dst with parameter 1
D: Command: clk_offset with parameter 1
D: Command: clk_server with parameter pool.ntp.org
D: Command: gpio_00 with parameter upvolume = 1
D: Command: gpio_13 with parameter downvolume = 2
D: Command: ir_40bf with parameter upvolume = 2
D: Command: ir_c03f with parameter downvolume = 2
D: Command: mqttbroker with parameter none
D: Command: mqttpasswd with parameter *****
D: Command: mqttport with parameter 1883
D: Command: mqtttppreset with parameter none
D: Command: mqttuser with parameter none
D: Command: pin_enc_clk with parameter 25
D: Command: pin_enc_dt with parameter 26
D: Command: pin_enc_sw with parameter 27
D: Command: pin_ir with parameter 35
D: Command: pin_sd_cs with parameter 21
D: Command: pin_tft_cs with parameter 15
D: Command: pin_tft_dc with parameter 2
D: Command: pin_tft_scl with parameter 13
D: Command: pin_tft_sda with parameter 14
D: Command: pin_vs_cs with parameter 5
D: Command: pin_vs_dcs with parameter 16
D: Command: pin_vs_dreq with parameter 4
D: Command: preset with parameter 1
```

D: Command: preset_00 with parameter 109.206.96.34:8100
D: Command: preset_01 with parameter airspectrum.cdnstream1.com:8114/1648_128
D: Command: preset_02 with parameter us2.internet-radio.com:8050
D: Command: preset_03 with parameter airspectrum.cdnstream1.com:8000/1261_192
D: Command: preset_04 with parameter airspectrum.cdnstream1.com:8008/1604_128
D: Command: preset_05 with parameter us1.internet-radio.com:8105
D: Command: preset_06 with parameter icecast.omroep.nl:80/radio1-bb-mp3
D: Command: preset_07 with parameter 205.164.62.15:10032
D: Command: preset_08 with parameter skonto.ls.lv:8002/mp3
D: Command: preset_09 with parameter 94.23.66.155:8106
D: Command: preset_10 with parameter ihr/IHR IEDM
D: Command: preset_11 with parameter ihr/IHR TRAN
D: Command: preset_12 with parameter 178.79.158.160:8424/stream
D: Command: toneha with parameter 0
D: Command: tonehf with parameter 0
D: Command: tonela with parameter 0
D: Command: tonelf with parameter 0
D: Command: touch_05 with parameter upvolume = 1
D: Command: volume with parameter 69
D: Slow SPI, Testing VS1053 read/write registers...
D: Fast SPI, Testing VS1053 read/write registers again...
D: endFillByte is 0
D: Connect to WiFi
D: Connected to NETGEAR-11
D: IP = 192.168.2.18
D: Start server for commands
D: Network found. Starting mqtt and OTA
D: MDNS responder started
D: Rotary encoder is enabled
D: Sync TOD
D: Sync TOD, new value is 11:38:03
D: STOP requested
D: New preset/file requested (1/0) from airspectrum.cdnstream1.com:8114/1648_128
D: Connect to new host airspectrum.cdnstream1.com:8114/1648_128
D: Connect to airspectrum.cdnstream1.com on port 8114, extension /1648_128
D: Connected to server
D: Duration mp3loop 1
D: Switch to HEADER
D: Headerline: Content-Type: audio/mpeg
D: audio/mpeg seen.
D: Headerline: icy-br:128
D: Headerline: ice-audio-info: ice-samplerate=44100;ice-bitrate=128;ice-channels=2
D: Headerline: icy-br:128
D: Headerline: icy-description:Today's Easy Hits from the 70s, 80s, 90s through Today!
D: Headerline: icy-genre:Easy Listening
D: Headerline: icy-name:Easy Hits Florida
D: Headerline: icy-private:0
D: Headerline: icy-pub:1
D: Headerline: icy-url:http://www.easyhitsflorida.com
D: Headerline: Server: Icecast 2.4.0-kh3
D: Headerline: Cache-Control: no-cache, no-store
D: Headerline: Pragma: no-cache
D: Headerline: Access-Control-Allow-Origin: *
D: Headerline: Access-Control-Allow-Headers: Origin, Accept, X-Requested-With, Content-Type
D: 1-Allow-Headers: Origin, Accept, X-Requested-With, Content-Type seen.
D: Headerline: Access-Control-Allow-Methods: GET, OPTIONS, HEAD
D: Headerline: Connection: Close
D: Headerline: Expires: Mon, 26 Jul 1997 05:00:00 GMT
D: Headerline: icy-metaint:16000
D: Switch to DATA, bitrate is 128, metaint is 16000
D: Duration mp3loop 87
D: Metadata block 48 bytes
D: StreamTitle found, 42 bytes
D: StreamTitle='Ambrosia - How Much I Feel ';