
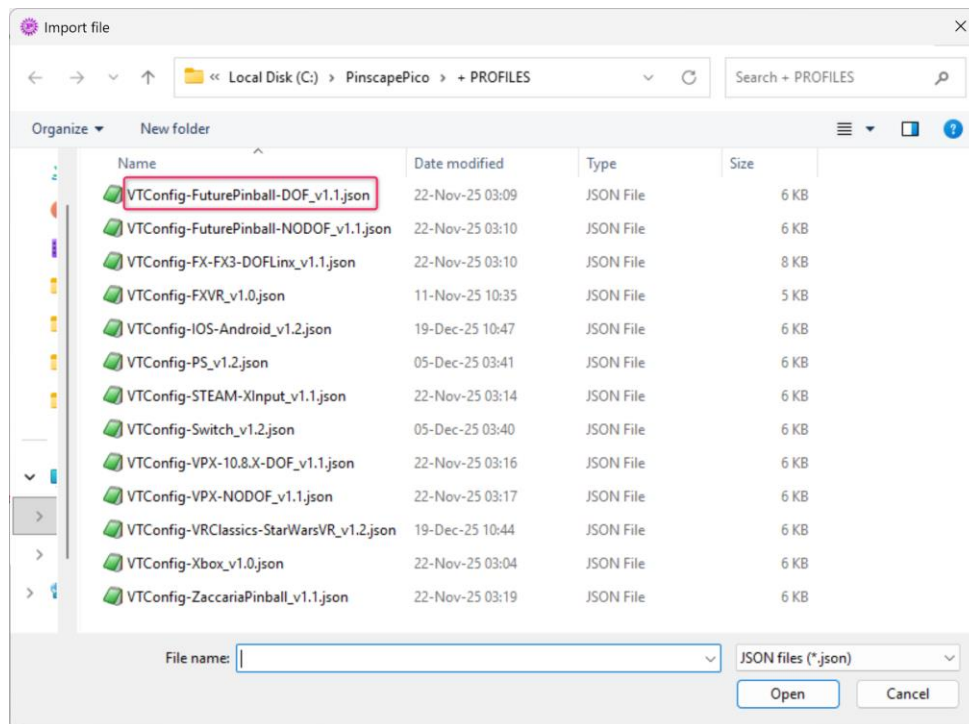



## VIRTUATILT – FUTURE PINBALL SETUP

Following some basic instructions to have your new VirtuaTilt up and running with Future Pinball.

### PREREQUISITES:

- DirectOutput Framework (**DOF**) already installed and working (refer to **VirtuaTilt-RP2040\_VPXSetup\_v1.x** document)
- DOF **NOT** running
- Windows System Language and Keyboard set to **English (MANDATORY)**
- **VTConfig-FuturePinball-DOF\_v1.X.json** profile loaded in **Pinscape Pico**

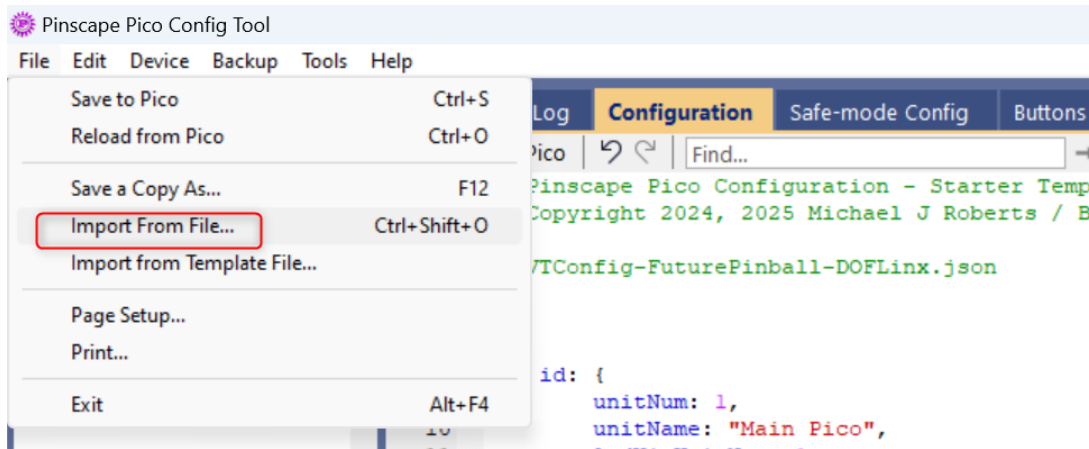

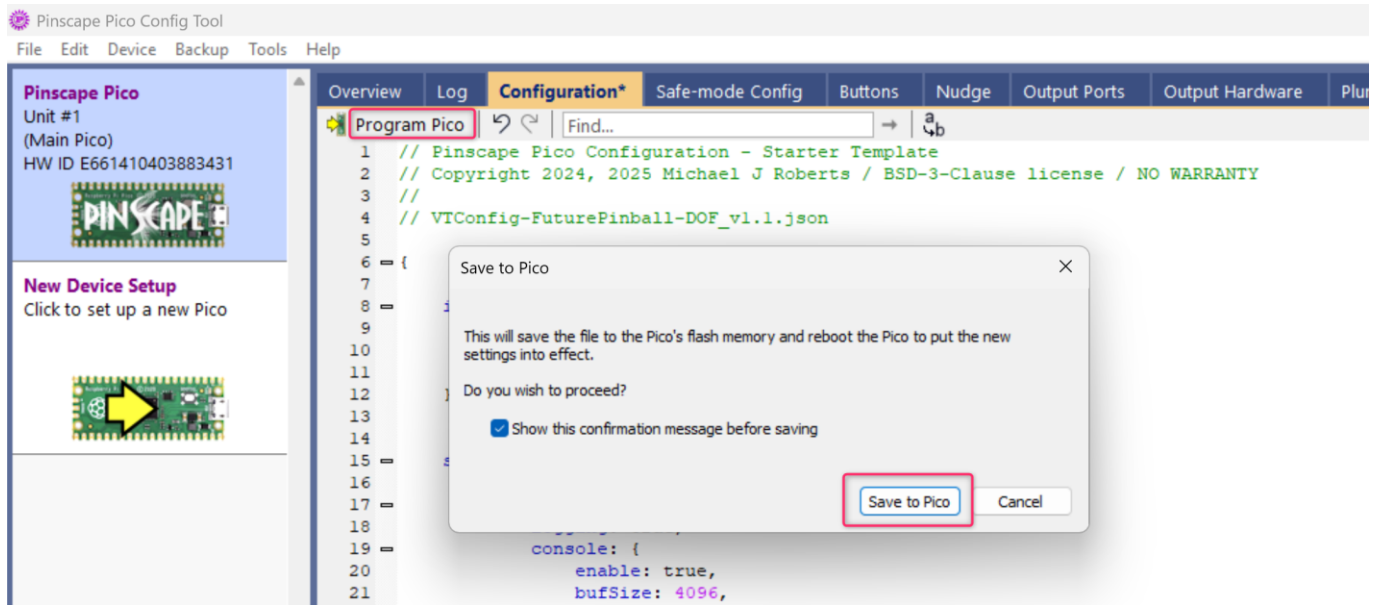

## Future Pinball Installation

Download the **FP and BAM Essentials AIO package** here:

<https://vpuniverse.com/files/file/14807-future-pinball-and-bam-essentials-all-in-one-complete/>


The FP and BAM Essentials AIO package includes a complete install of Future Pinball, the latest BAM update, the latest BAM Open-VR update, and a collection of essential files. This covers desktop, cabinet, and VR players.

Installing this package makes setting up Future Pinball and BAM easy at any time with everything you need, ready to go in one folder.

This can be used for a new install or an update. If you already have a working Future Pinball and BAM setup, then this package will get you updated with everything you need to play the latest and greatest Future Pinball tables!


No need to use installers or download files and guides from different locations. No need to patch files. It's all here ready to go in one zip file!

Unblock zipfile and extract it:

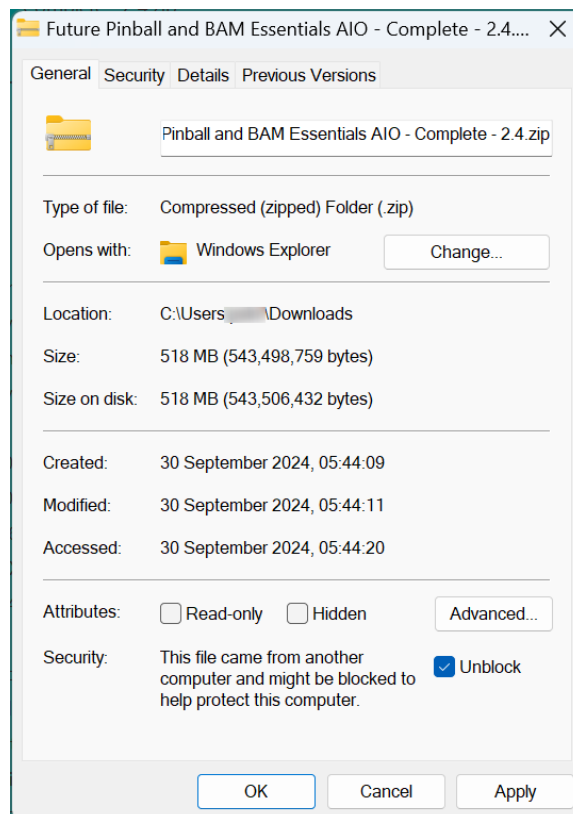

<div> <div> <div>↻</div> <div>🖥️</div> <div>&gt;</div> <div>This PC</div> <div>&gt;</div> <div>Local Disk (C:)</div> <div>&gt;</div> <div>vPinball</div> <div>&gt;</div> <div>FuturePinball</div> <div>&gt;</div> </div> </div>				
<div> <div> <div>📁</div> <div>📄</div> <div>📄</div> <div>📄</div> <div>🗑️</div> <div>↕️ Sort ▾</div> <div>☰ View ▾</div> <div>⋮</div> </div> </div>				
Name	Date modified	Type	Size	
📁 BAM	01/10/2024 08:57	File folder		
📁 BAM-OpenVR	30/09/2024 05:47	File folder		
📁 BAM-OpenVR-OC	30/09/2024 05:47	File folder		
📁 dmdext	02/07/2024 16:20	File folder		
📁 DmdFonts	02/07/2024 16:20	File folder		
📁 Feeds	02/07/2024 16:20	File folder		
📁 fpRAM	01/10/2024 08:54	File folder		
📁 Help	02/07/2024 16:20	File folder		
📁 Libraries	30/09/2024 10:42	File folder		
📁 Scripts	02/07/2024 16:20	File folder		
📁 Setup and Guides	30/09/2024 05:47	File folder		
📁 Tables	01/10/2024 09:11	File folder		
📁 Tools and other Apps	30/09/2024 05:47	File folder		
📁 Tutorials and Examples	30/09/2024 05:47	File folder		
📄 devil.dll	25/12/2008 13:46	Application extension	263 KB	
📄 DmdDevice.ini	02/07/2024 16:27	Configuration settings	12 KB	
📄 dmdext.exe	22/09/2023 03:16	Application	12,889 KB	
📄 dmdext.log.config	02/11/2023 19:56	CONFIG File	2 KB	
📄 DMDExt_FP.BAT	29/06/2023 21:51	Windows Batch File	2 KB	
📄 fmod.dll	09/12/2007 21:22	Application extension	159 KB	
📄 Future Pinball.exe	10/07/2022 07:57	Application	27,879 KB	
📄 Future Pinball.exe.Backup	31/12/2010 18:23	BACKUP File	27,879 KB	
📄 ilu.dll	25/12/2008 13:46	Application extension	27 KB	
📄 ilut.dll	25/12/2008 13:46	Application extension	16 KB	
📄 libcurl.dll	24/11/2006 03:42	Application extension	612 KB	
📄 NewTable.fpt	06/01/2008 20:19	Future Pinball Table	222 KB	
📄 Newton.dll	09/12/2007 21:22	Application extension	436 KB	
📄 OpenGL32.dll	05/05/2021 03:19	Application extension	534 KB	
📄 SciLexer.dll	23/12/2008 01:36	Application extension	398 KB	


**Follow official Install guide available in the extracted folder** to set up BAM for your cabinet configuration (STEPS 1-13):

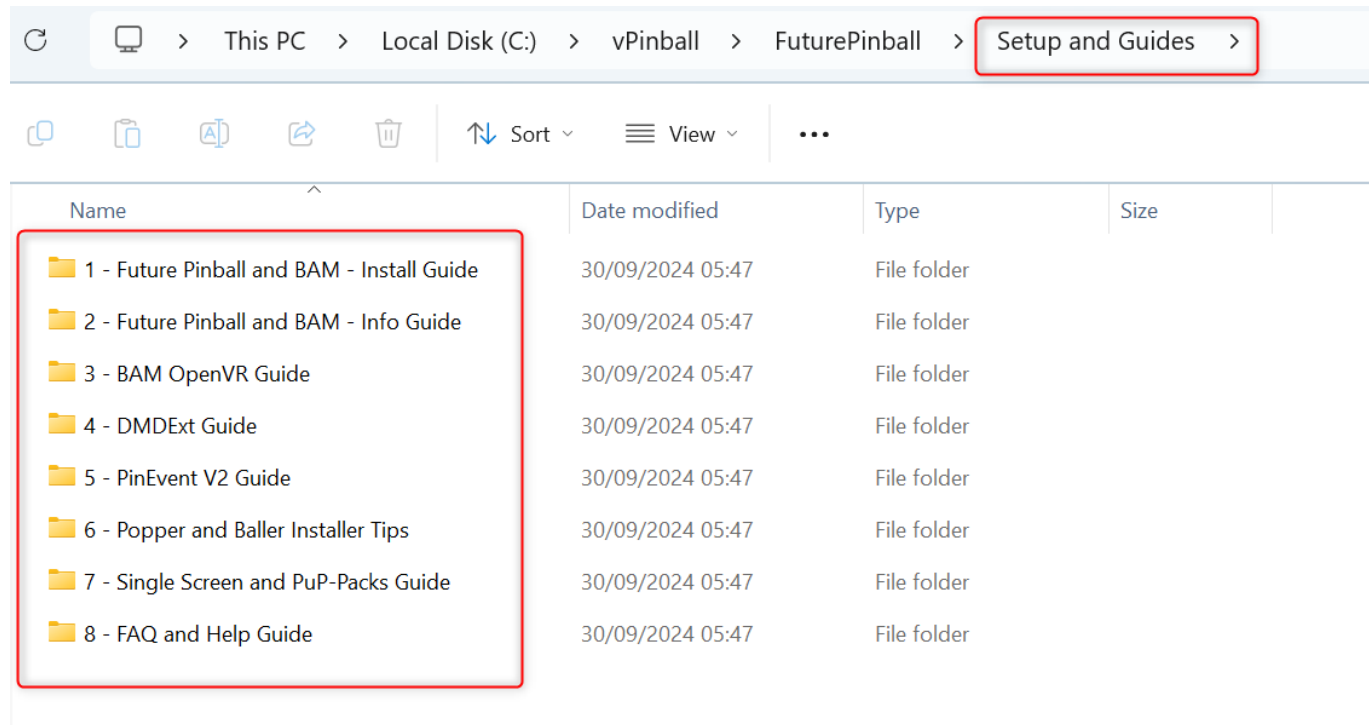

After you configured FP from the above guides, launch your **Start FP – xxxxx.bat** and edit **Game/Keys and Controls** preferences:




## Select and Enable PinscapePico Controller:

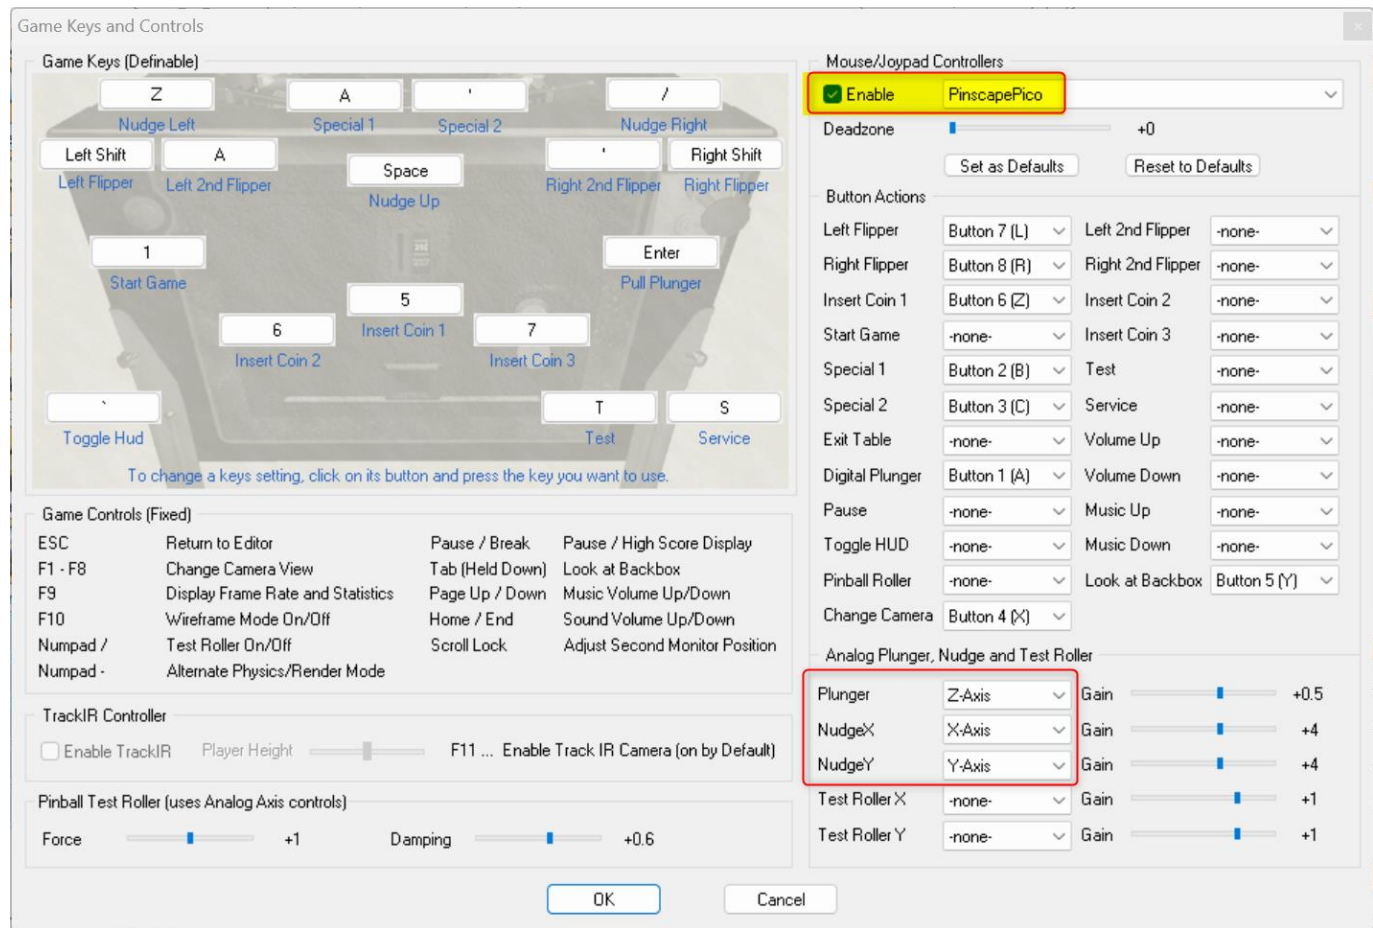


## Accelerometer/Analog Plunger configuration

Open Registry Editor and modify following regkeys:


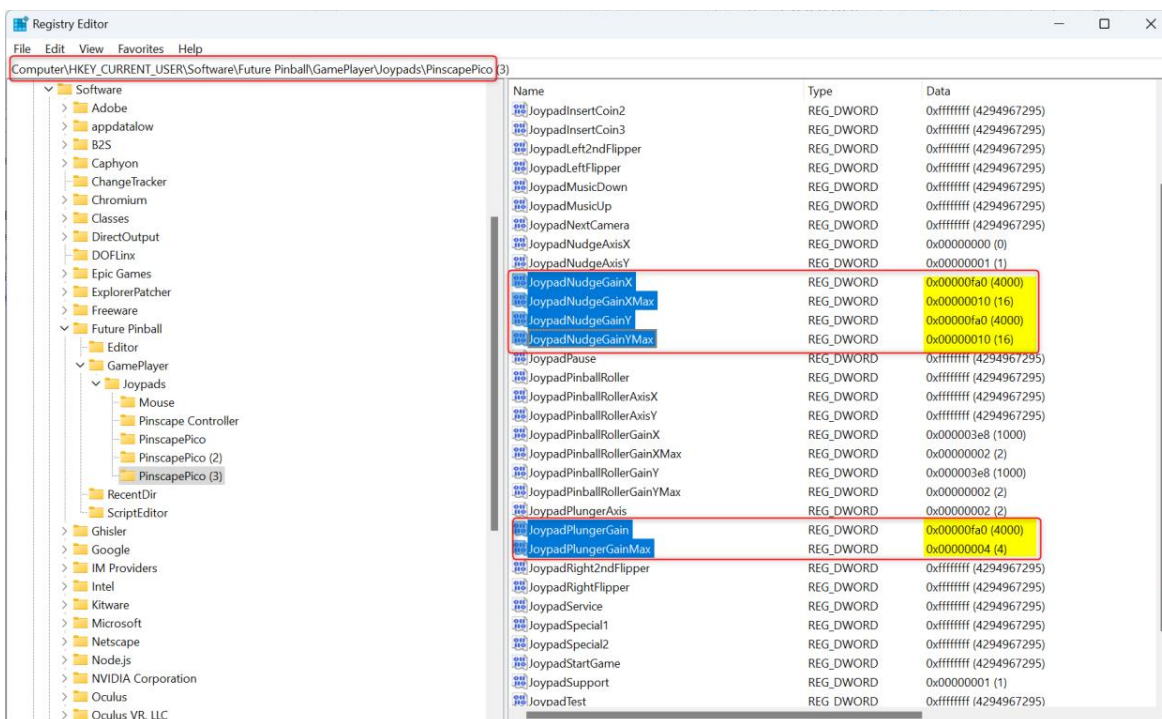


Now configure highlighted (**suggested**) settings as in following pic for analog plunger and nudging:

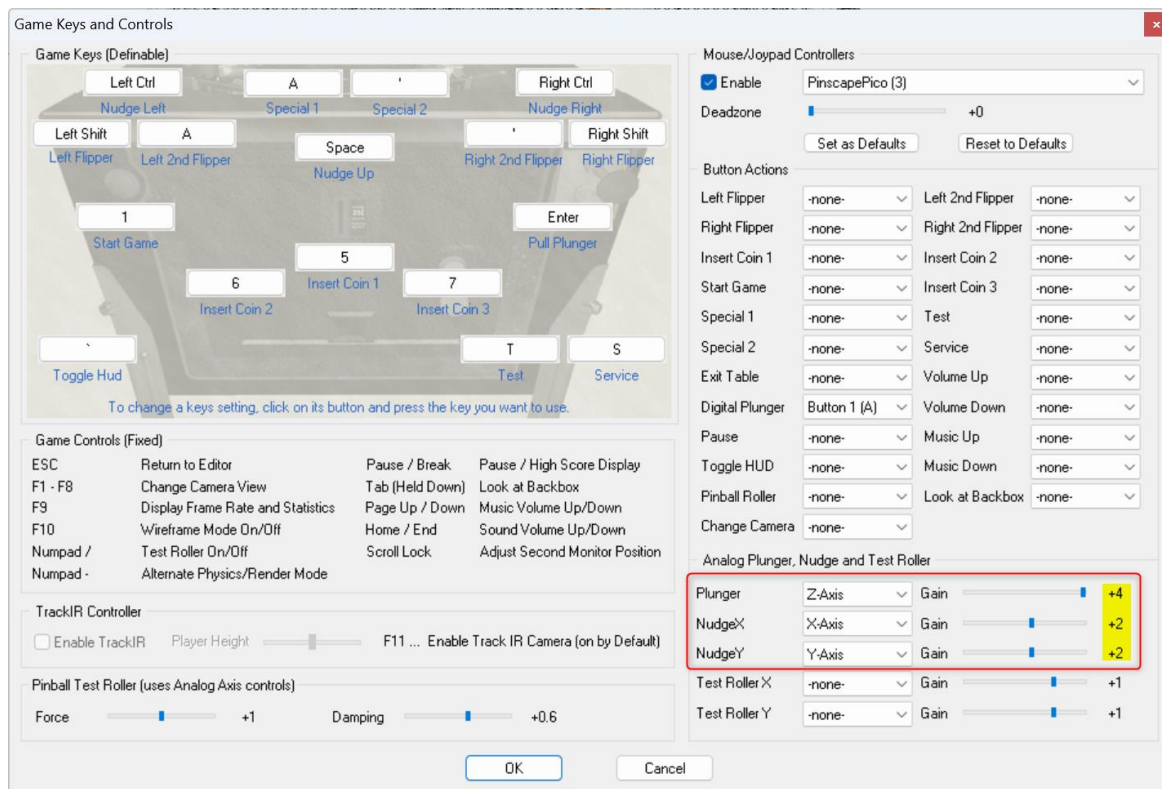



**VERY IMPORTANT NOTE:** **Only few FP tables support analog plunger**; do not waste hours trying it with different tables! To test if it's working, create a new FP Table and play it:

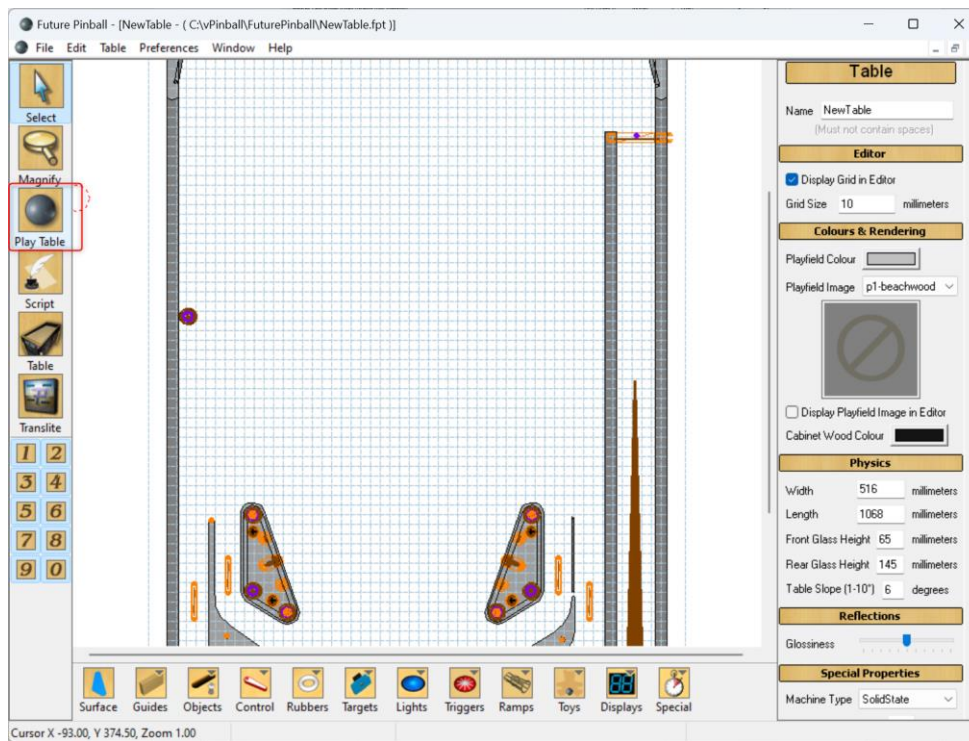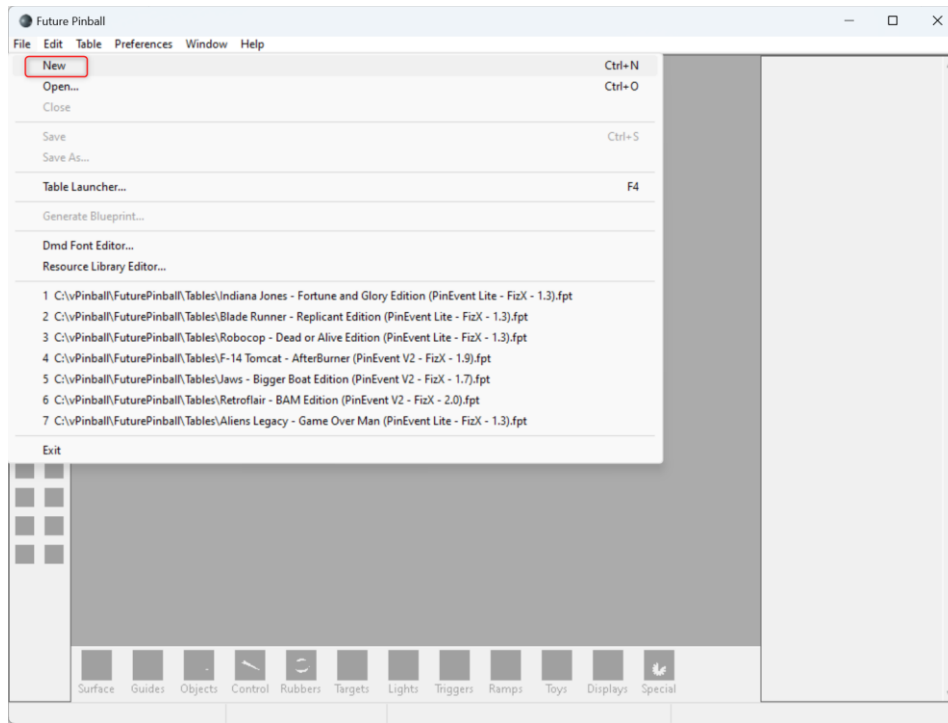


You can now test if analog plunger is working correctly and adjust plunger/nudge parameters in **Game/Keys and Controls** preferences.



## DOF Configuration (refer to [5 - PinEvent V2 Guide](#) )

Edit **PinEvent\_V2\_Settings.txt** file and modify highlighted text:

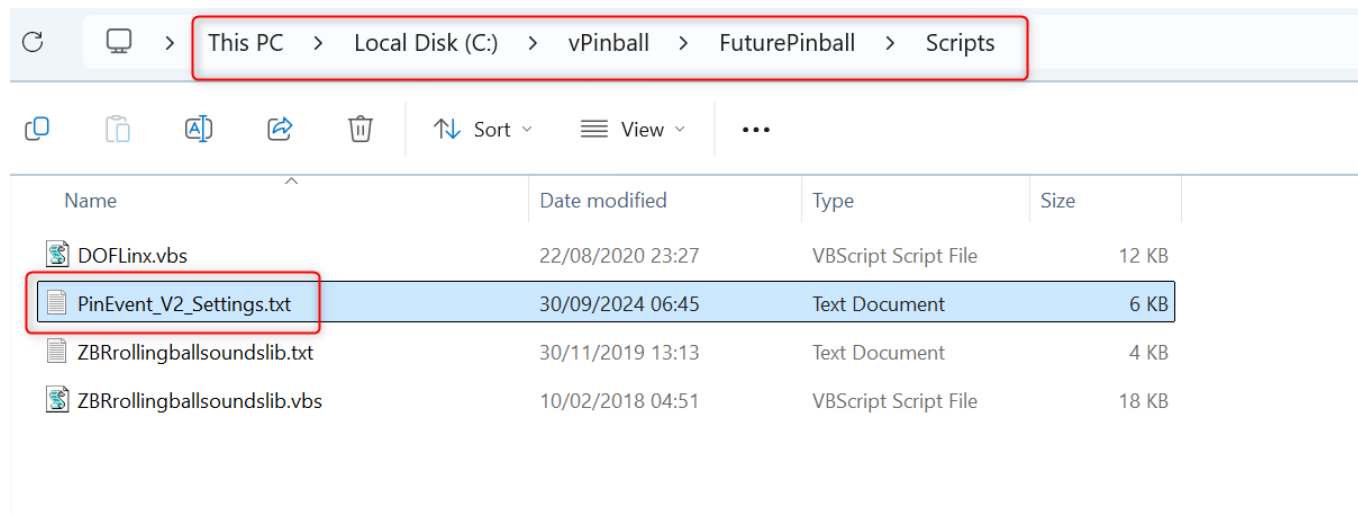

```
'##### DOF, PUP DMD, PUP SFF - Settings #####

' Change each setting to true for the features you want to use, and for each mode you play in.

'***** Desktop Settings *****

if xBAM.Camera.Mode = 0 then
    DOF_enabled = true
    PUP_DMD_enabled = false
    PUP_SSF_enabled = false
End if

'***** Cabinet Settings *****

if xBAM.Camera.Mode = 1 then
    DOF_enabled = true
    PUP_DMD_enabled = true
    PUP_SSF_enabled = true
End if

'***** VR Settings *****

if xBAM.Camera.Mode = 2 then
    DOF_enabled = true
    PUP_DMD_enabled = false
    PUP_SSF_enabled = false
End if
```

```
'##### NIGHT MODE #####

' When Night Mode is toggled, the DOF noise makers (solenoids, etc) are disabled.

' - Set what key you will use to toggle Night mode
' - Consult the Future Pinball manual to know what the keycodes are. Example: 36 = J key
' - Night Mode Options are: 1 = Future Pinball Sound 2 = PUP SSF Sound

NightMode_Key_enabled = true
NightMode_Key = 36
NightMode_Option = 1
```

```
'##### DOF Settings #####

' Set what will be used for DOF (Direct Output Framework) mechanical feedback for pinball cabinets.

Flipper_DOF_enabled = true
Slingshot_DOF_enabled = true
Bumper_DOF_enabled = true
Solenoid_DOF_enabled = true
DropTarget_DOF_enabled = true
DropTargetReset_DOF_enabled = true
Target_DOF_enabled = true
Knocker_DOF_enabled = true
Chime_DOF_enabled = true
Bell_DOF_enabled = true
Shaker_DOF_enabled = true
Gear_DOF_enabled = true
Fan_DOF_enabled = true
```

## IMPORTANT NOTE:

DOF may not work in Future Pinball if you have double registration of the x86 and x64 DirectOutput object (by the RegisterDirectOutputComObject.exe). Follow these instructions to solve:


<https://www.vpforums.org/index.php?showtopic=51540>

Congratulations! If you follow guides and these instructions, you should now be able to play Future Pinball with full feedback, nudging and analog plunger.



## Play Future Pinball without DOF

The new upgraded VirtuaTilt allows you to enjoy feedback from flipper's solenoids and shaker motor even without DOF configured!

Load **VTConfig-FuturePinball-NODOF\_v1.X.json** in Pinscape Pico Config Tool:

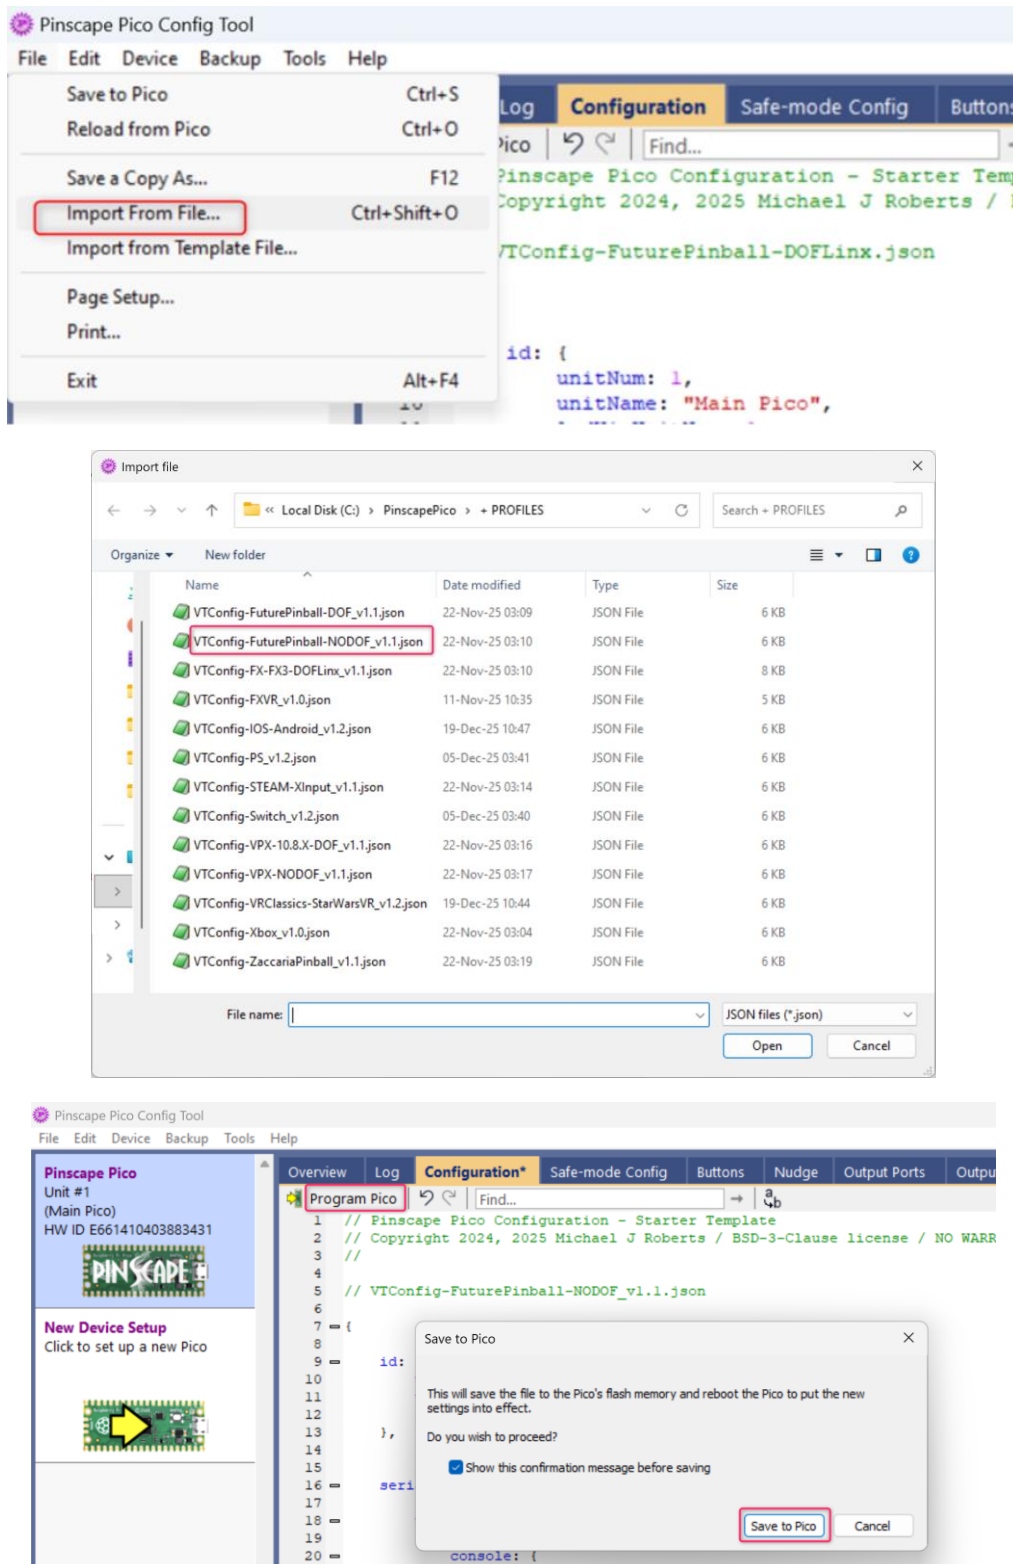


Assign all buttons you need in Future Pinball:

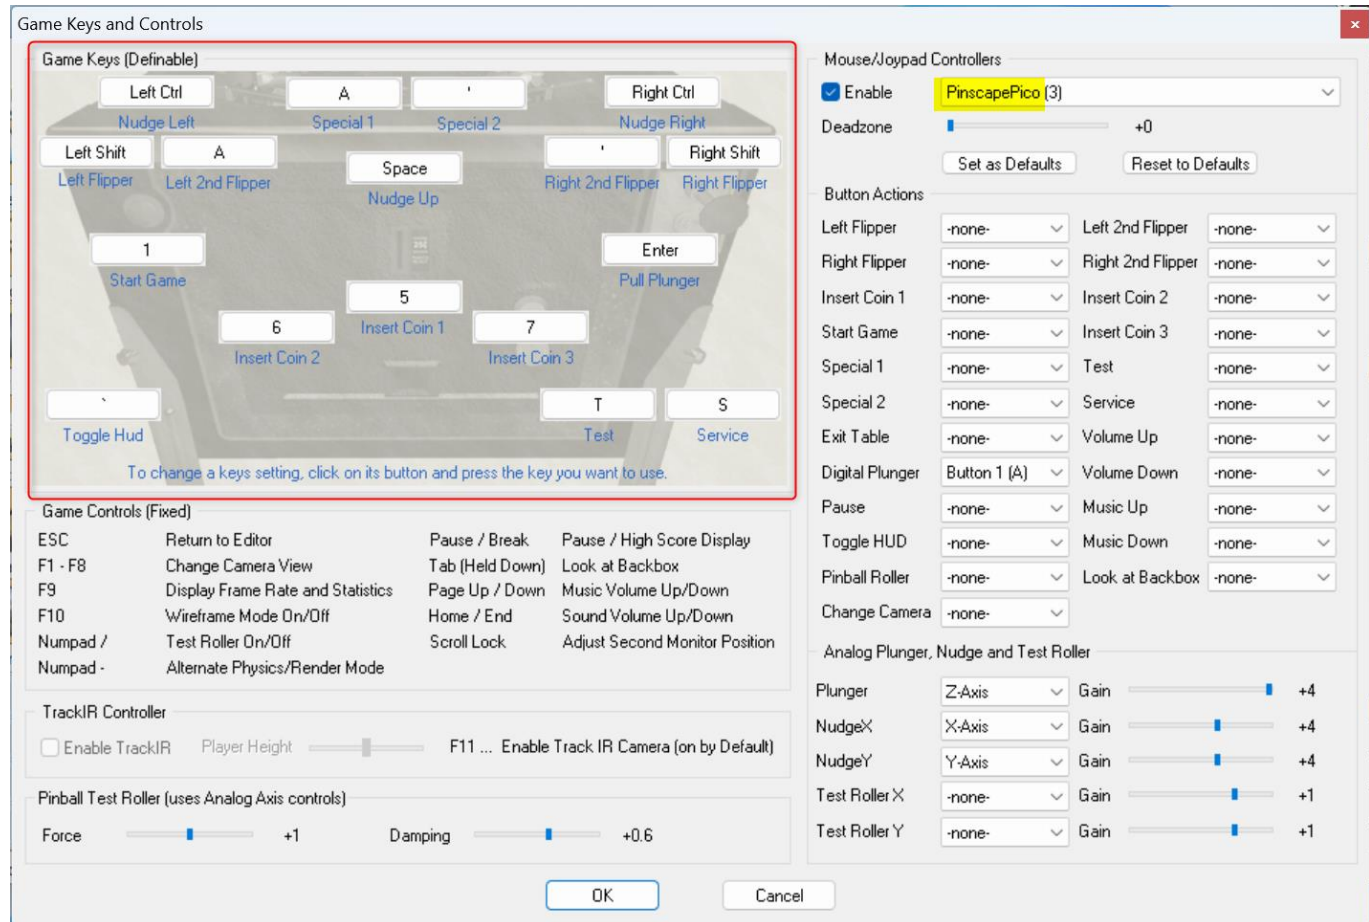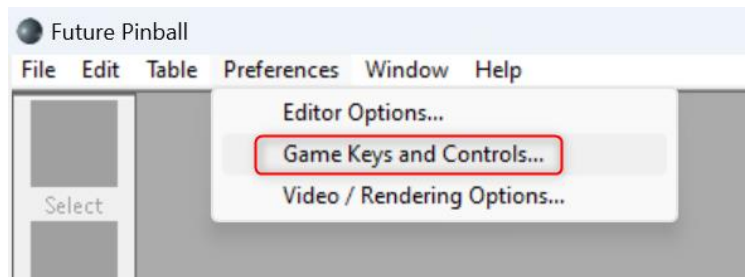


## Accelerometer/Analog Plunger configuration

Open Registry Editor and modify following regkeys:


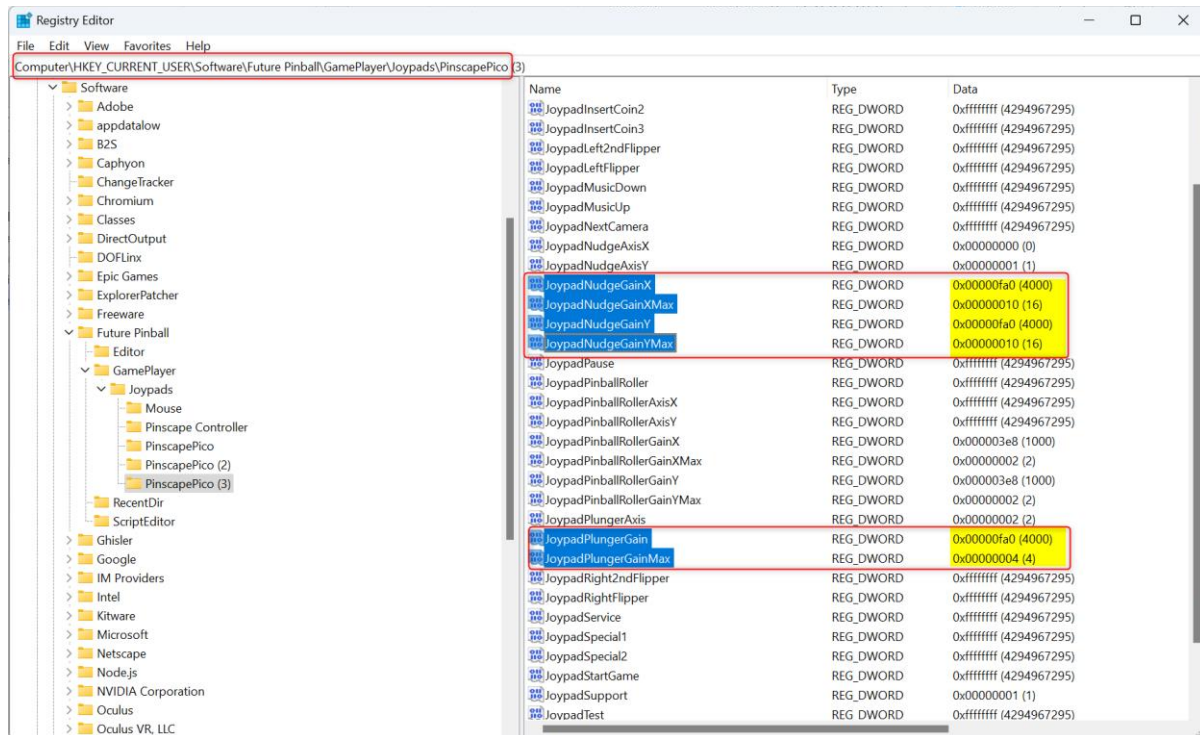


Now configure highlighted (**suggested**) settings as in following pic for analog plunger and nudging:

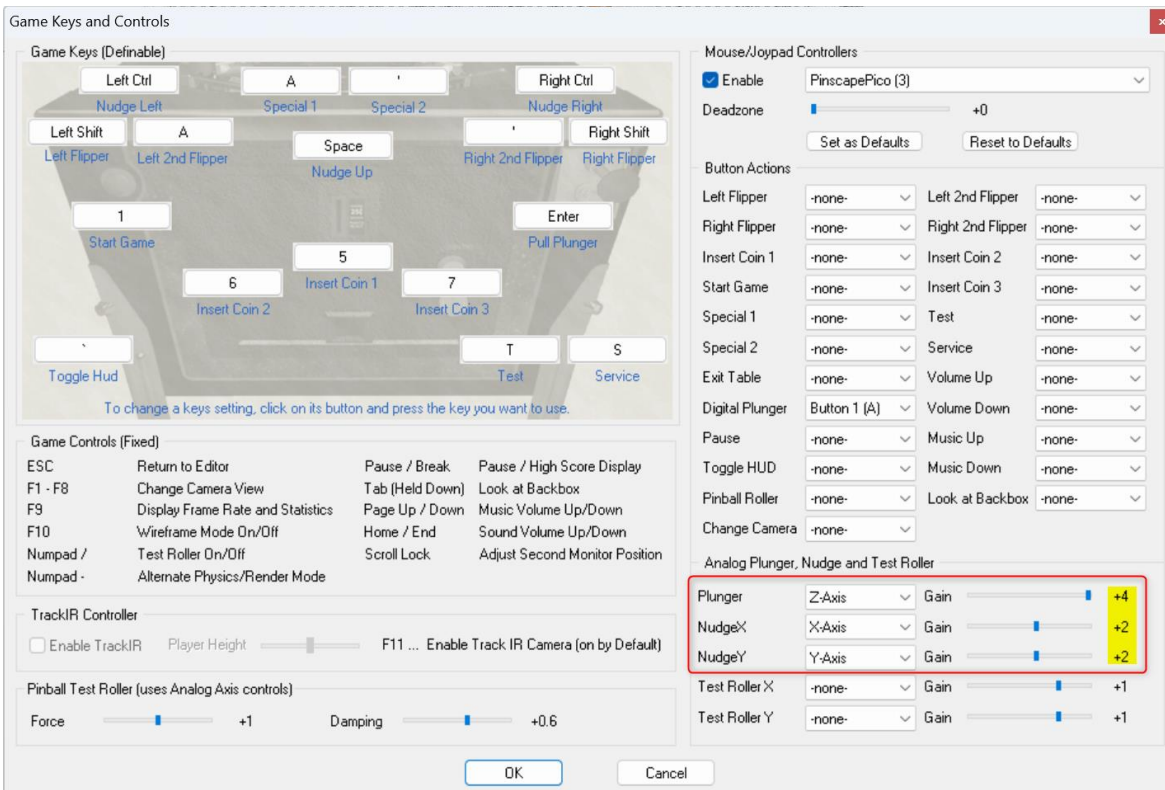



**VERY IMPORTANT NOTE:** **Only few FP tables support analog plunger**; do not waste hours trying it with different tables! To test if it's working, create a new FP Table and play it:

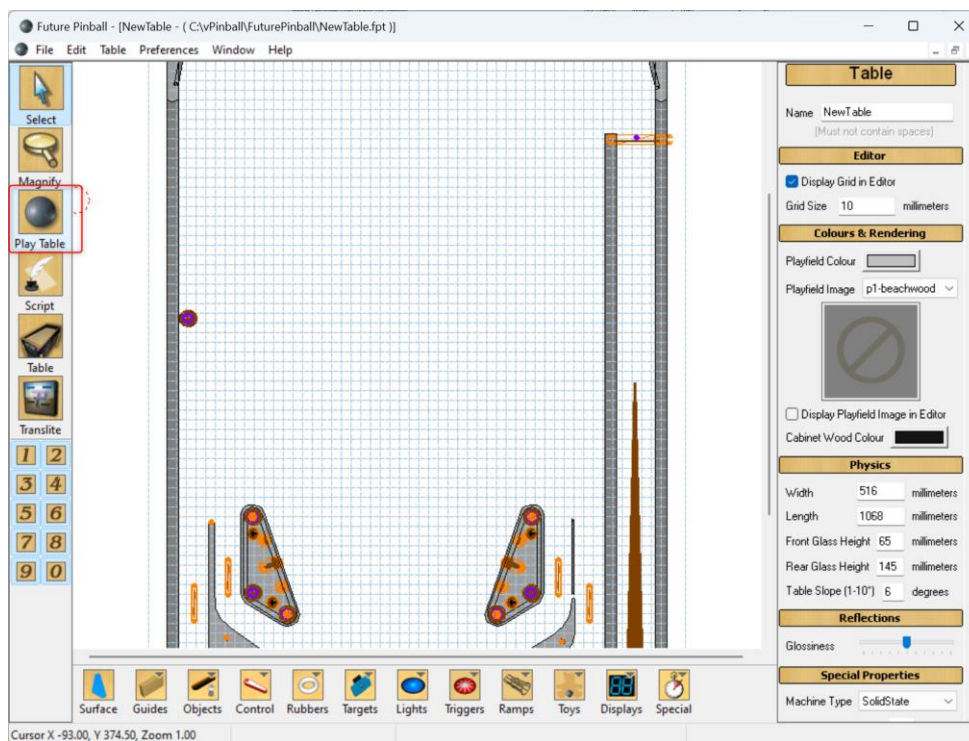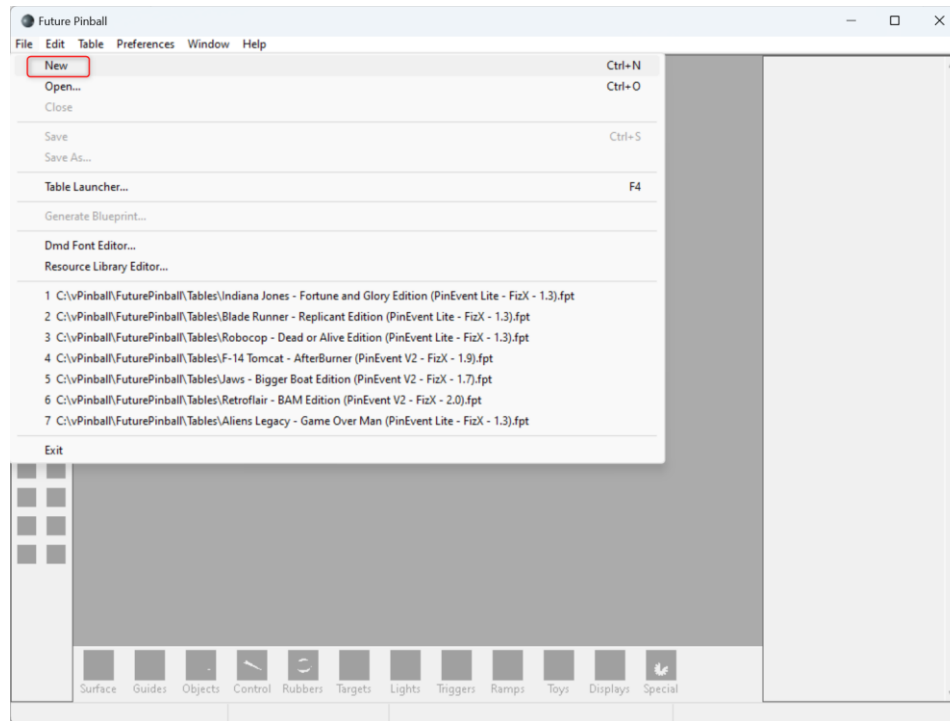

You can now test if analog plunger is working correctly and adjust plunger/nudge parameters in **Game/Keys and Controls** preferences.

Enjoy!