

ASME-03A

260kg

WINGXINE

Store No: 325585

High torque servos 12V-24V

ASME-03A

260kg

ASME-03A
12V-24V
260kg
D3AKG
03AKG
260kg

WINGXINE

Store No: 325585

High torque servos 12V-24V

High torque servo series
ASME-03 series
PPM PULSE/Analog Voltage Control

WINGXINE

ebay ID : wingxine

<http://www.aliexpress.com/store/325585>

Application: Robot, mechanical arm, production line, the camera haeundae control robot



FEATURES

- wireless remote control and analog voltage control
- Metal gear high torque output
- Current limiting control
- Easy to install, strong and durable

Application

- Large arm of the robot joints and heavy load of leg joint movement control
- Industrial automation production line robot control
- Accurate control of the valve Angle
- Large camera haeundae remote control

RECOMMENDED OPERATING CONDITIONS

Parameter	
Operating Voltage	11V~24V/DC (11V/MIN~30V/MAX)
No-load current	<400mA
Limit Angle	±150° or 0°~300° (MAX)
Control mode	PPM mode
	1ms pulse mode:1ms~2ms(pulse width)
	2ms pulse mode:0.5ms~2.5ms(pulse width)
	voltage mode
	0V-5V input voltage (0V to 0°,5V to 270°)
Material	Gear and shaft: alloy steel; gear box: aluminum
Weight	550g
Dimension	95mm*60mm*110mm
Mechanical Life	> 1,000,000/full load (conservative values)

ABSOLUTE MAXIMUM RATINGS

Parameter	
limit input voltage	11V~30V/DC (MAX)
limited output current	5A±0.2A (MAX)
limit Angle	±150° or 0°~300° (MAX)
Control mode	PPM mode
	1ms pulse mode : 1ms~2ms(pulse width)
	2ms pulse mode : 0.5ms~2.5ms(pulse width)
	voltage mode
	0V-5V input voltage (0.22V to 0°,4.78V to 300°)
Weight	510g~560g

Models and Specifications

Models	Starting Torque	Holding Torque	Rated speed(24Vpower)
ASME-02A	260kg.cm max	220kg.cm max	0.12s/60°MAX
ASME-02B	380kg.cm max	340kg.cm max	0.5s/60°MAX

ALFS


wingxine@gmail.com

High torque servo series ASME-03 series PPM PULSE/Analog Voltage Control

WINGXINE

ebay ID : wingxine


<http://www.aliexpress.com/store/325585>

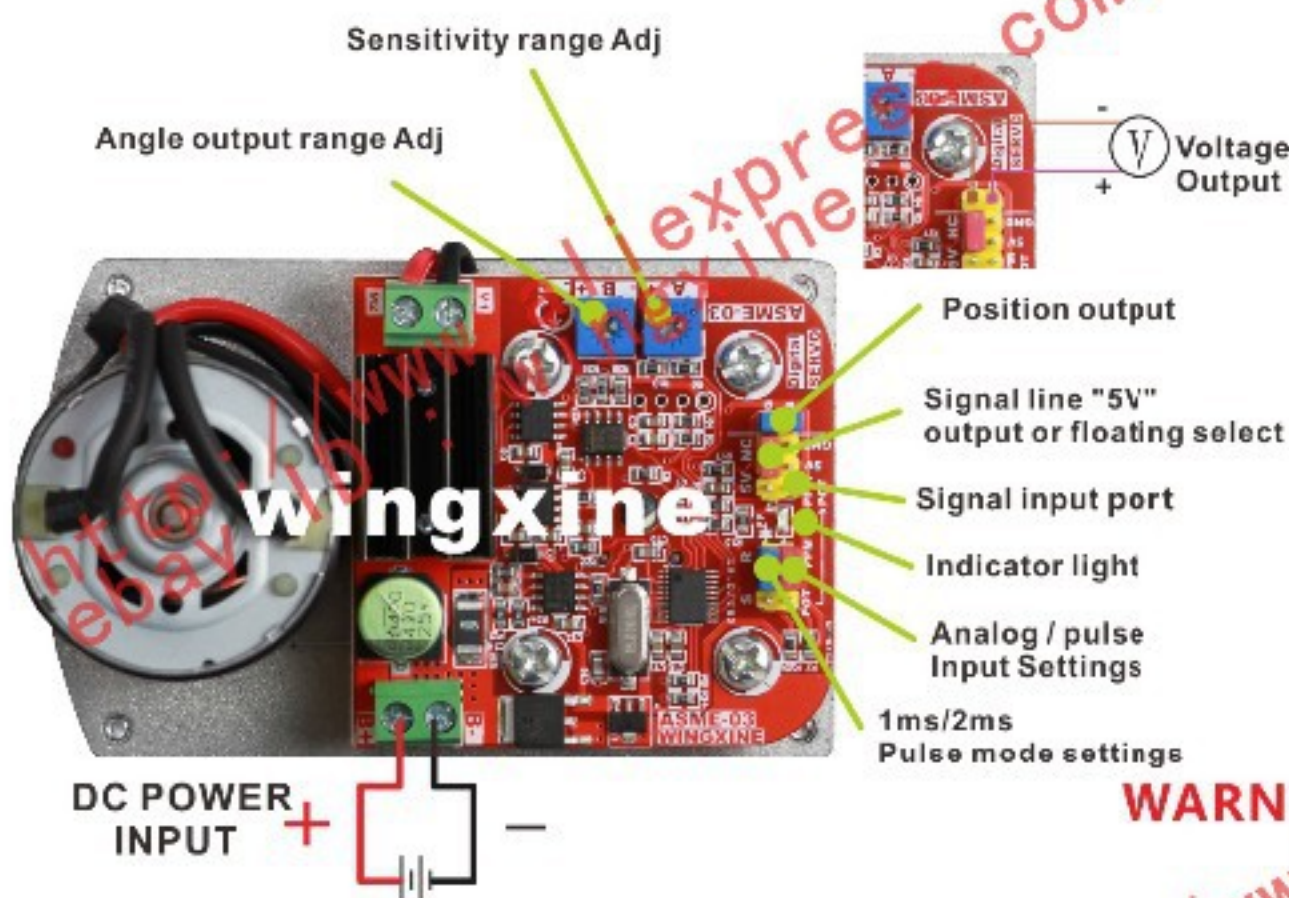

- 1、Power steering line basis having indicated polarity wiring.
- 2、Potentiometer A: used to adjust the servo motion sensitivity.
- 3、Potentiometer B: used to adjust the rotation angle range of the steering gear shaft.
Turn the steering angle and contraction ratio of the input signal. With mechanical steering midpoint symmetry contraction.
- 4、position output: for external devices coarse detection steering angle is actually running. Input voltage range of 0V ~ 5V. The effective operation of the correspondence between the angle and voltage is: 0° to 0.22V 300° to 4.78V
- 5、Indicator light. LED is flashing, servos work properly.
- 6、Mode settings: See description below.

WARNING: The power input reverse will burn servos directly please check when wiring!


RC MODE ("1ms" Pulse Width Mode)

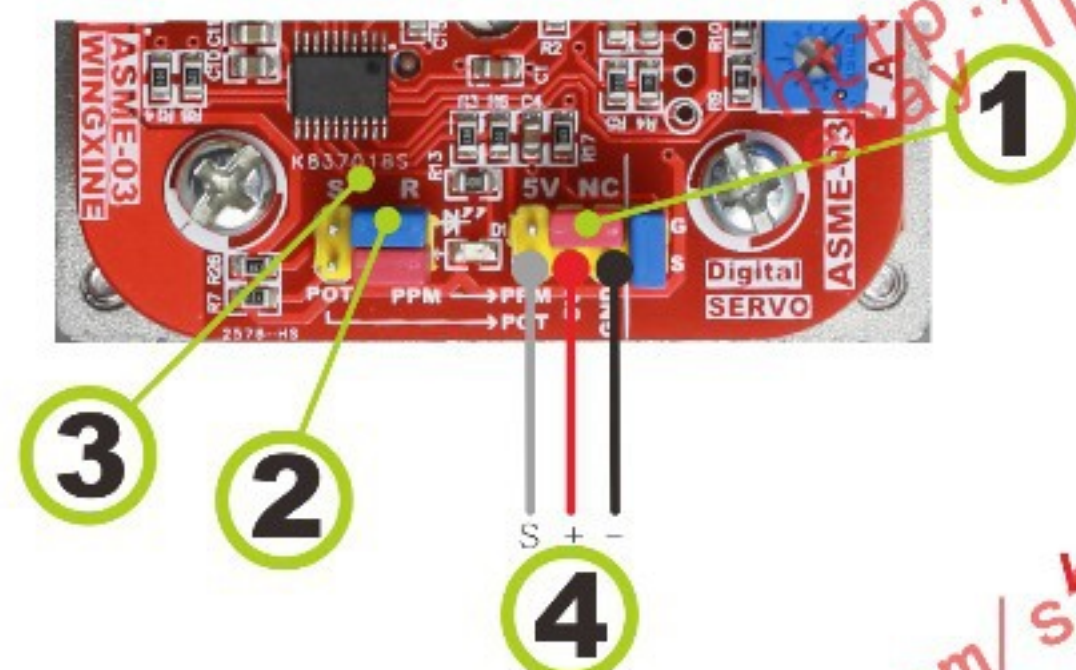

- 1, the jumper settings "NC" position.
- 2, the jumper settings "PPM" position.
- 3, the jumper is set in "R" position.
- 4, (1) "PPM" pin is signal input.
(Servo controller "S" pin or RC receiver "S" pin, generally are used on model aircraft "S" indicates)
(2) "GND" pin connected to negative signal line.
(Servo controller "-" foot or remote control receiver "-" feet, generally are used on model aircraft "-" indicates)

WARNING: The servo an independent power supply, so "+" does not require wiring.


RC MODE ("2ms" Pulse Width Mode)

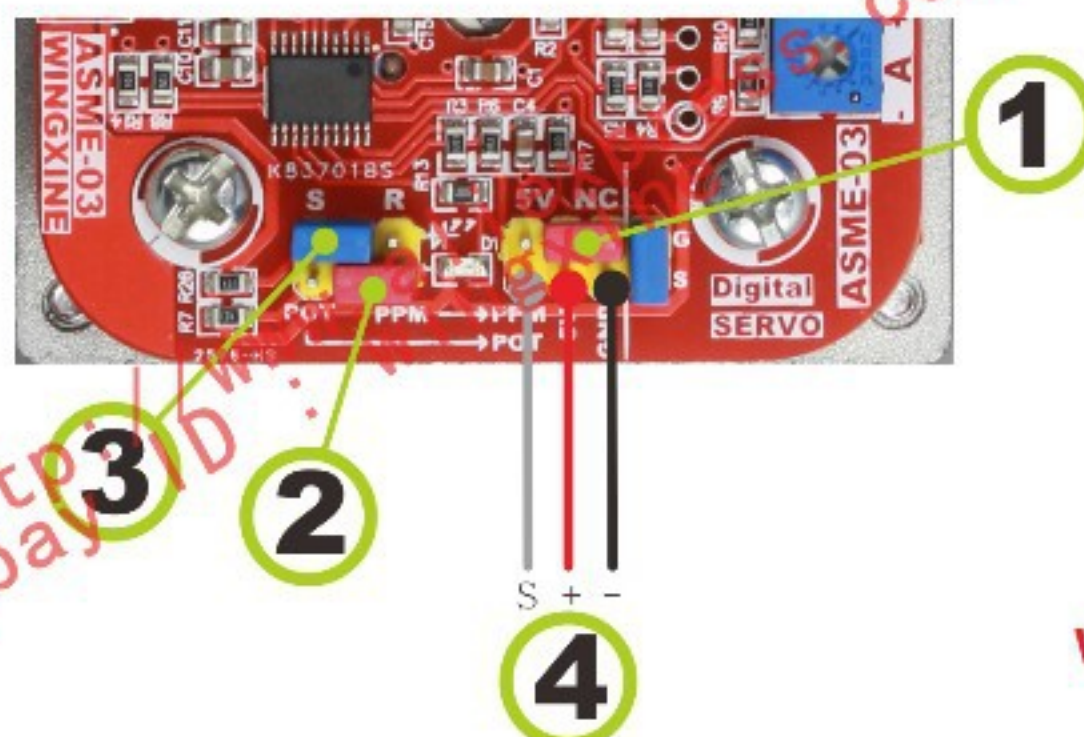

- 1, the jumper settings "NC" position.
- 2, the jumper settings "PPM" position.
- 3, the jumper is set in "S" position.
- 4, (1) "PPM" pin is signal input.
(Servo controller "S" pin or RC receiver "S" pin, generally are used on model aircraft "S" indicates)
(2) "GND" pin connected to negative signal line.
(Servo controller "-" foot or remote control receiver "-" feet, generally are used on model aircraft "-" indicates)

WARNING: The servo an independent power supply, so "+" does not require wiring.

Voltage input or Potentiometer input MODE

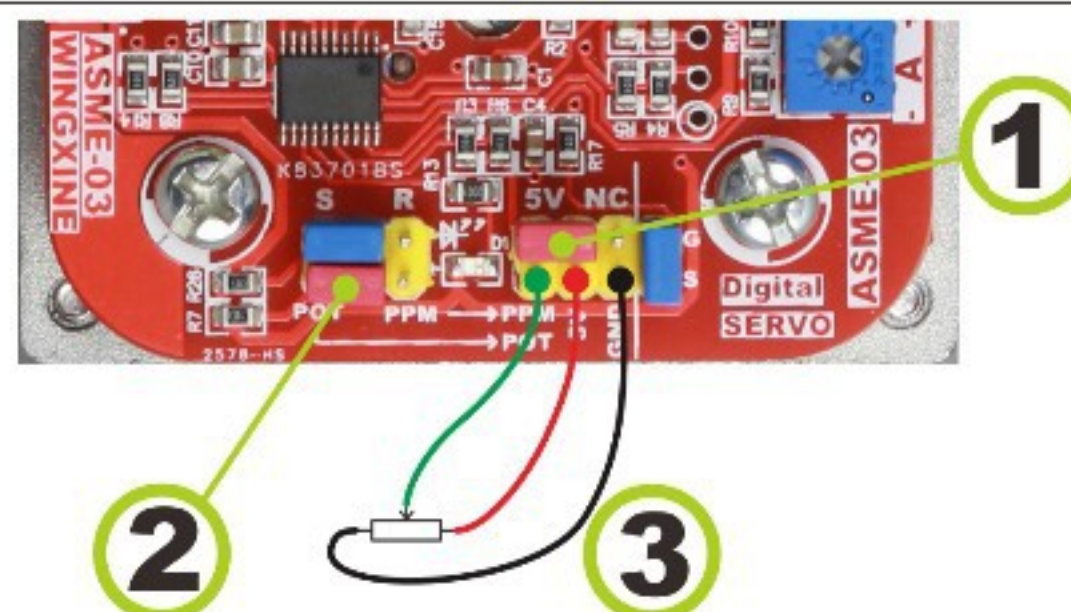

- 1, the jumper settings "5V" position.
- 2, the jumper settings "POT" position.
- 3, (1) signal input terminal labeled "POT" pin is connected to the potentiometer wiper.
(2) labeled "5V" and "GND" pins are connected to the potentiometer two fixed ends.
If the input voltage directly controls the time to pick "5V" pin "the 1st position" jumpers set in the "NC" position, just pick "POT" and "GND" pin. Input voltage range of 0V to +5 V (DC).


WARNING: 1, the steering gear output "+5 V" power supply can only meet the potentiometer, Do not use servos to supply power to other equipment.
2, the potential selection: 10k, 50k, 100k, potentiometer with resistance greater than 10k.

ALFS

wingxine@gmail.com

High torque servo series
ASME-03 series
PPM PULSE/Analog Voltage Control

WINGXINE
ebay ID : wingxine
<http://www.aliexpress.com/store/325585>

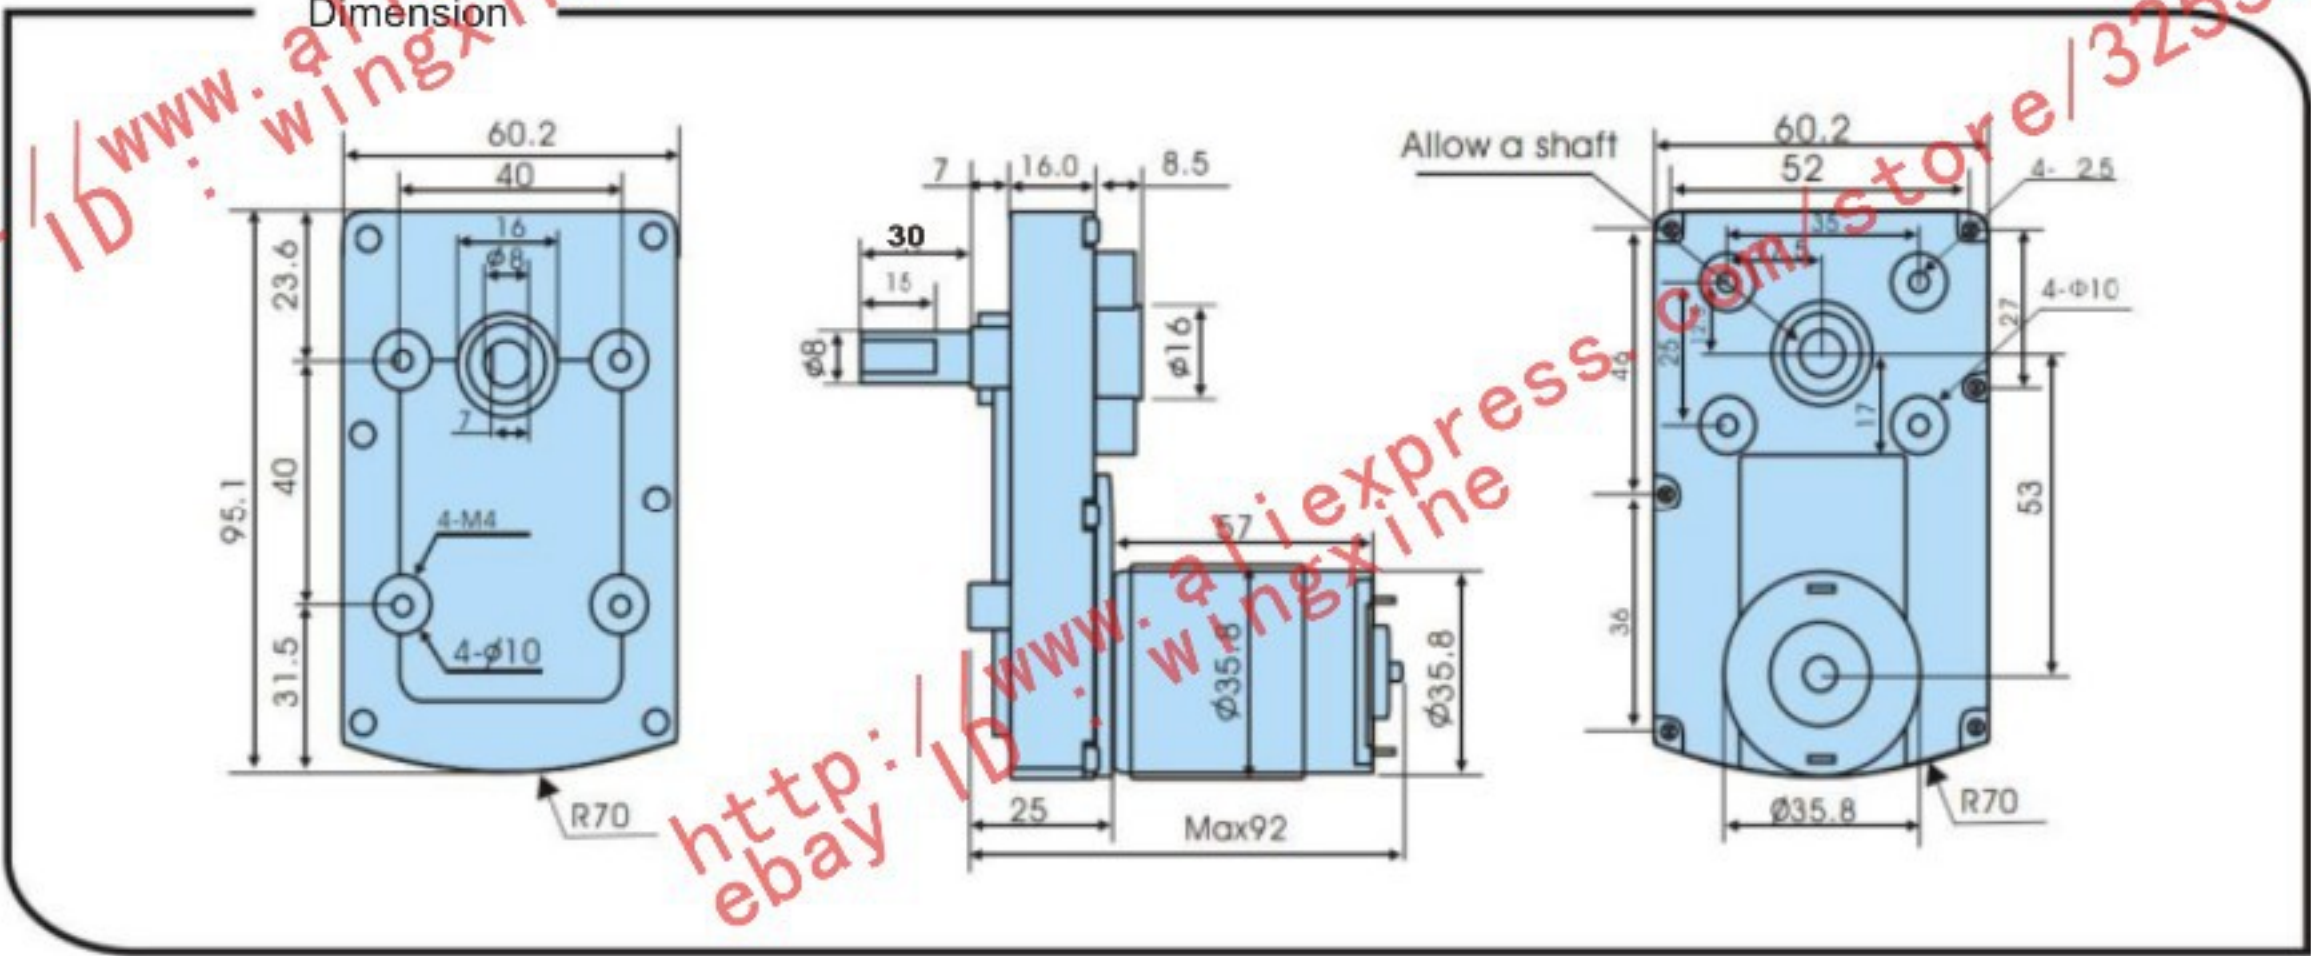

ALFS

wingxine@gmail.com