

The Open Master Hearing Aid (openMHA)

4.5.6

Documentation of openMHA plugins
(openMHA)



HörTech

Kompetenzzentrum für
Hörgeräte-Systemtechnik

The Open Master Hearing Aid (openMHA) – Documentation of openMHA plugins (open-MHA)

HörTech gGmbH
Marie-Curie-Str. 2
D-26129 Oldenburg

LICENSE AGREEMENT

This file is part of the HörTech Open Master Hearing Aid (openMHA)

Copyright © 2005 2006 2007 2008 2009 2010 2012 2013 2014 2015 2016 HörTech gGmbH.

Copyright © 2017 2018 HörTech gGmbH.

openMHA is free software: you can redistribute it and/or modify it under the terms of the GNU Affero General Public License as published by the Free Software Foundation, version 3 of the License.

openMHA is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Affero General Public License, version 3 for more details.

You should have received a copy of the GNU Affero General Public License, version 3 along with openMHA. If not, see <<http://www.gnu.org/licenses/>>.

Contents

1	Plugin category 'AC-variables'	1
1.1	ac2wave	1
1.2	acConcat_wave	2
1.3	acmon	3
1.4	acPooling_wave	4
1.5	acsave	6
1.6	acSteer	7
1.7	save_spec	9
1.8	save_wave	10
2	Plugin category 'adaptive'	11
2.1	lpc	11
2.2	lpc_bl_predictor	12
2.3	lpc_burg-lattice	13
3	Plugin category 'analysis'	15
3.1	acTransform_wave	15
3.2	droptect	16
4	Plugin category 'beamforming'	18
4.1	adm	18
4.2	steerbf	19
5	Plugin category 'binaural'	21
5.1	coherence	21
6	Plugin category 'core'	23
6.1	identity	23
7	Plugin category 'directional'	24
7.1	doasvm_classification	24
7.2	doasvm_feature_extraction	25
8	Plugin category 'example'	27
8.1	example1	27
8.2	example2	28
8.3	example3	28
8.4	example4	29
8.5	example5	30
8.6	example6	31
9	Plugin category 'feedback'	32
9.1	fshift_hilbert	32
9.2	prediction_error	33
10	Plugin category 'filter'	35
10.1	combinechannels	35
10.2	fftfilterbank	36
10.3	iirfilter	39
10.4	nlms_wave	40
11	Plugin category 'generator'	42

11.1	noise	42
11.2	sine	43
12	Plugin category 'level'	44
12.1	dc	44
12.2	dc_simple	45
12.3	multibandcompressor	48
12.4	rmslevel	50
12.5	softclip	51
12.6	transducers	52
13	Plugin category 'noise'	56
13.1	timoSmooth	56
14	Plugin category 'overlapadd'	58
14.1	overlapadd	58
14.2	shadowfilter_begin	61
14.3	shadowfilter_end	62
14.4	smoothgains_bridge	63
14.5	spec2wave	65
14.6	wave2spec	66
15	Plugin category 'resample'	68
15.1	downsample	68
15.2	upsample	69
16	Plugin category 'signalflow'	70
16.1	altplugs	70
16.2	analysispath	71
16.3	db	72
16.4	delay	74
16.5	fader_wave	75
16.6	matrixmixer	76
16.7	mhachain	78
16.8	resampling	79
16.9	route	81
16.10	split	82
17	Uncategorized plugins	83
17.1	cpuload	83
17.2	delaysum	84
17.3	fader_spec	85
17.4	gain	86
17.5	noisePowProposedScale	88
17.6	wavrec	89

1 Plugin category 'AC-variables'

1.1 ac2wave

Mix the main input signal with a waveform stored into AC variables. Main and AC signal can be attenuated or delayed by integer fragments.

Spectral input is discarded and replaced by a zero signal.

1.1.0.1 Supported domains

The MHA plugin `ac2wave` supports these signal domains:

- waveform to waveform
- spectrum to waveform

1.1.0.2 Categories

AC-variables

1.1.0.3 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>name</code>	string	AC variable name	
<code>gain_in</code>	float	Linear gain for main input signal	0
<code>gain_ac</code>	float	Linear gain for AC input signal	1
<code>delay_in</code>	int	Delay of main input signal in fragments Range: [0,[0
<code>delay_ac</code>	int	Delay of AC input signal in fragments Range: [0,[0

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftlen</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftlen</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

1.2 acConcat_wave

Concatenating two or more waveforms into one

1.2.0.1 Detailed description

This plugin concatenates two or more waveforms in the given order into a new waveform all living in the AC space.

1.2.0.2 Supported domains

The MHA plugin `acConcat_wave` supports these signal domains:

- waveform to waveform

1.2.0.3 Categories

AC-variables

1.2.0.4 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>num_AC</code>	int	Number of waveforms to be concatenated Range: [1,28]	15
<code>prefix_names_AC</code>	string	Prefix of the names of the waveforms to be concatenated	<code>vGCC_ac</code>
<code>samples_AC</code>	vector<int>	Lengths of the waveforms to be concatenated	[]
<code>name_conAC</code>	string	Name of the concatenated waveform	<code>vGCC_con_AC</code>

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftl</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftl</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

1.3 acmon

This algorithm converts AC variables into parsable monitor variables.

1.3.0.1 Supported domains

The MHA plugin `acmon` supports these signal domains:

- waveform to waveform
- spectrum to spectrum

1.3.0.2 Categories

AC-variables

1.3.0.3 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>varlist</code>	<code>vector<string></code>	complete list of variables	(monitor)
<code>dimensions</code>	<code>vector<string></code>	variable dimensions in AC space	(monitor)
<code>dispmode</code>	keyword_list	display mode of variables Range: [vector matrix]	vector
<code>recmode</code>	keyword_list	record mode Range: [cont snapshot]	cont

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftlen</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftlen</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

1.4 acPooling_wave

Pooling of several consecutive time frames

1.4.0.1 Detailed description

This plugin computes an average over several consecutive frames using several different approaches (max, sum, mean, ...). Subsequently, the maximum of the average frame is delivered as well. The plugin receives the frames through the ac space and delivers the averaged frame as well as its maximum to the ac space.

1.4.0.2 Supported domains

The MHA plugin `acPooling_wave` supports these signal domains:

- waveform to waveform

1.4.0.3 Categories

AC-variables

1.4.0.4 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
numsamples	int	This parameter determines the length of the wave to be pooled in samples Range:]0,360]	33
pooling_wndlen	int	This parameter determines the length of the pooling window in msec. Range: [0,5000]	300
pooling_type	keyword_list	This parameter determines the pooling method applied to the pooling window. Range: [max sum mean]	mean
upper_threshold	float	This parameter sets a threshold for finding the maximum probability. If the maximum is above this threshold, it is taken, even if it is not in the neighbourhood of the last estimated direction. Range: [0,1]	0.75
lower_threshold	float	This parameter sets a threshold for finding the minimum probability. If the maximum probability is below this threshold, the estimated direction of the last iteration is taken. Range: [0,1]	0
neighbourhood	int	This parameter defines the neighbourhood of the allowed change of the estimated direction between iterations. -1 means no neighbourhood. Range: [-1,360]	2
alpha	float	This parameter simulates the forgetting effect by weighting the frames within the pooling window, e.g. $p(n+1) = (1 - \alpha) * p(n) + \alpha * p_{\text{new}}$. 0 means no weighting. Range: [0,1]	0.1
p_name	string	The name of the AC variable of the frame, which is going to be pooled.	p
pool_name	string	The name of the AC variable of the averaged (pooled) frame.	pool
max_pool_ind_name	string	The name of the AC variable for the index of the maximum of the averaged frames	pool_max
like_ratio_name	string	The name of the AC variable for the likelihood ratios of the averaged frames	like_ratio

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftlen	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

1.5 acsave

Save chain data to text or Matlab 4 files.

Usage:

1. set up file name and type
2. set the maximal length. This will start the recording.
3. Set "flush" to yes to save recorded frames. This will overwrite previously written data.

File name and type can be changed at any time and has to be valid when sending the flush command. Changing the list of variables also starts the recording with the currently configured recording length (previously recorded data might be overwritten). Issuing the 'flush' command frees allocated memory.

1.5.0.1 Detailed description

The 'acsave' plugin can save numeric algorithm communication variables (AC variables) into files. The files can have plain text, MATLAB 4.x or MATLAB script format. Each signal frame represents a row. The number of columns is gathered at preparation time. If a variable size is increased after preparation, only the part available at preparation time is stored. If the size is decreased, it is zero-padded to the original size.

To save the data to disk, first set up file name and type. Then setting the maximal length will start the recording. At any time, set 'flush' to yes in order to save the recorded frames. This will overwrite previously written data.

File name and type can be changed at any time and have to be valid when sending the flush command.

1.5.0.2 Supported domains

The MHA plugin `acsave` supports these signal domains:

- waveform to waveform
- spectrum to spectrum

1.5.0.3 Categories

AC-variables

1.5.0.4 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
fileformat	keyword_list	file format of output file Range: [txt mat4 m]	txt
name	string	output file name	
reclen	float	maximal recording length in seconds Range: [0,]	10
flush	bool	flush the buffers to disk	no
vars	vector<string>	list of variables to be saved (empty: save all)	[]

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

1.6 acSteer

Steering Vector Loading Plugin

1.6.0.1 Detailed description

The `acSteer` plugin loads a file containing pre-computed steering filters (e.g. MVDR filters) to be used within a beamformer. The steering filters can be monaural (**nrefmic = 1**) or binaural (**nrefmic = 2**). The whole file consists of a column vector of concatenated steering vectors, which are formatted in the order of **angle** and **channel**. This means that the first channel vector of the first angle is followed by the second channel vector of the first angle until the last channel. The channel vectors of the first angle are followed by the channel vectors of the second angle and so on and so forth.

If the steering filters have been computed for two reference microphones, the steering filters of the second reference microphone just follow the ones for the first microphone and have the same format.

This plugin is typically located between a localization plugin (e.g. `doasvm_classification`) and a beamforming plugin (e.g. `steerbf`). The localization plugin estimates the source direction and saves it in an AC variable. This plugin reads the saved direction from the corresponding AC variable and saves the corresponding steering vector to the AC space, which is used by the succeeding beamforming plugin for steering the beam towards that particular direction.

The configuration variable **nrefmic** indicates the number of different reference microphone settings, for which the filters were computed. For each reference microphone and each possible DOA angle and each input channel one filter should be provided so that

$$n_{steerchan} = n_{refmic} * n_{chan} * n_{angle} \quad (1)$$

1.6.0.2 Supported domains

The MHA plugin `acSteer` supports these signal domains:

- spectrum to spectrum

1.6.0.3 Categories

AC-variables

1.6.0.4 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>steerFile</code>	string	Name of the input file where the steering vectors are saved	<code>steerfile.bin</code>
<code>acSteerName1</code>	string	Name of the AC variable where the steering vectors of the first (left) reference microphone are saved	<code>acSteerLeft</code>
<code>acSteerName2</code>	string	Name of the AC variable where the steering vectors of the second (right) reference microphone are saved	<code>acSteerRight</code>
<code>nsteerchan</code>	int	Number of channels in each steering vector	4
<code>nrefmic</code>	int	Number of reference microphones Range: [0,2]	1

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

1.7 save_spec

Save signal spectrum to AC variable

1.7.0.1 Supported domains

The MHA plugin `save_spec` supports these signal domains:

- spectrum to spectrum

1.7.0.2 Categories

AC-variables

1.7.0.3 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

1.8 save_wave

Save signal waveform to AC variable

1.8.0.1 Supported domains

The MHA plugin `save_wave` supports these signal domains:

- waveform to waveform

1.8.0.2 Categories

AC-variables

1.8.0.3 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

2 Plugin category 'adaptive'

2.1 lpc

This plugin implements the linear predictive coding analysis (LPC) by using the Levinson-Durbin recursion.

2.1.0.1 Detailed description

This plugin estimates the autocorrelation of each block. It then produces the inverse filter using the Levinson-Durbin recursion.

2.1.0.2 Supported domains

The MHA plugin `lpc` supports these signal domains:

- waveform to waveform

2.1.0.3 Categories

adaptive

2.1.0.4 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
lpc_order	int	LPC filter order Range: [0,500]	20
lpc_buffer_size	int	Size of the buffer in samples for which the autocorrelation matrix will be computed Range: [0,501]	21
shift	bool	Refill the LPC buffer completely with new input signal by ignoring the old samples (no) or shift the old buffer as large as the block size of the input signal and read in the current input signal (yes).	yes
comp_each_iter	int	Reestimate the LPC coefficients each <comp_each_iter> iterations, default value is 1 Range: [0,]	1
norm	bool	Normalize the auto correlation matrix with the LPC order	no

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

2.2 lpc_bl_predictor

This plugin performs forward and backward linear prediction using the Burg - Lattice algorithm for computing the next value of a given time series.

The estimated forward and backward linear prediction parameters are saved in the AC space.

2.2.0.1 Detailed description

This plugin computes the forward and backward LPC estimates using the Burg-Lattice algorithm given the κ (sometimes also called μ) parameter precomputed using the `lpc_burg-lattice` plugin. The estimation of the forward and backward linear prediction parameters is performed using the following equations: For each forward and backward linear prediction parameter $f(m)$ and $b(m)$, where m in $[2 \cdots P]$, P being the lpc order

$$f(m) = f(m-1) + \kappa(m, 2) * b(m-1, 2) \quad (2)$$

$$b(m, 1) = b(m-1, 2) + \kappa(m, 2) * f(m-1) \quad (3)$$

. In this implementation κ from the previous is used. Note that the second index of κ is 2.

2.2.0.2 Supported domains

The MHA plugin `lpc_bl_predictor` supports these signal domains:

- waveform to waveform

2.2.0.3 Categories

adaptive

2.2.0.4 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>lpc_order</code>	int	LPC order defines the number of coefficients to be estimated Range:]0,]	21
<code>name_kappa</code>	string	Name of the kappa parameter of the Burg-Lattice algorithm in the AC domain to be used for the joint estimation of more than one time series	km
<code>name_lpc_f</code>	string	Name of the forward LPC estimate of the Burg-Lattice algorithm in the AC domain	<code>name_lpc_f</code>
<code>name_lpc_b</code>	string	Name of the backward LPC estimate of the Burg-Lattice algorithm in the AC domain	<code>name_lpc_b</code>
<code>name_f</code>	string	Name of the forward linear prediction parameter	
<code>name_b</code>	string	Name of the backward linear prediction parameter	

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftl</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftl</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

2.3 `lpc_burg-lattice`

This plugin estimates the linear predictive coding coefficients for estimating the next sample value of a time series using the Burg-Lattice approach.

The estimated parameters are saved in the AC space.

2.3.0.1 Detailed description

This plugin estimates the parameters for the forward and backward linear prediction using the Burg - Lattice algorithm. The previous estimate of the κ parameter is saved in the AC space for future use in the `lpc_bl_predictor` plugin to estimate several time-series sharing the same κ values.

For the estimation of κ the following series of equations are used: For each κ in $[2 \dots P]$, P being the lpc order

$$dm(m-1) = \lambda * dm(m-1) + (1 - \lambda) * (f(m-1)^2 + b(m-1, 2)^2) \quad (4)$$

$$nm(m-1) = \lambda * nm(m-1) + (1 - \lambda) * -2 * f(m-1) * b(m-1, 2) \quad (5)$$

$$km(m, 1) = \frac{nm(m-1)}{dm(m-1)}. \quad (6)$$

Note that the previous estimate of κ , which is given by $\kappa(m, 2)$ is saved in the AC space.

2.3.0.2 Supported domains

The MHA plugin `lpc_burg-lattice` supports these signal domains:

- waveform to waveform

2.3.0.3 Categories

adaptive

2.3.0.4 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
lpc_order	int	LPC order defines the number of coefficients to be estimated Range:]0,]	21
name_kappa	string	Name of the kappa parameter of the Burg-Lattice algorithm in the AC domain to be used for the joint estimation of more than one time series	km
name_f	string	Name of the forward linear prediction parameter	
name_b	string	Name of the backward linear prediction parameter	
lambda	float	Forgetting factor for the linear predictor Range: [0,1]	0.99375

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

3 Plugin category 'analysis'

3.1 acTransform_wave

Transform Plugin Between Coordinate Systems for Waveforms

3.1.0.1 Detailed description

This plugin transforms a waveform in the AC space from one coordinate system into another. For this it receives an angle also saved in the AC space. Then, the plugin rotates the axes into the direction of the given angle.

3.1.0.2 Supported domains

The MHA plugin `acTransform_wave` supports these signal domains:

- waveform to waveform

3.1.0.3 Categories

analysis

3.1.0.4 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
ang_name	string	This parameter has the name of the AC variable having the rotation angle	head_ang
raw_p_name	string	This parameter has the name of the AC variable having the waveform to be rotated	p
raw_p_max_name	string	This parameter has the name of the AC variable having the maximum of the waveform to be rotated	p_max
rotated_p_name	string	This parameter has the name of the AC variable having the waveform after rotation	rotated_p
rotated_p_max_name	string	This parameter has the name of the AC variable having the maximum of the waveform after rotation	rotated_p_max
numsamples	int	This parameter determines the length of the wave to be pooled in samples. Range:]0,360]	73
to_from	bool	This parameter tells whether the rotation will be performed to the given angle or from it	yes

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

3.2 droptect

Plugin detects dropouts in channels that have a constant spectrum

3.2.0.1 Supported domains

The MHA plugin `droptect` supports these signal domains:

- spectrum to spectrum

3.2.0.2 Categories

analysis

3.2.0.3 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>dropouts</code>	<code>vector<int></code>	Number of dropouts detected since last reset or start	(monitor)
<code>consecutive_dropouts</code>	<code>vector<int></code>	Number of consecutive dropouts	(monitor)
<code>blocks</code>	<code>int</code>	Number of blocks processed since last reset or start	(monitor)
<code>reset</code>	<code>bool</code>	Setting to yes clears number of dropouts and blocks	no
<code>threshold</code>	<code>float</code>	Threshold level in dB. All blocks below this threshold are considered to be dropouts	50
<code>tau</code>	<code>float</code>	Time constant for filtering power spectra	0.2
<code>filtered_powspec_mon</code>	<code>matrix<float></code>	Floating average of power spectrum	(monitor)
<code>level_mon</code>	<code>float</code>	current level	(monitor)

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	<code>int</code>	Number of audio channels	(monitor)
<code>domain</code>	<code>string</code>	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	<code>int</code>	Fragment size of waveform data	(monitor)
<code>wndlen</code>	<code>int</code>	Window length of spectral data	(monitor)
<code>fftlen</code>	<code>int</code>	FFT length of spectral data	(monitor)
<code>srate</code>	<code>float</code>	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	<code>int</code>	Number of audio channels	(monitor)
<code>domain</code>	<code>string</code>	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	<code>int</code>	Fragment size of waveform data	(monitor)
<code>wndlen</code>	<code>int</code>	Window length of spectral data	(monitor)
<code>fftlen</code>	<code>int</code>	FFT length of spectral data	(monitor)
<code>srate</code>	<code>float</code>	Sampling rate in Hz	(monitor)

4 Plugin category 'beamforming'

4.1 adm

Adaptive differential microphone

4.1.0.1 Detailed description

This plugin implements one or more adaptive first-order differential microphones, each based on the output of two omnidirectional microphones, e.g. two hearing-aid microphones (cf. Elko & Nguyen Pong, 1995). This is achieved by first subtracting the outputs of the two omnidirectional microphones with fixed delays to create a forward-facing and a backward-facing cardioid microphone, respectively; then, in a second step, the signal from the backward-facing cardioid is amplified by a variable gain factor and subtracted from the signal from the forward-facing cardioid. Finally, a lowpass filter and a filter compensating for comb-filter effect is applied to the output signal.

The gain factor, `beta`, is determined adaptively such that the power of the output signal is minimized, under the constraint that the null of the ADM is located in the rear half-plane. The adaptation step size, `mu_beta`, can be chosen in order to find the optimal combination of adaptation speed and accuracy.

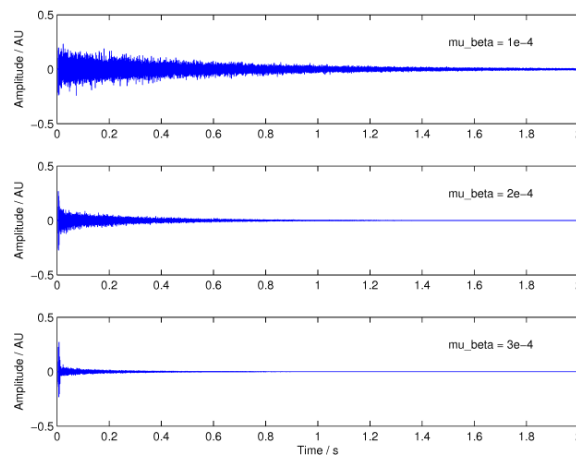


Figure 1 Output signals illustrating convergence of the ADM algorithm for three different values of `mu_beta` (input signal: white Gaussian noise exactly from behind)

4.1.0.2 Supported domains

The MHA plugin `adm` supports these signal domains:

- waveform to waveform

4.1.0.3 Categories

beamforming multichannel

4.1.0.4 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
front_channels	vector<int>	Channel indices for front microphones Range: [0,[[0 1]
rear_channels	vector<int>	Channel indices for rear microphones Range: [0,[[2 3]
distances	vector<float>	Distance between front and rear microphones Range: [0.0008,0.08]	[0.0108 0.0108]
lp_order	int	Filter order of FIR lowpass filter Range: [46,128]	46
decomb_order	int	Filter order of FIR comb compensation filter Range: [46,128]	54
bypass	int	If 1, output front microphones directly; if 2, output rear microphones directly Range: [0,2]	0
beta	float	Explicit fixed beta (-1 for adaptive filtering)	-1
mu_beta	vector<float>	Adaptation step size for each set of ADMs (e.g. left and right) Range: [0,]	[0.0001 0.0001]
tau_beta	vector<float>	time constant / s of low pass filter for averaging power of output signal (used for adaptation) Range: [0,]	[0.05]
coeff_lp	vector<float>	Lowpass coefficients	(monitor)
coeff_decomb	vector<float>	Decomb coefficients	(monitor)

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

4.2 steerbf

Steerable Beamformer

4.2.0.1 Detailed description

Implements frequency-domain beamformer processing (filter and sum) using externally provided filters. A plugin called `acSteer` can be used to provide the filter coefficients. The filter coefficients to be read are saved as a waveform object in the AC space. Each channel of this object corresponds to a different steering angle. The steering angle is typically determined in real-time by a localization plugin (e.g. `doasvm_classification`). In this case, the index to the corresponding steering direction is read from the AC space. Note that the number of available filters should be consistent with the number of possible steering directions to be estimated. The configuration variable **angle_src** keeps the name of the AC variable for the estimated steering direction. The steering angle can also be fixed in the configuration time using the configuration variable **angle_ind**.

4.2.0.2 Supported domains

The MHA plugin `steerbf` supports these signal domains:

- spectrum to spectrum

4.2.0.3 Categories

beamforming

4.2.0.4 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>bf_src</code>	string	Provides the beamforming filters encoded as a block matrix: [chanXnangle,nfreq].	
<code>angle_ind</code>	int	Sets the steering angle in filtering. Range: [0,1000]	0
<code>angle_src</code>	string	If initialized, provides an int-AC variable of steering index.	

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftl</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftl</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

5 Plugin category 'binaural'

5.1 coherence

Coherence filter

5.1.0.1 Supported domains

The MHA plugin `coherence` supports these signal domains:

- spectrum to spectrum

5.1.0.2 Categories

binaural filter noise-reduction

5.1.0.3 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
unit	keyword_list	Frequency unit Range: [Hz kHz Oct Oct/3 Bark Erb ERB_Glasberg1990]	Hz
f	vector<float>	Frequencies	[]
f_hz	vector<float>	Frequencies in Hz	(monitor)
fscale	keyword_list	frequency scale of filter bank Range: [linear bark log erb ERB_Glasberg1990]	linear
ovltype	keyword_list	filter overlap type Range: [rect linear hanning exp gauss]	rect
plateau	float	relative plateau width Range: [0,1[0
ftype	keyword_list	frequency entry type Range: [center edge]	center
normalize	bool	normalize broadband output amplitude	no
fail_on_nonmonotonic	bool	Fail if frequency entries are non-monotonic (otherwise sort)	yes
fail_on_unique_bins	bool	Fail if center frequencies share the same FFT bin.	yes
cf	vector<float>	final center frequencies in Hz	(monitor)
ef	vector<float>	final edge frequencies in Hz	(monitor)
cLTASS	vector<float>	Bandwidth level correction for LTASS noise in dB	(monitor)
shapes	matrix<float>	Frequency band shapes	(monitor)
tau_unit	keyword_list	tau unit Range: [seconds periods]	seconds
tau	vector<float>	Averaging time constant Range: [0,]	[0.04]
alpha	vector<float>	Gain exponent Range: [0,]	[1]
limit	float	gain limit / dB (zero: no limit) Range: [,0]	0
mapping	vector<float>	mapping interval of coherence estimator to coherence (min max) Range: [0,1]	[0 1]
average	keyword_list	average mode Range: [ipd spec]	ipd
invert	bool	Invert filter after mapping, before exponent.	no
ltgcomp	bool	Long term gain compensation?	no
ltgtau	vector<float>	Long term gain estimation time constant / s Range: [0,]	[1]
staticgain	vector<float>	Static gain in frequency bands / dB	[0]
delay	int	Delay between analysis and filter (delay of gains), in fragments. Range: [0,]	0

Variables of sub-parser mhaconfig_in:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

6 Plugin category 'core'

6.1 identity

6.1.0.1 Detailed description

The simplest openMHA plugin.

This plugin does nothing.

6.1.0.2 Supported domains

The MHA plugin `identity` supports these signal domains:

- waveform to waveform
- spectrum to spectrum

6.1.0.3 Categories

core

6.1.0.4 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftlen	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftlen	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

7 Plugin category 'directional'

7.1 doasvm_classification

Support vector machine (SVM) plugin for computing the direction of arrival (DOA) probabilities

7.1.0.1 Detailed description

This plugin loads the parameters of a pre-trained SVM and computes the probabilities for given range of directions of arrival (DOA). These probabilities take a value within the interval of $[0, 1]$. Higher probability for a certain DOA indicates higher possibility of a source coming from that particular DOA.

7.1.0.2 Supported domains

The MHA plugin `doasvm_classification` supports these signal domains:

- waveform to waveform

7.1.0.3 Categories

directional

7.1.0.4 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
angles	vector<float>	The angles for which the SVM model has been trained	[]
w	matrix<float>	The separation planes of the model.	[[]]
b	vector<float>	The model bias.	[]
x	vector<float>	The sigmoid probability mapping parameter x.	[]
y	vector<float>	The sigmoid probability mapping parameter y.	[]
p_name	string	The name of the AC variable for the vector of probabilities of the DOA estimation.	p
max_p_ind_name	string	The name of the AC variable for the index of the maximum probability of the DOA estimation	p_max
vGCC_name	string	The name of the AC variable for the GCC matrix, which is computed by another plugin	vGCC_ac

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftlen	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftlen	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

7.2 doasvm_feature_extraction

Plugin for computing the generalized cross correlation with phase transform (GCC-PHAT)

7.2.0.1 Detailed description

This plugin computes the generalized cross correlation with phase transform (GCC-PHAT). The input to this plugin is a stereo time domain signal. The GCC-PHAT matrix is saved into the AC space.

7.2.0.2 Supported domains

The MHA plugin `doasvm_feature_extraction` supports these signal domains:

- waveform to waveform

7.2.0.3 Categories

directional

7.2.0.4 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>fftlen</code>	int	The length of the FFT window Range: [0,[160
<code>max_lag</code>	int	Maximum lag in samples between microphones (setup-dependent) Range: [0,[20
<code>nupsample</code>	int	The amount the GCC-PHAT spectrum is oversampled Range: [0,[4
<code>vGCC_name</code>	string	The name of the AC variable for saving the GCC matrix in	<code>vGCC_ac</code>

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftlen</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftlen</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

8 Plugin category 'example'

8.1 example1

8.1.0.1 Detailed description

The **simplest** example of an openMHA plugin.

This plugin scales one channel of the input signal, working in the time domain.

8.1.0.2 Supported domains

The MHA plugin `example1` supports these signal domains:

- waveform to waveform

8.1.0.3 Categories

example

8.1.0.4 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftlen</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftlen</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

8.2 example2

This plugin multiplies the sound signal in one audio channel by a factor

8.2.0.1 Supported domains

The MHA plugin `example2` supports these signal domains:

- waveform to waveform

8.2.0.2 Categories

example

8.2.0.3 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>channel</code>	int	Index of audio channel to scale. Indices start from 0. Range: [0,[0
<code>factor</code>	float	The scaling factor that is applied to the selected channel. Range: [0,[0.1

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftlen</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftlen</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

8.3 example3

This plugin multiplies the sound signal in one audio channel by a factor

8.3.0.1 Supported domains

The MHA plugin `example3` supports these signal domains:

- waveform to waveform

8.3.0.2 Categories

example

8.3.0.3 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>channel</code>	int	Index of audio channel to scale. Indices start from 0. Only channels with even indices may be scaled. Range: [0,[0
<code>factor</code>	float	The scaling factor that is applied to the selected channel. Range: [0,[0.1
<code>prepared</code>	int	State of this plugin: 0 = unprepared, 1 = prepared	(monitor)

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftl</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftl</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

8.4 example4

This plugin multiplies the sound signal in one audio channel by a factor. It works in the spectral domain.

8.4.0.1 Supported domains

The MHA plugin `example4` supports these signal domains:

- spectrum to spectrum

8.4.0.2 Categories

example

8.4.0.3 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>channel</code>	int	Index of audio channel to scale. Indices start from 0. Only channels with even indices may be scaled. Range: [0,[0
<code>factor</code>	float	The scaling factor that is applied to the selected channel. Range: [0,[0.1
<code>prepared</code>	int	State of this plugin: 0 = unprepared, 1 = prepared	(monitor)

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftl</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftl</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

8.5 example5

example plugin configuration structure

8.5.0.1 Supported domains

The MHA plugin `example5` supports these signal domains:

- spectrum to spectrum

8.5.0.2 Categories

example

8.5.0.3 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
channel	int	channel number to be scaled Range: [0,[0
factor	float	scale factor Range: [0,2]	1

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

8.6 example6

example plugin configuration structure

8.6.0.1 Supported domains

The MHA plugin `example6` supports these signal domains:

- waveform to waveform

8.6.0.2 Categories

example

8.6.0.3 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
channel	int	channel in which the RMS level is measured Range: [0,[0

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

9 Plugin category 'feedback'

9.1 fshift_hilbert

Pitch shifter

9.1.0.1 Supported domains

The MHA plugin `fshift_hilbert` supports these signal domains:

- spectrum to spectrum

9.1.0.2 Categories

feedback

9.1.0.3 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
df	vector<float>	frequency to shift the bins / Hz	[40]
fmin	float	lower boundary for frequency shifter Range: [0,]	4000
fmax	float	upper boundary for frequency shifter Range: [0,]	16000
irslen	int	Bandpass: maximum length of cut off filter response Range: [1,]	1
phasemode	keyword_list	Bandpass: mode of gain smoothing Range: [none linear minimal]	none

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

9.2 prediction_error

Prediction error model for adaptive feedback cancellation

9.2.0.1 Detailed description

This plugin computes the prediction error model to perform adaptive feedback cancellation. The prediction error method produces an estimate of the feedback path by minimizing the measured and the predicted output signals.

9.2.0.2 Supported domains

The MHA plugin `prediction_error` supports these signal domains:

- waveform to waveform

9.2.0.3 Categories

feedback

9.2.0.4 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>rho</code>	float	convergence coefficient Range:]0,2]	0.01
<code>c</code>	float	stabilization parameter Range:]0,]	1e-05
<code>ntaps</code>	int	number of taps in filter Range:]0,]	32
<code>gains</code>	vector<float>	Gain in dB Range: [-60,60]	[0]
<code>name_e</code>	string	Name of the AC variable for saving the prediction error	E
<code>name_f</code>	string	Name of the AC variable for saving the adaptive filter	F
<code>name_lpc</code>	string	Name of the AC variable for the LPC coefficients	lpc
<code>lpc_order</code>	int	Length of the lpc filter Range:]0,1024]	20
<code>pred_err_delay</code>	vector<int>	Delay in the forward path Range:]0,[[96]
<code>delay_w</code>	vector<int>	Delay in the adaptive filtering path due to the microphone and loudspeaker transducers Range:]0,[[130]
<code>delay_d</code>	vector<int>	Delay in the adaptive filtering path for the LPC Range:]0,[[161]
<code>n_no_update</code>	int	Number of iterations without updating the filter coefficients Range:]0,1024[0

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftlen</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	<code>int</code>	Number of audio channels	(monitor)
<code>domain</code>	<code>string</code>	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	<code>int</code>	Fragment size of waveform data	(monitor)
<code>wndlen</code>	<code>int</code>	Window length of spectral data	(monitor)
<code>fftl</code>	<code>int</code>	FFT length of spectral data	(monitor)
<code>srate</code>	<code>float</code>	Sampling rate in Hz	(monitor)

10 Plugin category 'filter'

10.1 combinechannels

Channel combiner

10.1.0.1 Detailed description

Several filter channels can be combined into one or more output channels by summing the input channels. This plugin is intended as a filter resynthesis of linear-phase filter banks.

The input signal is expected to have a non-interleaved channel order, i.e., first all bands of first output channel, then all bands of second channel, etc.

10.1.0.2 Supported domains

The MHA plugin `combinechannels` supports these signal domains:

- waveform to waveform
- spectrum to spectrum

10.1.0.3 Categories

filter

10.1.0.4 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
outchannels	int	Number of output channels Range: [1,]	1
interleaved	bool	Input signal has interleaved channel order?	no
channel_gain_name	string	Name of channel gain AC variable (looked up during prepare, can be empty)	
element_gain_name	string	Name of element wise gain AC variable (looked up during waveform process, can be empty)	

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftlen	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftlen	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

10.2 fftfilterbank

FFT based filterbank with overlapping filters

10.2.0.1 Detailed description

This plugin implements a linear phase filterbank based on FFT spectrum. Each filter bank channel is stored into an own audio channel. The number of output channels of this plugin is the number of frequency bands times the number of input channels.

Please use the iFFT plugin *spec2wave* (p. 65) to get the waveform signal of the filterbank output. The *matrixmixer* (p. 76) plugin or *combinechannels* (p. 35) can be used for resynthesis.

The filters are calculated by applying filter weights to each FFT bin. These weights (filter shapes) depend on the settings of the `use_edges` variable. If `center` is selected, the frequency interval between the lower neighbour center frequency and the desired center frequency is mapped to the interval $[-1,0]$ and between the desired center frequency and the upper neighbour to the interval $[0,1]$. These mappings are linear on the given frequency scale so that a value of 0.5 denotes the middle between two neighboured center frequencies on the given frequency scale. The filter weights are calculated with the configured crossing function on this interval, see next figure for details. Please note that the filters are not necessarily symmetric (symmetry is achieved only if the center frequencies are equally spaced on the desired frequency scale). The lowest and highest filter channels include the full range from zero to the center frequency or from the center frequency to the nyquist frequency, respectively.

If `edge` is selected, then the frequency axis is transformed to be linear on the desired frequency scale. The interval between two edge frequencies is mapped to $[-0.5,0.5]$. Now, the filter shape function (rectangular, linear/sawtooth, hanning) is applied to the frequency axis. This results in symmetric filters on the desired frequency scale.

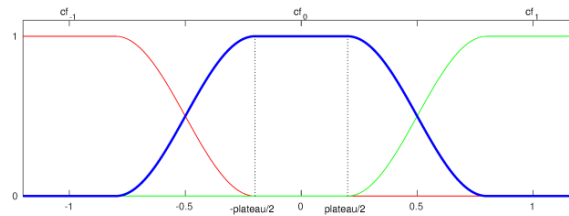


Figure 2 Schematic plot of overlapping filters

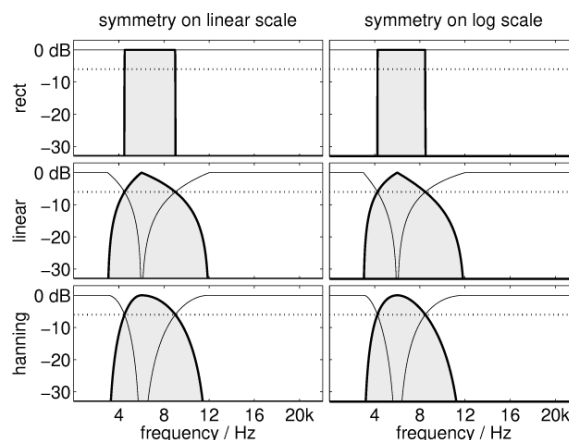


Figure 3 Example filter shapes with center frequencies configured

10.2.0.2 Supported domains

The MHA plugin `fftfilterbank` supports these signal domains:

- waveform to waveform
- spectrum to spectrum

10.2.0.3 Categories

filter

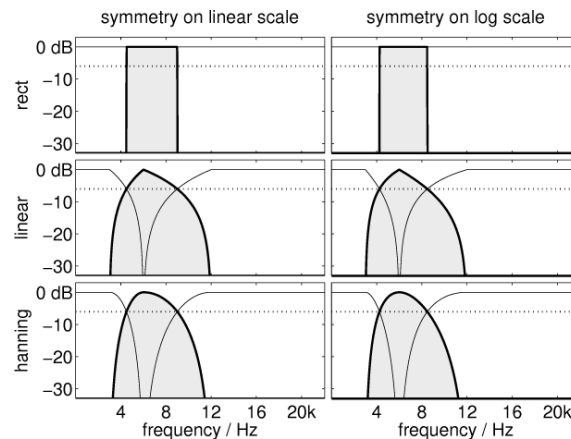


Figure 4 Example filter shapes with edge frequencies configured

10.2.0.4 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
unit	keyword_list	Frequency unit Range: [Hz kHz Oct Oct/3 Bark Erb ERB_Glasberg1990]	Hz
f	vector<float>	Frequencies	[]
f_hz	vector<float>	Frequencies in Hz	(monitor)
fscale	keyword_list	frequency scale of filter bank Range: [linear bark log erb ERB_Glasberg1990]	linear
ovltype	keyword_list	filter overlap type Range: [rect linear hanning exp gauss]	rect
plateau	float	relative plateau width Range: [0,1[0
ftype	keyword_list	frequency entry type Range: [center edge]	center
normalize	bool	normalize broadband output amplitude	no
fail_on_nonmonotonic	bool	Fail if frequency entries are non-monotonic (otherwise sort)	yes
fail_on_unique_bins	bool	Fail if center frequencies share the same FFT bin.	yes
cf	vector<float>	final center frequencies in Hz	(monitor)
ef	vector<float>	final edge frequencies in Hz	(monitor)
cLTASS	vector<float>	Bandwidth level correction for LTASS noise in dB	(monitor)
shapes	matrix<float>	Frequency band shapes	(monitor)
fftl	int	FFT length of filterbank (affects time domain only) Range: [2,]	128
phasemodel	keyword_list	Phase model (affects time domain only) Range: [minimal linear]	linear
irswnd	parser	IRS window function (affects time domain only)	(see below)
return_imag	bool	Return imaginary part? Results are stored in AC variable '<plugname>_imag'.	no

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftlen	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftlen	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `irswnd`:

Name	Type	Description	Default
type	keyword_list	Window type. Range: [rect hanning hamming black-man bartlett user]	hanning
user	vector<float>	User provided window (used if window type==user).	[]

10.3 iirfilter

IIR filter

10.3.0.1 Detailed description

The 'iirfilter' plugin implements a generic IIR filter (direct form II). The coefficients have the same names as in MATLAB. Due to different internal implementations and numeric resolutions, filters may be instable with coefficients which are stable in MATLAB.

10.3.0.2 Supported domains

The MHA plugin `iirfilter` supports these signal domains:

- waveform to waveform

10.3.0.3 Categories

filter

10.3.0.4 Configuration variables

Name	Type	Description	Default
A	vector<float>	recursive filter coefficients	[1]
B	vector<float>	non-recursive filter coefficients	[1]

10.4 nlms_wave

This plugin adaptively estimates the coefficients of a filter by means of the NLMS algorithm.

The estimated filter is stored into an AC variable named by the algorithm configuration name or by the configuration variable `name_f` and the input signal is filtered by the current filter and returned as the output signal of the plugin.

10.4.0.1 Detailed description

This plugin implements the NLMS algorithm for re-estimating the coefficients of an adaptive filter in each iteration. The estimated filter coefficients are saved in an AC variable having the same name as the plugin in the current configuration. The name of this AC variable can also be set differently by setting the configuration variable **name_f**. The input signal is filtered by the filter estimated in the current iteration and returned as the current output of the plugin from within the processing callback. The estimation of the filter coefficients is performed using the update rule given as in the following:

$$e[k] = y[k - 1] - f[k - 1]u[k - 1] \quad (7)$$

$$f[k] = f[k - 1] + \rho / (|u|^2 + c) u[k - 1] e[k], \quad (8)$$

where e is the error signal, y is the desired signal and u is the input signal. All three signals are read from the AC space. For this, the configuration variables **name_e**, **name_d** and **name_u** should be set. The error signal can also be computed within the plugin given the other two signals, when the corresponding configuration variable is left empty. The plugin can be configured to use also the current sample $u[k]$ of the input signal in the estimation by assigning the configuration variable **estimtype** to the value *current*. However in the default case (*previous*), the previous values as long as the filter (**ntaps**) but the current one are used.

10.4.0.2 Supported domains

The MHA plugin `nlms_wave` supports these signal domains:

- waveform to waveform

10.4.0.3 Categories

filter

10.4.0.4 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
rho	float	convergence coefficient Range:]0,2]	0.01
c	float	stabilization parameter Range:]0,]	1e-05
ntaps	int	number of taps in filter Range:]0,]	32
name_u	string	Name of input signal U	
name_d	string	Name of desired signal D	
normtype	keyword_list	Normalization type Range: [none default sum]	default
estimtype	keyword_list	Estimation type defined whether the current value of the input signal $u[k]$ will be incorporated in the estimation of the filter coefficients or not. Default value (previous) does not. Range: [previous current]	previous
lambda_smoothing_power	float	Recursive smoothing constant for sum normalization Range: [0,1[0.9
name_e	string	Name of error signal E	
name_f	string	Name of the AC variable for saving the adaptive filter	
n_no_update	int	Number of iterations without updating the filter coefficients	0

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftlen	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftlen	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

11 Plugin category 'generator'

11.1 noise

white noise generator

Waveform and spectral domain are supported. Please note that only in the waveform domain, real continuous white noise is created. In the spectral domain, some modulation and spectral shaping might occur.

11.1.0.1 Supported domains

The MHA plugin `noise` supports these signal domains:

- waveform to waveform
- spectrum to spectrum

11.1.0.2 Categories

generator

11.1.0.3 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>lev</code>	float	noise RMS level in dB SPL	0
<code>mode</code>	keyword_list	operation mode Range: [add replace]	add
<code>frozennoise_length</code>	float	Length of frozen noise in s, or 0 for running noise. Range: [0,]	0

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftlen</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftlen</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

11.2 sine

Sine wave generator.

11.2.0.1 Supported domains

The MHA plugin `sine` supports these signal domains:

- waveform to waveform

11.2.0.2 Categories

generator

11.2.0.3 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>lev</code>	float	sine RMS level in dB SPL FF	0
<code>f</code>	float	Frequency in Hz Range: [0,[0
<code>mode</code>	keyword_list	Replace input signal with tone or mix tone into input signal Range: [replace mix]	replace
<code>channels</code>	vector<int>	List of audio channels to feed with tone (all other audio channels are not affected)	[]

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftl</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftl</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

12 Plugin category 'level'

12.1 dc

dynamic compression

12.1.0.1 Supported domains

The MHA plugin `dc` supports these signal domains:

- waveform to waveform
- spectrum to spectrum

12.1.0.2 Categories

level compression

12.1.0.3 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>powersum</code>	bool	Input level is summed accross channels	no
<code>gtdata</code>	matrix<float>	gaintable data in dB gains	[[[]]]
<code>gtmin</code>	vector<float>	input level for first gain entry in dB SPL	[]
<code>gtstep</code>	vector<float>	level step size in dB	[]
<code>tau_rmslev</code>	vector<float>	RMS level averaging time constant in s	[]
<code>tau_attack</code>	vector<float>	attack time constant in s	[]
<code>tau_decay</code>	vector<float>	decay time constant in s	[]
<code>fb</code>	string	Name of <code>fftfilterbank</code> plugin. Used to extract frequency information.	<code>fftfilterbank</code>
<code>chname</code>	string	name of audio channel number variable (empty: broadband)	
<code>bypass</code>	bool	bypass dynamic compression	no
<code>clientid</code>	string	Client ID of last fit	
<code>gainrule</code>	string	Gain rule of last fit	
<code>preset</code>	string	Preset name of last fit	
<code>modified</code>	int	Flag if configuration has been modified	(monitor)
<code>max_level_difference</code>	matrix<float>	maximum level difference in dB between adjacent bands Range: [0,[[[[]]]
<code>level_in</code>	vector<float>	input level of last block / dB SPL	(monitor)
<code>level_in_filtered</code>	vector<float>	input level after time-constant filters / dB SPL	(monitor)
<code>cf</code>	vector<float>	nominal center frequencies of filterbank bands	(monitor)
<code>ef</code>	vector<float>	edge frequencies of filterbank bands	(monitor)
<code>band_weights</code>	vector<float>	Weights of the individual frequency bands. Computed as (sum of squared <code>fft-bin-weights</code>) / <code>num_frames</code> .	(monitor)
<code>use_wbinhib</code>	bool	Use wideband inhibition?	no
<code>wbinhib</code>	parser		(see below)

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftlen	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftlen	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `wbinhib`:

Name	Type	Description	Default
weights	vector<float>	weighting of neighbour frequencies	[1 2 4 4 4 2 1]
dl_map_min	float	mapping of level/broadband level ratio (in dB) into inhibition ratio, lower value means full inhibition	-8
dl_map_max	float	mapping of level/broadband level ratio (in dB) into inhibition ratio, upper value means no inhibition	2
l_min	float	level threshold, inhibition starts above this level	40
g_scale	matrix<float>	scaling factor of inhibition gain	[[1]]

12.2 dc_simple

Simple dynamic compression scheme

12.2.0.1 Detailed description

The plugin *dc_simple* is a multiband dynamic compression. One compression function (input-output function) is applied to each audio channel; multiple frequency bands can be used via the *fftfilterbank* plugin. The level dependent gain function is determined by the gains at 50 and 80 dB (G50 and G80). To reduce noise, an expansion is applied below a noise gate level. See also Fig. 5.

If spectral processing is used, the input level (x -axis of the input-output function) is determined by an attack- and release-filter of the short time RMS level L_{st} , which is calculated as described

in the documentation of the 'fftfbpow' plugin or in equation 8 of ?. The attack filter is a first order low pass filter. The release filter is a maximum tracker, i.e.

$$L_a = \langle 20 \log_{10}(L_{st}) \rangle_{\tau_{attack}} \quad (9)$$

$$L_{in} = \max(L_a, \langle L_a \rangle_{\tau_{release}}) \quad (10)$$

The input level is divided into three sections. In each section the input level L_{in} is transformed linearly into a gain G on a log-log scale: $G_{dB} = (m - 1)L_{in} + n$, where m is the slope of the input-output function, and n is an offset. Between expansion threshold and limiter threshold, m and n are given by the gain at 50 and 80 dB. In the section below the expansion threshold, m is the expansion slope, and above the limiter threshold, m is zero. n is chosen to result in a continuous input-output function.

All variables are vectors with one entry for each input channel (number of audio channels times number of frequency bands).

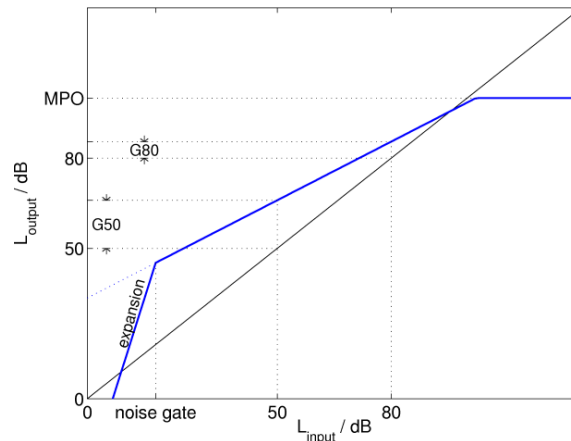


Figure 5 Input-output function of one channel in the *dc_simple* dynamic compression algorithm.

An example configuration of a chain with dynamic compression could be:

```
algos = [fftfilterbank dc_simple combinechannels]
fftfilterbank.ftype = center
fftfilterbank.f = [250 1000 4000]
fftfilterbank.ovltype = rect
fftfilterbank.fscale = bark
dc_simple.g50 = [10 25 40 11 31 55]
dc_simple.g80 = [5 15 10 5 21 19]
dc_simple.expansion_threshold = [20 20 20 20 20 20]
dc_simple.expansion_slope = [4 4 4 4 4 4]
dc_simple.limiter_threshold = [120 120 120 120 120 120]
dc_simple.tau_attack = [0.005 0.005 0.005 0.005 0.005 0.005]
dc_simple.tau_decay = [0.015 0.015 0.015 0.015 0.015 0.015]
combinechannels.name = fftfilterbank_channels
```

In this configuration it is assumed that two audio channels are configured, i.e. all variables of *dc_simple* have three entries for the first audio channel and three for the second audio channel.

12.2.0.2 Supported domains

The MHA plugin `dc_simple` supports these signal domains:

- waveform to waveform
- spectrum to spectrum

12.2.0.3 Categories

/level/ compression

12.2.0.4 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>g50</code>	vector<float>	Gain in dB at 50 dB input level Range: [-80,80]	[0]
<code>g80</code>	vector<float>	Gain in dB at 80 dB input level Range: [-80,80]	[0]
<code>maxgain</code>	vector<float>	Maximal amplification in dB	[80]
<code>expansion_threshold</code>	vector<float>	expansion threshold in dB	[0]
<code>expansion_slope</code>	vector<float>	expansion slope of input-output function in dB/dB Range: [0,10]	[1]
<code>limiter_threshold</code>	vector<float>	limiter threshold in dB	[100]
<code>tau_attack</code>	vector<float>	attack time constant in s Range: [0,]	[0.005]
<code>tau_decay</code>	vector<float>	decay time constant in s Range: [0,]	[0.05]
<code>bypass</code>	bool	bypass dynamic compression	no
<code>clientid</code>	string	Client ID of last fit	
<code>gainrule</code>	string	Gain rule of last fit	
<code>preset</code>	string	Preset name of last fit	
<code>modified</code>	int	Flag if configuration has been modified	(monitor)
<code>level</code>	vector<float>	Input level in dB	(monitor)
<code>gain</code>	vector<float>	Applied gain in dB	(monitor)
<code>filterbank</code>	string	Name of fftfilterbank plugin. Used to extract frequency information.	
<code>cf</code>	vector<float>	center frequencies of the frequency bands [Hz]	(monitor)
<code>ef</code>	vector<float>	edge frequencies of the frequency bands [Hz]	(monitor)

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftlen</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	<code>int</code>	Number of audio channels	(monitor)
<code>domain</code>	<code>string</code>	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	<code>int</code>	Fragment size of waveform data	(monitor)
<code>wndlen</code>	<code>int</code>	Window length of spectral data	(monitor)
<code>fftl</code>	<code>int</code>	FFT length of spectral data	(monitor)
<code>srate</code>	<code>float</code>	Sampling rate in Hz	(monitor)

12.3 multibandcompressor

Multiband compressor framework based on level in overlapping filter bands.

12.3.0.1 Detailed description

`multibandcompressor` provides a complete framework for dynamic range compression in multiple frequency bands.

It contains the same filterbank as the `fftfilterbank` plugin (see there for documentation of the filterbank) and combines the frequency bands again after the compression.

For the actual dynamic range compression, `multibandcompressor` can load any other plugin using the field `plugin_name`. Common choices for this plugin would be `dc_simple` or `dc`.

Note that the dynamic range compression receives a pseudo time signal where the sampling rate is the rate of the block processing, i.e. in each channel and band, there is exactly 1 signal sample for every block. These samples are a sparse, non-negative representation of the actual signal in the respective frequency band: The magnitude of each sample is chosen by `multibandcompressor` so that the level computed from this sparse signal is the same as the level computed from the full signal for this frequency band.

The dynamic range compression will then apply gain (or attenuation) to the sparse signal in each frequency band. The gain applied to the sparse signal is measured by `multibandcompressor` and eventually applied to the respective full signal.

Before the compressor gain is applied to the full signal, it may be modified by the after-burner built into the `multibandcompressor` plugin (sub-parser 'burn'): The purpose of the after-burner is to enforce a configurable Maximum Power Output (MPO) for each frequency band, and to compensate for drains and confluxes of sound energy through vents and open fittings. Note that compensating for drains in this way can easily lead to feedback howling and should be done with caution. The after-burner can be disabled by setting `burn.bypass=yes`.

12.3.0.2 Supported domains

The MHA plugin `multibandcompressor` supports these signal domains:

- spectrum to spectrum

12.3.0.3 Categories

/level/ compressor

12.3.0.4 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
unit	keyword_list	Frequency unit Range: [Hz kHz Oct Oct/3 Bark Erb ERB_Glasberg1990]	Hz
f	vector<float>	Frequencies	[]
f_hz	vector<float>	Frequencies in Hz	(monitor)
fscale	keyword_list	frequency scale of filter bank Range: [linear bark log erb ERB_Glasberg1990]	linear
ovltype	keyword_list	filter overlap type Range: [rect linear hanning exp gauss]	rect
plateau	float	relative plateau width Range: [0,1[0
ftype	keyword_list	frequency entry type Range: [center edge]	center
normalize	bool	normalize broadband output amplitude	no
fail_on_nonmonotonic	bool	Fail if frequency entries are non-monotonic (otherwise sort)	yes
fail_on_unique_bins	bool	Fail if center frequencies share the same FFT bin.	yes
cf	vector<float>	final center frequencies in Hz	(monitor)
ef	vector<float>	final edge frequencies in Hz	(monitor)
cLTASS	vector<float>	Bandwidth level correction for LTASS noise in dB	(monitor)
shapes	matrix<float>	Frequency band shapes	(monitor)
plugin_name	string	Plugin name	
burn	parser		(see below)

Variables of sub-parser mhaconfig_in:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser mhaconfig_out:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `burn`:

Name	Type	Description	Default
<code>f</code>	vector<float>	Sample frequencies of data / Hz. Range: [0,]	[1000]
<code>drain</code>	vector<float>	Drain caused by vent / dB.	[0]
<code>conflux</code>	vector<float>	Conflux caused by vent / dB.	[-120]
<code>maxgain</code>	vector<float>	Maximum allowed gain / dB.	[80]
<code>mpo</code>	vector<float>	Maximum allowed output level / dB SPL (see notes in plugin doc).	[120]
<code>taugain</code>	float	Time constant of afterburn gain modifier lowpass / s. Range: [0,]	0.2
<code>commit</code>	keyword_list	Commit changes of configuration variables. Range: [commit]	commit
<code>bypass</code>	bool	Bypass afterburn stage.	no

12.4 rmslevel

This algorithm displays block based RMS level informations. Results are stored in these AC variables (replace 'rmslevel' by the configured plugin name):

`rmslevel_level_db` `rmslevel_peak_db` `rmslevel_level` `rmslevel_peak`

12.4.0.1 Supported domains

The MHA plugin `rmslevel` supports these signal domains:

- waveform to waveform
- spectrum to spectrum

12.4.0.2 Categories

level

12.4.0.3 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftlen</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftlen	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

12.5 softclip

The softclipper implements a broad band dynamic compression above a given level.

12.5.0.1 Supported domains

The MHA plugin `softclip` supports these signal domains:

- waveform to waveform

12.5.0.2 Categories

level

12.5.0.3 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
tau_decay	float	time constant of decay filter Range: [0,[0.05
tau_attack	float	time constant of attack filter Range: [0,[0.002
start	float	entry point of time domain soft clipping (dB)	110
slope	float	slope of input-output table above start (dB/dB) Range: [0,[0.125

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftlen	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	<code>int</code>	Number of audio channels	(monitor)
<code>domain</code>	<code>string</code>	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	<code>int</code>	Fragment size of waveform data	(monitor)
<code>wndlen</code>	<code>int</code>	Window length of spectral data	(monitor)
<code>fftl</code>	<code>int</code>	FFT length of spectral data	(monitor)
<code>srate</code>	<code>float</code>	Sampling rate in Hz	(monitor)

12.6 transducers

Signal level calibration plugin.

12.6.0.1 Detailed description

Some plugins in the MHA expect the input signal to be calibrated to sound pressure level in Pascal. This plugin converts AD and DA converter levels to SPL in Pa and also allows for a FIR filters for microphone and receiver equalization.

A schematic calibration rule for the MHA

1. Measure frequency response of hearing aid microphones and receiver.
2. Create FIR filter coefficients for frequency response equalization for microphones and receiver, configure the FIR coefficients of this plugin correspondingly.
3. Play an acoustic reference signal of a known SPL level to the microphone, adjust the 'calib_in.peaklevel' variable until the internal level meter (e.g. rmslevel, p. 50) shows the same level.
4. Create a test tone in the MHA (e.g. with 'noise', p. 42, or 'sine', p. 43) of a given level, and adjust the variable 'calib_out.peaklevel' until the same acoustic level is measured at the receiver.

Besides the signal calibration, this plugin also contains a soft-limiter in the output path, and a quantization module. The soft-limiter acts as a fast broadband compressor, and can be configured correspondingly. The quantisation module limits the signal to the interval $[-1, 1]$ and optionally reduces the resolution, by this quantization rule:

$$y = \text{floor}(2^{(N-1)}x)2^{-(N-1)} \quad (11)$$

N is the number of bits, x the input signal and y the output signal.

12.6.0.2 Supported domains

The MHA plugin `transducers` supports these signal domains:

- waveform to waveform

12.6.0.3 Categories

level

12.6.0.4 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
plugin_name	string	Plugin name	
calib_in	parser	calibration module	(see below)
calib_out	parser	calibration module	(see below)

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftlen	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftlen	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `calib_in`:

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
nbits	int	Number of bits to simulate, or zero for limiting only Range: [0,32]	0
fir	matrix<float>	FIR filter coefficients, one row for each channel	[[[]]]
peaklevel	vector<float>	Reference peak level in dB (0 dB FS corresponds to this SPL level)	[]
speechnoise	parser		(see below)
tau_level	float	Time constant in seconds for RMS level meter Range: [0,10]	0.125
rmslevel	vector<float>	RMS level in dB at input (after calibration or addition of noise)	(monitor)
config	parser		(see below)

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `speechnoise`:

Name	Type	Description	Default
mode	keyword_list	Playback mode and level of speech shaped noise Range: [off on olnoise LTASS_combined LTASS_female LTASS_male white pink brown TEN_SPL TEN_SPL_250_8k TEN_SPL_50_16k sin125 sin250 sin500 sin1k sin2k sin4k sin8k]	off
level	float	Test signal level in dB SPL Range: [0,120]	80
channels	vector<int>	Channels where to playb speech noise signal Range: [0,]	[]

Variables of sub-parser `config`:

Name	Type	Description	Default
srate	float	Actual sampling rate / Hz	(monitor)
fragsize	int	Actual fragment size / samples	(monitor)
channels	int	Actual number of channels	(monitor)

Variables of sub-parser `calib_out`:

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
speechnoise	parser		(see below)
peaklevel	vector<float>	Reference peak level in dB (0 dB FS corresponds to this SPL level)	[]
fir	matrix<float>	FIR filter coefficients, one row for each channel	[[]]
softclip	parser	'Hardware' softclipper	(see below)
nbits	int	Number of bits to simulate, or zero for limiting only Range: [0,32]	0
do_clipping	bool	Will the soft/ hard clipping be executed	no
tau_level	float	Time constant in seconds for RMS level meter Range:]0,10]	0.125
rmslevel	vector<float>	RMS level in dB at output (before calibration or addition of noise)	(monitor)
config	parser		(see below)

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftlen	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftlen	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `speechnoise`:

Name	Type	Description	Default
mode	keyword_list	Playback mode and level of speech shaped noise Range: [off on olnoise LTASS_combined LTASS_female LTASS_male white pink brown TEN_SPL TEN_SPL_250_8k TEN_SPL_50_16k sin125 sin250 sin500 sin1k sin2k sin4k sin8k]	off
level	float	Test signal level in dB SPL Range: [0,120]	80
channels	vector<int>	Channels where to playb speech noise signal Range: [0,]	[]

Variables of sub-parser `softclip`:

Name	Type	Description	Default
<code>tau_attack</code>	float	attack filter time constant / s Range: [0,]	0.002
<code>tau_decay</code>	float	decay filter time constant / s Range: [0,]	0.005
<code>threshold</code>	float	start point on linear scale (hard clipping at 1.0) Range: [0,]	0.6
<code>hardlimit</code>	float	hard limit Range:]0,]	1
<code>slope</code>	float	compression factor Range: [0,1]	0.5
<code>linear</code>	bool	input/output function is linear on linear (yes) or logarithmic (no) scale	no
<code>tau_clip</code>	float	clipping meter time constant / s Range: [0,]	1
<code>clipped</code>	float	clipped ratio	(monitor)
<code>max_clipped</code>	float	maximum allowed clipped ratio Range: [0,1]	1

Variables of sub-parser `config`:

Name	Type	Description	Default
<code>srate</code>	float	Actual sampling rate / Hz	(monitor)
<code>fragsize</code>	int	Actual fragment size / samples	(monitor)
<code>channels</code>	int	Actual number of channels	(monitor)

13 Plugin category 'noise'

13.1 timoSmooth

Cepstral smoothing single-channel noise reduction

13.1.0.1 Detailed description

Implements the single-channel noise reduction scheme found in Breithaupt, Gerkmann, and Martin, A Novel A Priori SNR Estimation Approach Based on Selective Cepstro-temporal Smoothing.

13.1.0.2 Supported domains

The MHA plugin `timoSmooth` supports these signal domains:

- spectrum to spectrum

13.1.0.3 Categories

noise reduction

13.1.0.4 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
xi_min_db	float	Minimum a priori SNR for a bin in dB(power) Range: [-50,50]	-27
f0_low	float	Lower limit for F0 detection in Hz Range: [0,400]	70
f0_high	float	Upper limit for F0 detection in Hz Range: [0,400]	300
delta_pitch	float	Quefrency half-width of pitch-set in samps Range: [0,20]	2
lambda_thresh	float	Pitch detection threshold for smooth cepstrum in magnitude Range: [0,3]	0.2
alpha_pitch	float	Alpha value to set for pitch range Range: [0,4]	0.15
beta_const	float	AR coeff for smoothing of alphas(smoothing-factors)	0.96
kappa_const	float	Exponential bias correction constant for a priori SNR estimate Range: [0,1]	0.2886
gain_min_db	float	Minimum gain in dB for a frequency bin Range: [-30,0]	-17
win_f0	vector<float>	Window coefficients for cepstral smoothing window Range: [0,1]	[0.0207 0.0656 0.1664 0.2473 0.2473]
alpha_const_vals	vector<float>	Piecewise values for steady-state alphas Range: [0,2]	[0.2 0.4 0.92]
alpha_const_limits_hz	vector<float>	Limits for steady-state alphas given in Hz Range: [0,10000]	[93.75 625]
noisePow_name	string	Name of est. noise spectrum in AC space	noisePowProposedScale
spp	parser	Subparser for exporting SPP	(see below)

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftlen	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `spp`:

Name	Type	Description	Default
prior_q	float	priorQ for computing GLR and SPP from local SNR Range: [0,2]	0.5
xi_opt_db	float	xiOpt in dB for computing GLR and SPP from local SNR Range: [0,40]	15

14 Plugin category 'overlapadd'

14.1 overlapadd

Waveform to spectrum overlap add and FFT method. Audio data is collected up to `wndlen`, then windowed with the given window function, zero padded up to `fftlength` (symmetric zero padding or asymmetric zero padding possible), and Fast-Fourier-transformed. All parameter changes take effect after the next `prepare` call.

14.1.0.1 Detailed description

This plugin transforms fragmented waveform data into short time Fourier transformed audio (STFT), and after processing by spectral processing plugins back to the time domain. This overlap-add mechanism is similar to that from Allen (1977): First, the waveform signal is windowed with a window function, e.g., a Hanning window. In each processing frame, the window is shifted by the fragment size of the input waveform. Missing parts of the signal are taken from the past. The windowed signal is padded with zeros on both sides up to the FFT length, to avoid aliasing when filters are applied in the frequency domain. The impulse response of the applied filter can have the length of the zero padding; if the impulse response is longer, later parts of the impulse response will be mapped to the beginning of the fragment (temporal aliasing). Linear phase filters (real gains in the frequency domain) produce symmetric impulse responses and therefore require symmetric zero padding. The zero padded signal is now fast Fourier transformed. Parameters are FFT length N , window length M and the fragment size P . Typical values for the window length are $M = 2P$ or $M = 4P$. The Hanning window used in the first step is $w_1(k) = \frac{1}{2}(1 - \cos(2\pi k/M))$, the windowed signal is

$$x_w(m, k) = w_1(k) \cdot x(m \cdot P + k), \quad (12)$$

with $k = 0, \dots, M - 1$ and the fragment index m .

After processing and inverse Fourier transformation, Hanning ramps are applied to the signal to avoid discontinuities in case of temporal aliasing, and thus reducing the artifacts. The length

of the Hanning ramps are a fraction p of half the zero-padding length $(N - M)/2$. If $p = 1$, the entire zero-padded parts are smoothed with Hanning ramps. $p = 0$ means, that no Hanning ramps are applied to the signal. This allows an exact reproduction in those cases, where the local impulse response of the filter (represented by all algorithms between FFT and inverse FFT) is shorter than the zero padding length. The windowing in both stages of the overlap-add mechanism is plotted in Fig. 6 for $M = 2P$ (50% overlap).

The total delay between input and output of a real-time system with fragment size P and an overlap-add based linear-phase filter, is the window length plus half the zero-padding length, or $M + (N - M)/2$, plus an additional delay needed for the signal processing, and plus a delay generated by the AD/DA converters (e.g., anti-aliasing filter delay). In an offline system, the complete input signal is available in advance, and thus the delay of the overlap-add method is determined only by the relative shift between output and input signal, which is $(M + N)/2 - P$ (equal to $N/2$ in case of 50% overlap, i.e. $M = 2P$). Contrary to a real-time system, the delay of an offline system depends on the amount of overlap.

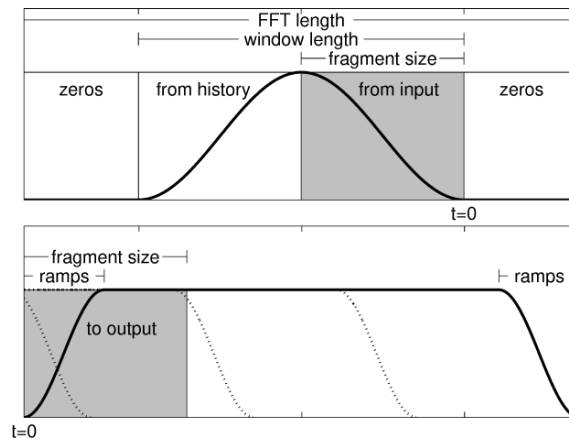


Figure 6 Windowing in the overlap-add method with 50% overlap and zero-padding. In the upper panel, the windowed input signal before applying the FFT is schematically plotted. In the lower panel, the same time interval after inverse FFT is shown. The shaded segment is the fragment which is read from the input stream (upper panel) and written to the output stream (lower panel) in one processing cycle. The delay between input and output signal is the length of leading zeros plus the window length.

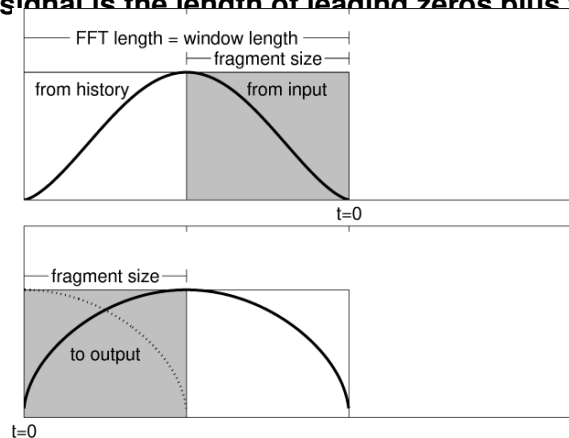


Figure 7 Windowing in the overlap-add method, as in Fig. 6, but with post-windowing and without zero-padding. In this setup, W^α is applied before FFT and $W^{1-\alpha}$ is used for post-windowing. The delay between input and output signal is the window length.

14.1.0.2 Supported domains

The MHA plugin `overlapadd` supports these signal domains:

- waveform to waveform

14.1.0.3 Categories

overlapadd

14.1.0.4 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>plugin_name</code>	string	Plugin name	
<code>fftl</code>	int	FFT length Range: [1,]	512
<code>wnd</code>	parser	window type	(see below)
<code>zerownd</code>	parser	zero padding post window type	(see below)
<code>prescale</code>	float	scaling factor (pre-scaling)	(monitor)
<code>postscale</code>	float	scaling factor (post-scaling)	(monitor)

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftl</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftl</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `wnd`:

Name	Type	Description	Default
type	keyword_list	Window type. Range: [rect hanning hamming black-man bartlett user]	hanning
user	vector<float>	User provided window (used if window type==user).	[]
len	int	window length/samples Range: [1,]	400
pos	float	window position (0 = beginning, 0.5 = symmetric zero padding, 1 = end) Range: [0,1]	0.5
exp	float	window exponent to be applied to all elements of window function	1

Variables of sub-parser `zerownd`:

Name	Type	Description	Default
type	keyword_list	Window type. Range: [rect hanning hamming black-man bartlett user]	rect
user	vector<float>	User provided window (used if window type==user).	[]

14.2 shadowfilter_begin

Save signal spectrum to AC variable

14.2.0.1 Detailed description

The plugins 'shadowfilter_begin' and 'shadowfilter_end' (section 14.3) are designed to measure the gains produced by any spectral plugins and apply those gains to audio channels not passed to the algorithm. This method can be used to process a mixed signal, but apply the same gains to the unmixed signal parts separately. For a stereo mixed signal, this can be done by reading the mixed signal from channels 1 and 2, the desired signal from channels 3 and 4, and the competing signal from channels 5 and 6. The 'shadowfilter_begin' plugin hides channels 3 to 6 from the plugin, and remembers the input spectrae for all channels. The 'shadowfilter_end' plugin compares the processed output signal (channels 1 and 2) with its input spectrum and derives complex gains produced by the algorithm (without any knowledge of the algorithm). The same gains are applied to channels 3 to 6.

14.2.0.2 Supported domains

The MHA plugin `shadowfilter_begin` supports these signal domains:

- spectrum to spectrum

14.2.0.3 Categories

overlapadd

14.2.0.4 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
nch	int	number of processing channels Range: [1,[1
ntracks	int	number of input sources, each with nch audio channels Range: [1,[1

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

14.3 shadowfilter_end

Compute spectral gains seen since `shadowfilter_begin`, apply gains to other tracks

14.3.0.1 Detailed description

See section [14.2](#) for a description of the shadow filter method. The 'shadowfilter_end' plugin creates an AC variable `shadowfilter_gains`, which contains the complex gains created by the algorithm.

14.3.0.2 Supported domains

The MHA plugin `shadowfilter_end` supports these signal domains:

- spectrum to spectrum

14.3.0.3 Categories

overlapadd

14.3.0.4 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
basename	string	configuration name of shadowfilter_begin	shadowfilter_begin

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

14.4 smoothgains_bridge

Gain smoothing for reduction of filter length

14.4.0.1 Detailed description

The overlap-add framework allows filter lengths of the zero padding length. Longer filters will result in artifacts caused by circular aliasing. Artifacts can be reduced by either applying Hanning ramps to the zero-padded blocks after filtering, or by shortening the impulse response of the filter, and thus implicitly reducing the frequency resolution. This plugin reduces the filter length to match exactly the zero-padding length. It can either keep the phase (`mode=linear_phase`), and reduce causal and a-causal parts of the impulse response, or apply a minimum phase filter phase, and cut the causal part of the filter. The window position in the overlap-add framework has to be configured appropriately: For linear phase mode, a symmetric window position is required, i.e., `wnd.pos=0.5`. To allow minimal phase filters, an asymmetric window position (`wnd.pos=0`) is needed. Using minimal phase filters will destroy the phase, but reduces the algorithmic delay.

14.4.0.2 Supported domains

The MHA plugin `smoothgains_bridge` supports these signal domains:

- spectrum to spectrum

14.4.0.3 Categories

overlapadd filter

14.4.0.4 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>plugin_name</code>	string	Plugin name	
<code>mode</code>	keyword_list	Gain smoothing mode Note: Appropriate settings of window position are required (linear_phase: 0.5, minimal_phase: 0) Range: [off linear_phase minimal_phase]	linear_phase
<code>irswnd</code>	parser	Impulse response window function	(see below)
<code>epsilon</code>	float	Epsilon for safe division by zero (avoid inf) Range: [1.1e-19,]	1e-18

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftlen</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftlen</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `irswnd`:

Name	Type	Description	Default
<code>type</code>	keyword_list	Window type. Range: [rect hanning hamming blackman bartlett user]	hanning
<code>user</code>	vector<float>	User provided window (used if window type==user).	[]

14.5 spec2wave

spectrum to waveform iFFT plugin Performs inverse FFT, postwindowing, hanning ramps at zero-padding, overlap-add, normalization. Note that normalization only works for $\text{mod}(\text{wndlen}, \text{fragsize})=0$. Also note that postwindowing only works for $\text{wndpos}=0.5$. Always set $\text{ramplen}=0$ here if $\text{wndpos} \neq 0$ in the corresponding `wave2spec`.

14.5.0.1 Detailed description

This plugin calculates the inverse FFT and overlap add resynthesis. The parameters are taken from the framework overlap add parameters. After the inverse Fourier transform, hanning window ramps are applied to the previously zero-padded regions.

14.5.0.2 Supported domains

The MHA plugin `spec2wave` supports these signal domains:

- spectrum to waveform

14.5.0.3 Categories

overlapadd

14.5.0.4 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>ramplen</code>	float	Relative length of post windowing hanning ramps (for centered analysis window) Range: [0,1]	1
<code>wndtype</code>	keyword_list	window type Range: [rect bartlett hanning hamming blackman user]	rect
<code>wndexp</code>	float	window exponent to be applied to all elements of window function	1
<code>userwnd</code>	vector<float>	user provided window	[]

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftlen</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	<code>int</code>	Number of audio channels	(monitor)
<code>domain</code>	<code>string</code>	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	<code>int</code>	Fragment size of waveform data	(monitor)
<code>wndlen</code>	<code>int</code>	Window length of spectral data	(monitor)
<code>fftl</code>	<code>int</code>	FFT length of spectral data	(monitor)
<code>srate</code>	<code>float</code>	Sampling rate in Hz	(monitor)

14.6 wave2spec

Waveform to spectrum overlap add and FFT method.

Audio data is collected up to `wndlen`, then windowed with the given window function, zero padded up to `fftl` (symmetric zero padding or asymmetric zero padding possible), and fast-Fourier-transformed (FFT).

14.6.0.1 Detailed description

This plugin performs the domain transformation from time-domain waveform signal to short-time Fourier transform (STFT) signal in the spectral domain. This plugin can be used as the analysis part of a complete overlap-add procedure. Audio signal data is collected up to the length of the analysis window. The hop-size is equal to the audio block size that this plugin receives. Window size and FFT length are configurable through the configuration variables of this plugin.

The shape of the analysis window is also configurable: Several pre-defined window shapes can be selected, and also a completely user-defined window shape. In addition, a configurable exponent can be applied to all samples of the window before it is used.

During processing, the input data samples are multiplied with the samples of the analysis window, zero padded to the FFT length and Fourier transformed. Please note that usually the window shift is less than the window length. For this reason, the short time fourier transform does not exactly correspond to the current input waveform block: the analysis window contains samples from the current as well as from previous invocation(s). The absolute window shift is identical to the fragment size, e.g. to achieve a window shift of 50%, configure a fragment size of `wndlen/2`.

A copy of the output spectrum is stored in the AC space in a variable of same name as the configured plugin name. To access the spectrum in AC space from the code of self-developed other plugins, the function `MHA_AC::get_var_spectrum()` can be used. See the open-MHAdeveloper manual or the header file `mha_algo_comm.h` for details.

Please refer to section 14.1 for a description of the overlap-add method that is also followed by this plugin, `wave2spec`.

Example configurations for the `wave2spec` plugin are available in the short-time-fourier-transform examples directory, and in the matlab/octave tests exercising this plugin in the `mhatest` directory. These test files are executed together with the other system-level tests when invoking `make test`. Please note that you need to have the signal processing package installed in order to successfully execute all tests for this plugin.¹

¹In octave, the package can be installed with `pkg install -forge control signal` from within octave.

14.6.0.2 Supported domains

The MHA plugin `wave2spec` supports these signal domains:

- waveform to waveform
- waveform to spectrum

14.6.0.3 Categories

overlapadd

14.6.0.4 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
fftlen	int	FFT lengths Range: [1,]	512
wndlen	int	window length/samples Range: [1,]	400
wndpos	float	window position (0 = beginning, 0.5 = symmetric zero padding, 1 = end) Range: [0,1]	0.5
wndtype	keyword_list	window type Range: [rect bartlett hanning hamming blackman user]	hanning
wndexp	float	window exponent to be applied to all elements of window function	1
userwnd	vector<float>	user provided window	[]
return_wave	bool	return input waveform signal, store spectrum only to AC	no

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftlen	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftlen	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

15 Plugin category 'resample'

15.1 downsample

Downsampling by integer fractions

15.1.0.1 Supported domains

The MHA plugin `downsample` supports these signal domains:

- waveform to waveform

15.1.0.2 Categories

resample signalflow

15.1.0.3 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>ratio</code>	int	downsampling ratio Range: [1,]	3
<code>antialias</code>	parser	IIR filter structure	(see below)

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftl</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftl</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `antialias`:

Name	Type	Description	Default
A	vector<float>	recursive filter coefficients	[1]
B	vector<float>	non-recursive filter coefficients	[1]

15.2 upsample

Upsampling by integer fractions

15.2.0.1 Supported domains

The MHA plugin `upsample` supports these signal domains:

- waveform to waveform

15.2.0.2 Categories

resample signalflow

15.2.0.3 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>ratio</code>	int	upsampling ratio Range: [1,]	3
<code>antialias</code>	parser	IIR filter structure	(see below)

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftl</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftl</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `antialias`:

Name	Type	Description	Default
A	vector<float>	recursive filter coefficients	[1]
B	vector<float>	non-recursive filter coefficients	[1]

16 Plugin category 'signalflow'

16.1 altplugins

Configure alternative plugins.

16.1.0.1 Detailed description

The plugin `altplugins` allows configuration of alternative plugins. The plugin used for processing can be selected via the `select` variable at any time. Any plugins can be used as alternative plugins, with the only limitations that input and output domain and signal dimension is equal for all alternative plugins. Plugins can be renamed using the ":" operator.

This plugin is automatically located by the graphical user interface `t mhacontrol` and used for an algorithm selection panel.

16.1.0.2 Supported domains

The MHA plugin `altplugins` supports these signal domains:

- waveform to waveform
- waveform to spectrum
- spectrum to waveform
- spectrum to spectrum

16.1.0.3 Categories

signalflow

16.1.0.4 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>use_own_ac</code>	bool	Use own AC space for each plug (yes), or share parents space (no). Must be set before plugs.	no
<code>plugins</code>	vector<string>	List of plugins	[]
<code>add</code>	string	Add a plugin into list	
<code>delete</code>	string	Delete a plugin from list	
<code>ramplen</code>	float	Ramp length in seconds Range: [0,]	0
<code>select</code>	keyword_list	Select a plugin for processing Range: [(none)]	(none)
<code>labels</code>	vector<string>	List of plugin labels.	(monitor)

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftlen	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftlen	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

16.2 analysispath

Split-up of signal analysis and filtering, with asynchronous processing of filter path and thread-safe exchange of filter parameters as AC variables.

16.2.0.1 Detailed description

In many signal processing scenarios, the signal analysis requires larger block sizes and more processing time than the filtering itself. If the filters do not change rapidly, the filter coefficients can be processed independently from the filter process. This is realized in this plugin: A copy of the input signal is stored in a double buffer, which is then processed asynchronously in a thread with lower priority. At the same time, a snapshot of the AC space (or a subset of it) can be transferred from the analysis thread to the main processing thread.

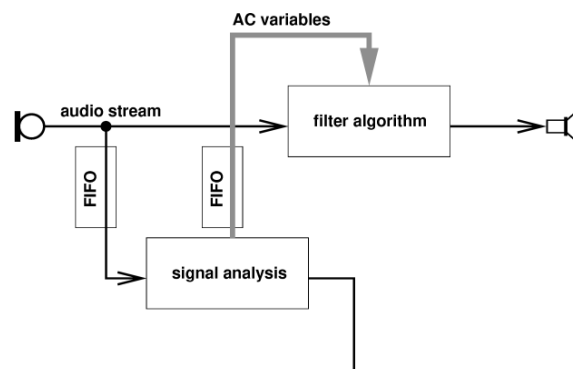


Figure 8 Schematic signal flow in the analysis path scenario.

Please note that the AC variables which should be copied to the processing thread must exist after the `prepare()` callback and should not change their size during run-time.

16.2.0.2 Supported domains

The MHA plugin `analysispath` supports these signal domains:

- waveform to waveform

16.2.0.3 Categories

signalflow

16.2.0.4 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>plugname</code>	string	inner plugin name, receives adapted fragment size	
<code>fragsize</code>	int	fragment size of inner plugin Range: [1,]	200
<code>fifolen</code>	int	length of double buffer in inner fragment size Range: [1,]	10
<code>priority</code>	int	SCHED_FIFO priority (<0 for no real-time scheduling)	-1
<code>acvars</code>	vector<string>	Names of AC variables to be copied back to processing thread (empty: all)	[]

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftlen</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftlen</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

16.3 db

Synchronous double buffer plugin.

16.3.0.1 Detailed description

The double buffer plugin allows changes of fragment size. It has an outer layer (e.g. framework) and an inner layer (e.g. MHA kernel, plugin). A configurable fragment size is used on the inner side, which is independent from the outer fragment size. The input data is buffered, and the data is processed when enough samples are available. The configuration of the inner plugin is available via the `plug` prefix.

Please note that double buffering adds an extra delay of the audio stream. If both fragment sizes are identical, the double buffering is bypassed.

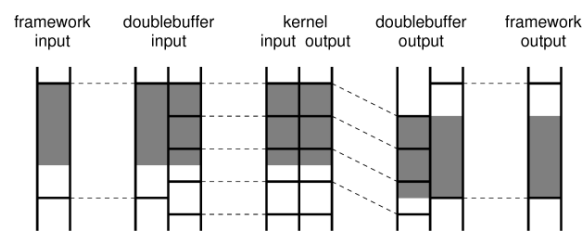


Figure 9 Concept of the double buffer plugin. The outer fragments, provided by the framework, are split up into smaller fragments for processing in the kernel. For a continuous output stream, an extra delay is needed, i.e. the first fragment is filled with zeros at the beginning.

16.3.0.2 Warning:

If the inner fragment size is larger than the outer fragment size, the maximal processing time is limited by the shorter fragment size. This results in a maximal processor usage determined by the ratio of outer to inner fragment size. This problem holds not for offline processing. As an alternative, the asynchronous double-buffer plugin `dbasync` (section ??) can be used, which processes the double-buffered signal in a separate thread. That plugin should be preferred for real-time processing. If the inner thread should only be used for signal analysis, please refer to the plugin `analysispath` (section 16.2).

16.3.0.3 Supported domains

The MHA plugin `db` supports these signal domains:

- waveform to waveform

16.3.0.4 Categories

signalflow

16.3.0.5 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
plugin_name	string	Plugin name	
fragsize	int	fragment size of client plugin Range: [0,]	200

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

16.4 delay

Delay line

16.4.0.1 Supported domains

The MHA plugin `delay` supports these signal domains:

- waveform to waveform

16.4.0.2 Categories

signalflow

16.4.0.3 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
delay	vector<int>	delay in samples, one entry for each channel Range: [0,[[0 0]

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

16.5 fader_wave

Apply level

16.5.0.1 Supported domains

The MHA plugin `fader_wave` supports these signal domains:

- waveform to waveform

16.5.0.2 Categories

signalflow gain

16.5.0.3 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
gain	vector<float>	Gain (linear)	[1]
ramplen	float	Length of hanning ramp at gain changes in seconds Range: [0,]	0

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftlen	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftlen	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

16.6 matrixmixer

Matrix mixer plugin, can mix multiple input channels into any number of output channels with configurable weights.

16.6.0.1 Detailed description

The `matrixmixer` plugin can combine the signal from multiple input channels into any number of output channels, with defined mixing weights.

Example: To combine the two channels of a stereo signal into a single (mono) channel, configure the `matrixmixer` plugin configuration variable `m` as

```
m = [[1.0 1.0]]
```

which causes the first and the second channel to be multiplied with a weight of 1 before they are mixed (by adding them together) to form a single output channel.

It is also possible to mix the channels with weights different from 1:

```
m = [[1 0.5]]
```

This attenuates the second channel by multiplying all samples in that channel with 0.5 before mixing it with the first channel. The configuration variable `m` expects a matrix of float values. The examples above showed a matrix with only one row, which resulted in only one output channel being produced by the `matrixmixer` plugin. To produce more output channels, more rows (separated by semicolons)² can be specified for matrix `m`:

```
m = [[1 0]; [0 1]]
```

This is the identity matrix for two channels. This matrix does not change the signal.

The following setting demonstrates how `matrixmixer` can be used to change the order of audio channels in a multi-channel signal. This example swaps the first two channels:

```
m = [[0 1]; [1 0]]
```

The next setting creates a 4-channel signal output from a stereo signal, where the first two channels are the original stereo channels, the third is the sum of the two stereo channels, and the fourth output channel is the difference of the two stereo channels³:

```
m = [[0 1]; [1 0]; [1 1]; [1 -1]]
```

The following example duplicates a single input channel to two output channels:

```
m = [[1]; [1]]
```

To summarize, you need to configure the variable `m` with a matrix with float values. The matrix needs to have as many columns as the `matrixmixer` receives input channels, and as many rows as you want `matrixmixer` to produce output channels.

Example configurations and example input files are contained in the `matrixmixer` examples directory. Please refer to the README file in this directory for an explanation of the different examples.

A matlab/octave test exercising the `matrixmixer` plugin in six different configurations can be found in the `mhatest` directory in file `test_matrixmixer.m`. This test file is executed together with the other system-level tests when invoking `make test`.

16.6.0.2 Supported domains

The MHA plugin `matrixmixer` supports these signal domains:

- waveform to waveform
- spectrum to spectrum

²In openMHA configuration, a matrix is specified as a vector of vectors, where the subsequent row vectors are separated by semicolons. For details, refer to the subsection on multidimensional variables in the openMHA application manual.

³The combination of the sum and the difference of the two channels of a stereo signal is known as the mid-side signal and used for stereo transmission in FM radio. We combine it here with the original stereo signal for the sole purpose of demonstrating the creation of more output channels than input channels with the `matrixmixer` plugin.

16.6.0.3 Categories

signalflow mixing panning

16.6.0.4 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
m	matrix<float>	Mixer matrix, one row vector for each output channel. The number of columns must match the number of input channels.	[[1 0];[0 1]]

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

16.7 mhachain

MHA Chain

16.7.0.1 Detailed description

Load a sequence of plugins. During processing, the signal is passed from plugin to plugin, and may change its domain or dimension.

If profiling is switched on, the cumulative time spent in the processing callback of each plugin is stored in a monitor variable.

The complete chain can be replaced by other algorithms during run-time if the default configuration is valid for processing and if the output domain or dimension does not change by replacing the chain.

16.7.0.2 Supported domains

The MHA plugin `mhachain` supports these signal domains:

- waveform to waveform
- waveform to spectrum
- spectrum to waveform
- spectrum to spectrum

16.7.0.3 Categories

signalflow

16.7.0.4 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>use_profiling</code>	bool	use profiling method	no
<code>algos</code>	vector<string>	list of plugins	[]

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftl</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftl</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

16.8 resampling

Synchronous resampling plugin.

16.8.0.1 Detailed description

A bridge type resampling plugin. The signal is converted to target sampling rate and fragment size. The converted signal is processed by the child plugin. The processed signal is then converted back to the original sampling rate and fragment size. The input data is buffered, and the data is processed when enough samples are available.

Please note that double buffering adds an extra delay of the audio stream. If both fragment sizes are identical, the double buffering is bypassed.

16.8.0.2 Warning:

A synchronous resampling ringbuffer such as this causes varying computational loads in the outer processing buffer. It is therefore not real-time safe.

16.8.0.3 Supported domains

The MHA plugin `resampling` supports these signal domains:

- waveform to waveform

16.8.0.4 Categories

signalflow

16.8.0.5 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>plugin_name</code>	string	Plugin name	
<code>srate</code>	float	sampling rate of client plugin Range:]0,]	44100
<code>fragsize</code>	int	fragment size of client plugin Range:]0,]	200
<code>nyquist_ratio</code>	float	lowpass filter cutoff frequency / lower nyquist frequency Range:]0,]	0.85
<code>irslen_outer2inner</code>	float	filter lenth 1st resampling / sec Range:]0,]	0.0007
<code>irslen_inner2outer</code>	float	filter lenth 2nd resampling / sec Range:]0,]	0.0007

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftlen</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	<code>int</code>	Number of audio channels	(monitor)
<code>domain</code>	<code>string</code>	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	<code>int</code>	Fragment size of waveform data	(monitor)
<code>wndlen</code>	<code>int</code>	Window length of spectral data	(monitor)
<code>fftl</code>	<code>int</code>	FFT length of spectral data	(monitor)
<code>srate</code>	<code>float</code>	Sampling rate in Hz	(monitor)

16.9 route

Signal router plugin.

Arguments are the input signal source names (AC variables) followed by a colon, followed by the channel number, starting at zero. Empty names correspond to the direct input.

An AC variable will be created if the AC output dimension is not zero. Example: `out = [:0 :1 x:0 x:1]` `ac = [:2 :3]` returns a four channel output signal containing first two direct input channels, and the first two channels of the AC variable "x". An AC variable is created with the third and fourth channel of the direct input.

16.9.0.1 Supported domains

The MHA plugin `route` supports these signal domains:

- waveform to waveform
- spectrum to spectrum

16.9.0.2 Categories

signalflow

16.9.0.3 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	<code>parser</code>	Input configuration	(see below)
<code>mhaconfig_out</code>	<code>parser</code>	Output configuration	(see below)
<code>out</code>	<code>vector<string></code>	direct output	<code>[]</code>
<code>ac</code>	<code>vector<string></code>	AC output	<code>[]</code>

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

16.10 split

Split audio signal into channel groups and have them processed by different plugins in parallel

16.10.0.1 Detailed description

The plugin 'split' takes a multi-channel input signal and splits it up into separate chains of groups of channels. After processing of each chain, the output channels are merged into a multi-channel output signal. The order of the audio channels is left unchanged.

16.10.0.2 Supported domains

The MHA plugin `split` supports these signal domains:

- waveform to waveform
- waveform to spectrum
- spectrum to waveform
- spectrum to spectrum

16.10.0.3 Categories

signalflow

16.10.0.4 Configuration variables

Name	Type	Description	Default
algorithms	vector<string>	List of plugins which process the different groups of audio channels.	[]
channels	vector<int>	Number of channels processed by the respective plugins. Range: [0,[[]
thread_platform	keyword_list	Thread platform to use. posix is the native linux thread platform, win32 is the native thread platform on windows, dummy means that all processing is performed in a single thread. Range: [posix win32 dummy]	posix
worker_thread_scheduler	keyword_list	Scheduler used for worker threads. Only used for posix threads. Suggested setting is: The same as present in framework_thread_scheduler after prepare. Range: [SCHED_OTHER SCHED_RR SCHED_FIFO]	SCHED_OTHER
worker_thread_priority	int	Priority assigned to worker threads. Suggested setting is: The same as present in framework_thread_priority after preparing the MHA. The default thread priority given here is invalid. No attempt will be made to set the priority of the threads if this value remains unchanged.	999999999
framework_thread_scheduler	string	Scheduler used by the framework's processing thread. Only valid after first signal processing callback.	(monitor)
framework_thread_priority	int	Priority of the frameworks processing thread. Only valid after first signal processing callback.	(monitor)
delay	bool	activates parallel processing of plugins at the cost of one block of additional delay	no

17 Uncategorized plugins

17.1 cpuload

cpu load generator. CPU load is proportional to number of channels, number of frames, and factor

17.1.0.1 Supported domains

The MHA plugin `cpuload` supports these signal domains:

- waveform to waveform
- spectrum to spectrum

17.1.0.2 Categories

other

17.1.0.3 Configuration variables

Name	Type	Description	Default
mhaconfig_in	parser	Input configuration	(see below)
mhaconfig_out	parser	Output configuration	(see below)
factor	float	cpu load factor. Values > 1 increase cpu load, values < 1 decrease it Range: [0,]	1
use_sine	bool	Whether to use the sine function. If not, table interpolation will be used	yes

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
channels	int	Number of audio channels	(monitor)
domain	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
fragsize	int	Fragment size of waveform data	(monitor)
wndlen	int	Window length of spectral data	(monitor)
fftl	int	FFT length of spectral data	(monitor)
srate	float	Sampling rate in Hz	(monitor)

17.2 delaysum

delay and sum plugin. Mixes all channels into a single output channel after applying channel-specific weights and delays.

17.2.0.1 Detailed description

This plugin allows to delay and sum multiple input channels using individual delays and weights. After each channel is delayed it is multiplied with the given weight and then added to the single output channel.

17.2.0.2 Supported domains

The MHA plugin `delaysum` supports these signal domains:

- waveform to waveform

17.2.0.3 Categories

other

17.2.0.4 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>weights</code>	vector<float>	weights of channels. Each entry is multiplied to its respective channel. Needs one entry per channel.	[1 1]
<code>delay</code>	vector<int>	delay in number of frames. The nth channel is delayed by the number of frames found in the nth entry. Range: [0,]	[0 0]

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftlen</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftlen</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

17.3 fader_spec

fader

17.3.0.1 Supported domains

The MHA plugin `fader_spec` supports these signal domains:

- spectrum to spectrum

17.3.0.2 Categories

other

17.3.0.3 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>tau</code>	float	fader duration in seconds Range: [0,[1
<code>gains</code>	vector<float>		[1 1]

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftl</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftl</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

17.4 gain

Gain plugin:

Apply a gain to each channel

17.4.0.1 Supported domains

The MHA plugin `gain` supports these signal domains:

- waveform to waveform
- spectrum to spectrum

17.4.0.2 Categories

other

17.4.0.3 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>min</code>	float	Minimal gain Range: [,0]	-16
<code>max</code>	float	Maximal gain Range: [0,]	16
<code>bbgain</code>	float	Broadband gain in dB (setting of broad band gain overrides band gain) Range: [-16,16]	0
<code>gains</code>	vector<float>	Gain in dB Range: [-16,16]	[0]

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftl</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftl</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

17.5 noisePowProposedScale

noise power estimator after Gerkmann (2012)

Copyright © 2011 Author: Timo Gerkmann and Richard Hendriks Royal Institute of Technology (KTH) Delft university of Technology

17.5.0.1 Supported domains

The MHA plugin `noisePowProposedScale` supports these signal domains:

- spectrum to spectrum

17.5.0.2 Categories

other

17.5.0.3 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>alphaPH1mean</code>	float	low pass filter coefficient for PH1mean Range: [0,1[0.9
<code>alphaPSD</code>	float	low pass filter coefficient for PSD Range: [0,1[0.8
<code>q</code>	float	a priori probability of speech presence Range: [0,1]	0.5
<code>xiOptDb</code>	float	optimal fixed a priori SNR for SPP estimation	15

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftl</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftl</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

17.6 wavrec

wav file recorder

17.6.0.1 Supported domains

The MHA plugin `wavrec` supports these signal domains:

- waveform to waveform

17.6.0.2 Categories

other

17.6.0.3 Configuration variables

Name	Type	Description	Default
<code>mhaconfig_in</code>	parser	Input configuration	(see below)
<code>mhaconfig_out</code>	parser	Output configuration	(see below)
<code>fifolen</code>	int	Length of FIFO in samples Range: [2,]	262144
<code>minwrite</code>	int	Minimal write length (must be less then <code>fifolen</code>) Range: [1,]	65536
<code>prefix</code>	string	Path (including path delimiter) and file prefix	
<code>use_date</code>	bool	Use date and time (yes), or only prefix (no)	yes
<code>record</code>	bool	Record session. Each write access with argument "yes" will start a new file with current time and date as a name.	no

Variables of sub-parser `mhaconfig_in`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftlen</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

Variables of sub-parser `mhaconfig_out`:

Name	Type	Description	Default
<code>channels</code>	int	Number of audio channels	(monitor)
<code>domain</code>	string	Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)	(monitor)
<code>fragsize</code>	int	Fragment size of waveform data	(monitor)
<code>wndlen</code>	int	Window length of spectral data	(monitor)
<code>fftlen</code>	int	FFT length of spectral data	(monitor)
<code>srate</code>	float	Sampling rate in Hz	(monitor)

References

Index

AC-variables (plugin category)

- ac2wave, [1](#)
- acConcat_wave, [2](#)
- acmon, [3](#)
- acPooling_wave, [4](#)
- acsave, [6](#)
- acSteer, [7](#)
- save_spec, [9](#)
- save_wave, [10](#)

- ac2wave (MHA plugin), [1](#)
- acConcat_wave (MHA plugin), [2](#)
- acmon (MHA plugin), [3](#)
- acPooling_wave (MHA plugin), [4](#)
- acsave (MHA plugin), [6](#)
- acSteer (MHA plugin), [7](#)
- acTransform_wave (MHA plugin), [15](#)
- adaptive (plugin category)

- lpc, [11](#)
- lpc_bl_predictor, [12](#)
- lpc_burg-lattice, [13](#)

- adm (MHA plugin), [18](#)
- altplugs (MHA plugin), [70](#)
- analysis (plugin category)
 - acTransform_wave, [15](#)
 - droptect, [16](#)
- analysispath (MHA plugin), [71](#)

- beamforming (plugin category)
 - adm, [18](#)
 - steerbf, [19](#)

- binaural (plugin category)
 - coherence, [21](#)

- coherence (MHA plugin), [21](#)
- combinechannels (MHA plugin), [35](#)
- compression (plugin category)
 - dc, [44](#)
 - dc_simple, [45](#)
- compressor (plugin category)
 - multibandcompressor, [48](#)
- core (plugin category)
 - identity, [23](#)
- cpupload (MHA plugin), [83](#)

- db (MHA plugin), [72](#)
- dc (MHA plugin), [44](#)
- dc_simple (MHA plugin), [45](#)
- delay (MHA plugin), [74](#)
- delaysum (MHA plugin), [84](#)

directional (plugin category)

- doasvm_classification, [24](#)
- doasvm_feature_extraction, [25](#)

- doasvm_classification (MHA plugin), [24](#)
- doasvm_feature_extraction (MHA plugin), [25](#)
- downsample (MHA plugin), [68](#)
- droptect (MHA plugin), [16](#)

example (plugin category)

- example1, [27](#)
- example2, [28](#)
- example3, [28](#)
- example4, [29](#)
- example5, [30](#)
- example6, [31](#)

- example1 (MHA plugin), [27](#)
- example2 (MHA plugin), [28](#)
- example3 (MHA plugin), [28](#)
- example4 (MHA plugin), [29](#)
- example5 (MHA plugin), [30](#)
- example6 (MHA plugin), [31](#)

- fader_spec (MHA plugin), [85](#)
- fader_wave (MHA plugin), [75](#)

feedback (plugin category)

- fshift_hilbert, [32](#)
- prediction_error, [33](#)

- fftfilterbank (MHA plugin), [36](#)

filter (plugin category)

- coherence, [21](#)
- combinechannels, [35](#)
- fftfilterbank, [36](#)
- iirfilter, [39](#)
- nlms_wave, [40](#)
- smoothgains_bridge, [63](#)

- fshift_hilbert (MHA plugin), [32](#)

- gain (MHA plugin), [86](#)

gain (plugin category)

- fader_wave, [75](#)

generator (plugin category)

- noise, [42](#)
- sine, [43](#)

- identity (MHA plugin), [23](#)

- iirfilter (MHA plugin), [39](#)

level (plugin category)

- dc, [44](#)
- dc_simple, [45](#)

- multibandcompressor, 48
- rmslevel, 50
- softclip, 51
- transducers, 52
- lpc (MHA plugin), 11
- lpc_bl_predictor (MHA plugin), 12
- lpc_burg-lattice (MHA plugin), 13
- matrixmixer (MHA plugin), 76
- mhachain (MHA plugin), 78
- mixing (plugin category)
 - matrixmixer, 76
- multibandcompressor (MHA plugin), 48
- multichannel (plugin category)
 - adm, 18
- nlms_wave (MHA plugin), 40
- noise (MHA plugin), 42
- noise (plugin category)
 - timoSmooth, 56
- noise-reduction (plugin category)
 - coherence, 21
- noisePowProposedScale (MHA plugin), 88
- other (plugin category)
 - cpuload, 83
 - delaysum, 84
 - fader_spec, 85
 - gain, 86
 - noisePowProposedScale, 88
 - wavrec, 89
- overlapadd (MHA plugin), 58
- overlapadd (plugin category)
 - overlapadd, 58
 - shadowfilter_begin, 61
 - shadowfilter_end, 62
 - smoothgains_bridge, 63
 - spec2wave, 65
 - wave2spec, 66
- panning (plugin category)
 - matrixmixer, 76
- plugin
 - ac2wave, 1
 - acConcat_wave, 2
 - acmon, 3
 - acPooling_wave, 4
 - acsave, 6
 - acSteer, 7
 - acTransform_wave, 15
 - adm, 18
 - altplugs, 70
 - analysispath, 71
 - coherence, 21
 - combinechannels, 35
 - cpuload, 83
 - db, 72
 - dc, 44
 - dc_simple, 45
 - delay, 74
 - delaysum, 84
 - doasvm_classification, 24
 - doasvm_feature_extraction, 25
 - downsample, 68
 - droptect, 16
 - example1, 27
 - example2, 28
 - example3, 28
 - example4, 29
 - example5, 30
 - example6, 31
 - fader_spec, 85
 - fader_wave, 75
 - fftfilterbank, 36
 - fshift_hilbert, 32
 - gain, 86
 - identity, 23
 - iirfilter, 39
 - lpc, 11
 - lpc_bl_predictor, 12
 - lpc_burg-lattice, 13
 - matrixmixer, 76
 - mhachain, 78
 - multibandcompressor, 48
 - nlms_wave, 40
 - noise, 42
 - noisePowProposedScale, 88
 - overlapadd, 58
 - prediction_error, 33
 - resampling, 79
 - rmslevel, 50
 - route, 81
 - save_spec, 9
 - save_wave, 10
 - shadowfilter_begin, 61
 - shadowfilter_end, 62
 - sine, 43
 - smoothgains_bridge, 63
 - softclip, 51
 - spec2wave, 65
 - split, 82
 - steerbf, 19
 - timoSmooth, 56
 - transducers, 52

- upsample, [69](#)
- wave2spec, [66](#)
- wavrec, [89](#)
- prediction_error (MHA plugin), [33](#)
- reduction (plugin category)
 - timoSmooth, [56](#)
- resample (plugin category)
 - downsample, [68](#)
 - upsample, [69](#)
- resampling (MHA plugin), [79](#)
- rmslevel (MHA plugin), [50](#)
- route (MHA plugin), [81](#)
- save_spec (MHA plugin), [9](#)
- save_wave (MHA plugin), [10](#)
- shadowfilter_begin (MHA plugin), [61](#)
- shadowfilter_end (MHA plugin), [62](#)
- signalflow (plugin category)
 - altplugs, [70](#)
 - analysispath, [71](#)
 - db, [72](#)
 - delay, [74](#)
 - downsample, [68](#)
 - fader_wave, [75](#)
 - matrixmixer, [76](#)
 - mhachain, [78](#)
 - resampling, [79](#)
 - route, [81](#)
 - split, [82](#)
 - upsample, [69](#)
- sine (MHA plugin), [43](#)
- smoothgains_bridge (MHA plugin), [63](#)
- softclip (MHA plugin), [51](#)
- spec2wave (MHA plugin), [65](#)
- split (MHA plugin), [82](#)
- steerbf (MHA plugin), [19](#)
- timoSmooth (MHA plugin), [56](#)
- transducers (MHA plugin), [52](#)
- upsample (MHA plugin), [69](#)
- wave2spec (MHA plugin), [66](#)
- wavrec (MHA plugin), [89](#)