

ONVIF™
PTZ Test Specification
Version 1.02.4
July, 2011

© 2011 by ONVIF, Inc. All rights reserved.

Recipients of this document may copy, distribute, publish, or display this document so long as this copyright notice, license and disclaimer are retained with all copies of the document. No license is granted to modify this document.

THIS DOCUMENT IS PROVIDED "AS IS," AND THE CORPORATION AND ITS MEMBERS AND THEIR AFFILIATES, MAKE NO REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT, OR TITLE; THAT THE CONTENTS OF THIS DOCUMENT ARE SUITABLE FOR ANY PURPOSE; OR THAT THE IMPLEMENTATION OF SUCH CONTENTS WILL NOT INFRINGE ANY PATENTS, COPYRIGHTS, TRADEMARKS OR OTHER RIGHTS.

IN NO EVENT WILL THE CORPORATION OR ITS MEMBERS OR THEIR AFFILIATES BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES, ARISING OUT OF OR RELATING TO ANY USE OR DISTRIBUTION OF THIS DOCUMENT, WHETHER OR NOT (1) THE CORPORATION, MEMBERS OR THEIR AFFILIATES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR (2) SUCH DAMAGES WERE REASONABLY FORESEEABLE, AND ARISING OUT OF OR RELATING TO ANY USE OR DISTRIBUTION OF THIS DOCUMENT. THE FOREGOING DISCLAIMER AND LIMITATION ON LIABILITY DO NOT APPLY TO, INVALIDATE, OR LIMIT REPRESENTATIONS AND WARRANTIES MADE BY THE MEMBERS AND THEIR RESPECTIVE AFFILIATES TO THE CORPORATION AND OTHER MEMBERS IN CERTAIN WRITTEN POLICIES OF THE CORPORATION.

Revision History

| Ver. | Date | Description |
|--------|----------------|---------------------------------------|
| 1.02.4 | 29th/Jul, 2011 | First issue of PTZ Test Specification |
| | | |

Table of Contents

| | | |
|-------|--|----|
| 1 | Introduction | 6 |
| 1.1 | Scope | 6 |
| 1.1.1 | PTZ Control..... | 6 |
| 2 | Terms and Definitions | 8 |
| 2.1 | Definitions..... | 8 |
| 2.2 | Abbreviations..... | 8 |
| 3 | Test Overview..... | 9 |
| 3.1 | Test Setup | 9 |
| 3.1.1 | Network Configuration for DUT..... | 9 |
| 3.2 | Prerequisites | 10 |
| 3.3 | Requirement Level | 10 |
| 3.4 | Test Policy | 10 |
| 3.4.1 | PTZ Control..... | 10 |
| 4 | PTZ Control Test Cases | 12 |
| 4.1 | PTZ Node | 12 |
| 4.1.1 | PTZ NODES..... | 12 |
| 4.1.2 | PTZ NODE | 13 |
| 4.1.3 | SOAP FAULT MESSAGE | 15 |
| 4.2 | PTZ Configuration | 16 |
| 4.2.1 | PTZ CONFIGURATIONS..... | 16 |
| 4.2.2 | PTZ CONFIGURATION | 17 |
| 4.2.3 | PTZ CONFIGURATION OPTIONS | 19 |
| 4.2.4 | PTZ SET CONFIGURATION | 21 |
| 4.2.5 | PTZ CONFIGURATIONS AND PTZ CONFIGURATION CONSISTENCY | 23 |
| 4.2.6 | PTZ CONFIGURATIONS AND PTZ NODES CONSISTENCY | 25 |
| 4.2.7 | PTZ CONFIGURATIONS AND PTZ CONFIGURATION OPTIONS CONSISTENCY | 27 |
| 4.2.8 | SOAP FAULT MESSAGE | 29 |
| 4.3 | Move Operation..... | 30 |
| 4.3.1 | PTZ ABSOLUTE MOVE..... | 30 |
| 4.3.2 | SOAP FAULT MESSAGE | 34 |
| 4.3.3 | PTZ RELATIVE MOVE | 36 |
| 4.3.4 | PTZ CONTINUOUS MOVE | 39 |

| | | |
|---------|---|----|
| 4.3.5 | PTZ CONTINUOUS MOVE & STOP | 42 |
| 4.4 | Preset operations | 46 |
| 4.4.1 | SET AND GET PRESET | 46 |
| 4.4.2 | GOTO PRESET | 50 |
| 4.4.3 | REMOVE PRESET | 52 |
| 4.5 | Home Position operations | 55 |
| 4.5.1 | HOME POSITION OPERATIONS (CONFIGURABLE) | 55 |
| 4.5.2 | HOME POSITION OPERATIONS (FIXED) | 58 |
| 4.6 | Auxiliary operations | 61 |
| 4.6.1 | SEND AUXILIARY COMMAND | 61 |
| 4.7 | Predefined PTZ spaces | 63 |
| 4.7.1 | Absolute Position Spaces | 63 |
| 4.7.1.1 | GENERIC PAN/TILT POSITION SPACE | 63 |
| 4.7.1.2 | GENERIC ZOOM POSITION SPACE | 65 |
| 4.7.2 | Relative Translation Spaces | 67 |
| 4.7.2.1 | GENERIC PAN/TILT TRANSLATION SPACE | 67 |
| 4.7.2.2 | GENERIC ZOOM TRANSLATION SPACE | 69 |
| 4.7.3 | Continuous Velocity Spaces | 71 |
| 4.7.3.1 | GENERIC PAN/TILT VELOCITY SPACE | 71 |
| 4.7.3.2 | GENERIC ZOOM VELOCITY SPACE | 73 |
| 4.7.4 | Speed Spaces | 75 |
| 4.7.4.1 | GENERIC PAN/TILT SPEED SPACE | 75 |
| 4.7.4.2 | GENERIC ZOOM SPEED SPACE | 77 |
| Annex A | | 80 |
| A.1 | Media Profile Configuration for PTZ Control | 80 |

1 Introduction

The goal of the ONVIF test specification set is to make it possible to realize fully interoperable IP physical security implementations from different vendors. The set of ONVIF test specification describes the test cases needed to verify the [ONVIF Core] requirements. It also describes the test framework, test setup, pre-requisites, test policies needed for the execution of the described test cases.

This ONVIF PTZ Test Specification acts as a supplementary document to the [ONVIF Core], clarifying the requirements wherever needed. And also this specification acts as an input document to the development of test tool which will be used to test the ONVIF device implementation conformance towards the [ONVIF Core]. This test tool is referred as Network Video Client (NVC) hereafter.

1.1 Scope

This ONVIF PTZ Test Specification defines and regulates the conformance testing procedure for the ONVIF conformant devices. Conformance testing is meant to be functional black-box testing. The objective of this specification to provide test cases to test individual requirements of ONVIF devices according to ONVIF PTZ service(s) which is defined in [ONVIF Core].

The principal intended purposes are:

1. Provide self-assessment tool for implementations.
2. Provide comprehensive test suite coverage for [ONVIF Core].

This specification does not address the following

1. Product use cases and non-functional (performance and regression) testing.
2. SOAP Implementation Interoperability test i.e. Web Service Interoperability Basic Profile version 2.0 (WS-I BP 2.0).
3. Network protocol implementation Conformance test for HTTP, HTTPS, RTP and RTSP protocol.
4. Wi-Fi Conformance test

The set of ONVIF Test Specification will not cover the complete set of requirements as defined in [ONVIF Core]; instead it would cover subset of it. The scope of this specification is to derive all the normative requirements of [ONVIF Core] which is related to ONVIF PTZ service and some of the optional requirements.

This ONVIF PTZ Test Specification cover ONVIF PTZ service which is a functional block of [ONVIF Core]. The following section describes the brief overview of and scope of each functional block.

1.1.1 PTZ Control

PTZ Control covers the test cases for the verification of the PTZ service as mentioned in [ONVIF Core].

Refer to Table 1 for PTZ Control Commands Under Test.

Table 1 PTZ Control Commands Under Test

| Feature | Messages |
|-----------------------------|--|
| PTZ Node | GetNodes GetNode |
| PTZ Configuration | GetConfigurations GetConfiguration GetConfigurationOptions SetConfiguration |
| Move Operations | AbsoluteMove RelativeMove ContinuousMove Stop GetStatus |
| Preset operations | SetPreset GetPresets GotoPreset RemovePreset |
| Home Position operations | GotoHomePosition SetHomePosition |
| Auxiliary operations | SendAuxiliaryCommand |
| Predefined PTZ spaces | AbsolutePositionSpaces RelativeTranslationSpaces ContinuousVelocitySpaces SpeedSpaces |

2 Terms and Definitions

2.1 Definitions

This section defines terms that are specific to the ONVIF PTZ Service and tests. For a list of applicable general terms and definitions, please see [ONVIF Base Test].

| | |
|-------------|---|
| Pan | Horizontal movement or rotation of a camera or device. |
| Tilt | Vertical movement or rotation of a camera or device. |
| Zoom | Adjustment of the focal length of a zoom lens, causing the subject, scene to be brought closer or made to recede. |
| PTZ | The capability of a camera to pan, tilt, and zoom. |

2.2 Abbreviations

This section describes abbreviations used in this document.

| | |
|-----|---------------|
| PTZ | Pan/Tilt/Zoom |
|-----|---------------|

3 Test Overview

This section describes about the test setup and prerequisites needed, and the test policies that should be followed for test case execution.

3.1 Test Setup

3.1.1 Network Configuration for DUT

The generic test configuration for the execution of test cases defined in this document is as shown below (Figure 1)

Based on the individual test case requirements, some of the entities in the below setup may not be needed for the execution of those corresponding test cases.

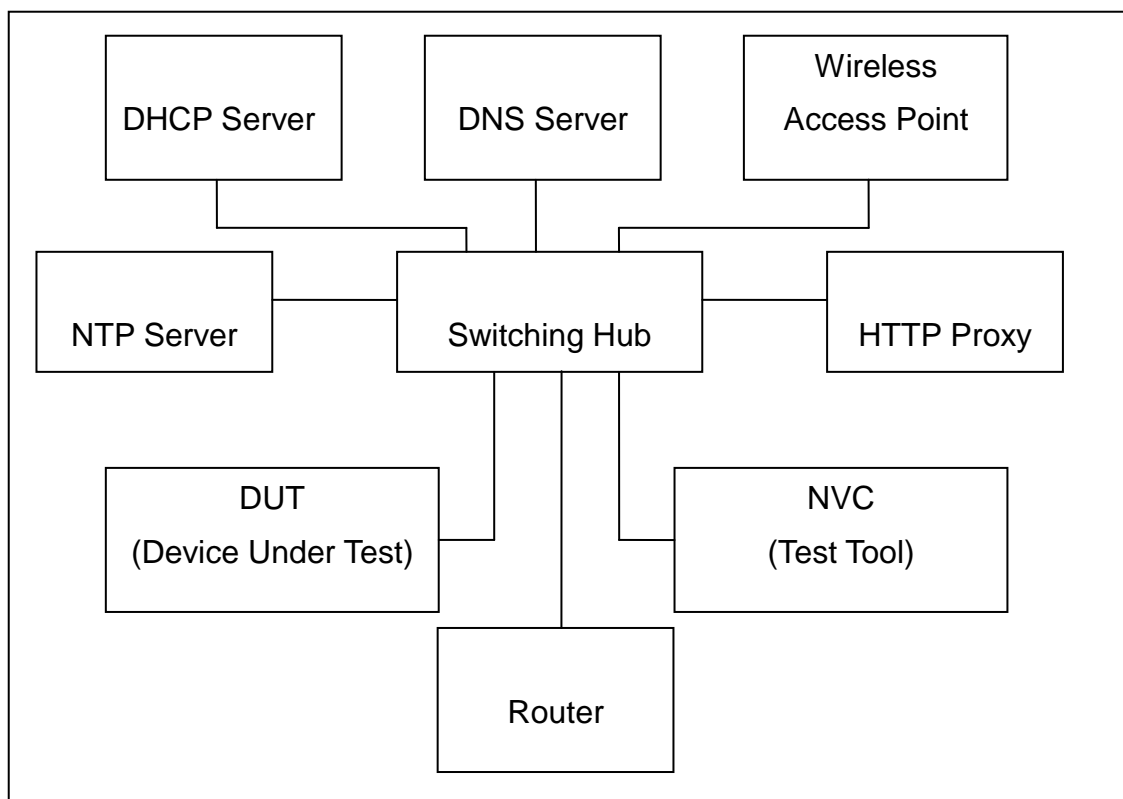


Figure 1: Test Configuration for DUT

DUT: ONVIF device to be tested. Hereafter, this is referred to as DUT (Device Under Test).

NVC Test Tool: Tests are executed by this system and it controls the behaviour of the DUT. It handles both expected and unexpected behaviour.

HTTP Proxy: provides facilitation in case of RTP and RTSP tunneling over HTTP.

Wireless Access Point: provides wireless connectivity to the devices that support wireless connection.

DNS Server: provides DNS related information to the connected devices.

DHCP Server: provides IPv4 Address to the connected devices.

NTP Server: provides time synchronization between NVC and DUT.

Switching Hub: provides network connectivities among all the test equipments in the test environment. All devices should be connected to the Switching Hub.

Router: provides router advertisements for IPv6 configuration.

3.2 Prerequisites

The pre-requisites for executing the test cases described in this Test Specification are

- The DUT must be configured with an IPv4 address.
- The DUT must be IP reachable [in the test configuration].
- The DUT must be able to be discovered by the NVC Test Tool.
- The DUT must be configured with the time i.e. manual configuration of UTC time and if NTP is supported by DUT then NTP time must be synchronized with NTP Server.
- The DUT time and NVC Test tool time must be synchronized with each other either manually or by common NTP server.

3.3 Requirement Level

The key words "MUST", "MUST NOT", "REQUIRED", "SHALL", "SHALL NOT", "SHOULD", "SHOULD NOT", "RECOMMENDED", "MAY" and "OPTIONAL" in this document are to be interpreted as described in [RFC 2119]. Additionally, this specification describes the key words "MUST IF SUPPORTED", "SHOULD IF SUPPORTED", "MUST IF IMPLEMENTED [A]", "MUST IF SUPPORTED [A] & IMPLEMENTED [B]", "SHOULD IF IMPLEMENTED [A]", "SHOULD IF SUPPORTED [A] & IMPLEMENTED [B]". For the details on how the requirement levels affect the test cases described in this specification, refer to [ONVIF Test].

3.4 Test Policy

This section describes the test policies specific to the test case execution of each functional block.

The DUT (NVT) must adhere to the test policies defined in this section.

3.4.1 PTZ Control

- To start with NVC shall check device capabilities of PTZ. If the DUT doesn't have PTZ capability, this test case will skip.
- The device under test must support at-least one media profile with PTZ configuration. Moreover, the DUT must include video source configuration and video encoder configuration in the same media profile to see the video and to confirm movement. A PTZ configuration must include a PTZ node.
- Poor PTZ performance test is outside the scope of the ONVIF Test Specification.
- In certain test cases, NVC may register new preset position into PTZ configuration. In such cases, the test procedure will delete those modified configuration at the end of the test procedure.

- If DUT does not support PTZ Configuration commands (ex. GetConfigurations, AbsoluteMove) then it MUST respond to the request with SOAP 1.2 fault message (ActionNotSupported).

Please refer to Section 4 for PTZ Configuration Test Cases

4 PTZ Control Test Cases

4.1 PTZ Node

4.1.1 PTZ NODES

Test Label: PTZ Nodes Validation

Test Case ID: PTZ-1-1-1

ONVIF Core Specification Coverage: GetNodes

Command Under Test: GetNodes

WSDL Reference: ptz.wsdl


Requirement Level: MUST IF SUPPORTED (PTZ)

Test Purpose: To verify GetNodes command and return all PTZ Nodes available on the device.

Pre-Requisite: PTZ is supported by DUT, and NVC gets the ptz service entry point using the GetCapabilities command.

Test Configuration: NVC and DUT

Test Sequence:

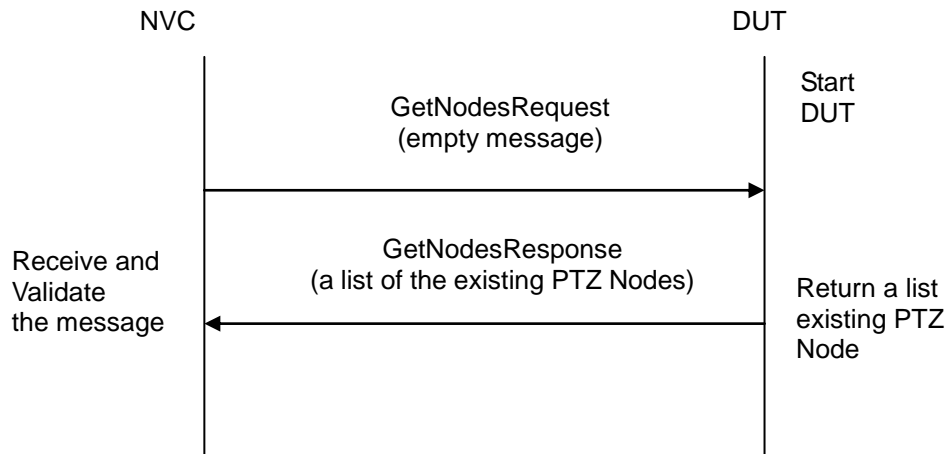

Test Procedure:

1. Start an NVC.
2. Start an DUT.
3. NVC will invoke GetNodesRequest message to retrieve the list of PTZ nodes supported by DUT.
4. Verify that the DUT returns at-least one PTZNode in the GetNodesResponse message.
5. Validate PTZNodes of GetNodesResponse message (check mandatory element of SupportedPTZSpaces, MaximumNumberOfPresets, and HomeSupported.)

Test Result:

PASS –

DUT passes all assertions.

FAIL –

The DUT did not send GetNodesResponse message.

The DUT did not send valid GetNodesResponse message.

The DUT did not send GetNodesResponse message with at-least one PTZNode.

4.1.2 PTZ NODE

Test Label: PTZ Node Validation

Test Case ID: PTZ-1-1-2

ONVIF Core Specification Coverage: GetNode

Command Under Test: GetNode

WSDL Reference: ptz.wsdl


Requirement Level: MUST IF SUPPORTED (PTZ)

Test Purpose: To verify GetNode command and return the properties of the requested PTZ Node, if it exists.

Pre-Requisite: PTZ is supported by DUT, and NVC gets the ptz service entry point by GetCapabilities command.

Test Configuration: NVC and DUT

Test Sequence:

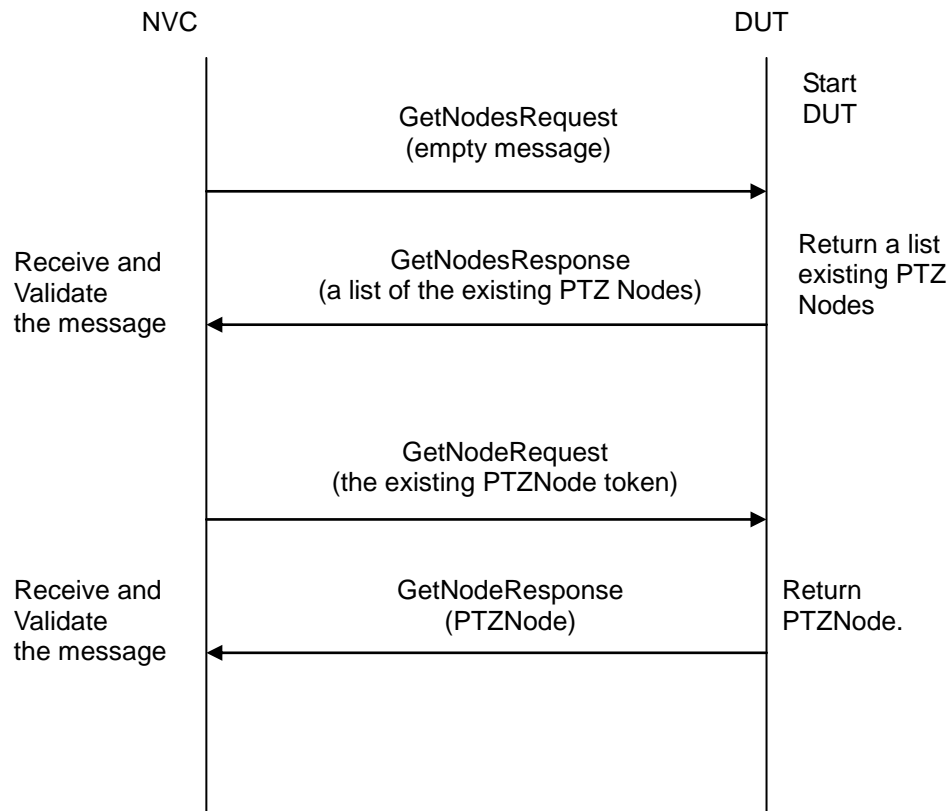

Test Procedure:

1. Start an NVC.
2. Start an DUT.
3. NVC will invoke `GetNodesRequest` message to retrieve a list of the existing PTZNodes.
4. Verify that DUT returns at-least one PTZNode in the `GetNodesResponse` message.
5. NVC will invoke `GetNodeRequest` message (NodeToken of existing PTZNode) to retrieve the specific PTZNode
6. Verify that DUT returns a PTZNode in `GetNodeResponse` message.
7. Validate PTZNode of `GetNodeResponse` message (check mandatory element of SupportedPTZSpaces, MaximumNumberOfPresets, and HomeSupported.)

Test Result:

PASS –

DUT passes all assertions.

FAIL –

The DUT did not send `GetNodesResponse` message.

The DUT did not send valid GetNodesResponse message.

The DUT did not send GetNodesResponse message with at-least one PTZNode.

The DUT did not send GetNodeResponse message.

The DUT did not send valid GetNodeResponse message.

4.1.3 SOAP FAULT MESSAGE

Test Label: PTZ Soap Fault Message for Invalid GetNode Request Message

Test Case ID: PTZ-1-1-3

ONVIF Core Specification Coverage: GetNode

Command Under Test: GetNode

WSDL Reference: ptz.wsdl


Requirement Level: SHOULD IF SUPPORTED (PTZ)

Test Purpose: To verify that DUT generates a SOAP fault message to invalid GetNode message.

Pre-Requisite: PTZ is supported by DUT, and NVC gets the ptz service entry point by GetCapabilities command.

Test Configuration: NVC and DUT

Test Sequence:

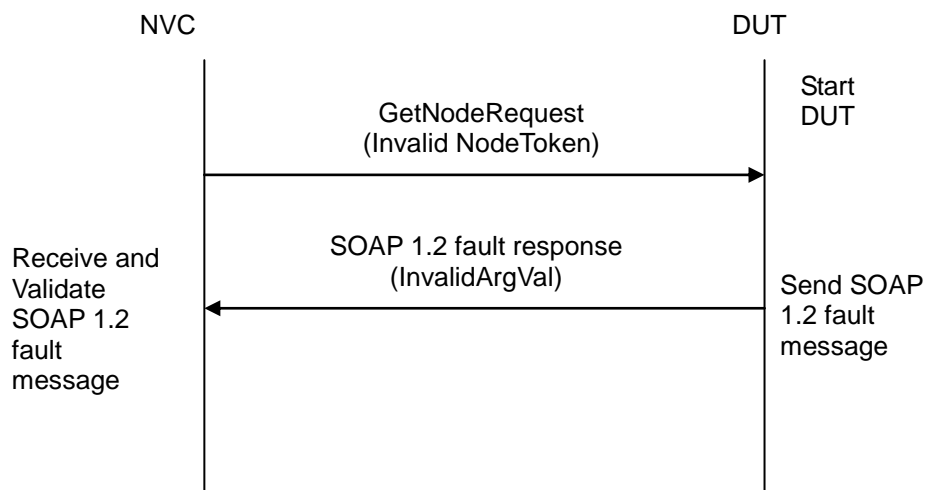

Test Procedure:

1. Start an NVC.
2. Start an DUT.
3. NVC will invoke GetNodeRequest message with invalid NodeToken (not NodeToken of existing PTZNode. For example, **NodeToken** ReferenceToken = “xyz”).
4. Verify the DUT generates a SOAP 1.2 fault message (**InvalidArgVal/NoEntity**).

Test Result:**PASS –**

DUT passes all assertions.

FAIL –

The DUT did not send SOAP 1.2 fault message.

The DUT did not send correct SOAP 1.2 fault message (fault code, namespace, etc.).

4.2 PTZ Configuration**4.2.1 PTZ CONFIGURATIONS**

Test Label: PTZ Configurations Validation

Test Case ID: PTZ-2-1-1

ONVIF Core Specification Coverage: GetConfigurations

Command Under Test: GetConfigurations

WSDL Reference: ptz.wsdl


Requirement Level: MUST IF SUPPORTED (PTZ)

Test Purpose: To retrieve DUT PTZ Configurations setting.

Pre-Requisite: PTZ is supported by DUT, and NVC gets the ptz service entry point by GetCapabilities command.

Test Configuration: NVC and DUT

Test Sequence:

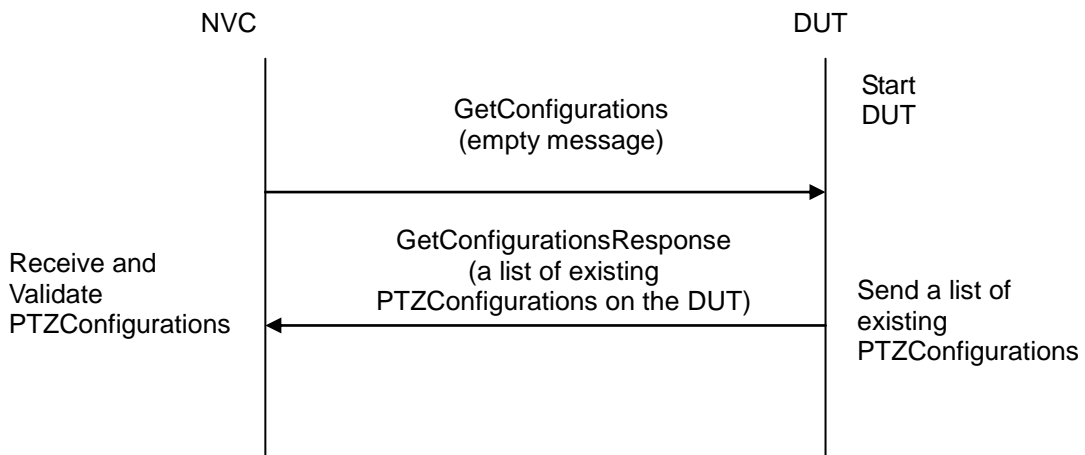

Test Procedure:

1. Start an NVC.
2. Start an DUT.
3. NVC will invoke GetConfigurationsRequest message to retrieve a list of existing PTZConfigurations on the DUT.
4. Verify that the DUT returns at-least one PTZConfiguration in the GetConfigurationsResponse message.

Test Result:

PASS –

DUT passes all assertions.

FAIL –

The DUT did not send GetConfigurationsResponse message.

The DUT did not send valid GetConfigurationsResponse message.

The DUT did not send GetConfigurationsResponse message with at least one PTZConfiguration.

4.2.2 PTZ CONFIGURATION

Test Label: PTZ Configuration Validation

Test Case ID: PTZ-2-1-2

ONVIF Core Specification Coverage: GetConfiguration

Command Under Test: GetConfiguration

WSDL Reference: ptz.wsdl


Requirement Level: MUST IF SUPPORTED (PTZ)

Test Purpose: To retrieve DUT PTZ Configuration setting.

Pre-Requisite: PTZ is supported by DUT, and NVC gets the ptz service entry point by GetCapabilities command.

Test Configuration: NVC and DUT

Test Sequence:

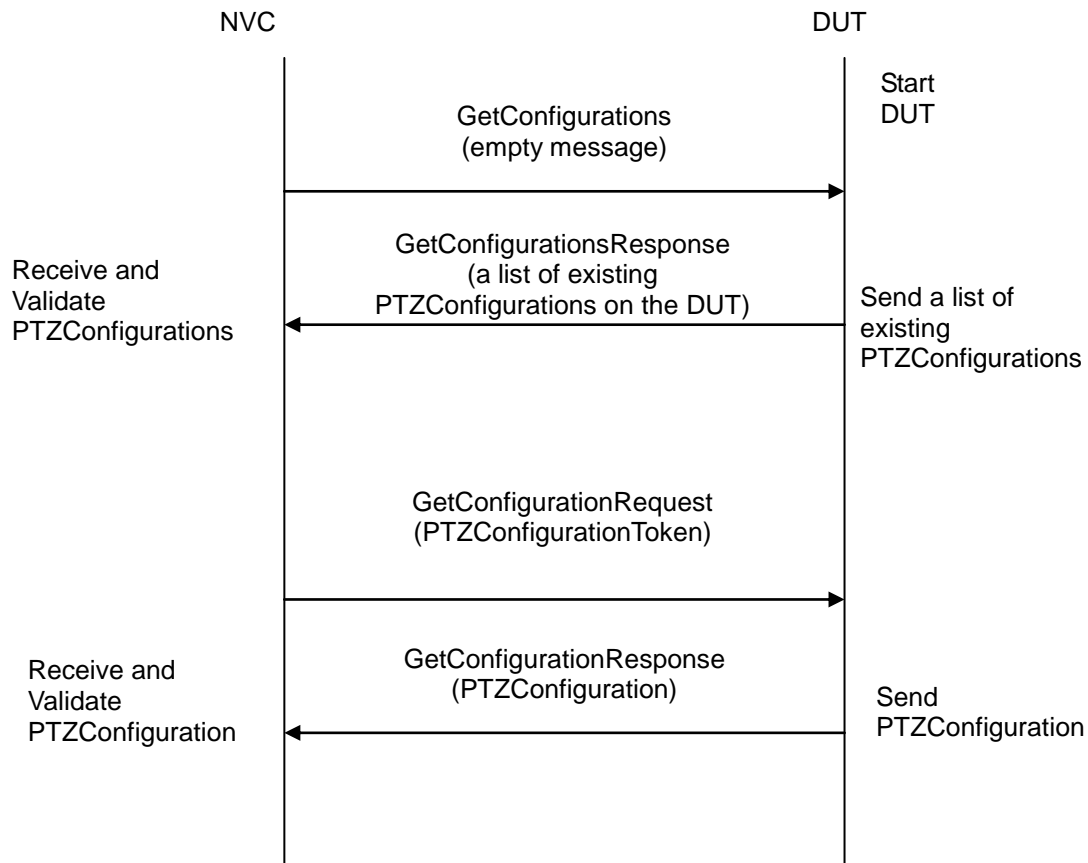

Test Procedure:

1. Start an NVC.
2. Start an DUT.
3. NVC will invoke `GetConfigurationsRequest` message to retrieve a list of existing PTZConfigurations.
4. Verify the `GetConfigurationsResponse` from DUT (a list of existing PTZConfigurations).
5. NVC will invoke `GetConfigurationRequest` message (`PTZConfigurationToken` of existing PTZConfiguration) to retrieve requested PTZConfiguration.
6. Verify the `GetConfigurationResponse` from DUT (PTZConfiguration includes a `NodeToken`, and at least one parameter (`DefaultAbsolutePantTiltPositionSpace`, `DefaultAbsoluteZoomPositionSpace`, `DefaultRelativePanTiltTranslationSpace`, `DefaultRelativeZoomTranslationSpace`, `DefaultContinuousPanTiltVelocitySpace`, `DefaultContinuousZoomVelocitySpace`, `DefaultPTZSpeed`, `DefaultPTZTimeout`, `PanTiltLimits`, and `ZoomLimits`)).

Test Result:**PASS –**

DUT passes all assertions.

FAIL –

The DUT did not send GetConfigurationsResponse message.

The DUT did not send valid GetConfigurationsResponse message.

The DUT did not send GetConfigurationsResponse message with at least one PTZConfiguration.

The DUT did not send GetConfigurationResponse message.

The DUT did not send valid GetConfigurationResponse message.

The DUT did not send GetConfigurationResponse message with NodeToken.

The DUT did not send GetConfigurationResponse message with at least one parameter (excluding NodeToken).

4.2.3 PTZ CONFIGURATION OPTIONS

Test Label: PTZ Configuration Options Validation

Test Case ID: PTZ-2-1-3

ONVIF Core Specification Coverage: GetConfigurationOptions

Command Under Test: GetConfigurationOptions

WSDL Reference: ptz.wsdl


Requirement Level: MUST IF SUPPORTED (PTZ)

Test Purpose: To retrieve returns the list of supported coordinate systems including their range limitations in the DUT PTZ Configuration Options setting.

Pre-Requisite: PTZ is supported by DUT, and NVC gets the ptz service entry point by GetCapabilities command.

Test Configuration: NVC and DUT

Test Sequence:

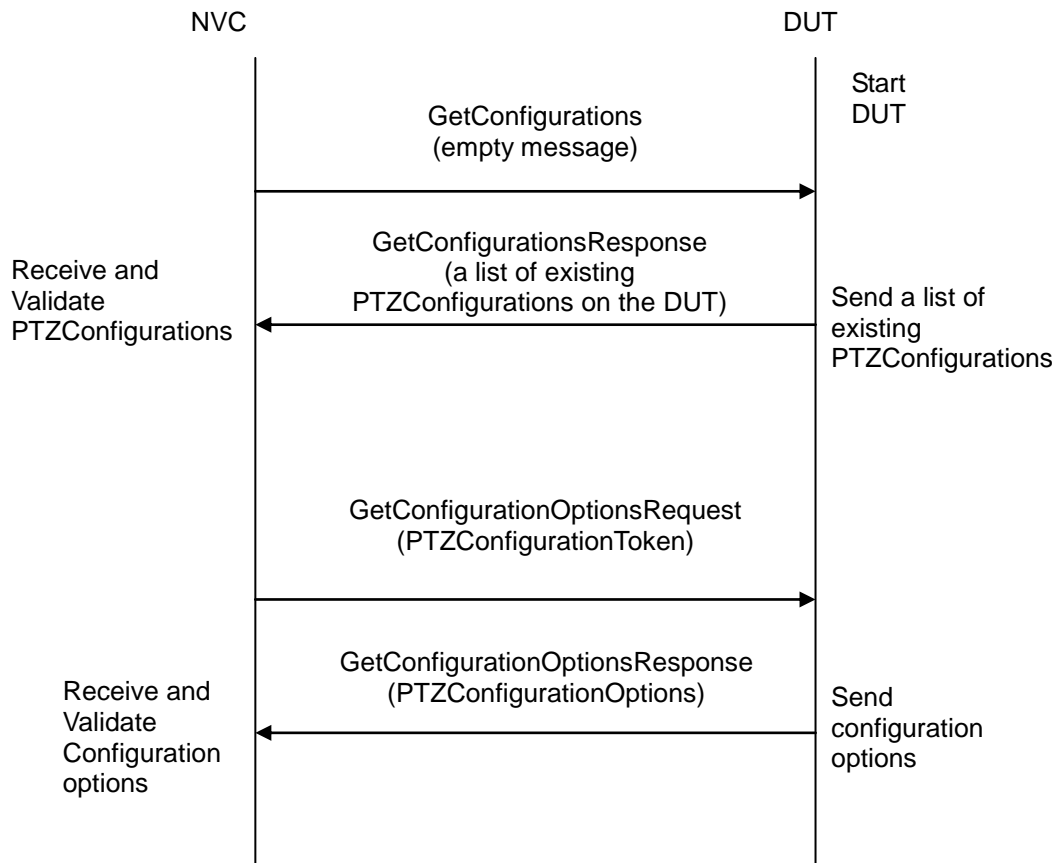

Test Procedure:

1. Start an NVC.
2. Start an DUT.
3. NVC will invoke `GetConfigurationsRequest` message to retrieve a list of existing PTZConfigurations on the DUT.
4. Verify the `GetConfigurationsResponse` from DUT (a list of existing PTZConfiguration).
5. NVC will invoke `GetConfigurationOptionsRequest` message to retrieve PTZConfigurationOptions.
6. Verify the `GetConfigurationOptionsResponse` from DUT (valid Spaces and PTZTimeout).

Test Result:

PASS –

DUT passes all assertions.

FAIL –

The DUT did not send GetConfigurationsResponse message.

The DUT did not send valid GetConfigurationsResponse message.

The DUT did not send GetConfigurationsResponse message with at least one PTZConfiguration.

The DUT did not send GetConfigurationOptionsResponse message.

The DUT did not send valid GetConfigurationOptionsResponse message.

The DUT did not send GetConfigurationOptionsResponse message with valid Spaces and PTZTimeout.

4.2.4 PTZ SET CONFIGURATION

Test Label: PTZ Configurations

Test Case ID: PTZ-2-1-4

ONVIF Core Specification Coverage: SetConfiguration

Command Under Test: SetConfiguration

WSDL Reference: ptz.wsdl


Requirement Level: MUST IF SUPPORTED (PTZ)

Test Purpose: To verify the capability to set the DUT PTZ Configuration.

Pre-Requisite: PTZ is supported by DUT, and NVC gets the ptz service entry point by GetCapabilities command.

Test Configuration: NVC and DUT

Test Sequence:

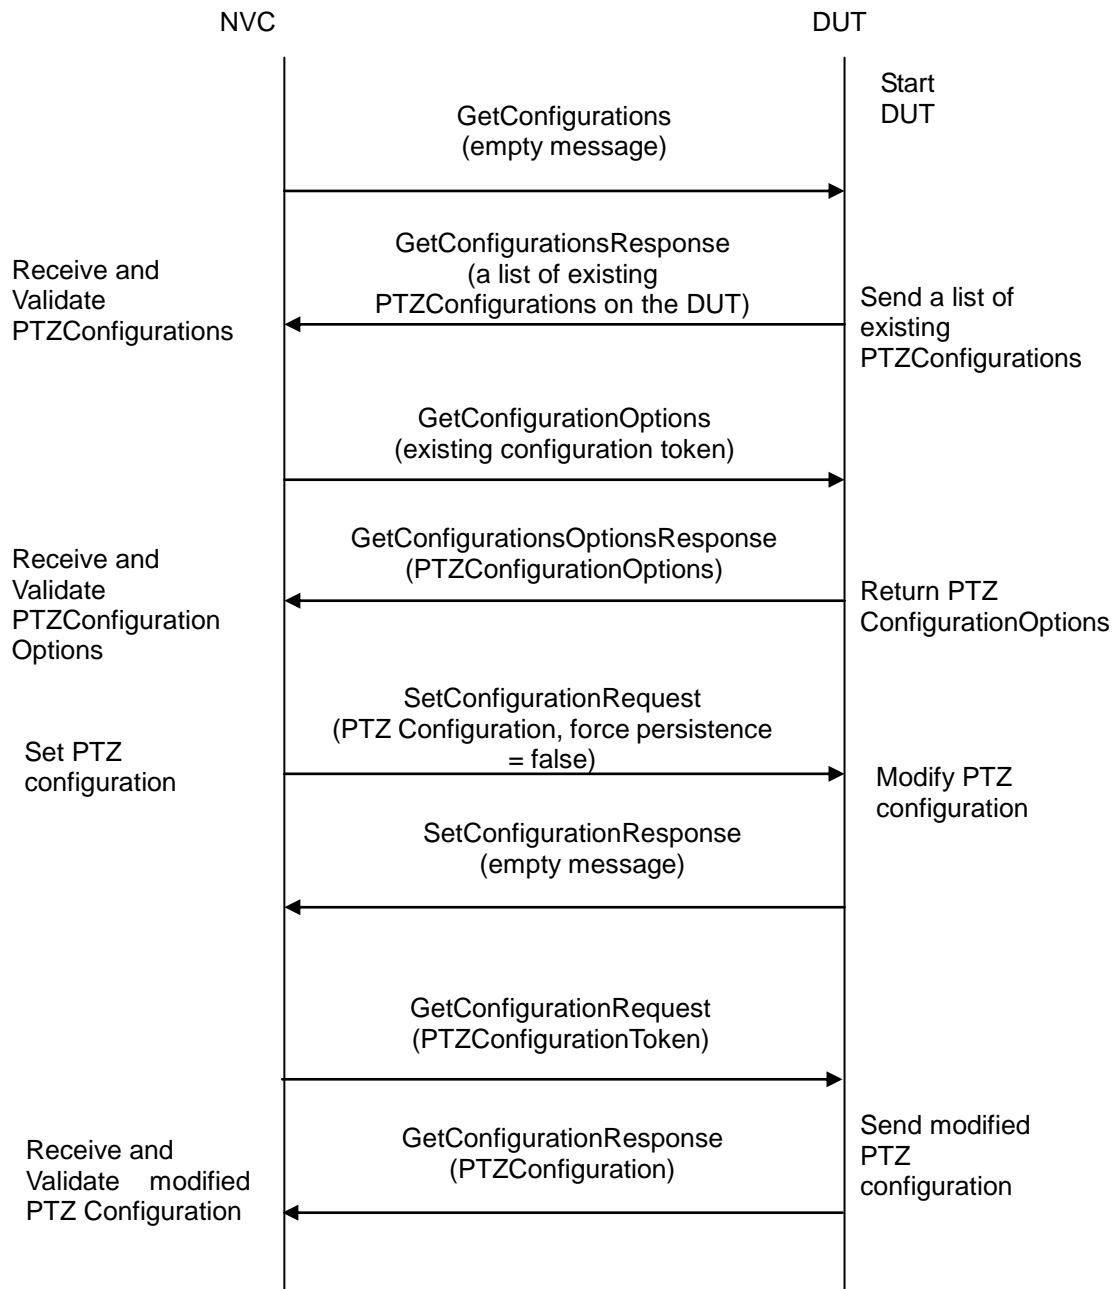

Test Procedure:

1. Start an NVC.
2. Start an DUT.
3. NVC will invoke `GetConfigurationsRequest` message to retrieve a list of existing PTZConfigurations.
4. Verify the `GetConfigurationsResponse` from DUT (a list of existing PTZConfigurations).

5. NVC will invoke GetConfigurationOptions message (ConfigurationToken of existing PTZConfiguration) to retrieve the range of PTZTimeout that can be changed.
6. Verify that DUT returns PTZConfigurationOptions in GetConfigurationOptionsResponse message.
7. NVC will invoke SetConfigurationRequest message (**DefaultPTZTimeout = [Max or Min of duration value]**, and force persistence = false). DefaultPTZTimeout will be set to Max of the duration value. If DefaultPTZTimeout of DUT is same value with Max of duration value, this value will be set to Min of the duration value.
8. DUT modifies PTZ Configuration and return with SetConfigurationResponse message indicating success.
9. NVC will verify the modified PTZ configuration by invoking GetConfigurationRequest message
10. Verify that DUT returns the modified PTZ Configuration in the GetConfigurationResponse message (**DefaultPTZTimeout = [Max or Min of the duration value]**).

Test Result:

PASS

DUT passes all assertions.

FAIL

The DUT did not send GetConfigurationsResponse message.

The DUT did not send valid GetConfigurationsResponse message.

The DUT did not send GetConfigurationResponse message.

The DUT did not send valid GetConfigurationResponse message.

The DUT did not send equal parameters for one or more PTZConfiguration in the GetConfigurationResponse message and in the GetConfigurationsResponse message.

4.2.5 PTZ CONFIGURATIONS AND PTZ CONFIGURATION CONSISTENCY

Test Label: PTZ Service DUT GetConfigurations Command and GetConfiguration Command Consistency Validation

Test Case ID: PTZ-2-1-5

ONVIF Core Specification Coverage: GetConfigurations, GetConfiguration.

Command Under Test: GetConfigurations, GetConfiguration

WSDL Reference: ptz.wsdl


Requirement Level: MUST IF SUPPORTED (PTZ)

Test Purpose: To verify the capability to set the DUT PTZ Configuration.

Pre-Requisite: None

Test Configuration: NVC and DUT

Test Sequence:

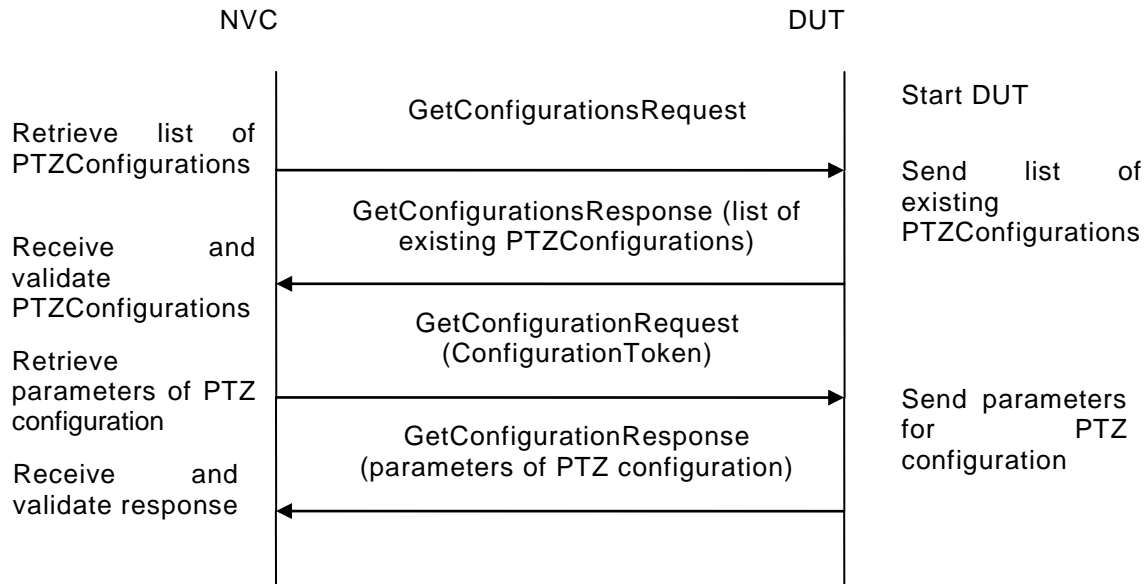

Test Procedure:

1. Start an NVC.
2. Start a DUT.
3. NVC invokes **GetConfigurations** message to retrieve list of PTZ Configurations from device.
4. The DUT sends **GetConfigurationsResponse** message.
5. NVC invokes **GetConfiguration** (**ConfigurationToken**) message to retrieve parameters of PTZ configuration from device.
6. The DUT sends **GetConfigurationResponse** message.
7. Check that all parameters values in **GetConfigurationResponse** are same as in the **GetConfigurationsResponse** message.

Repeat steps 5-7 for all other configurations from the **GetConfigurationsResponse** message.

Test Result:

PASS –

DUT passes all assertions.

FAIL –

The DUT did not send **GetConfigurationsResponse** message.

The DUT did not send valid **GetConfigurationsResponse** message.

The DUT did not send **GetConfigurationsResponse** message with at least one PTZConfiguration.

The DUT did not send **GetConfigurationOptionsResponse** message.

The DUT did not send valid GetConfigurationOptionsResponse message.

The DUT did not send SetConfigurationResponse message.

The DUT did not send GetConfigurationResponse message.

The DUT did not send valid GetConfigurationResponse message.

The DUT did not modify PTZConfiguration by requested SetConfigurationRequest message.

4.2.6 PTZ CONFIGURATIONS AND PTZ NODES CONSISTENCY

Test Label: PTZ Service DUT GetConfigurations Command and GetNodes Command Consistency Validation.

Test Case ID: PTZ-2-1-6

ONVIF Core Specification Coverage: GetNodes, GetConfigurations.

Command Under Test: GetConfigurations, GetNodes

WSDL Reference: ptz.wsdl.


Requirement Level: MUST IF SUPPORTED (PTZ)

Test Propose: To check that GetConfigurations command and GetNodes command are consistent.

Pre-Requisite: PTZ is supported by DUT. NVC gets the PTZ Service entry point by GetCapabilities command.

Test Configuration: NVC and DUT

Test Sequence:

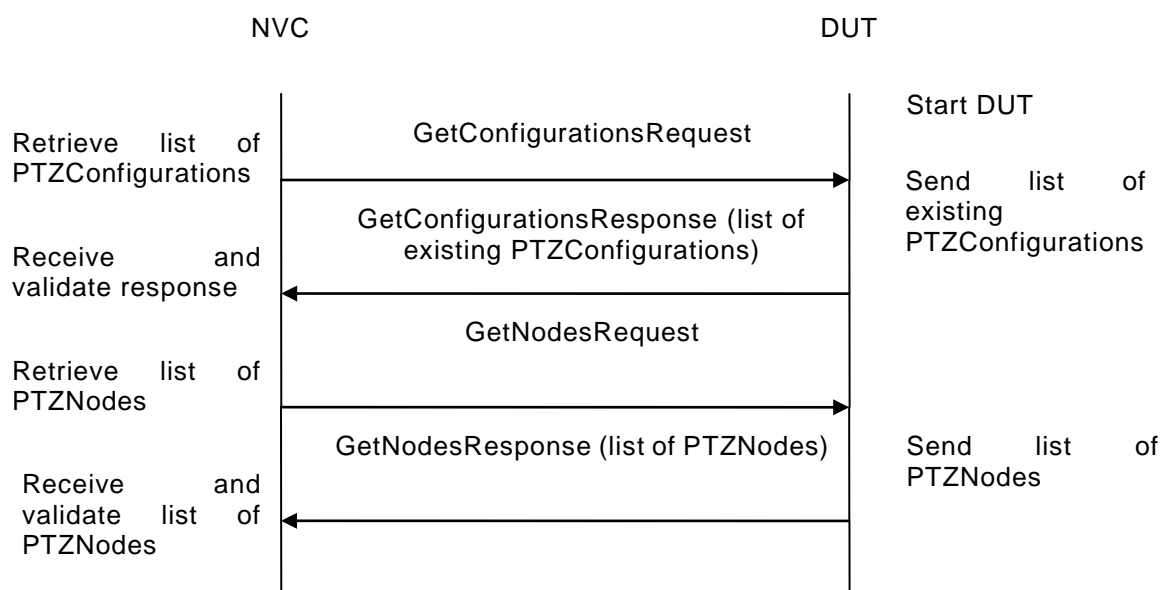

Test Procedure:

1. Start an NVC.
2. Start a DUT.
3. NVC invokes GetConfigurations message to retrieve list of PTZ Configurations from device.
4. The DUT sends GetConfigurationsResponse message.
5. NVC invokes GetNodesRequest message to retrieve list of available PTZ nodes from device.
6. The DUT sends GetNodesResponse message.
7. Check that parameters for every PTZConfiguration are correct according to GetNodesResponse.

Test Result:

PASS –

DUT passes all assertions.

FAIL –

The DUT did not send GetConfigurationsResponse message.

The DUT did not send valid GetConfigurationsResponse message.

The DUT did not send GetNodesResponse message.

The DUT did not send valid GetNodesResponse message.

For at least one PTZConfiguration there is at least one of following items:

- NodeToken from PTZConfiguration does not exist in GetNodesResponse message (PTZNode.token) or exists more than one time.
- DefaultAbsolutePanTiltPositionSpace from PTZConfiguration is not included in one of SupportedPTZSpaces.AbsolutePanTiltPositionSpace from GetNodesResponse.
- DefaultAbsoluteZoomPositionSpace from PTZConfiguration is not included in one of SupportedPTZSpaces.AbsoluteZoomPositionSpace from GetNodesResponse.
- DefaultRelativePanTiltTranlationSpace from PTZConfiguration is not included in one of SupportedPTZSpaces.RelativePanTiltTranlationSpace from GetNodesResponse.
- DefaultRelativeZoomTranlationSpace from PTZConfiguration is not included in one of SupportedPTZSpaces.RelativeZoomTranlationSpace from GetNodesResponse.
- DefaultContinuousPanTiltVelocitySpace from PTZConfiguration is not included in one of SupportedPTZSpaces.ContinuousPanTiltVelocitySpace from GetNodesResponse.
- DefaultContinuousZoomVelocitySpace from PTZConfiguration is not included in one of SupportedPTZSpaces.ContinuousZoomVelocitySpace from GetNodesResponse.
- DefaultPTZSpeed.PanTilt.space from PTZConfiguration is not included in one of PanTiltSpeedSpace.URI section from GetNodesResponse

- DefaultPTZSpeed.PanTilt.x is not between SupportedPTZSpaces.PanTiltSpeedSpace.XRange.Min and SupportedPTZSpaces.PanTiltSpeedSpace.XRange.Max for appropriate PanTiltSpeedSpace.URI from GetNodesResponse.
- DefaultPTZSpeed.PanTilt.y is not between SupportedPTZSpaces.PanTiltSpeedSpace.XRange.Min and SupportedPTZSpaces.PanTiltSpeedSpace.XRange.Max for appropriate PanTiltSpeedSpace.URI from GetNodesResponse.
- DefaultPTZSpeed.Zoom.Space is not included in one of ZoomSpeedSpace.URI section of GetNodesResponse
- DefaultPTZSpeed.Zoom.x is not between SupportedPTZSpaces.ZoomSpeedSpace.XRange.Min and SupportedPTZSpaces.ZoomSpeedSpace.XRange.Max for appropriate ZoomSpeedSpace.URI from GetNodesResponse.

4.2.7 PTZ CONFIGURATIONS AND PTZ CONFIGURATION OPTIONS CONSISTENCY

Test Label PTZ Service DUT PTZ Configurations and PTZ Configuratuon Options Consistency Validation.

Test Case ID: PTZ-2-1-7

ONVIF Core Specification Coverage: GetConfigurations, GetConfigurationOptions.

Command Under Test: GetConfigurations, GetConfigurationOptions


WSDL Reference: ptz.wsdl

Requirement Level: MUST IF SUPPORTED (PTZ)

Test Purpose: To check that PTZ Configurations and PTZ Configuration Options are consistent

Pre-Requisite: PTZ is supported by DUT. NVC gets the PTZ Service entry point by GetCapabilities command.

Test Configuration: NVC and DUT

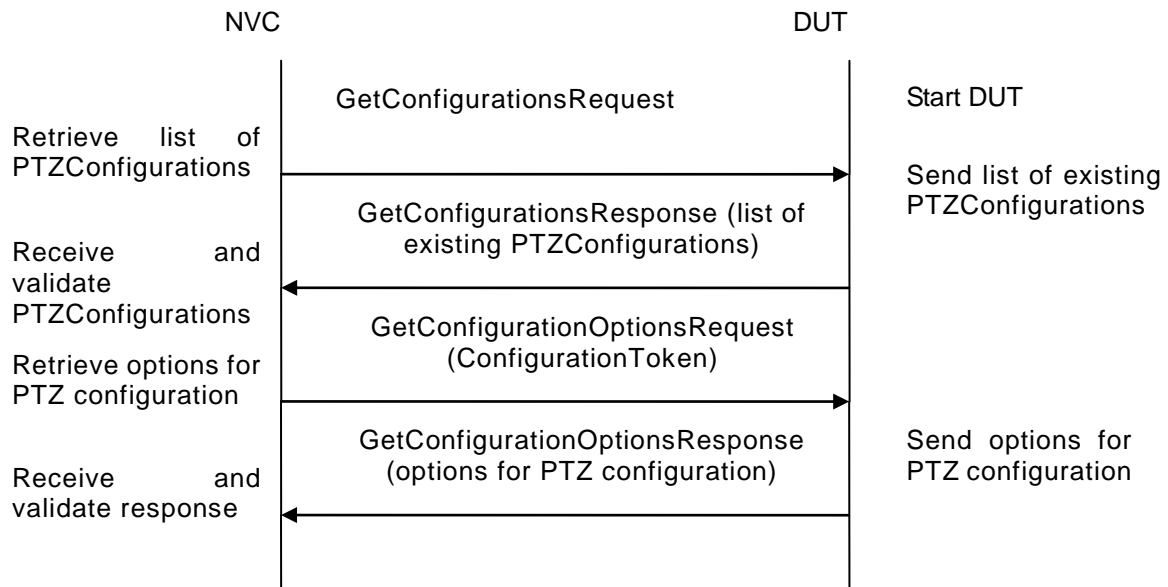Test Sequence:

Test Procedure:

1. Start an NVC.
2. Start a DUT.
3. NVC invokes **GetConfigurations** message to retrieve list of PTZ Configurations from device.
4. The DUT sends **GetConfigurationsResponse** message.
5. NVC invokes **GetConfigurationOptionsRequest** (**ConfigurationToken**) message to retrieve options for PTZConfiguration from device.
6. The DUT sends **GetConfigurationOptionsResponse** message.
7. Check that parameters for PTZ configuration are corresponded to PTZConfigurationOptions.
8. Repeat Steps 5-7 for other PTZConfigurations from the **GetConfigurationsResponse** message.

Test Result:
PASS –

DUT passes all assertions.

FAIL –

The DUT did not send **GetConfigurationsResponse** message.

The DUT did not send valid **GetConfigurationsResponse** message.

The DUT did not send **GetConfigurationOptionsResponse** message.

The DUT did not send valid **GetConfigurationOptionsResponse** message.

The DUT sent not available values for parameters of PTZConfiguration in one or more profile in GetProfilesResponse message.

For at least one PTZConfiguration there is at least one of following items:

- DefaultAbsolutePanTiltPositionSpace from PTZConfiguration is not included in one of Spaces.AbsolutePanTiltPositionSpace from GetConfigurationOptionsResponse.
- DefaultAbsoluteZoomPositionSpace from PTZConfiguration is not included in one of Spaces.AbsoluteZoomPositionSpace from GetConfigurationOptionsResponse.
- DefaultRelativePanTiltTranlationSpace from PTZConfiguration is not included in one of Spaces.RelativePanTiltTranlationSpace from GetConfigurationOptionsResponse.
- DefaultRelativeZoomTranlationSpace from PTZConfiguration is not included in one of Spaces.RelativeZoomTranlationSpace from GetConfigurationOptionsResponse.
- DefaultContinuousPanTiltVelocitySpace from PTZConfiguration is not included in one of Spaces.ContinuousPanTiltVelocitySpace from GetConfigurationOptionsResponse.
- DefaultContinuousZoomVelocitySpace from PTZConfiguration is not included in one of Spaces.ContinuousZoomVelocitySpace from GetConfigurationOptionsResponse.
- DefaultPTZSpeed.PanTilt.space from PTZConfiguration is not included in one of Spaces.PanTiltSpeedSpace.URI section from GetConfigurationOptionsResponse
- DefaultPTZSpeed.PanTilt.x is not between Spaces.PanTiltSpeedSpace.XRange.Min and Spaces.PanTiltSpeedSpace.XRange.Max for appropriate Spaces.PanTiltSpeedSpace.URI from GetConfigurationOptionsResponse.
- DefaultPTZSpeed.PanTilt.y is not between Spaces.PanTiltSpeedSpace.YRange.Min and Spaces.PanTiltSpeedSpace.YRange.Max for appropriate Spaces.PanTiltSpeedSpace.URI from GetConfigurationOptionsResponse.
- DefaultPTZSpeed.Zoom.Space is not included in one of Spaces.ZoomSpeedSpace.URI section of GetConfigurationOptionsResponse
- DefaultPTZSpeed.Zoom.x is not between Spaces.ZoomSpeedSpace.XRange.Min and PTZSpaces.ZoomSpeedSpace.XRange.Max for appropriate Spaces.ZoomSpeedSpace.URI from GetConfigurationOptionsResponse.
- DefaultPTZTimeout is not between PTZTimeout.Min and PTZTimeout.Max from GetConfigurationOptionsResponse

4.2.8 SOAP FAULT MESSAGE

Test Label: PTZ Soap Fault Message for invalid SetConfiguration Request message

Test Case ID: PTZ-2-1-8

ONVIF Core Specification Coverage: SetConfiguration

Command Under Test: SetConfiguration

WSDL Reference: ptz.wsdl


Requirement Level: SHOULD IF SUPPORTED (PTZ)

Test Purpose: To verify that the DUT generates a SOAP fault message if an invalid PTZ Configuration message is sent.

Pre-Requisite: PTZ is supported by DUT, and NVC gets the ptz service entry point by GetCapabilities command.

Test Configuration: NVC and DUT

Test Sequence:

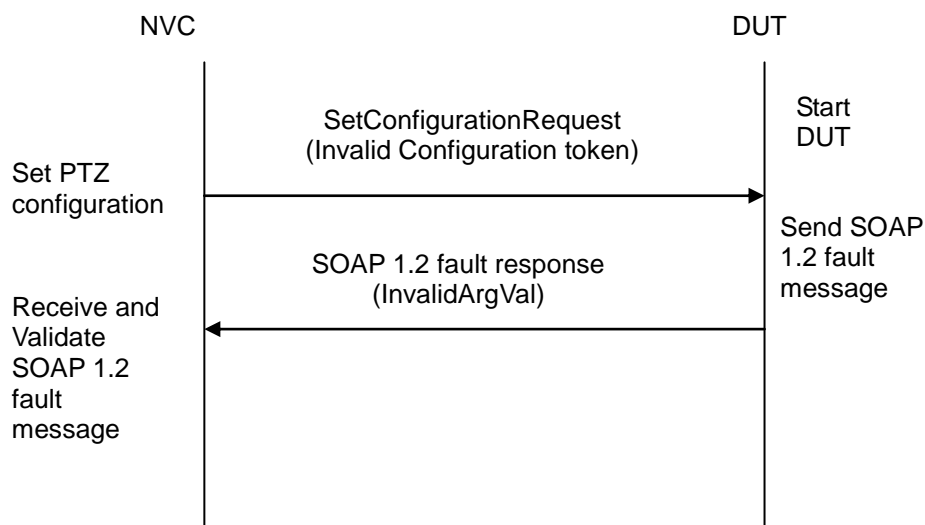

Test Procedure:

1. Start an NVC.
2. Start an DUT.
3. NVC will invoke `SetConfigurationRequest` message with an invalid Configuration token.
4. DUT will generate a SOAP 1.2 fault message (**InvalidArgVal/NoConfig**)

Test Result:

PASS –

DUT passes all assertions.

FAIL –

The DUT did not send SOAP 1.2 fault message.

The DUT did not send correct SOAP 1.2 fault message (fault code, namespace etc).

4.3 Move Operation

4.3.1 PTZ ABSOLUTE MOVE

Test Label: PTZ Absolute Move Operation

Test Case ID: PTZ-3-1-1

ONVIF Core Specification Coverage: AbsoluteMove

Command Under Test: AbsoluteMove

WSDL Reference: ptz.wsdl

Requirement Level: MUST IF SUPPORTED (PTZ) & IMPLEMENTED (Absolute Move)


Test Purpose: To verify absolute Pan/Tilt or absolute Zoom movements using the DUT PTZ AbsoluteMove operation

Pre-Requirement: PTZ is supported by DUT, and a function of Absolute movements is implemented. In addition, NVC gets the ptz service entry point by GetCapabilities command.

A ProfileToken that refers to a Media Profile that includes a PTZConfiguration for the PTZNode is required.

Test Configuration: NVC and DUT

Test Sequence:

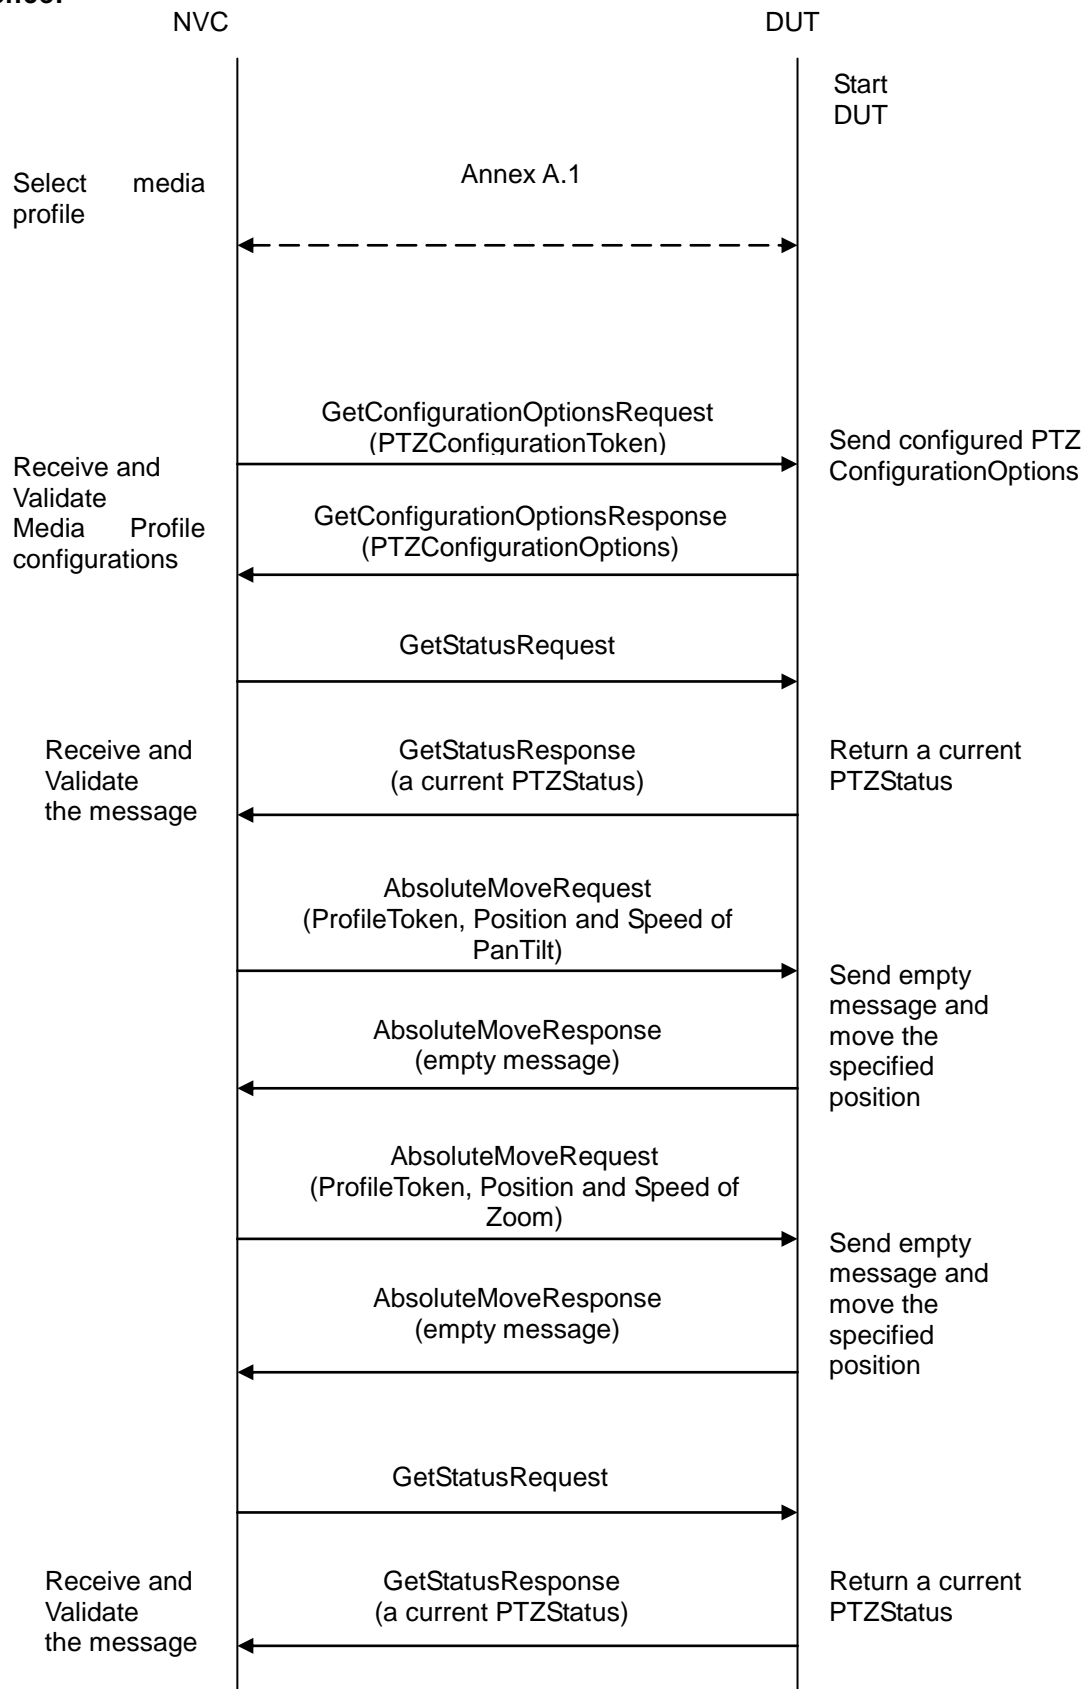

Test Procedure:

1. Start an NVC.
2. Start an DUT.
3. NVC configures and selects a media profile as described in Annex A.1.
4. NVC will invoke GetConfigurationOptionsRequest message to retrieve PTZConfigurationOptions.
5. Verify that DUT returns GetConfigurationOptionsResponse with valid Spaces and PTZTimeout, and has the function of Absolute movement.
6. NVC will invoke GetStatusRequest message to get a current PTZStatus.
7. DUT returns a current PTZStatus in the GetStatusResponse.
8. If Absolute move is supported for 'Pan Tilt', NVC will invoke AbsoluteMoveRequest message (**ProfileToken**, **Position:PanTilt** = ["x", "y"], **Speed:PanTilt**=["x", "y"]). The Speed:PanTilt parameter is added if supported Speed:PanTilt.
9. If NVC invoked AbsoluteMoveRequest message for PanTilt, verify that DUT returns AbsoluteMoveResponse message indicating success.
10. If Absolute move is supported for 'Zoom', NVC will invoke AbsoluteMoveRequest message (**ProfileToken**, **Position:Zoom** = ["x"], **Speed:Zoom** = ["x"]). The Speed:Zoom parameter is added if supported Speed:Zoom.
11. If NVC invoked AbsoluteMoveRequest message for Zoom, verify that DUT returns AbsoluteMoveResponse message indicating success.
12. NVC will invoke GetStatusRequest message to get a current PTZStatus.
13. Verify that DUT moves to the specified position by GetStatusResponse message.

Test Result:

PASS –

DUT passes all assertions.

FAIL –

The DUT did not send GetConfigurationOptionsResponse message.

The DUT did not send valid GetConfigurationOptionsResponse message.

The DUT did not send GetConfigurationOptionsResponse message with valid Spaces and PTZTimeout.

The DUT did not send GetStatusResponse message.

The DUT did not send valid GetStatusResponse message.

The DUT did not send AbsoluteMoveResponse message.

The DUT did not send GetStatusResponse message with the specified position after moved by NVC.

Note: If DUT does not return a current position by GetStatusResponse, the specified position after moved by NVC isn't checked by NVC.

PTZ accuracy is out of scope for this Test Specification. Therefore the position reported by the DUT in the GetStatusResponse does not have to be exactly the same as the position requested by the NVC in the AbsoluteMoveRequest.

4.3.2 SOAP FAULT MESSAGE

Test Label: PTZ Soap Fault Message for Invalid AbsoluteMove Request Message

Test Case ID: PTZ-3-1-2

ONVIF Core Specification Coverage: AbsoluteMove

Command Under Test: AbsoluteMove

WSDL Reference: ptz.wsdl

Requirement Level: SHOULD IF SUPPORTED (PTZ) & IMPLEMENTED (Absolute Movements)


Test Purpose: To verify that DUT generates a SOAP fault message to AbsoluteMove operation with out of bounds values.

Pre-Requisite: PTZ is supported by DUT, and a function of Absolute movements is implemented. In addition, NVC gets the ptz service entry point by GetCapabilities command.

A ProfileToken that refers to a Media Profile that includes a PTZConfiguration for the PTZNode is required.

Test Configuration: NVC and DUT

Test Sequence:

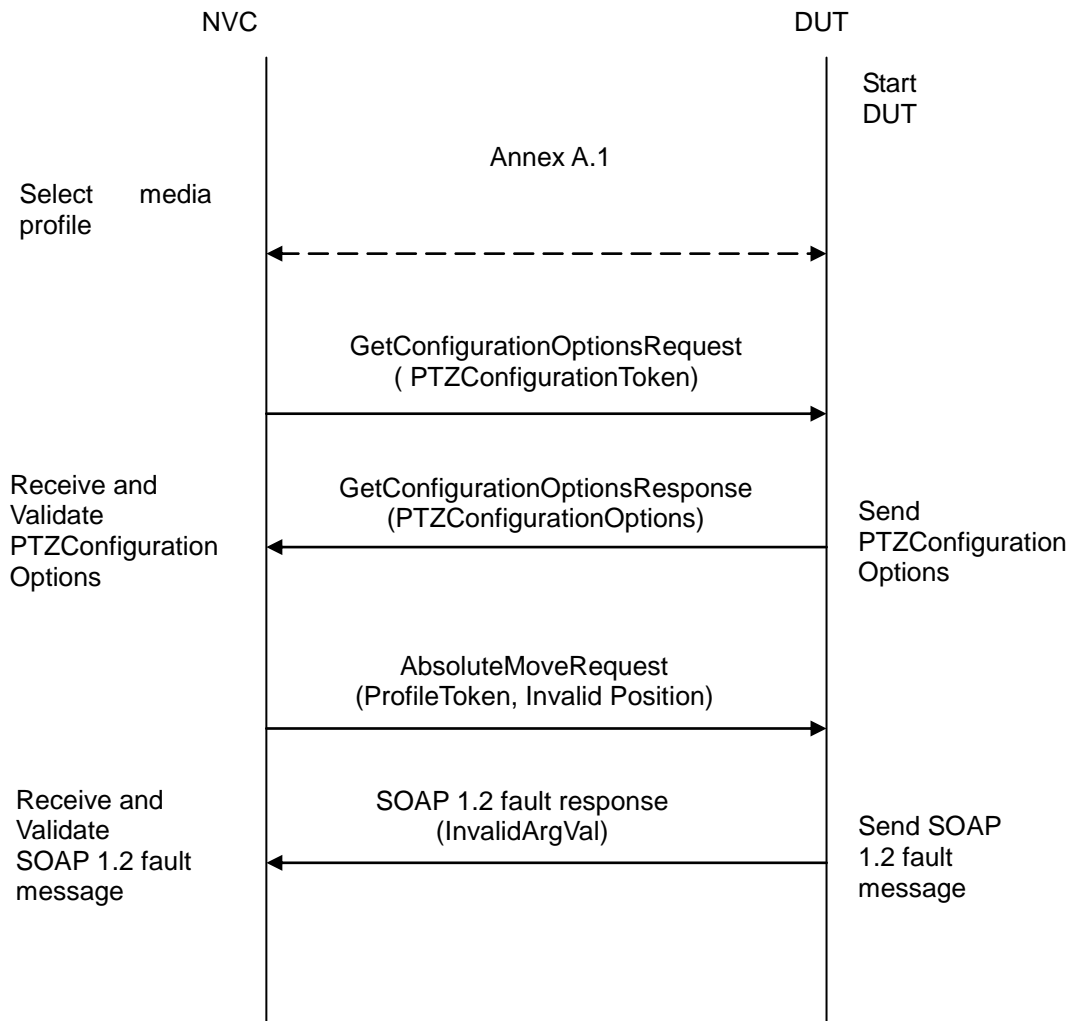

Test Procedure:

1. Start an NVC.
2. Start an DUT.
3. NVC configures and selects a media profile as described in Annex A.1.
4. NVC will invoke `GetConfigurationOptionsRequest` message (`PTZConfigurationToken`,).
5. DUT returns existing `PTZConfiguration` in the `GetConfigurationOptionsResponse` message.
6. NVC will invoke `AbsoluteMoveRequest` message (`ProfileToken`, `PanTilt = ["x(Out of range)", "y(Out of range)"]`).
7. Verify the DUT generates a SOAP 1.2 fault message (**`InvalidArgVal/InvalidPosition`**)

Test Result:

PASS –

DUT passes all assertions.

FAIL –

The DUT did not send GetConfigurationOptionsResponse message.

The DUT did not send valid GetConfigurationOptionsResponse message.

The DUT did not send SOAP 1.2 fault message against AbsoluteMoveRequest message.

The DUT did not send correct SOAP 1.2 fault message (fault code, namespace etc) against AbsoluteMoveRequest message.

4.3.3 PTZ RELATIVE MOVE

Test Label: PTZ Relative Move Operation

Test Case ID: PTZ-3-1-3

ONVIF Core Specification Coverage: RelativeMove

Command Under Test: RelativeMove

WSDL Reference: ptz.wsdl

Requirement Level: MUST IF SUPPORTED (PTZ) & IMPLEMENTED (Relative Move)


Test Purpose: To verify relative Pan/Tilt or relative Zoom movements using the DUT PTZ RelativeMove operation

Pre-Requisite: PTZ is supported by DUT, and a function of Relative movements is implemented. In addition, NVC gets the ptz service entry point by GetCapabilities command.

A ProfileToken that refers to a Media Profile that includes a PTZConfiguration for the PTZNode is required.

Test Configuration: NVC and DUT

Test Sequence:

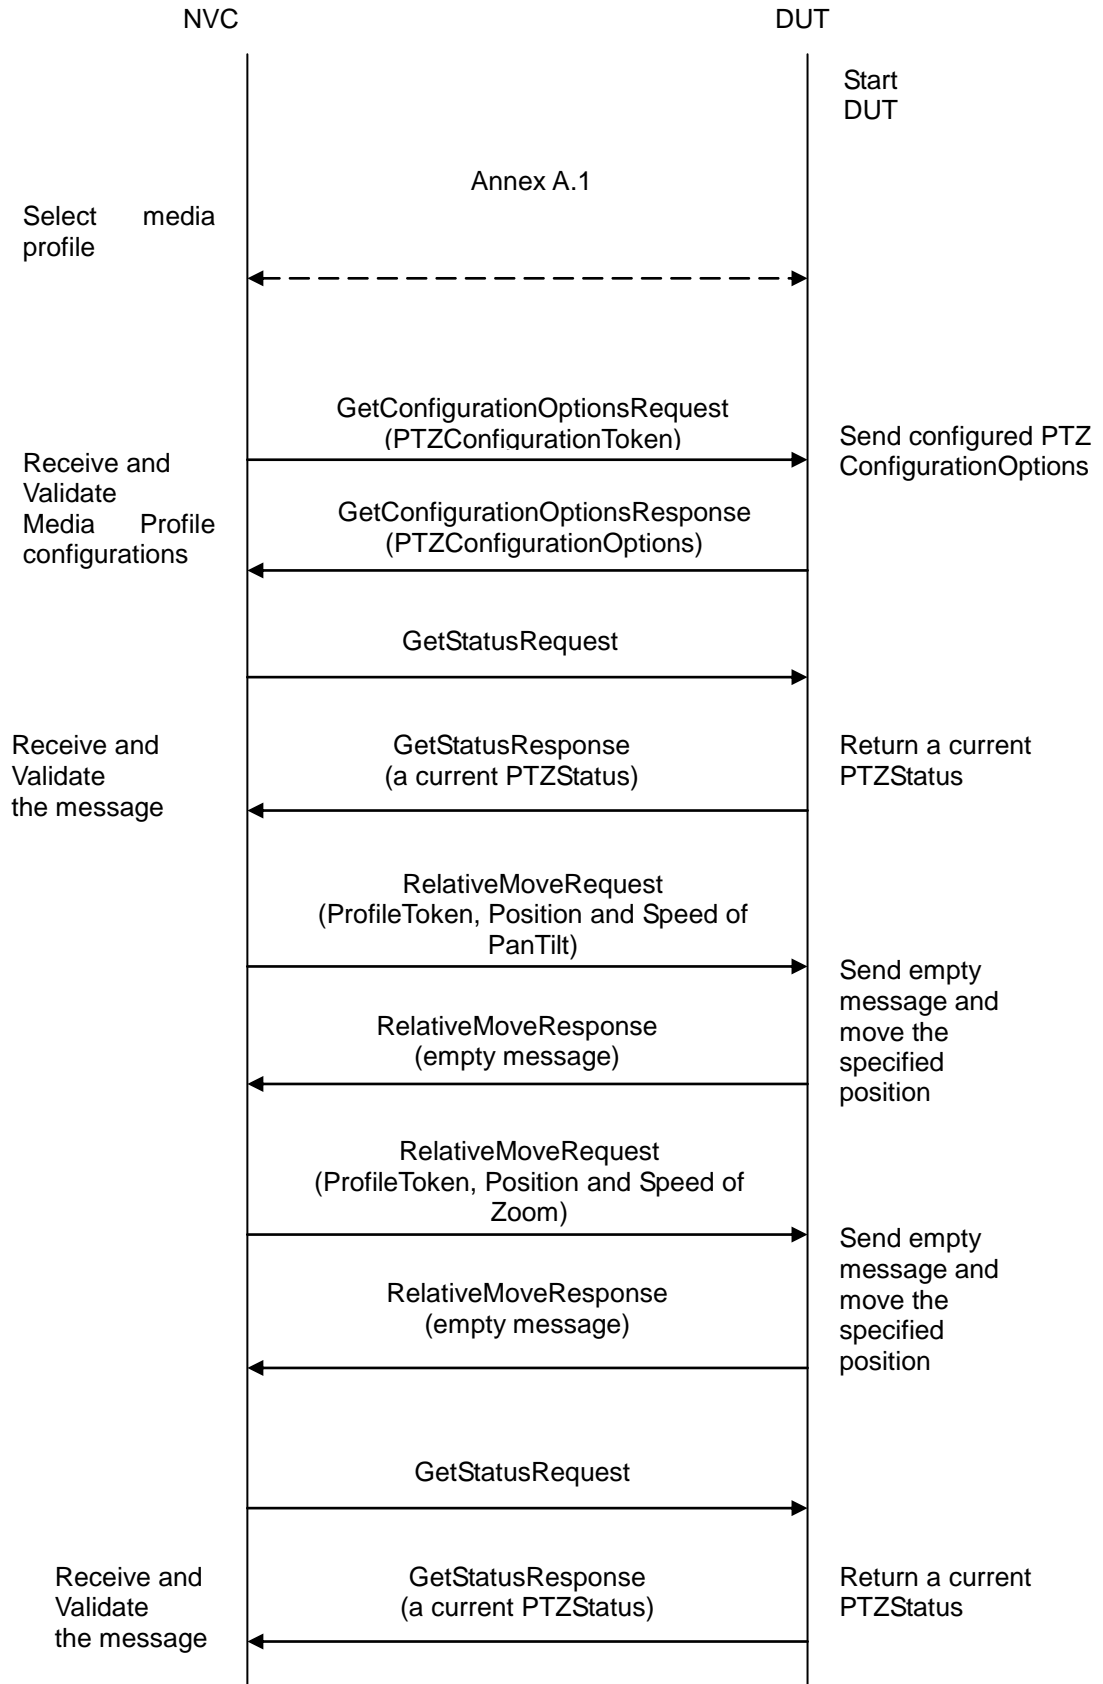

Test Procedure:

1. Start an NVC.
2. Start an DUT.
3. NVC configures and selects a media profile as described in Annex A.1.
4. NVC will invoke GetConfigurationOptionsRequest message to retrieve PTZConfigurationOptions.
5. Verify that DUT returns GetConfigurationOptionsResponse with valid Spaces and PTZTimeout, and has the function of Relative movement.
6. NVC will invoke GetStatusRequest message to get a current PTZStatus.
7. DUT returns a current PTZStatus in the GetStatusResponse.
8. If PanTilt of Relative movement is supported (there is a parameter of RelativePanTiltTranslationSpace in PTZConfigurationOptions), NVC will invoke RelativeMoveRequest message (**ProfileToken**, **Position:PanTilt** = ["x", "y"], **Speed:PanTilt**=["x", "y"]). The Speed:PanTilt parameter is added if supported Speed:PanTilt.
9. If NVC invoked RelativeMoveRequest message for PanTilt, verify that DUT returns RelativeMoveResponse message indicating success.
10. If Zoom Relative movement is supported (there is a parameter of RelativeZoomTranslationSpace in PTZConfigurationOptions), NVC will invoke RelativeMoveRequest message (**ProfileToken**, **Position:Zoom** = ["x"], **Speed:Zoom** = ["x"]). The Speed:Zoom parameter is added if supported Speed:Zoom.
11. If NVC invoked RelativeMoveRequest message for Zoom, verify that DUT returns RelativeMoveResponse message indicating success.
12. NVC will invoke GetStatusRequest message to get a current PTZStatus.
13. Verify that DUT moves to the specified position by GetStatusResponse message.

Test Result:

PASS –

DUT passes all assertions.

FAIL –

The DUT did not send GetConfigurationOptionsResponse message.

The DUT did not send valid GetConfigurationOptionsResponse message.

The DUT did not send GetConfigurationOptionsResponse message with valid Spaces and PTZTimeout.

The DUT did not send GetStatusResponse message.

The DUT did not send valid GetStatusResponse message.

The DUT did not send RelativeMoveResponse message.

The DUT did not send GetStatusResponse message with the specified position after moved by NVC.

Note: If DUT does not return a current position by GetStatusResponse, the specified position after moved by NVC isn't checked by NVC.

PTZ accuracy is out of scope for this Test Specification. Therefore the position reported by the DUT in the GetStatusResponse does not have to be exactly the same as the position requested by the NVC in the RelativeMoveRequest.

4.3.4 PTZ CONTINUOUS MOVE

Test Label: PTZ Continuous Move Operation

Test Case ID: PTZ-3-1-4

ONVIF Core Specification Coverage: ContinuousMove

Command Under Test: ContinuousMove

WSDL Reference: ptz.wsdl

Requirement Level: MUST IF SUPPORTED (PTZ)


Test Purpose: To verify continuous Pan/Tilt or continuous Zoom movements using the DUT PTZ ContinuousMove operation with timeout parameter


Pre-Requisite: PTZ is supported by DUT, and a function of Continuous movements is implemented. In addition, NVC gets the ptz service entry point by GetCapabilities command.

A ProfileToken that refers to a Media Profile that includes a PTZConfiguration for the PTZNode is required.

Test Configuration: NVC and DUT

Test Sequence:

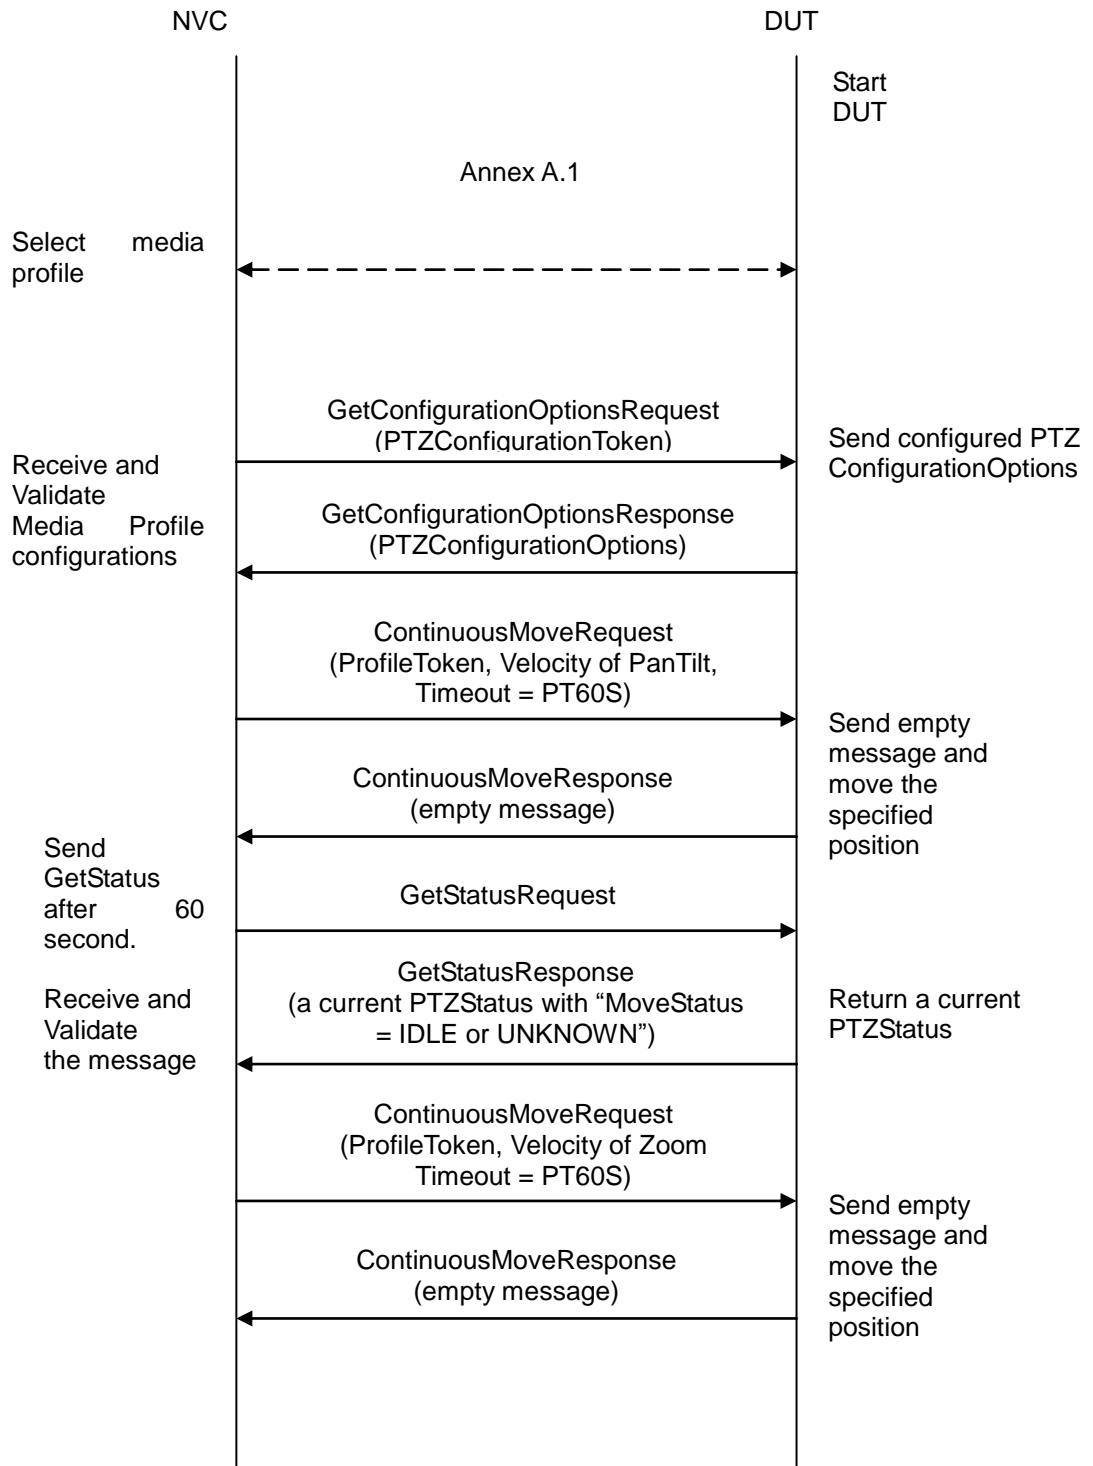

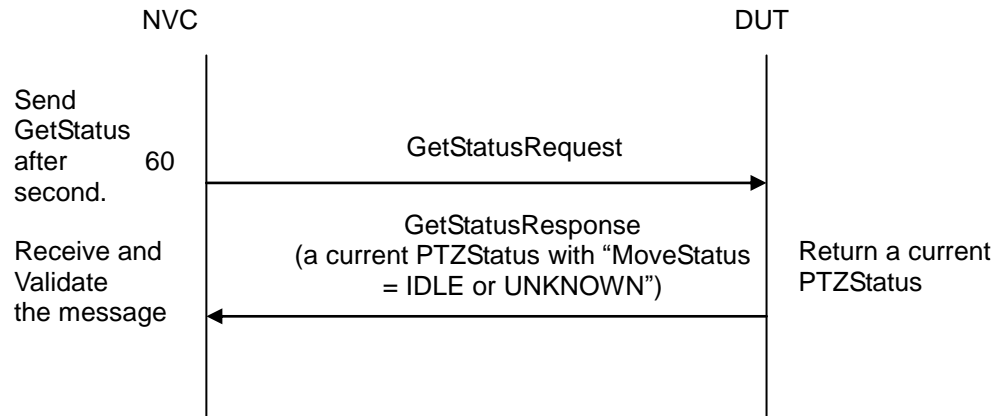

Test Procedure:

1. Start an NVC.
2. Start an DUT.
3. NVC configures and selects a media profile as described in Annex A.1.
4. NVC will invoke `GetConfigurationOptionsRequest` message to retrieve `PTZConfigurationOptions`.
5. Verify that DUT returns `GetConfigurationOptionsResponse` with valid Spaces and `PTZTimeout`, and has the function of Relative movement.
6. If PanTilt of Continuous movement is supported (there is a parameter of `ContinuousPanTiltVelocitySpace` in `PTZConfigurationOptions`), NVC will invoke `ContinuousMoveRequest` message (ProfileToken, Velocity:PanTilt = ["x", "y"], Timeout = PT60S).
7. If NVC invoked `ContinuousMoveRequest` message for PanTilt, verify that DUT returns `ContinuousMoveResponse` message indicating success.
8. If NVC invoked `ContinuousMoveRequest` message for PanTilt, NVC will invoke `GetStatusRequest` message to get a current `PTZStatus` after 60 second.
9. If NVC invoked `ContinuousMoveRequest` message for PanTilt, verify that the DUT returns `GetStatusResponse` with "MoveStatus = IDLE or UNKNOWN".
10. If Zoom of Continuous movement is supported (there is a parameter of `ContinuousZoomVelocitySpace` in `PTZConfigurationOptions`), NVC will invoke `ContinuousMoveRequest` message (ProfileToken, Velocity:Zoom = ["x"], Timeout = PT60S).
11. If NVC invoked `ContinuousMoveRequest` message for Zoom, verify that DUT returns `ContinuousMoveResponse` message indicating success.
12. If NVC invoked `ContinuousMoveRequest` message for Zoom, NVC will invoke `GetStatusRequest` message to get a current `PTZStatus` after 60 second.
13. If NVC invoked `ContinuousMoveRequest` message for PanTilt, verify that the DUT returns `GetStatusResponse` with "MoveStatus = IDLE or UNKNOWN".

Test Result:**PASS –**

DUT passes all assertions.

FAIL –

The DUT did not send GetConfigurationOptionsResponse message.

The DUT did not send valid GetConfigurationOptionsResponse message.

The DUT did not send GetConfigurationOptionsResponse message with valid Spaces and PTZTimeout.

The DUT did not send GetStatusResponse message.

The DUT did not send valid GetStatusResponse message.

The DUT did not send ContinuousMoveResponse message.

The DUT did not send GetStatusResponse message with “MoveStatus = MOVING or UNKNOWN” after executing Test Procedure 9 and 15.

The DUT did not send GetStatusResponse message with “MoveStatus = IDLE or UNKNOWN” after executing Test Procedure 11 and 17.

Note: If DUT does not return a current MoveStatus by GetStatusResponse, the MoveStatus isn't checked by NVC.

4.3.5 PTZ CONTINUOUS MOVE & STOP

Test Label: PTZ Continuous Move and Stop Operation

Test Case ID: PTZ-3-1-5

ONVIF Core Specification Coverage: ContinuousMove, Stop

Command Under Test: ContinuousMove, Stop

WSDL Reference: ptz.wsdl

Requirement Level: MUST IF SUPPORTED (PTZ)


Test Purpose: To verify continuous Pan/Tilt or continuous Zoom movements using the DUT PTZ ContinuousMove operation without timeout parameter and to stop all ongoing pan, tilt and zoom movements.


Pre-Requisite: PTZ is supported by DUT, and a function of Continuous movements is implemented. In addition, NVC gets the ptz service entry point by GetCapabilities command.

A ProfileToken that refers to a Media Profile that includes a PTZConfiguration for the PTZNode is required.

Test Configuration: NVC and DUT

Test Sequence:

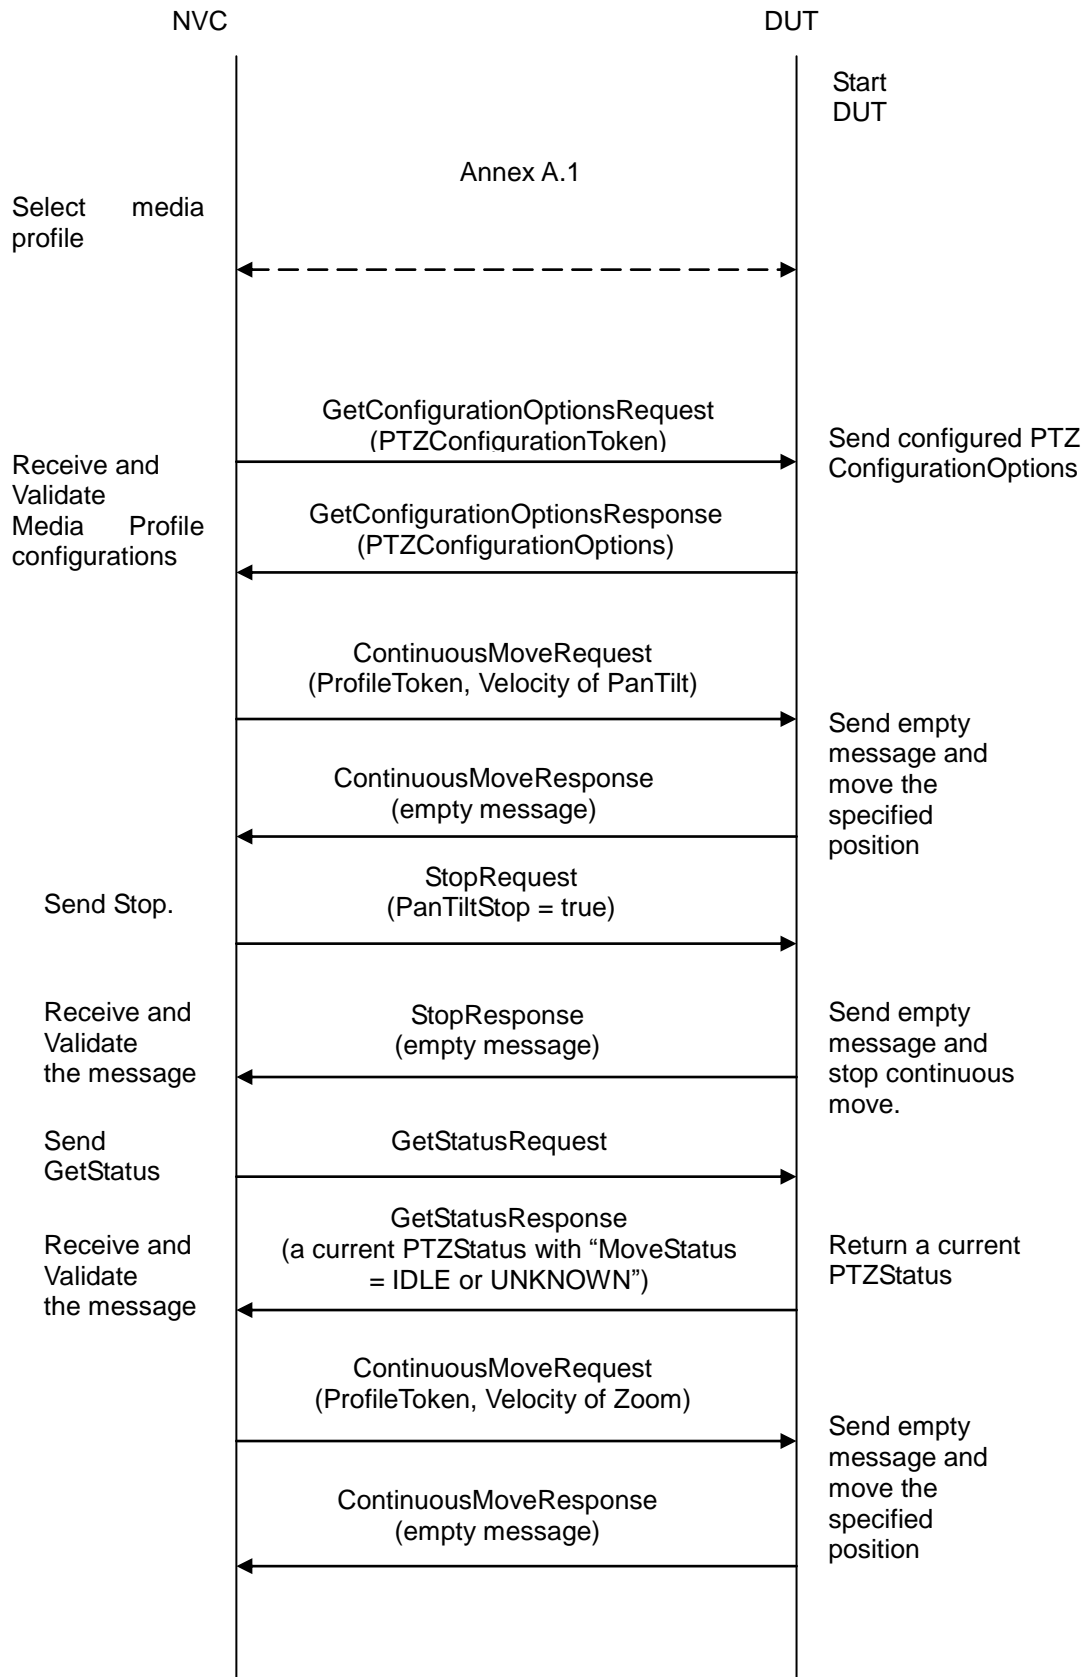

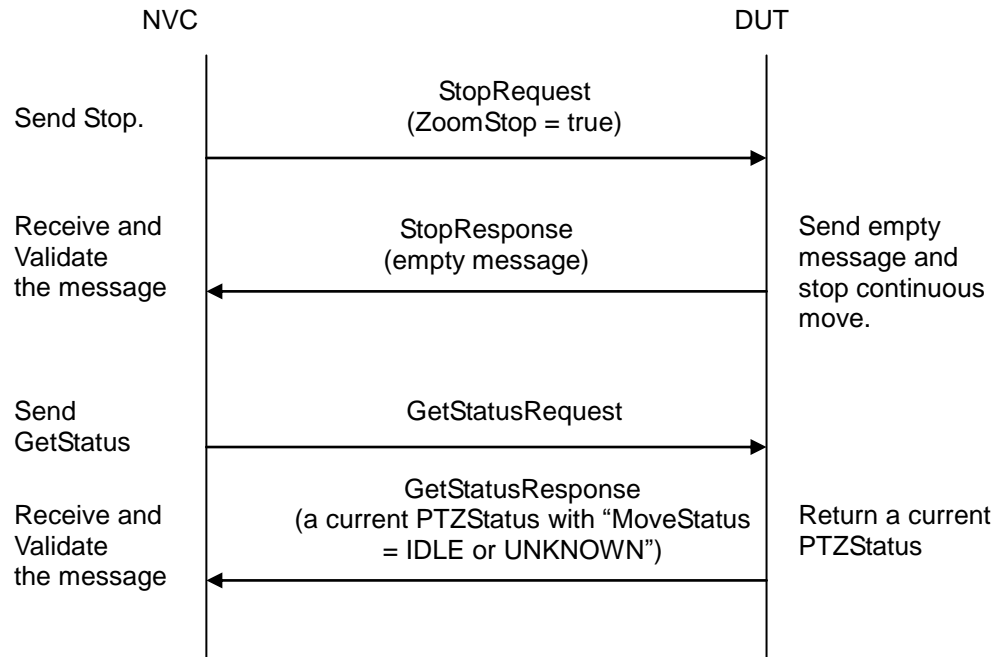

Test Procedure:

1. Start an NVC.
2. Start an DUT.
3. NVC configures and selects a media profile as described in Annex A.1.
4. NVC will invoke GetConfigurationOptionsRequest message to retrieve PTZConfigurationOptions.
5. Verify that DUT returns GetConfigurationOptionsResponse with valid Spaces and PTZTimeout, and has the function of Relative movement.
6. If PanTilt of Continuous movement is supported (there is a parameter of ContinuousPanTiltVelocitySpace in PTZConfigurationOptions), NVC will invoke ContinuousMoveRequest message (**ProfileToken, Velocity:PanTilt = ["x", "y"]**).
7. If NVC invoked ContinuousMoveRequest message for PanTilt, verify that DUT returns ContinuousMoveResponse message indicating success.
8. If NVC invoked ContinuousMoveRequest message for PanTilt, NVC will invoke StopRequest message to stop continuous move.
9. If NVC invoked ContinuousMoveRequest message for PanTilt, verify that the DUT returns StopResponse message indicating success.
10. If NVC invoked ContinuousMoveRequest message for PanTilt, NVC will invoke GetStatusRequest message to get a current PTZStatus.
11. If NVC invoked ContinuousMoveRequest message for PanTilt, verify that the DUT returns GetStatusResponse with "MoveStatus = IDLE or UNKNOWN".

12. If Zoom of Continuous movement is supported (there is a parameter of ContinuousZoomVelocitySpace in PTZConfigurationOptions), NVC will invoke ContinuousMoveRequest message (**ProfileToken**, **Velocity:Zoom** = ["x"]).
13. If NVC invoked ContinuousMoveRequest message for Zoom, verify that DUT returns ContinuousMoveResponse message indicating success.
14. If NVC invoked ContinuousMoveRequest message for Zoom, NVC will invoke StopRequest message to stop continuous move.
15. If NVC invoked ContinuousMoveRequest message for Zoom, verify that the DUT returns StopResponse message indicating success.
16. If NVC invoked ContinuousMoveRequest message for Zoom, NVC will invoke GetStatusRequest message to get a current PTZStatus.
17. If NVC invoked ContinuousMoveRequest message for PanTilt, verify that the DUT returns GetStatusResponse with "MoveStatus = IDLE or UNKNOWN".

Test Result:

PASS –

DUT passes all assertions.

FAIL –

The DUT did not send GetConfigurationOptionsResponse message.

The DUT did not send valid GetConfigurationOptionsResponse message.

The DUT did not send GetConfigurationOptionsResponse message with valid Spaces and PTZTimeout.

The DUT did not send GetStatusResponse message.

The DUT did not send valid GetStatusResponse message.

The DUT did not send ContinuousMoveResponse message.

The DUT did not send StopResponse message.

The DUT did not send GetStatusResponse message with "MoveStatus = MOVING or UNKNOWN" after executing Test Procedure 9 and 17.

The DUT did not send GetStatusResponse message with "MoveStatus = IDLE or UNKNOWN" after executing Test Procedure 13 and 21.

Note: If DUT does not return a current MoveStatus by GetStatusResponse, the MoveStatus isn't checked by NVC.

4.4 Preset operations

4.4.1 SET AND GET PRESET

Test Label: PTZ Set and Get Preset

Test Case ID: PTZ-4-1-1

ONVIF Core Specification Coverage: SetPreset, GetPresets.

Command Under Test: SetPreset, GetPresets

WSDL Reference: ptz.wsdl


Requirement Level: MUST IF SUPPORTED (PTZ) & IMPLEMENTED (Presets) & IMPLEMENTED (AbsoluteMove or RelativeMove)


Test Purpose: To verify that the DUT supports the setting of presets using the SetPreset operation and the retrieval of presets using the GetPresets operation.

Pre-Requisite: A ProfileToken that refers to a Media Profile that includes a PTZConfiguration for the PTZNode is required.

Test Configuration: NVC and DUT

Test Sequence:

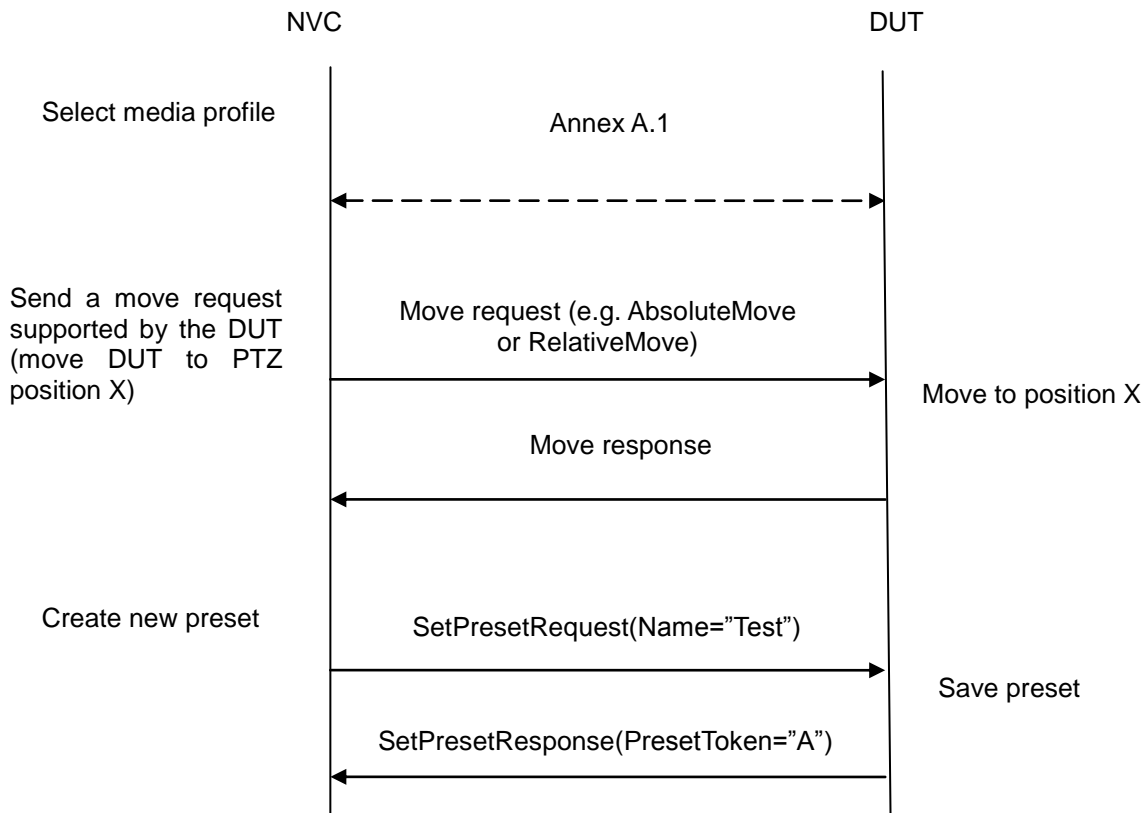

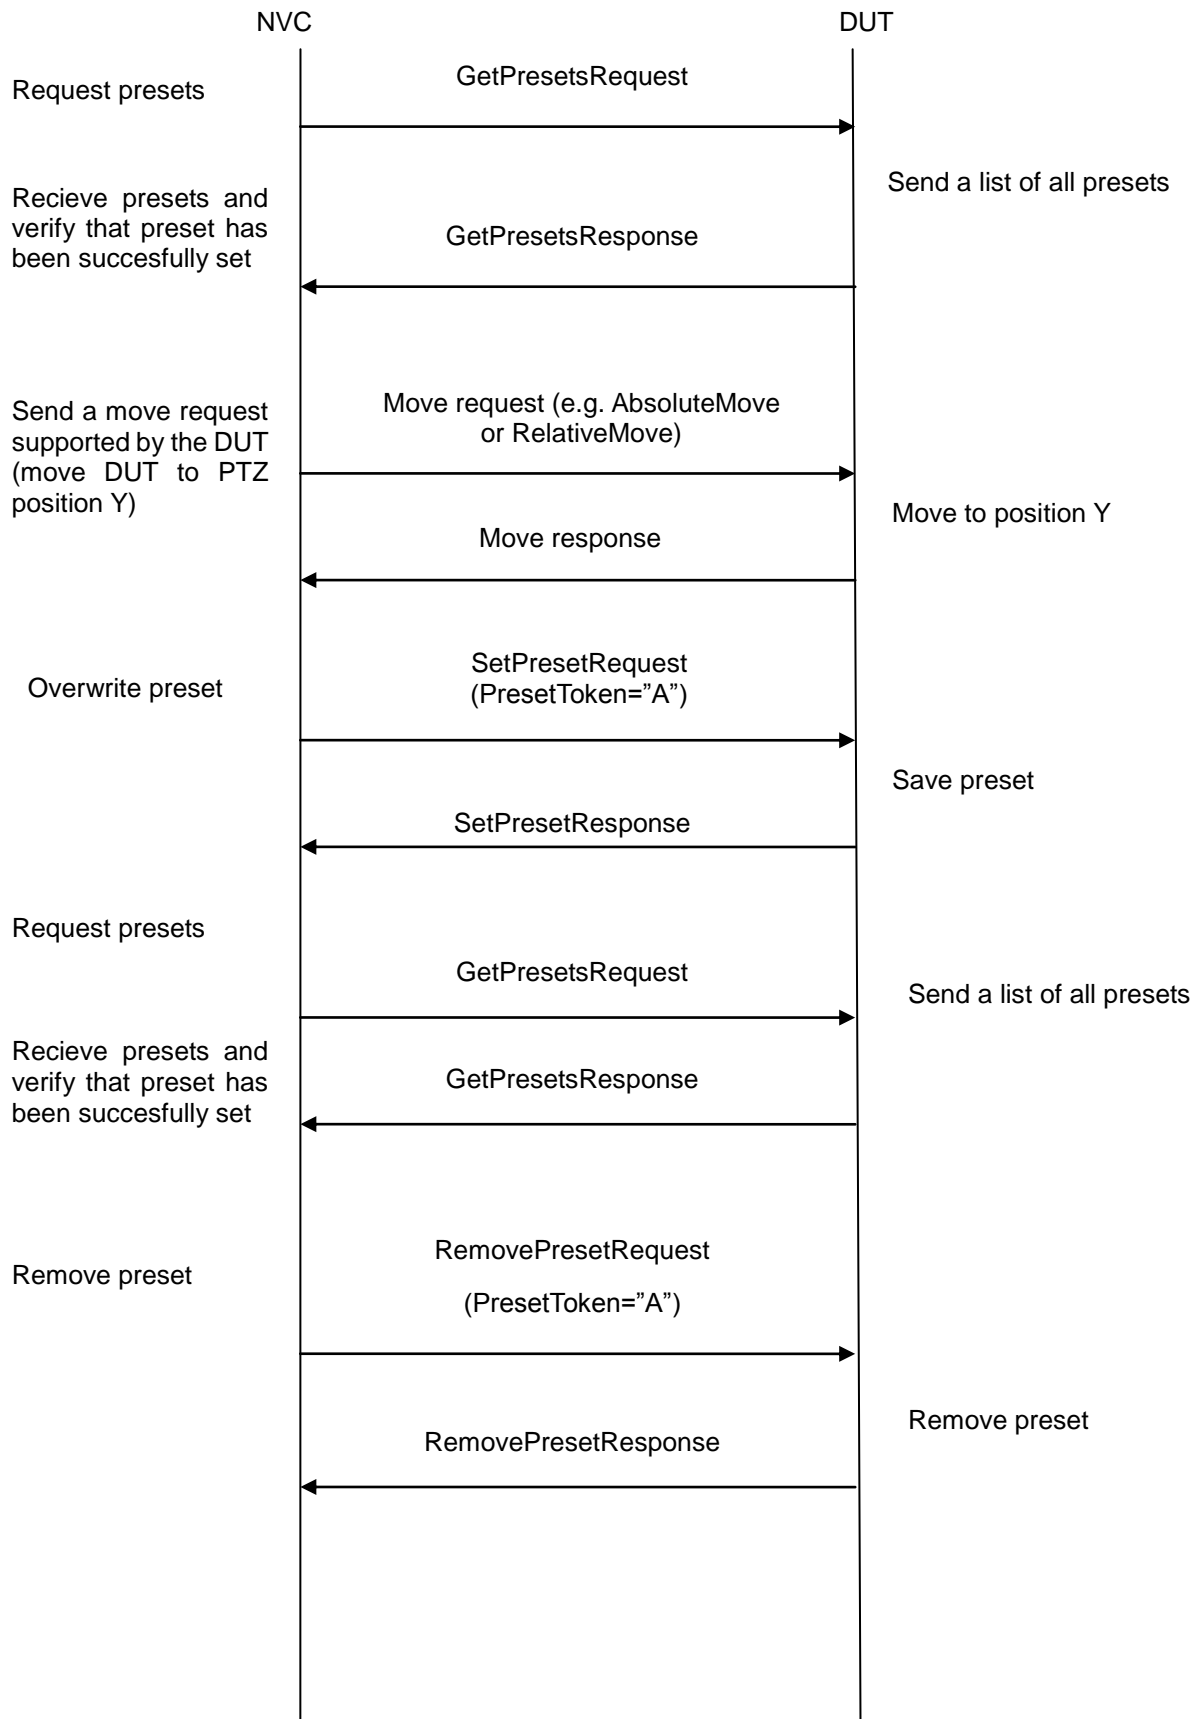

Test Procedure:

1. NVC configures and selects a media profile as described in Annex A.1.
2. Position the DUT so that is at PTZPosition X using a move request supported by the DUT (e.g. AbsoluteMove or RelativeMove).
3. Create a new preset using SetPresetRequest (Name="Test").
4. Verify that the DUT sends a SetPresetResponse and a PresetToken for the preset. The PresetToken will need to be used in the following test steps. The PresetToken can have any valid value but it will be referred to as "PresetToken="A" in this test case.
5. NVC sends a GetPresetsRequest.
6. DUT sends a list of presets in the GetPresetsResponse.
7. Verify that the GetPresetsResponse has a preset with PresetToken="A", Name="Test" and PTZPosition X.
8. Position the DUT so that is at PTZPosition Y using a move request supported by the DUT (e.g. AbsoluteMove or RelativeMove).
9. Overwrite the preset using SetPresetRequest (PresetToken="A").
10. NVC sends a GetPresetsRequest.
11. DUT sends a list of presets in the GetPresetsResponse.
12. Verify that there is a preset with PresetToken="A", Name="Test" and PTZPosition Y.
13. NVC sends a RemovePresetRequest (PresetToken="A") to the DUT and the DUT removes the preset.

Test Result:**PASS –**

DUT passes all assertions.

FAIL –

DUT's move operation failed.

DUT did not send SetPresetResponse message.

DUT did not include a PresetToken in the SetPresetResponse message.

DUT did not send GetPresetsResponse message.

DUT did not include the correct PTZPosition in the GetPresetsResponse message.

DUT did not include the correct name (Name="Test") in the GetPresetsResponse message.

Note: There are no specific requirements on what the exact values for PTZPositions X and Y should be used in this test, other than they must be different positions.

PTZ accuracy is out of scope for this Test Specification. Therefore the position reported by the DUT in the GetPresetResponse does not have to be exactly the same as the position of the preset created with the SetPresetRequest.

4.4.2 GOTO PRESET

Test Label: PTZ GotoPreset

Test Case ID: PTZ-4-1-2

ONVIF Core Specification Coverage: GotoPreset, SetPreset

Command Under Test: GotoPreset

WSDL Reference: ptz.wsdl


Requirement Level: MUST IF SUPPORTED (PTZ) & IMPLEMENTED (Presets) & IMPLEMENTED (AbsoluteMove or RelativeMove)

Test Purpose: To verify that it is possible to go to presets using the GotoPreset operation.

Pre-Requisite: A ProfileToken that refers to a Media Profile that includes a PTZConfiguration for the PTZNode is required.

Test Configuration: NVC and DUT

Test Sequence:

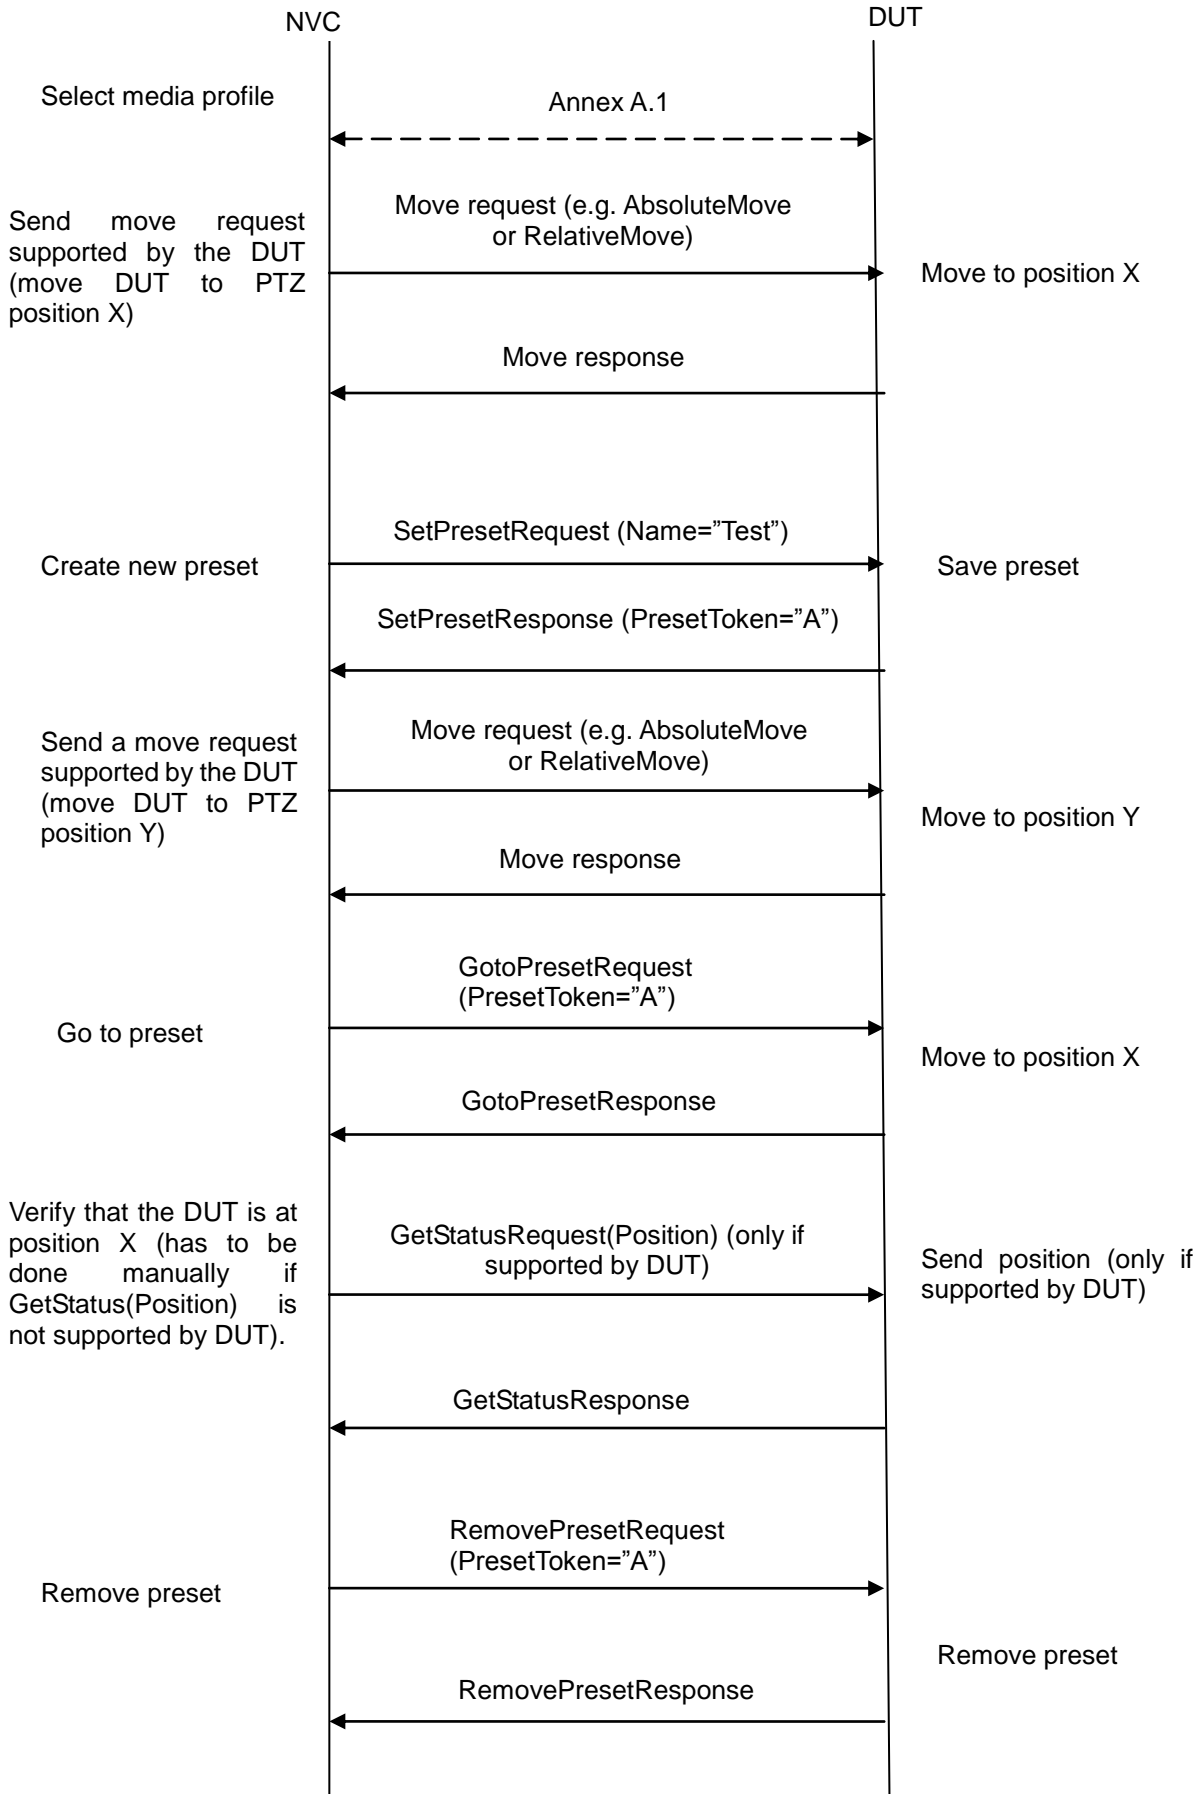

Test Procedure:

1. NVC configures and selects a media profile as described in Annex A.1.
2. Position the DUT so that is at PTZPosition X using a move request supported by the DUT (e.g. AbsoluteMove or RelativeMove).
3. Create a new preset using SetPresetRequest (Name="Test").
4. Verify that the DUT sends a SetPresetResponse and a PresetToken for the preset. The PresetToken will need to be used in the following test steps. The PresetToken can have any valid value but it will be referred to as "PresetToken="A" in this test case.
5. Move DUT so that it is **not** at PTZPosition X (e.g. using AbsoluteMove Y).
6. NVC sends GotoPresetRequest (PresetToken="A").
7. DUT goes to the preset PTZ position and sends a GotoPresetResponse.
8. Verify that the DUT is at PTZPosition X. GetStatus(Position) can be used if it is supported, else this will have to be done manually.
9. NVC sends a RemovePresetRequest (PresetToken="A") to the DUT and the DUT removes the preset.

Test Result:

PASS –

DUT passes all assertions.

FAIL –

DUT's move operation failed.

DUT did not send SetPresetResponse message with a PresetToken.

DUT did not go to the correct position after GotoPresetRequest was sent.

DUT did not send GotoPresetResponse.

Note: There is no specific requirement on what the exact value for PTZPosition X should be used in this test case.

PTZ accuracy is out of scope for this Test Specification. Therefore the position reported by the DUT in the GetStatusResponse does not have to be exactly the same as the position of the preset created with the SetPresetRequest.

4.4.3 REMOVE PRESET

Test Label: PTZ RemovePreset

Test Case ID: PTZ-4-1-3

ONVIF Core Specification Coverage: RemovePreset, SetPreset, GetPresets

Command Under Test: RemovePreset

WSDL Reference: ptz.wsdl


Requirement Level: MUST IF SUPPORTED (PTZ) & IMPLEMENTED Presets)

Test Purpose: To verify that it is possible to remove presets using the RemovePreset operation.

Pre-Requisite: A ProfileToken that refers to a Media Profile that includes a PTZConfiguration for the PTZNode is required.

Test Configuration: NVC and DUT

Test Sequence:

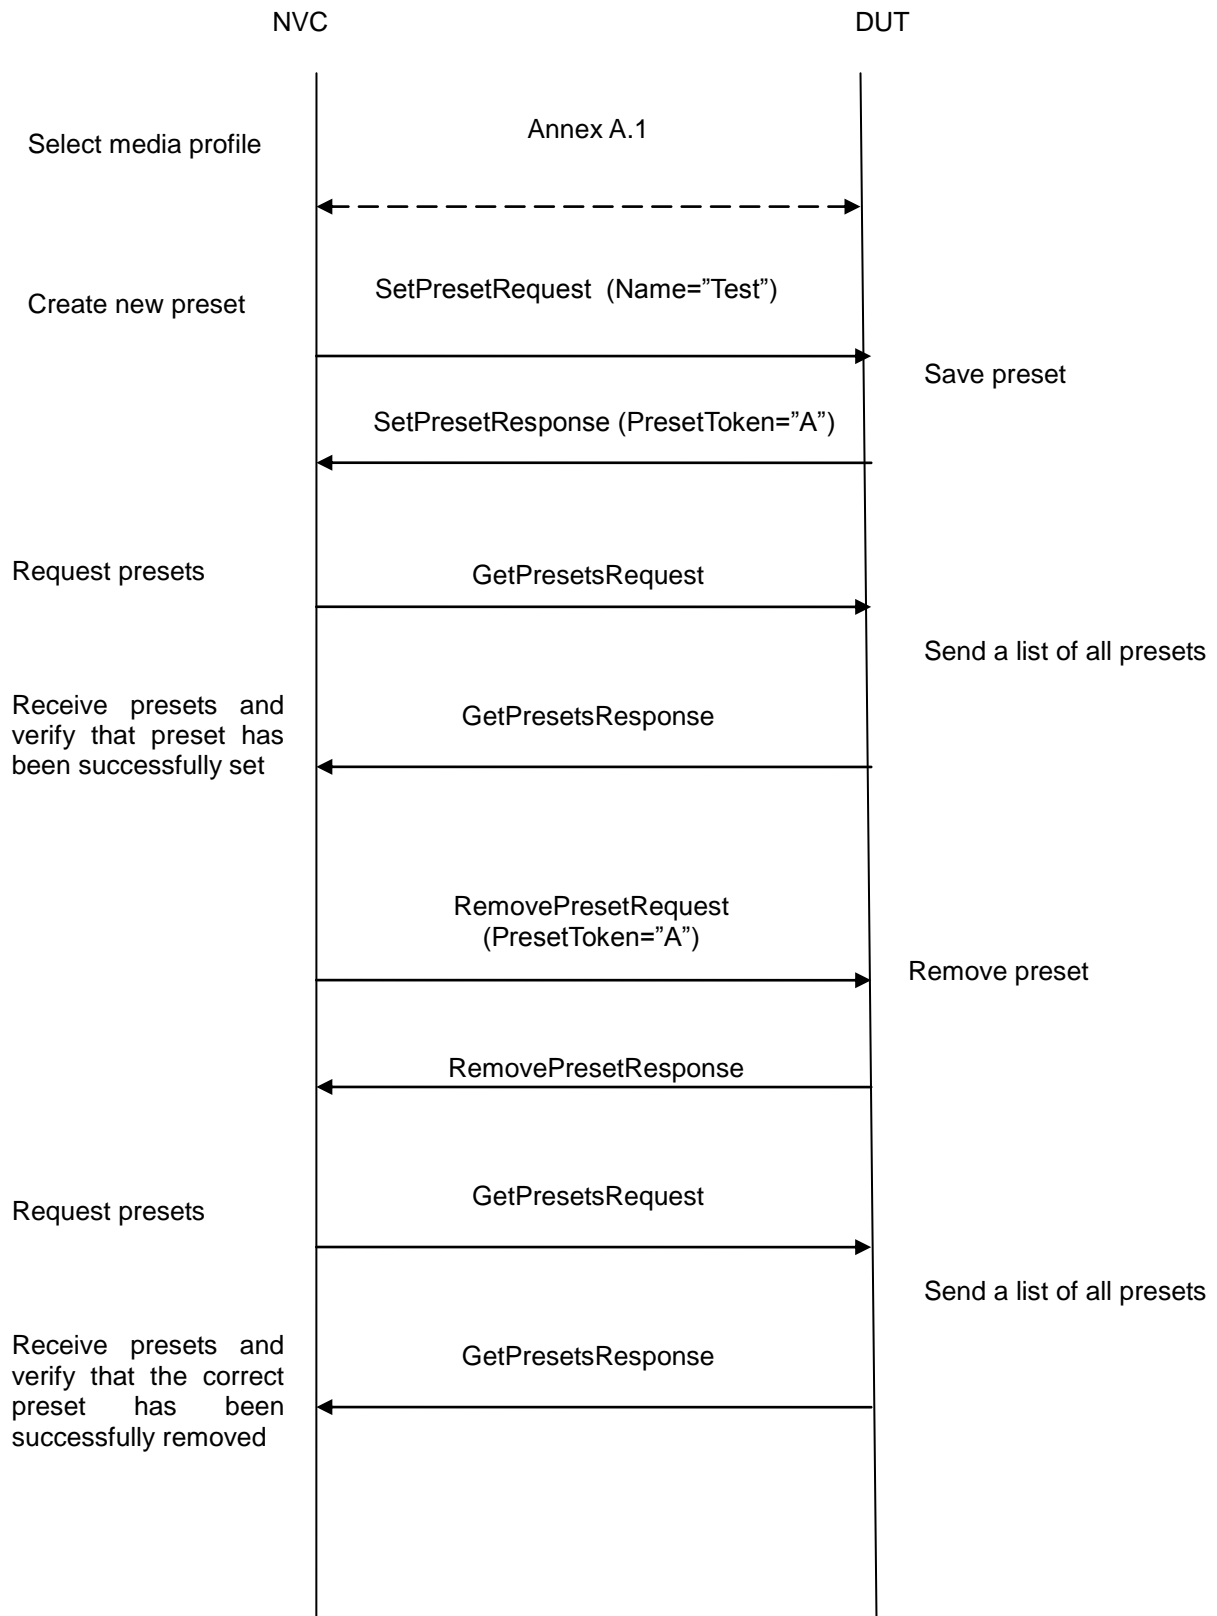

Test Procedure:

1. NVC configures and selects a media profile as described in Annex A.1.
2. NVC creates a new preset using SetPresetRequest (Name="Test")
3. DUT saves the preset and sends a SetPresetResponse. Verify that the DUT sends a SetPresetResponse and a PresetToken for the preset. The PresetToken will need to be used in the following test steps. The PresetToken can have any valid value but it will be referred to as "PresetToken="A" in this test case.
4. NVC sends a GetPresetsRequest.
5. DUT sends a list of presets in the GetPresetsResponse.
6. Verify that there is a preset with PresetToken="A" and Name="Test".
7. NVC sends RemovePresetRequest (PresetToken="A")
8. DUT removes preset and sends a RemovePresetResponse
9. NVC sends a GetPresetsRequest.
10. DUT sends a list of presets in the GetPresetsResponse.
11. Verify that there is no preset with PresetToken="A" and Name="Test".

Test Result:**PASS –**

DUT passes all assertions.

FAIL –

DUT did not send SetPresetResponse message with a PresetToken.

DUT did not send GetPresetsResponse message.

DUT did not remove preset after RemovePresetRequest was sent.

DUT did not send RemovePresetResponse.

4.5 Home Position operations**4.5.1 HOME POSITION OPERATIONS (CONFIGURABLE)**

Test Label: PTZ Configurable Home Position

Test Case ID: PTZ-5-1-1

ONVIF Core Specification Coverage: GotoHomePosition, SetHomePosition.

Command Under Test: SetHomePosition, GotoHomePosition

WSDL Reference: ptz.wsdl

Requirement Level: MUST IF SUPPORTED (PTZ &) IMPLEMENTED (Configurable Home position) & IMPLEMENTED (AbsoluteMove or RelativeMove)


Test Purpose: To verify that the SetHomePosition and GotoHomePosition operations are correctly implemented.

Pre-Requisite:

- A ProfileToken that refers to a Media Profile that includes a PTZConfiguration for the PTZNode is required.
- This test case applies to PTZ nodes that support Configurable Home position

Test Configuration: NVC and DUT

Test Sequence:

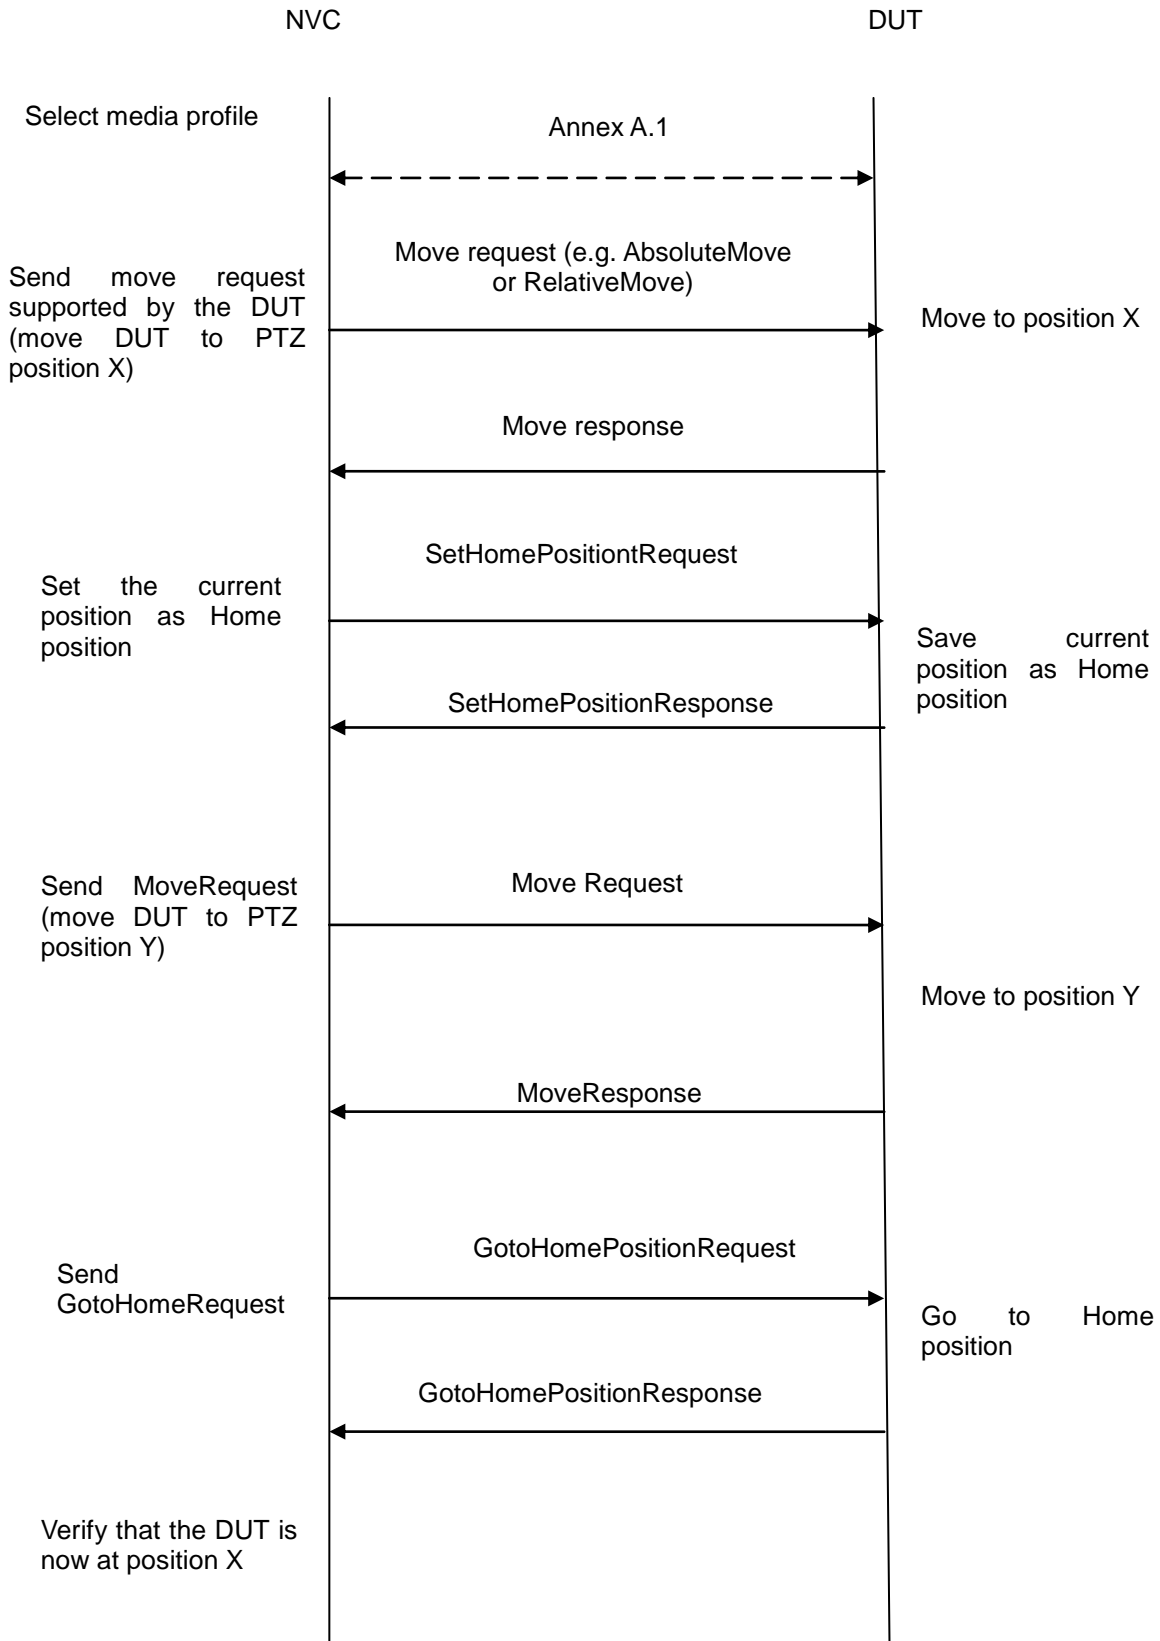

Test Procedure:

1. NVC configures and selects a media profile as described in Annex A.1.
2. Position the DUT so that is at PTZPosition X using a move request supported by the DUT (e.g. AbsoluteMove or RelativeMove).
3. NVC sends a SetHomePositionRequest.
4. DUT sets the Home position to the current position and sends a SetHomePositionResponse.
5. Move DUT so that it is not at PTZPosition X (e.g. using AbsoluteMove Y)
6. NVC sends a GotoHomePositionRequest.
7. DUT goes to the Home PTZ position and sends a GotoHomePositionResponse.
8. Verify that the DUT is at PTZPosition X (GetStatus/Position can be used if it is supported, else this will have to be done manually)

Test Result:**PASS –**

DUT passes all assertions.

FAIL –

DUT's move operation failed.

DUT did not send SetHomePositionResponse message.

DUT did not save the new position as Home position.

DUT did not send GotoHomePositionResponse message.

DUT did not go to Home position.

Note: PTZ accuracy is out of scope for this Test Specification. Therefore the position reported by the DUT in the GetStatusResponse does not have to be exactly the same as the position of the Home position.

4.5.2 HOME POSITION OPERATIONS (FIXED)

Test Label: PTZ Fixed Home Position

Test Case ID: PTZ-5-1-2

ONVIF Core Specification Coverage: GotoHomePosition, SetHomePosition.

Command Under Test: SetHomePosition, GotoHomePosition

WSDL Reference: ptz.wsdl

Requirement Level: MUST IF SUPPORTED (PTZ) & IMPLEMENTED (Fixed Home position) & IMPLEMENTED (AbsoluteMove or RelativeMove)


Test Purpose: To verify that the SetHomePosition and GotoHomePosition operations are correctly implemented.

Pre-Requisite:

- A ProfileToken that refers to a Media Profile that includes a PTZConfiguration for the PTZNode is required.
- This test case applies to PTZ nodes that support fixed Home position

Test Configuration: NVC and DUT

Test Sequence:

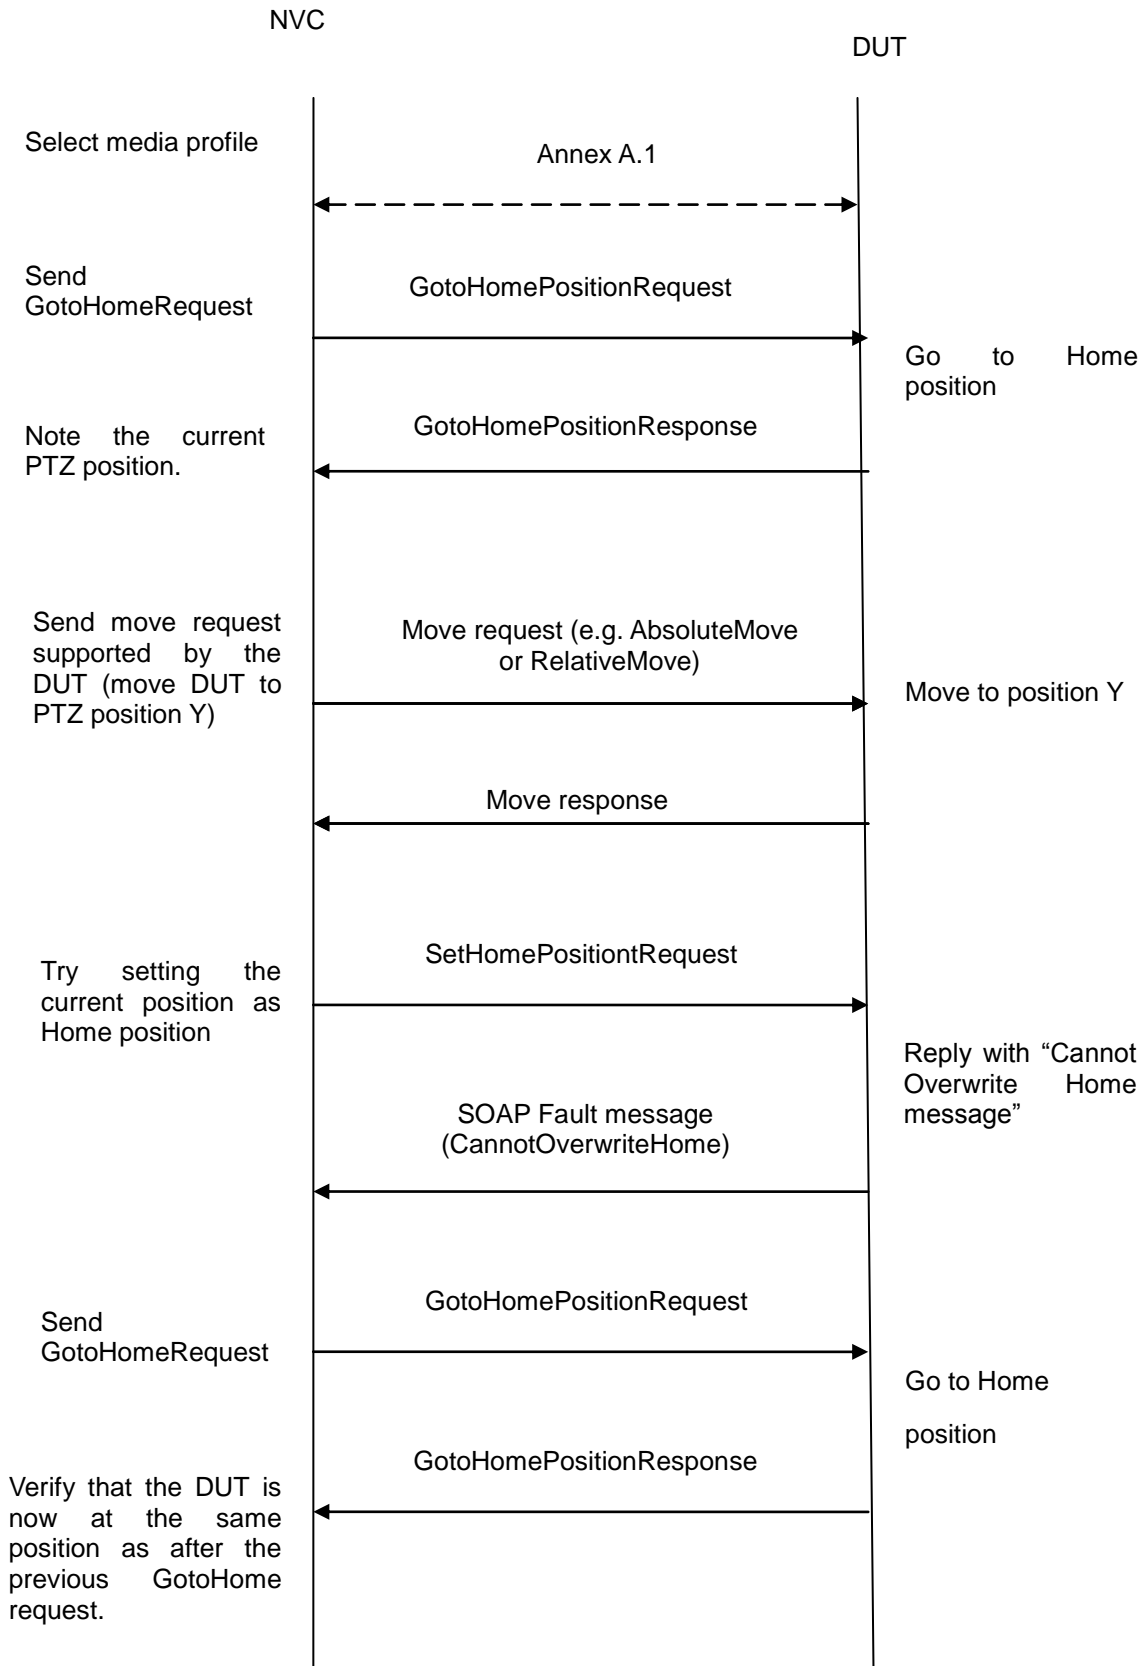

Test Procedure:

1. NVC configures and selects a media profile as described in Annex A.1.
2. NVC sends a GotoHomePositionRequest.
3. DUT goes to the Home position and sends a GotoHomePositionResponse.
4. Note at which PTZPosition the DUT is (GetStatus/Position can be used if it is supported, else this will have to be done manually). This position will be referred to as "PTZPosition A" below.
5. Position the DUT so that is at PTZPosition Y using a move request supported by the DUT (e.g. AbsoluteMove or RelativeMove).
6. NVC sends a SetHomePositionRequest.
7. DUT responds with "Cannot Overwrite Home" message.
8. NVC sends a GotoHomePositionRequest.
9. DUT goes to the Home PTZ position and sends a GotoHomePositionResponse.
10. Verify that the DUT is back at PTZPosition A (GetStatus/Position can be used if it is supported, else this will have to be done manually)

Test Result:

PASS –

DUT passes all assertions.

FAIL –

DUT did not send SOAP Fault message (CannotOverwriteHome).

DUT's move operation failed.

DUT did save the new position ("PTZPosition Y") as Home position.

DUT did not send GotoHomePositionResponse message.

DUT did not go to original Home position ("PTZPosition A").

Note: PTZ accuracy is out of scope for this Test Specification. Therefore the position reported by the DUT in the GetStatusResponse does not have to be exactly the same as the position of the Home position.

4.6 Auxiliary operations

4.6.1 SEND AUXILIARY COMMAND

Test Label: PTZ SendAuxiliaryCommand

Test Case ID: PTZ-6-1-1

ONVIF Core Specification Coverage: SendAuxiliaryCommand.

Command Under Test: SendAuxiliaryCommand

WSDL Reference: ptz.wsdl


Requirement Level: MUST IF SUPPORTED (PTZ) & IMPLEMENTED (Auxiliary operations)

Test Purpose: To verify that it is possible to send an auxiliary command using the SendAuxiliaryCommand operation.

Pre-Requisite: A ProfileToken that refers to a Media Profile that includes a PTZConfiguration for the PTZNode is required.

Test Configuration: NVC and DUT

Test Sequence:

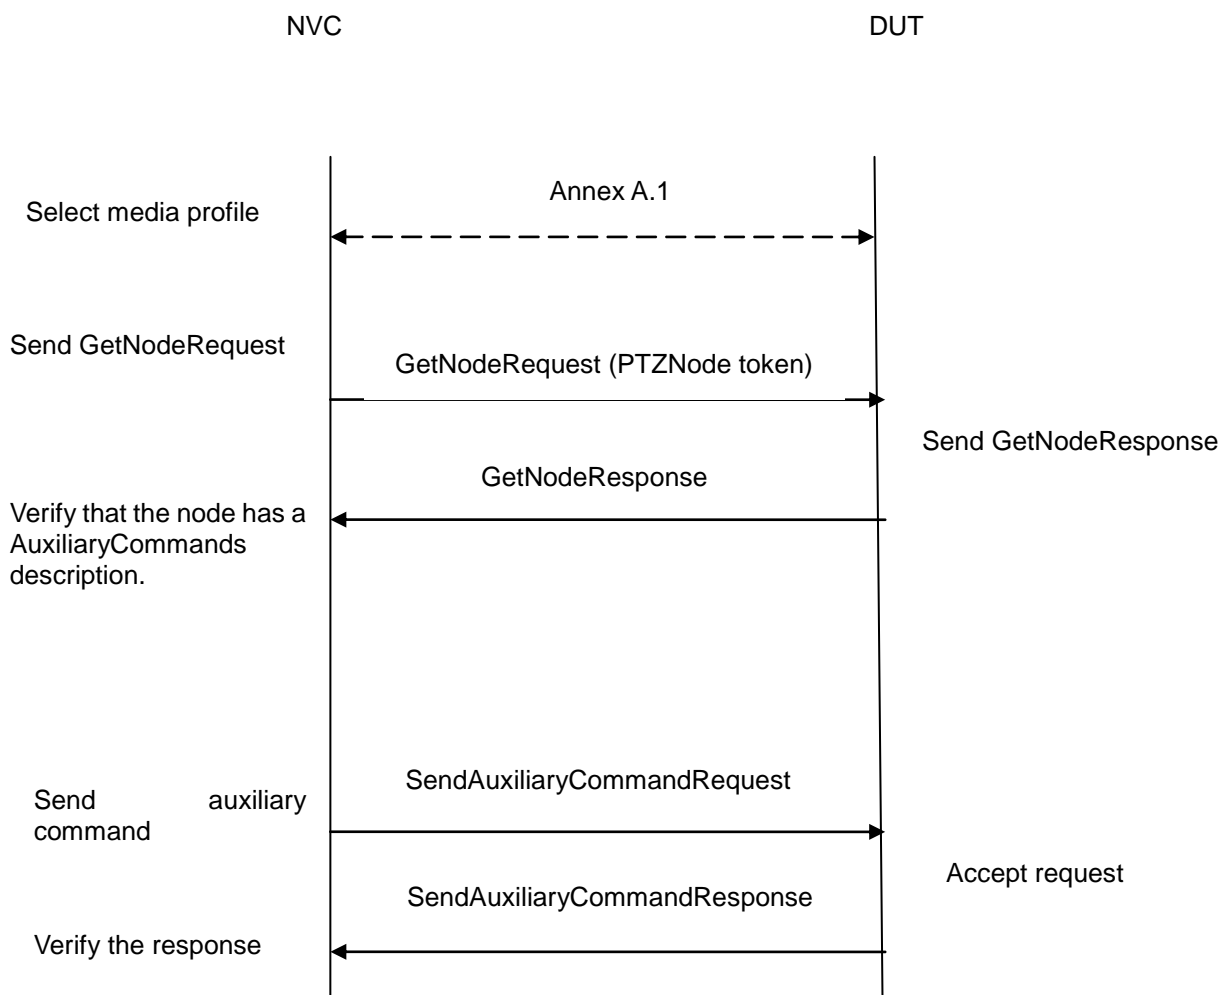

Test Procedure:

1. NVC configures and selects a media profile as described in Annex A.1.
2. NVC sends a GetNodeRequest.
3. DUT sends a GetNodeResponse that includes a list of the supported auxiliary commands.
4. Send an Auxiliary command that matches the supported command listed in the PTZ Node, using SendAuxiliaryCommandRequest.
5. Verify that the DUT sends a SendAuxiliaryCommandResponse

Test Result:**PASS –**

DUT passes all assertions.

FAIL –

DUT did not list the available auxiliary commands in the PTZ Node properties.

DUT did not send SendAuxiliaryCommandResponse.

Note: It is outside the scope of this test case to verify that the functionality connected to an Auxiliary command works as intended. This should be independently verified by the person executing the test.

4.7 Predefined PTZ spaces**4.7.1 Absolute Position Spaces****4.7.1.1 GENERIC PAN/TILT POSITION SPACE**

Test Label: PTZ Absolute Position Spaces Generic Pan/Tilt

Test Case ID: PTZ-7-1-1

ONVIF Core Specification Coverage: Generic Pan/Tilt Position Space

Command Under Test: None

WSDL Reference: ptz.wsdl


Requirement Level: MUST IF SUPPORTED (PTZ) & IMPLEMENTED (Absolute Move - Pan/Tilt)

Test Purpose: To verify that the node supports the Generic Pan/Tilt Position Space for AbsolutePanTilt.

Pre-Requisite: A ProfileToken that refers to a Media Profile that includes a PTZConfiguration for the PTZNode is required.

Test Configuration: NVC and DUT

Test Sequence:

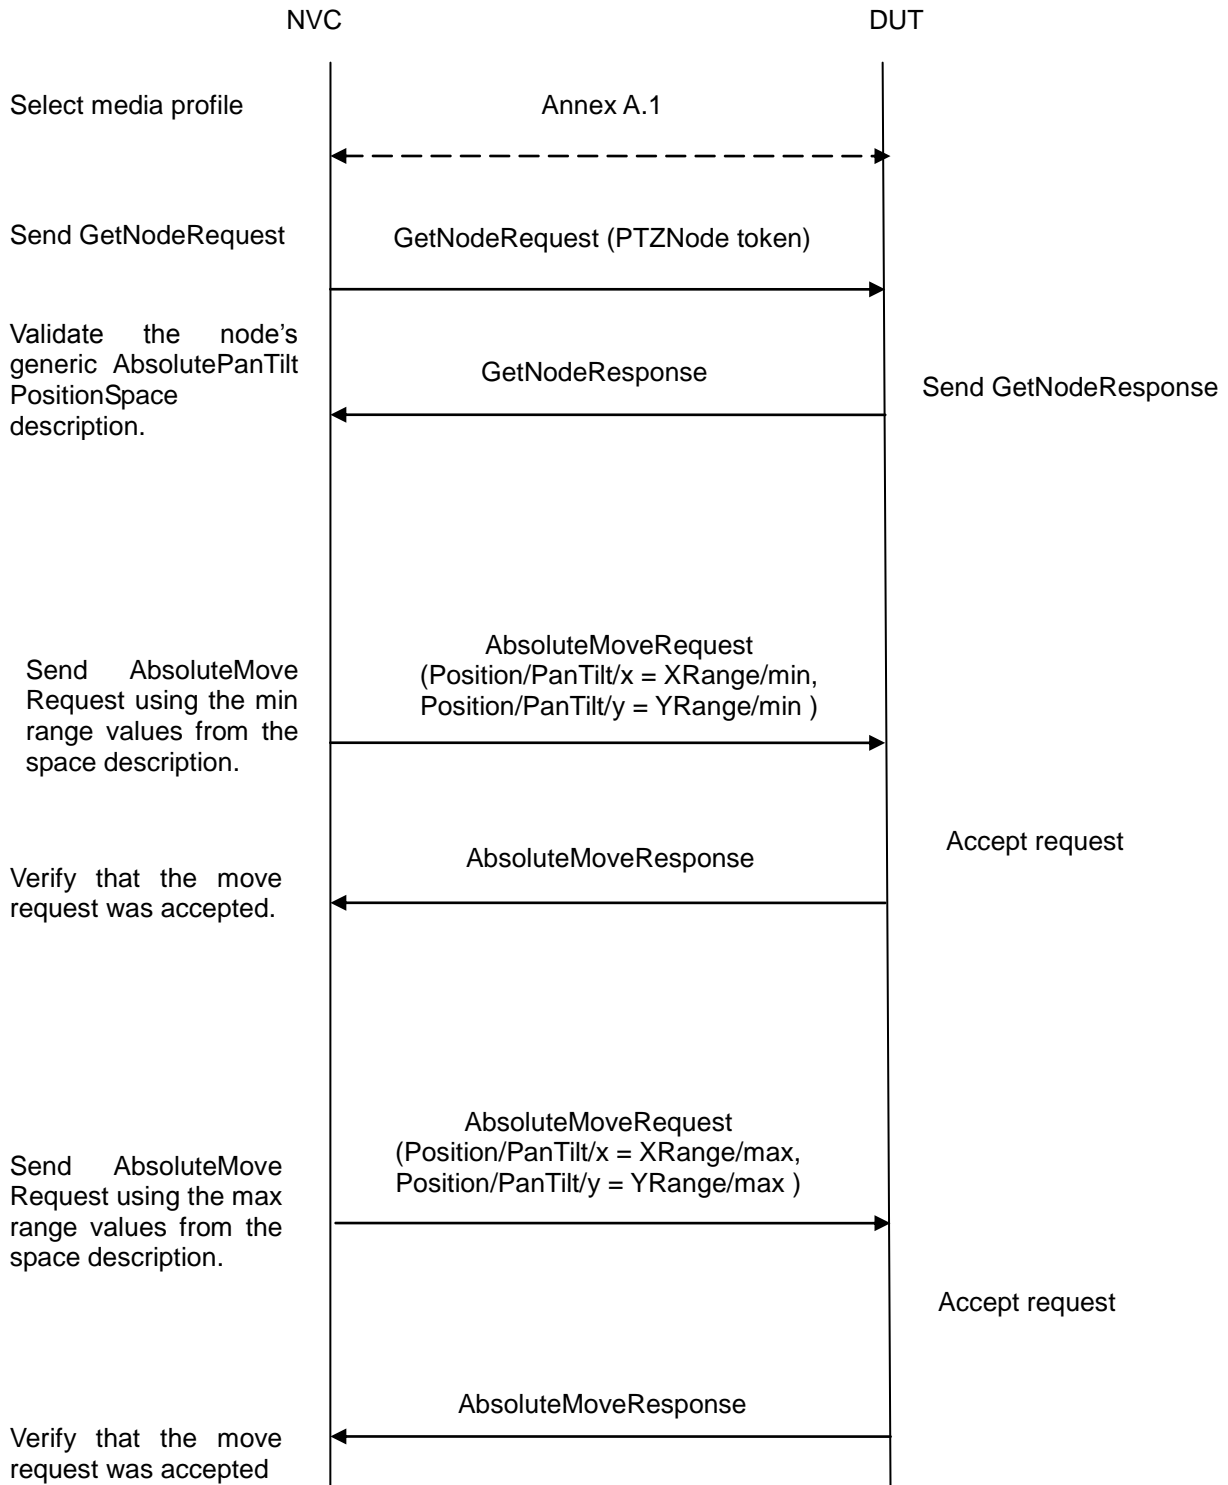

Test Procedure:

1. NVC configures and selects a media profile as described in Annex A.1.
2. NVC sends a GetNodeRequest to the DUT.
3. Verify that the node's Absolute Position Space description is correctly formed and that the allowed range is specified.
4. NVC sends a valid AbsoluteMoveRequest using the min XRange/YRange values from the space description.
5. Verify that the AbsoluteMoveRequest is accepted.
6. NVC sends a valid AbsoluteMoveRequest using the max XRange/YRange values from the space description.
7. Verify that the AbsoluteMoveRequest is accepted.
8. Repeat test procedure for all PTZNodes available in the DUT.

Test Result:**PASS –**

DUT passes all assertions.

FAIL –

The DUT does not have a Generic Pan/Tilt Position Space description for AbsolutePanTilt.

The allowed range is not specified

A valid AbsoluteMove operation does not succeed

Note: This test case MUST be repeated for all PTZNodes available in the DUT

4.7.1.2 GENERIC ZOOM POSITION SPACE

Test Label: PTZ – Absolute Position Spaces – Generic Zoom

Test Case ID: PTZ-7-1-2

ONVIF Core Specification Coverage: Generic Zoom Position Space

Command Under Test: None

WSDL Reference: ptz.wsdl


Requirement Level: MUST IF SUPPORTED (PTZ) & IMPLEMENTED (Absolute Move - Zoom)

Test Purpose: To verify that the node supports the Generic Zoom Position Space for Absolute Zoom.

Pre-Requisite: A ProfileToken that refers to a Media Profile that includes a PTZConfiguration for the PTZNode is required.

Test Configuration: NVC and DUT

Test Sequence:

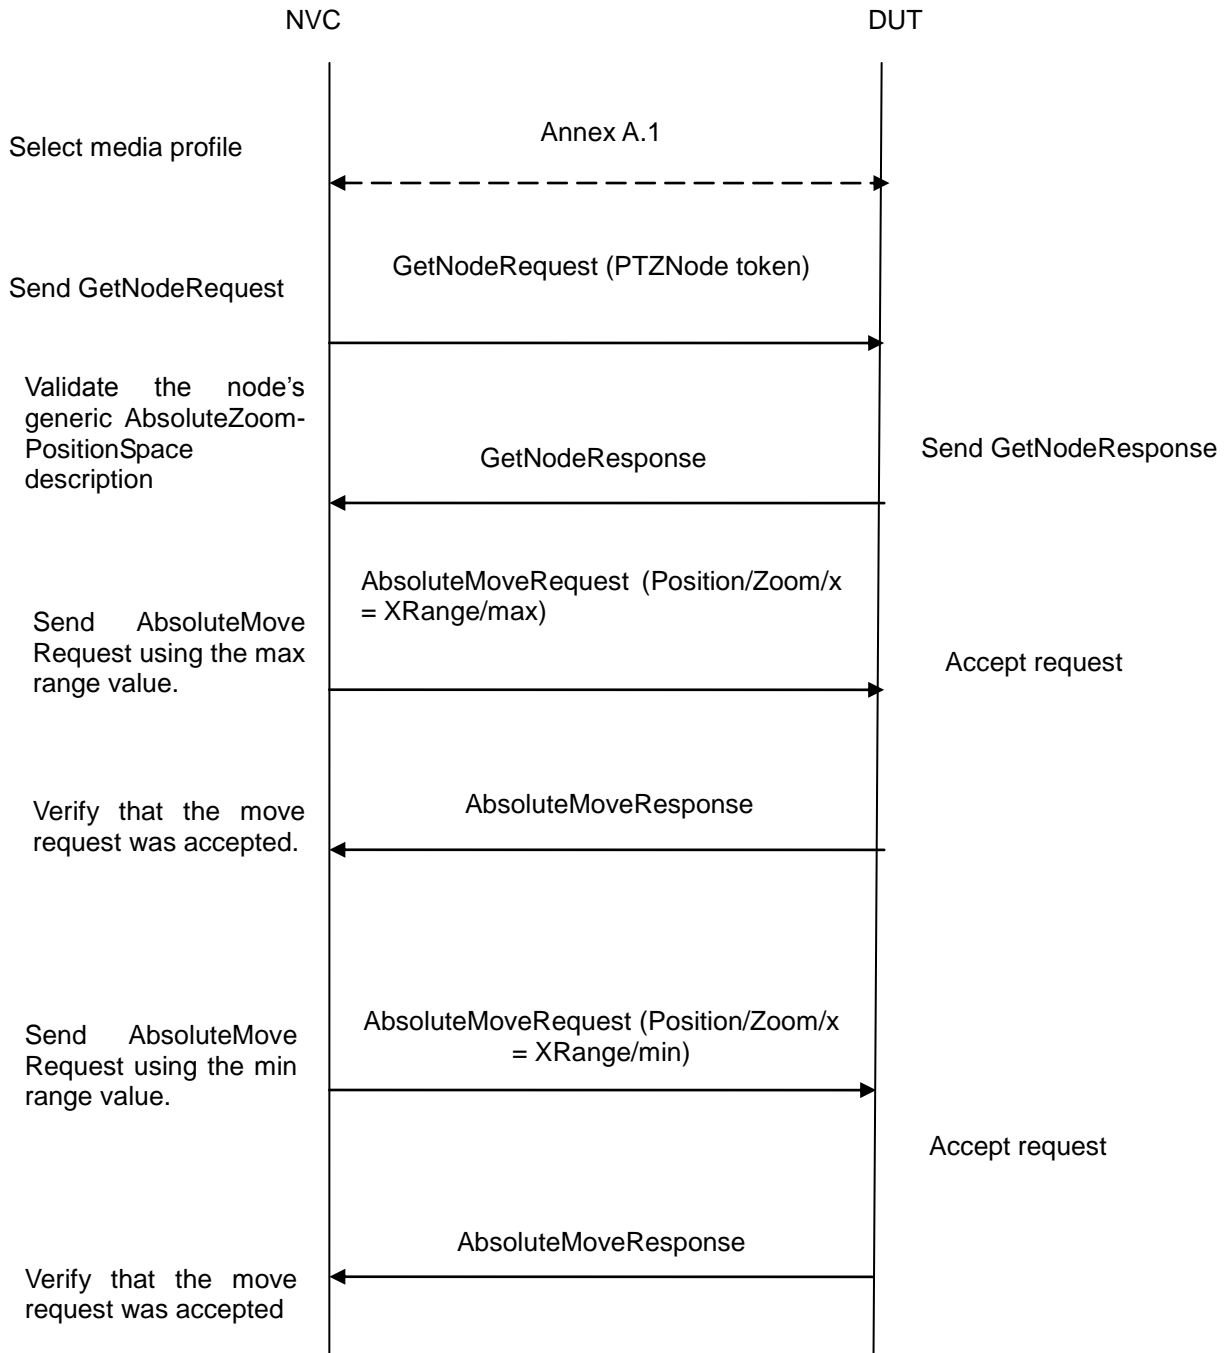

Test Procedure:

1. NVC configures and selects a media profile as described in Annex A.1.
2. NVC sends a GetNodeRequest to the DUT.

3. Verify that the node's Absolute Position Space description is correctly formed and that the allowed range is specified.
4. NVC sends a valid AbsoluteMoveRequest using the max Xrange value from the space description.
5. Verify that the AbsoluteMoveRequest is accepted.
6. NVC sends a valid AbsoluteMoveRequest using the min Xrange value from the space description.
7. Verify that the AbsoluteMoveRequest is accepted.
8. Repeat test procedure for all PTZNodes available in the DUT.

Test Result:

PASS –

DUT passes all assertions.

FAIL –

The DUT does not have a Generic Zoom Position Space description for AbsoluteZoom.

The allowed range is not specified

A valid AbsoluteMove operation does not succeed

Note: This test case MUST be repeated for all PTZNodes available in the DUT

4.7.2 Relative Translation Spaces

4.7.2.1 GENERIC PAN/TILT TRANSLATION SPACE

Test Label: PTZ – Relative Translation Spaces – Generic Pan/Tilt

Test Case ID: PTZ-7-2-1

ONVIF Core Specification Coverage: Generic Pan/Tilt Translation Space

Command Under Test: None

WSDL Reference: ptz.wsdl


Requirement Level: MUST IF SUPPORTED (PTZ) & IMPLEMENTED (Relative pan/tilt)

Test Purpose: To verify that the node supports the Generic Pan/Tilt Translation Space for Relative Pan/Tilt.

Pre-Requisite: A ProfileToken that refers to a Media Profile that includes a PTZConfiguration for the PTZNode is required.

Test Configuration: NVC and DUT

Test Sequence:

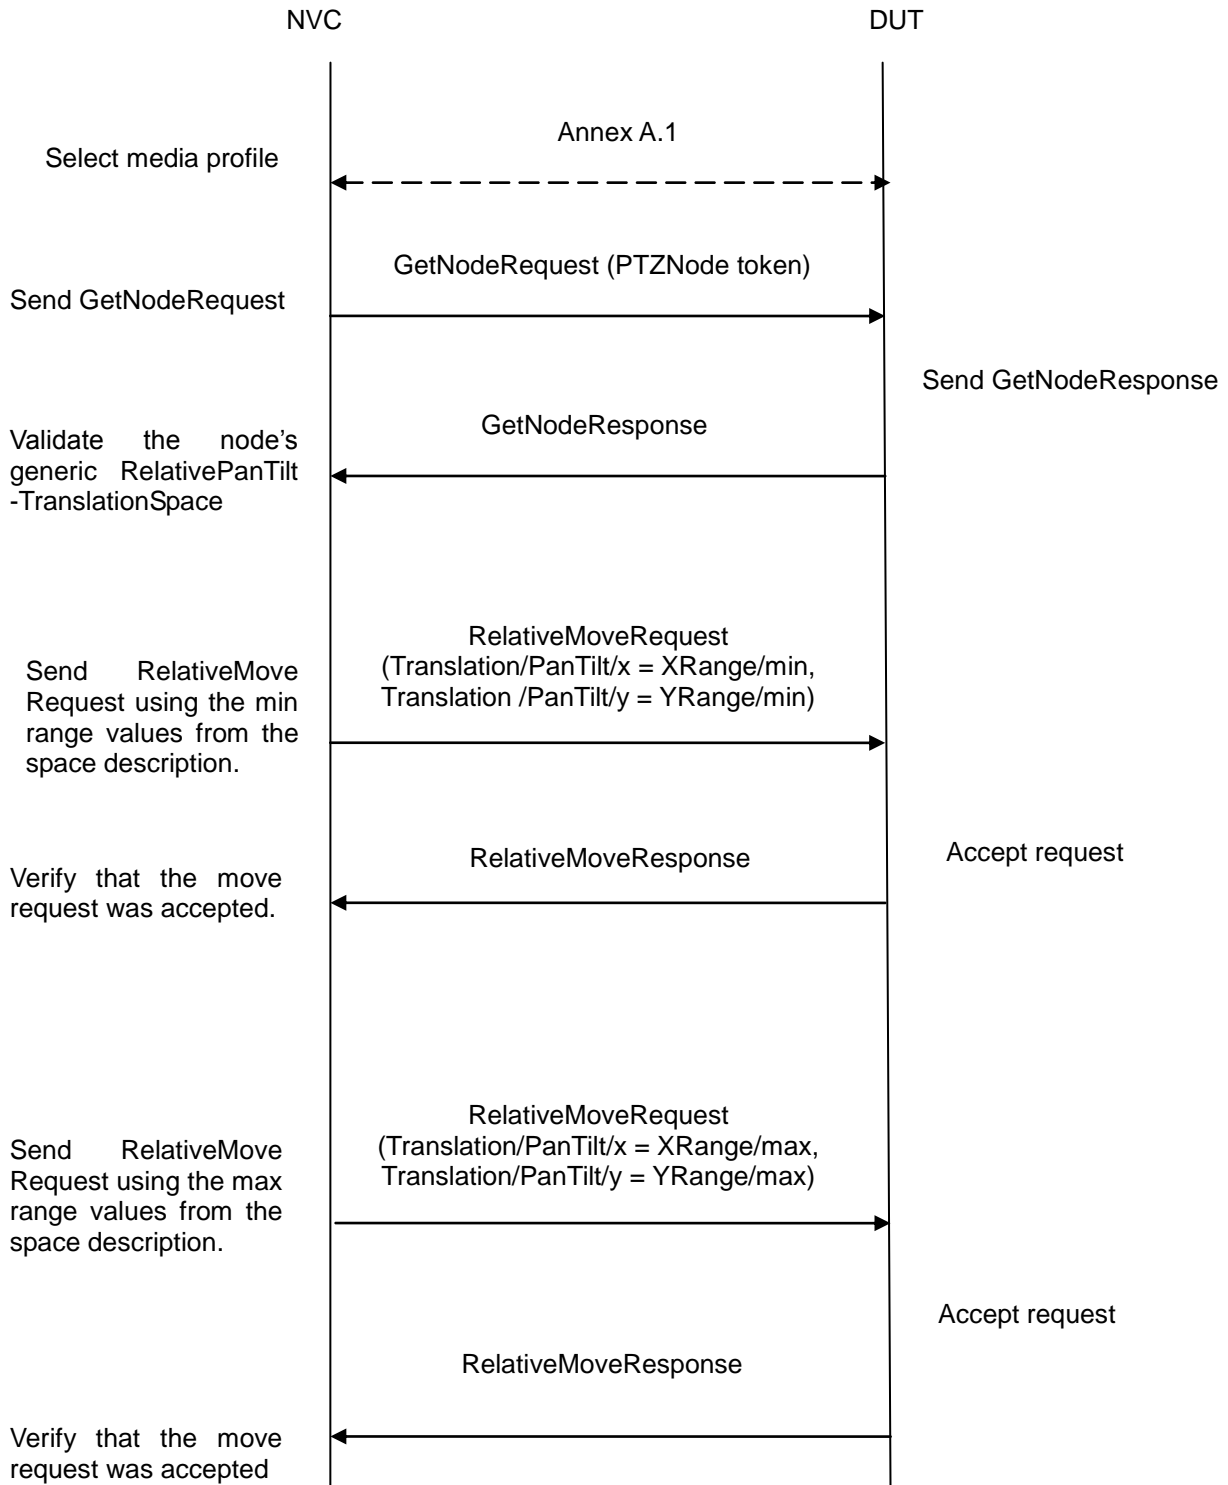

Test Procedure:

1. NVC configures and selects a media profile as described in Annex A.1.
2. NVC sends a GetNodeRequest to the DUT.
3. Verify that the node's Relative Translation Space description is correctly formed and that the allowed range is specified.
4. NVC sends a valid RelativeMoveRequest using the min XRange/YRange values from the space description.
5. Verify that the RelativeMoveRequest is accepted.
6. NVC sends a valid RelativeMoveRequest using the max XRange/YRange values from the space description.
7. Verify that the RelativeMoveRequest is accepted.
8. Repeat test procedure for all PTZNodes available in the DUT.

Test Result:**PASS –**

DUT passes all assertions.

FAIL –

The DUT does not have a Generic Pan/Tilt Translation Space description for Relative Pan/Tilt.

The allowed range is not specified

A valid RelativeMove operation does not succeed

Note: This test case MUST be repeated for all PTZNodes available in the DUT

4.7.2.2 GENERIC ZOOM TRANSLATION SPACE

Test Label: PTZ – Relative Translation Spaces – Generic Zoom

Test Case ID: PTZ-7-2-2

ONVIF Core Specification Coverage: Generic Zoom Translation Space

Command Under Test: None

WSDL Reference: ptz.wsdl


Requirement Level: MUST IF SUPPORTED (PTZ) & IMPLEMENTED (Relative zoom)

Test Purpose: To verify that the node supports the Generic Zoom Translation Space for Relative Zoom.

Pre-Requisite: A ProfileToken that refers to a Media Profile that includes a PTZConfiguration for the PTZNode is required.

Test Configuration: NVC and DUT

Test Sequence:

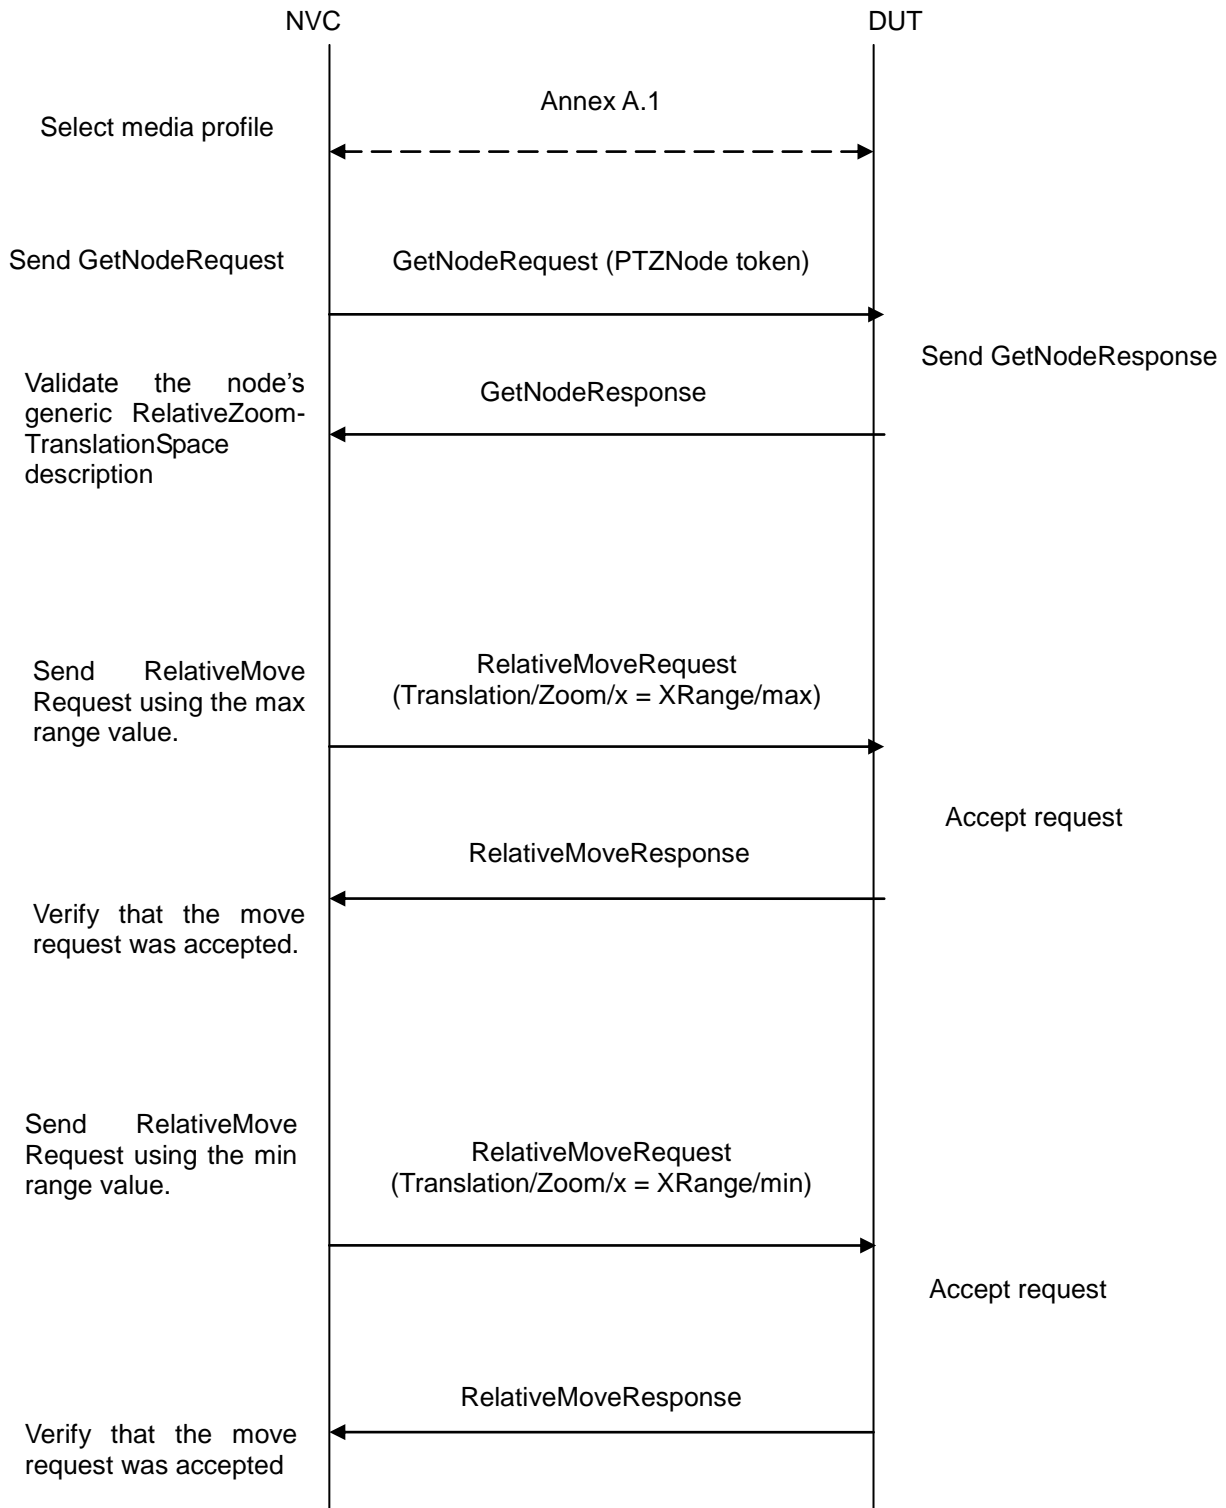

Test Procedure:

1. NVC configures and selects a media profile as described in Annex A.1.
2. NVC sends a GetNodeRequest to the DUT.
3. Verify that the node's Relative Translation Space description is correctly formed and that the allowed range is specified.
4. NVC sends a valid RelativeMoveRequest using the max XRange value from the space description.
5. Verify that the RelativeMoveRequest is accepted.
6. NVC sends a valid RelativeMoveRequest using the min XRange value from the space description.
7. Verify that the RelativeMoveRequest is accepted.
8. Repeat test procedure for all PTZNodes available in the DUT.

Test Result:**PASS –**

DUT passes all assertions.

FAIL –

The DUT does not have a Generic Zoom Translation Space description for RelativeZoom.

The allowed range is not specified

A valid RelativeMove operation does not succeed

Note: This test case MUST be repeated for all PTZNodes available in the DUT

4.7.3 Continuous Velocity Spaces**4.7.3.1 GENERIC PAN/TILT VELOCITY SPACE**

Test Label: PTZ – Continuous Velocity Spaces – Generic Pan/Tilt

Test Case ID: PTZ-7-3-1

ONVIF Core Specification Coverage: Generic Pan/Tilt Velocity Space

Command Under Test: None

WSDL Reference: ptz.wsdl


Requirement Level: MUST IF SUPPORTED (PTZ) & IMPLEMENTED (Pan/Tilt movement)

Test Purpose: To verify that the node supports the Generic Pan/Tilt Velocity Space for Continuous Pan/Tilt.

Pre-Requisite: A ProfileToken that refers to a Media Profile that includes a PTZConfiguration for the PTZNode is required.

Test Configuration: NVC and DUT

Test Sequence:

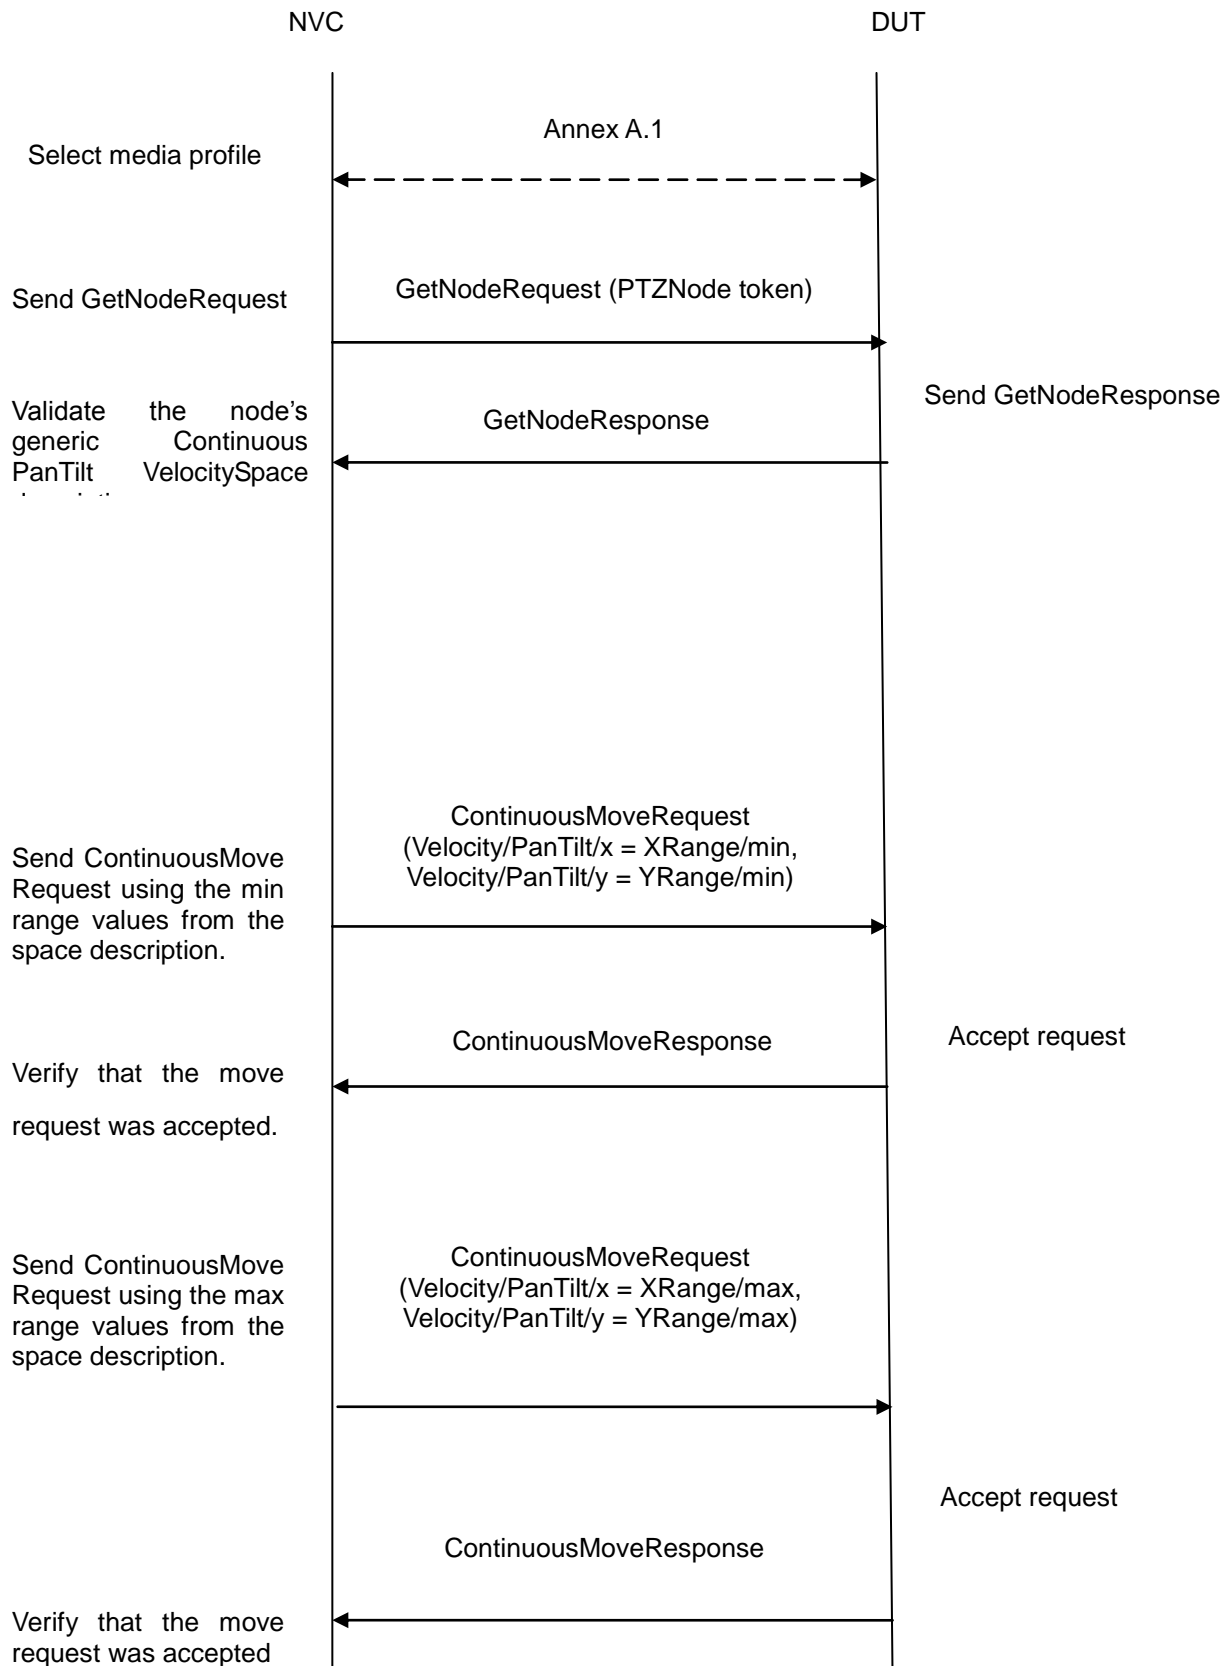

Test Procedure:

1. NVC configures and selects a media profile as described in Annex A.1.
2. NVC sends a GetNodeRequest to the DUT.
3. Verify that the node's Continuous Velocity Space description is correctly formed and that the allowed range is specified.
4. NVC sends a valid ContinuousMoveRequest using the min XRange/YRange values from the space description.
5. Verify that the ContinuousMoveRequest is accepted.
6. NVC sends a valid ContinuousMoveRequest using the min XRange/YRange values from the space description.
7. Verify that the ContinuousMoveRequest is accepted.
8. Repeat test procedure for all PTZNodes available in the DUT.

Test Result:

PASS –

DUT passes all assertions.

FAIL –

The DUT does not have a Generic Pan/Tilt Velocity Space description for Continuous Pan/Tilt.

The allowed range is not specified

A valid ContinuousMove operation does not succeed

Note: This test case MUST be repeated for all PTZNodes available in the DUT

4.7.3.2 GENERIC ZOOM VELOCITY SPACE

Test Label: PTZ – Continuous Velocity Spaces – Generic Zoom

Test Case ID: PTZ-7-3-2

ONVIF Core Specification Coverage: Generic Zoom Velocity Space

Command Under Test: None

WSDL Reference: ptz.wsdl


Requirement Level: MUST IF SUPPORTED (PTZ) & IMPLEMENTED (Zoom movement)

Test Purpose: To verify that the node supports the Generic Zoom Velocity Space for Continuous Zoom.

Pre-Requisite: A ProfileToken that refers to a Media Profile that includes a PTZConfiguration for the PTZNode is required.

Test Configuration: NVC and DUT

Test Sequence:

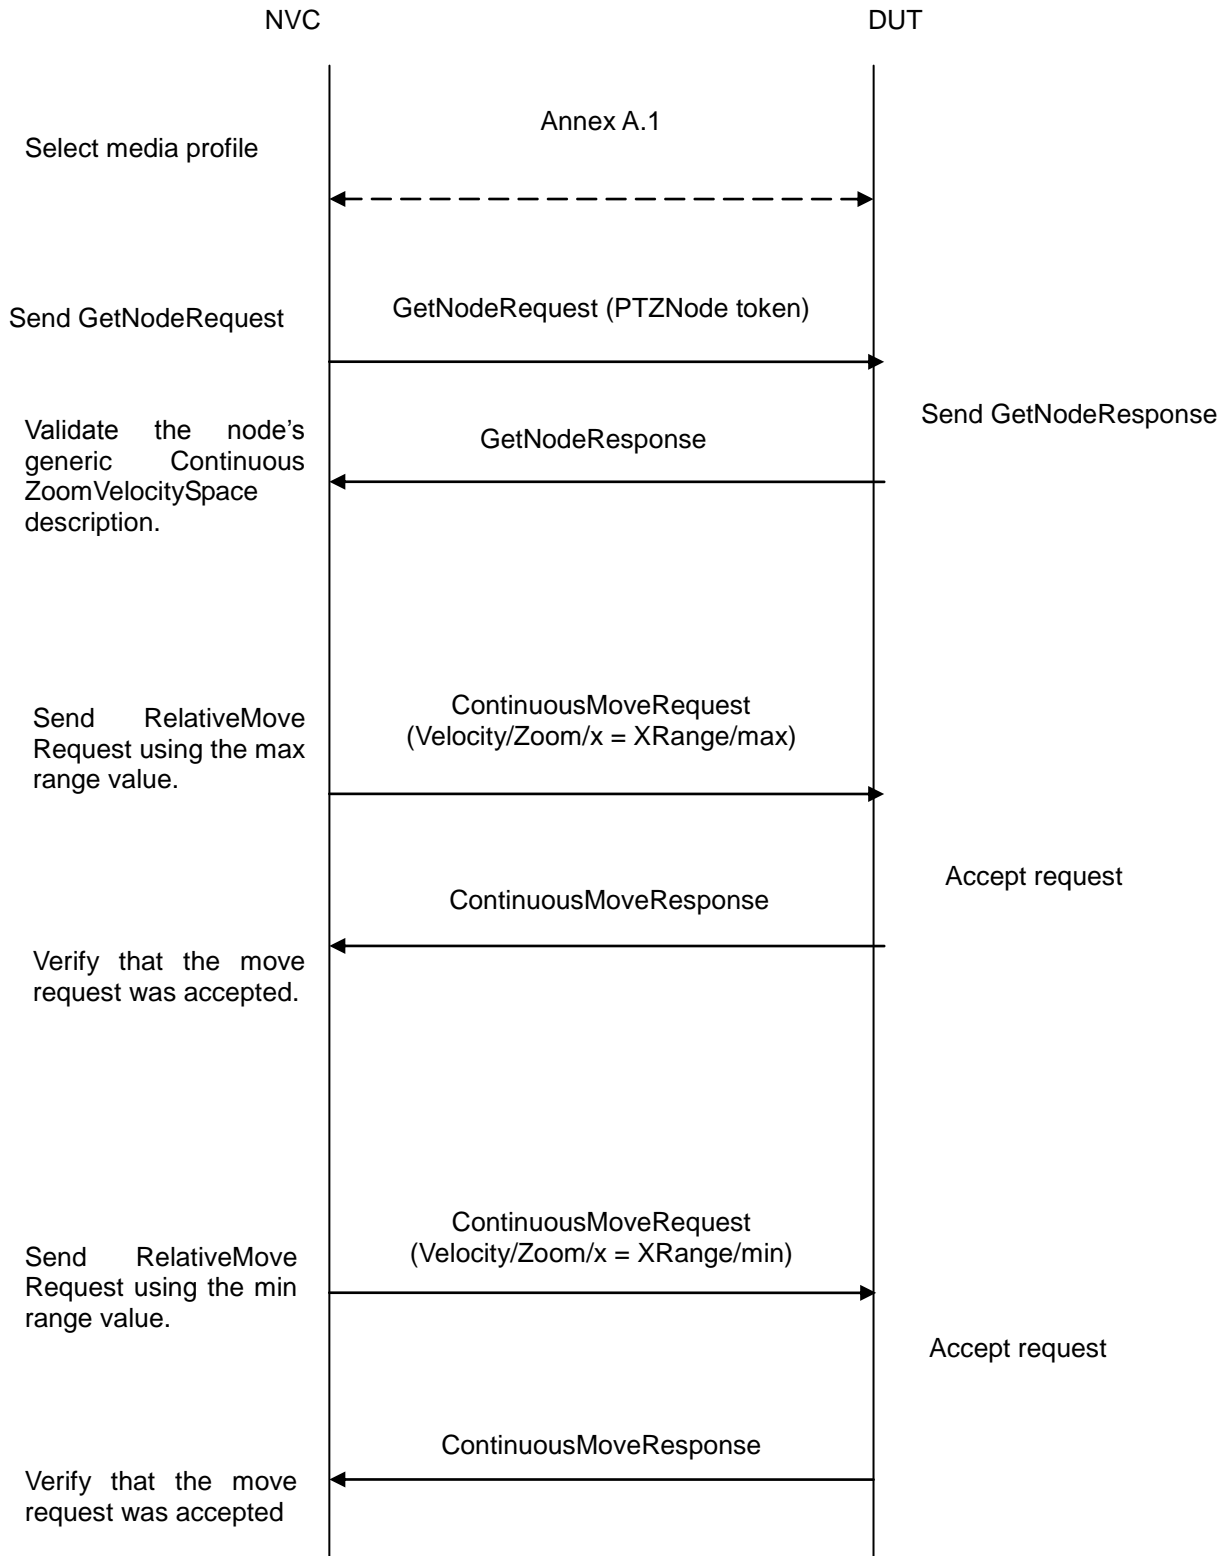

Test Procedure:

1. NVC configures and selects a media profile as described in Annex A.1.
2. NVC sends a GetNodeRequest to the DUT.
3. Verify that the node's Continuous Velocity Space description is correctly formed and that the allowed range is specified.
4. NVC sends a valid ContinuousMoveRequest using the max XRange value from the space description.
5. Verify that the ContinuousMoveRequest is accepted.
6. NVC sends a valid ContinuousMoveRequest using the min XRange value from the space description.
7. Verify that the ContinuousMoveRequest is accepted.
8. Repeat test procedure for all PTZNodes available in the DUT.

Test Result:**PASS –**

DUT passes all assertions.

FAIL –

The DUT does not have a Generic Zoom Velocity Space description for ContinuousZoom.

The allowed range is not specified

A valid ContinuousMove operation does not succeed

Note: This test case MUST be repeated for all PTZNodes available in the DUT

4.7.4 Speed Spaces**4.7.4.1 GENERIC PAN/TILT SPEED SPACE**

Test Label: PTZ – Speed Spaces – Generic Pan/Tilt

Test Case ID: PTZ-7-4-1

ONVIF Core Specification Coverage: Generic Pan/Tilt Speed Space

Command Under Test: None

WSDL Reference: ptz.wsdl


Requirement Level: MUST IF SUPPORTED (PTZ) & IMPLEMENTED (Speed for pan/tilt)

Test Purpose: To verify that the node supports the Generic Pan/Tilt Speed Space for pan/tilt.

Pre-Requisite: A ProfileToken that refers to a Media Profile that includes a PTZConfiguration for the PTZNode is required.

Test Configuration: NVC and DUT

Test Sequence:

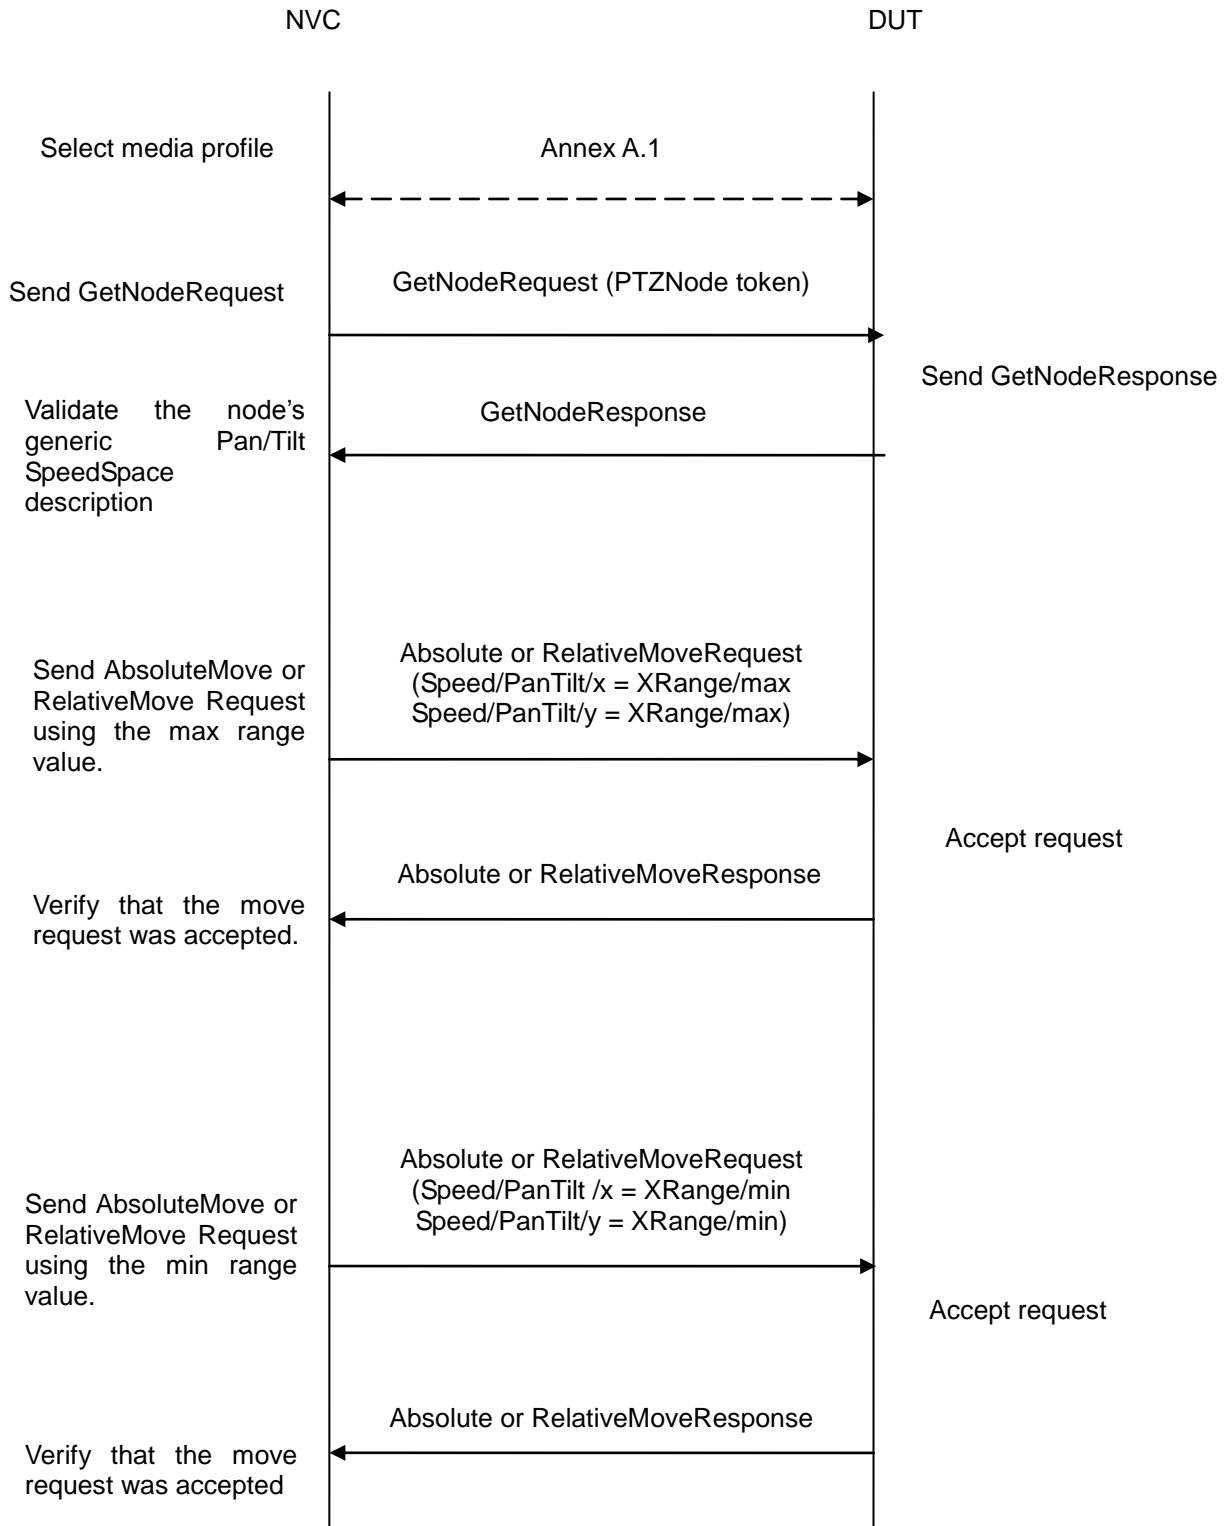

Test Procedure:

1. NVC configures and selects a media profile as described in Annex A.1.
2. NVC sends a GetNodeRequest to the DUT.
3. Verify that the node's Speed Space description is correctly formed and that the allowed range is specified.
4. NVC sends a valid AbsoluteMove or RelativeMove Request (depending on which is supported by the PTZNode) using the max XRange value from the space description.
5. Verify that the AbsoluteMove (or RelativeMove) Request is accepted.
6. NVC sends a valid AbsoluteMove or RelativeMove Request (depending on which is supported by the PTZNode) using the min XRange value from the space description.
7. Verify that the AbsoluteMove (or RelativeMove) Request is accepted.
8. Repeat test procedure for all PTZNodes available in the DUT.

Test Result:**PASS –**

DUT passes all assertions.

FAIL –

The DUT does not have a Generic Pan/Tilt Position Space description for Speed Pan/Tilt.

The allowed range is not specified

A valid AbsoluteMove or RelativeMove Request (depending on which is supported by the PTZNode) does not succeed.

Note: This test case MUST be repeated for all PTZNodes available in the DUT

4.7.4.2 GENERIC ZOOM SPEED SPACE

Test Label: PTZ – Speed Spaces – Generic Zoom

Test Case ID: PTZ-7-4-2

ONVIF Core Specification Coverage: Generic Zoom Speed Space

Command Under Test: None


WSDL Reference: ptz.wsdl

Requirement Level: MUST IF SUPPORTED (PTZ) & IMPLEMENTED (Speed for zoom)

Test Purpose: To verify that the node supports the Generic Zoom Speed Space for zoom.

Pre-Requisite: A ProfileToken that refers to a Media Profile that includes a PTZConfiguration for the PTZNode is required.

Test Configuration: NVC and DUT

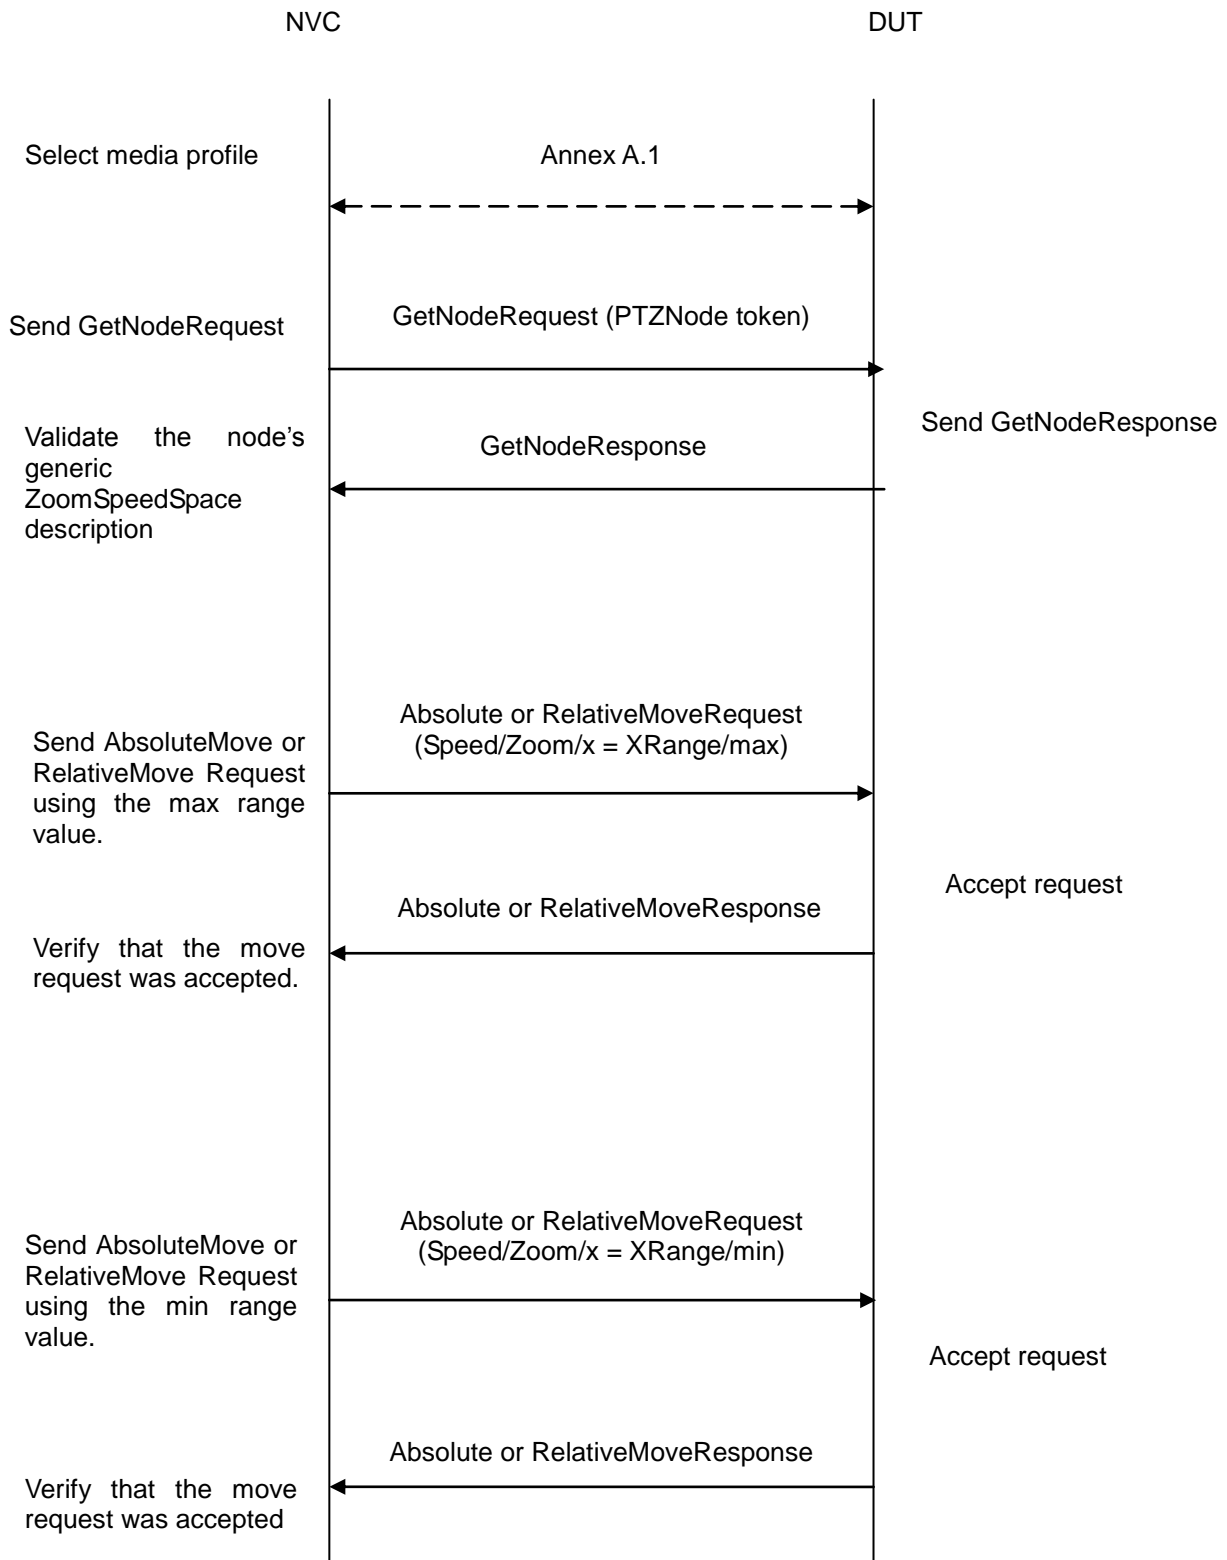Test Sequence:

Test Procedure:

1. NVC configures and selects a media profile as described in Annex A.1.
2. NVC sends a GetNodeRequest to the DUT.
3. DUT sends a GetNodeResponse
4. Verify that the node's Speed Space description is correctly formed and that the allowed range is specified.
5. NVC sends a valid AbsoluteMove or RelativeMove Request (depending on which is supported by the PTZNode) using the max XRange value from the space description.
6. Verify that the AbsoluteMove (or RelativeMove) Request is accepted.
7. NVC sends a valid AbsoluteMove or RelativeMove Request (depending on which is supported by the PTZNode) using the min XRange value from the space description.
8. Verify that the AbsoluteMove (or RelativeMove) Request is accepted.
9. Repeat test procedure for all PTZNodes available in the DUT.

Test Result:**PASS –**

DUT passes all assertions.

FAIL –

The DUT does not have a Generic Pan/Tilt Speed Space description for SpeedZoom.

The allowed range is not specified

Note: This test case MUST be repeated for all PTZNodes available in the DUT

Annex A

This section describes the meaning of the following definitions. These definitions are used in the test case description.

A.1 Media Profile Configuration for PTZ Control

For the execution of PTZ control test cases, NVC has to select and configure the media profile as follows.

1. Retrieve media profiles by invoking GetProfiles command. Check whether a media profile contains PTZ configuration or not.
2. If no media profile contains PTZ configuration, retrieve PTZ configurations by invoking GetConfigurations command.
3. Add PTZ configuration to media profile by invoking AddPTZConfiguration command.
4. Get PTZ configuration options for the added PTZ Configuration by invoking GetConfiguraitonOptions

