



PicsimLab_0_8_1

Luis Claudio Gambôa Lopes <lcgamboa@yahoo.com>

Download: [github](#)

July 13, 2020

Contents

I	English Manual	3
1	Introduction	6
2	Interface	7
3	Boards	10
4	Serial Communication	16
5	MPLABX Integrated Debug (PIC and ATMEGA)	20
6	Arduino IDE Integration (ATMEGA)	21
7	avr-gdb Debug (ATMEGA)	22
8	Oscilloscope	23
9	Spare Parts	24
10	How To's	44
II	Manual em Português	45
1	Introdução	48
2	Interface	49
3	Placas	52
4	Comunicação Serial	58
5	Depuração Integrada com o MPLABX (PIC e ATMEGA)	62
6	Integração com a IDE do Arduino (ATMEGA)	63

<i>CONTENTS</i>	2
7 Depuração com o avr-gdb (ATMEGA)	64
8 Osciloscópio	65
9 Partes Avulsas	66
10 Como Fazer (How To's)	78
III License	79

Part I

English Manual

Table of Contents

1	Introduction	6
2	Interface	7
2.1	Main Window	7
2.2	Commands	9
3	Boards	10
3.1	Features of Board 0	10
3.2	Features of Board 1	10
3.3	Features of Board 2	11
3.4	Features of Board 3	12
3.5	Features of Board 4	13
3.6	Features of Board 5	15
4	Serial Communication	16
4.1	Com0com Installation and Configuration(Windows)	16
4.2	tty0tty Installation and Configuration (Linux)	18
5	MPLABX Integrated Debug (PIC and ATMEGA)	20
6	Arduino IDE Integration (ATMEGA)	21
7	avr-gdb Debug (ATMEGA)	22
8	Oscilloscope	23


9 Spare Parts	24
9.1 7 Segments Display	26
9.2 Buzzer	27
9.3 D. Transfer Function	27
9.4 Gamepad	27
9.5 IO 74xx595	28
9.6 IO MCP23S17	28
9.7 IO PCF8574	29
9.8 Keypad	29
9.9 LCD hd44780	31
9.10 LCD pcf8833	33
9.11 LCD pcd8544	33
9.12 LED Matrix	34
9.13 LEDs	34
9.14 MEM 24CXXX	35
9.15 Potentiometers	35
9.16 Push Buttons	36
9.17 Push Buttons (Analogic)	37
9.18 RGB LED	37
9.19 RTC ds1307	37
9.20 RTC pfc8563	38
9.21 Servo Motor	38
9.22 Signal Generator	39
9.23 Step Motor	40
9.24 Switchs	41
9.25 Temperature System	41
9.26 VCD dump	42
9.27 VCD dump (Analogic)	42
10 How To's	44

Chapter 1

Introduction

PICSimLab means PIC Simulator Laboratory

PICSimLab is a realtime emulator of development boards with integrated MPLABX/avr-gdb debugger. PICSimLab supports [picsim](#) microcontrollers (PIC16F84, PIC16F628, PIC16F648, PIC16F777, PIC16F877A, PIC18F452, PIC18F4520, PIC18F4550 and PIC18F4620) and [simavr](#) microcontroller (ATMEGA328). PICSimLab have integration with MPLABX/Arduino IDE for programming the boards microcontrollers.

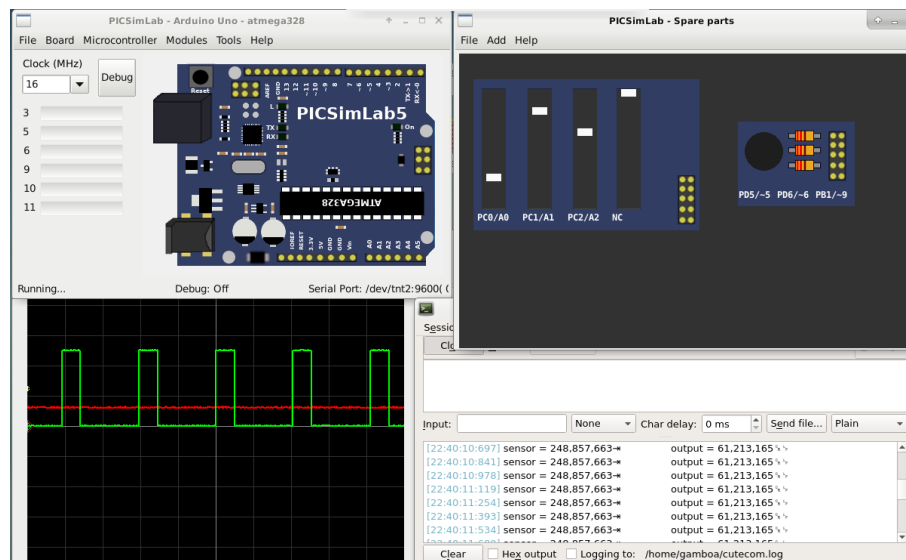


Chapter 2

Interface

2.1 Main Window

The main window consists of a menu, a status bar, a frequency selection combobox, an on/off button to trigger debugging, some board-specific controls and the part of the board interface itself.

In the title of the window is shown the name of the simulator PICSimLab, followed by the board and the microcontroller in use.

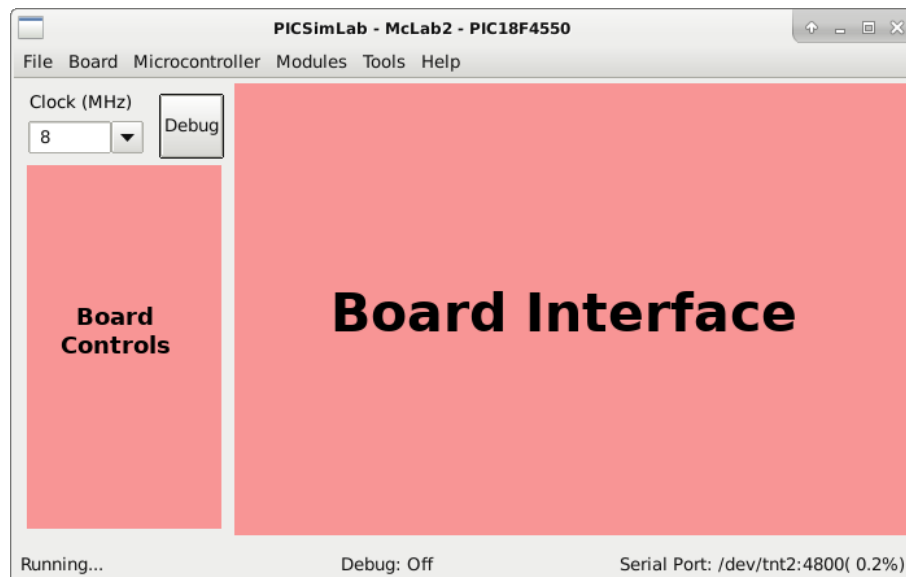

The frequency selection combobox directly changes the working speed of the microcontroller, when the “Clock (MHz)” label goes red indicates that the computer is not being able to run the program in real time for the selected clock. In this case


the simulation may present some difference than expected and the CPU load will be increased.

The on/off button to enable debugging is used to enable debugging support, with the active support there is a higher simulation load.

The menus and their functions are listed below:

- File
 - Load Hex - Load .hex files
 - Reload Last - Reload the last used .hex file
 - Save Hex - Save memory in a .hex file
 - Configure - Open the configuration windows
 - Save Workspace - Saves all current workspace settings to a .pzw file
 - Load Workspace - Loads saved settings from a .pzw file
 - Exit
- Board
 - 0 Breadboard - Choose board 0
 - 1 McLab1 - Choose board 1
 - 2 K16F - Choose board 2
 - 3 McLab2 - Choose board 3
 - 4 PICGenios - Choose board 4
 - 5 Arduino - Choose board 5
- Microcontroller
 - xxxxx - Selects the microcontroller to be used (depends on the selected board)
- Modules
 - Oscilloscope - Open the oscilloscope window
 - Spare parts - Open the spare parts window
- Tools
 - Serial Terminal - Open the serial terminal [Cutecom](#)
 - Serial Remote Tank - Open the [remote tank simulator](#)
 - Esp8266 Modem Simulator - Open the [Esp8266 Modem Simulator](#)
 - Arduino bootloader - Load microcontroller with Arduino serial bootloader
- Help
 - Contents - Open the Help window

- Examples - Load the examples
- About - Show message about author and version

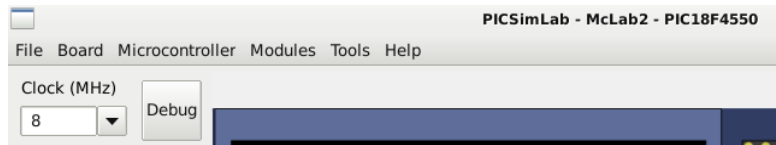

The first part of the status bar shows the state of the simulation, in the middle part the status of the debug support and in the last part the name of the serial port used, its default speed and the error in relation to the real speed configured in the microcontroller.



2.2 Commands

On the interface area of the board it is possible to interact in some ways:

- Click in ICSP connector to load an .hex file.
- Click in PWR button to ON/OFF the emulator..
- The buttons can be activated through mouse or keys 1, 2, 3 e 4.


Chapter 3

Boards

3.1 Features of Board 0

TODO



It is a generic board only with reset, serial and crystal circuits and support to multiple microcontrollers.

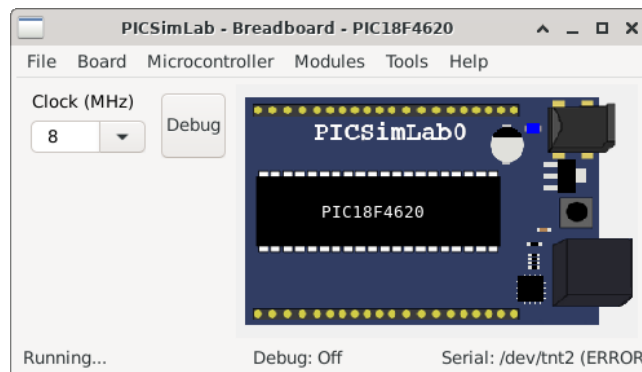

Examples

3.2 Features of Board 1

It emulates the Labtools development board McLab1 that uses one PIC16F84, PIC16F628 or PIC16F648.

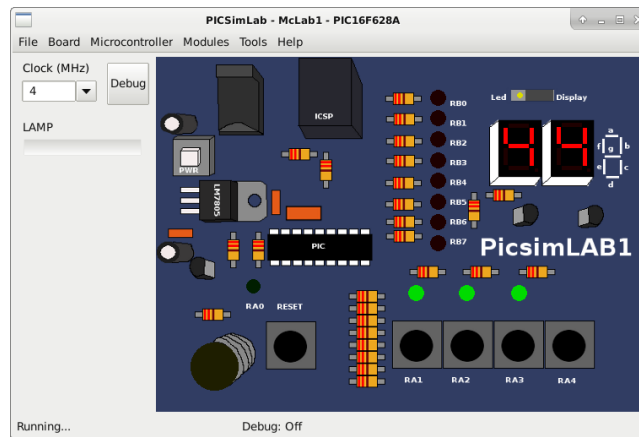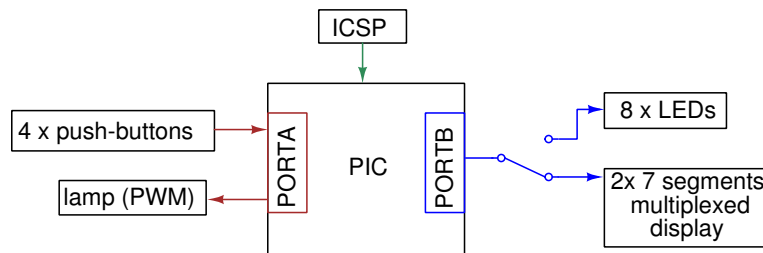



Board 1 schematics.

The code examples can be loaded in PICSIMLAB menu **Help->Examples**.

The source code of PICSIMLAB1 example using [MPLABX](#) and [XC8](#) compiler are in the link: [board_1](#).

3.3 Features of Board 2

It emulates an didactic board developed by author that uses one PIC16F84, PIC16F628 or PIC16F648.

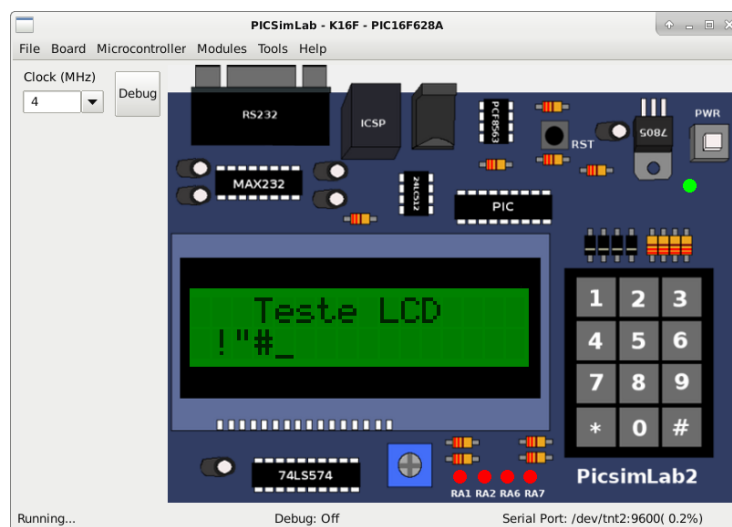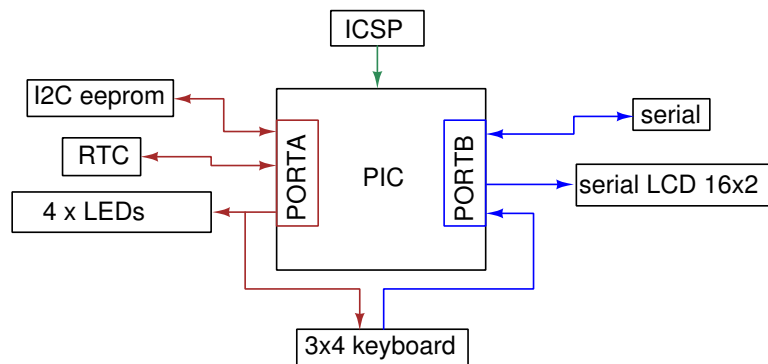


[Board 2 schematics.](#)

The code examples can be loaded in PICSimLab menu **Help->Examples**.

The source code of PICSimLab2 example using [MPLABX](#) and [XC8](#) compiler are in the link: [board_2](#).

3.4 Features of Board 3

It emulates the Labtools development board McLab2 that uses one PIC16F777, PIC16F877A, PIC18F452, PIC18F4520, PIC18F4550 or PIC18F4620.

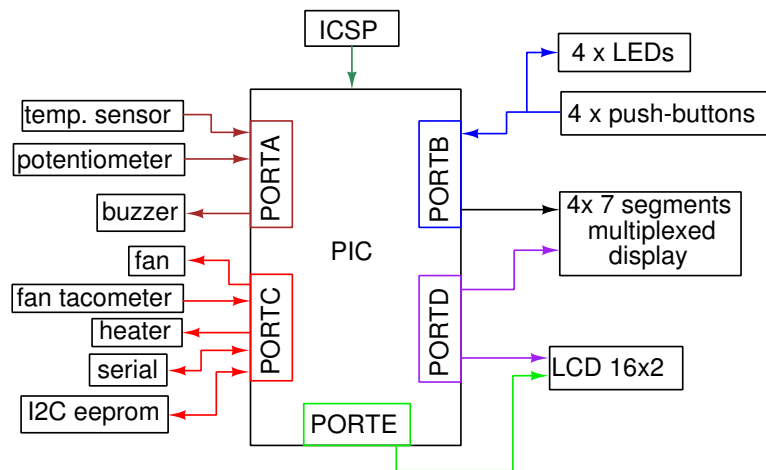



[Board 3 schematics.](#)

The code examples can be loaded in PICSIMLab menu **Help->Examples**.

The source code of PICSIMLab3 example using [MPLABX](#) and [XC8](#) compiler are in the link: [board_3](#).

3.5 Features of Board 4

It emulates the microgenius development board PICGenios PIC18F e PIC16F Microchip that uses one PIC16F777, PIC16F877A, PIC18F452, PIC18F4520, PIC18F4550 or PIC18F4620.

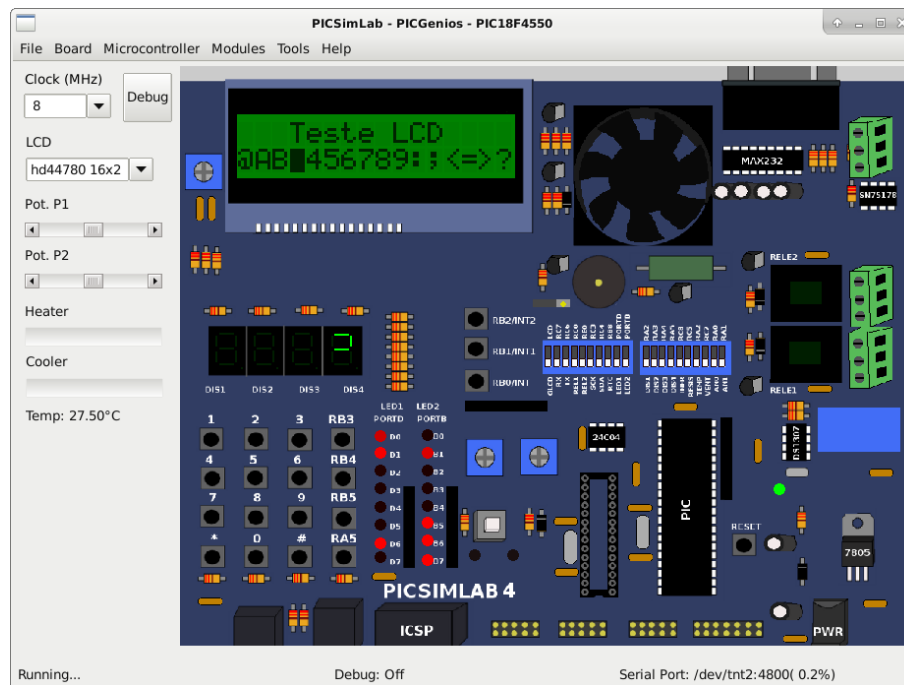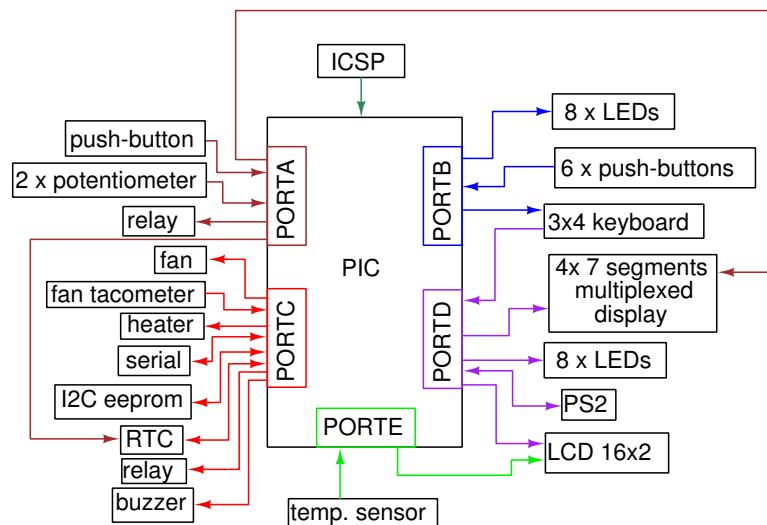


Board 4 schematics.

The code examples can be loaded in PICSIMLab menu **Help->Examples**.

The source code of PICSIMLab4 example using **MPLABX** and **XC8** compiler are in the link: [board_4](#).

3.6 Features of Board 5

It emulates the Arduino Uno development board that uses one ATMEGA328 microcontroller.

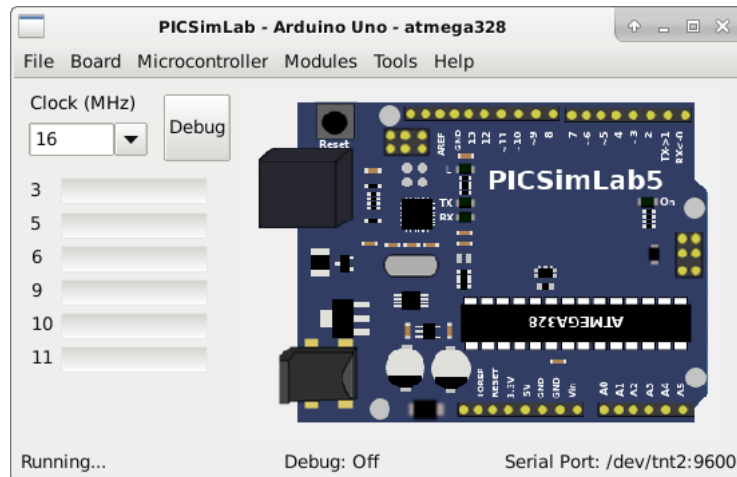

[Board 5 schematics.](#)

The code examples can be loaded in PICSimLab menu **Help->Examples**.

The source code of PICSimLab5 examples using the [Arduino IDE with avr-gcc](#) are in the link: [board_5](#).

More informations about the Arduino in www.arduino.cc

Chapter 4

Serial Communication

To use the simulator serial port, install a NULL-MODEM emulator:

- Windows: com0com <http://sourceforge.net/projects/com0com/>
- Linux: tty0tty <https://github.com/lcgamboa/tty0tty>

For communication the PICSimLab should be connected in one port of the NULL-MODEM emulator and the other application connected in the other port. Configuration examples linking PICSimLab to [Cutecom](#) for serial communication:


OS	PicsimLab port	Cutecom port	NULL-Modem prog.	Connection
Windows	com1	com2	com0com	com1<=>com2
Linux	/dev/tnt2	/dev/tnt3	tty0tty	/dev/tnt2<=>/dev/tnt3

4.1 Com0com Installation and Configuration(Windows)


Download the signed version of [com0com](#).

Unzip the downloaded .zip file and run the specific installer of your operating system, x86 for windows 32-bit or x64 for windows 64-bit.


Configure the “choose components” window as the figure below:

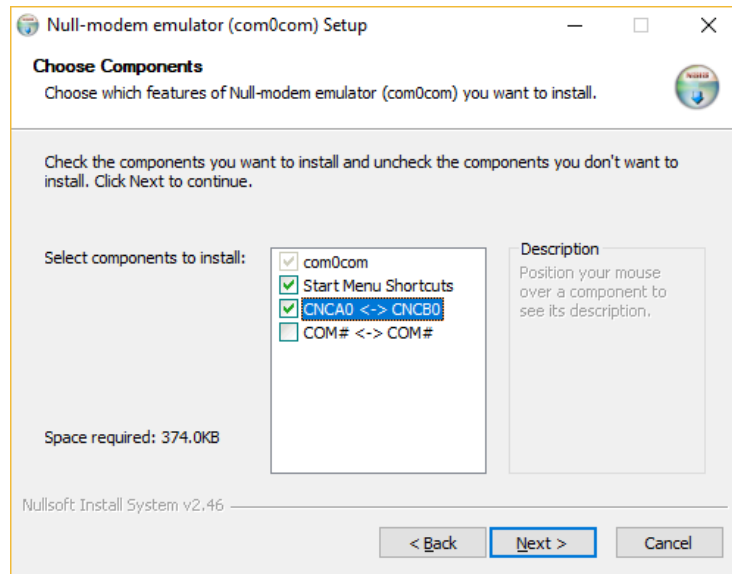

In the last configuration window, check the “Launch setup” option:

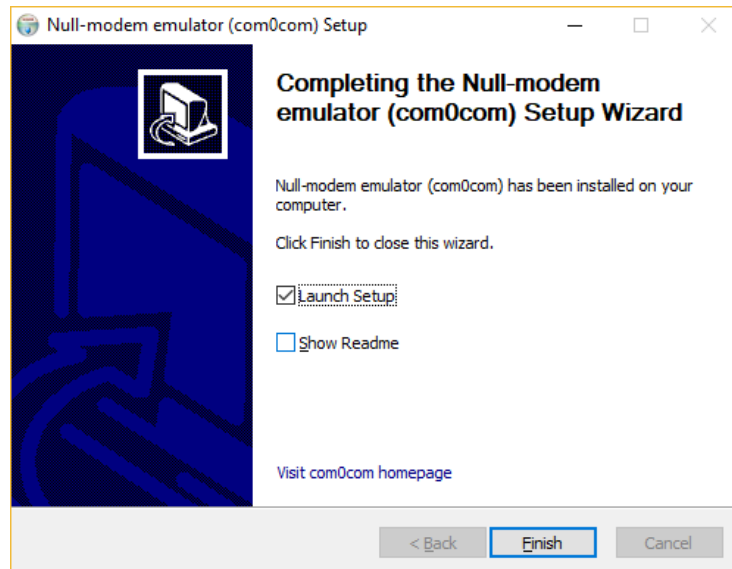

In the setup window, change the port names to COM1, COM2, COM3 Just check the “enable buffer overrun” option on the two ports, click in the “Apply” button and close the setup. In the configuration shown in the figure below, the COM1 and COM2 ports form a NULL-MODEM connection, where one port must be used by the PICSimLab and another by the application with serial communication.

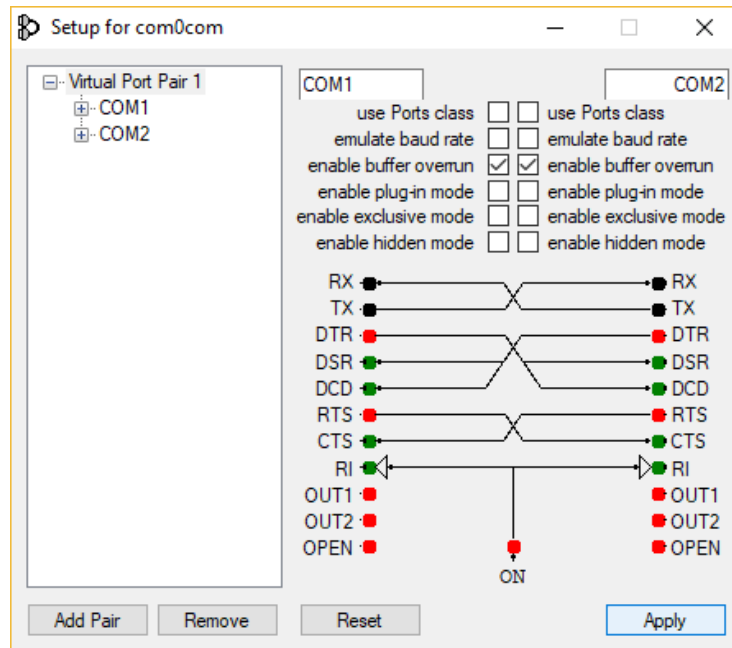

4.2 tty0tty Installation and Configuration (Linux)

Download the [href https://github.com/lcgamboa/tty0tty/archive/master.zip](https://github.com/lcgamboa/tty0tty/archive/master.zip) tty0tty. Unzip the downloaded folder.

Open a terminal and enter in the `tty0tty/module/` folder and enter the following commands:

```
sudo apt-get update
sudo apt-get -y upgrade
sudo apt-get -y install gcc make linux-headers-`uname -r`
make
sudo make install
```

The user must be in the **dialout** group to access the ports. To add your user to **dialout** group use the command:

```
sudo usermod -a -G dialout your_user_name
```

after this is necessary logout and login to group permissions take effect.

Once installed, the module creates 8 interconnected ports as follows:

```
/dev/tnt0 <=> /dev/tnt1
/dev/tnt2 <=> /dev/tnt3
/dev/tnt4 <=> /dev/tnt5
/dev/tnt6 <=> /dev/tnt7
```

the connection between each pair is of the form:

```
TX    ->  RX
RX    <-   TX
RTS   ->  CTS
CTS   <-   RTS
DSR   <-   DTR
CD    <-   DTR
DTR   ->  DSR
DTR   ->  CD
```

Any pair of ports form a NULL-MODEM connection, where one port must be used by the PICSimLab and another by the application with serial communication.

Chapter 5

MPLABX Integrated Debug (PIC and ATMEGA)

To use the [MPLABX](#) IDE for debug and program the PicsimLab, install the plugin [com-picsim-picsimlab.nbm](#) in MPLABX.

The plugin connect to Picsimlab through a TCP socket using port 1234 (or other defined in configuration window), and you have to allow the access in the firewall.

[Tutorial: how to use MPLABX to program and debug PICsimLab.](#)

It's possible import and debug a Arduino sketch into MPLABX using the [Arduino import plugin](#).

Chapter 6

Arduino IDE Integration (ATMEGA)

For integrated use with the Arduino IDE, simply configure the serial port as explained in the section 4 and load the Arduino bootloader. The bootloader can be loaded from the “Tools->Arduino bootloader” menu.

In Windows, considering com0com making a NULL-MODEM connection between COM1 and COM2, simply connect the PICSimLab on the COM1 port (defined in configuration window) and the Arduino IDE on the COM2 port or vice versa.

On Linux the operation is the same, but using for example the ports /dev/tnt2 and /dev/tnt3.

In Linux for the virtual ports to be detected in Arduino it is necessary to replace the library lib/liblistSerials.j.so of the Arduino with a version which support the detection of tty0tty ports, that can be downloaded in the link [listSerialC with tty0tty support](#).

Chapter 7

avr-gdb Debug (ATMEGA)

With debug support enabled you can use avr-gdb to debug the code used in the simulator. Use the configuration window to choose between MDB (MPLABX) or GDB to debug AVR microcontrollers.

Use avr-gdb with the .elf file as the parameter:

```
avr-gdb compiled_file.elf
```

and the command below to connect:


```
target remote localhost:1234
```

Graphic debug mode can be made using [eclipse IDE](#) with [Sloeber Arduino plugin](#).

Chapter 8

Oscilloscope

The PICSimLab has a basic two-channel oscilloscope that can be used to view the signal on any pin of the microcontroller. The oscilloscope can be accessed through the “Modules->Oscilloscope” menu.

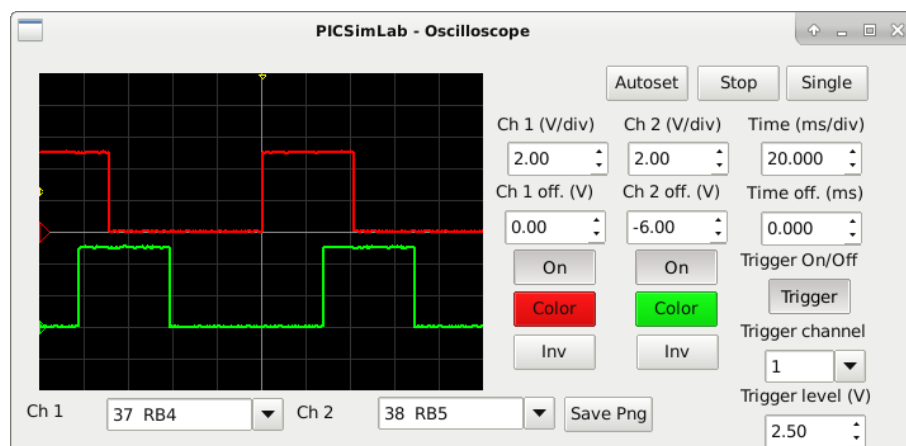

Chapter 9


Spare Parts

The PICSimLab has a window that allows the connection of spare parts to the micro-controller, it can be accessed through the menu “ Modules-> Spare parts ”.

The main window has the menu with the following functions:


- File
 - Save configuration - Saves the current settings of the spare parts to an .pcf file
 - Load configuration - Loads the settings of an .pcf file
- Add
 - 7 Segments Display - **TODO**
 - Buzzer - **TODO**
 - D. Transfer Function - **TODO**
 - Gamepad - Adds a gamepad
 - IO 74xx595 - **TODO**
 - IO MCP23S17 - **TODO**
 - IO PCF8574 - **TODO**
 - Keypad - **TODO**
 - LCD hd44780 - Adds a text display hd44780
 - LCD pcf8833 - Adds a color graphic display pcf8833
 - LCD pcd8544 - Adds a monochrome graphic display pcd8544
 - LED Matrix - **TODO**
 - LEDs - Adds 8 red LEDs
 - MEM 24CXXX - **TODO**
 - Potentiometers - Adds 4 potentiometers

- Push Buttons - Adds 8 push buttons
- Push Buttons (Analogic) - **TODO**
- RGB LED - Adds 1 RGB LED
- RTC ds1307 - **TODO**
- RTC pfc8563 - **TODO**
- Servo Motor - Adds a servo motor
- Signal Generator - **TODO**
- Step Motor - Adds a step motor
- Switchs - Adds 8 switchs
- Temperature System - **TODO**
- VCD Dump - **TODO**
- VCD Dump (Analogic) - **TODO**
- Help
 - Contents - Open Help window
 - About - Show message about author and version

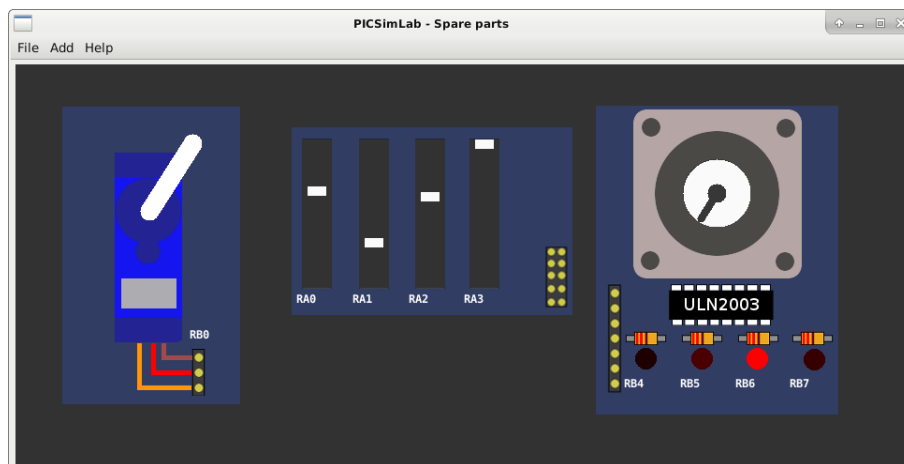

After adding the part, with a right click of the mouse you can access the options menu of the part with the options:

- Properties - Opens the connection settings window
- Move - Unlocks the part to move
- Delete - Remove part

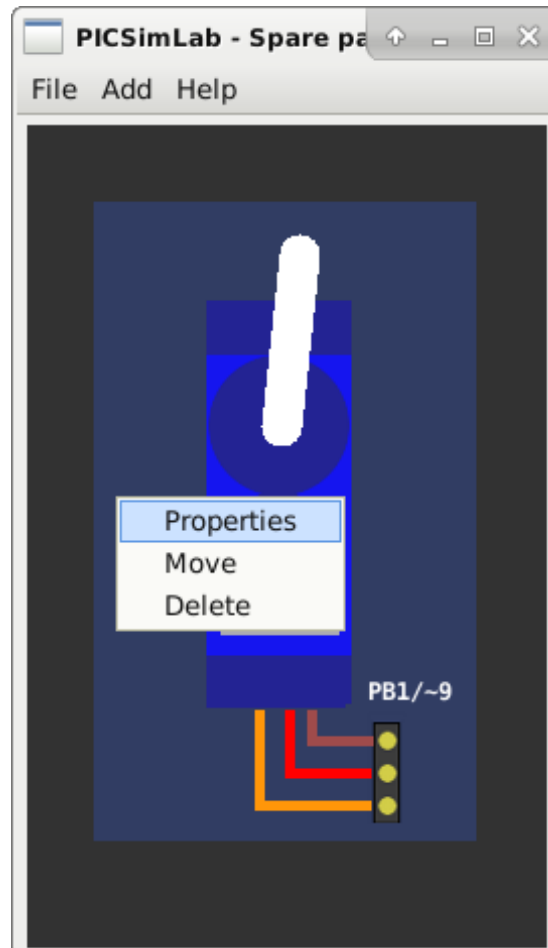

9.1 7 Segments Display

TODO



Examples

9.2 Buzzer


TODO



Examples

9.3 D. Transfer Function

TODO

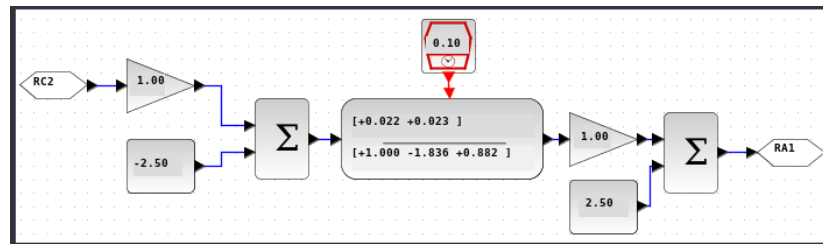


Examples

9.4 Gamepad

This part is a gamepad with two analog axis and 7 push buttons.




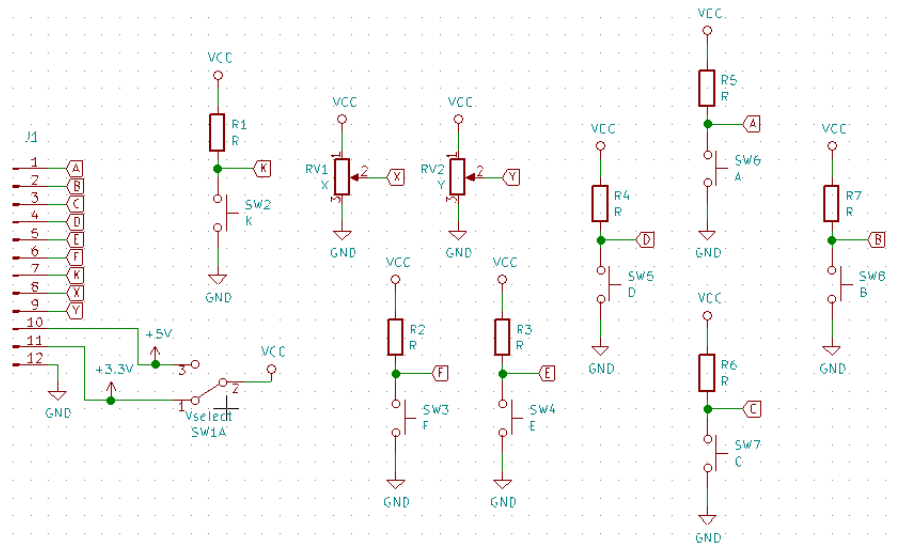

Examples

9.5 IO 74xx595


TODO

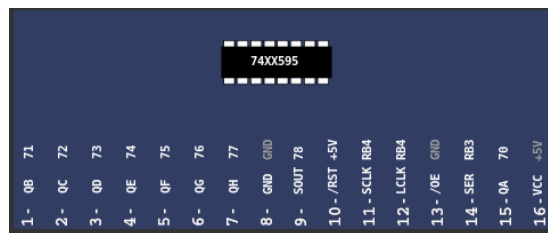

Examples

9.6 IO MCP23S17


TODO

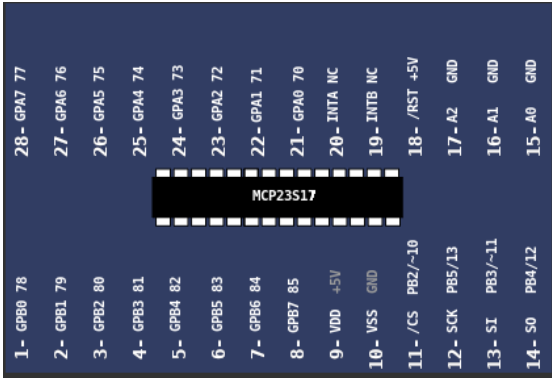

Examples

9.7 IO PCF8574



TODO

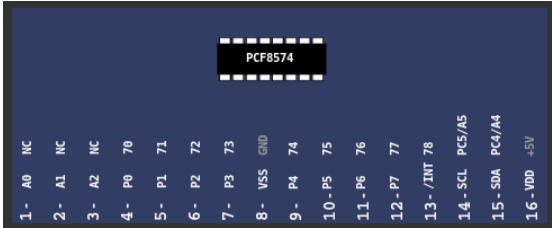


Examples

9.8 Keypad

TODO

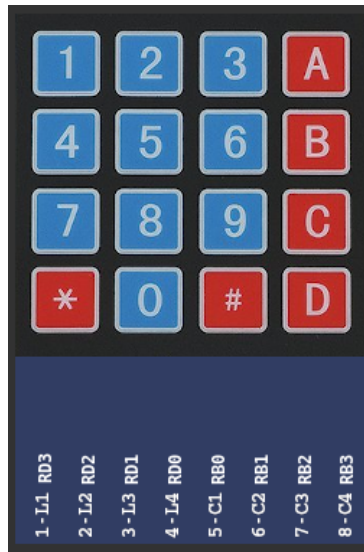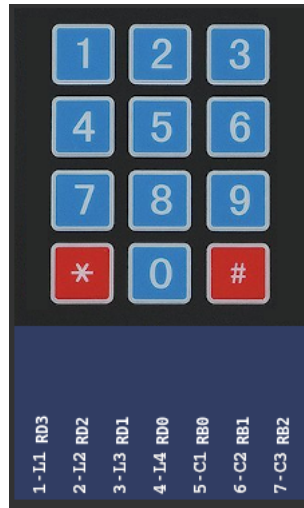


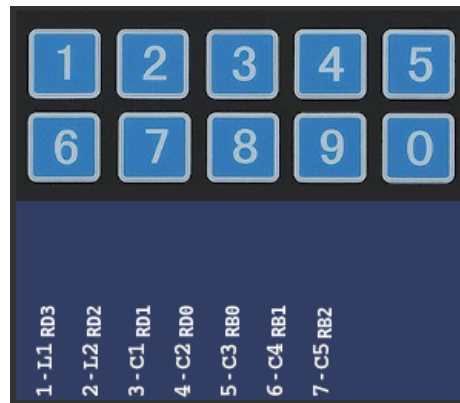

Examples

9.9 LCD hd44780

This part is a text display with 2 (or 4) lines by 16 (or 20) columns.

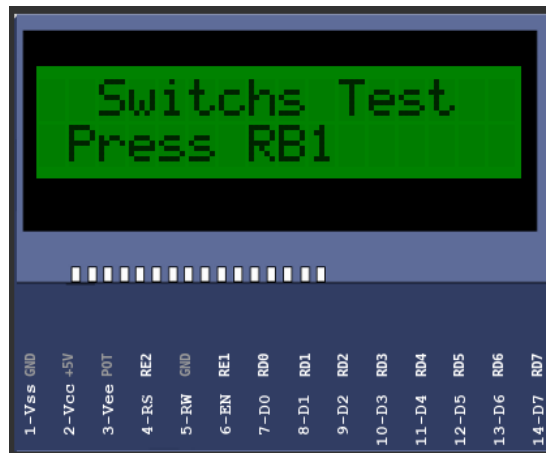





Examples

9.10 LCD pcf8833

This part is a color graphic display with 132x132 pixels.



Examples

9.11 LCD pcd8544


This part is a monochrome graphic display with 48x84 pixels.



Examples

9.12 LED Matrix



TODO

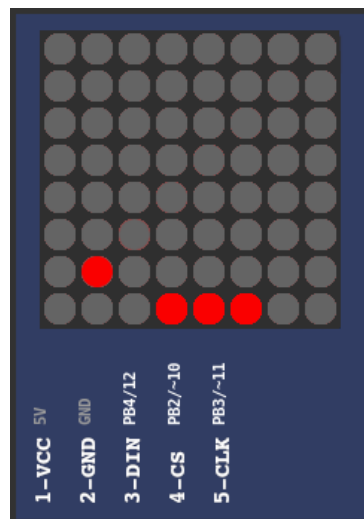

Examples

9.13 LEDs


This part is a bar of 8 independent red LEDs.

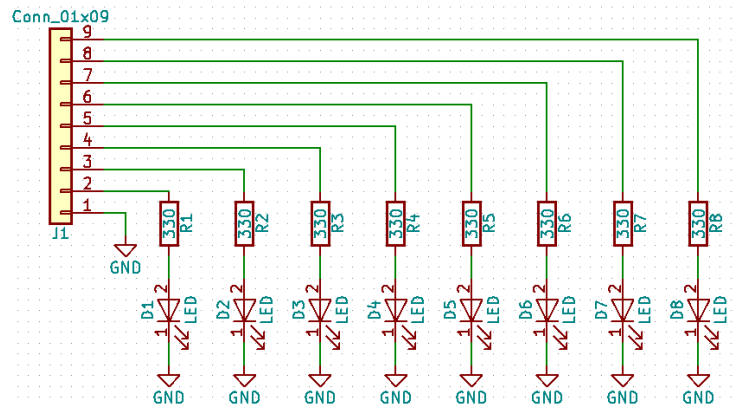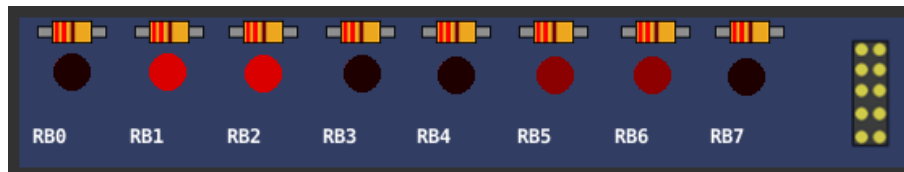

Examples

9.14 MEM 24CXXX



TODO

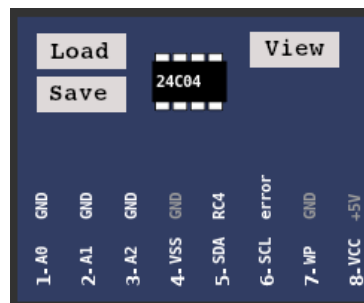

Examples

9.15 Potentiometers


This part is formed by 4 potentiometers connected between 0 and 5 volts, the output is connected to the cursor and varies within this voltage range.

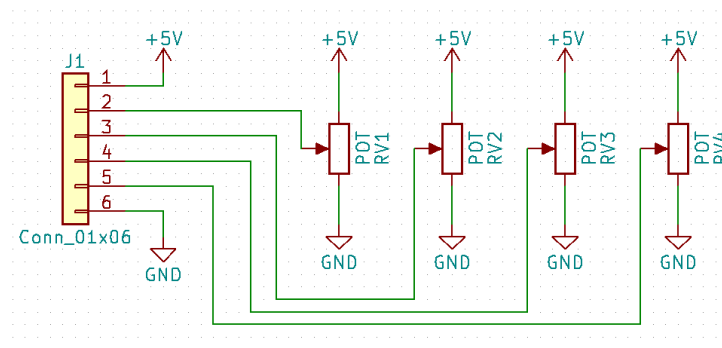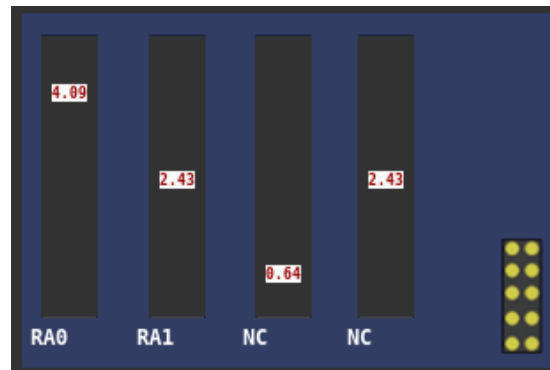

Examples

9.16 Push Buttons

This part consists of 8 push buttons. When pressed the output goes to logic level “1”.

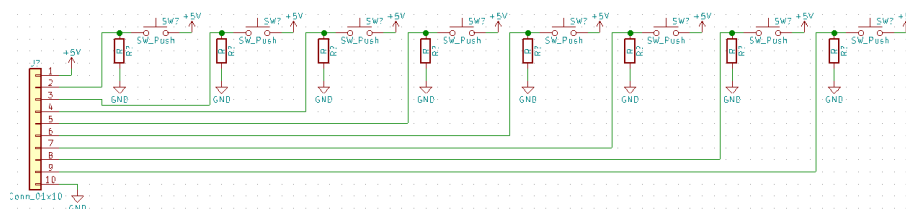

Examples

9.17 Push Buttons (Analogic)



TODO



Examples

9.18 RGB LED


This part consists of a 4-pin RGB LED. Each color can be triggered independently. Using PWM it is possible to generate several colors by combining the 3 primary colors.

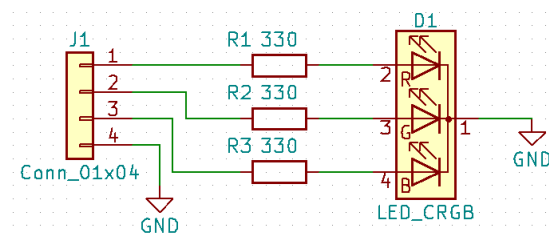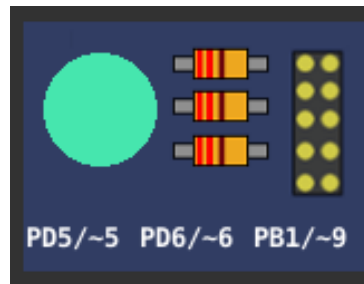

Examples

9.19 RTC ds1307


TODO

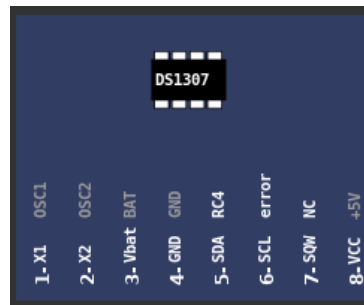

Examples

9.20 RTC pfc8563



TODO

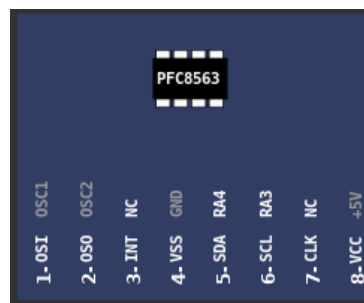

Examples

9.21 Servo Motor


The servo motor is a component that must be activated with a pulse of variable width from 1ms to 2ms every 20 ms. A pulse of 1ms positions the servo at -90° , one from 1.5ms to 0° and one from 2ms to 90° .

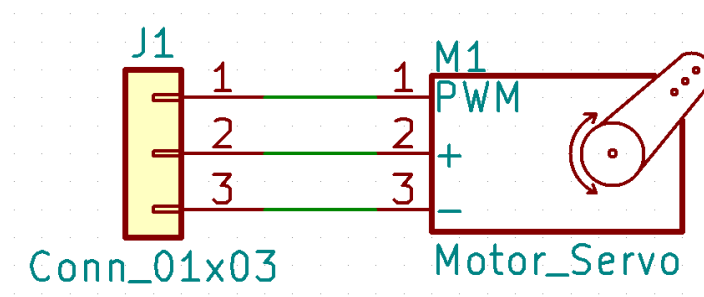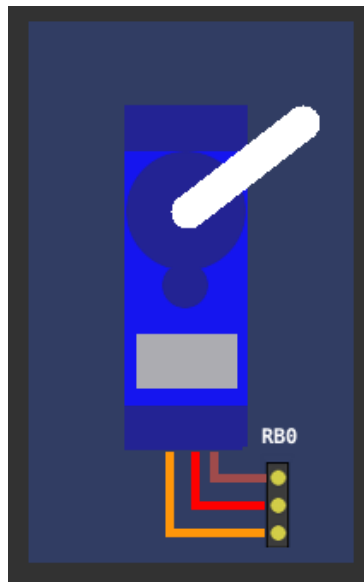

Examples

9.22 Signal Generator


TODO

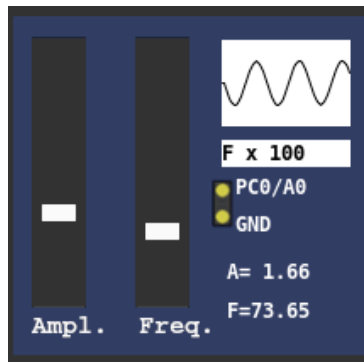


Examples

9.23 Step Motor

The stepper motor is a component with 4 coils that must be driven in the correct order to rotate the rotor. Each step of the motor is 1.8° .

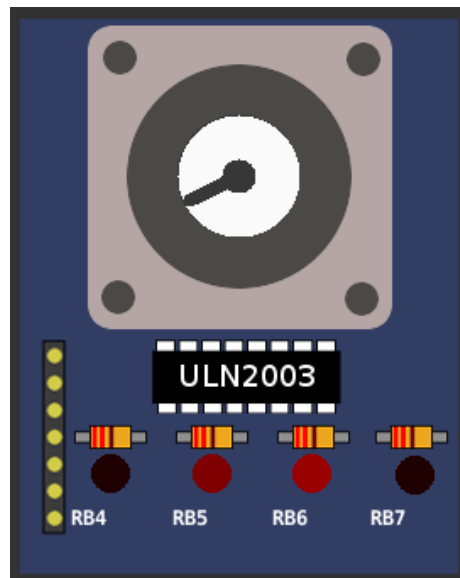


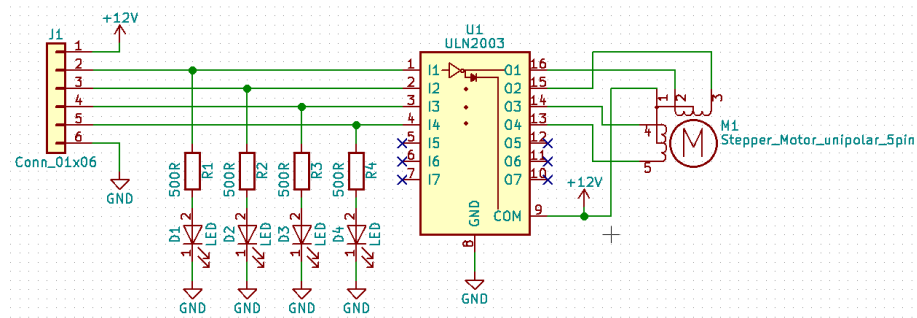

Examples

9.24 Switchs


This part consists of 8 keys with on or off position (0 or 1).

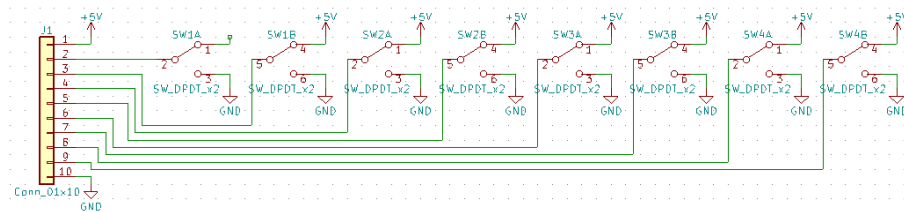

Examples

9.25 Temperature System



TODO

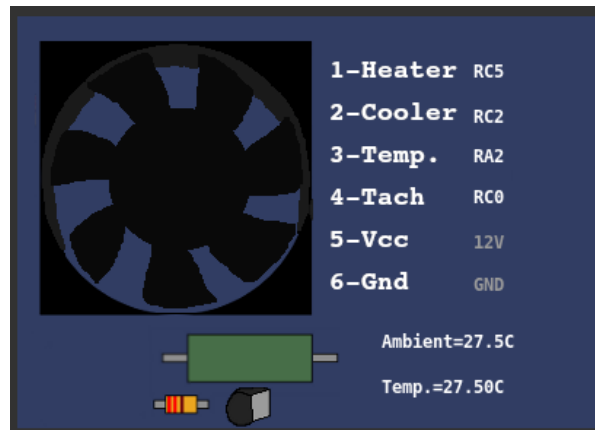

Examples

9.26 VCD dump



TODO

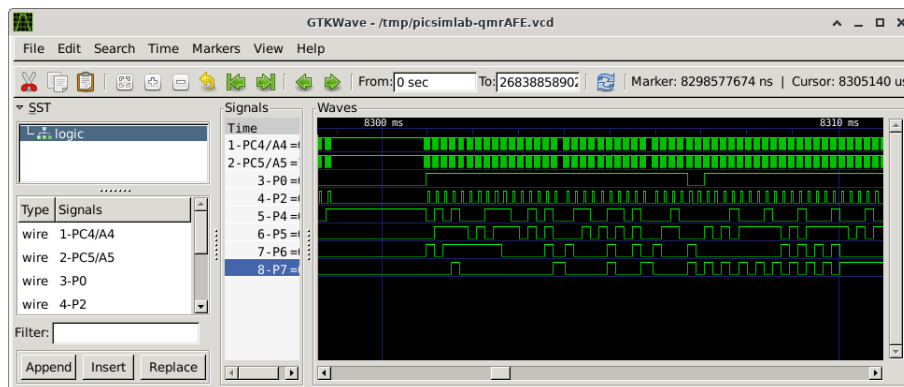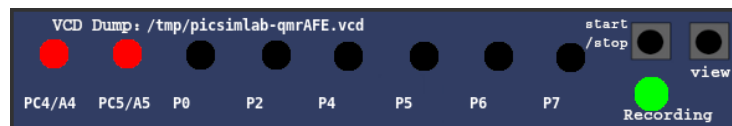

Examples

9.27 VCD dump (Analogic)

TODO

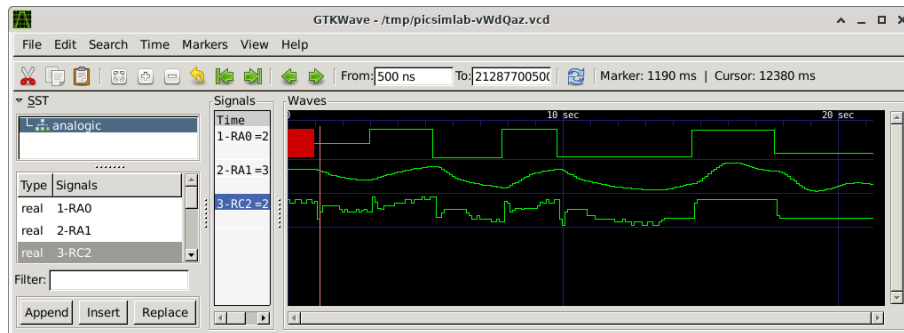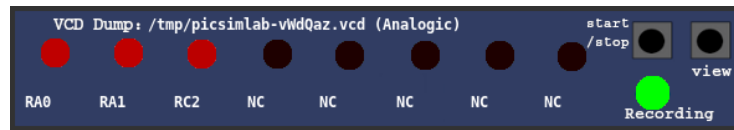

Examples

Chapter 10

How To's

- [How to use MPLABX to program and debug PICsimLab.](#)
- [\(Deprecated\) How to Compile PICsimLab and Create New Boards.](#)

Parte II

Manual em Português

Table of Contents

1	Introdução	48
2	Interface	49
2.1	Janela Principal	49
2.2	Comandos	51
3	Placas	52
3.1	Características da Placa 0	52
3.2	Características da Placa 1	52
3.3	Características da Placa 2	53
3.4	Características da Placa 3	54
3.5	Características da Placa 4	55
3.6	Características da Placa 5	57
4	Comunicação Serial	58
4.1	Instalação e Configuração do com0com (Windows)	58
4.2	Instalação e Configuração do tty0tty (Linux)	60
5	Depuração Integrada com o MPLABX (PIC e ATMEGA)	62
6	Integração com a IDE do Arduino (ATMEGA)	63
7	Depuração com o avr-gdb (ATMEGA)	64
8	Osciloscópio	65


TABLE OF CONTENTS	47
9 Partes Avulsas	66
9.1 7 Segments Display	68
9.2 Buzzer	68
9.3 D. Transfer Function	68
9.4 Gamepad	69
9.5 IO 74xx595	69
9.6 IO MCP23S17	69
9.7 IO PCF8574	70
9.8 Keypad	70
9.9 LCD hd44780	70
9.10 LCD pcf8833	71
9.11 LCD pcd8544	71
9.12 LED Matrix	71
9.13 LEDs	71
9.14 MEM 24CXXX	72
9.15 Potentiometers	72
9.16 Push Buttons	73
9.17 Push Buttons (Analogic)	73
9.18 RGB LED	73
9.19 RTC ds1307	74
9.20 RTC pfc8563	74
9.21 Servo Motor	74
9.22 Signal Generator	75
9.23 Step Motor	75
9.24 Switchs	76
9.25 Temperature System	77
9.26 VCD dump	77
9.27 VCD dump (Analogic)	77
10 Como Fazer (How To's)	78

Capítulo 1

Introdução

PICSimLab significa PIC Simulator Laboratory

O PICSimLab é um emulador de tempo real de placas de desenvolvimento com integração de depuração com o MPLABX/avr-gdb. O PICSimLab suporta os microcontroladores do [picsim](#) (PIC16F84, PIC16F628, PIC16F648, PIC16F777, PIC16F877A, PIC18F452, PIC18F4520, PIC18F4550 e PIC18F4620) e o microcontrolador do [si-mavr](#) (ATMEGA328). O PICSimLab tem integração com as IDE MPLABX/Arduino para programação dos microcontroladores das placas.

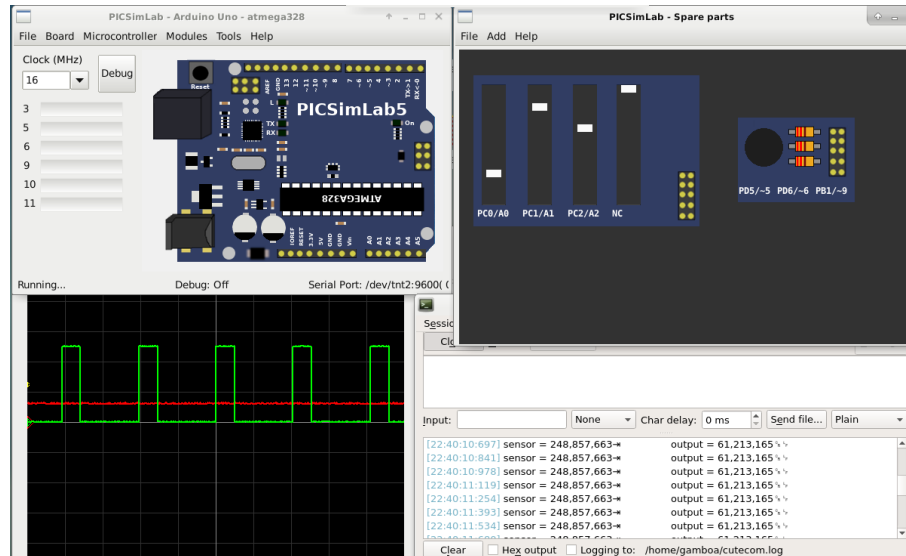


Capítulo 2

Interface

2.1 Janela Principal

A janela principal é composta de um menu, uma barra de status, um combobox de seleção de frequência, um botão liga/desliga para acionar a depuração (debug), alguns controles específicos da placa e parte de interface da placa em si.

No título da janela é mostrado o nome do simulador PICSimLab, seguido da placa e do microcontrolador em uso.

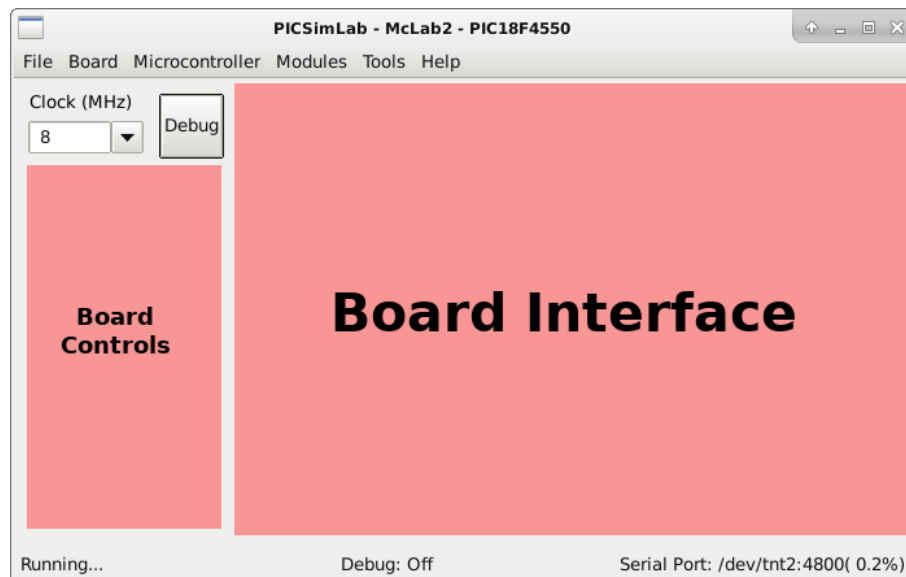

O combobox de seleção de frequência altera diretamente a velocidade de trabalho do microcontrolador, quando o label “Clock (MHz)” fica em vermelho indica que o computador não está sendo capaz de executar o programa em tempo real para o clock


selecionado. Neste caso a simulação pode apresentar alguma diferença do esperado e a carga da CPU ser aumentada.

O botão liga/desliga para acionar a depuração serve para habilitar o suporte à depuração, com o suporte ativo há uma carga maior de simulação.


Os menus e suas funções são listados abaixo:

- File
 - Load Hex - Carrega arquivo .hex
 - Reload Last - Recarrega último arquivo .hex utilizado
 - Save Hex - Salva a memória em um arquivo .hex
 - Configure - Abre a janela de configuração
 - Save Workspace - Salva todas as configurações atuais do workspace em um arquivo .pzw
 - Load Workspace - Carrega as configurações salvas de uma arquivo .pzw
 - Exit
- Board
 - 0 Breadboard - Escolhe a placa 0
 - 1 McLab1 - Escolhe a placa 1
 - 2 K16F - Escolhe a placa 2
 - 3 McLab2 - Escolhe a placa 3
 - 4 PICGenios - Escolhe a placa 4
 - 5 Arduino - Escolhe a placa 5
- Microcontroller
 - xxxxx - Seleciona o microcontrolador a ser utilizado (depende da placa selecionada)
- Modules
 - Oscilloscope - Abre a janela do osciloscópio
 - Spare parts - Abre a janela de peças avulsas
- Tools
 - Serial Terminal - Abre o terminal serial [CuteCom](#)
 - Serial Remote Tank - Abre o [simulador de tank remoto](#)
 - Esp8266 Modem Simulator - Abre o [simulador de modem Esp8266](#)
 - Arduino bootloader - Carrega o microcontrolador com o bootloader serial do Arduino
- Help

- Contents - Abre a janela de Ajuda
- Examples - Carrega exemplos
- About - Mostra mensagem de versão e autor

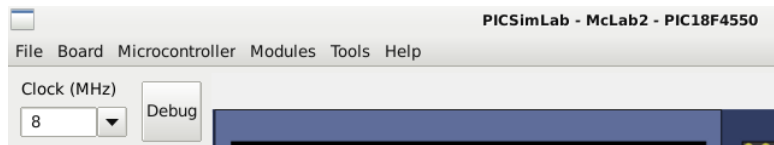

Na primeira parte da barra de status é mostrado o estado da simulação, na parte do meio o estado do suporte a depuração e na última parte o nome da porta serial utilizada, sua velocidade padrão e o erro em relação a velocidade real configurada no microcontrolador.



2.2 Comandos

Sobre a área de interface da placa é possível interagir de algumas formas:

- Clique no conector ICSP para carregar um arquivo .hex.
- Clique no botão PWR para ligar/desligar o emulador.
- Os botões podem ser acionados pelo mouse ou pelas teclas 1, 2, 3 ...


Capítulo 3

Placas

3.1 Características da Placa 0

TODO



É uma placa genérica só com os circuitos de reset, serial e cristal com suporte a múltiplos microcontroladores.

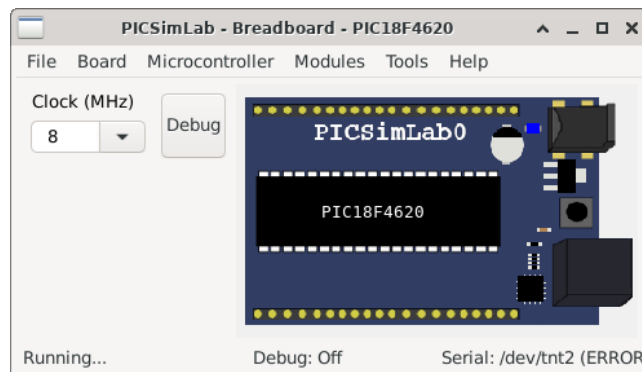

Exemplos

3.2 Características da Placa 1

Emula a placa de desenvolvimento McLab1 da Labtools que utiliza um PIC16F84, PIC16F628 ou PIC16F648.

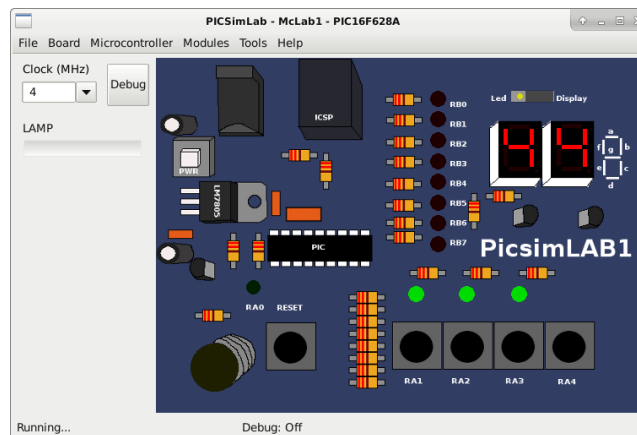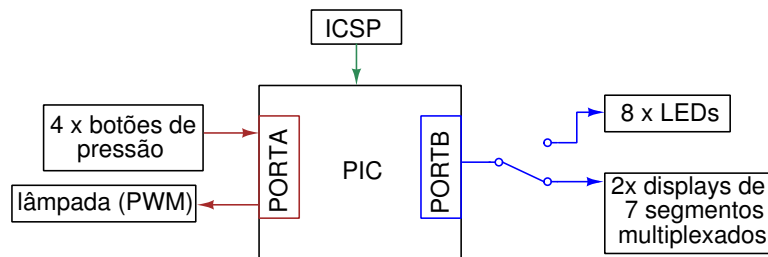



Esquemático da placa 1.

Os códigos fontes de exemplo podem ser carregados através do menu **Help->Examples** do PICSIMLAB.

O código fonte de exemplo da placa PICSIMLAB1 usando o [MPLABX](#) e o compilador [XC8](#) está no link: [board_1](#).

3.3 Características da Placa 2

Emula uma placa didática desenvolvida pelo autor que utiliza um PIC16F84, PIC16F628 ou PIC16F648.

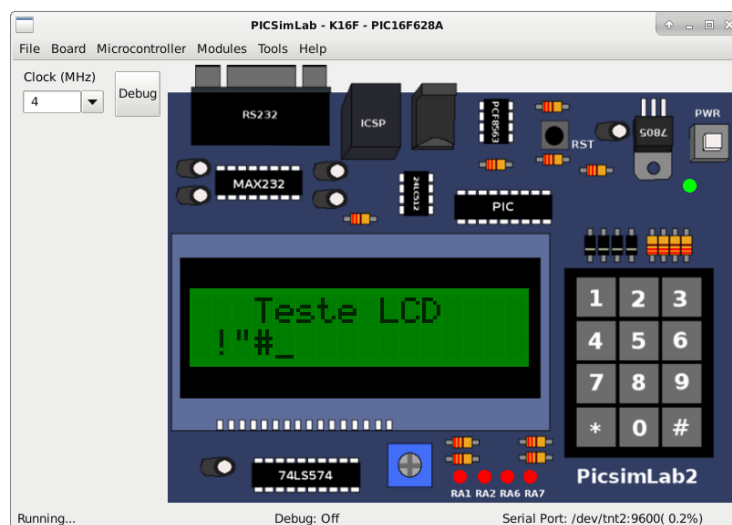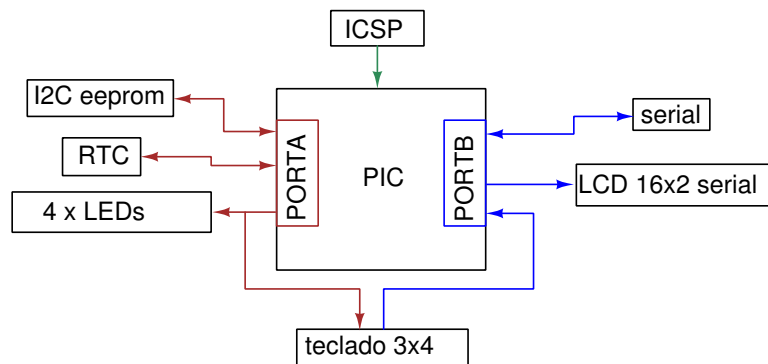


Esquemático da placa 2.

Os códigos fontes de exemplo podem ser carregados através do menu **Help->Examples** do PICSIMLab.

O código fonte de exemplo da placa PICSIMLab2 usando o [MPLABX](#) e o compilador [XC8](#) está no link: [board_2](#).

3.4 Características da Placa 3

Emula a placa de desenvolvimento McLab2 da Labtools que utiliza um PIC16F777, PIC16F877A, PIC18F452, PIC18F4520, PIC18F4550 ou PIC18F4620.

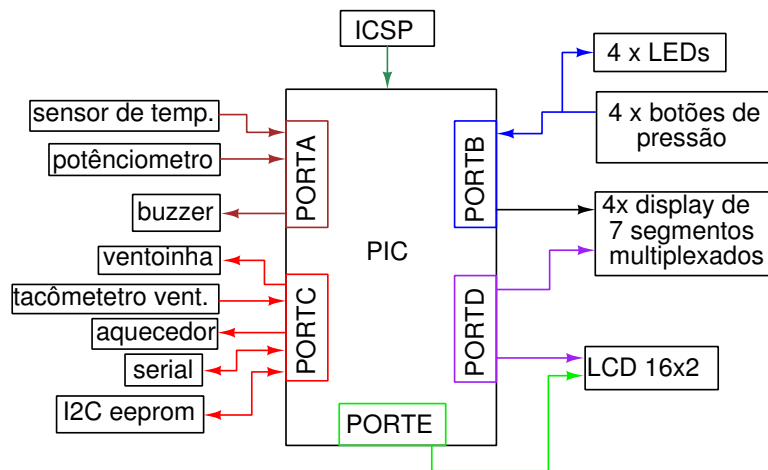



Esquemático da placa 3.

Os códigos fontes de exemplo podem ser carregados através do menu **Help->Examples** do PICSimLab.

O código fonte de exemplo da placa PICSimLab3 usando o [MPLABX](#) e o compilador [XC8](#) está no link: [board_3](#).

3.5 Características da Placa 4

Emula a placa de desenvolvimento PICGenios PIC18F e PIC16F Microchip da microgenios que utiliza um PIC16F777, PIC16F877A, PIC18F452, PIC18F4520, PIC18F4550 ou PIC18F4620.

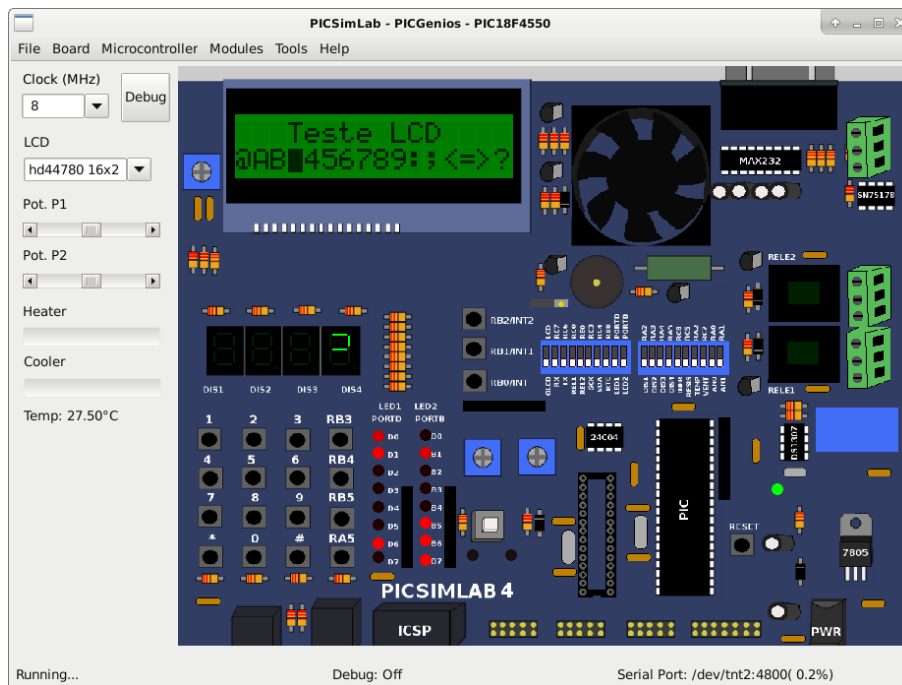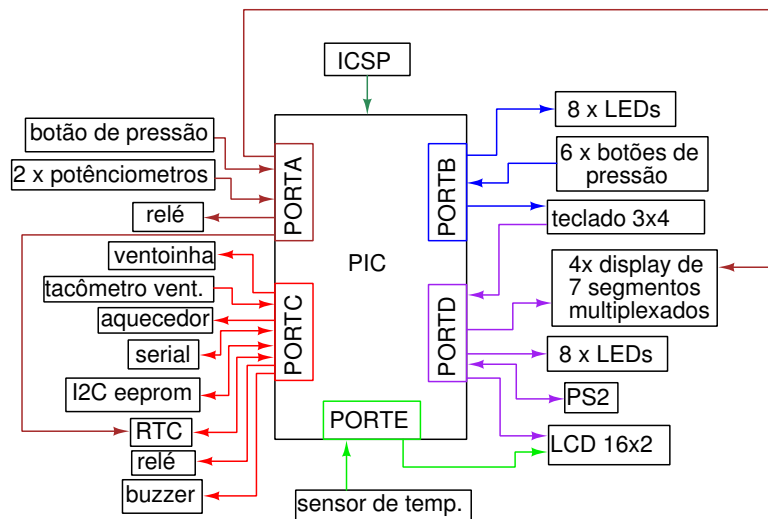


[Board 4 schematics.](#)

Os códigos fontes de exemplo podem ser carregados através do menu **Help->Examples** do PICSimLab.

O código fonte de exemplo da placa PICSimLab4 usando o [MPLABX](#) e o compilador [XC8](#) está no link: [board_4](#).

3.6 Características da Placa 5

Emula a placa de desenvolvimento Arduino Uno que utiliza um microcontrolador AT-MEGA328.

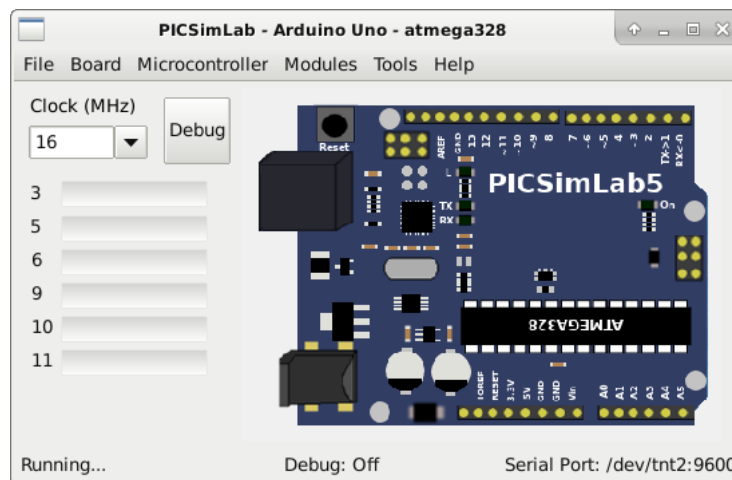

[Esquemático da placa 5.](#)

Os códigos fontes de exemplo podem ser carregados através do menu **Help->Examples** do PICSimLab.

O código fonte de exemplo da placa PICSimLab5 usando a IDE [Arduino com o avr-gcc](#) está no link: [board_5](#).

Mais informações sobre o Arduino em www.arduino.cc

Capítulo 4

Comunicação Serial

Para utilizar o a porta serial do simulador, instale um emulador NULL-MODEM:

- Windows: com0com <http://sourceforge.net/projects/com0com/>
- Linux: tty0tty <https://github.com/lcgamboa/tty0tty>

Para comunicação o PICSimLab deve ficar conectado em uma porta do emulador NULL-MODEM e o outro aplicativo conectado na outra porta. Exemplos de configuração ligando o PICSimLab ao [Cutecom](#) para comunicação serial:


OS	porta PICSimLab	porta Cutecom	NULL-Modem prog.	Conexão
Windows	com1	com2	com0com	com1<=>com2
Linux	/dev/tnt2	/dev/tnt3	tty0tty	/dev/tnt2<=>/dev/tnt3

4.1 Instalação e Configuração do com0com (Windows)


Faça o download da versão assinada do [com0com](#).

Descompacte o arquivo .zip baixado e execute o instalador específico de seu sistema operacional, x86 para windows 32 bits ou x64 para windows 64 bits.


Configure a janela “choose components” como a figura abaixo:

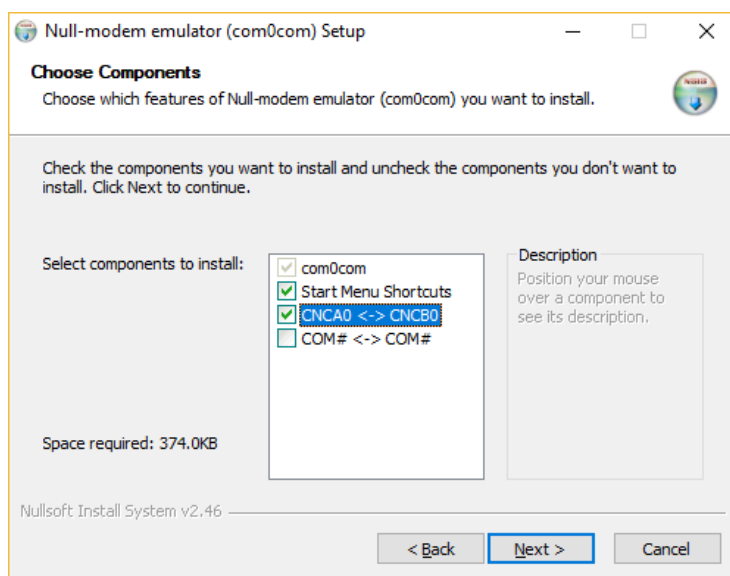

Na última janela da configuração, marque a opção “Launch setup”:

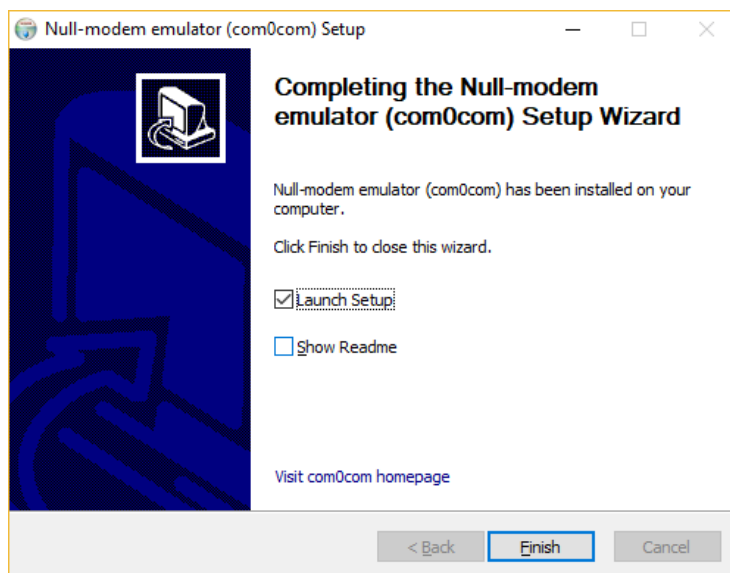

Na janela do setup, troque os nomes das portas para COM1, COM2, COM3.... Marque apenas a opção “enable buffer overrun” nas duas portas, clique no botão “Apply” e feche o setup. Na configuração mostrada na figura abaixo, as portas COM1 e COM2 formam uma conexão NULL-MODEM, onde uma porta deve ser utilizada pelo PICSimLab e outra pela aplicação com comunicação serial.

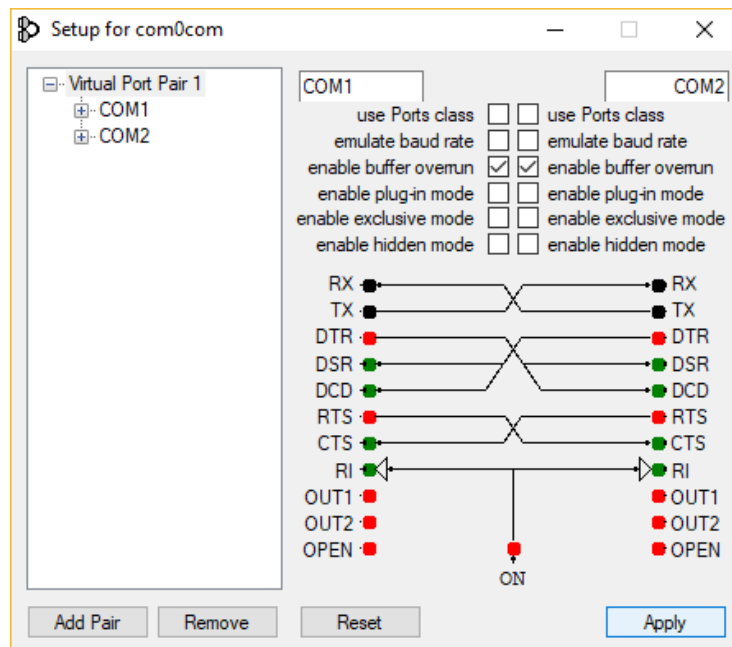

4.2 Instalação e Configuração do tty0tty (Linux)

Faça o download do [tty0tty](https://github.com/0x00b00b/tty0tty). Descompacte a pasta baixada.

Abra um terminal e entre na pasta `tty0tty/module` e digite os comandos na sequência:

```
sudo apt-get update
sudo apt-get -y upgrade
sudo apt-get -y install gcc make linux-headers-`uname -r`
make
sudo make install
```

O usuário deve estar no grupo **dialout** para poder acessar as portas. Para adicionar seu usuário ao grupo **dialout** use o comando:

```
sudo usermod -a -G dialout your_user_name
```

depois disso é necessário fazer logout e login para as permissões do grupo tenham efeito.

Depois de instalado, o módulo cria 8 portas interconectadas da seguinte forma:

```
/dev/tnt0 <=> /dev/tnt1
/dev/tnt2 <=> /dev/tnt3
/dev/tnt4 <=> /dev/tnt5
/dev/tnt6 <=> /dev/tnt7
```

a conexão entre cada par é da forma:

```
TX    ->  RX
RX    <-   TX
RTS   ->  CTS
CTS   <-   RTS
DSR   <-   DTR
CD    <-   DTR
DTR   ->  DSR
DTR   ->  CD
```

Qualquer par de portas formam uma conexão NULL-MODEM, onde uma porta deve ser utilizada pelo PICSimLab e outra pela aplicação com comunicação serial.

Capítulo 5

Depuração Integrada com o MPLABX (PIC e ATMEGA)

Para utilizar o IDE [MPLABX](#) para depurar e programar o PicsimLab, basta instalar o plugin [com-picsim-picsimlab.nbm](#) no MPLABX.

O plugin se conecta ao Picsimlab através de um socket TCP na porta 1234 (ou outra definida na janela de configuração), permita o acesso no firewall.

[Tutorial: Como usar o MPLABX para programar e depurar o PICsimLab \(Inglês\)](#)

É possível importar e depurar um sketch do Arduino no MPLABX utilizando o [Arduino import plugin](#).

Capítulo 6

Integração com a IDE do Arduino (ATMEGA)

Para utilização integrada com a IDE do Arduino, basta fazer a configuração da porta serial como explicado na seção 4 e carregar o bootloader do Arduino. O bootloader pode ser carregado pelo menu “Tools->Arduino Bootloader”.

No windows, considerando o com0com fazendo uma conexão NULL-MODEM entre a porta COM1 e COM2, basta conectar o PICSimLab na porta COM1 (definido na janela de configuração) e a IDE Arduino na porta COM2 ou vice-versa.

No Linux o funcionamento é o mesmo, mas utilizando por exemplo as portas /dev/tnt2 e /dev/tnt3.

No Linux para as portas virtuais serem detectadas no Arduino é necessário substituir a biblioteca lib/liblistSerials.j.so do Arduino por uma com suporte a detecção das portas do tty0tty, que pode se baixada no link [listSerialC com suporte ao tty0tty](#).

Capítulo 7

Depuração com o avr-gdb (ATMEGA)

Com o suporte a depuração habilitado é possível utilizar o avr-gdb para depurar o código utilizado no simulador. Use a janela de configurações para escolher entre o MDB (MPLABX) e o GDB para depuração dos microcontroladores AVR.

Utilize o avr-gdb com o arquivo .elf como parâmetro:

```
avr-gdb arquivo_compilado.elf
```

e o comando abaixo para se conectar:


```
target remote localhost:1234
```

O debug no modo gráfico pode ser feito utilizando a [IDE eclipse](#) junto com o [Slober Arduino plugin](#).

Capítulo 8

Osciloscópio

O PICSimLab possui um osciloscópio básico de dois canais que pode ser utilizado para ver o sinal em qualquer pino do microcontrolador. O osciloscópio pode ser acessado pelo menu “Modules->Oscilloscope”.

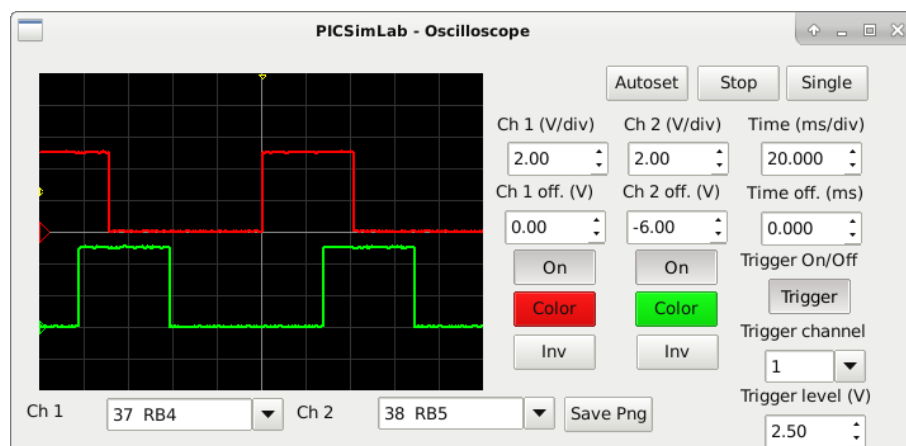

Capítulo 9


Partes Avulsas

O PICsimLab possui uma janela que permite a ligação de partes avulsas ao microcontrolador, ela pode ser acessada pelo menu “Modules->Spare parts”.

A janela principal possui o menu com as seguintes funções:


- File
 - Save configuration - Salva as configurações atuais das partes avulsas em um arquivo .pcf
 - Load configuration - Carrega as configurações de uma arquivo .pcf
- Add
 - 7 Segments Display - **TODO**
 - Buzzer - **TODO**
 - D. Transfer Function - **TODO**
 - Gamepad - Adiciona um gamepad
 - IO 74xx595 - **TODO**
 - IO MCP23S17 - **TODO**
 - IO PCF8574 - **TODO**
 - Keypad - **TODO**
 - LCD hd44780 - Adiciona um display de texto hd44780
 - LCD pcf8833 - Adiciona um display gráfico colorido pcf8833
 - LCD pcd8544 - Adiciona um display gráfico monocromático pcd8544
 - LED Matrix - **TODO**
 - LEDs - Adiciona 8 LEDs vermelhos
 - MEM 24CXXX - **TODO**
 - Potentiometers - Adiciona 4 potenciômetros

- Push Buttons - Adiciona 8 botões de pressionar
- Push Buttons (Analogic) - **TODO**
- RGB LED - Adiciona 1 LED RGB
- RTC ds1307 - **TODO**
- RTC pfc8563 - **TODO**
- Servo Motor - Adiciona um servo motor
- Signal Generator - **TODO**
- Step Motor - Adiciona um motor de passo
- Switchs - Adiciona 8 chaves
- Temperature System - **TODO**
- VCD Dump - **TODO**
- VCD Dump (Analogic) - **TODO**
- Help
 - Contents - Abre a janela de Ajuda
 - About - Mostra mensagem de versão e autor

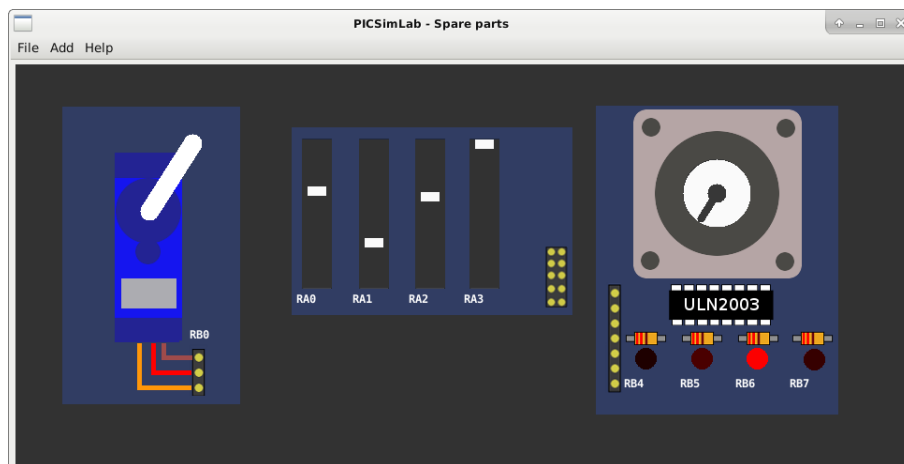

Depois de adicionado a parte, com um clique com o botão direito do mouse é possível acessar o menu das opções da parte com as opções:

- Properties - Abre a janela de configuração das conexões
- Move - Desbloqueia a parte para movimentação
- Delete - Remove a parte

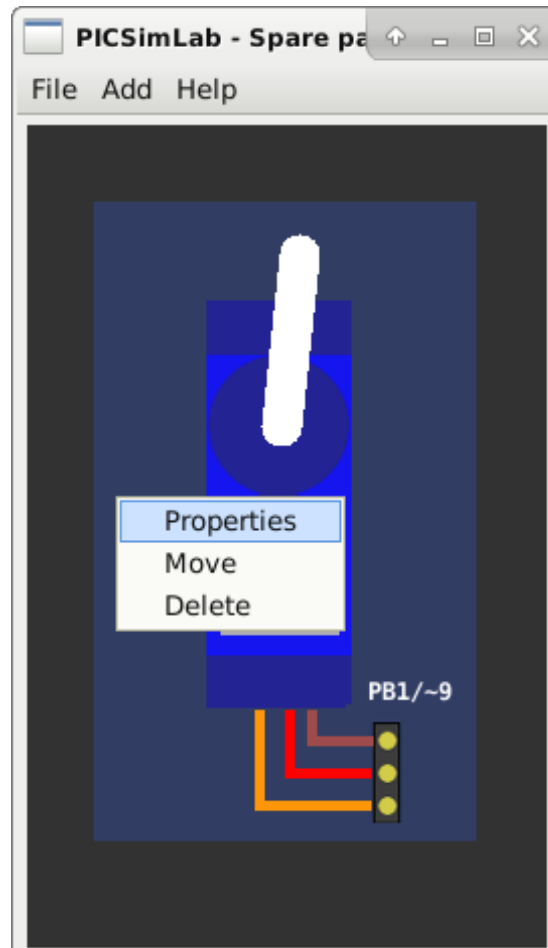

9.1 7 Segments Display

TODO

9.2 Buzzer


TODO

9.3 D. Transfer Function

TODO

9.4 Gamepad

Esta parte é um gamepad com dois eixos analógicos e 7 botões de pressão.

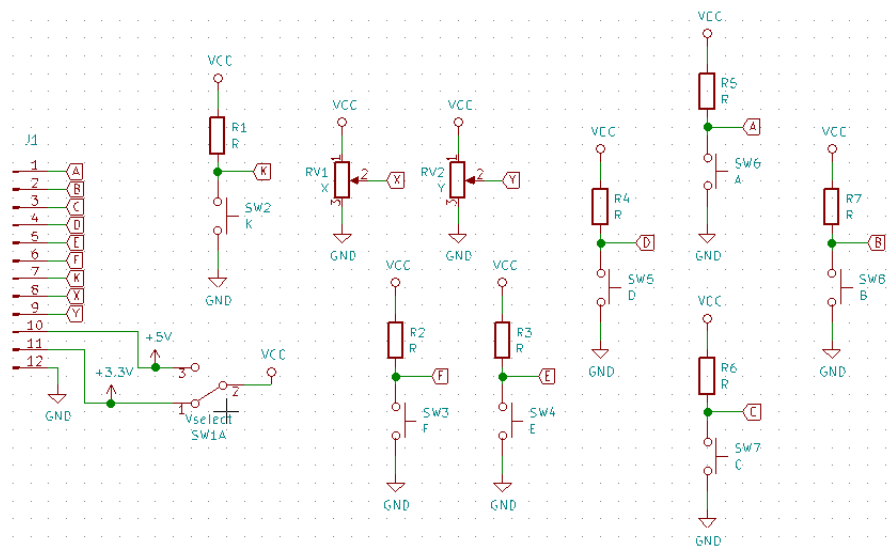

9.5 IO 74xx595

TODO

9.6 IO MCP23S17

TODO



Examples

9.7 IO PCF8574


TODO

9.8 Keypad

TODO


9.9 LCD hd44780

Essa parte é um display de texto de 2 (ou 4 linhas) por 16 colunas.

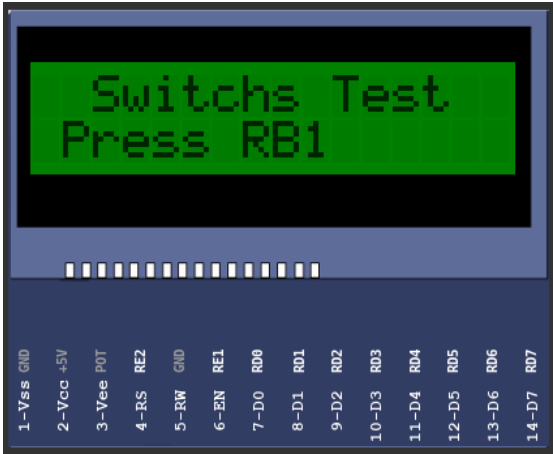

9.10 LCD pcf8833

Essa parte é um display de gráfico colorido de 132x132 pontos.

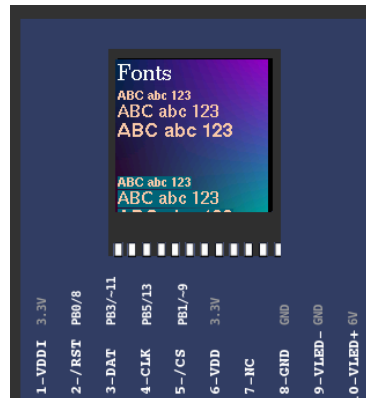

9.11 LCD pcd8544

Essa parte é um display de gráfico monocromático de 48x84 pontos.




9.12 LED Matrix

TODO

9.13 LEDs

Essa parte é uma barra de 8 LEDs vermelhos independentes.

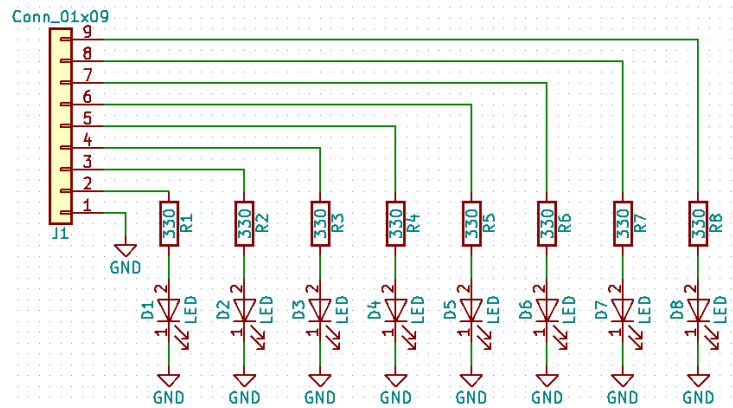



9.14 MEM 24CXXX

TODO

9.15 Potentiometers


Essa parte é formada por 4 potenciômetros ligados entre 0 e 5 Volts, a saída está ligada ao cursor e varia dentro dessa faixa de tensão.

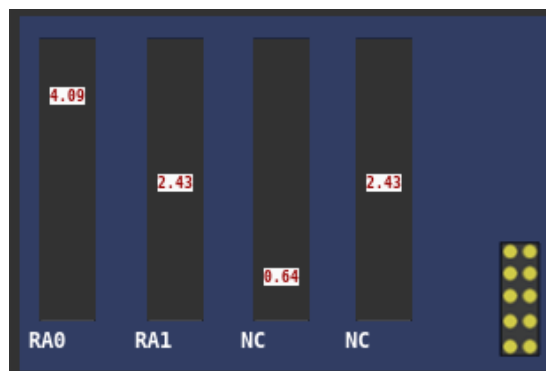

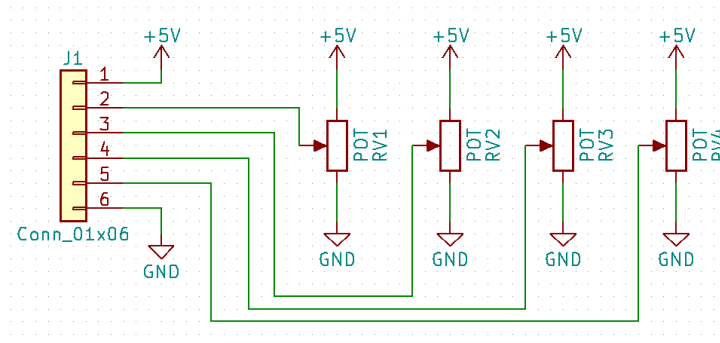

9.16 Push Buttons


Esta parte é formada por 8 botões de pressão. Quando pressionado a saída vai para nível lógico “1”.

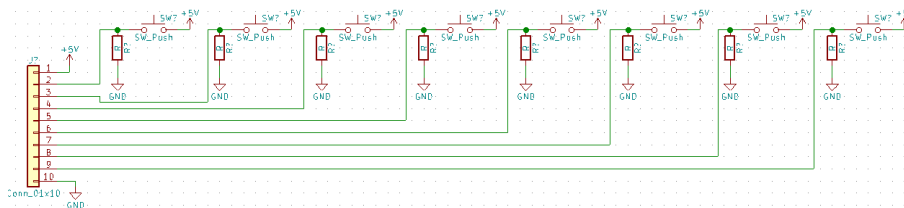

9.17 Push Buttons (Analogic)

9.18 RGB LED

Essa parte é formada por um LED RGB de 4 terminais. Cada cor pode ser acionada de forma independente. Utilizando PWM é possível gerar varias cores através da combinação da 3 cores primárias.

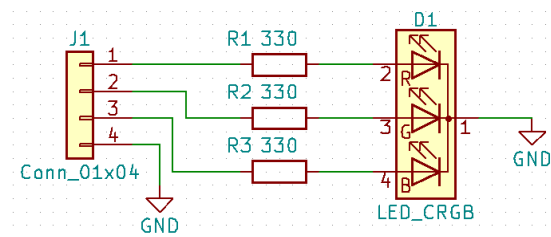

9.19 RTC ds1307



TODO

9.20 RTC pfc8563

TODO

9.21 Servo Motor

O servo motor é um componente que deve ser acionado com um pulso de largura variável de 1ms a 2ms a cada 20 ms. Um pulso de 1ms posiciona o servo a -90° , um de 1,5ms a 0° e um de 2ms a 90° .

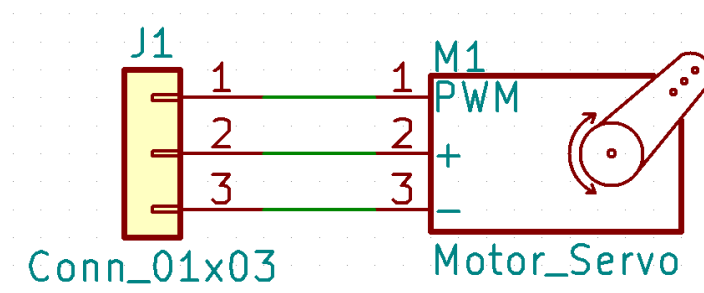
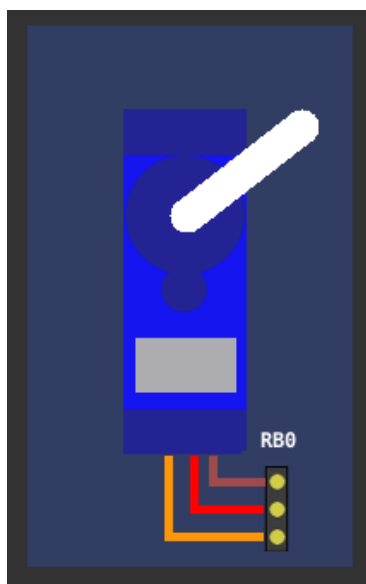


9.22 Signal Generator

TODO

9.23 Step Motor


O motor de passo é um componente com 4 bobinas que devem ser acionadas na ordem correta para fazer o deslocamento do rotor. Cada passo do motor é de 1.8° .

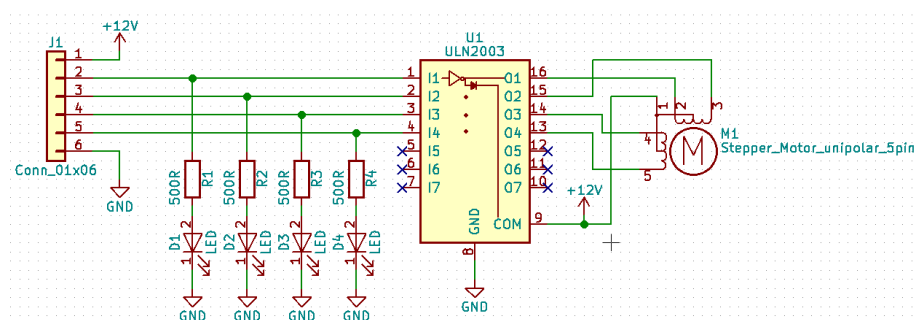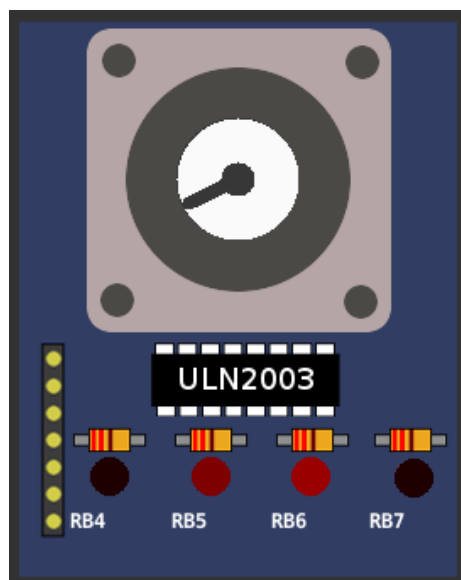

9.24 Switchs

Esta parte é formada por 8 chaves com posição ligado ou desligado (0 ou 1).



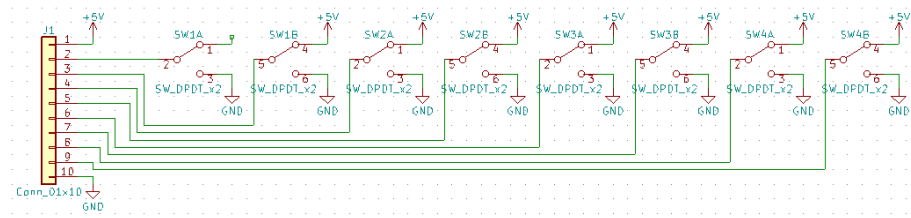

9.25 Temperature System

TODO

9.26 VCD dump

TODO

9.27 VCD dump (Analogic)

TODO

Capítulo 10

Como Fazer (How To's)

- [How to use MPLABX to program and debug PICsimLab.](#)
- [\(Deprecated\) How to Compile PICsimLab and Create New Boards.](#)

Parte III

License

Copyright © 2020 Luis Claudio Gambôa Lopes <lcgamboa@yahoo.com>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307, USA.