



**System76**  
**Galago Pro (galp2)**  
**Service manual**

## Revision history

Author	Date	Version	Remarks
April Jones	2017-05-09	Initial	

# Contents

[Revision history](#)

[Hardware overview](#)

[External overview](#)

[Ports overview](#)

[Bottom case screw sizes](#)

[Front LED overview](#)

[Hardware keyboard shortcuts](#)

[External displays](#)

[Thunderbolt 3 and eGPU](#)

[Internal component overview](#)

[User-serviceable parts and repairs](#)

[Replacing the keyboard](#)

[Steps to replace the keyboard](#)

[Photo guide for keyboard replacement](#)

[Removing the bottom cover](#)

[Steps to remove the cover](#)

[Steps to replace the cover](#)

[Photo guide for bottom cover removal/replacement](#)

[Replacing the RAM](#)

[Steps to replace the RAM](#)

[Photo guide for replacing the RAM](#)

[Replacing an M.2/NVMe SSD](#)

[Steps to replace the M.2 drive](#)

[Replacing a 2.5" SSD/HDD](#)

[Steps to replace the M.2 drive](#)

[Replacing the CPU fan](#)

[Steps to replace the CPU fan](#)

[Replacing the CPU heatsink/thermal paste](#)

[Steps to replace the CPU heatsink/thermal paste](#)

[Replacing the CMOS battery](#)

[Steps to replace the CMOS battery](#)

[Replacing the internal battery](#)

[Steps to replace the CMOS battery](#)

[Replacing the WiFi/Bluetooth module](#)

[Steps to replace the WiFi/Bluetooth module](#)

[BIOS utilities](#)

[Updating the BIOS](#)

[BIOS overview](#)

[Main menu](#)

[Advanced](#)

[Security](#)

[Boot](#)

[Specifications](#)

# Hardware overview

## External overview

### Ports overview

The Galago provides multiple connectivity options.




Left side overview




Right side overview



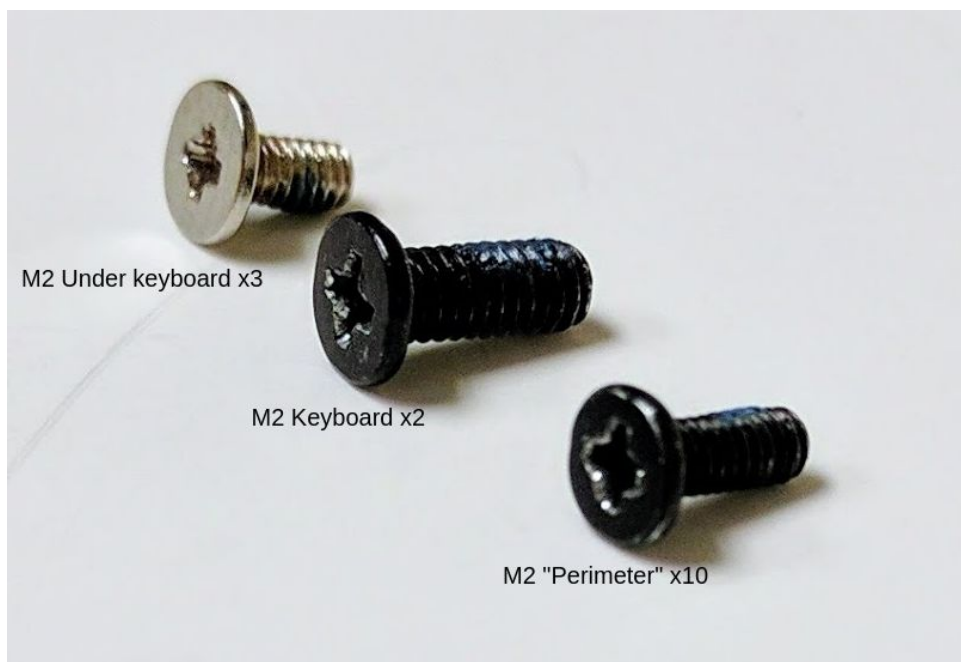

### Bottom case screw sizes

The Galago has 3 sizes of screws for securing the bottom case.

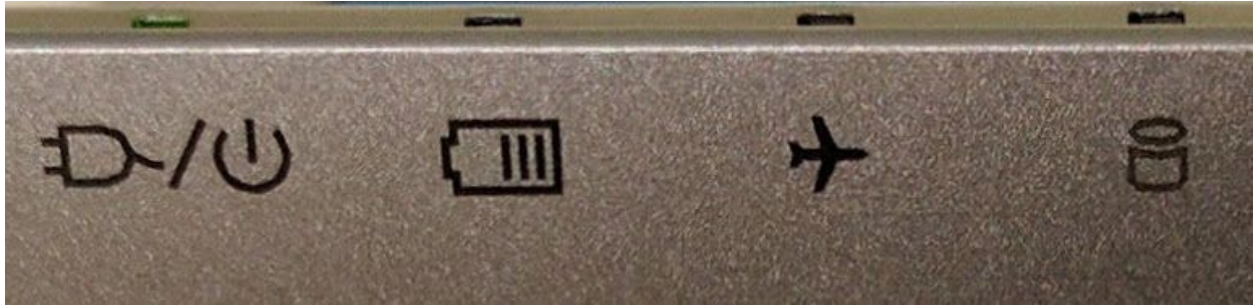














## Front LED overview



Icon	Color	Description
	Orange	DC power plugged in
	Green	Computer is on
	Blinking green	Computer is sleeping
	Orange	Battery charging
	Green	Battery fully charged
	Blinking orange	Battery critically low
	Green	Airplane mode is ON (WiFi/Bluetooth disabled)
	Green	Hard disk activity

## Hardware keyboard shortcuts

Your Galago has several actions available using the Fn and Function keys.

Key	Shortcut	Action
	Fn+F1	Toggle trackpad
	Fn+F2	Toggle built-in LCD
	Fn+F3	Mute
	Fn+F4	Toggle keyboard backlight
	Fn+F5	Volume down
	Fn+F6	Volume up
	Fn+F7	Toggle displays
	Fn+F8	Brightness down
	Fn+F9	Brightness up
	Fn+F10	Toggle webcam
	Fn+F11	Toggle airplane mode
	Fn+F12	Suspend
	Fn+`	Play/Pause
	Fn+1	Toggle fan between max/automatic
	Fn+Ins	Num Lock
	Fn+Del	Scroll Lock

## External displays

Aside from the standard Mini DisplayPort (MiniDP) and HDMI, the Galago also supports MiniDP over USB-C and external GPU (eGPU) support over Thunderbolt 3.

You can switch between MiniDP or USB-C, but you cannot use both simultaneously.

### To switch between MiniDP and USB-C display modes:

1. Reboot the Galago and hold the F2 key
2. At the Setup Utility, select the Advanced tab
3. Select Advanced Chipset Control
4. Change the DDI setting according to the table below
5. Press F4 to save changes and reboot

Mode	DDI Setting	Max resolution
MiniDP	DDI to MiniDP	UHD-1 (4K, 2160P) 3840x2160 @60Hz
HDMI	None	UHD-1 (4K, 2160P) 3840x2160 @30Hz
USB-C to DisplayPort	DDI to TBT	UHD-1 (4K, 2160P) 3840x2160 @60Hz
USB-C to HDMI	DDI to TBT	UHD-1 (4K, 2160P) 3840x2160 @30Hz
eGPU over Thunderbolt 3	DDI to TBT	(Dependent on GPU)

## Thunderbolt 3 and eGPU


Intel Thunderbolt 3 provides a direct link to the processor over PCIe 3.0 x4 at 40Gbps, making it ideal for external GPU (eGPU) support. **To use an eGPU, Thunderbolt Security Option must be set to Legacy Mode in the BIOS.**

**When using an eGPU, the device must be connected prior to powering on and only disconnected after fully powering down. eGPU devices are currently NOT hot-plug capable.** Unplugging the device will not damage the Galago or the eGPU, but the system will not work properly until a reboot.



## Internal component overview

Below is a color-coded diagram of the Galago's internal components.

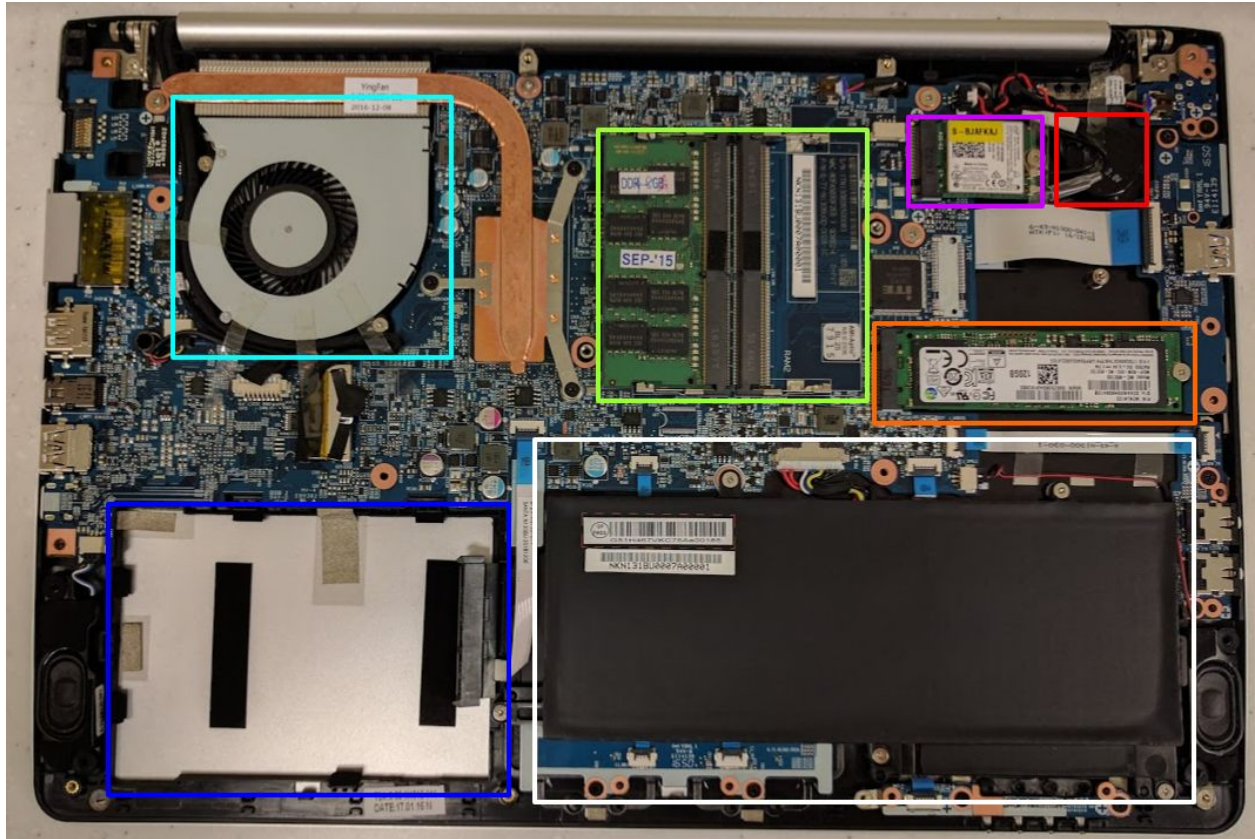

CPU fan is highlighted in cyan

CMOS battery is highlighted in red

RAM is highlighted in green

M.2 SSD is highlighted in orange

Wireless/Bluetooth module is highlighted in purple

2.5" SSD (not present) is highlighted in blue

Battery is highlighted in white

# User-serviceable parts and repairs

Many components on your Galago can be upgraded or replaced as necessary. Follow these step-by-step guides for instructions.

## Replacing the keyboard

Keyboard replacement is simple and requires only a cross-head screwdriver.

**Tools required:** Cross-head (Phillips) screwdriver

**Time estimate:** 10 minutes

**Difficulty:** Low

**Screws:** 2 total

- 2 large M2, black (Keyboard M2)


### Steps to replace the keyboard

**Photos are provided in order below these steps.**

1. Find a surface suitable for work. A desk or table works well.
2. Place something soft on the table, like a towel or anti-static mat.
3. Place the Galago lid-side-down.
4. Remove the 2 keyboard screws, indicated by the small keyboard icon.
5. Open the Galago and place it on its side.
6. Push the screwdriver into the keyboard push point until the keyboard pops out.
7. Set the Galago down, then starting from the top side, pull the keyboard loose.
8. Flip the keyboard over onto the trackpad.
9. Pull the large ribbon cable out of the connector.
10. The small ribbon cable has a latch. Gently pull the latch from both sides and remove the ribbon cable.
11. Remove the keyboard and replace it with the new one.
12. Insert the large ribbon cable into the connector.
13. Seat the small ribbon cable, then apply pressure equally to both sides of the connector to secure.
14. Flip the keyboard over and press the bottom tabs of the keyboard into the case.
15. Secure the keyboard by pressing down on the edges of the keyboard.
16. Flip the Galago over.
17. Replace the 2 screws holding the keyboard in place.
18. Boot your Galago and confirm the keyboard is operational.

## Photo guide for keyboard replacement

1. Galago lid-side-down. The 2 keyboard screws are highlighted in red, with the blue highlight indicating the keyboard push point.

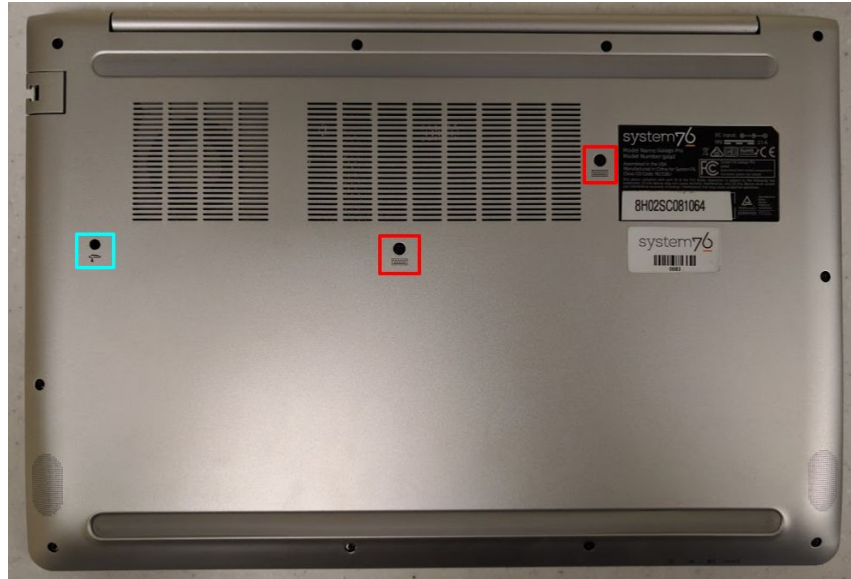

2. Galago on its side with screwdriver in keyboard push point.






3. Set the Galago down and remove the keyboard starting along the top edge.



4. Flip the keyboard over and rest it on the trackpad. Pull the large ribbon cable out of the connector. The smaller ribbon cable has a latch. Gently pull it forward to release the connector, then remove the ribbon cable.

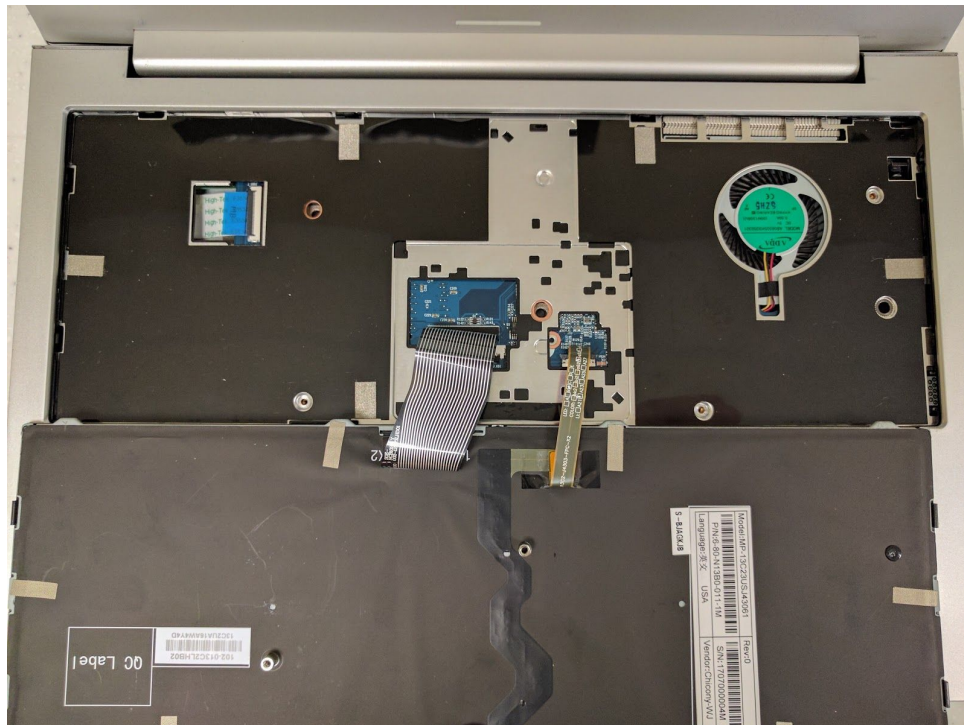

## Removing the bottom cover

Removing the cover is required to access the internal components. Prior to removing the cover, ensure the AC power is unplugged, and all peripherals (including SD cards and USB drives) are unplugged or removed from the system.

**Tools required:** Cross-head (Phillips) screwdriver

**Time estimate:** 10 minutes

**Difficulty:** Medium

**Screws:** 15 total:

- 10 small M2 perimeter, black
- 2 large M2 keyboard, black
- 3 small/short M2 under keyboard, silver

### Steps to remove the cover

**Photos are provided in order below these steps.**

1. Find a surface suitable for work. A desk or table works well.
2. Place something soft on the table, like a towel or anti-static mat.
3. Place the Galago lid-side-down.
4. Remove the 10 'perimeter' screws.
5. Remove the 2 keyboard screws, indicated by the small keyboard icon.
6. Open the Galago and place it on its side.
7. Push the screwdriver into the keyboard push point until the keyboard pops out.
8. Set the Galago down.
9. Starting from the top side, pull the keyboard loose.
10. Flip the keyboard over onto the trackpad.
11. Remove the 3 silver screws holding the bottom case in place.
12. Partially replace the keyboard, but don't snap it into place.
13. Close the lid and flip the Galago lid-side-down again.
14. The bottom cover will lift off, starting from the front corners working to the back near the hinges.


### Steps to replace the cover

1. Align the bottom cover to the case towards the back and hinges.
2. Set the bottom cover along the edges and confirm the bottom cover is seated.
3. Replace the 10 perimeter screws.

4. Flip the Galago and replace the 3 silver screws from under the keyboard.
5. Replace the keyboard by inserting the tabs into the bottom edge near the trackpad and press around the edges of the keyboard to ensure it is fully snapped into place.
6. Flip the Galago and replace the 2 keyboard screws.

### Photo guide for bottom cover removal/replacement

1. Galago lid-side-down. The 10 perimeter screws are highlighted in green. The 2 keyboard screws are highlighted in red, with the blue highlight indicating the keyboard push point.

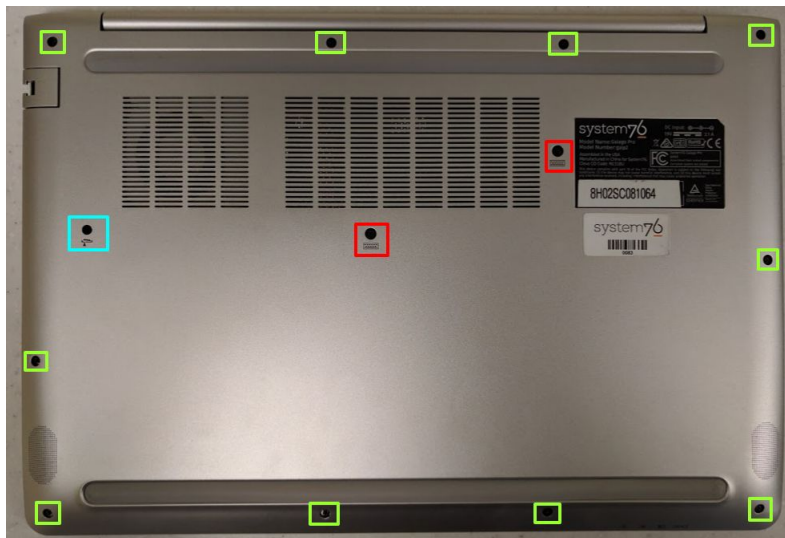

2. Galago on its side with screwdriver in keyboard push point. Push until the keyboard has popped out. This requires a solid amount of force.






3. Once the corner of the keyboard has popped, pull along the top edge of the keyboard to unseat it entirely.



4. Flip over the keyboard and remove the 3 silver screws. Their location is highlighted in blue. (Note: In this photo, the screws have already been removed.)

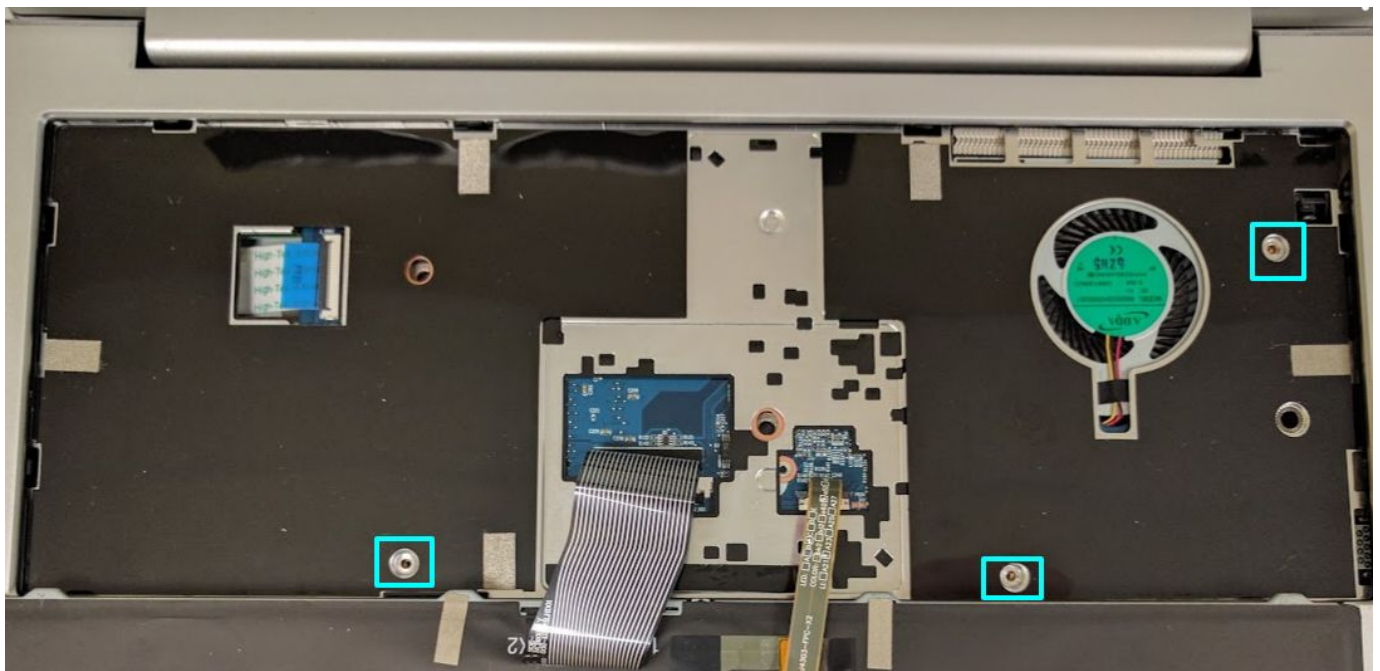

5. Set the keyboard mostly in place, close the lid, and flip the Galago lid-side-down.



6. Starting near the front corner, lift the bottom cover off the Galago.





## Replacing the RAM

RAM acts as temporary storage for your computer. More RAM generally provides better performance. If you've purchased new RAM, need to replace your RAM, or are reseating your RAM, follow these steps.

**Tools required:** Cross-head (Phillips) screwdriver

**Time estimate:** 15 minutes


**Difficulty:** Medium

### Steps to replace the RAM

1. Follow the steps above to remove the cover.
2. Press the small tabs on both sides of the RAM simultaneously.
3. Remove the RAM from the slot.
4. Insert the new RAM (or reseat the existing RAM) by placing it in the keyed slot and pressing down on the RAM until it clicks into place.

### Photo guide for replacing the RAM

1. Press the tabs indicated in red to release the RAM from the slot.

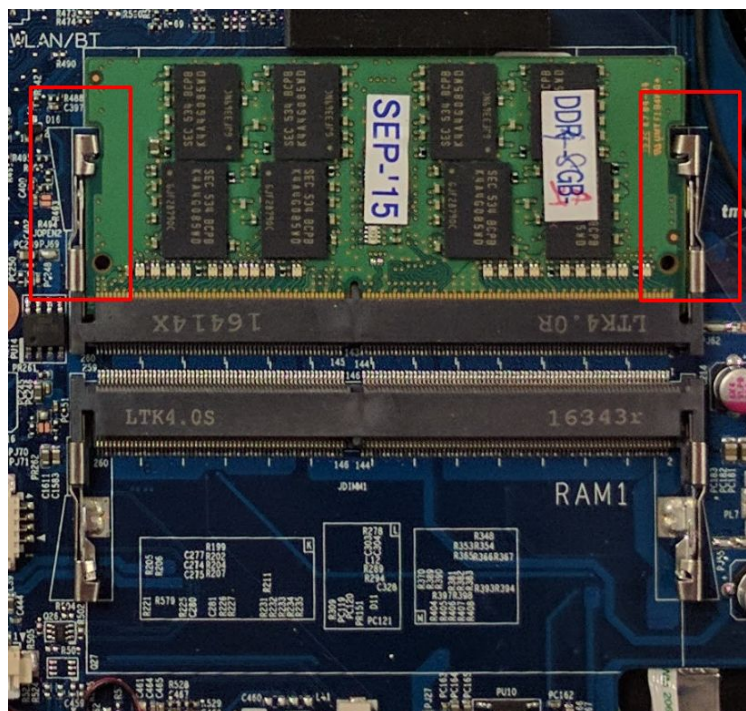

## Replacing an M.2/NVMe SSD

M.2 SSDs offer, at minimum, SATA3 speeds and performance in a package about the size of a stick of gum. NVMe M.2 SSDs offer even higher performance. The Galago supports one M.2 SSD, size 2280, either SATA or PCIe Generation 4.

**Tools required:** Cross-head (Phillips) screwdriver

**Time estimate:** 5 minutes

**Difficulty:** Medium

### Steps to replace the M.2 drive

1. Follow the steps above to remove the cover.
2. Locate the M.2 drive (or drive slot).
3. Unscrew the retainer screw opposite the M.2 slot.
4. Remove the existing M.2 drive by pulling it out of the slot.
5. Insert the new M.2 drive into the slot and hold it in place.
6. Replace the retainer screw.

## Replacing a 2.5" SSD/HDD

2.5" drives are available as either SSD (Solid State Drive) or HDD (Hard Disk Drive.) SSDs provide much better performance and durability compared to standard HDDs since there are no moving parts. Standard HDDs are less expensive and are useful for storage, however they are much more fragile.

**Tools required:** Cross-head (Phillips) screwdriver

**Time estimate:** 5 minutes

**Difficulty:** Medium

### Steps to replace the M.2 drive

1. Follow the steps above to remove the cover.
2. Locate the 2.5" SSD (or slot).
3. Remove the existing drive by pulling it up and away from the connector.
4. Insert the new 2.5" drive.
5. Ensure the 2.5" drive is secured in the slot and does not move.

## Replacing the CPU fan

If the CPU fan becomes noisy and cleaning it out doesn't fix the issue, you may need a new CPU fan. Contact Support to start a warranty claim or parts purchase.

**Tools required:** Cross-head (Phillips) screwdriver

**Time estimate:** 5 minutes

**Difficulty:** Medium

### Steps to replace the CPU fan

1. Follow the steps above to remove the cover.
2. Locate the CPU fan.
3. Unplug the CPU fan from the motherboard.
4. Remove the 2 screws holding the CPU fan in place.
5. Remove the CPU fan.
6. Insert the new CPU fan.
7. Replace the 2 screws.
8. Plug the new CPU fan into the motherboard.

## Replacing the CPU heatsink/thermal paste

In rare cases, or after several years, it may be necessary to apply new thermal paste between the CPU and the heatsink. Thermal paste helps facilitate effective heat transfer between the CPU and the cooling equipment. These instructions can also be used in the unlikely event your heatsink needs replacing.

**Tools required:** Cross-head (Phillips) screwdriver

**Time estimate:** 5 minutes

**Difficulty:** High

### Steps to replace the CPU heatsink/thermal paste

1. Follow the steps above to remove the cover.
2. Locate the CPU heatsink screws.
3. Remove the screws, starting with #3, then #2, and lastly #1.
4. Carefully remove the heatsink from the case.
5. Using a paper towel, remove the existing thermal paste. You may also use a small amount of rubbing alcohol to remove excess or difficult-to-remove paste.
6. After cleaning the CPU and heatsink, apply a small line of thermal paste directly onto the CPU core.
7. Carefully replace the heatsink.
8. Replace the screws, starting with #1, then #2, and lastly #3. Do not fully tighten #1 and #2 until #3 is in place, then fully tighten all screws.

## Replacing the CMOS battery

The CMOS battery supplies power to the Galago's CMOS chip. Changes you make to the BIOS and the computer's hardware clock are stored on the CMOS. If your Galago doesn't boot, you can reset the CMOS to force a low-level hardware reset. If your clock is constantly resetting, it's likely your CMOS battery needs replacing.

**Tools required:** Cross-head (Phillips) screwdriver

**Time estimate:** 5 minutes

**Difficulty:** Medium

### Steps to replace the CMOS battery

1. Follow the steps above to remove the cover.
2. Locate the CMOS battery. There is a red and black wire connecting the battery to a white connector.
3. Unplug the white connector for 1 minute, then reseal the connector.
4. Power up the Galago. The system may power itself off and on after initial boot, this is normal.
5. Press Enter at the CMOS/BIOS reset message prompts.
6. If you are booted into the BIOS, press F4 to load defaults, then F10 to save and resume normal boot.

## Replacing the internal battery

The battery provides primary power whenever the system is unplugged.

**Tools required:** Cross-head (Phillips) screwdriver

**Time estimate:** 5 minutes

**Difficulty:** Medium

### Steps to replace the CMOS battery

1. Follow the steps above to remove the cover.
2. Unplug the white connector above the battery.
3. Remove the 5 screws holding the battery in place.
4. Remove and replace the battery.
5. Replace the 5 screws and plug in the battery.

## Replacing the WiFi/Bluetooth module

Your Galago's WiFi and Bluetooth are both handled with the same module. It is a standard M.2 2230 slot with PCIe & USB Interfaces (A Key).

**Tools required:** Cross-head (Phillips) screwdriver

**Time estimate:** 5 minutes

**Difficulty:** Medium

### Steps to replace the WiFi/Bluetooth module

1. Follow the steps above to remove the cover.
2. Locate the wireless module.
3. Gently remove the two antennas by pulling them up and away from the wireless module.
4. Remove the retaining screw opposite the M.2 slot.
5. Remove the wireless module from the slot.
6. Insert the new wireless module.
7. Replace the retaining screw.
8. Attach the two antennas by aligning the circular fitting and pressing onto the wireless card. The connector will snap into place. **Use caution when attaching the connectors, the pins can bend, break, or snap.**



# BIOS utilities

When starting your Galago, it takes a few seconds to conduct a quick check of the components. As it proceeds, it will notify you if anything is wrong. Any issues that prevent the system from booting will be displayed and you will be prompted to enter the Setup. If no problems are detected, your Galago will load GRUB and then Ubuntu.

**For Setup/BIOS, hold F2** while booting.

**For boot options, hold F7** while booting and choose your preferred boot device.

## Updating the BIOS

BIOS updates and instructions are sent out as needed. System76 will notify you if a BIOS update is available for your Galago.

## BIOS overview

The Setup/BIOS utility allows you to make low-level changes to your Galago. It's not recommended to make changes unless the settings are provided by Support, or if you understand what you're changing.

### Main menu

Option	Description
SATA Port #	Pressing Enter opens the sub-menu to show the configuration of a SATA device on the SATA ports.
OffBoard SATA/NVMe Controller Configuration	Pressing Enter opens the sub-menu to show the configuration of any devices on the offboard SATA/NVMe controller, if installed.
System Date/Time	Set the system date/time using the hardware clock.
System/Extended Memory	Information on the amount of RAM installed.
ME FW/ MB Series/ BIOS Version/ KB/EC Firmware Rev.	Information on the BIOS version(s) and network adapter address.

## Advanced

Option	Description
Advanced Chipset Control	Options for VT-d, FlexiCharger, SGX, Fast Boot, DDI Control
> VT-d	Enable/disable Intel Virtualization Technology for Directed I/O. Extends Intel Virtualization Technology (VT) by providing hardware assets for virtual hypervisors.
> FlexiCharger	<p>The sub-menu here allows you to enable/disable the FlexiCharger. The FlexiCharger can be set to automatically start charging your battery when the battery reaches a certain capacity level (e.g. you could start the battery charge level at 40%).</p> <p>You can then set the level to stop charging (e.g. 100%), but the stop charge level must be higher than the start charge level. <b>It is not recommended to enable FlexiCharger for extended periods of time.</b></p>
> SW Guard Extensions	Enable or disable Intel SGX (Software Guard Extensions.)
> Fast Boot	Enables or disables boot with initialization of a minimal set of devices required to launch the active boot option. This has no effect for BBS boot options.
> DDI Control	Determines the Digital Display Interface (DDI) output mode. Can be set to MiniDP (mDP) or Thunderbolt (TBT).
Intel(R) Thunderbolt	Options for the Thunderbolt 3 bus.
> Thunderbolt Support	Enable or disable support for Thunderbolt 3.
> Security Level	Determines if the Thunderbolt port is allowed to send data or only video. Options are Legacy Mode (allow all data transfer), Unique ID or One Time Saved Key, and DisplayPort++ Only.
SATA Mode	The SATA (Serial ATA) controller is designed to operate in AHCI (Advanced Host Controller Interface) mode only.
Power on boot beep	Enable/disable a beep as the computer starts up.
Battery low alarm beep	Enable/disable a beep when the battery is critically low.

## Security

Option	Description
Set Supervisor Password	Sets a password for the Setup Utility. This does not affect access to the computer or Ubuntu, only the BIOS.
Set User Password	Sets a password for the Setup Utility. This does not affect access to the computer or Ubuntu, only the BIOS and boot menu.
Password on Boot	Specify whether or not a password should be entered to boot the computer. If "Enabled" is selected, only users who enter a correct password can boot the system. <b>The password cannot be reset or cleared if forgotten.</b>
Secure Boot	Enables support for Secure Boot. This is not recommended or required for Ubuntu.

## Boot

Option	Description
Boot Option Priorities	Determine the boot order for system devices. Boot option #1 will be tried first. It's recommended to set your boot drive as the 1st option and use the F7 key when temporarily booting from an external device or PXE booting.
UEFI Boot	Set options for UEFI (Unified Extensible Firmware Interface) booting.
> UEFI Boot	Enable or disable UEFI booting. Disabling UEFI booting will switch the system to Legacy BIOS boot mode. Note that if an EFI-based OS is installed, it will no longer boot in BIOS mode. If a BIOS-based OS is installed, it will no longer boot in UEFI mode.
> Network Stack	Enable or disable support for Intel PXE network boot.
> Ipv4 PXE Support	Allow PXE booting using IPv4.
> Ipv6 PXE Support	Allow PXE booting using IPv6.

# Specifications

Component	Specification
Processors	<b>Intel® Core™ i7-7500U (2.7GHz)</b> 4MB Smart Cache, 14nm (14 Nanometer), DDR4-2133MHz, TDP 15W  <b>Intel® Core™ i5-7200U (2.5GHz)</b> 4MB Smart Cache, 14nm (14 Nanometer), DDR4-2133MHz, TDP 15W
Display	13.3" HiDPI 3200 x 1800 Backlit display
Memory	Dual Channel <b>DDR4</b>  Two 260 Pin SO-DIMM Sockets Supporting <b>DDR4 2133 MHz</b> Memory Modules (real operational frequency depends on the FSB of the processor)  <b>Memory Expandable up to 32GB</b> Compatible with 4GB, 8GB or 16GB Modules
Graphics	<b>Intel® HD Graphics 620</b> Dynamic Frequency Intel Dynamic Video Memory Technology
Storage	One Changeable 2.5" / 7.0 mm (h) HDD/ SSD with SATA (Serial) Interface  One M.2 SSD 2280, SATA/PCIe Gen 3*4 Interface
Audio	High Definition Audio Interface Built-In Stereo Microphone 2 Stereo Built-In Speakers

Component	Specification
Touchpad & Keyboard	ClickPad with Multi-Gesture and Scrolling Functionality  A4 Size Isolated Keyboard
Webcam	720p HD Video Camera Module with USB interface
Interfaces	Two USB 3.0 (USB 3.1 Gen 1) Port (Type-A) One USB 3.0 (USB 3.1 Gen 1/Thunderbolt 3) Port (Type-C) One HDMI-Out (High-Definition Multimedia Interface) Port (with HDCP) One Mini DisplayPort One Microphone-In Jack One RJ-45 LAN Jack One DC-In Jack One Headphone-Out Jack
Card reader	Embedded Multi-In-1 Card Reader - MMC/ RS MMC - SD/ Mini SD / SDHC/ SDXC
M.2 Slots	<b>Two</b> M.2 Card Slots:  <b>Slot 1</b> for M.2 2230 WLAN Combo Module with PCIe & USB Interfaces (A Key)  <b>Slot 2</b> for SSD M.2 2280 Card with SATA / PCIe Gen 3*4 Interface (M Key)
Network	Built-In 10/100/1000Mb Base-TX Ethernet LAN  Intel® Dual Band Wireless-AC 8265 (2*2 802.11 a/c) WLAN + Bluetooth M.2 2230 Combo Module (867Mbps)  Intel® Dual Band Wireless-AC 3168 (1*1 802.11 a/c) WLAN + Bluetooth M.2 2230 Combo Module (433Mbps)

Component	Specification
Power and battery	Full Range AC/DC Adapter AC input 100 - 240V, 50 - 60Hz, DC Output 19V, 2.1A (40 Watts)  Embedded 4 Cell Smart Lithium Ion Battery Pack 35.3WH
Security	Security (Kensington® Type) Lock Slot BIOS Password Trusted Platform Module 2.0 (disabled by default)
Operating System	Ubuntu Linux
Indicators	LED Indicators - Power/Suspend, Battery, HDD, Airplane Mode, Camera
Environmental	Temperature Operating: 5°C - 35°C Non-operating: -20°C - 60°C  Relative humidity Operating: 20% - 80% Non-operating: 10% - 90%
Dimensions & Weight	12.98" x 8.86" x 0.56" 32.96 x 22.50 x 1.42cm 2.87lbs, 1.3kg base weight, varies with configuration.