

# OMX Media Component

User's Manual: Video Encoder Common Part

32

— Preliminary —

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Electronics Corp. website (<http://www.renesas.com>).

## Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
3. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from such alteration, modification, copy or otherwise misappropriation of Renesas Electronics product.
5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The recommended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.  
"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots etc.  
"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; and safety equipment etc.  
  
Renesas Electronics products are neither intended nor authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems, surgical implantations etc.), or may cause serious property damages (nuclear reactor control systems, military equipment etc.). You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application for which it is not intended. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for which the product is not intended by Renesas Electronics.
6. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
7. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or systems manufactured by you.
8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
9. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You should not use Renesas Electronics products or technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. When exporting the Renesas Electronics products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations.
10. It is the responsibility of the buyer or distributor of Renesas Electronics products, who distributes, disposes of, or otherwise places the product with a third party, to notify such third party in advance of the contents and conditions set forth in this document, Renesas Electronics assumes no responsibility for any losses incurred by you or third parties as a result of unauthorized use of Renesas Electronics products.
11. This document may not be reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.

(Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.

(Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

## Table of Contents

<b>1. OVERVIEW</b>	<b>5</b>
1.1. About This Document	5
1.2. Video Encoder Media Component Overview and Scope	5
1.3. Required Header Files	6
1.4. Related Documents	6
1.5. Terminology	7
<b>2. FUNCTIONS</b>	<b>8</b>
2.1. Function Details	8
2.1.1. Multi Stream Encoding	8
2.1.2. Error Handling	8
2.2. Port	9
2.2.1. Port	9
2.3. Data Flow	10
<b>3. I/O DATA FORMAT</b>	<b>11</b>
3.1. Buffer Payload	11
3.1.1. Input Buffer Payload	11
3.1.2. Output Buffer Payload	11
3.2. Input Picture Data Format	12
3.3. Output Stream Data Format	13
<b>4. API REFERENCE</b>	<b>14</b>
4.1. OpenMAX IL Macro Functions	14
4.1.1. OMX_UseBuffer	14
<b>5. INDEXES</b>	<b>15</b>
5.1. Standard Indexes of Video Encoder Media Component	15
5.1.1. OMX_IndexParamPortDefinition	15
5.1.2. OMX_IndexParamVideoPortFormat	15
5.1.3. OMX_IndexParamVideoBitrate	15
5.1.4. OMX_IndexParamVideoProfileLevelQuerySupported	16
5.1.5. OMX_IndexParamVideoProfileLevelCurrent	16
5.1.6. OMX_IndexConfigVideoBitrate	16
5.1.7. OMX_IndexConfigVideoFramerate	16
5.1.8. OMX_IndexConfigVideoIntraVOPRefresh	16
5.2. Extended Indexes of Video Encoder Media Component	17
5.2.1. OMXR_MC_IndexParamVideoPictureMemoryAlloc	17
5.3. Valid Indexes for OpenMAX IL Macro Functions	18
<b>6. STRUCTURES</b>	<b>19</b>
6.1. OMX_VIDEO_PORTDEFINITIONTYPE	20
6.1.1. OMX_VIDEO_PORTDEFINITIONTYPE (Input Port)	20
6.1.2. OMX_VIDEO_PORTDEFINITIONTYPE (Output Port)	24
6.2. OMX_VIDEO_PARAM_PORTFORMATTYPE	26
6.2.1. OMX_VIDEO_PARAM_PORTFORMATTYPE (Input Port)	26
6.2.2. OMX_VIDEO_PARAM_PORTFORMATTYPE (Output Port)	28
6.3. OMX_VIDEO_PARAM_BITRATETYPE	29
6.4. OMX_VIDEO_PARAM_PROFILELEVELTYPE	30
6.5. OMX_VIDEO_CONFIG_BITRATETYPE	31
6.6. OMX_CONFIG_FRAMERATETYPE	32
6.6.1. OMX_CONFIG_FRAMERATETYPE (Input Port)	32
6.6.2. OMX_CONFIG_FRAMERATETYPE (Output Port)	33

6.7.	OMX_CONFIG_INTRAREFRESHVOPTYPE .....	34
6.8.	OMXR_MC_VIDEO_PARAM_PICTURE_MEMORY_ALLOCTYPE .....	36
6.9.	Specific Usage on Common Structure Members.....	42
6.9.1.	Buffer Flags ( <i>nFlags</i> ) .....	43
<b>7.</b>	<b>APPENDIX .....</b>	<b>46</b>
7.1.	Errors and Error Handling.....	46
7.2.	Attentions on Port Flush Operation .....	47

## Figures

Figure 1-1 Software Stacks and Scope.....	5
Figure 2-1 Data Flow of Video Encoder Media Component.....	10
Figure 3-1 Input Buffer Sequence.....	11
Figure 6-1 Byte and Plane Order: YUV420 Planar and YVU 420 Planar.....	22
Figure 6-2 Byte and Plane Order: YUV420 SemiPlanar and YVU 420 SemiPlanar.....	23
Figure 6-3 Buffer Sequence Example with Intra Refresh (I/P Frame Case).....	35
Figure 6-4 Buffer Sequence Example with Intra Refresh (I/P/B Frame Case).....	35
Figure 6-5 Picture Format and Parameters: YUV420 Planar – Frame Arrangement.....	38
Figure 6-6 Picture Format and Parameters: YUV420 SemiPlanar – Frame Arrangement.....	39
Figure 6-7 Picture Format and Parameters: YUV420 Planar – Field Arrangement.....	40
Figure 6-8 Picture Format and Parameters: YUV420 SemiPlanar – Field Arrangement.....	41
Figure 6-9 Input Buffer Sequence: OMX_BUFFERFLAG_EOS Flag Usage.....	44
Figure 6-10 Output Buffer Sequence: OMX_BUFFERFLAG_EOS Flag Usage.....	45
Figure 6-11 Input Buffer Sequence: OMX_BUFFERFLAG_ENDOFFRAME Flag Usage.....	45

## Tables

Table 1-1 Required Header Files.....	6
Table 1-2 List of Related Documents.....	6
Table 1-3 Terminology .....	7
Table 2-1 Ports of Video Encoder Media Component.....	9
Table 5-1 Available Standard Indexes for Video Encoder Media Component.....	15
Table 5-2 Available extended indexes for Video Encoder Media Component .....	17
Table 5-3 Valid Indexes and OpenMAX IL Macro Function .....	18
Table 6-1 Video Encoder Media Component Specific Structures.....	19
Table 6-2 Notation for the access attribute of a structure member .....	19
Table 6-3 Specific Usage on Common Structure Members.....	42
Table 6-4 Specific Usage on Buffer Flags.....	43
Table 7-1 Errors and Error Handling.....	46

## OMX Media Component Video Encoder Common Part


### 1. Overview

#### 1.1. About This Document

This document is the User's Manual for OMX Media Component. It describes the specifications that are common to Video Encoder Media Components. For the specifications that are common to all the OMX Media Components, see related documents [1].

#### 1.2. Video Encoder Media Component Overview and Scope

Figure 1-1 illustrates the software stacks for the Video Encoder Media Component and shows the scope of this document. OMX Media Component Video Encoder Library is a library that provides functions that are common to all video encoders.

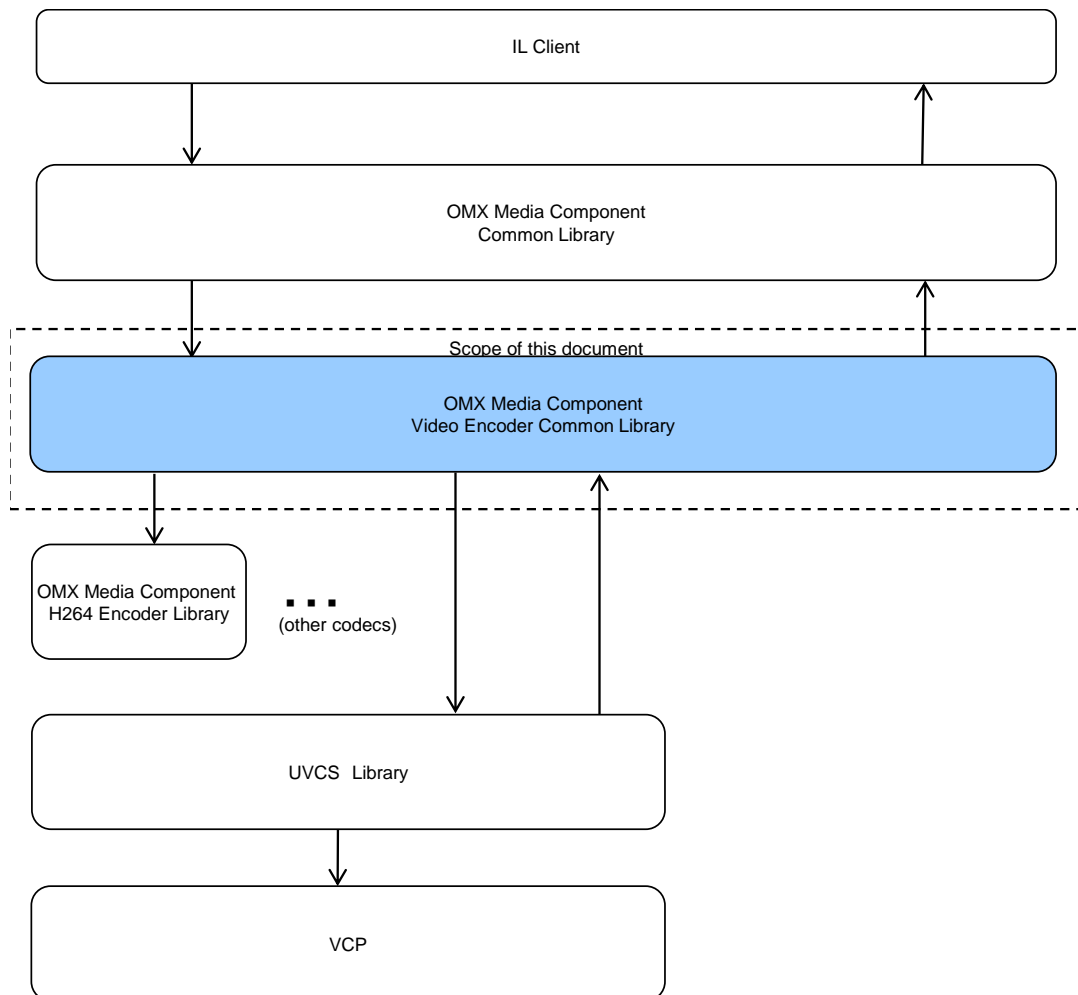

**Figure 1-1 Software Stacks and Scope**

This document describes the specifications of the OMX Media Component Video Encoder Library part. For the specifications of the OMX Media Component Common Library, see related documents [1]. For the specifications of individual Video Encoder Media Component Libraries, see the corresponding User's Manual.

### 1.3. Required Header Files

Table 1-1 lists the header files that are required to use the OMX extended indexes and structures that are described in this document. Regarding the other header files, see related documents [1].

**Table 1-1 Required Header Files**

File name	Remarks
OMXR_Extension_video.h	-
OMXR_Extension_vecmn.h	-

### 1.4. Related Documents

Table 1-2 lists the related documents.

**Table 1-2 List of Related Documents**

No.	Document Name	Remarks
[1]	OMX Media Component User's Manual Common Part	The common specifications for OMX Media Component
[2]	OpenMAX Integration Layer Application Programming Interface Specification Version 1.1.2, September 1, 2008	<a href="http://www.khronos.org/registry/omxil/specs/OpenMAX_IL_1_1_2_Specification.pdf">http://www.khronos.org/registry/omxil/specs/OpenMAX_IL_1_1_2_Specification.pdf</a>
[3]	OMX Integration Guide for <OS >	Integration guide for OMX Media Component. Substitute <OS> with your target operating system name.



## 1.5. Terminology

Table 1-3 lists the terms that are used in this document.

**Table 1-3 Terminology**

Term	Abbreviation	Description
Video Port Base	VPB	The base value of the port index of the Video Media Component. The port index values of the input and output ports are obtained by adding offset values to this base value.
UVCS	-	Renesas proprietary video codec software module that provides multi-processing function for video decoding and encoding. OMX Video Codec products contain UVCS library.
VCP	-	The abbreviation for Video Coding Processor. The VCP is the Renesas Hardware IP and provides video decoding and encoding functions for compressed video stream.
Hardware Address	-	A memory address that is accessible from Hardware IPs.

---

## 2. Functions

Video Encoder Media Component is a media component which provides functions to encode raw video to compressed stream according to each codec standard. Video Encoder Media Component receives raw video data on the input port and emits the encoded video data on the output ports.

### 2.1. Function Details

#### 2.1.1. Multi Stream Encoding

OMX Video Decoder and OMX Video Encoder provide simultaneous multi stream processing. The maximum number of streams that OMX Video Decoder and OMX Video Encoder guarantee to process simultaneously is 2 per a VCP hardware instance. For example, the maximum number of streams for a LSI which has 2 VCP hardware instances is 4. When the total number of streams exceeds the maximum number, the performance must be checked by user to ensure the system requirement.

#### 2.1.2. Error Handling

When Video Encoder Media Component detects an error that affects continuous processing, Video Encoder Media Component notifies an error event (OMX\_ErrorStreamCorrupt) to the IL client. Once an error event notified, Video Encoder Media Component stops the encode operation and the state transition to OMX\_StateIdle state is required to restart the encode operation. For the details of the error handling, see section 7.1.

In the case where the IL client specifies unsupported combination of the encoding parameters, Video Encoder Media Component adjusts the parameters automatically to start the encode operation. The IL client can confirm the result of the adjustment via OMX\_GetParameter and OMX\_GetConfig, if the encoded stream data is not as expected.

## 2.2. Port

### 2.2.1. Port

Table 2-1 lists the ports of Video Encoder Media Component.


**Table 2-1 Ports of Video Encoder Media Component**

Port Index	Domain	Direction
VPB+0	video	input
VPB+1	video	output

For the available indexes of each port, see section 5.3.

### 2.3. Data Flow

Figure 2-1 illustrates the data flow of Video Encoder Media Component.

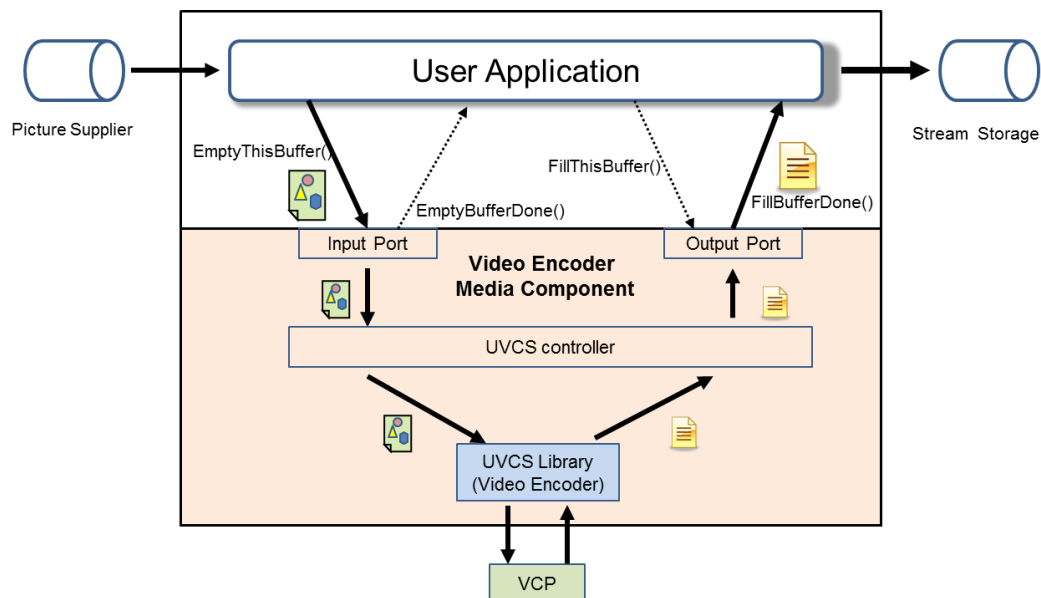

**Figure 2-1 Data Flow of Video Encoder Media Component**

### 3. I/O Data Format

#### 3.1. Buffer Payload

##### 3.1.1. Input Buffer Payload

Figure 3-1 illustrates the input buffer sequence of Video Encoder Media Component. One input picture data is stored in a single buffer.

Regarding the end of stream, see section 6.9.1.

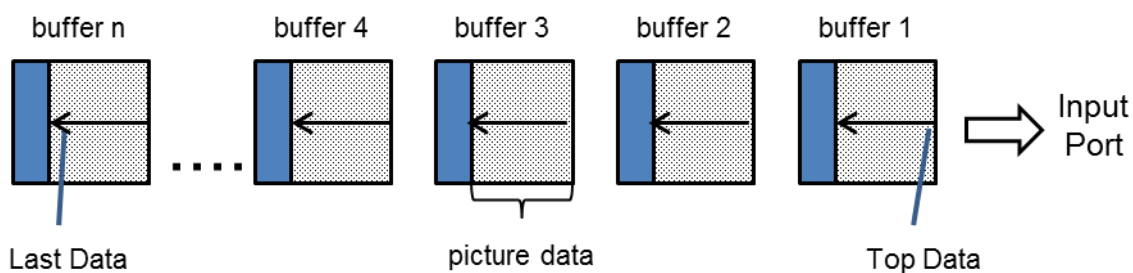


Figure 3-1 Input Buffer Sequence

##### 3.1.2. Output Buffer Payload

The output buffer payload depends on the codec component. See Media Component User's Manual for each codec component.

### **3.2. Input Picture Data Format**

Video Encoder Media Component supports the four input formats: YUV420 Planar (I420, YV12) and YUV420 Semi Planar (NV12 and NV21). The input format can be specified via the OMX\_IndexParamPortDefinition index and the OMX\_IndexParamVideoPortFormat index. For the detail of the picture formats, see 6.1. For the details of the indexes, see 5.1.1 and 5.1.2.

Video Encoder Media Component supports the progressive encoding and the interlace encoding. The encoding mode is specified by the OMXR\_MC\_IndexParamVideoPictureMemoryAlloc index. For the details of the index and the memory arrangement for each setting, see section 6.8.

### **3.3. Output Stream Data Format**

The format of output stream data depends on the specifications of each codec component. See Media Component User's Manual for each codec component.

## 4. API Reference

Video Encoder Media Component inherits the API specifications from related document [1]. This section describes only the difference that depends on Video Encoder Media Component.

### 4.1. OpenMAX IL Macro Functions

#### 4.1.1. OMX\_UseBuffer

[Reference]	Related document [1]
[Description]	<ul style="list-style-type: none"> <li>- OMX_UseBuffer is supported for the input port.</li> <li>- The <i>nSizeBytes</i> parameter must be set the same value with the <i>nBufferSize</i> member of the OMX_PARAM_PORTDEFINITIONTYPE structure that is obtained via OMX_GetParameter().</li> <li>- The <i>pBuffer</i> parameter must be an address that is accessible from the Hardware IP (i.e. "hardware address", for the detail of this, see related document [3]). When input color format is YUV Planar format (e.g. OMX_COLOR_FormatYUV420Planar or OMX_COLOR_FormatYVU420Planar ), the setting value of pBuffer must be 1024 byte-aligned address, otherwise 128 byte-aligned address.</li> </ul>
[Notes]	None



## 5. Indexes

### 5.1. Standard Indexes of Video Encoder Media Component

Table 5-1 lists the OpenMAX IL standard indexes that are available for Video Encoder Media Component.

**Table 5-1 Available Standard Indexes for Video Encoder Media Component**

Index	Description
OMX_IndexParamPortDefinition	See section 5.1.1
OMX_IndexParamVideoPortFormat	See section 5.1.2
OMX_IndexParamVideoBitrate	See section 5.1.3
OMX_IndexParamVideoProfileLevelQuerySupported	See section 5.1.4
OMX_IndexParamVideoProfileLevelCurrent	See section 5.1.5
OMX_IndexConfigVideoBitrate	See section 5.1.6
OMX_IndexConfigVideoFramerate	See section 5.1.7
OMX_IndexConfigVideoIntraVOPRefresh	See section 5.1.8

#### 5.1.1. OMX\_IndexParamPortDefinition

[Description]	The index to access the video port information such as picture size and the color format for both the input port and the output port.
[Corresponding Structure]	OMX_VIDEO_PORTDEFINITIONTYPE structure
[Notes]	None

#### 5.1.2. OMX\_IndexParamVideoPortFormat

[Description]	The index to query the supported formats.
[Corresponding Structure]	OMX_VIDEO_PARAM_PORTFORMATTYPE structure
[Notes]	None

#### 5.1.3. OMX\_IndexParamVideoBitrate

[Description]	The index to specify the type of the bit rate control for the encoding.
[Corresponding Structure]	OMX_VIDEO_PARAM_BITRATETYPE structure
[Notes]	None

#### 5.1.4. OMX\_IndexParamVideoProfileLevelQuerySupported

[Description]	The index to query the profiles and the levels that are supported by the Video Encoder Media Component.
[Corresponding Structure]	OMX_VIDEO_PARAM_PROFILELEVELTYPE structure
[Notes]	None

#### 5.1.5. OMX\_IndexParamVideoProfileLevelCurrent

[Description]	The index to get the profiles and the levels of the stream that is processing by the Video Encoder Media Component.
[Corresponding Structure]	OMX_VIDEO_PARAM_PROFILELEVELTYPE structure
[Notes]	None

#### 5.1.6. OMX\_IndexConfigVideoBitrate

[Description]	The index to access the target bit rate for the video encoding.
[Corresponding Structure]	OMX_VIDEO_CONFIG_BITRATETYPE structure
[Notes]	None

#### 5.1.7. OMX\_IndexConfigVideoFramerate

[Description]	The index to access the frame rate for the video encoding.
[Corresponding Structure]	OMX_CONFIG_FRAMERATETYPE structure
[Notes]	None

#### 5.1.8. OMX\_IndexConfigVideoIntraVOPRefresh

[Description]	The index to force the next video frame to be encoded as an I-VOP.
[Corresponding Structure]	OMX_CONFIG_INTRAREFRESHVOPTYPE structure
[Notes]	None

## 5.2. Extended Indexes of Video Encoder Media Component

Table 5-2 lists the OMX extended indexes that are available for Video Encoder Media Component.

**Table 5-2 Available extended indexes for Video Encoder Media Component**

Index	Description
OMXR_MC_IndexParamVideoPictureMemoryAlloc	See section 5.2.1

### 5.2.1. OMXR\_MC\_IndexParamVideoPictureMemoryAlloc

[Description]	The index to specify the type of the memory arrangement of the input picture data.
[String]	“OMX.RENESAS.INDEX.PARAM.VIDEO.PICTURE.MEMORY.ALLOC”
[Corresponding Structure]	OMXR_MC_VIDEO_PARAM_PICTURE_MEMORY_ALLOCTYPE structure
[Notes]	None

### 5.3. Valid Indexes for OpenMAX IL Macro Functions

Table 5-3 shows which index is available for each port and which OpenMAX IL Macro function can be called to access the index.

**Table 5-3 Valid Indexes and OpenMAX IL Macro Function**

PortIndex	Index	Get/SetParameter		Get/SetConfig	
		Get	Set	Get	Set
VPB+0	OMX_IndexParamPortDefinition	X	X	-	-
	OMX_IndexParamVideoPortFormat	X	X	-	-
	OMX_IndexConfigVideoFramerate	-	-	X	X
	OMXR_MC_IndexParamVideoPictureMemoryAlloc	X	X	-	-
VPB+1	OMX_IndexParamPortDefinition	X	X	-	-
	OMX_IndexParamVideoPortFormat	X	X	-	-
	OMX_IndexParamVideoBitrate	X	X	-	-
	OMX_IndexParamVideoProfileLevelQuerySupported	X	-	-	-
	OMX_IndexParamVideoProfileLevelCurrent	X	X	-	-
	OMX_IndexConfigVideoBitrate	-	-	X	X
	OMX_IndexConfigVideoFramerate	-	-	X	-
	OMX_IndexConfigVideoIntraVOPRefresh	-	-	X	X

X : Valid  
- : Invalid

## 6. Structures

Table 6-1 lists Video Encoder Media Component specific structures.

**Table 6-1 Video Encoder Media Component Specific Structures**

Structure Name	Description
OMX_VIDEO_PORTDEFINITIONTYPE	See section 6.1
OMX_VIDEO_PARAM_PORTFORMATTYPE	See section 6.2
OMX_VIDEO_PARAM_BITRATETYPE	See section 6.3
OMX_VIDEO_PARAM_PROFILELEVELTYPE	See section 6.4
OMX_VIDEO_CONFIG_BITRATETYPE	See section 6.5
OMX_CONFIG_FRAMERATETYPE	See section 6.6
OMX_CONFIG_INTRAREFRESHVOPTYPE	See section 6.7
OMXR_MC_VIDEO_PARAM_PICTURE_MEMORY_ALLOCTYPE	See section 6.8

Table 6-2 shows the notation for the access attribute of a structure member described in this section.

**Table 6-2 Notation for the access attribute of a structure member**

Member Name	Get	Set
Indicates the member name	<p>Indicates the access attribute of the member in the OMX_GetParameter() or OMX_GetConfig().</p> <p>“R” means IL client can get a value from the member.</p> <p>“W” means IL client must specify a value for the member.</p>	<p>Indicates the access attribute of the member in the OMX_SetParameter() or OMX_SetConfig().</p> <p>“W” means IL client must/can specify a value for the member.</p> <p>“-” means a specified value is ignored and not reflected.</p>

## 6.1. OMX\_VIDEO\_PORTDEFINITIONTYPE

### 6.1.1. OMX\_VIDEO\_PORTDEFINITIONTYPE (Input Port)

[Definition] See related document [2] 4.3.4.

[Index] OMX\_IndexParamPortDefinition

Member Name	Get	Set
<i>cMIMEType</i>	R	-
<i>pNativeRender</i>	R	-
<i>nFrameWidth</i>	R	W
<i>nFrameHeight</i>	R	W
<i>nStride</i>	R	W
<i>nSliceHeight</i>	R	W
<i>nBitrate</i>	R	-
<i>xFramerate</i>	R	W
<i>bFlagErrorConcealment</i>	R	-
<i>eCompressionFormat</i>	R	-
<i>eColorFormat</i>	R	W
<i>pNativeWindow</i>	R	-

[Notes] None.

[Details]

#### *cMIMEType*

<b>Write Value</b>	-
<b>Read Value</b>	NULL
<b>Initial Value</b>	NULL
<b>Notes</b>	-

#### *pNativeRender*

<b>Write Value</b>	-
<b>Read Value</b>	NULL
<b>Initial Value</b>	NULL
<b>Notes</b>	-

#### *nFrameWidth*

<b>Write Value</b>	80 - 1920
<b>Read Value</b>	(Current setting)
<b>Initial Value</b>	176
<b>Notes</b>	<ul style="list-style-type: none"> <li>It is in units of pixels and must be multiple of 8. Otherwise OMX_SetParameter returns an error.</li> <li>An odd value is rounded down to the closest even value.</li> </ul>

#### *nFrameHeight*

<b>Write Value</b>	80 - 1080
<b>Read Value</b>	(Current setting)
<b>Initial Value</b>	144
<b>Notes</b>	<ul style="list-style-type: none"> <li>It is in units of pixels and must be multiple of 8. Otherwise OMX_SetParameter returns an error.</li> <li>An odd value is rounded down to the closest even value.</li> </ul>

### ***nStride***

<b>Write Value</b>	96 – 2048
<b>Read Value</b>	(Current setting)
<b>Initial Value</b>	192
<b>Notes</b>	<ul style="list-style-type: none"> <li>– When input color format is YUV Planar format (e.g. OMX_COLOR_FormatYUV420Planar or OMX_COLOR_FormatYVU420Planar ), the setting value must be 256, 512, 1024 or 2048. Otherwise, the setting value must be multiple of 128. For a detail of color format, see description about eColorFormat member in OMX_VIDEO_PORTDEFINITIONTYPE.</li> <li>– It is in units of pixels and must be multiple of 32. Otherwise OMX_SetParameter returns an error.</li> <li>– An odd value is rounded down to the closest even value.</li> <li>– If the <i>nFrameWidth</i> exceeds the <i>nStride</i>, OMX_SetParameter returns an error.</li> </ul>

### ***nSliceHeight***

<b>Write Value</b>	80 - 1088
<b>Read Value</b>	(Current setting)
<b>Initial Value</b>	144
<b>Notes</b>	<ul style="list-style-type: none"> <li>– It is in units of pixels and must be multiple of 2. Otherwise OMX_SetParameter returns an error.</li> <li>– An odd value is rounded down to the closest even value.</li> <li>– If the <i>nFrameHeight</i> exceeds the <i>nSliceHeight</i>, OMX_SetParameter returns an error.</li> </ul>

### ***nBitrate***

<b>Write Value</b>	-
<b>Read Value</b>	0
<b>Initial Value</b>	0
<b>Notes</b>	<ul style="list-style-type: none"> <li>– The <i>nBitrate</i> for the input port is fixed to 0. To set the target bit rate for the video encoding, set the <i>nBitrate</i> member for the output port.</li> </ul>

### ***xFramerate***

- See each Media Component User's Manual.
- This parameter is the same as the *xFramerate* member of OMX\_VIDEO\_PARAM\_PORTFORMATTYPE(InputPort) structure and the *xEncodeFramerate* of OMX\_VIDEO\_CONFIG\_FRAMERATETYPE(InputPort). When either is updated, the others are updated with the same value.

### ***bFlagErrorConcealment***

<b>Write Value</b>	-
<b>Read Value</b>	OMX_FALSE
<b>Initial Value</b>	OMX_FALSE
<b>Notes</b>	This member is not supported.

### ***eCompressionFormat***


<b>Write Value</b>	-
<b>Read Value</b>	OMX_VIDEO_CodingUnused
<b>Initial Value</b>	OMX_VIDEO_CodingUnused
<b>Notes</b>	-

### *eColorFormat*

<b>Write Value</b>	OMX_COLOR_FormatYUV420SemiPlanar OMX_COLOR_FormatYVU420SemiPlanar OMX_COLOR_FormatYUV420Planar OMX_COLOR_FormatYVU420Planar
<b>Read Value</b>	(Current setting)
<b>Initial Value</b>	OMX_COLOR_FormatYUV420SemiPlanar
<b>Notes</b>	<ul style="list-style-type: none"> <li>For the byte and the plane order of each format, see Figure 6-1 and Figure 6-2.</li> <li>The memory arrangement of the input picture is determined by the combination of this member and the OMXR_MC_VIDEO_PARAM_PICTURE_MEMORY_ALLOCTYPE structure. For the details, see section 6.8.</li> </ul>

### *pNativeWindow*

<b>Write Value</b>	-
<b>Read Value</b>	NULL
<b>Initial Value</b>	NULL
<b>Notes</b>	This member is not supported.

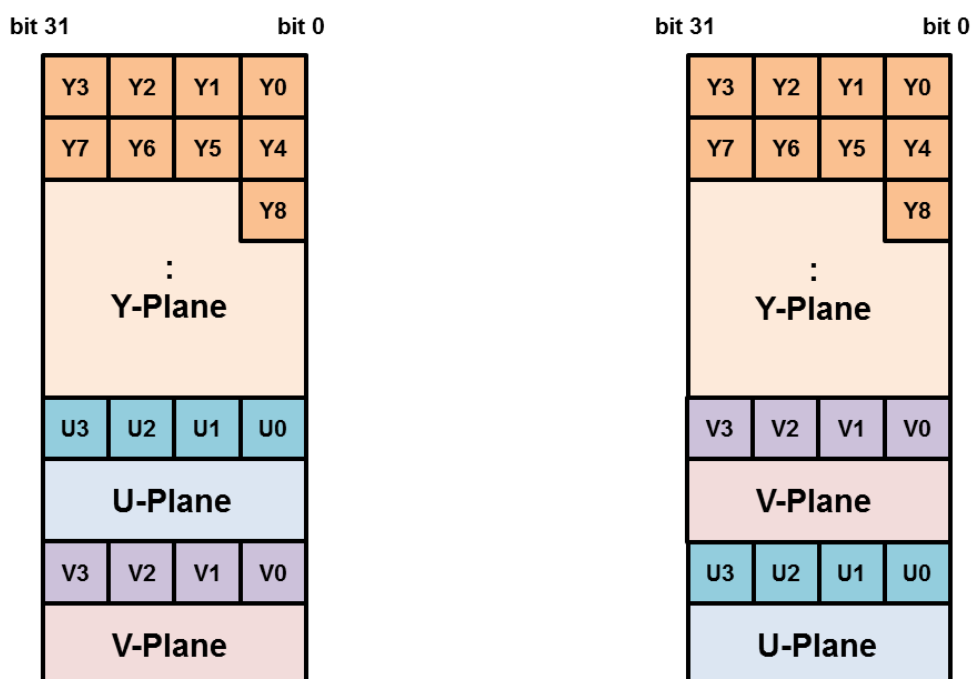


**YUV420 Planar**

**YVU420 Planar**


**Figure 6-1 Byte and Plane Order: YUV420 Planar and YVU 420 Planar**



bit 31 bit 0

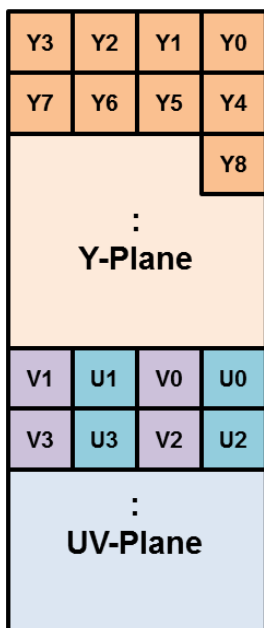

bit 31 bit 0

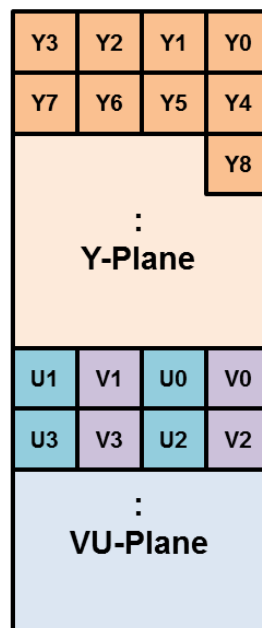

**YUV420 SemiPlanar**

**YVU420 SemiPlanar**

**Figure 6-2 Byte and Plane Order: YUV420 SemiPlanar and YVU 420 SemiPlanar**

### 6.1.2. OMX\_VIDEO\_PORTDEFINITIONTYPE (Output Port)

[Definition] See related document [2] 4.3.4.

[Index] OMX\_IndexParamPortDefinition

Member Name	Get	Set
<i>cMIMETYPE</i>	R	-
<i>pNativeRender</i>	R	-
<i>nFrameWidth</i>	R	W
<i>nFrameHeight</i>	R	W
<i>nStride</i>	R	W
<i>nSliceHeight</i>	R	W
<i>nBitrate</i>	R	W
<i>xFramerate</i>	R	-
<i>bFlagErrorConcealment</i>	R	-
<i>eCompressionFormat</i>	R	W
<i>eColorFormat</i>	R	-
<i>pNativeWindow</i>	R	-

[Notes] None.

[Details]

#### *cMIMETYPE*

<b>Write Value</b>	-
<b>Read Value</b>	NULL
<b>Initial Value</b>	NULL
<b>Notes</b>	-

#### *pNativeRender*

<b>Write Value</b>	-
<b>Read Value</b>	NULL
<b>Initial Value</b>	NULL
<b>Notes</b>	-

#### *nFrameWidth*

<b>Write Value</b>	80 - 1920
<b>Read Value</b>	(Current setting)
<b>Initial Value</b>	176
<b>Notes</b>	<ul style="list-style-type: none"> <li>- An odd value is rounded down to the closest even value.</li> <li>- No effects on the encode processing.</li> </ul>

#### *nFrameHeight*

<b>Write Value</b>	80 - 1920
<b>Read Value</b>	(Current setting)
<b>Initial Value</b>	144
<b>Notes</b>	<ul style="list-style-type: none"> <li>- An odd value is rounded down to the closest even value.</li> <li>- No effects on the encode processing.</li> </ul>

#### ***nStride***

<b>Write Value</b>	80 - 2048
<b>Read Value</b>	(Current setting)
<b>Initial Value</b>	192
<b>Notes</b>	<ul style="list-style-type: none"> <li>- An odd value is rounded down to the closest even value.</li> <li>- No effects on the encode processing.</li> <li>- This member must be multiple of 32.</li> </ul>

#### ***nSliceHeight***

<b>Write Value</b>	80 - 1088
<b>Read Value</b>	(Current setting)
<b>Initial Value</b>	144
<b>Notes</b>	<ul style="list-style-type: none"> <li>- An odd value is rounded down to the closest even value.</li> <li>- No effects on the encode processing.</li> </ul>

#### ***nBitrate***

- See each Media Component User's Manual.
- This parameter is the same as the *nTargetBitrate* member of OMX\_VIDEO\_PARAM\_BITRATETYPE structure. When either is updated, the other is updated with the same value.

#### ***xFramerate***

- See each Media Component User's Manual.
- This member is updated based on the frame rate of the stream that is currently encoding.

#### ***bFlagErrorConcealment***

<b>Write Value</b>	-
<b>Read Value</b>	OMX_FALSE
<b>Initial Value</b>	OMX_FALSE
<b>Notes</b>	-

#### ***eCompressionFormat***

- See each Media Component User's Manual.
- This parameter is the same as the *eComporessionFormat* member of OMX\_VIDEO\_PARAM\_PORTFORMATTYPE(InputPort) structure. When either is updated, the other is updated with the same value.

#### ***eColorFormat***

<b>Write Value</b>	-
<b>Read Value</b>	OMX_COLOR_FormatUnused
<b>Initial Value</b>	OMX_COLOR_FormatUnused
<b>Notes</b>	-

#### ***pNativeWindow***

<b>Write Value</b>	-
<b>Read Value</b>	NULL
<b>Initial Value</b>	NULL
<b>Notes</b>	-

## 6.2. OMX\_VIDEO\_PARAM\_PORTFORMATTYPE

### 6.2.1. OMX\_VIDEO\_PARAM\_PORTFORMATTYPE (Input Port)

[Definition] See related document [2] 4.3.5.

[Index] OMX\_IndexParamVideoPortFormat

Member Name	Get	Set
<i>nSize</i>	W	W
<i>nVersion</i>	W	W
<i>nPortIndex</i>	W	W
<i>nIndex</i>	W	-
<i>eCompressionFormat</i>	R	-
<i>eColorFormat</i>	R	W
<i>xFramerate</i>	R	W

[Notes] None.

[Details]

#### *nSize*

<b>Write Value</b>	The size of the structure in bytes.
<b>Read Value</b>	-
<b>Initial Value</b>	-
<b>Notes</b>	-

#### *nVersion*

<b>Write Value</b>	The version number of OpenMAX IL specifications 1.1.2
<b>Read Value</b>	-
<b>Initial Value</b>	-
<b>Notes</b>	-

#### *nPortIndex*

<b>Write Value</b>	VPB + 0
<b>Read Value</b>	-
<b>Initial Value</b>	-
<b>Notes</b>	-

#### *nIndex*

<b>Write Value</b>	0 - 3
<b>Read Value</b>	-
<b>Initial Value</b>	-
<b>Notes</b>	-

#### *eCompressionFormat*

<b>Write Value</b>	-
<b>Read Value</b>	OMX_VIDEO_CodingUnused
<b>Initial Value</b>	OMX_VIDEO_CodingUnused
<b>Notes</b>	-

***eColorFormat***

<b>Write Value</b>	OMX_COLOR_FormatYUV420SemiPlanar OMX_COLOR_FormatYUV420Planar OMX_COLOR_FormatYVU420SemiPlanar OMX_COLOR_FormatYVU420Planar
<b>Read Value</b>	OMX_COLOR_FormatYUV420SemiPlanar (nIndex = 0) OMX_COLOR_FormatYUV420Planar (nIndex = 1) OMX_COLOR_FormatYVU420SemiPlanar (nIndex = 2) OMX_COLOR_FormatYVU420Planar (nIndex = 3)
<b>Initial Value</b>	OMX_COLOR_FormatYUV420SemiPlanar
<b>Notes</b>	<ul style="list-style-type: none"> <li>On OMX_SetParameter, the value of the <i>eColorFormat</i> member is reflected in the <i>eColorFormat</i> member of the OMX_VIDEO_PORTDEFINITIONTYPE structure for the input port.</li> </ul>

***xFramerate***

- See each Media Component User's Manual.
- This parameter is the same as the *xFramerate* member of OMX\_VIDEO\_PARAM\_PORTDEFINITIONTYPE(InputPort) structure and the *xEncodeFramerate* of the OMX\_VIDEO\_CONFIG\_FRAMERATETYPE(InputPort) structure. When either is updated, the others are updated with the same value.

## 6.2.2. OMX\_VIDEO\_PARAM\_PORTFORMATTYPE (Output Port)

[Definition] See related document [2] 4.3.5.

[Index] OMX\_IndexParamVideoPortFormat

Member Name	Get	Set
<i>nSize</i>	W	W
<i>nVersion</i>	W	W
<i>nPortIndex</i>	W	W
<i>nIndex</i>	W	-
<i>eCompressionFormat</i>	R	W
<i>eColorFormat</i>	R	-
<i>xFramerate</i>	R	-

[Notes] None.

[Details]

### *nSize*

<b>Write Value</b>	The size of the structure in bytes.
<b>Read Value</b>	-
<b>Initial Value</b>	-
<b>Notes</b>	-

### *nVersion*

<b>Write Value</b>	The version number of OpenMAX IL specifications 1.1.2
<b>Read Value</b>	-
<b>Initial Value</b>	-
<b>Notes</b>	-

### *nPortIndex*

<b>Write Value</b>	VPB + 1
<b>Read Value</b>	-
<b>Initial Value</b>	-
<b>Notes</b>	-

### *nIndex*

- See each Media Component User's Manual.

### *eCompressionFormat*

- See each Media Component User's Manual.
- This parameter is the same as the *eComporessionFormat* member of OMX\_VIDEO\_PARAM\_PORTDEFINITIONTYPE(InputPort) structure. When either is updated, the other is updated with the same value.

### *eColorFormat*

<b>Write Value</b>	-
<b>Read Value</b>	OMX_COLOR_FormatUnused
<b>Initial Value</b>	OMX_COLOR_FormatUnused
<b>Notes</b>	-

### *xFramerate*

- See each Media Component User's Manual.

### 6.3. OMX\_VIDEO\_PARAM\_BITRATETYPE

[Definition] See related document [2] 4.3.4.

[Index] OMX\_IndexParamVideoBitrate

Member Name	Get	Set
<i>nSize</i>	W	W
<i>nVersion</i>	W	W
<i>nPortIndex</i>	W	W
<i>eControlRate</i>	R	W
<i>nTargetBitrate</i>	R	W

[Notes] None.

[Details]

#### *nSize*

<b>Write Value</b>	The size of the structure in bytes.
<b>Read Value</b>	-
<b>Initial Value</b>	-
<b>Notes</b>	-

#### *nVersion*

<b>Write Value</b>	The version number of OpenMAX IL specifications 1.1.2
<b>Read Value</b>	-
<b>Initial Value</b>	-
<b>Notes</b>	-

#### *nPortIndex*

<b>Write Value</b>	VPB + 1
<b>Read Value</b>	-
<b>Initial Value</b>	-
<b>Notes</b>	-

#### *eControlRate*

- See each Media Component User's Manual.

#### *nTargetBitrate*

- See each Media Component User's Manual.
- This parameter is the same as the *xBitrate* member of OMX\_VIDEO\_PARAM\_PORTDEFINITIONTYPE(OutputPort) structure. When either is updated, the other is updated with the same value.
- In the case of VBR, the maximum value of *nTargetBitrate* is half the CBR.
- This parameter defines the peak bitrate and the initial target bitrate for encoding. In the case of CBR, the peak bitrate is set as *nTargetBitrate*. In the case of VBR, the peak bitrate is set to twice as large as *nTargetBitrate*.

#### 6.4. OMX\_VIDEO\_PARAM\_PROFILELEVELTYPE

[Definition] See related document [2] 4.3.25.

[Index] OMX\_IndexParamVideoProfileLevelQuerySupported  
OMX\_IndexParamVideoProfileLevelCurrent

[Member]	Member Name	Get	Set
	<i>nSize</i>	W	W
	<i>nVersion</i>	W	W
	<i>nPortIndex</i>	W	W
	<i>eProfile</i>	R	-
	<i>eLevel</i>	R	-
	<i>nProfileIndex</i>	W	-

[Notes] None.

[Details]

##### ***nSize***

<b>Write Value</b>	The size of the structure in bytes.
<b>Read Value</b>	-
<b>Initial Value</b>	-
<b>Notes</b>	-

##### ***nVersion***

<b>Write Value</b>	The version number of OpenMAX IL specifications 1.1.2
<b>Read Value</b>	-
<b>Initial Value</b>	-
<b>Notes</b>	-

##### ***nPortIndex***

<b>Write Value</b>	VPB + 1
<b>Read Value</b>	-
<b>Initial Value</b>	-
<b>Notes</b>	-

##### ***eProfile***

- See each Media Component User's Manual.

##### ***eLevel***

- See each Media Component User's Manual.

##### ***nProfileIndex***

- See each Media Component User's Manual.



## 6.5. OMX\_VIDEO\_CONFIG\_BITRATETYPE

[Definition] See related document [2] 4.3.19.

[Index] OMX\_IndexConfigVideoBitrate

[Member]	Member Name	Get	Set
	<i>nSize</i>	W	W
	<i>nVersion</i>	W	W
	<i>nPortIndex</i>	W	W
	<i>nEncodeBitrate</i>	R	W

[Notes] None.

[Details]

### *nSize*

<b>Write Value</b>	The size of the structure in bytes.
<b>Read Value</b>	-
<b>Initial Value</b>	-
<b>Notes</b>	-

### *nVersion*

<b>Write Value</b>	The version number of OpenMAX IL specifications 1.1.2
<b>Read Value</b>	-
<b>Initial Value</b>	-
<b>Notes</b>	-

### *nPortIndex*

<b>Write Value</b>	VPB + 1
<b>Read Value</b>	-
<b>Initial Value</b>	-
<b>Notes</b>	-

### *nEncodeBitrate*

- See each Media Component User's Manual.
- The range of the write value depends on the *nTargetBitrate* member of the OMX\_VIDEO\_PARAM\_BITRATETYPE structure.  
The minimum is (*nTargetBitrate* / 4) and the maximum is *nTargetBitrate*.
- The value larger than the maximum is rounded down to the maximum.
- The value smaller than the minimum is rounded up to the minimum.

## 6.6. OMX\_CONFIG\_FRAMERATETYPE

### 6.6.1. OMX\_CONFIG\_FRAMERATETYPE (Input Port)

[Definition] See related document [2] 4.3.20.

[Index] OMX\_IndexConfigVideoFramerate

[Member]	Member Name	Get	Set
	<i>nSize</i>	W	W
	<i>nVersion</i>	W	W
	<i>nPortIndex</i>	W	W
	<i>xEncodeFramerate</i>	R	W

[Notes] If the OMX\_CONFIG\_FRAMERATETYPE structure is updated during OMX\_StateExecuting state or OMX\_StatePause state via OMX\_SetConfig function, the updated setting is not applied until the Video Encoder Media Component transits to OMX\_StateIdle state.

[Details]

#### *nSize*

<b>Write Value</b>	The size of the structure in bytes.
<b>Read Value</b>	-
<b>Initial Value</b>	-
<b>Notes</b>	-

#### *nVersion*

<b>Write Value</b>	The version number of OpenMAX IL specifications 1.1.2
<b>Read Value</b>	-
<b>Initial Value</b>	-
<b>Notes</b>	-

#### *nPortIndex*

<b>Write Value</b>	VPB + 0
<b>Read Value</b>	-
<b>Initial Value</b>	-
<b>Notes</b>	-

#### *xEncodeFramerate*

- See each Media Component User's Manual.
- This parameter is the same as the *xFramerate* member of OMX\_VIDEO\_PARAM\_PORTDEFINITIONTYPE(InputPort) structure and the *xFramerate* of OMX\_VIDEO\_PARAM\_PORTFORMATTYPE(InputPort). When either is updated, the others are updated with the same value.

### 6.6.2. OMX\_CONFIG\_FRAMERATETYPE (Output Port)

[Definition] See related document [2] 4.3.20.

[Index] OMX\_IndexConfigVideoFramerate

[Member]	Member Name	Get	Set
	<i>nSize</i>	W	W
	<i>nVersion</i>	W	W
	<i>nPortIndex</i>	W	W
	<i>xEncodeFramerate</i>	R	-

[Notes] None.

[Details]

#### *nSize*

<b>Write Value</b>	The size of the structure in bytes.
<b>Read Value</b>	-
<b>Initial Value</b>	-
<b>Notes</b>	-

#### *nVersion*

<b>Write Value</b>	The version number of OpenMAX IL specifications 1.1.2
<b>Read Value</b>	-
<b>Initial Value</b>	-
<b>Notes</b>	-

#### *nPortIndex*

<b>Write Value</b>	VPB + 1
<b>Read Value</b>	-
<b>Initial Value</b>	-
<b>Notes</b>	-

#### *xEncodeFramerate*

- See each Media Component User's Manual.
- This member is updated based on the frame rate of the stream that is currently encoding.

## 6.7. OMX\_CONFIG\_INTRAREFRESHVOPTYPE

[Definition] See related document [2] 4.3.21.

[Index] OMX\_IndexConfigVideoIntraVOPRefresh

Member Name	Get	Set
<i>nSize</i>	W	W
<i>nVersion</i>	W	W
<i>nPortIndex</i>	W	W
<i>IntraRefreshVOP</i>	R	W

[Notes] None.

[Details]

### *nSize*

<b>Write Value</b>	The size of the structure in bytes.
<b>Read Value</b>	-
<b>Initial Value</b>	-
<b>Notes</b>	-

### *nVersion*

<b>Write Value</b>	The version number of OpenMAX IL specifications 1.1.2
<b>Read Value</b>	-
<b>Initial Value</b>	-
<b>Notes</b>	-

### *nPortIndex*

<b>Write Value</b>	VPB + 1
<b>Read Value</b>	-
<b>Initial Value</b>	-
<b>Notes</b>	-

### *IntraRefreshVOP*

<b>Write Value</b>	OMX_FALSE OMX_TRUE
<b>Read Value</b>	OMX_FALSE
<b>Initial Value</b>	OMX_FALSE
<b>Notes</b>	<ul style="list-style-type: none"> <li>- If <i>IntraRefreshVOP</i> is set to OMX_TRUE, the Video Encoder Media Component tries to reset the input data immediately following the OMX_SetConfig call.</li> <li>- If <i>IntraRefreshVOP</i> is set to OMX_FALSE, the setting is ignored.</li> <li>- Figure 6-3 and Figure 6-4 are examples of the encoded buffer sequence with the intra refresh.</li> </ul>

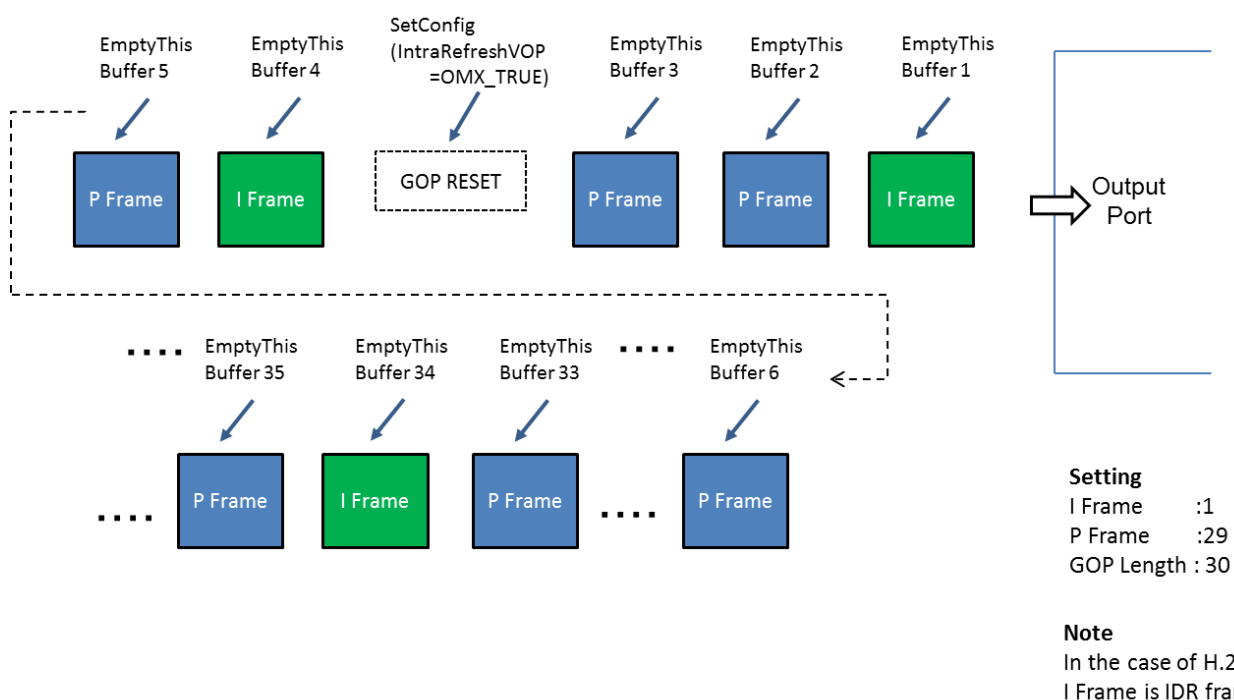


Figure 6-3 Buffer Sequence Example with Intra Refresh (I/P Frame Case)

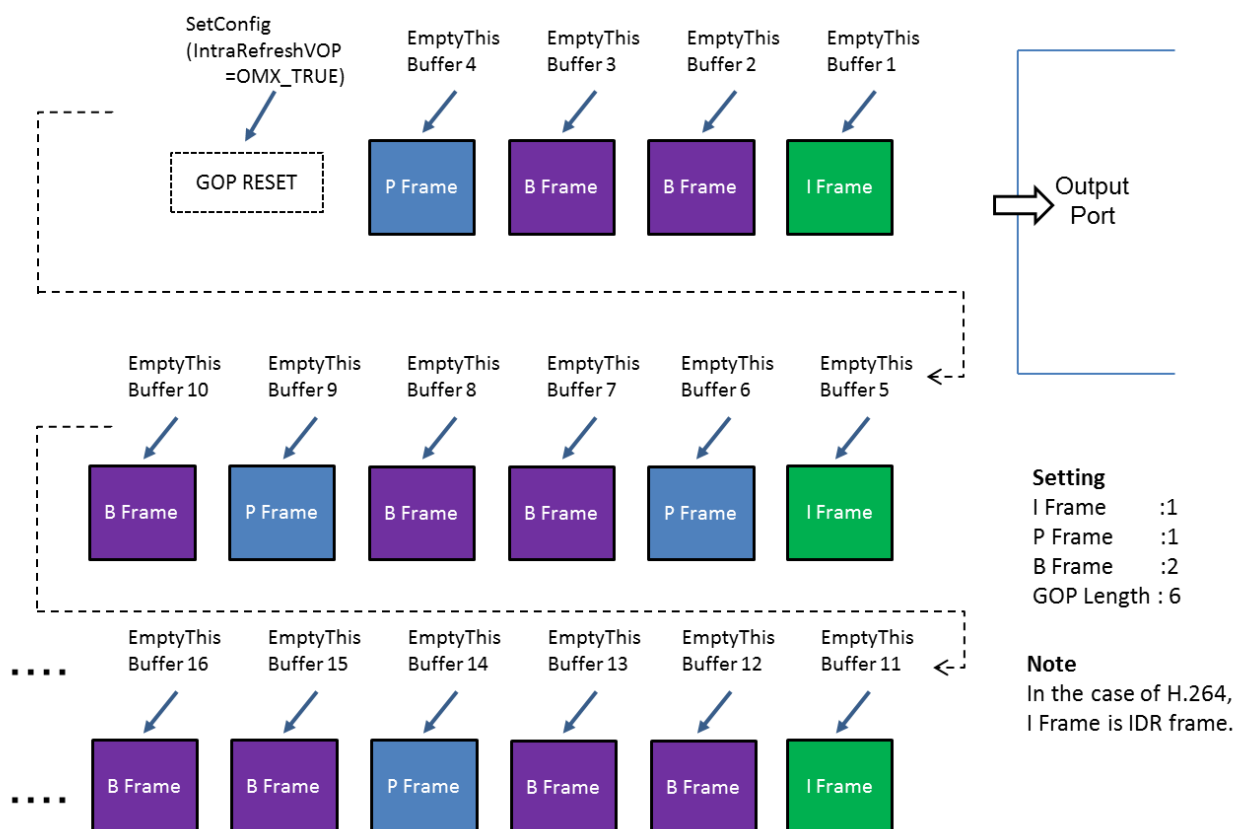


Figure 6-4 Buffer Sequence Example with Intra Refresh (I/P/B Frame Case)



### ***eMemoryAlloc***


<b>Write Value</b>	OMXR_MC_VIDEO_MemAllocFrame: Frame Arrangement OMXR_MC_VIDEO_MemAllocFieldTff: Field Arrangement and the field order is top field first. OMXR_MC_VIDEO_MemAllocFieldBff: Field Arrangement and the field order is bottom field first.
<b>Read Value</b>	(Current setting)
<b>Initial Value</b>	OMXR_MC_VIDEO_MemAllocFrame
<b>Notes</b>	<ul style="list-style-type: none"> <li>- To encode the progressive stream, set to OMXR_MC_VIDEO_MemAllocFrame. For the details of the memory arrangement, see Figure 6-5 and Figure 6-6.</li> <li>- To encode the interlaced stream, set to OMXR_MC_VIDEO_MemAllocFieldTff or OMXR_MC_VIDEO_MemAllocFieldBff. For the details of the memory arrangement, see Figure 6-7 and Figure 6-8.</li> </ul>

### ***bIPConvert***

<b>Write Value</b>	-
<b>Read Value</b>	OMX_FALSE
<b>Initial Value</b>	OMX_FALSE
<b>Notes</b>	This member is not supported.

### ***bTLConvert***

<b>Write Value</b>	-
<b>Read Value</b>	OMX_FALSE
<b>Initial Value</b>	OMX_FALSE
<b>Notes</b>	This member is not supported.

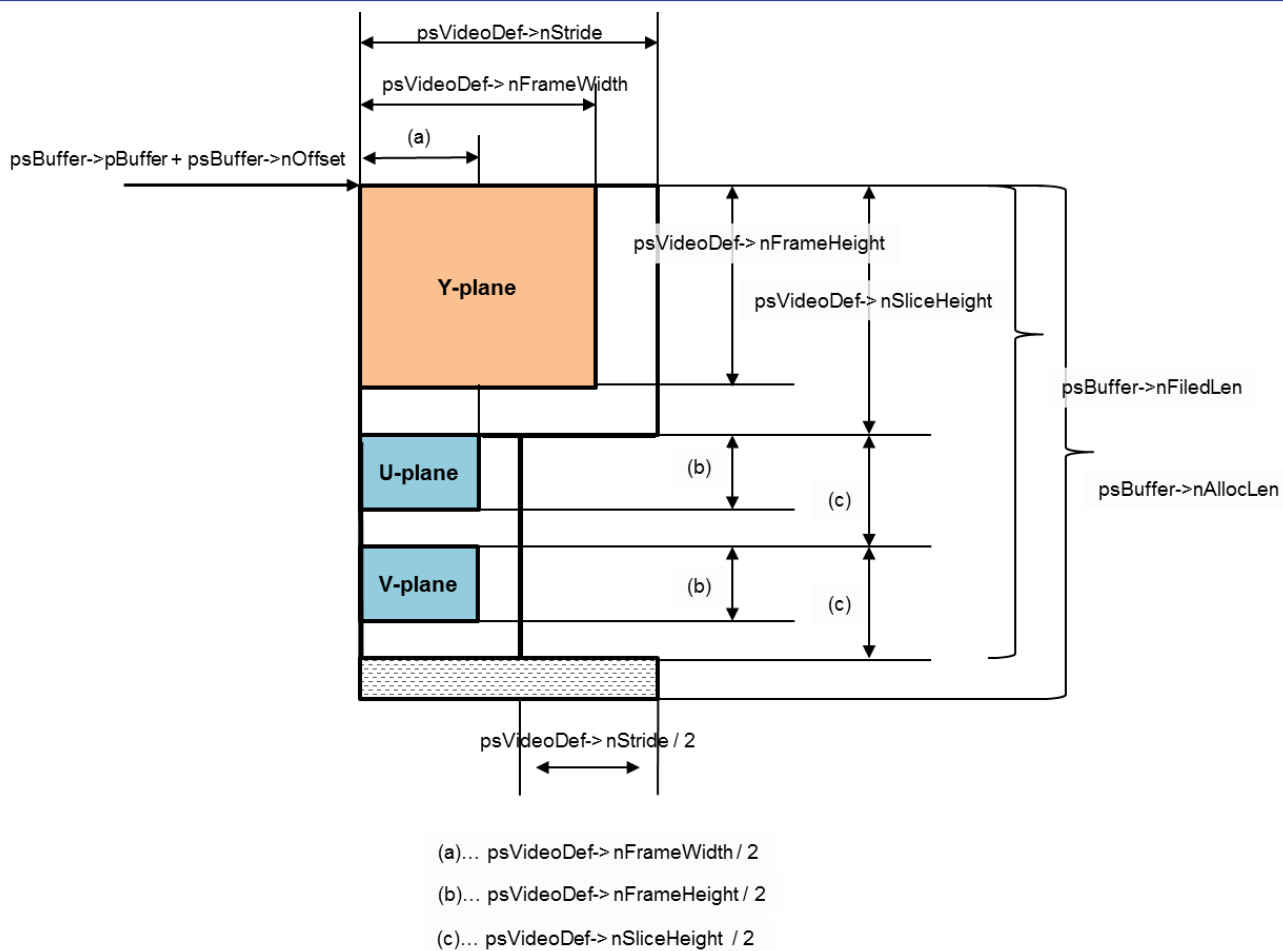

**Figure 6-5 Picture Format and Parameters: YUV420 Planar – Frame Arrangement**



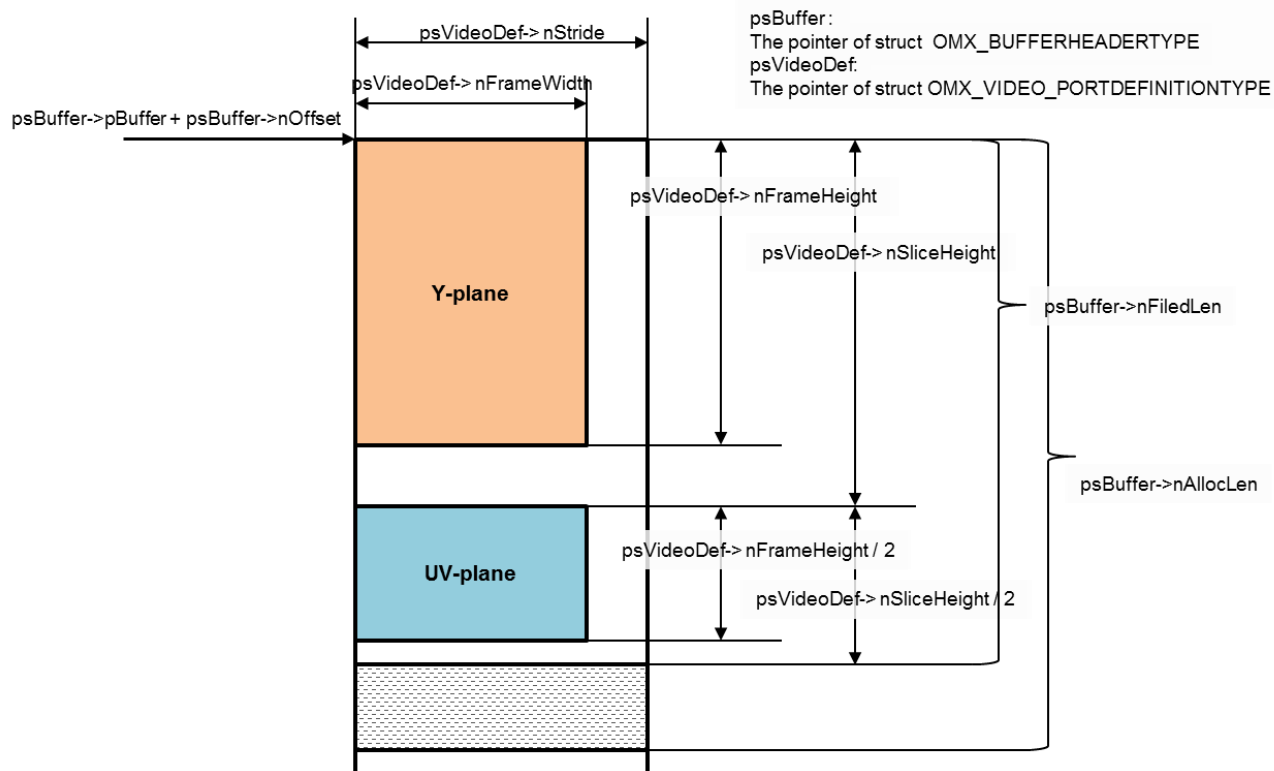


Figure 6-6 Picture Format and Parameters: YUV420 SemiPlanar – Frame Arrangement

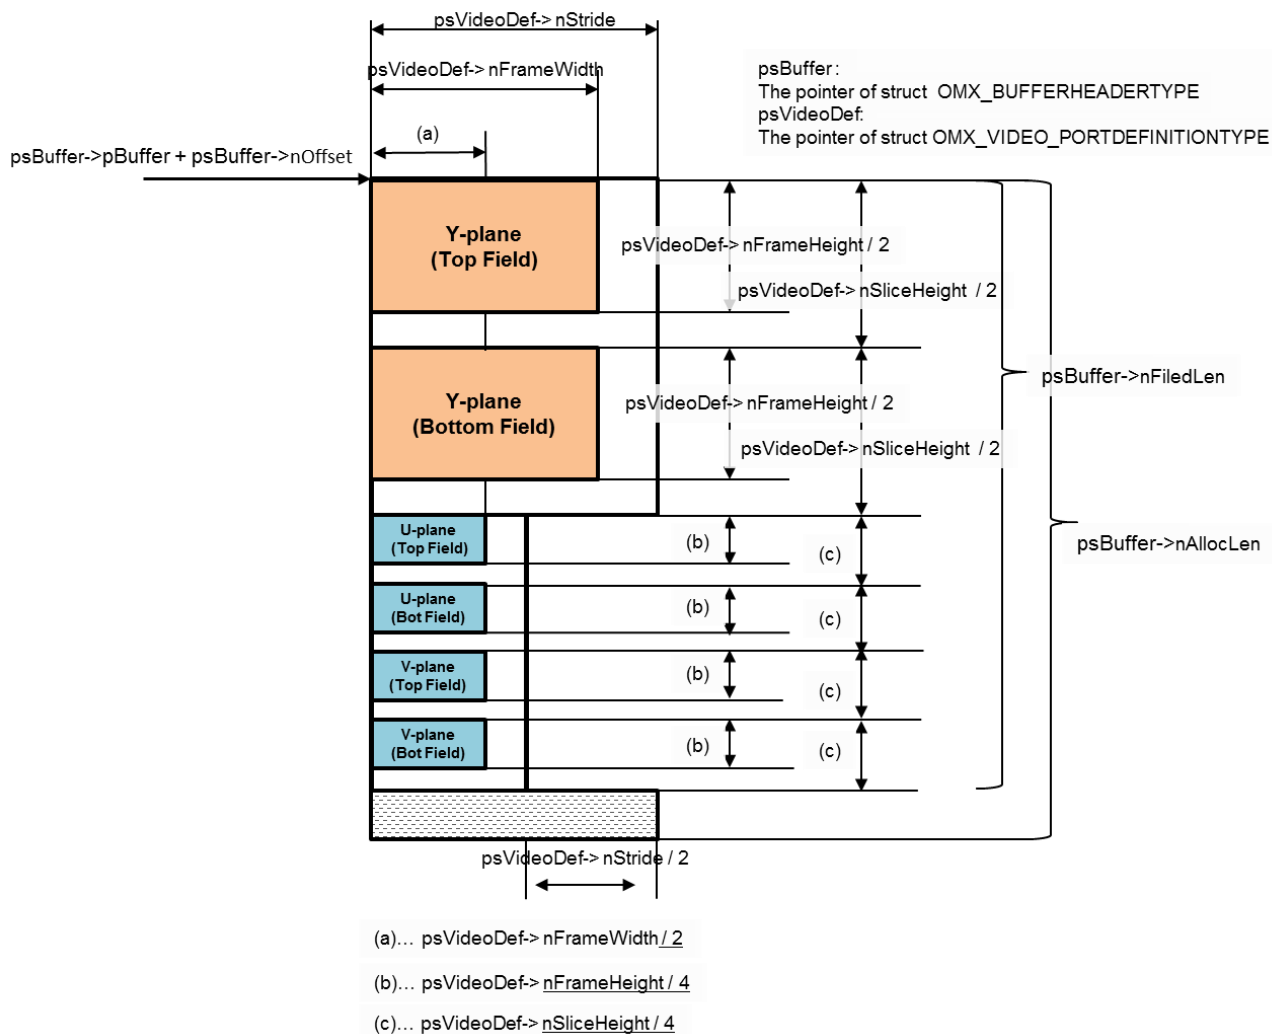


Figure 6-7 Picture Format and Parameters: YUV420 Planar – Field Arrangement

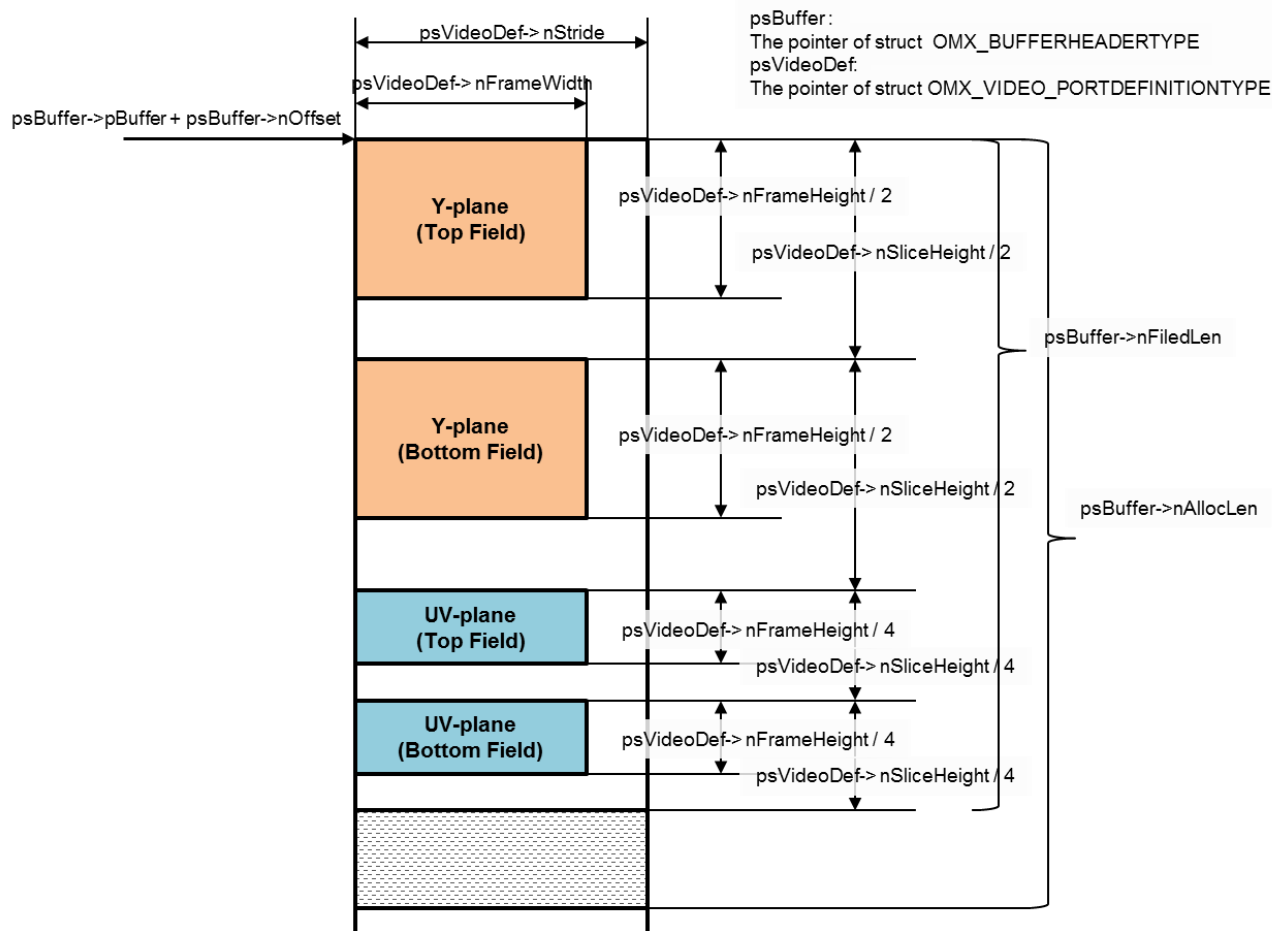


Figure 6-8 Picture Format and Parameters: YUV420 SemiPlanar – Field Arrangement

## 6.9. Specific Usage on Common Structure Members

Table 6-3 describes Video Encoder Media Component specific usage of the structures that are described in related document [1].

**Table 6-3 Specific Usage on Common Structure Members**

Structure	Member	Description
OMX_BUFFERHEADERTYPE	<i>nTickCount</i>	The <i>nTickCount</i> member of the input buffer can be set to any value. Video Encoder Media Component propagates the value to its associated output buffer.
	<i>nTimeStamp</i>	The <i>nTimeStamp</i> member of the input buffer can be set to any value. Video Encoder Media Component propagates the value to its associated output buffer.
	<i>pInputPortPrivate</i>	For the input port, the “hardware address” of the <i>pBuffer</i> is stored. For the detail of “hardware address”, see related document [3].
	<i>pOutputPortPrivate</i>	This member must not be modified by the IL client.
	<i>nFlags</i>	For the details, see section 6.9.1.
	<i>nOffset</i>	The <i>nOffset</i> member is ignored and updated by zero on (*EmptyBufferDone) and (*FillBufferDone) callbacks.
OMX_PARAM_PORTDEFINITIONTYPE	<i>nBufferCoutActual</i>	[input port] The default value is 5. It can be set in the range <i>nBufferCountMin</i> to 5.  [output port] The default value is 2. It can be set in the range <i>nBufferCountMin</i> to 5.
	<i>nBufferCountMin</i>	[input port] 2 (read only)  2 is the minimum number in the case where the B frame is not used for the video encoding. The required number of the buffers depends on the number of the B frames. For the details of the B frame setting, see each Media Component User's Manual.  [output port] 2 (read only)
	<i>nBufferSize</i>	[input port] <i>nBufferSize</i> is calculated by using the <i>nStride</i> member and the <i>nSliceHeight</i> member of the OMX_VIDEO_PORTDEFINITIONTYPE structure as follows:  $nBufferSize = (nStride \times nSliceHeight \times 3) / 2$  [output port] 3,110,400 (maximum)
	<i>format</i>	See section 6.1.1 and 6.1.2.


### 6.9.1. Buffer Flags (*nFlags*)

Table 6-4 shows the usage of the *nFlags* member of the OMX\_BUFFERHEADERTYPE structure. For the basic definition of these flags, see related document [2].


**Table 6-4 Specific Usage on Buffer Flags**

flag	Description
OMX_BUFFERFLAG_EOS	<p>[Input Buffer] The IL client can select the two patterns of EOS buffer sequence as illustrated in Figure 6-9.</p> <p>[Output Buffer] The Video Encoder Media Component returns the buffer with this flag after the buffer contains the last output picture data as illustrated in Figure 6-10.</p>
OMX_BUFFERFLAG_STARTTIME	Video Encoder Media Component propagates the flag of an input buffer to the output buffer without any operations.
OMX_BUFFERFLAG_DECODEONLY	
OMX_BUFFERFLAG_DATACORRUPT	
OMX_BUFFERFLAG_ENDOFFRAME	Since the IL client must store one input picture data into a single buffer for Video Encoder Media Component, all the input buffers must have this flag. For the buffer sequence, see Figure 6-11.
OMX_BUFFERFLAG_SYNCFRAME	This flag is set when the output buffer is an intra-frame.
OMX_BUFFERFLAG_EXTRADATA	Video Encoder Media Component propagates the flag of an input buffer to the output buffer without any operations.
OMX_BUFFERFLAG_CODECCONFIG	See each Media Component User's Manual.

DATA+EOS case: Set EOS flag to the last data buffer.

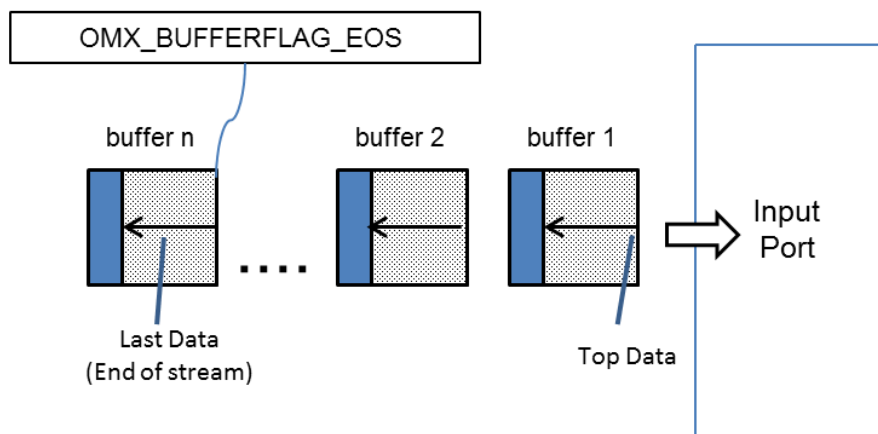

0+EOS case: Set EOS flag to the next buffer(with no data) after last data buffer.

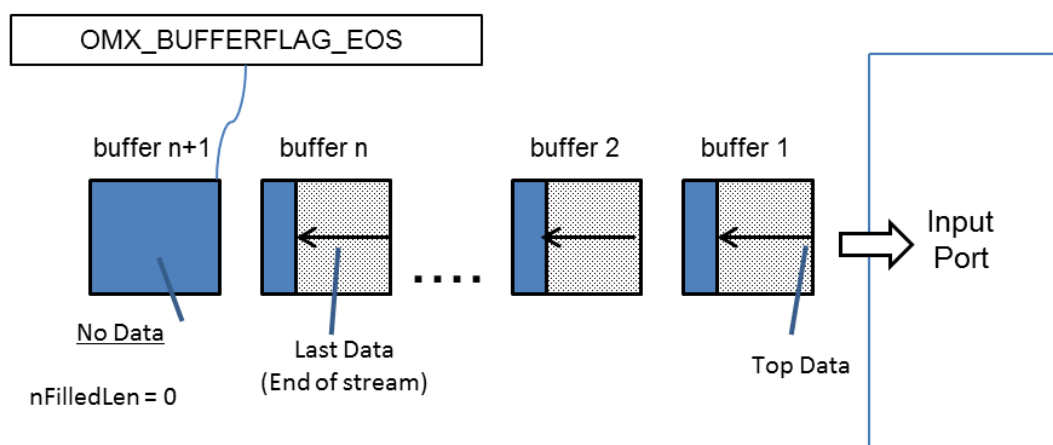

**Figure 6-9 Input Buffer Sequence: OMX\_BUFFERFLAG\_EOS Flag Usage**

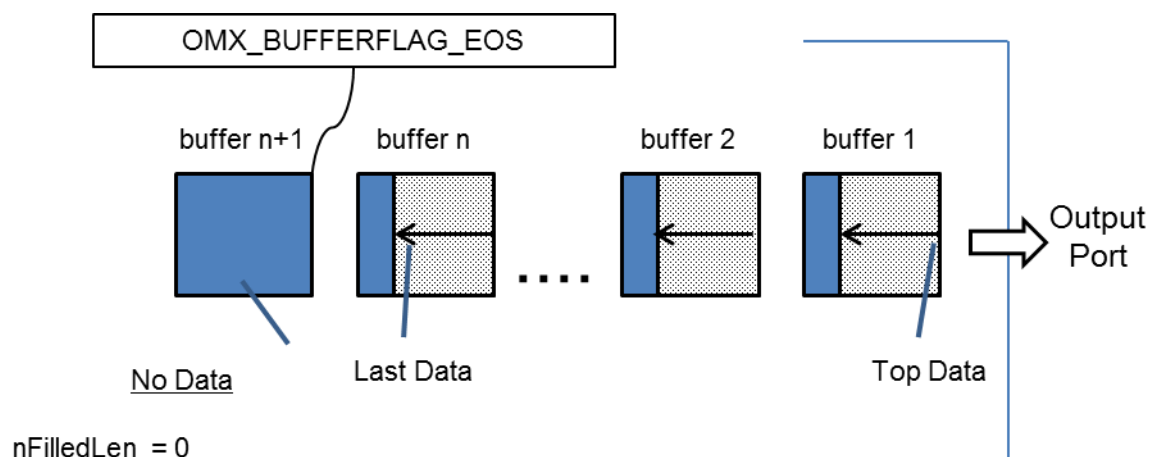


Figure 6-10 Output Buffer Sequence: OMX\_BUFFERFLAG\_EOS Flag Usage

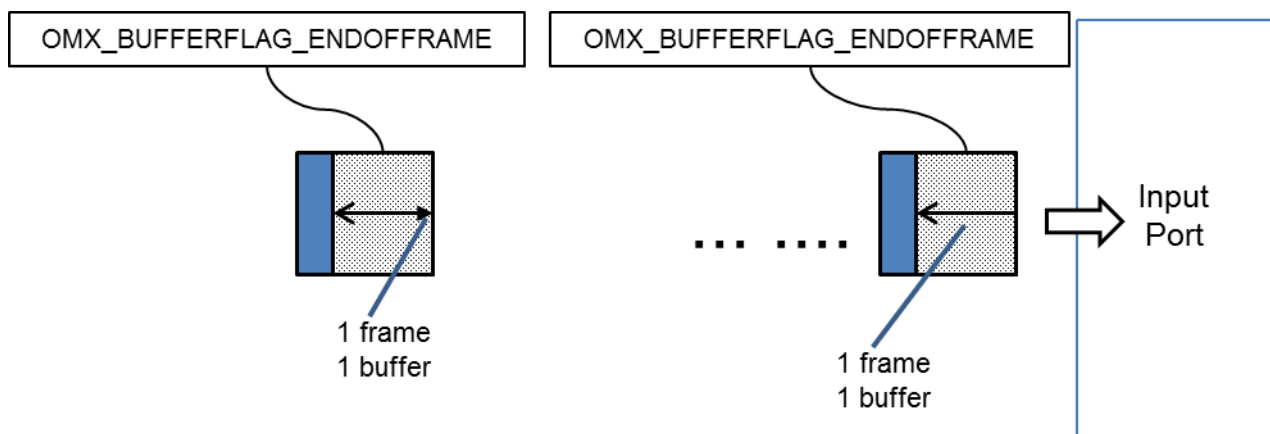


Figure 6-11 Input Buffer Sequence: OMX\_BUFFERFLAG\_ENDOFFRAME Flag Usage

## 7. Appendix

### 7.1. Errors and Error Handling

Table 7-1 shows the description for the flow control and stream errors and how to handle the errors.

**Table 7-1 Errors and Error Handling**

Error Code	Description
OMX_ErrorStreamCorrupt	<p>[Reason] This error is reported via event callback when an error is detected that Video Encoder Media Component cannot continue the operation.</p> <p>[Error Handling] To resume the encode operation it requires the state transition to OMX_StateIdle state.</p>
OMX_ErrorOverflow	<p>[Reason] The Video Encoder Media Component receives a buffer that is already received from the IL client via OMX_EmptyThisBuffer or OMX_FillThisBuffer.</p> <p>[Error Handling] Although it is possible to continue the encode operation, make sure that the buffer management and the API sequence are correct in the IL client side.</p>
OMX_ErrorUnderflow	<p>[Reason] Video Encoder Media Component does not return this error code.</p> <p>[Error Handling] None.</p>



---

## 7.2. Attentions on Port Flush Operation

Regarding the port flush and the port disable operation for Video Encoder Media Component the following items should be noticed:

- When the IL client flushes or disables a port of Video Encoder Media Component, all the ports should be flushed or disabled.

<b>REVISION HISTORY</b>	OMX Media Component User's Manual : Video Encoder Common Part
-------------------------	--

Rev.	Date	Description	
		Page	Summary
0.02	Feb. 7, 2014	—	Draft revision based on Japanese User's Manual Rev.0.02.
0.03	Mar. 26, 2014	—	<ul style="list-style-type: none"> <li>- Add the description about the member relation between several structures.</li> <li>- Add the description about target bitrate and peak bitrate in 6.3. OMX_VIDEO_PARAM_BITRATETYPE.</li> <li>- Add the description about the range of the bitrate setting in 6.5. OMX_VIDEO_CONFIG_BITRATETYPE</li> <li>- Correct the description about the default value of the nBufferCoutActual member.</li> </ul>
0.04	May. 22, 2014	—	<ul style="list-style-type: none"> <li>- Correct the description about the max bitrate value in 6.3. OMX_VIDEO_PARAM_BITRATETYPE.</li> <li>- Correct the description about the max bitrate value in 6.3.6.5. OMX_VIDEO_CONFIG_BITRATETYPE.</li> <li>- Remove the description about the operation of the after flush or port disable in 7.2.Attentions on Port Flush Operation.</li> </ul>
0.0.5	Jul.24.2014	21	<ul style="list-style-type: none"> <li>- Add description about restriction of nStride in 6.1.1. OMX_VIDEO_PORTDEFINITIONTYPE (Input Port).</li> <li>- Change maximum setting value of nStride to 2048.</li> </ul>
		14	- Add description about restriction of pBuffer in 4.1.1.OMX_UseBuffer.
1.0.0	Aug. 21, 2014	14	- Fixed section 4.1.1.OMX_UseBuffer.
	Aug. 21, 2014	43	- Fixed Table 0-1.
	Aug. 26, 2014	25	Change "80 – 1920" of nStride to "80 – 2048".
		30	Change eProfileIndex to nProfileIndex.
		31	Change eEncodeBitrate to nEncodeBitrate.
		34	Change xEncodeFramerate to IntraRefreshVOP.
		5	Change "all video decoders" to "all video encoders".
		40	Change "the decode operation" to "the encode operation".
	Aug. 27, 2014	45	Fixed Figure 0-1

**SALES OFFICES****Renesas Electronics Corporation**<http://www.renesas.com>Refer to "<http://www.renesas.com/>" for the latest and detailed information.

**Renesas Electronics America Inc.**  
2880 Scott Boulevard Santa Clara, CA 95050-2554, U.S.A.  
Tel: +1-408-588-6000, Fax: +1-408-588-6130

**Renesas Electronics Canada Limited**  
1101 Nicholson Road, Newmarket, Ontario L3Y 9C3, Canada  
Tel: +1-905-898-5441, Fax: +1-905-898-3220

**Renesas Electronics Europe Limited**  
Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K.  
Tel: +44-1628-651-700, Fax: +44-1628-651-804

**Renesas Electronics Europe GmbH**  
Arcadiastrasse 10, 40472 Düsseldorf, Germany  
Tel: +49-211-65030, Fax: +49-211-6503-1327

**Renesas Electronics (China) Co., Ltd.**  
7th Floor, Quantum Plaza, No.27 ZhiChunLu Haidian District, Beijing 100083, P.R.China  
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

**Renesas Electronics (Shanghai) Co., Ltd.**  
Unit 204, 205, AZIA Center, No.1233 Lujiazui Ring Rd., Pudong District, Shanghai 200120, China  
Tel: +86-21-5877-1818, Fax: +86-21-6887-7858 / -7898

**Renesas Electronics Hong Kong Limited**  
Unit 1601-1613, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong  
Tel: +852-2886-9318, Fax: +852 2886-9022/9044

**Renesas Electronics Taiwan Co., Ltd.**  
13F, No. 363, Fu Shing North Road, Taipei, Taiwan  
Tel: +886-2-8175-9600, Fax: +886 2-8175-9670

**Renesas Electronics Singapore Pte. Ltd.**  
80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre Singapore 339949  
Tel: +65-6213-0200, Fax: +65-6213-0300

**Renesas Electronics Malaysia Sdn.Bhd.**  
Unit 906, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia  
Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

**Renesas Electronics Korea Co., Ltd.**  
11F, Samik Lavied' or Bldg., 720-2 Yeoksam-Dong, Kangnam-Ku, Seoul 135-080, Korea  
Tel: +82-2-558-3737, Fax: +82-2-558-5141

---

OMX Media Component  
User's Manual: Video Encoder Common Part

Publication Date: Rev. 1.00 Aug. 29, 2014

Published by: Renesas Electronics Corporation  
© 2013 Renesas Electronics Corporation. All rights reserved.

---

# OMX Media Component

User's Manual: Video Encoder Common Part



Renesas Electronics Corporation