

WM-SG-SM-42

AT Command Reference Manual

Version: 1.7

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	2
Description	WM-SG-SM-42 AT Command Reference Manual				

Amendment Records

Item:	Date:	Revision:	Page:	Change Description:	Changed by:
1	10/25/2016	1.0	All	Initial release	Andy Elise
2	10/26/2016	1.1	All	Correct total company name	Elise
3	11/30/2016	1.4	All	1. AT command modification * Removed Commands: ATP,AT+RSSI,AT+SNR, AT+RSTAT,AT+SF,AT+FRE,AT+TXP,AT_CR,A T+IQP,AT+PL,AT+TXON,AT+RXON,AT+STOP, AT+BW,AT+TONE,AT+RDCT,AT? * New Commands: AT+RF * Modify AT+DR 2. Correct command examples for radio tests	Andy Elise
4	12/16/2016	1.5	All	Add default channel	Elise
5	01/26/2017	1.6	All	1. AT command modification: *new commands: AT+VERB *removed command AT+JSTA AT+CER ATI (integrate to AT+VER) 2. Modified 1.1 and 1.2 for AT command console connection. 3. Add 3.3 event table	Andy Elise
6	02/03/2017	1.7	12,40,41	AT command modification: Re-add simplified AT+JSTA	Elise

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	3
Description	WM-SG-SM-42 AT Command Reference Manual				

Contents

Contents	3
1. Overview	6
1.1 AT Command Console on WM-SG-SM-42 EVB	6
1.2 AT Command Console on WM-SG-SM-42 Shield.....	7
2. Default Channel.....	8
2.1 Country Code EU	8
2.2 Country Code US	8
3. Command Reference	10
3.1 Command Syntax.....	10
3.2 Command Table.....	11
3.3 Event Table	15
3.4 AT Commands	16
3.4.1 General Commands	16
3.4.1.1 Check Connection Status (AT).....	16
3.4.1.2 Enable/Disable Local Echo (ATE)	16
3.4.1.3 Enable/Disable Verbose Response (AT+VERB)	17
3.4.1.4 System Reset (ATZ)	18
3.4.2 MAC Commands	19
3.4.2.1 Get/Set Device Band (AT+BAND).....	19
3.4.2.2 Get LoRaWAN version (AT+VER)	20
3.4.2.3 Get/Set Default Data Rate (AT+DR)	21
3.4.2.4 Get Device EUI (AT+EUI)	22
3.4.2.5 Get/Set Application EUI (AT+APPEUI)	23
3.4.2.6 Get/Set Application Key (AT+AK)	24
3.4.2.7 Get/Set Device Address (AT+ ADDR).....	25
3.4.2.8 Get/Set Network Session Key (AT+NSK).....	26
3.4.2.9 Get/Set Application Session Key (AT+ASK).....	27
3.4.2.10 Get/Set LoRaWAN class (AT+CLASS).....	28
3.4.2.11 Enable/Disable Duty Cycle (AT+DC).....	29
3.4.2.12 Get/Set Network Type (AT+NTYP).....	30
3.4.2.13 Enable/Disable Adaptive Data Rate (AT+ADR)	31
3.4.2.14 Join Network (AT+JOIN)	33
3.4.2.15 Send Packet (AT+SEND)	33
3.4.2.16 Get/Set RX1 Delay Time (AT+ RX1DT).....	34
3.4.2.17 Get/Set RX2 Delay Time (AT+ RX2DT).....	35
3.4.2.18 Get/Set Join Accept RX1 Delay Time (AT+ JRX1DT).....	36
3.4.2.19 Get/Set Join Accept RX2 Delay Time (AT+ JRX2DT).....	37

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	4
Description	WM-SG-SM-42 AT Command Reference Manual				

3.4.2.20	Get/Set RX2 Data Rate (AT+ RX2DR)	38
3.4.2.21	Get Joined Status (AT+ JSTA)	40
3.4.3	Radio Test Commands	41
3.4.3.1	Transmit Text Packet (AT+TXT)	41
3.4.3.2	Get Packet Statistics (AT+STAT)	42
3.4.3.3	Set Radio Settings (AT+RF)	44
3.4.4	Peripheral Commands	46
3.4.4.1	Get/Set GPIO Level (AT+GPIO)	46
3.4.4.2	Read SPI Register (AT+RREG)	47
3.4.4.3	Write SPI Register (AT+WREG)	49
3.4.4.4	Set UART Interface (AT+UART)	49
3.4.4.5	Set I2C Interface (AT+SIIC)	50
3.4.4.6	Read I2C (AT+RIIC)	51
3.4.4.7	Write I2C (AT+WIIC)	52
3.4.4.8	Read ADC (AT+RADC)	53
3.4.4.9	Read Battery Value (AT+BAT)	54
3.4.5	DCT Commands	55
3.4.5.1	Update DCT Setting (AT+WDCT)	55
3.4.5.2	Get/Set Default Operation Mode (AT+DEFMODE)	56
3.4.6	Power Control Commands	57
3.4.6.1	Get/Set Power Control Settings (AT+PS)	57
3.4.6.2	Enter Sleep Mode (AT+SLEEP)	59
3.4.7	Watchdog Commands	60
3.4.7.1	Enable/Disable Watchdog (AT+WDG)	60
4.	Command Examples	62
4.1	Start Continue-TX	62
4.2	Stop Continue-TX	62
4.3	Start Single Tone	62
4.4	Stop Single Tone	62
4.5	Start Continue-RX	62
4.6	Generate TX Packet	63
4.7	Check TX/RX Statistics	63
4.8	Stop Continue-RX	63
4.9	Set GPIO Output Level	63
4.10	Read GPIO Input Level	63
4.11	Communicate with Gateway	64
4.11.1	ABP	64
4.11.2	OTAA	64
4.11.3	Send data by OTAA and receive data from gateway	64

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	5
Description	WM-SG-SM-42 AT Command Reference Manual				

Appendix 1. Pin List	65
Appendix 2. Error Code List	67

The content of this document is to be treaded as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.


Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/2	Page	6
Description	WM-SG-SM-42 AT Command Reference Manual				

1. Overview

WM-SG-SM-42 IOT Module has a set of AT-Command for the LoRa RF Test and LoRaWAN Communications. This document briefly describes the usage and examples based on the AT Command.

1.1 AT Command Console on WM-SG-SM-42 EVB

WM-SG-SM-42 EVB uses a LPUART interface as the AT command console, the micro USB connector on the SM-SG-SM-42 EVB is the VBAT input and the virtual COM port of LPUART. The default configuration of the AT command console is 115200,N,8,1, voltage level is 3.3V. The J15-5/J15-6 and J16-5/J16/6 on the EVB must be short.

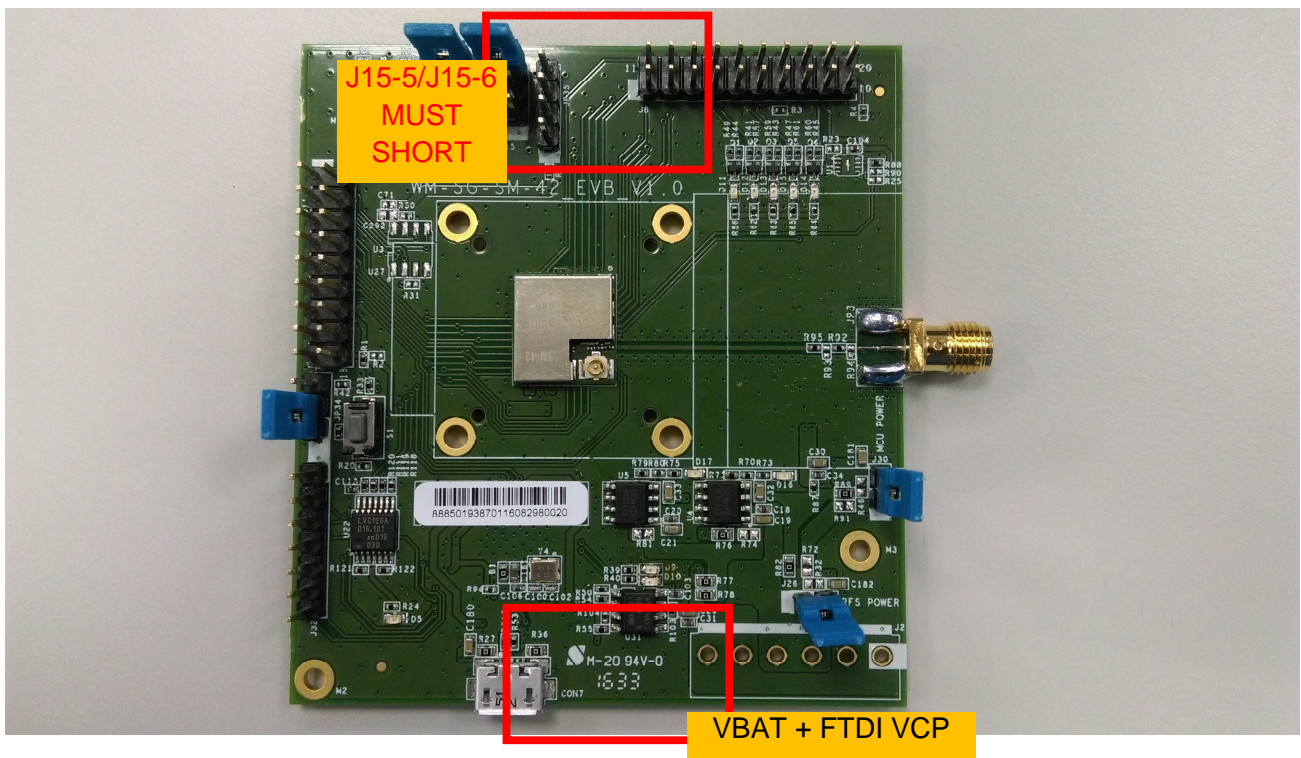


The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/2	Page	7
Description	WM-SG-SM-42 AT Command Reference Manual				

1.2 AT Command Console on WM-SG-SM-42 Shield

WM-SG-SM-42 Shield uses a LPUART interface as the AT command console, the D0 and D1 pin is the LPUART TX and LPUART RX, and the default configuration is 115200,N,8,1, CN6 pin 4 and pin 6 are the VBAT input and the voltage level is 3.3V.

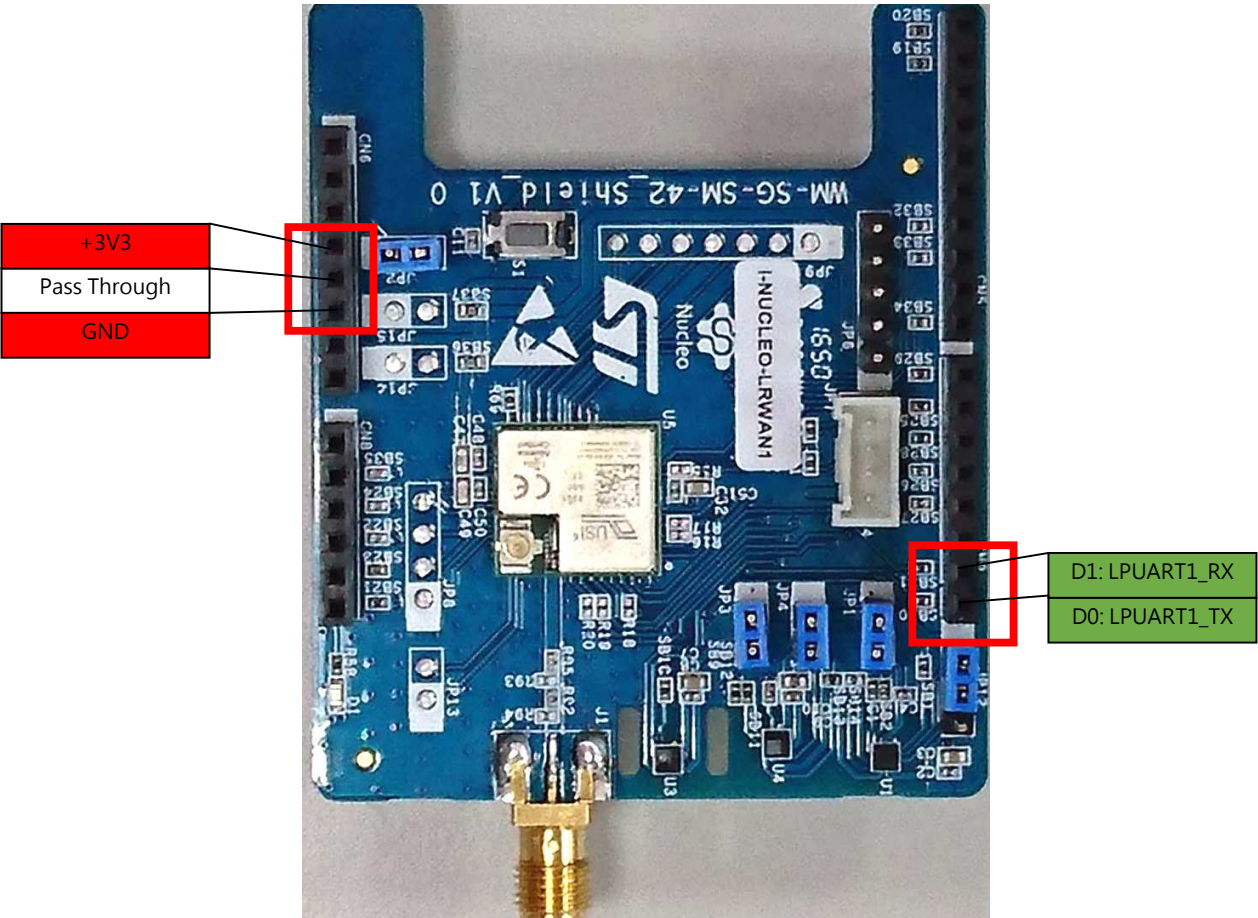

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/2	Page	8
Description	WM-SG-SM-42 AT Command Reference Manual				

2. Default Channel

This chapter lists the default channels for uplink message of LoRaWAN operation.

2.1 Country Code EU

BW:125KHz	
Rate: DR0 to DR5	
Duty cycle:<0.1%	
No. Ch.	Fre.
0	868.1
1	868.3
2	868.5

2.2 Country Code US

BW:125KHz		BW:125KHz		BW:125KHz		BW:125KHz	
Rate: DR0 to DR3		Rate: DR0 to DR3		Rate: DR0 to DR3		Rate: DR0 to DR3	
No. Ch.	Fre.	No. Ch.	Fre.	No. Ch.	Fre.	No. Ch.	No. Ch.
0	902.3	10	904.3	20	906.3	30	908.3
1	902.5	11	904.5	21	906.5	31	908.5
2	902.7	12	904.7	22	906.7	32	908.7
3	902.9	13	904.9	23	906.9	33	908.9
4	903.1	14	905.1	24	907.1	34	909.1
5	903.3	15	905.3	25	907.3	35	909.3
6	903.5	16	905.5	26	907.5	36	909.5
7	903.7	17	905.7	27	907.7	37	909.7
8	903.9	18	905.9	28	907.9	38	909.9
9	904.1	19	906.1	29	908.1	39	910.1

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/2	Page	9
Description	WM-SG-SM-42 AT Command Reference Manual				

BW:125KHz		BW:125KHz		BW:125KHz		BW:125KHz	
Rate: DR0 to DR3		Rate: DR0 to DR3		Rate: DR0 to DR3		Rate: DR0 to DR3	
No. Ch.	Fre.	No. Ch.	Fre.	No. Ch.	Fre.	No. Ch.	No. Ch.
40	910.3	50	912.3	60	914.3	64	903
41	910.5	51	912.5	61	914.5	65	904.6
42	910.7	52	912.7	62	914.7	66	906.2
43	910.9	53	912.9	63	914.9	67	907.8
44	911.1	54	913.1			68	909.4
45	911.3	55	913.3			69	911
46	911.5	56	913.5			70	912.6
47	911.7	57	913.7			71	914.2
48	911.9	58	913.9				
49	912.1	59	914.1				

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/2	Page	10
Description	WM-SG-SM-42 AT Command Reference Manual				

3. Command Reference

The following command reference is based on the firmware version 2.7.

3.1 Command Syntax

The symbol in the documents:

Symbol	Description
<CR>	This indicates a carriage return character, the value is 13 in decimal, 0x0D in hexadecimal.
<LF>	This indicates a linefeed character, the value is 10 in decimal, 0x0A in hexadecimal.
<...>	This indicates the description in this symbol is required in a command.
[...]	This indicates the description in this symbol is optional in a command.

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	11
Description	WM-SG-SM-42 AT Command Reference Manual				

3.2 Command Table

Command	Parameters	Description / Response
<i>General Command</i>		
AT		Check if interface is available to use.
ATE	[=<enabled>]	Enable / Disable local echo 0 = disable 1 = enable
ATZ	(none)	Reset
AT+VERB	[=<enabled>]	Enable/Disable Verbose Response 0 = disable 1 = enable
Command	Parameters	Description / Response
<i>LoRa MAC Command</i>		
AT+BAND	[=<country code>]	Set / Get device band by country +BAND=<country_code>
AT+VER	(none)	Get LoRaWAN version +VER=<lrwan_ver>,<fw_ver>
AT+DR	[=<data rate>]	Set / Get default data rate +DR=<data_rate>
AT+EUI	=<id>	Get / Set module unique ID +EUI=<id>
AT+APPEUI	[=<id>]	Set / Get application identifier (EUI) +APPEUI=<id>
AT+AK	[=<key>]	Set / Get application key +AK=<key>
AT+ADDR	=<address>	Set / Get device address (network_id + network_address) +ADDR=<address>
AT+NSK	[=<key>]	Set / Get network session key +NSK=<key>
AT+ASK	[=<key>]	Set / Get application session key +ASK=<key>
AT+CLASS	[=<class>]	Set / Get LoRaWAN class +CLASS=<class> ※ class B/C now is unsupported.
AT+DC	[=<enabled>]	Set / Get duty cycle +DC=<enabled> 0 = disable duty cycle 1 = enable duty cycle

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	12
Description	WM-SG-SM-42 AT Command Reference Manual				

AT+NTYP	[=<type>]	Set / Get network type +NTYP=<type> 0 = private network type 1 = public network type
AT+ADR	[=<enabled>]	Enable / Disable ADR +ADR=<enabled> 0 = enable 1 = disable
AT+JOIN	=<mode>	Join a network 0 = join gateway with ABP mode 1 = join gateway with OTAA mode
AT+SEND	=<port>,<data>,<ack>	Send LoRaWAN packet port = the port number to the application data = the data with hexadecimal string format ack = 1, confirmed message ack = 0, unconfirmed message
AT+RX1DT	[=<time>]	Set / Get the delay time between the end of the TX and the RX window 1 +RX1DT=<time> ※ The default delay time is 1s.
AT+RX2DT	[=<time>]	Set / Get Rx2 delay time +RX2DT=<time> ※ The default delay time is 2s.
AT+JRX1DT	[=<time>]	Set / Get Join accept RX1 Delay +JRX1DT=<time> ※ The default delay time is 5s.
AT+JRX2DT	[=<time>]	Set / Get Join accept RX2 Delay +JRX2DT=<time> ※ The default delay time is 6s.
AT+RX2DR	[=<data_rate>]	Set / Get the data rate for RX window 2 +RX2DR=<data_rate> ※ data rate = 0 to 15
AT+JSTA	[=<joined_status>]	Get the joined status +JSTA =<joined_status> 0 = non-joined 1 = joined a network

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	13
Description	WM-SG-SM-42 AT Command Reference Manual				

Command	Parameters	Description / Response
Radio Test Command		
AT+RF	[<pwr>][,<freq>][,<sf>][,<bw>][,<cr>][,<crcOn>][,<preamble>][,<iq_inverted>][,<fix_len>][,<hopOn>][,<hopPeriod>]	Set radio settings
AT+TXT	=<count>[,<payload>]	transmit modulation packet with payload count = 1 to 65536 payload = the payload in hexadecimal, max. length is 64 bytes.
AT+STAT	[=<n><CR>]	Get/Reset packet statistics n = 0 reset packet statistics if no parameter specified: [+STAT=<tx_good_cnt>,<tx_err_cnt>,<rx_good_cnt>,<rx_miss_cnt>,<rx_err_cnt>,<rss_i>,<snr>,<ack_cnt>,<uplink_cnt><CR>]
Command	Parameters	Description / Response
Peripheral Command		
AT+RREG	=<addr>[,<len>]	Read SPI register from sx127x chip addr = register address len = read length (default is 1)
AT+WREG	=<addr>,<data>	Write SPI register to sx127x chip addr = register address data = the data to write
AT+GPIO	=<gpio>[,<level>]	read / set the voltage level on a GPIO +GPIO=<gpio>,<level> gpio = the name of GPIO level = volate level; 0 is low, 1 is high
AT+UART	=<baud>[,<parity>][,<data_bits>][,<stop_bits>][,<flow_ctrl>]	read / set the configuration of UART baud = 2400 to 115200 parity = 0 to 3 (None, Odd, Even) data_bits = 5 to 9 (5 bits to 9 bits) stop_bits = 0 (1 bits) or 1 (2 bits) flow_ctrl = must be 0.
AT+SIIC	= [<speed>][,<mode>][,<addr_size>]	initialize the I2C bus speed = 100000 or 400000 mode = must be 0 addr_size = 0 (7-bits) or 1 (10-bits)

The content of this document is to be treaded as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	14
Description	WM-SG-SM-42 AT Command Reference Manual				

AT+RIIC	=<dev_addr>,<data_addr>[,<len>]	read data from I2C bus +RIIC=<data_in_hex> dev_addr = the device address data_addr = the register address for read len = the data length to be read
AT+WIIC	=<dev_addr>,<data_addr>,<data>	write data to I2C bud dev_addr = the device address data_addr = the register address for read data = a string with hexadecimal format string
AT+RADC	=<channel>	read analog value on specified GPIO +ADC=<channel>,<value> channel = 7 to 9
AT+BAT	(none)	read / set the voltage level on a GPIO +BAT=<bat_level> bat_level = 0 to 254
Command	Parameters	Description / Response
DCT Command		
AT+WDCT	[=<type>]	update last setting to DCT type = omit or 0 to restore DCT with default.
AT+DEFMODE	[=<op_mode>]	read / set the current operation mode +MODE=<op_mode> 0 = Idle 1 = continue single tone transmission mode 2 = continue tx mode 3 = continue receive mode 4 = continue packet transmission mode 5 = LoraWan mode
Command	Parameters	Description / Response
Power Control Command		
AT+PS	[=<set_type>,<value>][,<auto_sleep_time>]	read / set the voltage level on a GPIO set_type = 0 to 2 value = depended on the <set_type> auto_sleep_time = the time to sleep in millisecond
AT+SLEEP	(none)	enter sleep mode +PS=<sleep_mode>,<clock_type>
Command	Parameters	Description / Response
Watchdog Command		
AT+WDG	[=<enabled>]	disable / enable the watchdog +WDG=<enabled>

The content of this document is to be treaded as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	15
Description	WM-SG-SM-42 AT Command Reference Manual				

		0 = disable, 1 = enable
--	--	----------------------------

3.3 Event Table

The following is the possible event sent from the module to host serial port actively. Host parser may need to handle this event at any time.

Event	Parameters	Description
<i>Radio Test Event</i>		
+TX	=<status>	Notify TX status. 0: TX done without error. Otherwise: error code
<i>LoRa MAC Command</i>		
+JoinAccepted	(none)	Notify host module has been joined on the gateway by OTAA.
+RCV	=<port>,<len>,<payload>	Notify data received. port = application port len = received length payload = received payload
Command	Parameters	Description / Response
<i>Power Control Event</i>		
+PS	=<sleep_mode>,<clock_type>	Notify power saving mode has been changed sleep_mode = current power saving mode clock_type = current clock setting

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.	Doc No.		Rev	1.7
Document release by WSS2/WP1/SW	Date.	2017/2/3	Page	16
Description	WM-SG-SM-42 AT Command Reference Manual			

3.4 AT Commands

3.4.1 General Commands

3.4.1.1 Check Connection Status (AT)

Description	The command is for checking if the interface between the module and host is ready to use.
Syntax	AT<CR>
Arguments	None
Response	None
Result Code	OK<CR>

Examples:

```
/* Example1: check if interface is ready to use */
# AT<CR>
OK<CR>
#
```

3.4.1.2 Enable/Disable Local Echo (ATE)

Description	The command is for enabling / disabling to transmit the received characters back on the UART interface, or inquiring if local echo is enabled or disabled.
Syntax	ATE[=<n>]<CR>
Arguments	<n> if n is 0, disable the local echo; if n is 1, enable the local echo. default local echo is enabled.
Response	[<n><CR>]
Result Code	OK<CR>

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	17
Description	WM-SG-SM-42 AT Command Reference Manual				

Examples:

```
/* Example1: Inquiring the status of local echo.*/
```

```
# ATE<CR>      /* Query status of local echo */
```

```
1<CR>         /* module returns 1 that indicates local echo is enabled */
```

```
OK<CR>        /* module returns the command error code */
```

```
#             /* ready for next command */
```

```
/* Example2: Disabling the local echo */
```

```
# ATE=0<CR>    /* disable local echo */
```

```
OK<CR>        /* module returns the command error code */
```

```
#             /* ready for next command */
```

3.4.1.3 Enable/Disable Verbose Response (AT+VERB)

Description	The command is for enabling / disabling the verbose response		
Syntax	AT+VERB[= <enabled>] <CR>		
Arguments	<enabled> 0 disable 1 enable		
Response	[+VERB= <enabled> <CR>] (while verbose = 1) [<n> <CR>] (while verbose = 0)		
Result Code	OK<CR>		

Examples with verbose response:

```
/* Example1: Query if verbose response is enabled */
```

```
# AT+VERB<CR>      /* Query if verbose response is enabled */
```

```
1<CR>             /* module returns 1 that indicates verbose is enabled */
```

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	18
Description	WM-SG-SM-42 AT Command Reference Manual				

```

OK<CR>      /* module returns the command error code */
#           /* ready for next command */

/* Example2: Disable the verbose */
# AT+VERB=0<CR> /* disable verbose */
OK<CR>      /* module returns the command error code */
#           /* ready for next command */

```

Examples with brief response:

```

/* Example1: Inquiring the status of local echo.*/

# ATE<CR>      /* Query status of local echo */
+ATE:1<CR>     /* module returns 1 that indicates local echo is enabled */
OK<CR>        /* module returns the command error code */
#             /* ready for next command */

```

3.4.1.4 System Reset (ATZ)

Description	The command is for reset the whole system including radio and microprocessor.
Syntax	ATZ<CR>
Arguments	None
Response	None
Result Code	OK<CR>

Examples:

```

/* Example1: take system reboot */
# ATZ<CR>

```

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	19
Description	WM-SG-SM-42 AT Command Reference Manual				

OK<CR>

#

3.4.2 MAC Commands

Please make sure the DEFMODE is LoraWAN mode (6) before executing the MAC commands.

3.4.2.1 Get/Set Device Band (AT+BAND)

Description	The command is for set band by country code for LoRaWAN. Note: Need to write to DCT and reset module to enable this setting.				
Syntax	AT+BAND[= <country_code>] <CR>				
Arguments	<country_code> the country code index, the default is 0 (EU). 0 = EU (868 Band) 1 = US (915 Band)				
Response	[+BAND= <country_code> <CR>] (while verbose = 1) [<country_code> <CR>] (while verbose = 0)				
Result Code	OK<CR>				

Examples with verbose response:

```
/* Example1: Inquiring current country code index for band.*/
# AT+BAND<CR>    /* Query current country code index */
+BAND=0          /* The module returns country code index is 0:EU (868 Band) */
OK<CR>           /* module returns the command error code */
#               /* ready for next command */

/* Example2: Set band by country code index */
/* Note: Need to write to DCT and reset module to enable this settings*/
# AT+BAND=1<CR>    /* set band at US (Band 915) */
OK<CR>            /* module returns the command error code */
```

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	20
Description	WM-SG-SM-42 AT Command Reference Manual				

```
# AT+WDCT<CR>      /* update current setting to DCT */
OK<CR>              /* module returns the command error code */
# ATZ<CR>           /* reset module */
#
```

Examples with brief response:

```
/* Example1: Inquiring current country code index for band.*/
# AT+BAND<CR>
0
OK<CR>
#
```

3.4.2.2 Get LoRaWAN version (AT+VER)

Description	The command is for read the LoRaWAN version and firmware version.
Syntax	AT+VER<CR>
Arguments	None
Response	[+VER= <lrwan_ver>,<fw_ver> <CR>] (while verbose = 1) [lrwan_ver>,<fw_ver> <CR>] (while verbose = 0)
Result Code	OK<CR>

Examples with verbose response:

```
# AT+VER<CR>
+VER=1.0.1,2.7
OK<CR>
#
```

Examples with brief response:

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	21
Description	WM-SG-SM-42 AT Command Reference Manual				

AT+VER<CR>

1.0.1,2.7

OK<CR>

#

3.4.2.3 Get/Set Default Data Rate (AT+DR)

Description	The command is for set default operating data rate for LoRaWAN.																																
Syntax	AT+DR[= <data_rate>]<CR>																																
Arguments	<p><data_rate> The data rate setting, the default is 0 (DR_0).</p> <table> <tr><td>0 = DR_0</td><td>/* EU868: SF12-BW125, US915: SF10-BW125 */</td></tr> <tr><td>1 = DR_1</td><td>/* EU868: SF11-BW125, US915: SF9-BW125 */</td></tr> <tr><td>2 = DR_2</td><td>/* EU868: SF10-BW125, US915: SF8-BW125 */</td></tr> <tr><td>3 = DR_3</td><td>/* EU868: SF9-BW125, US915: SF7-BW125 */</td></tr> <tr><td>4 = DR_4</td><td>/* EU868: SF8-BW125, US915: SF8-BW500 */</td></tr> <tr><td>5 = DR_5</td><td>/* EU868: SF7-BW125, US915: RFU */</td></tr> <tr><td>6 = DR_6</td><td>/* EU868: SF7-BW250, US915: RFU */</td></tr> <tr><td>7 = DR_7</td><td>/* EU868: FSK, US915: RFU */</td></tr> <tr><td>8 = DR_8</td><td>/* US915:SF12-BW500 */</td></tr> <tr><td>9 = DR_9</td><td>/* US915:SF11-BW500 */</td></tr> <tr><td>10 = DR_10</td><td>/* US915:SF10-BW500 */</td></tr> <tr><td>11 = DR_11</td><td>/* US915:SF9-BW500 */</td></tr> <tr><td>12 = DR_12</td><td>/* US915:SF8-BW500 */</td></tr> <tr><td>13 = DR_13</td><td>/* US915:SF7-BW500 */</td></tr> <tr><td>14 = DR_14</td><td>/* US915:RFU */</td></tr> <tr><td>15 = DR_15</td><td>/* US915:RFU */</td></tr> </table> <p>Note:</p> <p>EU (Band 868) : TX data rate is DR_0~DR_5</p> <p>US (Band 915) : TX data rate is DR_0~DR_4</p>	0 = DR_0	/* EU868: SF12-BW125, US915: SF10-BW125 */	1 = DR_1	/* EU868: SF11-BW125, US915: SF9-BW125 */	2 = DR_2	/* EU868: SF10-BW125, US915: SF8-BW125 */	3 = DR_3	/* EU868: SF9-BW125, US915: SF7-BW125 */	4 = DR_4	/* EU868: SF8-BW125, US915: SF8-BW500 */	5 = DR_5	/* EU868: SF7-BW125, US915: RFU */	6 = DR_6	/* EU868: SF7-BW250, US915: RFU */	7 = DR_7	/* EU868: FSK, US915: RFU */	8 = DR_8	/* US915:SF12-BW500 */	9 = DR_9	/* US915:SF11-BW500 */	10 = DR_10	/* US915:SF10-BW500 */	11 = DR_11	/* US915:SF9-BW500 */	12 = DR_12	/* US915:SF8-BW500 */	13 = DR_13	/* US915:SF7-BW500 */	14 = DR_14	/* US915:RFU */	15 = DR_15	/* US915:RFU */
0 = DR_0	/* EU868: SF12-BW125, US915: SF10-BW125 */																																
1 = DR_1	/* EU868: SF11-BW125, US915: SF9-BW125 */																																
2 = DR_2	/* EU868: SF10-BW125, US915: SF8-BW125 */																																
3 = DR_3	/* EU868: SF9-BW125, US915: SF7-BW125 */																																
4 = DR_4	/* EU868: SF8-BW125, US915: SF8-BW500 */																																
5 = DR_5	/* EU868: SF7-BW125, US915: RFU */																																
6 = DR_6	/* EU868: SF7-BW250, US915: RFU */																																
7 = DR_7	/* EU868: FSK, US915: RFU */																																
8 = DR_8	/* US915:SF12-BW500 */																																
9 = DR_9	/* US915:SF11-BW500 */																																
10 = DR_10	/* US915:SF10-BW500 */																																
11 = DR_11	/* US915:SF9-BW500 */																																
12 = DR_12	/* US915:SF8-BW500 */																																
13 = DR_13	/* US915:SF7-BW500 */																																
14 = DR_14	/* US915:RFU */																																
15 = DR_15	/* US915:RFU */																																

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	22
Description	WM-SG-SM-42 AT Command Reference Manual				

Response	[+DR=<data_rate> <CR>] (while verbose = 1) [<data_rate> <CR>] (while verbose = 0)
Result Code	OK<CR>

Examples with verbose response:

```
/* Example1: Inquiring current default data rate.*/
# AT+DR<CR>      /* Query current country code index */
+DR=0            /* The module returns default data rate is DR_0 */
OK<CR>           /* module returns the command error code */
#                /* ready for next command */

/* Example2: Set band by country code index */
# AT+DR=1<CR>     /* set default data rate is DR_1 */
OK<CR>           /* module returns the command error code */
#                /* ready for next command */
```

Examples with brief response:

```
/* Example1: Inquiring current default data rate.*/
# AT+DR<CR>
0 /
OK<CR>
# /
```

3.4.2.4 Get Device EUI (AT+EUI)

Description	The command is for read end-device identifier (DevEUI) for LoRaWAN. Note: USI will burn the unique IEEE EUI64 at factory.
Syntax	AT+EUI<CR>

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	23
Description	WM-SG-SM-42 AT Command Reference Manual				

Arguments	None
Response	[+EUI=<id><CR>] (while verbose = 1) [<id><CR>] (while verbose = 0)
Result Code	OK<CR>

Examples with verbose response:

```
# AT+EUI<CR>
+EUI=00,11,22,33,44,55,66,77 /* The module returns 8 bytes DevEUI */
OK<CR> /* module returns the command error code */
# /* ready for next command */
```

Examples with brief response:

```
# AT+EUI<CR>
00,11,22,33,44,55,66,77
OK<CR>
#
```

3.4.2.5 Get/Set Application EUI (AT+APPEUI)

Description	The command is for set application identifier (AppEUI) for LoRaWAN.
Syntax	AT+APPEUI[=<id>]<CR>
Arguments	<id> It is a 8 bytes value encoded in hexadecimal format string
Response	[+APPEUI=<id><CR>] (while verbose = 1) [<id><CR>] (while verbose = 0)
Result Code	OK<CR>

Examples with verbose response:

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	24
Description	WM-SG-SM-42 AT Command Reference Manual				

/* Example1: Inquiring application identifier.*/

AT+APPEUI<CR>

+APPEUI=00,11,22,33,44,55,66,77 /* The module returns 8 bytes AppEUI */

OK<CR> /* module returns the command error code */

/* ready for next command */

/* Example2: Set AppEUI */

AT+APPEUI=1122334455667788<CR> /* set application identifier value in hexadecimal format strings (8 bytes)*/

OK<CR> /* module returns the command error code */

/* ready for next command */

Examples with brief response:

/* Example1: Inquiring application identifier.*/

AT+APPEUI<CR>

00,11,22,33,44,55,66,77

OK<CR>

3.4.2.6 Get/Set Application Key (AT+AK)

Description	The command is for set application key (AppKey) for LoRaWAN.
Syntax	AT+AK[= <key>]<CR>
Arguments	<key> It is a 16 bytes value encoded in hexadecimal format string
Response	[+AK=<key><CR>] (while verbose = 1) [<key><CR>] (while verbose = 0)
Result Code	OK<CR>

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	25
Description	WM-SG-SM-42 AT Command Reference Manual				

Examples with verbose response:

```

/* Example1: Inquiring application key.*/
# AT+AK<CR>
+AK=11,22,33,44,55,66,77,88,99,aa,bb,cc,dd,ee,ff,00 /* The module returns 16 bytes AppKey */
OK<CR> /* module returns the command error code */
# /* ready for next command */

/* Example2: Set AppKey */
# AT+AKI=00112233445566778899aabbccddeeff<CR> /* set application key value in hexadecimal format
strings (16 bytes)*/
OK<CR> /* module returns the command error code */
# /* ready for next command */

```

Examples with brief response:

```

/* Example1: Inquiring application key.*/
# AT+AK<CR>
11,22,33,44,55,66,77,88,99,aa,bb,cc,dd,ee,ff,00
OK<CR>
#

```

3.4.2.7 Get/Set Device Address (AT+ ADDR)

Description	The command is for set end-device address (DevAddr) for LoRaWAN.
Syntax	AT+ADDR[= <address>]<CR>
Arguments	<address> It is a 4 bytes value encoded in hexadecimal format string
Response	[+ADDR=<address> <CR>] (while verbose = 1) [<address> <CR>] (while verbose = 0)
Result Code	OK<CR>

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	26
Description	WM-SG-SM-42 AT Command Reference Manual				

Examples with verbose response:

```

/* Example1: Inquiring end-device address.*/
# AT+ADDR<CR>
+ADDR=00,11,22,33      /* The module returns 4 bytes DevAddr */
OK<CR>                 /* module returns the command error code */
#                       /* ready for next command */

/* Example2: Set DevAddr */
# AT+ADDR=11223344<CR> /* set end-device address value in hexadecimal format strings (4 bytes)*/
OK<CR>                 /* module returns the command error code */
#                       /* ready for next command */

```

Examples with brief response:

```

/* Example1: Inquiring end-device address.*/
# AT+ADDR<CR>
00,11,22,33
OK<CR>
#

```

3.4.2.8 Get/Set Network Session Key (AT+NSK)

Description	The command is for set network session key (NwkSKey) for LoRaWAN.
Syntax	AT+NSK[=<key>]<CR>
Arguments	<key> It is a 16 bytes value encoded in hexadecimal format string
Response	[+NSK=<key><CR>] (while verbose = 1) [<key><CR>] (while verbose = 0)
Result Code	OK<CR>

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	27
Description	WM-SG-SM-42 AT Command Reference Manual				

Examples with verbose response:

```

/* Example1: Inquiring network session key.*/
# AT+NSK<CR>
+NSK=11,22,33,44,55,66,77,88,99,aa,bb,cc,dd,ee,ff,00 /* The module returns 16 bytes NwkSKey */
OK<CR> /* module returns the command error code */
# /* ready for next command */

/* Example2: Set NwkSKey */
# AT+NSK=00112233445566778899aabbccddeeff<CR> /* set network session key value in hexadecimal
format strings (16 bytes)*/
OK<CR> /* module returns the command error code */
# /* ready for next command */

```

Examples with brief response:

```

/* Example1: Inquiring network session key.*/
# AT+NSK<CR>
11,22,33,44,55,66,77,88,99,aa,bb,cc,dd,ee,ff,00
OK<CR>
#

```

3.4.2.9 Get/Set Application Session Key (AT+ASK)

Description	The command is for set applicant session key (AppSKey) for LoRaWAN.
Syntax	AT+ASK[=<key>]<CR>
Arguments	<key> It is a 16 bytes value encoded in hexadecimal format string
Response	[+ASK=<key> <CR>] (while verbose = 1) [<key> <CR>] (while verbose = 0)
Result Code	OK<CR>

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	28
Description	WM-SG-SM-42 AT Command Reference Manual				

Examples with verbose response:

```

/* Example1: Inquiring application session key.*/
# AT+ASK<CR>
+ASK=11,22,33,44,55,66,77,88,99,aa,bb,cc,dd,ee,ff,00    /* The module returns 16 bytes AppSKey */
OK<CR>          /* module returns the command error code */
#              /* ready for next command */

/* Example2: Set AppSKey */
# AT+ASK=00112233445566778899aabbccddeeff<CR> /* set application session key value in hexadecimal
format strings (16 bytes)*/
OK<CR>          /* module returns the command error code */
#              /* ready for next command */

```

Examples with brief response:

```

/* Example1: Inquiring network session key.*/
# AT+ASK<CR>
11,22,33,44,55,66,77,88,99,aa,bb,cc,dd,ee,ff,00
OK<CR>
#

```

3.4.2.10 Get/Set LoRaWAN class (AT+CLASS)

Description	The command is for set the operation mode for LoRaWAN.
Syntax	AT+CLASS[=<class>]<CR>
Arguments	<class> It is a class index for operation mode. The firmware only supports Class A so far. 0 = Class A (baseline) 1 = Class B (beacon) 2 = Class C (continuous)

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	29
Description	WM-SG-SM-42 AT Command Reference Manual				

Response	[+CLASS = <class> <CR>] (while verbose = 1) [<class> <CR>] (while verbose = 0)
Result Code	OK<CR>

Examples with verbose response:

```
/* Example1: Inquiring the operation mode.*/

# AT+CLASS<CR>
+CLASS=0          /* The module returns in which class */
OK<CR>            /* module returns the command error code */
#                /* ready for next command */

/* Set operation mode (Not support yet) */
```

Examples with brief response:

```
# AT+CLASS<CR>
0
OK<CR>
#
```

3.4.2.11 Enable/Disable Duty Cycle (AT+DC)

Description	The command is for set the duty cycle as enabled / disabled. This command is for EU (Band 868) only since the duty cycle is 100% in US (Band 915). Note: Disabling duty cycle for testing only. It should be enabled for shipping
Syntax	AT+DC[= <enabled>]<CR>
Arguments	<enabled> The default is 1 (On). 0 : Indicates the duty cycle is off

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	30
Description	WM-SG-SM-42 AT Command Reference Manual				

	1 : Indicates the duty cycle is on
Response	[+DC = <enabled> <CR>] (while verbose = 1) [<enabled> <CR>] (while verbose = 0)
Result Code	OK<CR>

Examples with verbose response:

```
/* Example1: Inquiring the duty cycle.*/
# AT+DC<CR>
+DC=1      /* The module returns duty cycle' s status */
OK<CR>      /* module returns the command error code */
#           /* ready for next command */

/* Example2: Set duty cycle as disabled for EU (Band 868) */
# AT+DC=0<CR> /*Off duty cycle*/
OK<CR>      /* module returns the command error code */
#           /* ready for next command */
```

Examples with brief response:

```
/* Example1: Inquiring the duty cycle.*/
# AT+DC<CR>
1
OK<CR>
#
```

3.4.2.12 Get/Set Network Type (AT+NTYP)

Description	The command is for set network type for LoRaWAN
Syntax	AT+NTYP[= <type>]<CR>

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	31
Description	WM-SG-SM-42 AT Command Reference Manual				

Arguments	<type> The default is 1 (Public network). 0 : Indicates private network type 1 : Indicates public network type
Response	[+NTYP = <type> <CR>] (while verbose = 1) [<type> <CR>] (while verbose = 0)
Result Code	OK<CR>

Examples with verbose response:

```

/* Example1: Inquiring the network type.*/
# AT+NTYP<CR>
+NTYP=1          /* The module returns network type */
OK<CR>           /* module returns the command error code */
#               /* ready for next command */

/* Example2: Set network type */
# AT+NTYP=0<CR> /* Set network type as private*/
OK<CR>         /* module returns the command error code */
#             /* ready for next command */

```

Examples with brief response:

```

/* Example1: Inquiring the network type.*/
# AT+NTYP<CR>
1
OK<CR>

```

3.4.2.13 Enable/Disable Adaptive Data Rate (AT+ADR)

Description	The command is for set the adaptive data rate as enabled / disabled for LoRaWAN.
-------------	--

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
 Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	32
Description	WM-SG-SM-42 AT Command Reference Manual				

Syntax	AT+ADR[=<enabled>]<CR>
Arguments	<enabled> The default is 0 (disabled). 0 : Indicates the ADR is disabled 1 : Indicates the ADR is enable
Response	[+ADR = <enabled> <CR>] (while verbose = 1) [<enabled> <CR>] (while verbose = 0)
Result Code	OK<CR>

Examples with verbose response:

```

/* Example1: Inquiring the ADR.*/
# AT+ADR<CR>
+ADR=0          /* The module returns ADR' s status */
OK<CR>          /* module returns the command error code */
#              /* ready for next command */

/* Example2: Set ADR */
# AT+ADR=1<CR> /*Enable ADR*/
OK<CR>          /* module returns the command error code */
#              /* ready for next command */

```

Examples with brief response:

```

/* Example1: Inquiring the ADR.*/
# AT+ADR<CR>
0
OK<CR>          /* module returns the command error code */

```

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	33
Description	WM-SG-SM-42 AT Command Reference Manual				

3.4.2.14 Join Network (AT+JOIN)

Description	The command is for join network by ABP / OTAA for LoRaWAN.
Syntax	AT+JOIN= <mode> <CR>
Arguments	<mode> 0 : Indicates the join to a network by ABP. 1 : Indicates the join to a network by OTAA.
Response	None
Result Code	OK<CR>

Examples

```

/* Example1: Join a network by ABP */
# AT+JOIN=0<CR>    /* ABP */
OK<CR>             /* module returns the command error code */
#                  /* ready for next command */

/* Example1: Join a network by OTAA */
# AT+JOIN=1<CR>    /* OTAA */
OK<CR>             /* module returns the command error code */
#                  /* ready for next command */
# +JoinAccepted    /* Event : OTAA join successful event */

```

3.4.2.15 Send Packet (AT+SEND)

Description	The command is for transmit application packets with specified and AppPort and payload to the air for LoRaWAN.
Syntax	AT+SEND= <port>, <payload>, <ack> <CR>
Arguments	<port> the application port to be transmitted <payload> the payload in hexadecimal format strings, the maximum length is 64 bytes.

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	34
Description	WM-SG-SM-42 AT Command Reference Manual				

	<ack> 0: Indicates this is a unconfirmed message 1: Indicates this is a confirmed message.
Response	None
Result Code	OK<CR>

Examples

/* Example1: Send a packet to gateway*/

AT+SEND=2,000000000000007F0000000000000000,0<CR> /* send a packet with APP port is 2, battery level is 50%, unconfirmed message */

OK<CR> /* module returns the command error code */

/* ready for next command */

/* Example2: Send a packet to gateway and received packet from gateway*/

AT+SEND=2,000000000000007F0000000000000000,0<CR> /* send a packet with APP port is 2, battery level is 50%, unconfirmed message */

OK<CR> /* module returns the command error code */

#

+RCV=2,1,1 /* Event :Gateway send packet to module for APP port 2 */

/* Event :The packet' s payload size is 1 */

/* Event : The payload data in hexadecimal format strings */

3.4.2.16 Get/Set RX1 Delay Time (AT+ RX1DT)

Description	The command is for set the delay time of RX window 1 for LoRaWAN.
Syntax	AT+RX1DT[=<time>]<CR>
Arguments	<time> It is time value in millisecond, the default is 1000 ms.
Response	[+RX1DT=<time><CR>] (while verbose = 1) [<time><CR>] (while verbose = 0)

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
 Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	35
Description	WM-SG-SM-42 AT Command Reference Manual				

Result Code	OK<CR>
-------------	--------

Examples with verbose response:

```

/* Example1: Inquiring the delay time for RX window 1.*/
# AT+RX1DT<CR>
+RX1DT=1000 /* The module returns the delay time of RX windows 1 */
OK<CR>      /* module returns the command error code */
#           /* ready for next command */

/* Example2: Set delay time */
# AT+RX1DT=2000<CR> /*set the delay time is 2000 millisecond */
OK<CR>          /* module returns the command error code */
#              /* ready for next command */

/* Note: The setting value is at least smaller 1000 ms than the delay time of RX windows 2. */

```

Examples with brief response:

```

/* Example1: Inquiring the delay time for RX window 1.*/
# AT+RX1DT<CR>
1000
OK<CR>
#

```

3.4.2.17 Get/Set RX2 Delay Time (AT+ RX2DT)

Description	The command is for set the delay time of RX window 2 for LoRaWAN.
Syntax	AT+RX2DT[=<time>]<CR>
Arguments	<time> It is time value in millisecond, the default is 2000 ms.
Response	[+RX2DT=< time ><CR>] (while verbose = 1)

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	36
Description	WM-SG-SM-42 AT Command Reference Manual				

	[<time> <CR>] (while verbose = 0)
Result Code	OK<CR>

Examples with verbose response:

```

/* Example1: Inquiring the delay time for RX window 2.*/
# AT+RX2DT<CR>
+RX2DT=2000 /* The module returns the delay time of RX windows 1 */
OK<CR>      /* module returns the command error code */
#           /* ready for next command */

/* Example2: Set delay time */
# AT+RX2DT=3000<CR> /*set the delay time is 3000 millisecond */
OK<CR>          /* module returns the command error code */
#              /* ready for next command */

/* Note: The setting value is at least larger 1000 ms than the delay time of RX windows 1*/

```

Examples with brief response:

```

/* Example1: Inquiring the delay time for RX window 2.*/
# AT+RX2DT<CR>
2000
OK<CR>

```

3.4.2.18 Get/Set Join Accept RX1 Delay Time (AT+ JRX1DT)

Description	The command is for set the join accept delay time of RX window 1 for LoRaWAN.
Syntax	AT+JRX1DT[= <time>]<CR>
Arguments	<time> It is time value in millisecond, the default is 5000 ms.
Response	[+JRX1DT= <time> <CR>] (while verbose = 1)

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	37
Description	WM-SG-SM-42 AT Command Reference Manual				

	[<time> <CR>] (while verbose = 0)
Result Code	OK<CR>

Examples with verbose response:

```

/* Example1: Inquiring the delay time for RX window 1.*/
# AT+JRX1DT<CR>
+JRX1DT=5000 /* The module returns the join accept delay time of RX windows 1 */
OK<CR>          /* module returns the command error code */
#                /* ready for next command */

/* Example2: Set delay time */
# AT+JRX1DT=6000<CR> /*set the delay time is 6000 millisecond */
OK<CR>          /* module returns the command error code */
#                /* ready for next command */

/* Note: The setting value is at least smaller 1000 ms than the delay time of RX windows 2. */

```

Examples with brief response:

```

/* Example1: Inquiring the delay time for RX window 1.*/
# AT+JRX1DT<CR>
5000
OK<CR>
#

```

3.4.2.19 Get/Set Join Accept RX2 Delay Time (AT+ JRX2DT)

Description	The command is for set the join accept delay time of RX window 2 for LoRaWAN.
Syntax	AT+JRX2DT[= <time>]<CR>
Arguments	<time> It is time value in millisecond, the default is 6000 ms.

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	38
Description	WM-SG-SM-42 AT Command Reference Manual				

Response	[+JRX2DT= <time> <CR>] (while verbose = 1) [<time> <CR>] (while verbose = 0)
Result Code	OK<CR>

Examples with verbose response:

```
/* Example1: Inquiring the delay time for RX window 2.*/
# AT+JRX2DT<CR>
+JRX2DT=6000 /* The module returns the join accept delay time of RX windows 2 */
OK<CR>        /* module returns the command error code */
#              /* ready for next command */

/* Example2: Set delay time */
# AT+JRX2DT=7000<CR> /*set the delay time is 7000 millisecond */
OK<CR>        /* module returns the command error code */
#              /* ready for next command */
/* Note: The setting value is at least smaller 1000 ms than the delay time of RX windows 1. */
```

Examples with brief response:

```
/* Example1: Inquiring the delay time for RX window 2.*/
# AT+JRX2DT<CR>
6000
OK<CR>
```

3.4.2.20 Get/Set RX2 Data Rate (AT+ RX2DR)

Description	The command is for set the data rate of RX window 2 for LoRaWAN.
Syntax	AT+RX2DR[= <date_rate>]<CR>
Arguments	<data_rate> The data rate setting, the default is 0 (DR_0) for EU, 8 (DR_8) for US.

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	39
Description	WM-SG-SM-42 AT Command Reference Manual				

	<p>0 = DR_0 /* EU868: SF12-BW125, US915: SF10-BW125 */</p> <p>1 = DR_1 /* EU868: SF11-BW125, US915: SF9-BW125 */</p> <p>2 = DR_2 /* EU868: SF10-BW125, US915: SF8-BW125 */</p> <p>3 = DR_3 /* EU868: SF9-BW125, US915: SF7-BW125 */</p> <p>4 = DR_4 /* EU868: SF8-BW125, US915: SF8-BW500 */</p> <p>5 = DR_5 /* EU868: SF7-BW125, US915: RFU */</p> <p>6 = DR_6 /* EU868: SF7-BW250, US915: RFU */</p> <p>7 = DR_7 /* EU868: FSK, US915: RFU */</p> <p>8 = DR_8 /* US915:SF12-BW500 */</p> <p>9 = DR_9 /* US915:SF11-BW500 */</p> <p>10 = DR_10 /* US915:SF10-BW500 */</p> <p>11 = DR_11 /* US915:SF9-BW500 */</p> <p>12 = DR_12 /* US915:SF8-BW500 */</p> <p>13 = DR_13 /* US915:SF7-BW500 */</p> <p>14 = DR_14 /* US915:RFU */</p> <p>15 = DR_15 /* US915:RFU */</p> <p>Note:</p> <p>EU (Band 868) : RX data rate is DR_0~DR_7</p> <p>US (Band 915) : RX data rate is DR_8~DR_13</p>
Response	<p>[+RX2DR=<date_rate> <CR>] (while verbose = 1)</p> <p>[<date_rate> <CR>] (while verbose = 0)</p>
Result Code	OK<CR>

Examples with verbose response:

```
/* Example1: Inquiring the date rate for RX window 2 */
# AT+RX2DR<CR>
+RX2DR=3 /* The module returns the data rate of RX windows 2 */
OK<CR> /* module returns the command error code */
```

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	40
Description	WM-SG-SM-42 AT Command Reference Manual				

```
#                      /* ready for next command */

/* Example2: Set data rate for RX window 2 */
# AT+RX2DR=0<CR>      /*set the data rate of RX windows 2 is DR_0 */
OK<CR>                /* module returns the command error code */
#                      /* ready for next command */
```

Examples with brief response:

```
/* Example1: Inquiring the data rate for RX window 2.*/
# AT+RX2DR<CR>
3
OK<CR>
#
```

3.4.2.21 Get Joined Status (AT+ JSTA)

Description	The command is for get the joined status of a network for LoRaWAN
Syntax	AT+JSTA<CR>
Arguments	None
Response	[+JSTA=<joined_status> <CR>] (while verbose = 1) [<joined_status> <CR>] (while verbose = 0)
Result Code	OK<CR>

Examples with verbose response:

```
/* Example1: read current join network status.*/
# AT+JOIN=0<CR>      /* Join a network by ABP */
OK<CR>                /* module returns the command error code */
# AT+JSTA<CR>
```

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	41
Description	WM-SG-SM-42 AT Command Reference Manual				

```
+JSTA=1          /* joined a network */
OK<CR>           /* module returns the command error code */
#                /* ready for next command */
```

Examples with brief response:

```
/* Example1: read current join network status.*/
# AT+JOIN=0<CR>
OK<CR>
# AT+JSTA<CR>
1
OK<CR>
#
```

3.4.3 Radio Test Commands

3.4.3.1 Transmit Text Packet (AT+TXT)

Description	The command is for transmit modulation packets with specified payload to the air. And can also be used for sensitivity testing.
Syntax	AT+TXT=<count>,<payload><CR>
Arguments	<payload> the payload is a string in hexadecimal format, the maximum text length is 64 bytes. the default content of payload is 'TEST_PACKET'
Related Event	+TX: Done<CR> (Host will receive this message while all packets transmitted.)
Result Code	OK<CR>

Examples:

```
/* Example1: transmit 100 packet with current radio configuration */

# AT+TXT=100<CR> /* transmit 100 packets */
```

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	42
Description	WM-SG-SM-42 AT Command Reference Manual				

```

OK<CR>          /* module returns the command error code */
# +TX: Done<CR>  /* '#' is for prompt that module is ready for next command */
                  /* '+TX: Done' is for notice all packets is transmitted */

/* Example2: transmit 10 packet with payload content 'HELLO' */

# AT+TXT=10,48454C4C4F<CR> /* transmit 10 packets with payload content 'HELLO' */
OK<CR>          /* module returns the command error code */
# +TX: Done<CR>  /* '#' is for prompt that module is ready for next command */
                  /* '+TX: Done' is for notice all packets is transmitted */

```

3.4.3.2 Get Packet Statistics (AT+STAT)

Description	The command is for read the current status of TX/RX counters, RSSI and NSR.
Syntax	AT+STAT[=<type>]<CR>
Arguments	<type> 0 to reset counters value to 0
Response	<p>(while verbose = 0)</p> <p><tx_good_cnt>,<tx_err_cnt>,<rx_good_cnt>,<rx_miss_cnt>,<rx_err_cnt>,<rsi>,<snr>,<downlink_ack_cnt>,<uplink_cnt><CR></p> <p>(while verbose = 1)</p> <p>+STAT=<tx_good_cnt>,<tx_err_cnt>,<rx_good_cnt>,<rx_miss_cnt>,<rx_err_cnt>,<rsi>,<snr>,<downlink_ack_cnt>,<uplink_cnt><CR></p>
Result Code	OK<CR>
Remarks	<p>The meaning of the variable in responses:</p> <p><tx_good_cnt> the counter of transmitted packets</p>

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	43
Description	WM-SG-SM-42 AT Command Reference Manual				

<tx_err_cnt> the counter of packets failed to transmit
 <rx_good_cnt> the counter of received packets
 <rx_miss_cnt> the counter of received packets
 <rx_err_cnt> the counter of packets failed to receive
 <rssi> the RSSI value to the last received packet
 <snr> the SNR value to the last received packet
 <downlink_ack_cnt> the number of received ACK packets from gateway
 <uplink_cnt> the number of transmitted packets to gateway

Examples with verbose response:

```

/* Example1: read TX/RX statistics after transmitted 10 packet */

# AT+TXT=10<CR> /* transmit 10 packets */
OK<CR>          /* module returns the command error code */
# +TX: Done<CR> /* '#' is for prompt that module is ready for next command */
                /* '+TX: Done' is for notice all packets is transmitted */
# AT+STAT<CR>   /* read TX/RX counter status */
+STAT=10,0,0,0,0,0,0,0,0<CR> /* 10 packets was transmitted successfully*/
OK<CR>          /* module returns the command error code */
#              /* ready for next command */

```

Examples with brief response:

```

/* Example1: read TX/RX statistics after transmitted 10 packet */

# AT+TXT=10<CR> /* transmit 10 packets */
OK<CR>          /* module returns the command error code */

```

The content of this document is to be treated as strictly confidential and is not to be disclosed,
 reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
 Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	44
Description	WM-SG-SM-42 AT Command Reference Manual				

```
# +TX: Done<CR> /* '#' is for prompt that module is ready for next command */
/* '+TX: Done' is for notice all packets is transmitted */
# AT+STAT<CR> /* read TX/RX counter status */
10,0,0,0,0,0,0,0 /* 10 packets was transmitted successfully */
OK<CR> /* module returns the command result code */
# /* ready for next command */
```

3.4.3.3 Set Radio Settings (AT+RF)

Description	The command usually be used with command AT+MODE for RF quality testing, use this command to change the radio-related settings, like frequency, spread factor , band width and coding rate, etc. before switching operation mode to continue-tx or continue-rx configuration.
Syntax	AT+RF=[<pwr>][,<freq>][,<sf>][,<bw>][,<cr>][,<crcOn>][,<preamble>][,<iq_inverted>][,<fix_len>][,<hopOn>][,<hopPeriod>]<CR>
Arguments	<p><pwr> the target output power, the default is 20dbm. the configurable range is 5dbm ~ 20dbm</p> <p><freq> the frequency in Hz, the default is 868000000. The configurable range: 860000000 ~ 1020000000</p> <p><sf> the spreading factor setting, the default is 7 (SF7). 6 = SF6 (64 symbol/chip rate) 7 = SF7 (128 symbol/chip rate) 8 = SF8 (256 symbol/chip rate) 9 = SF9 (512 symbol/chip rate) 10 = SF10 (1024 symbol/chip rate) 11 = SF11 (2048 symbol/chip rate) 12 = SF12 (4096 symbol/chip rate)</p>

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	45
Description	WM-SG-SM-42 AT Command Reference Manual				

	<p><bw> the bandwidth value, the default is 0 (125KHz).</p> <p>0 = 125KHz</p> <p>1 = 250KHz</p> <p>2 = 500KHz</p> <p><cr> the cyclic coding rate setting, the default is 1 (4/5).</p> <p>1 = 4/5</p> <p>2 = 4/6</p> <p>3 = 4/7</p> <p>4 = 4/8</p> <p><crcOn> 1 = Enable CRC generation and check on payload.</p> <p>0 = Disable CRC generation and check on payload</p> <p><preamble> the preamble length (symbol length), the default is 5, the configurable range: 5 ~ 65535</p> <p><iq_inverted> 1 = that indicates the inverted IQ signal is enabled</p> <p>0 = that indicates the inverted IQ signal is disabled</p> <p><fix_len> 1 = fixed payload length</p> <p>0 = variable payload length</p> <p><hopOn> 0 = Frf is validated when FSTx or FSRx is requested</p> <p>1 = Frf is validated triggered when RegFrfLsb is written</p> <p><hopPeriod> Symbol periods between frequency hops.</p>
Response	None
Result Code	OK<CR>

Examples:

```
/* Example1: transmit packet at 869MHz with SF7, 125K BW, CR1 modulation and 15dbm output power */
```

```
# ATZ<CR> /* Reset module */
```

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.	Doc No.		Rev	1.7
Document release by WSS2/WP1/SW	Date.	2017/2/3	Page	46
Description	WM-SG-SM-42 AT Command Reference Manual			

```

OK<CR>      /* module returns the command error code */
# AT+RF=15,869000000,7,0,1<CR>  /* set transceiver at 869MHz with SF7/125K BW/CR1 modulation and
                                15dbm output power */

OK<CR>      /* module returns the command error code */
# AT+TXT=1,48454C4C4F<CR>  /* transmit a packet with payload content 'HELLO' */
OK<CR>      /* module returns the command error code */
#              /* ready for next command */

/* On RX endpoint */
# +RCV=-1, 5,48454C4C4F<CR>  /* module reports a packet received, the payload is encoded in
                                hexadecimal format string */

```

3.4.4 Peripheral Commands

3.4.4.1 Get/Set GPIO Level (AT+GPIO)

Description	The command is for set or read the voltage level on a specified GPIO.
Syntax	AT+GPIO=<gpio>[,<level>]<CR>
Arguments	<p><gpio> an available name of GPIO for wm-sg-sm-42, see Appendix 1. Pin List</p> <p><level> 1 is for set the specified GPIO at high level.</p> <p>0 is for set the specified GPIO at low level.</p>
Response	<p>[+GPIO=<gpio>,<level><CR>] (while verbose = 1)</p> <p>[<level><CR>] (while verbose = 0)</p>
Result Code	OK<CR>
Remark	This command will be GET command and just report the voltage level to the specified GPIO if <level> be omitted.

Examples with brief response:

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	47
Description	WM-SG-SM-42 AT Command Reference Manual				

/* Example1: Inquiring the current voltage level on pin PA4 */

```
# AT+GPIO=PA4<CR> /* Query the voltage level of PA4 */
1 /* the module returns the voltage level on PA4 */
OK<CR> /* module returns the command error code */
# /* ready for next command */
```

/* Example2: Set pin PA4 at high level */

```
# AT+GPIO=PA4,1<CR> /* set PA4 at high level */
OK<CR> /* module returns the command error code */
# /* ready for next command */
```

Examples with verbose response:

/* Example1: Inquiring the current voltage level on pin PA4 */

```
# AT+GPIO=PA4<CR> /* Query the voltage level of PA4 */
+GPIO=PA4,1<CR> /* the module returns the high level on PA4 */
OK<CR> /* module returns the command error code */
# /* ready for next command */
```

3.4.4.2 Read SPI Register (AT+RREG)

Description	The command is for read SPI register value from sx127x chip.
Syntax	AT+RREG=<reg_addr>[,<len>]<CR>
Arguments	<reg_addr> the address of register in sx127x chip, see sx127x datasheet <len> the length of register to be read.

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	48
Description	WM-SG-SM-42 AT Command Reference Manual				

	<p>the default is read 1 byte if <len> be omitted.</p> <p>The maximum readable length is < 64.</p>
Response	<p>+Reg=<value>[,<value>...] (while verbose = 1)</p> <p><value>[,<value>...] (while verbose = 0)</p>
Result Code	OK<CR>

Examples with verbose response:

```

/* Example1: Inquiring the value of RegOpMode in sx127x chip */
# AT+RREG=0x01<CR> /* Query the value of RegOpMode in sx127x */
+Reg=0x85<CR> /* the module returns the current RegOpMode is 0x85 */
OK<CR> /* module returns the command error code */
# /* ready for next command */

/* Example2: read register from address 0x01 to 0x05 */
# AT+RREG=0x01,5<CR> /* read register data from address 0x01 and read length is 5 */
+Reg=0x85,0x1A,0x0B,0x00,0x52<CR>
OK<CR> /* module returns the command error code */
# /* ready for next command */

```

Examples with brief response:

```

/* Example1: Inquiring the value of RegOpMode in sx127x chip */
# AT+RREG=0x01<CR> /* Query the value of RegOpMode in sx127x */
0x85<CR> /* the module returns the current RegOpMode is 0x85 */
OK<CR> /* module returns the command error code */
# /* ready for next command */

/* Example2: read register from address 0x01 to 0x05 */
# AT+RREG=0x01,5<CR> /* read register data from address 0x01 and read length is 5 */

```

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	49
Description	WM-SG-SM-42 AT Command Reference Manual				

```

0x85,0x1A,0x0B,0x00,0x52<CR>    /* the value in register 01~05 */
OK<CR>                            /* module returns the command error code */
#                                  /* ready for next command */

```

3.4.4.3 Write SPI Register (AT+WREG)

Description	The command is for write SPI register value to sx127x chip.
Syntax	AT+WREG=<reg_addr>[,<value>]<CR>
Arguments	<p><reg_addr> the address of register in sx127x chip, see sx127x datasheet</p> <p><value> the vale to be written, please refer to sx127x datasheet for suitable value.</p>
Response	None
Result Code	OK<CR>

Examples:

```

/* Example1: write 0x01 to the RegOpMode register of sx127x chip */

# AT+WREG=0x01,x01<CR>  /* Write 0x01 to RegOpMode register */
OK<CR>                  /* module returns the command error code */
#                        /* ready for next command */

```

3.4.4.4 Set UART Interface (AT+UART)

Description	The command is for set the configuration of the UART. But the change must be written in to the DCT and would be effective after system reboot.
Syntax	AT+UART=<baud>[,<parity>][,<data_bits>][,<stop_bits>][,<flow_ctrl>]<CR>
Arguments	<p><baud> the default baud rate is 115200, the acceptable range is 2400 ~ 115200</p> <p><parity> 0 is NO PARITY, the default is the no parity</p>

The content of this document is to be treaded as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	50
Description	WM-SG-SM-42 AT Command Reference Manual				

	<p>1 is ODD PARITY</p> <p>2 EVEN PARITY</p> <p><data_bits> the default data width is 8 bits, the acceptable range is 5 ~ 9 bits</p> <p><stop_bits> 0 is 1 stop-bits, the default is the 1 stop-bits.</p> <p>1 is 2 stop-bits</p> <p><flow_ctrl> not supported.</p>
Response	None
Result Code	OK<CR>

Examples:

```
/* Example1: change baud rate of UART to 9600 */
```

```
# AT+UART=9600<CR> /* set baud rate of UART to 9600 */
OK<CR> /* module returns the command error code */
# AT+WDCT<CR> /* update current setting to DCT */
OK<CR> /* module returns the command error code */
# ATZ<CR> /* reset module */
```

3.4.4.5 Set I2C Interface (AT+SIIC)

Description	The command is for initiate the I2C bus.
Syntax	AT+SIIC=[<speed>][,<mode>][,<addr_size>]<CR>
Arguments	<p><speed> 100000 or 400000, the default clock speed is 400000</p> <p><mode> 0 is master mode, the default is the master mode</p> <p>1 is slave mode, now is not supported</p> <p><addr_size> 0 is 7-bit address mode, the default is the 7-bit address mode.</p>

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	51
Description	WM-SG-SM-42 AT Command Reference Manual				

	1 is 10-bit address mode, now is unsupported
Response	None
Result Code	OK<CR>

Examples:

```
/* Example1: initial I2C bus with default setting: 400K, master mode and 7-bit address mode */
```

```
# AT+SIIC<CR> /* initial I2C bus with default setting */
OK<CR> /* module returns the command error code */
# /* ready for next command */
```

3.4.4.6 Read I2C (AT+RIIC)

Description	The command is for read data from the I2C bus.		
Syntax	AT+RIIC= <dev_addr>,<data_addr>[,<len>]<CR>		
Arguments	<dev_addr> the I2C address for the device, depended on the I2C device <data_addr> the register address for read, depended on the I2C device <len> the data length to be ready		
Response	+RIIC= <value> (while verbose = 1) <value[,<value>][,<value>][...]> (while verbose = 0)		
Result Code	OK<CR>		

Examples with verbose response:

```
/* Example1: read 2 bytes data from the register address 0, device address 0x92 */
```

The content of this document is to be treaded as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	52
Description	WM-SG-SM-42 AT Command Reference Manual				

```
# AT+SIIC<CR> /* initialize the I2C bus */
OK<CR> /* initial done */
# AT+RIIC=0x92,0,2<CR> /* read 2 bytes data from the I2C bus */
+RIIC= 0x12,0x34<CR> /* get 0x1234 from the I2C bus */
OK<CR> /* read done */
# /* ready for next command */
```

Examples with brief response:

```
/* Example1: read 2 bytes data from the register address 0, device address 0x92 */

# AT+SIIC<CR> /* initialize the I2C bus */
OK<CR> /* initial done */
# AT+RIIC=0x92,0,2<CR> /* read 2 bytes data from the I2C bus */
0x12,0x34<CR> /* get 0x12, 0x34 from the I2C bus */
OK<CR> /* read done */
# /* ready for next command */
```

3.4.4.7 Write I2C (AT+WIIC)

Description	The command is for write data to the I2C bus.
Syntax	AT+WIIC= <dev_addr>,<data_addr>,<data> <CR>
Arguments	<dev_addr> the I2C address for the device, depended on the I2C device <data_addr> the register address for read, depended on the I2C device <data> the data in hexadecimal string format
Response	None
Result Code	OK<CR>

Examples:

The content of this document is to be treaded as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	53
Description	WM-SG-SM-42 AT Command Reference Manual				

```
/* Example1: write 0x74 to register address 0, device address 0x70 */
```

```
# AT+WIIC<CR> /* initialize the I2C bus */
```

```
OK<CR> /* initial done */
```

```
# AT+WIIC=0x70,0,0x74<CR> /* write 0x74 to the I2C device address 0x70, data address 0 */
```

```
OK<CR> /* write done */
```

```
# /* ready for next command */
```

3.4.4.8 Read ADC (AT+RADC)

Description	The command is for read analog value from specified GPIO pin. The resolution of analog converter is 12-bits, so the possible range of analog value is 0 ~ 4096.		
Syntax	AT+RADC= <channel> <CR>		
Arguments	<channel> the available channel number: 7 => pin ADC_IN7/PA7 8 => pin ADC_IN8/PB0 9 => pin ADC_IN9/PB1		
Response	+ADC= <channel>,<value> <CR> (while verbose = 1) <value> <CR> (while verbose = 0)		
Result Code	OK<CR>		

Examples with verbose response:

```
/* Example1: floating the pin ADC_IN7/PA7, then read back the analog value on the PA7*/
```

```
# AT+RADC=7<CR> /* read analog value on PA7 */
```

```
+ADC=7,127 /* the module returns the analog value 127 */
```

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	54
Description	WM-SG-SM-42 AT Command Reference Manual				

```
OK<CR>          /* read done */
#               /* ready for next command */
```

Examples with brief response:

```
/* Example1: floating the pin ADC_IN7/PA7, then read back the analog value on the PA7*/

# AT+RADC=7<CR> /* read analog value on PA7 */
127             /* the module returns the analog value 127 */
OK<CR>          /* read done */
#               /* ready for next command */
```

3.4.4.9 Read Battery Value (AT+BAT)

Description	The command is for read battery level. The battery level is converted from the voltage level on the VREF+, and the battery level is a percentage value to the analog value 1800 ~ 3000, the possible converted battery range is 0 ~ 254.		
Syntax	AT+BAT<CR>		
Arguments	None		
Response	+BAT=<bat_level> <CR> (while verbose = 1) <bat_level> <CR> (while verbose = 0)		
Result Code	OK<CR>		

Examples with verbose response:

```
/* Example1: read the battery level */

# AT+BAT<CR> /* read analog value on PA7 */
```

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	55
Description	WM-SG-SM-42 AT Command Reference Manual				

```
+BAT=254 /* the module returns the battery level 254 (=100%, because the range is 0 ~ 254) */
OK<CR> /* read done */
# /* ready for next command */
```

Examples with brief response:

```
/* Example1: read the battery level */
```

```
# AT+BAT<CR> /* read analog value on PA7 */
254 /* the module returns the battery level 254 (=100%, because the range is 0 ~ 254) */
OK<CR> /* read done */
# /* ready for next command */
```

3.4.5 DCT Commands

3.4.5.1 Update DCT Setting (AT+WDCT)

Description	The command is for update last RADIO/MAC/Watchdog/PowerControl settings into DCT.
Syntax	AT+WDCT[= <type>] <CR>
Arguments	<type> 0 to restore DCT content with default value
Response	None
Result Code	OK<CR>

Examples:

```
/* Example1: update DCT with current settings */
```

```
#AT+FRE=915000000<CR> /* set radio frequency at 915MHz */
```

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	56
Description	WM-SG-SM-42 AT Command Reference Manual				

```

OK<CR>          /* command done */
# AT+WDCT<CR>   /* update DCT with current settings (including the frequency setting above*/
OK<CR>          /* command done */
#               /* ready for next command */

/* Example2: restore DCT with default value */

#AT+WDCT=0<CR> /* restore DCT with default settings */
OK<CR>          /* command done */
#               /* ready for next command */

```

3.4.5.2 Get/Set Default Operation Mode (AT+DEFMODE)

Description	The command is for set the operation mode.
Syntax	AT+DEFMODE[=<op_mode>]<CR>
Arguments	<p><op_mode> the possible operation mode.</p> <p>0 = IDLE</p> <p>1 = continue single-tone test (for frequency error test)</p> <p>2 = continue tx test (for tx quality test)</p> <p>3 = continue rx test (for sensitivity test)</p> <p>4 = text packet test (for sensitivity test)</p> <p>5 = listen mode (for simple p2p communication)</p> <p>6 = Lora WAN mode</p>
Response	<p>[+MODE=<op_mode> <CR>] (while verbose = 1)</p> <p>[<op_mode> <CR>] (while verbose = 0)</p>
Result Code	OK<CR>
Remark	This command will be a GET command and just report current operation mode

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	57
Description	WM-SG-SM-42 AT Command Reference Manual				

if <op_mode> be omitted.

Examples with verbose response:

```
/* Example1: set default operation mode to LoraWAN mode.*/

# AT+DEFMODE=6<CR>    /* set default operation mode to LoraWAN mode */
OK<CR>                /* command done */
# AT+WDCT<CR>         /* update to DCT*/
OK<CR>                /* command done */
# ATZ<CR>             /* system reboot */
#                     /* now is in LoraWAN mode */

/* Example2: inquiry current operation mode. */
# AT+DEFMODE<CR>      /* inquiry current operation mode */
+MODE=6               /* the module returns now is working at Lora WAN mode
OK<CR>                /* command done */
```

Examples with brief response:

```
/* Example1: inquiry current operation mode. */
# AT+DEFMODE<CR>      /* inquiry current operation mode */
6                     /* the module returns now is working at Lora WAN mode
OK<CR>                /* command done */
```

3.4.6 Power Control Commands

3.4.6.1 Get/Set Power Control Settings (AT+PS)

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	58
Description	WM-SG-SM-42 AT Command Reference Manual				

Description	The command is for read or set the MCU power control.
Syntax	AT+PS[=<set_type>,<value>][,<auto_sleep_time>] <CR>
Arguments	<p><set_type> 0 indicates the followed <value> is for select MCU sleep mode as system sleep mode</p> <p>1 indicates the followed <value> is for select system clock speed</p> <p>2 indicates the followed <value> is for set the auto sleep time</p> <p><value> when <set_type> = 0, the possible option is:</p> <p>0: No power save,</p> <p>1: using MCU Stop mode as system sleep mode. (this is the default setting)</p> <p>2: select MCU Standby mode as system sleep mode. (unsupported)</p> <p>when <set_type> = 1, the possible option is:</p> <p>0: using HSI clock as system clock.(this is the default setting)</p> <p>1: using MSI clock as system clock. (unsupported)</p> <p>when <set_type> = 2, the possible option is:</p> <p>0: disable auto sleep (this is the default setting)</p> <p>1: enable auto sleep</p> <p><auto_sleep_time> the time to sleep in millisecond</p> <p>and the argument only can be used when <set_type> equals 2.</p> <p>The default auto sleep time is 5000ms</p>
Response	<p>(while verbose = 1)</p> <p>[+PS=<sleep_mode>,<system_clock_type>,<auto_sleep>,<auto_sleep_time> <CR>]</p> <p>(while verbose = 0)</p> <p>[<sleep_mode>,<system_clock_type>,<auto_sleep>,<auto_sleep_time> <CR>]</p>
Result Code	OK<CR>

Examples with verbose response:

The content of this document is to be treaded as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	59
Description	WM-SG-SM-42 AT Command Reference Manual				

/* Example1: enabling auto sleep while system idle over 5 seconds */

AT+PS=2,1,5000<CR> /* enabling auto sleep while system idle over 5 seconds */

OK<CR> /* read done */

/* ready for next command */

/* Example2: inquiry current power control setting. */

AT+PS<CR> /* query current power control setting */

+PS=1,0,0,5000 /* the module returns current power control setting */

/* sleep mode = 1 (STOP MODE) */

/* system clock type = 0 (HSI) */

/* auto sleep = 0 (DISABLED)

/* auto sleep time = 5000 (5 seconds) */

OK<CR> /* read done */

/* ready for next command */

Examples with brief response:

/* Example1: inquiry current power control setting. */

AT+PS<CR> /* query current power control setting */

1,0,0,5000 /* the module returns current power control setting */

OK<CR> /* read done */

/* ready for next command */

3.4.6.2 Enter Sleep Mode (AT+SLEEP)

Description	The command is for enter sleep mode immediately based on power control setting.
-------------	---

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	60
Description	WM-SG-SM-42 AT Command Reference Manual				

	Host can control the sleep mode by using this command immediately.
Syntax	AT+SLEEP<CR>
Arguments	None
Event	+PS= <sleep_mode>,<clock_type> <CR>
Result Code	OK<CR>

Examples:

```

/* Example1: enter sleep mode based on current power control settings */

# AT+SLEEP<CR> /* enabling auto sleep while system idle over 5 seconds */
+PS=1,0<CR>    /* notice host that MCU is going to sleep (enter STOP mode) */
(Module is in sleep until watchdog counter to be 0, or UART received input, or interrupt on wakeup pin )
+PS=0,0<CR>    /* notice host that MCU is waked up from sleep mode and work with HSI clock source */
OK<CR>         /* command done */
#              /* ready for next command */

```

3.4.7 Watchdog Commands

3.4.7.1 Enable/Disable Watchdog (AT+WDG)

Description	The command is for enabling/disabling the watchdog
Syntax	AT+WDG[= <enabled>] <CR>
Arguments	<enabled> = 1 is for enabling the watchdog = 0 is for disable the watchdog = ? is for inquiry the enable status
Response	[+WDG= <enabled> <CR>] (while verbose = 1) [<enabled> <CR>] (while verbose = 0)

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.	Doc No.		Rev	1.7
Document release by WSS2/WP1/SW	Date.	2017/2/3	Page	61
Description	WM-SG-SM-42 AT Command Reference Manual			

Result Code	OK<CR>
--------------------	--------

Examples with verbose response:

```
/* Example1: Inquiring is watchdog is enabled */

# AT+WDG=?<CR>  /* Query if watchdog is enabled */
+WDG=0<CR>      /* the module returns the watchdog now is disabled */
OK<CR>          /* command done */
#               /* ready for next command */

/* Example2: enabling the watchdog */

# AT+WDG=1<CR>  /* enable watchdog */
OK<CR>          /* command done*/
#               /* ready for next command */
```

Examples with brief response:

```
/* Example1: Inquiring is watchdog is enabled */

# AT+WDG=?<CR>  /* Query if watchdog is enabled */
0<CR>           /* the module returns the watchdog now is disabled */
OK<CR>          /* command done */
#               /* ready for next command */
```

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.	Doc No.		Rev	1.7
Document release by WSS2/WP1/SW	Date.	2017/2/3	Page	62
Description	WM-SG-SM-42 AT Command Reference Manual			

4. Command Examples

4.1 Start Continue-TX

```
# ATZ                      /* SYSTEM RESET */
/* SET RF = 868MHz SF7/125KHz BW/CR1/CRC On/Preamble Length 8/No-IQ-Inverted/20dbm output power */
# AT+RF=20,868000000,7,0,1,1,8,0
# AT+DEFMODE=2 /* START CONTINUE-TX */
```

4.2 Stop Continue-TX

```
# ATZ /* SYSTEM RESET */
```

4.3 Start Single Tone

```
# ATZ                      /* SYSTEM RESET */
# AT+RF=20,868000000 /* SET RF @ 868MHz */
# AT+DEFMODE=1 /* START SINGLE TONE */
```

4.4 Stop Single Tone

```
# ATZ /* SYSTEM RESET */
```

4.5 Start Continue-RX

```
# ATZ                      /* SYSTEM RESET */
/* SET RF = 868MHz SF7/125KHz BW/CR1/CRC On/Preamble Length 8/No-IQ-Inverted/20dbm output power */
# AT+RF=20,868000000,7,0,1,1,8,0
# AT+DEFMODE=3 /* START CONTINUE-RX MODE */
```

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.	Doc No.		Rev	1.7
Document release by WSS2/WP1/SW	Date.	2017/2/3	Page	63
Description	WM-SG-SM-42 AT Command Reference Manual			

4.6 Generate TX Packet

```
# ATZ                               /* SYSTEM RESET */
/* SET RF = 868MHz SF7/125KHz BW/CR1/CRC On/Preamble Length 8/No-IQ-Inverted/20dbm output power */
# AT+RF=20,868000000,7,0,1,1,8,0
# AT+DEFMODE=4                      /* START PACKET TRANSMISSION MODE */
# AT+TXT=100,48454C4C4F             /* Generate 100 TX PACKET CONTENT 'HELLO' */
```

4.7 Check TX/RX Statistics

```
# AT+STAT                          /* INQUIRY THE STATISTIC OF TX/RX COUNTERS */
+STAT=0,0,99,0,1,0,0,0,0          /* PACKETS NUMBER BE TRANSMITED TO CONCERNTRACTOR*/
```

4.8 Stop Continue-RX

```
# ATZ                               /* SYSTEM RESET */
```

4.9 Set GPIO Output Level

```
# AT+GPIO=PA7,1                    /* SET GPIO-PA7 AT HIGH LEVEL, 0: LOW LEVEL, 1: HIGH LEVEL */
```

4.10Read GPIO Input Level

```
# AT+GPIO=PA7                      /* READ GPIO-PA7 INPUT LEVEL */
+GPIO=PA7,1                        /* REPORT GPIO PA7 IS AT HIGH LEVEL, 0: LOW LEVEL, 1: HIGH LEVEL */
```

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	64
Description	WM-SG-SM-42 AT Command Reference Manual				

4.11 Communicate with Gateway

4.11.1 ABP

```
# ATZ
# AT+ADDR=11223344
# AT+NSK=112233445566778899aabbccddeeff00
# AT+ASK=112233445566778899aabbccddeeff00
# AT+JOIN=0
# AT+SEND=2,0000000000000007F000000000000000,0 /*APP port :2, battery level 50%, unconfirmed
message*/
```

4.11.2 OTAA

```
# ATZ
# AT+APPEUI=1122334455667788
# AT+AK=112233445566778899aabbccddeeff00
# AT+JOIN=1
+JoinAccepted /* Event : OTAA join successful event */
# AT+SEND=2,0000000000000007F000000000000000,1 /*APP port :2, battery level 50%, confirmed
message*/
```

4.11.3 Send data by OTAA and receive data from gateway

```
# AT+JOIN=1
# AT+SEND=2,0000000000000007F000000000000000,1 /*APP port :2, battery level 50%, confirmed
message*/
+RCV=2,1,1 /* Gateway send packet to module for APP port 2 */
/* The packet's payload size is 1 */
/* The payload data in hexadecimal format strings */
```

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	65
Description	WM-SG-SM-42 AT Command Reference Manual				

Appendix 1. Pin List

PIN	PIN NAME	GPIO_NAME	DEFAULT FUNCTION
1	GND		
2	RCC_MCO	PA8	
3	M_LPUART_TX	PB10	CONSOLE-TX
4	LPTIM1_OUT	PB2	
5	ADC_IN7	PA7	EVb_LED
6	COMP1_INP	PA1	EVb_LED
7	VREF+		
8	GND		
9	VDDA		
10	LPTIM1_IN1	PB5	
11	SYS_WKUP1	PA0	
12-19	GND		
20	MICRO_RST_N		
21	M_USART1_TX/RST	PA9	RF_RESET
22	M_USART2_TX/DIO0	PA2	RF_DIO0
23	M_USART2_RX/DIO1	PA3	RF_DIO1
24	GPIO_2	PA5	RF_DIO2
25	GPIO_3	PA6	RF_DIO3
26	M_USART1_RX/DIO4	PA10	RF_DIO4
27	DIO5		RF_DIO5
28	BOOT0		
29	GND		
30-31	VDD_RFS		
32	GND		
33-34	VDD_3V3		
35	GND		
36	SPI1_SCK	PB3	RF_SPI

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	66
Description	WM-SG-SM-42 AT Command Reference Manual				

37	SPI1_MISO	PB4	RF_SPI
38	SPI1_MOSI	PA12	RF_SPI
39	SPI1_NSS	PA15	RF_SPI
40-42	GND		
43	RF_SW_CTRL2	PB8	RF_ANT
44	RF_SW_CTRL1	PA4	RF_ANT
45-46	GND		
47	RF_OUT		
48	GND		
49	I2C1_SDA	PB7	
50	I2C1_SCL	PB6	
51	SYS_SWDIO	PA13	PROGRAMMING
52	SYS_SWCLK	PA14	PROGRAMMING
53	ADC_IN9	PB1	EVB_LED
54	COMP1_OUT	PA11	EVB_LED
55	M_LPUART_RX	PB11	CONSOLE-RX
56	ADC_IN8	PB0	EVB_LED
57-81	GND		

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.

Universal Global Scientific Industrial Co., Ltd.		Doc No.		Rev	1.7
Document release by WSS2/WP1/SW		Date.	2017/2/3	Page	67
Description	WM-SG-SM-42 AT Command Reference Manual				

Appendix 2. Error Code List

ERROR CODE	ASCII STRING	MEANING
0	OK	no error occurs.
-1	ERROR	unknown error
-2	ERROR_UNKNOW_COMMAND	unsupported command
-3	ERROR_LESS_ARGUMENTS	the number of argument is not enough.
-4	ERROR_MORE_ARGUMENETS	the number of argument is too much.
-5	ERROR_INVALID_ARGUMENTS	invalid content of argument
-6	ERROR_NOT_SUPPORTED	function or argument not supported
-7	ERROR_OUT_OF_RANGE	argument out of range
-8	ERROR_RX_TIMEOUT	receive timeout
-9	ERROR_RX_ERROR	receive error
-10	ERROR_TX_TIMEOUT	transmit timeout
-11	ERROR_TX_ERROR	transmit error
-12	ERROR_RF_BUSY	radio is busy for another transmit or receive
-13	ERROR_TIMEOUT	a timeout occurs in a command process
-14	ERROR_NO_ARGUMENETS_NEEDED	command does not need any argument
-15	ERROR_HAL_ERROR	HAL occurs error.
-16	ERROR_INVALID_HEX_FORMAT	specified hexadecimal string is invalid
-17	ERROR_OUT_OF_ADDRESS	address/id/number out of range
-100	ERROR_WAN_SEND	transmit uplink data fail (busy or duty cycle)
-101	ERROR_WAN_GETPARAM	get the parameter of LoRaWAN fail
-102	ERROR_WAN_SETPARAM	set the parameter of LoRaWAN fail
-103	ERROR_WAN_NON_JOINED	didn't join to gateway

===== END OF DOCUMENT =====

The content of this document is to be treated as strictly confidential and is not to be disclosed, reproduced or used, except as authorized in writing by Universal Scientific Industrial Co.,Ltd.
Copyright(c) 2016 Universal Scientific Industrial Co.,Ltd.