
Tango Controls Documentation Documentation

Release 0.1

Tango Community, 3Controls, Piotr Goryl

August 14, 2016

CONTENTS

1	Tango on Windows	3
1.1	What is Tango Controls	3
1.2	Tango package installation	3
1.3	Tango Host role	4
1.4	Running <i>Device Servers</i>	7
1.5	What's next	11
1.6	Typical issues	11
2	PyTango and Taurus on Windows	13
3	Glossary	15
4	Indices and tables	17
	Index	19



Contents:

TANGO ON WINDOWS

This guide provides step by step guide on installation of Tango Controls under Windows operating systems.

1.1 What is Tango Controls

Tango Controls is object oriented, distributed control system. It is framework for building custom SCADA systems. It defines communication protocol and API. It provides libraries, set of GUI tools and drivers (so called *Device Servers*) for variety of standard and specific control equipment. For more information see: <http://www.tango-controls.org/what-is-tango-controls/>



Your computer may have different (one or more) roles in the Tango CS system. The roles are:

- Client computer, where you run GUI applications like **Synoptic**,
- Tango Host, where configuration for all other components are stored,
- Device Servers running.

Your Windows computer may perform all above roles simultaneously.

1.2 Tango package installation

Prerequisite

Some **Tango Controls** tools need **Java Runtime Environment (JRE) >=1.7**. Please install it first. You may find JRE on <http://java.com>.

The simplest way to have Tango Controls running is to install it from a binary package. Binaries are available at <http://www.tango-controls.org/downloads/binary/>

- Download the binary package with your favorite browser.

Tango Host, DataBaseds

Each Tango Controls system/deployment has to have at least one running DataBaseds *Device Server*. The machine on which *Device Server* is running has a role of so called *Tango Host*. DataBaseds is a device server providing configuration information to all other components of the system as well as a runtime catalog of the components/devices. It allows (among others) client applications to find devices in distributed environment. The TANGO_HOST variable is providing information about the address or IP number and the port on which the DataBaseds is listening for connections. The TANGO_HOST environment variable is build as follows:
host_name_or_IP:port, example: `localhost:10000`

- Run the downloaded executable file (double-click on it when downloaded).
- Follow instructions provided by the installation wizard.
- **Configure TANGO_HOST environment variable:**
 - **on Windows 8 and 10:**
 - * From the Desktop, right-click the very bottom left corner of the screen to get the *Power User Task Menu*.
 - * From the *Power User Task Menu*, click *System*.
 - **On Windows XP and 7**
 - * From the Desktop, right-click the *Computer* icon and select *Properties*. If you don't have a *Computer* icon on your desktop, click *Start* button, right-click the *Computer* option in the *Start* menu, and select *Properties*.
 - Click the *Advanced System Settings* link in the left column.
 - In the System Properties window, click on the *Advanced* tab, then click the *Environment Variables* button near the bottom of that tab.
 - In the *Environment Variables* window click the *New* button.
 - In the field *Name* write TANGO_HOST.
 - In the field *Value* write proper value. If it is only computer in the Tango System provide `localhost:10000`.


If there is a *Tango Host* already running on some other computer in your deployment and you have provided proper address and port in the TANGO_HOST you may start using client and management applications like **Jive**, **Jdraw/Synoptic**. In other case you have to configure the system to perform role of *Tango Host*.

1.3 Tango Host role

Tango Host role is created by running the **DataBaseds** device server. This device server requires MySQL database, in his most common application. To make a computer being a Tango Host you need to:

- **Install MySQL server.** You may use community version available from <http://dev.mysql.com/downloads/mysql/>. It is suggested to use MySQL Installer with all tools included. You may read more on MySQL installation topic there: <http://dev.mysql.com/doc/refman/5.7/en/windows-installation.html>

It is suggested to create dedicated `tango` user with *DB Admin* privileges during installation. In the installation wizard on a tab *Accounts and Roles* select button *Add User* and create a dedicated user. See

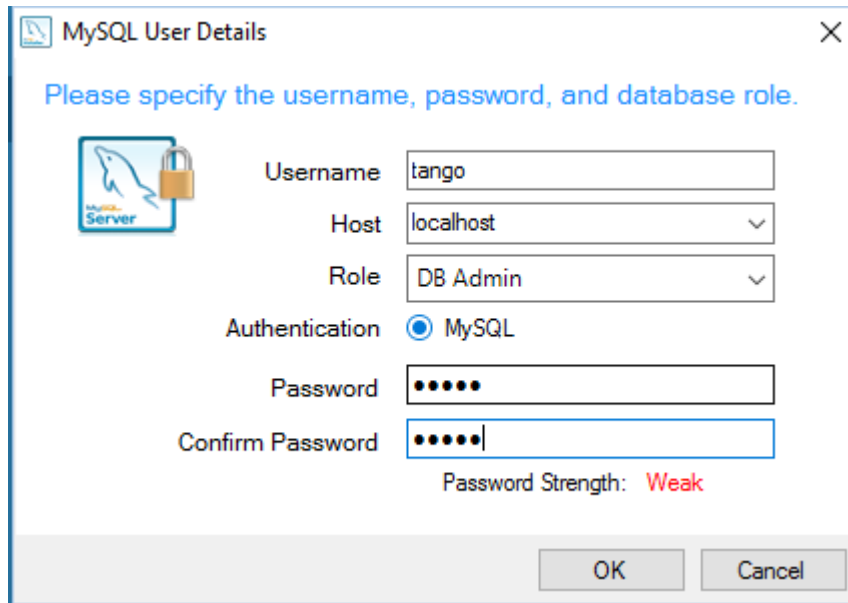

- **Setup environment variables providing credentials to access MySQL:**

- Open *Command Line*.
- Invoke command: `%TANGO_ROOT%bindbconfig.exe`.

Note: This let you setup two environment variables `MYSQL_USER` and `MYSQL_PASSWORD` used to MySQL server. You may use `root` credentials provided upon MySQL installation if it is your development workstation. For production environment it is suggested to create additional user with `DB Admin` privileges. On Windows you may use MySQL installer from *Start* menu and select the option *Reconfigure* for MySQL Server. Please refer to: <http://dev.mysql.com/doc/refman/5.7/en/adding-users.html>

- **Populate database with initial Tango configuration:**

- Open command line.
- Add MySQL client to be available in the PATH. For MySQL version 5.7 the command should be: **`set PATH=%PATH%;%C:\Program Files\MySQL\MySQL Server 5.7\bin`**

Note: Adjust the path according to you MySQL version and the path where it is installed.

- Invoke `cd "%TANGO_ROOT%\sharetangodb"`.
- Call `create_db.bat`.

- **Start a DataBaseds *Device Server*:**

- open new command line window.
- in the command line call `"%TANGO_ROOT%\binstart-db.bat"`.

Note: To make you Tango installation operational you have to have this **DataBaseds** running permanently. You may either add the command above to *Autostart* or run it as a service.


- **Make DataBaseds run as service**

Note: The proposed solution uses NSSM tool which works on all versions of Windows but you may find


some other tools available including native srvany.exe.

- Download NSSM from <http://nssm.cc/>.
- Unpack the file to some convenient location. It is suggested to copy proper (32bit or 64bit) version to the Tango bin folder %TANGO_ROOT%\bin\.
- Open *Command Line* as Administrator.
- Change current path to where the **nssm** is unpacked or copied, eg. **cd “%TANGO_ROOT%\bin”**.
- **Invoke nssm.exe install Tango-DataBaseds. This will open a window where you can define service parameters.**

* **In the Application tab provide information as follows (adjust if you installation path is different).**

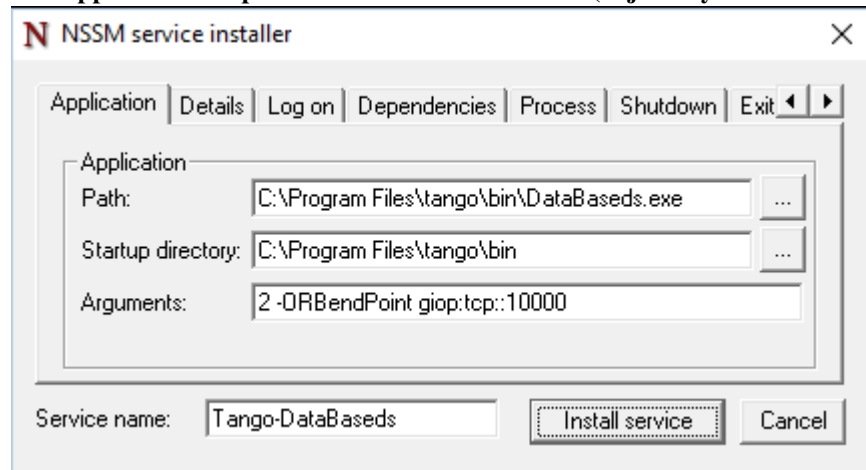

* **In the Environment tab provide variables with credentials used for accessing the MySQL, like:**

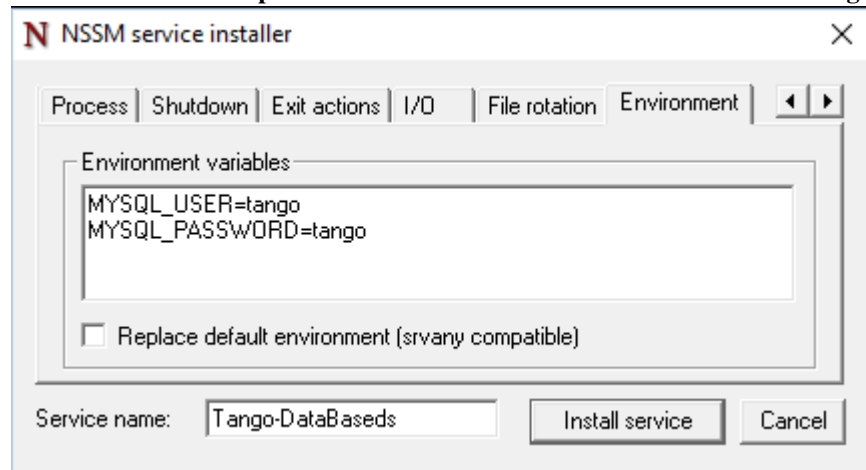

* Click *Install Service*.

- Invoke **nssm.exe start Tango-DataBaseds** to start the service.
- Test if everything is ok. Use *Start* menu to run Jive or in command line call “%TANGO_ROOT%\binstart-jive.bat”.


1.4 Running *Device Servers*

The recommended way of running device servers is to use **Starter** service. Then you may use **NSSM** as for **DataBases**. Assuming you have downloaded it and copied to the Tango bin folder please follow:

- Open Command Line as Administrator (if it is not yet open).
- Prepare folder for *Device Servers* executable:


Note: To let your device servers start with **Starter** service their executables has to be in a path without spaces. This a limitation of the current **Starter** implementation.

- Create a directory for *Device Servers*. Let it be C:\DeviceServers\bin with **mkdir c:\DeviceServers\bin**
- Change to the Tango bin directory with command (**cd “%TANGO_ROOT%\bin”**)
- Copy **TangoTest Device Server** to newly crated folder: **copy TangoTest.exe c:\DeviceServers\bin**
- **Add entry about the Starter device server you will start on your computer:**
 - Start a tool called **Astor**. You may use either Windows *Start* menu or call **tango-astor.bat**
 - In *Astor* window select menu *Command* → *Add a New Host*
 - **In the from that appear provide your *Host name* and *Device Servers PATH*.**

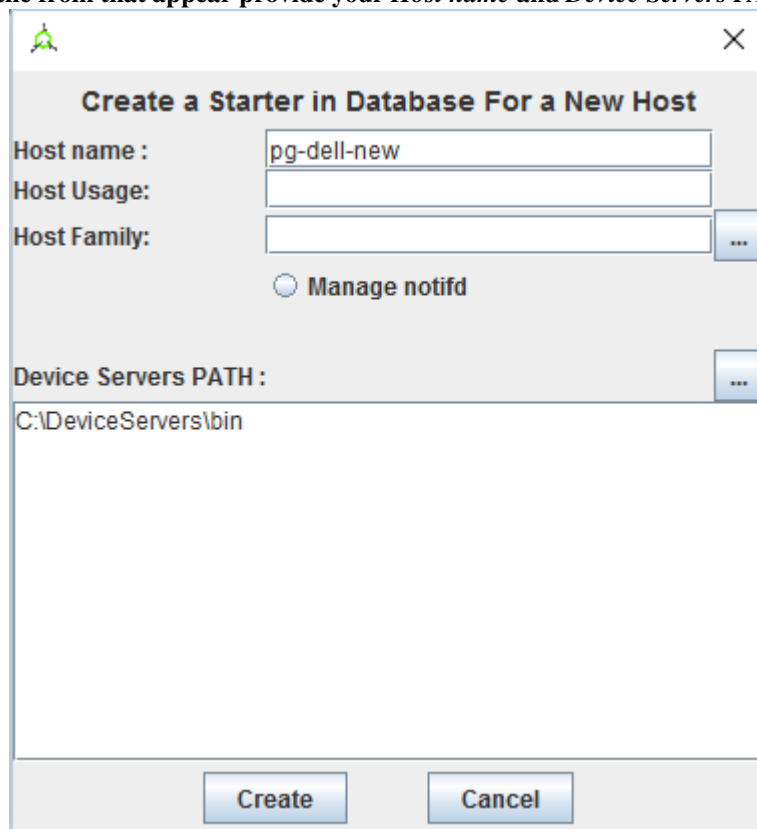


- Accept with *Create*
- Go back to **Command Line**

- **Install Starter service:**
 - Invoke **nssm.exe install Tango-DataBases**.
 - In the Application tab provide information as follows:

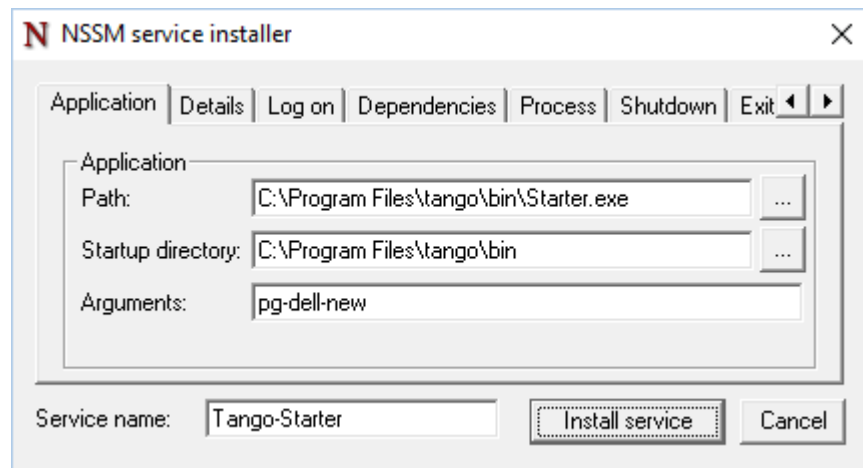


Adjust if you installation path is different. In *Arguments* exchange `pg-dell-new` with proper name of your host.

- In the Environment tab provide TANGO_HOST variable, like:

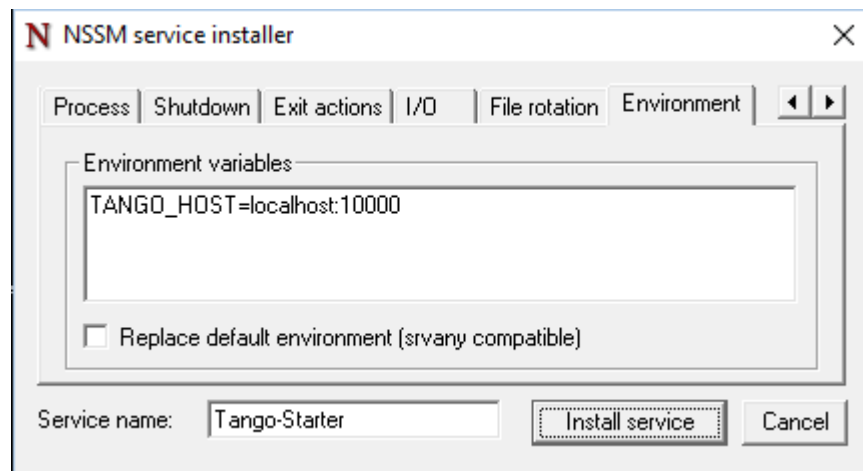


- Click :guilabel:.
- Start the service: **nssm.exe start Tango-Starter**.
- Go back to **Astor**.
- After a while you will see a green led next to your host name:

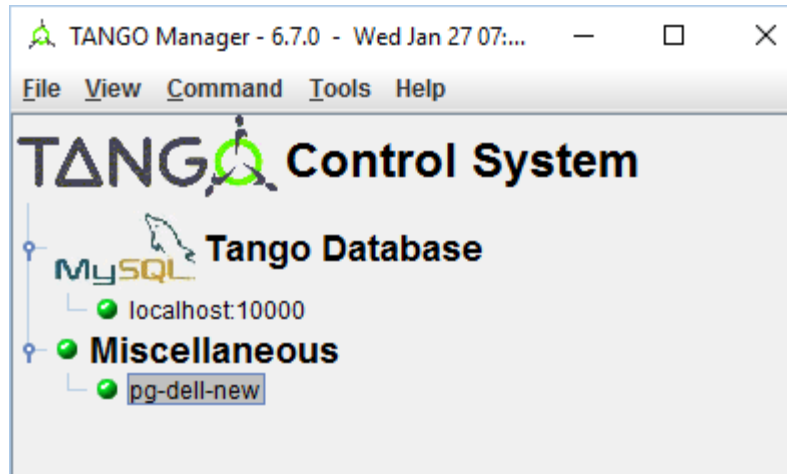

- Run **TangoTest** device server:

You may test the configuration by starting prefigured TangoTest device.


- Start **Astor** if it is not running.

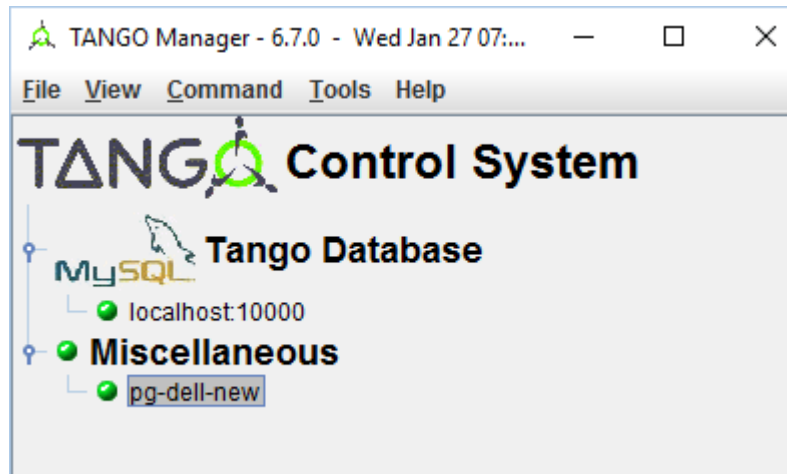

- Double Click on your computer name to open *Control Panel*. It opens a window as below:



- Click *Start new*.
- In window opened select *TangoTest/test*:

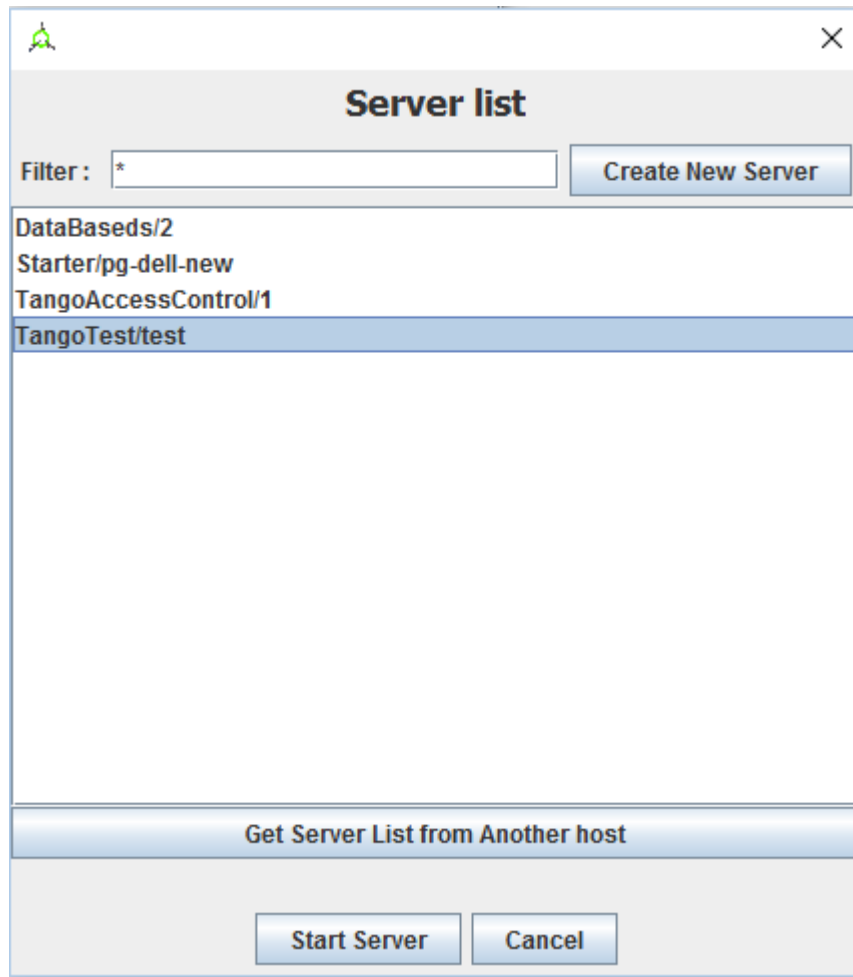

- Click *Start Server*.
- In opened window select *Controlled by Astro* -> *Yes*, and *Startup Level* -> *Level 1*.



- When you click *OK* it should start the server. After a while you should see:



- **Running your *Device Servers*:**

- You need to copy an executable to the folder configured for **Starter**. In our example it is C:DeviceServersbin.
- Then use **Astor**. After opening *Control panel* for your computer (double clicking on label) and selection *Start New...*
- Select *Create New Server* and follow a wizard.

1.5 What's next

You should check PyTango and Taurus library and tools to cope with scripting and GUIs for Tango *Py-Tango and Taurus on Windows*.

1.6 Typical issues

PYTANGO AND TAURUS ON WINDOWS

GLOSSARY

device server, device servers Device Server is a program (executable) which is able to create :term:'device' of certain classes. To create d

device Device is key concept of Tango Controls. It is an object providing access to its *attributes*, *pipes* and *commands*. Device is

attribute, attributes An attribute is...

command, commands A command is...

pipe, pipes A pipe is...

Tango Host Each Tango Controls system/deployment has to have at least one running DataBaseds *device server*. The machine on which DataBaseds *device server* is running has a role of so called *Tango Host*. *DataBaseds* is a device server providing configuration information to all other components of the system as well as a runtime catalog of the components/devices. It allows (among others) client applications to find devices in distributed environment.

INDICES AND TABLES

- *genindex*
- *modindex*
- *search*

A

attribute, [15](#)
attributes, [15](#)

C

command, [15](#)
commands, [15](#)

D

device, [15](#)
device server, [15](#)
device servers, [15](#)

E

environment variable
 MYSQL_PASSWORD, [5](#)
 MYSQL_USER, [5](#)
 TANGO_HOST, [4](#)

M

MYSQL_PASSWORD, [5](#)
MYSQL_USER, [5](#)

P

pipe, [15](#)
pipes, [15](#)

T

Tango Host, [15](#)
TANGO_HOST, [4](#)