


1 Design Overview

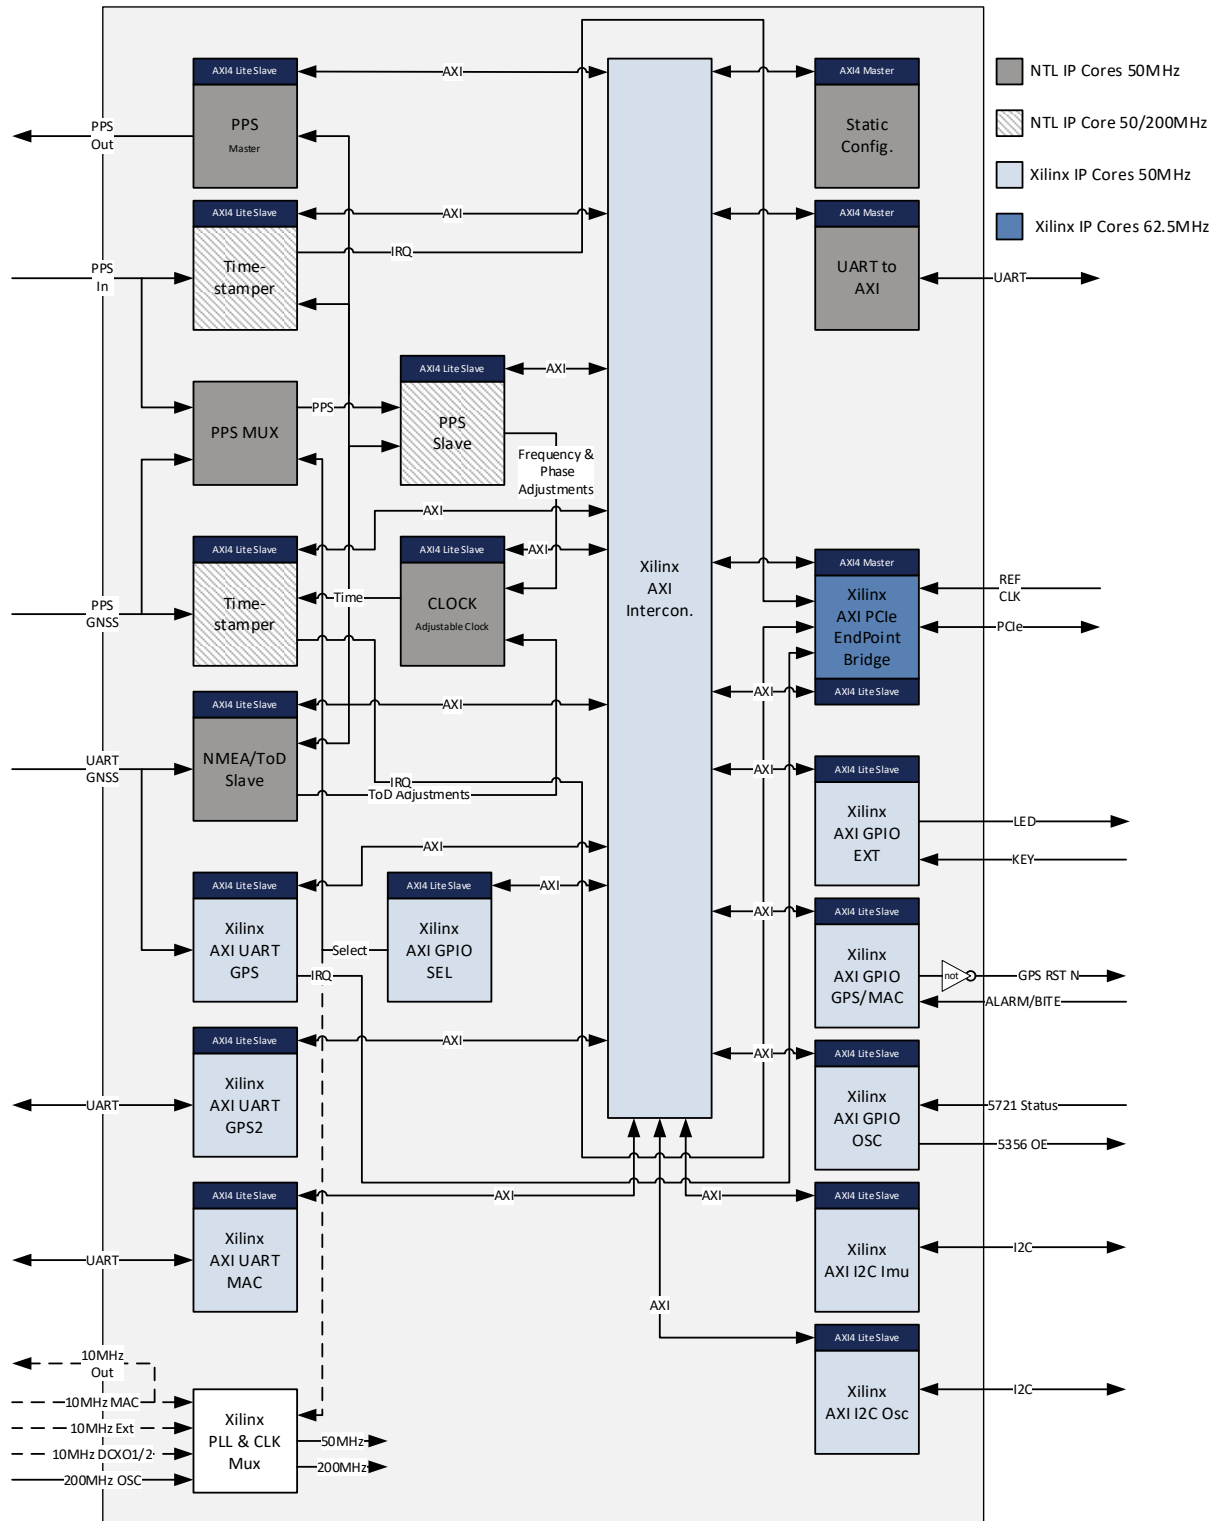

The test design for the Ax7103 is completely running on the 200MHz SOM oscillator.

The TimeCard runs partially from the 200MHz SOM oscillator. The NetTimeLogic cores with all the high precision parts are running on the 10MHz MAC.

1.1 AXI Address Mapping

The AXI interconnect has three masters which all have access to the slaves. One is the AXI PCIe interface and the other UART to AXI have all the time access. The Static Configuration only does a basic configuration after reset.

The AXI Slave Interfaces have following addresses:

AXI Slave interface	Slave	Offset Address	High Address
S_AXI_CTL	AXI PCIe Control	0x0001_0000	0x0001_0FFF
S_AXI	AXI GPIO Ext	0x0010_0000	0x0010_FFFF
S_AXI	AXI GPIO GPS/MAC	0x0011_0000	0x0011_FFFF
S_AXI	AXI GPIO OSC	0x0012_0000	0x0013_FFFF
S_AXI	AXI GPIO SEL	0x0013_0000	0x0014_FFFF
S_AXI	AXI I2C Imu	0x0014_0000	0x0015_FFFF
S_AXI	AXI I2C Osc	0x0015_0000	0x0016_FFFF
S_AXI	AXI UART 16550 GPS2	0x0016_0000	0x0018_FFFF
S_AXI	AXI UART 16550 GPS	0x0017_0000	0x0017_FFFF
S_AXI	AXI UART 16550 MAC	0x0018_0000	0x0019_FFFF
axi4l_slave	NTL Adj. Clock	0x0100_0000	0x0100_FFFF
axi4l_slave	NTL Signal TS0	0x0101_0000	0x0101_FFFF
axi4l_slave	NTL Signal TS1	0x0102_0000	0x0102_FFFF
axi4l_slave	NTL PPS Master	0x0103_0000	0x0103_FFFF
axi4l_slave	NTL PPS Slave	0x0104_0000	0x0104_FFFF
axi4l_slave	NTL TOD Slave	0x0105_0000	0x0105_FFFF

1.2 Message-Signaled Interrupt Mapping

The interrupts in the design are connected to the MSI Vector of the AXI Memory Mapped to PCI Express Core via a MSI controller. The PCI Express Core needs to set the MSI_enable to '1'. The MSI controller sends INTX_MSI Request with the MSI_Vector_Num to the PCI Express Core and with the INTX_MSI_Grant the interrupt is acknowledged.

MSI Number	Interrupt Source
1	NTL Signal TS0
2	NTL Signal TS1
3	AXI UART 16550 GPS
4	AXI UART 16550 GPS2
5	AXI UART 16550 MAC

1.3 Connectors (SMA)

ANT1:

10MHz Clock input

ANT2:

PPS Input (must be selected by AXI GPIO SEL GPIO2, Bit4 = 1)

ANT3:

10MHz Clock output (looped 10MHz Clock → MAC RF OUT after clock buffer)

ANT4:

PPS Output from the PPS Master

1.4 GPIO Mapping

		Bit4	Bit3	Bit2	Bit1	Bit0
AXI GPIO Ext	GPIO (in)	-	-	-	KEY2	KEY1
	GPIO2 (out)	-	LED4 (NC atm)	LED3 (NC atm)	LED2 (NC atm)	LED1 (NC atm)
AXI GPIO GPS/MAC	GPIO (in)	-			MAC_BITE	MAC_ALARM
	GPIO2 (out)	-	-	-	GPS2_RST (default 0)	GPS_RST (default 0)
AXI GPIO OSC	GPIO (in)	-	-	-	-	5721_STATUS
	GPIO2 (out)	-	-	-	-	5356_OE (default 0)
AXI GPIO SEL	GPIO (in)	-	Clock Dcxo2 selected	Clock Dcxo1 selected	Clock MAC selected	Clock SMA selected
	GPIO2 (out)	Select PPS Source (0 GPS PPS, 1 PPS IN SMA)	Select Dcxo2 Clock (default 0)	Select Dcxo1 Clock (default 0)	Select MAC Clock (default 0)	Select SMA Clock (default 0)

1.5 Register Description

The detailed register descriptions of the NetTimeLogic Cores are available in the reference manuals:

../TimeCard/Doc/

The Documentations of the Xilinx Cores are online available.

AXI Memory Mapped to PCI Express:

https://www.xilinx.com/support/documentation/ip_documentation/axi_pcie/v2_8/pg055-axi-bridge-pcie.pdf

AXI GPIO:

https://www.xilinx.com/support/documentation/ip_documentation/axi_gpio/v2_0/pg144-axi-gpio.pdf

AXI I2C:

https://www.xilinx.com/support/documentation/ip_documentation/axi_iic/v2_0/pg090-axi-iic.pdf

AXi UART 16550:

https://www.xilinx.com/support/documentation/ip_documentation/axi_uart16550/v2_0/pg143-axi-uart16550.pdf

1.6 Clock Selector

The design can run on different source clocks. It's important that at least the source clock of the SOM module is always available. In the FPGA design an automatic source clock selection is running. The design detects if a clock is available and does then the selection based on following priorities:

1. External 10MHz Clock from SMA connector
2. 10MHz Clock of MAC
3. 10MHz Clock of DCXO1
4. 10MHz Clock of DCXO2

This selection can be overwritten by the AXI GPIO Sel GPIO2. When a clock is selected the FPGA checks if this clock is available. If the selected clock is not detected the automatic selection is applied.

Via the GPIO Sel GPIO it can be checked which one is the selected clock. If all values are 0 the full design is running from the SOM Module Clock.


1.7 Static configuration

The FPGA starts with a static configuration with following settings :

- PPS (including TOD) is used as correction input for the clock
- PPS Slave Pulse detection on rising edge
- PPS Slave cable delay 0
- TOD Slave UART Baudrate is 115200
- TOD Slave UART polarity default
- TOD Slave in UBX Mode, all GNSS and no messages disabled
- PPS Master polarity rising edge
- PPS Master cable delay 0
- PPS Master pulse width 100 ms
- Clock, PPS Slave, TOD Slave and PPS Master are enabled
- All Timestampers are disabled

1.8 PPS/GPS for Ax7103

To connect a GPS module to the Ax7103 board following pins can be used:

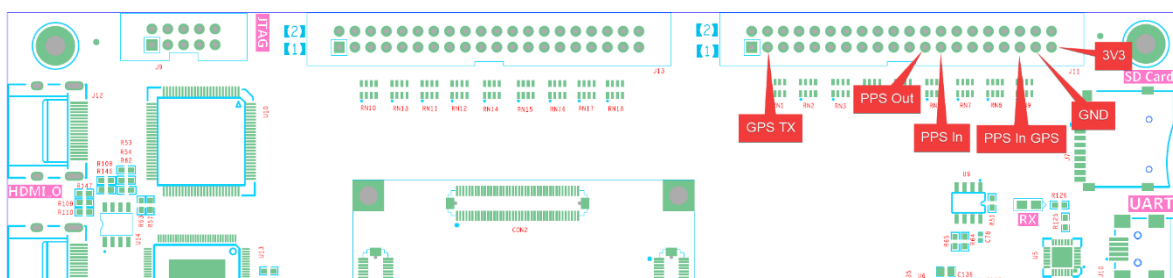


2 Program FPGA and SPI Flash

For both cases the JTAG programmer is needed and has to be connected to the USB JTAG.


2.1 JTAG Programming

This will only load the FPGA SRAM, after a power cycle this will be lost.

1. Go to the Hardware Manager in Vivado and Select “Open Target” → “Auto Connect”. After this step following view is available:

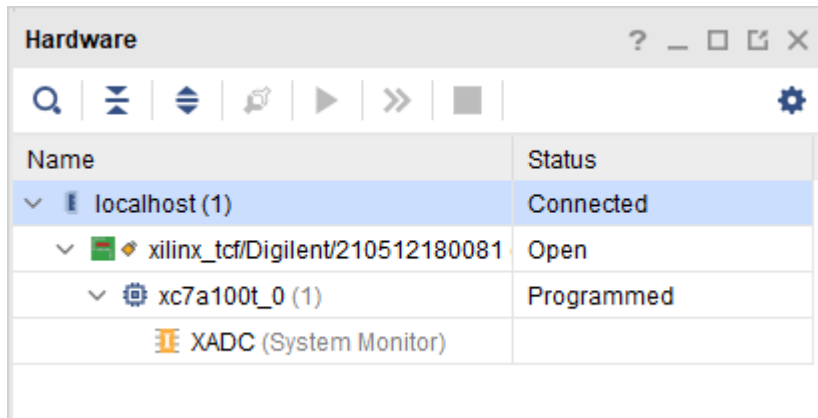

2. Right click on “xc7a100t_0(1)”, a menu will popup
3. Choose “Program Device” from the menu, the following window will pop up

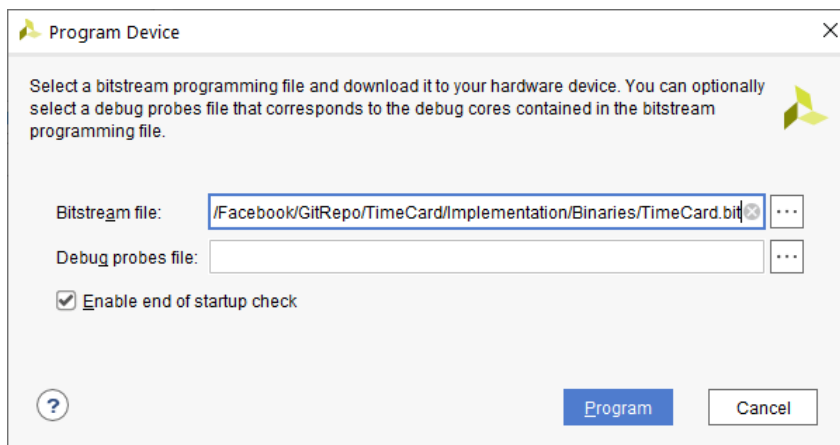


4. Select the bitstream you want to program:
TimeCard/TimeCardAx7103.bit
5. Press Program and wait for completion
6. The RUN LED will blink


2.1.1.1 SPI Programming

If no configuration memory was setup before start with step 1 otherwise start with step 7.


1. Go to the Hardware Manager Menu:

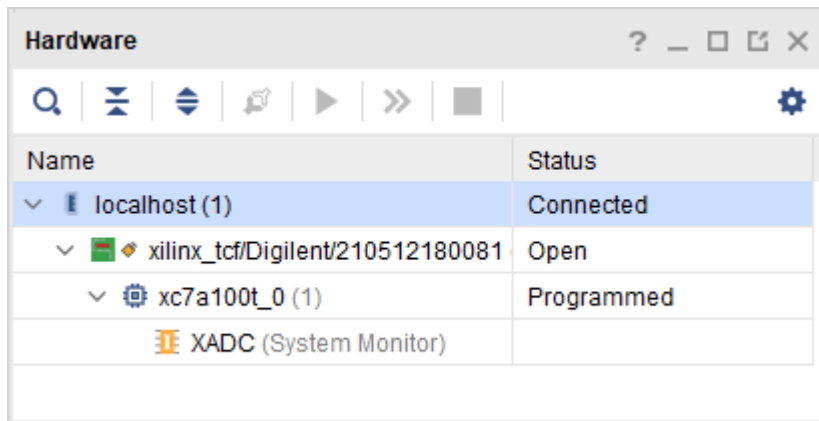

2. Right click on “xc7a100t_0(1)”, a menu will pop up
3. Choose “Add Configuration Memory Device ...” from the menu, the following window will pop up

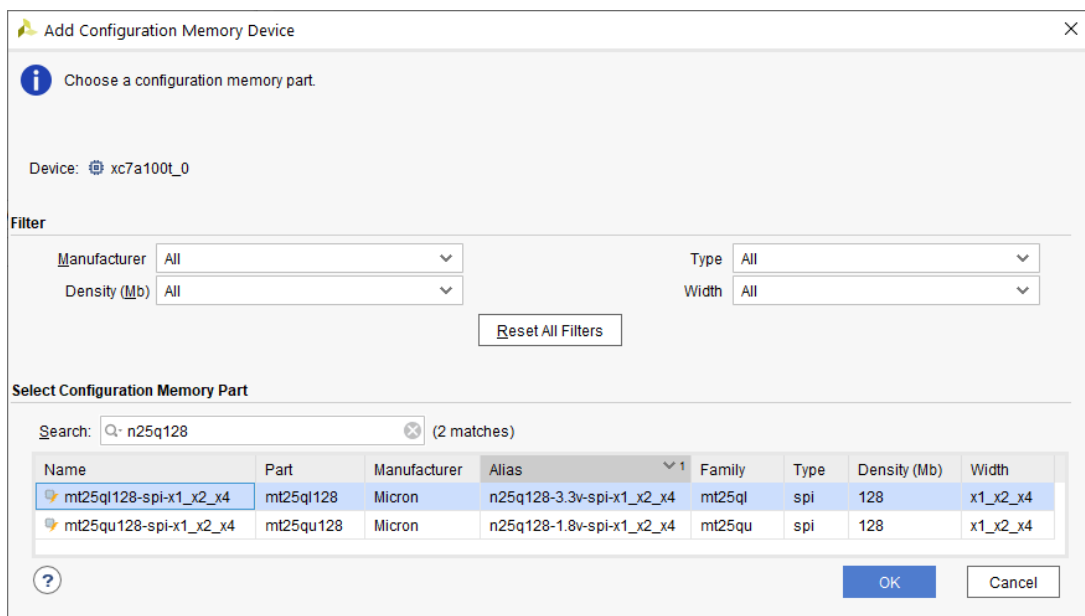


4. Select “mt25ql128-spi-x1_x2_x4” as the SPI Flash type
5. Press Ok, a new window will pop up:

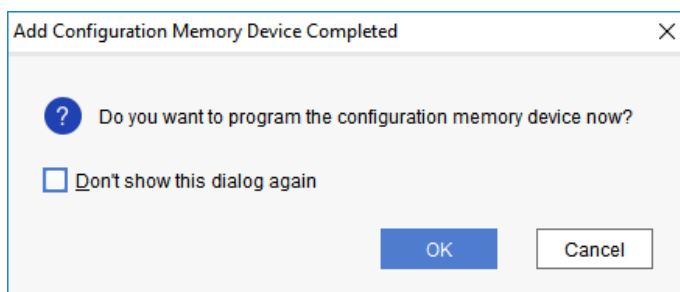


6. Press Cancel

7. Go to the Hardware Manager Menu which will have the flash attached:

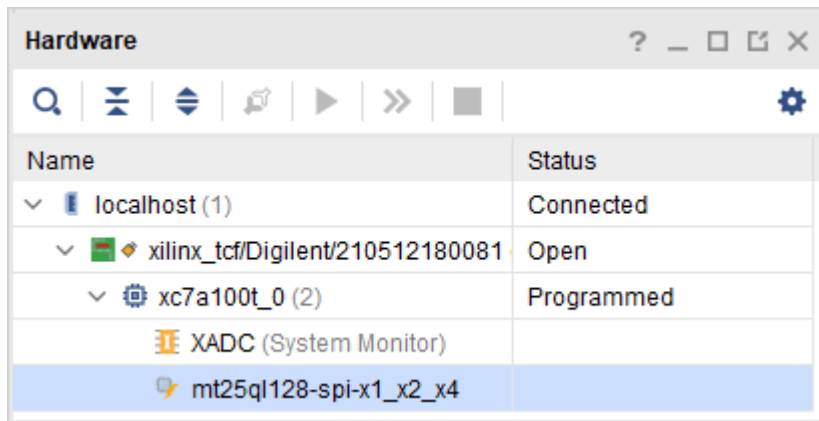


8. Right click on “mt25ql128-spi-x1_x2_x4”, a menu will pop up
9. Choose “Program Configuration Memory Device ...” from the menu, the following window will pop up

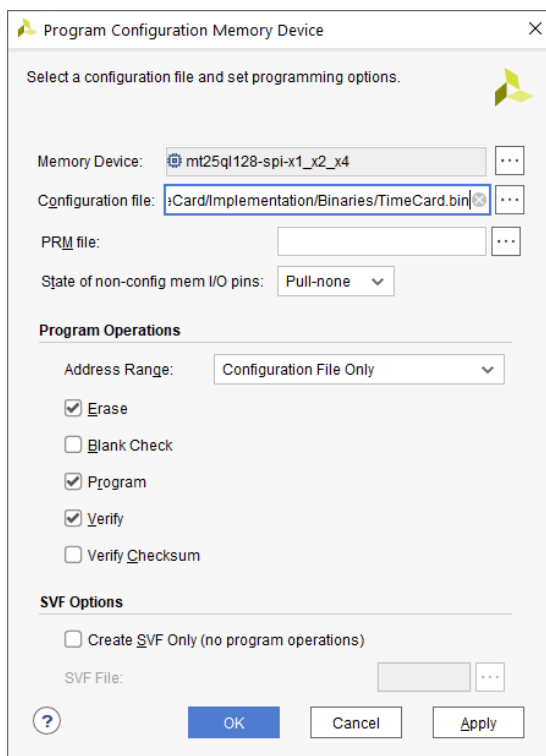

7. Select the bitstream you want to program:
TimeCard/TimeCardAx7103.bin
8. Press Ok and wait for completion
9. Disconnect the JTAG interface from the board
10. Power cycle or Reset the board / Cold start of the PC
10. The RUN LED will blink

2.1.2 Connect NetTimeLogic Configuration Manager to FPGA

1. Connect the USB/UART to a Host PC running Windows.
2. Start NetTimeLogic's UniversalConfigurationManager Tool
3. Select the COM Port where the Board is connected to and press Open. Then the Address map of the cores instantiated are shown and five new Tabs appear (CLK Clock, CLK TS, PPS Master, PPS Slave and TOD Slave):

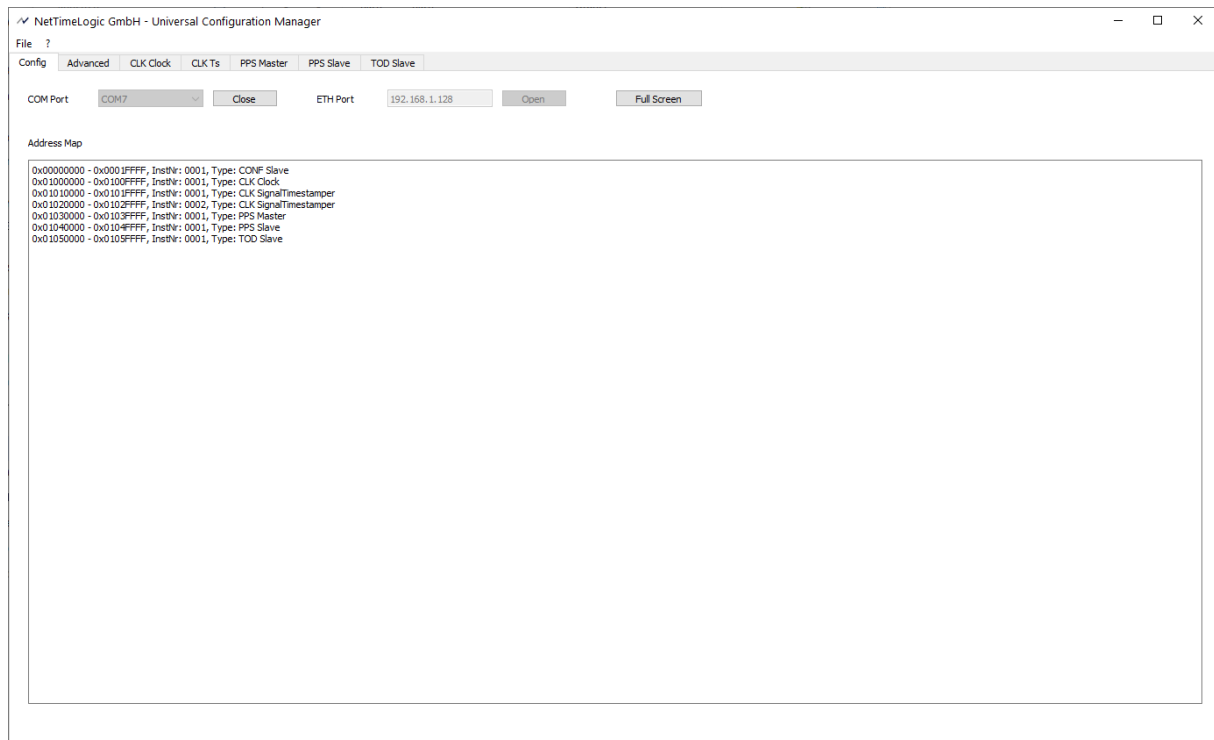

4. Change your configuration as you need it and press write. E.g. In the Advanced Tab it is possible to load configuration files by selecting a config file and pressing Load Config. Additionally, manual read or write of registers with the Field Address and Value is possible.

3 TestApp

The TestApp is used to do some basic testing of the Hardware. It basically uses mmap to the address space of the PCIe mapped address.

Before access to the PCIe end device is possible two steps are required. First the PCIe device must be detected by the system this can be checked with following command:

```
lspci -v
```

```
01:00.0 Memory controller: Xilinx Corporation Device 7011
    Subsystem: Xilinx Corporation Device 0007
    Flags: fast devsel
    Memory at 90000000 (32-bit, non-prefetchable) [disabled] [size=32M]
    Capabilities: <access denied>
```

The PCIe device is detected at address 0x9000_0000 but it is disabled. As a second step the device must be enabled:

```
sudo setpci -s "01:00.0" COMMAND=0x02
```

Now the TestApp is ready to start. The TestApp requires the PCIe base address as an argument:

```
sudo ./TestApp 0x90000000
```

The App reads the version of the NetTimeLogic IP cores and set the system time to the Adjustable Clock. After that it reads every second the time back from the Adjustable Clock:

```
PCIe Base Address is set to 0x90000000
Clock IP Core Version = 0x1020000
Signal TS IP Core Version = 0x1020001
Signal TS IP Core Version = 0x1020001
PPS Master IP Core Version = 0x1020000
PPS Slave IP Core Version = 0x1020000
TOD Slave IP Core Version = 0x2000001
Selected Clk Source is: PPS
Selected Clk Source is: REGS
Set the current local time and date: Fri Oct 23 14:00:35 2020
The time is: 14:00:35 and 3240 ns
The time is: 14:00:36 and 305900 ns
The time is: 14:00:37 and 490780 ns
The time is: 14:00:38 and 671200 ns
The time is: 14:00:39 and 1031680 ns
The time is: 14:00:40 and 1359140 ns
The time is: 14:00:41 and 1542180 ns
The time is: 14:00:42 and 1671980 ns
The time is: 14:00:43 and 1799580 ns
```