

# TodSlaveClock

## Reference Manual

Product Info	
Product Manager	Sven Meier
Author(s)	Sven Meier
Reviewer(s)	-
Version	1.9
Date	26.01.2023

## Copyright Notice

Copyright © 2023 NetTimeLogic GmbH, Switzerland. All rights reserved.

Unauthorized duplication of this document, in whole or in part, by any means, is prohibited without the prior written permission of NetTimeLogic GmbH, Switzerland.

All referenced registered marks and trademarks are the property of their respective owners

## Disclaimer

The information available to you in this document/code may contain errors and is subject to periods of interruption. While NetTimeLogic GmbH does its best to maintain the information it offers in the document/code, it cannot be held responsible for any errors, defects, lost profits, or other consequential damages arising from the use of this document/code.

NETTIMELOGIC GMBH PROVIDES THE INFORMATION, SERVICES AND PRODUCTS AVAILABLE IN THIS DOCUMENT/CODE “AS IS,” WITH NO WARRANTIES WHATSOEVER. ALL EXPRESS WARRANTIES AND ALL IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF PROPRIETARY RIGHTS ARE HEREBY DISCLAIMED TO THE FULLEST EXTENT PERMITTED BY LAW. IN NO EVENT SHALL NETTIMELOGIC GMBH BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, CONSEQUENTIAL, SPECIAL AND EXEMPLARY DAMAGES, OR ANY DAMAGES WHATSOEVER, ARISING FROM THE USE OR PERFORMANCE OF THIS DOCUMENT/CODE OR FROM ANY INFORMATION, SERVICES OR PRODUCTS PROVIDED THROUGH THIS DOCUMENT/CODE, EVEN IF NETTIMELOGIC GMBH HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

IF YOU ARE DISSATISFIED WITH THIS DOCUMENT/CODE, OR ANY PORTION THEREOF, YOUR EXCLUSIVE REMEDY SHALL BE TO CEASE USING THE DOCUMENT/CODE.

## Overview

NetTimeLogic's Time Of Day (TOD) Slave Clock is a full hardware (FPGA) only implementation of a synchronization core able to synchronize to a Time of Day source via NMEA or UBX over UART.

The whole message parsing, algorithms and calculations are implemented in the core, no CPU is required. This allows running TOD synchronization completely independent and standalone from the user application. The core can be configured either by signals or by an AXI4Lite-Slave Register interface.

This core only adapts the second part of the clock, and does no drift or offset correction in the sub second range, this shall be done in a combination with the PPS Slave Clock.

## Key Features:

- Time of Day Slave Clock
- Built-in UART receiver with configurable baudrate
- NMEA message parser
- Support for UBX (uBlox®) protocol
- Support for TSIP (Trimble®) protocol
- Support for GPS, GLONASS, GALILEO, BEIDOU or Combined GNSS
- Supports NMEA GxZDA and GxRMC messages
- Supports UBX NAV\_TIME\_UTC, NAV\_TIME\_LS, NAV\_STATUS, MON\_HW and NAV\_SAT messages
- Supports TSIP TIMING\_INFO, POSITION\_INFO, RECEIVER\_STATUS, SYSTEM\_ALARMS and SAT\_INFO messages
- Optional support for proprietary NMEA GxUTC message for UTC information and handling
- UTC handling and additional Status information for UBX and TSIP
- Quality supervision and filtering of GxRMC messages
- Hardware time conversion from Time of Day format (hh:mm:ss dd:mm:yyyy) into seconds since midnight 1.1.1970 (Linux, TAI, PTP)
- Second adjustment at the local second overflow
- In UBX/TSIP mode provides Current UTC offset to TAI and Leap Second information
- In combination with a PPS Slave Clock from NetTimeLogic: synchronization accuracy: +/- 25ns
- AXI4Lite register set or static configuration

## Revision History

This table shows the revision history of this document.

Version	Date	Revision
0.1	28.12.2015	First draft
1.0	13.05.2016	First release
1.1	19.05.2016	Added structured types section
1.2	20.12.2017	Status interface added
1.3	17.02.2020	Added Polarity swap mode
1.4	28.07.2020	Added more Error indications
1.5	30.07.2020	Added Id check for different GNSS system
1.6	21.10.2020	Added UBX Support
1.7	02.08.2022	Added UBX GNSS Info Support
1.8	03.01.2023	Added Vivado upgrade version description
1.9	13.01.2023	Added TSIP Support
2.0	26.01.2023	Added GxUTC

Table 1: Revision History

---

# Content

<b>1</b>	<b>INTRODUCTION</b>	<b>10</b>
1.1	Context Overview	10
1.2	Function	11
1.3	Architecture	11
<b>2</b>	<b>NMEA BASICS</b>	<b>13</b>
2.1	Interface	13
2.2	Messages	13
2.2.1	NMEA ZDA – Date and Time	13
2.2.2	NMEA RMC – Recommended Minimum Data	14
2.3	Message rate and phase	15
2.4	UTC vs TAI time bases	15
<b>3</b>	<b>UBX BASICS</b>	<b>17</b>
3.1	Interface	17
3.2	Messages	17
3.2.1	UBX NAV_TIME_UTC – Date and Time	18
3.2.2	UBX NAV_TIME_LS – Leap Seconds and UTC Offset	19
3.3	Message rate and phase	20
3.4	UTC vs TAI time bases	20
<b>4</b>	<b>TSIP BASICS</b>	<b>21</b>
4.1	Interface	21
4.2	Messages	21
4.2.1	TSIP TIMING INFO – Date, Time and UTC Offset	22
4.3	Message rate and phase	24

4.4	UTC vs TAI time bases	24
<b>5</b>	<b>REGISTER SET</b>	<b>25</b>
5.1	Register Overview	25
5.2	Register Descriptions	26
5.2.1	General	26
<b>6</b>	<b>DESIGN DESCRIPTION</b>	<b>40</b>
6.1	Top Level – Tod Slave	40
6.2	Design Parts	57
6.2.1	RX Processor	57
6.2.2	UART Interface Adapter	63
6.2.3	Registerset	66
6.3	Configuration example	73
6.3.1	Static Configuration	73
6.3.2	AXI Configuration	73
6.4	Clocking and Reset Concept	75
6.4.1	Clocking	75
6.4.2	Reset	75
<b>7</b>	<b>RESOURCE USAGE</b>	<b>77</b>
7.1	Intel/Altera (Cyclone V)	77
7.2	AMD/Xilinx (Artix 7)	77
<b>8</b>	<b>DELIVERY STRUCTURE</b>	<b>78</b>
<b>9</b>	<b>TESTBENCH</b>	<b>79</b>
9.1	Run Testbench	79
<b>10</b>	<b>REFERENCE DESIGNS</b>	<b>81</b>
10.1	Intel/Altera: Terasic SockIt	81

---

10.2	AMD/Xilinx: Digilent Arty	82
10.2.1	GPS receiver	83
10.3	AMD/Xilinx : Vivado version	84

## Definitions

Definitions	
NMEA 0183	Is a combined electrical and data specification for communication between marine electronics such as echo sounder, sonars, anemometer, gyrocompass, autopilot, GPS receivers and many other types of instruments. The NMEA 0183 standard uses a simple ASCII, serial communications protocol that defines how data are transmitted in a "sentence" from one "talker" to multiple "listeners" at a time
Tod Slave Clock	A clock that can synchronize itself to NMEA 0183 messages via UART
PI Servo Loop	Proportional-integral servo loop, allows for smooth corrections
Offset	Phase difference between clocks
Drift	Frequency difference between clocks

Table 2: Definitions

## Abbreviations

Abbreviations	
AXI	AMBA4 Specification (Stream and Memory Mapped)
IRQ	Interrupt, Signaling to e.g. a CPU
PPS	Pulse Per Second
TOD	Time of Day
TS	TOD Slave
GNSS	Global Navigation Satellite System
BEIDOU	Chinese GNSS System
GALILEO	European GNSS System
GLONASS	Russian GNSS System
GPS	American GNSS System (often also used instead of GNSS)
NMEA	National Marine Electronics Association



TS	Timestamp
TB	Testbench
UART/RS232	Universal Asynchronous Receiver Transmitter
LUT	Look Up Table
FF	Flip Flop
RAM	Random Access Memory
ROM	Read Only Memory
FPGA	Field Programmable Gate Array
VHDL	Hardware description Language for FPGA's
UTC	Coordinated Universal Time, popularly known as GMT (Greenwich Mean Time)
UBX	uBlox Protocol
TSIP	Trimble Protocol
TAI	Temps Atomique International, is the international atomic time scale based on a continuous counting of the SI second. TAI is currently ahead of UTC by 36 seconds. TAI is always ahead of GPS by 19 seconds.

Table 3: Abbreviations

# 1 Introduction

## 1.1 Context Overview

The TOD Slave Clock is meant as a co-processor handling Time of Day (TOD) inputs in the form of NMEA or UBX messages via UART. It receives NMEA or UBX messages from a NMEA/UBX source (GPS receiver) via an UART/RS232 interface; it does not send any message to the source though.

This means it parses and processes NMEA or UBX messages directly in hardware, converts the time into the same format and time base as the Counter Clock and sets the time of the Counter Clock if not correct.

The TOD Slave Clock is designed to work in cooperation with the Counter Clock core from NetTimeLogic (not a requirement). It can be combined with a PPS Slave clock to synchronize for e.g. to a GPS receiver. Offset and drift are then corrected by the PPS Slave Clock to the next second and the TOD Slave Clock will correct the absolute time on seconds level.

It contains an AXI4Lite slave for configuration and supervision from a CPU, this is however not required since the TOD Slave Clock can also be configured statically via signals/constants directly from within the FPGA.

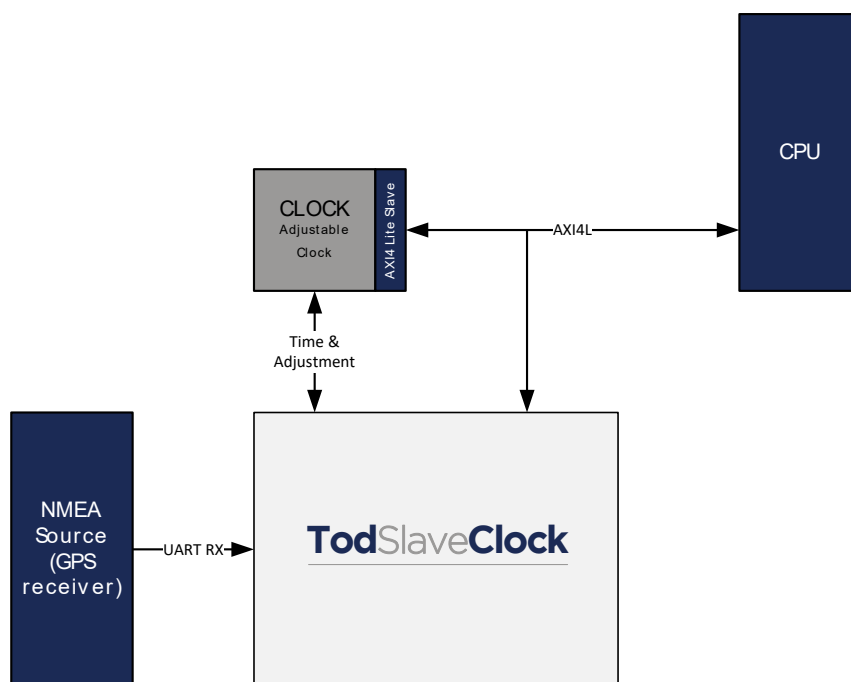


Figure 1: Context Block Diagram

## 1.2 Function

The TOD Slave Clock takes an UART input and converts the UART with configurable baud rate to an AXI byte stream. This byte stream parses the NMEA data stream for GxZDA and GxRMC messages or UBX data stream for NAV\_TIME\_UTC and NAV\_TIME\_LS messages and extracts the UTC time in a time of day format and converts it in case of NMEA from ASCII to binary. The next step is to convert the UTC time in the hh:mm:ss dd:mm:yyyy format to seconds since midnight 1.1.1970 (no fractions of seconds used) taking leap years into account. To this time an additional offset is added or subtracted to convert the UTC time to TAI time (in case of UBX this information is received from the GPS Receiver) or any other time base (leap seconds or different start of epoch). This time is then taken as reference time and waited for the next local second overflow before the local time is overwritten if required. If no difference exists, no overwrite takes place. This will cause a time jump of a second every now and then if the NMEA message reception drifts away (slips over a second of the local clock) from the local clock if not compensated (a PPS Slave would compensate the drift and offset and avoid these time jumps).

## 1.3 Architecture

The core is split up into different functional blocks for reduction of the complexity, modularity and maximum reuse of blocks. The interfaces between the functional blocks are kept as small as possible for easier understanding of the core.

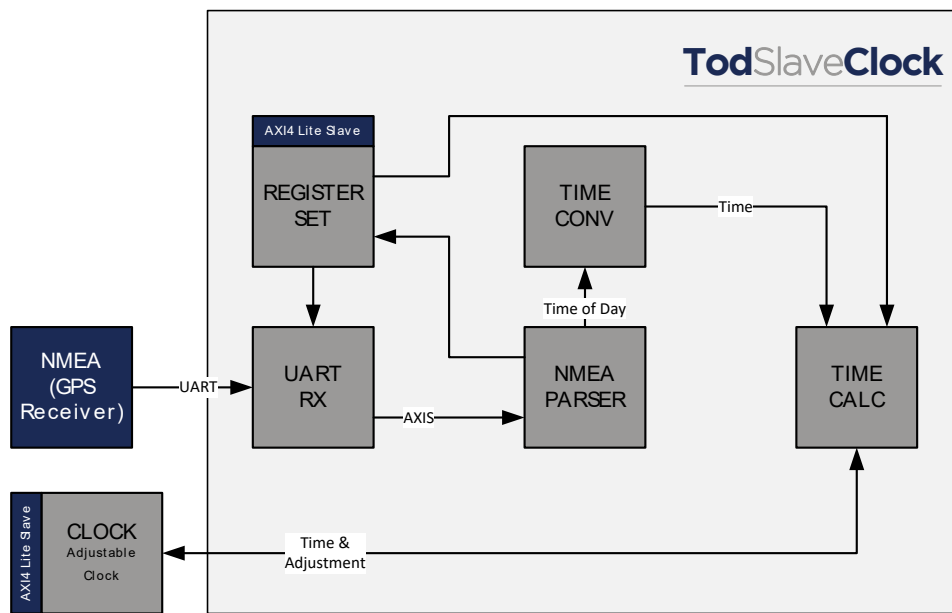


Figure 2: Architecture Block Diagram

### Register Set

This block allows reading status values and writing configuration.

### UART Receiver

This block is an UART Receiver which converts the serial stream into a byte aligned AXI stream.

### NMEA Parser

This block parses the data stream for time messages from the NMEA, UBX or TSIP source and extracts the UTC in time of day format and in case of UBX or TSIP also the leap second and UTC offset information as well as additional Receiver information

### Time Converter

This block converts the UTC time in time of day format into TAI format in seconds since 1.1.1970 without leap seconds for NMEA and with leap seconds for UBX

### Time Calculator

This block adds or subtracts additional offsets for leap second corrections or different time bases, compares this with the time of the local clock, and corrects the local clock if needed on the next second wraparound of the local clock.

## 2 NMEA Basics

### 2.1 Interface

NMEA 0183 is a standard for communication between navigation equipment on ships defined by the National Marine Electronics Association which also defines how the communication between a GPS receiver and a PC shall look like.

The NMEA 0183 standard uses a simple ASCII, serial communications protocol that defines how data are transmitted in messages from one source to multiple sinks at a time.

Typical Baud rate	4800
Data bits	8
Parity	None
Stop bits	1
Handshake	None

### 2.2 Messages

NMEA messages always start with a “\$” character, followed by the source id which is “GP” for GPS, “GL” for GLONASS, “GA” for GALILEO, “GB” for BEIDOU or “GN” for Combined, followed by a three character message type. Then a message type dependent number of fields of different lengths follow, each field separated with a “,” character. The last field is terminated with a “\*” character and followed by a checksum in hexadecimal format.

There are many message types defined for GNSS sources, however only a few contain the time of day: ZDA (Date and Time) and RMC (Recommended Minimum Data).

The message format of the two messages used are described in the next chapters, be aware that some GNSS receiver have higher accuracy on some values and will add fractions, so fields don’t always have the same width (e.g. seconds might be with or without fractions).

#### 2.2.1 NMEA ZDA – Date and Time

This message is specifically made for transferring time. It has the local time offset for local time but this is not used.

\$GxZDA,hhmmss.ss,dd,mm,yyyy,aa,bb\*CC

- x: P (GPS), L (GLONASS), A (GALILEO), B (BEIDOU), N (All)
- hh: hours (00 - 23)
- mm: minutes (00 - 59)
- ss.ss: decimal seconds (00.99 - 60.99)
- dd: day (01 - 31)
- mm: month (01 - 12)
- yyyy: year (1970 - 2106)
- aa: local zone hours (ignored)
- bb: local zone minutes (ignored)
- \*CC: checksum (00-FF)

## 2.2.2 NMEA RMC – Recommended Minimum Data

This message is supported by all GPS receivers, it describes the minimum message that a GPS receiver has to be able to output when conforming with the NMEA 2.0 standard.

\$GxRMC,hhmmss.ss,S,xxx.xxxx,N,xxx.xxxx,E,v.vv,aaa.aa,ddmmyy,vv.v,E,F\*CC

- x: P (GPS), L (GLONASS), A (GALILEO), B (BEIDOU), N (All)
- hh: hours (00 - 23)
- mm: minutes (00 - 59)
- ss.ss: decimal seconds (00.99 - 60.99)
- S status A=active or V=Void
- xxx.xxxx,N latitude (ignored)
- xxx,xxx,E longitude (ignored)
- v.vv speed (ignored)
- aaa.aa course (ignored)
- dd: day (01 - 31)
- mm: month (01 - 12)
- yy: year (1970 - 2069)
- vv.v,E: magnetic variation (ignored)
- F: mode: M=manual input mode
- \*CC: checksum (00-FF)

### 2.2.3 NMEA UTC – Recommended Minimum Data

This is a proprietary NMEA message defined by NetTimeLogic for providing UTC information to NMEA Slaves, since standard NMEA has no message defining these values.

**\$GxUTC,ooo,tttt,N,xxx.xxxx,S\*CC**

- x: P (GPS), L (GLONASS), A (GALILEO), B (BEIDOU), N (All)
- ooo: TAI-UTC offset in seconds (000 - 255)
- tttt: time to leap second in seconds (0000 - 9999)
- ss.ss: decimal seconds (00.99 - 60.99)
- S
  - status as ASCII represented hex (0-F)
  - Bit0: TAI-UTC offset valid
  - Bit1: Leap info valid
  - Bit2: Leap61 announcement
  - Bit3: Leap59 announcement
- \*CC: checksum (00-FF)

### 2.3 Message rate and phase

The message rates of these two messages shall be set to once per second if possible. It is important that the received NMEA message is received in a rather fixed phase to the second overflow (PPS) e.g. always around 500ms after the UTC second overflow other ways time jumps can happen. Only one of the messages shall be available or only one message type shall be enabled in the core.

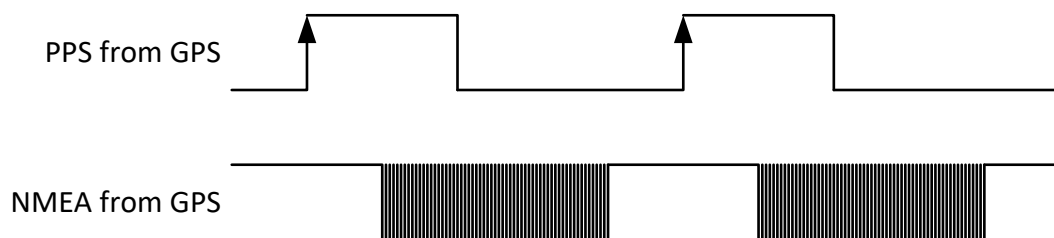


Figure 3: NMEA to PPS alignment

### 2.4 UTC vs TAI time bases

Both messages contain the time of day on UTC base. UTC has an offset to TAI which is the time base normally used for the Counter Clock. This time offset can be

set in the core so the local clock can still run on a TAI base. UTC in comparison to TAI or GPS time has so called leap seconds. A leap second is an additional second which is either added or subtracted from the current time to adjust for the earth rotation variation over time. Until 2020 UTC had additional 37 leap seconds, therefore TAI time is currently 37 seconds ahead of UTC. The issue with UTC time is, that the time makes jumps with the leap seconds which may cause that synchronized nodes go out of sync for a couple of seconds. Leap seconds are normally introduced at midnight of either the 30 of June or 31 of December. For an additional leap second the seconds counter of the UTC time will count 59 twice before wrapping around to zero, for one fewer leap second the UTC second counter will wrap directly from 58 to 0 by skipping 59 (this has not happened yet).

Be aware that this core takes no additional precautions to handle leap seconds in case of pure NMEA since NMEA just DOES NOT provide any information about UTC Offset and LEAP seconds, so it will make a time jump at a UTC leap second and will lose synchronization since it thinks that it has an offset of one second at tries to adjust this offset. A way to avoid this is to disable the adjustment at the two dates right before midnight (e.g. one minute earlier), wait for the leap second to happen, fetch some time server to get the new offset between TAI and UTC, set this offset to the core and enable the core again. This way the local clock on TAI base makes no jump since the new offset is already taken into account. The only issue with this is that for the time around midnight the clock is free running without a reference.

If the GxUTC message is enabled we get the leap second and UTC offset information, the core just disables adjustments 4 seconds before and after midnight UTC of the two dates (actually 4 dates, but only two were used so far) until a new UTC offset is available and from the calculations there is no time jump because UTC made a jump and the UTC offset was also increased/decreased which will lead to a continuous time.



## 3 UBX Basics

### 3.1 Interface

UBX is a proprietary protocol from uBlox® for communication between a GPS receiver and GPS Sink.

The UBX protocol uses a simple binary, serial communications protocol that defines how data are transmitted in messages from one source to multiple sinks at a time.

Typical Baud rate	38400
Data bits	8
Parity	None
Stop bits	1
Handshake	None

Multibyte values are transferred in little endian format (LSB first)

### 3.2 Messages

UBX messages always start with 0xB5 followed by 0x62 for synchronization of message boundaries. Then comes a Message Class byte (0x01 for the ones we look at) followed by a message ID byte and a 16bit length field. Then follows the payload of the length specified before followed by a two byte checksum.

There are many message types defined for GNSS sources, however only a few contain the time of day and information about leap seconds and UTC offset: NAV\_TIME\_UTC (Date and Time) and NAV\_TIME\_LS (Leap Second and UTC offset).

The message format of the two messages used are described in the next chapters,

### 3.2.1 UBX NAV\_TIME\_UTC - Date and Time

This message is specifically made for transferring UTC time.

<b>Message</b> <b>UBX-NAV-TIMEUTC</b> <b>UTC time solution</b>						
<b>Type</b>	Periodic/pollled					
<b>Comment</b>	Note that during a leap second there may be more or less than 60 seconds in a minute. See the description of leap seconds in the <a href="#">Integration manual</a> for details.					
<b>Message structure</b>	<b>Header</b>	<b>Class</b>	<b>ID</b>	<b>Length (Bytes)</b>	<b>Payload</b>	<b>Checksum</b>
	0xb5 0x62	0x01	0x21	20	see below	CK_A CK_B
<b>Payload description:</b>						
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>		<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	U4	iTOW		-	ms	GPS time of week of the navigation epoch. See the section iTOW timestamps in <a href="#">Integration manual</a> for details.
4	U4	tAcc		-	ns	Time accuracy estimate (UTC)
8	I4	nano		-	ns	Fraction of second, range -1e9 .. 1e9 (UTC)
12	U2	year		-	y	Year, range 1999..2099 (UTC)
14	U1	month		-	month	Month, range 1..12 (UTC)
15	U1	day		-	d	Day of month, range 1..31 (UTC)
16	U1	hour		-	h	Hour of day, range 0..23 (UTC)
17	U1	min		-	min	Minute of hour, range 0..59 (UTC)
18	U1	sec		-	s	Seconds of minute, range 0..60 (UTC)
19	X1	valid		-	-	Validity Flags
bit 0	U:1	validITOW		-	-	1 = Valid Time of Week (see section Time validity in <a href="#">Integration manual</a> for details)
bit 1	U:1	validWKN		-	-	1 = Valid Week Number (see section Time validity in <a href="#">Integration manual</a> for details)
bit 2	U:1	validUTC		-	-	1 = Valid UTC Time
bits 7...4	U:4	utcStandard		-	-	UTC standard identifier. (Not supported for protocol versions less than 15.00) <ul style="list-style-type: none"> <li>0 = Information not available</li> <li>1 = Communications Research Laboratory (CRL), Tokyo, Japan</li> <li>2 = National Institute of Standards and Technology (NIST)</li> <li>3 = U.S. Naval Observatory (USNO)</li> <li>4 = International Bureau of Weights and Measures (BIPM)</li> </ul>

Figure 4:      UBX NAV TIME UTC Frame format

### 3.2.2 UBX NAV\_TIME\_LS – Leap Seconds and UTC Offset

This message contains information about UTC offsets and Leap Seconds.

<b>Message</b>	<b>UBX-NAV-TIME_LS</b> <b>Leap second event information</b>					
<b>Type</b>	Periodic/poll					
<b>Comment</b>	Information about the upcoming leap second event if one is scheduled.					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x01	0x26	24	see below	CK_A CK_B
<b>Payload description:</b>						
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See the section iTOW timestamps in <a href="#">Integration manual</a> for details.	
4	U1	version	-	-	Message version (0x00 for this version)	
5	U1[3]	reserved0	-	-	<a href="#">Reserved</a>	
8	U1	srcOfCurrLs	-	-	Information source for the current number of leap seconds. <ul style="list-style-type: none"> <li>• 0 = Default (hardcoded in the firmware, can be outdated)</li> <li>• 1 = Derived from time difference between GPS and GLONASS time</li> <li>• 2 = GPS</li> <li>• 3 = SBAS</li> <li>• 4 = BeiDou</li> <li>• 5 = Galileo</li> <li>• 6 = Aided data</li> <li>• 7 = Configured</li> <li>• 255 = Unknown</li> </ul>	
9	I1	currLs	-	s	Current number of leap seconds since start of GPS time (Jan 6, 1980). It reflects how much GPS time is ahead of UTC time. Galileo number of leap seconds is the same as GPS. BeiDou number of leap seconds is 14 less than GPS. GLONASS follows UTC time, so no leap seconds.	

Figure 5: UBX NAV TIME UTC Frame format

### 3.3 Message rate and phase

The message rates of these two messages shall be set to once per second if possible. It is important that the received UBX message is received in a rather fixed phase to the second overflow (PPS) e.g. always around 500ms after the UTC second overflow otherwise time jumps can happen.

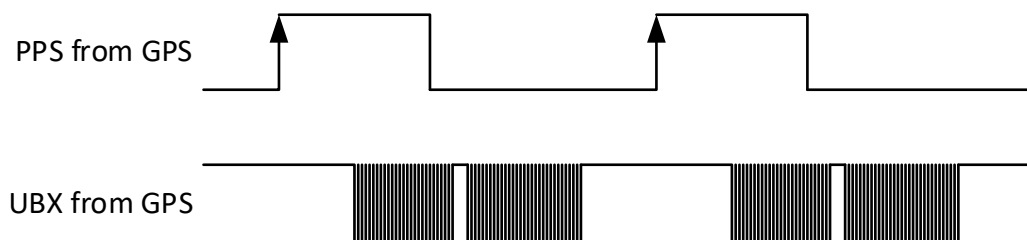


Figure 6: UBX to PPS alignment

### 3.4 UTC vs TAI time bases

NAV\_TIME\_UTC contains the time of day on UTC base. UTC has an offset to TAI which is the time base normally used for the Counter Clock. This time offset will be extracted from the NAV\_TIME\_LS message and corrected so the local clock can still run on a TAI base. UTC in comparison to TAI or GPS time has so called leap seconds. A leap second is an additional second which is either added or subtracted from the current time to adjust for the earth rotation variation over time. Until 2020 UTC had additional 37 leap seconds, therefore TAI time is currently 37 seconds ahead of UTC. The issue with UTC time is, that the time makes jumps with the leap seconds which may cause that synchronized nodes go out of sync for a couple of seconds. Leap seconds are normally introduced at midnight of either the 30 of June or 31 of December. For an additional leap second the seconds counter of the UTC time will count 59 twice before wrapping around to zero, for one fewer leap second the UTC second counter will wrap directly from 58 to 0 by skipping 59 (this has not happened yet).

Since with UBX we get the leap second and UTC offset information, the core just disables adjustments 4 seconds before and after midnight UTC of the two dates (actually 4 dates, but only two were used so far) until a new UTC offset is available and from the calculations there is no time jump because UTC made a jump and the UTC offset was also increased/decreased which will lead to a continuous time. Also it would be possible to do the same mechanism as for NMEA where the core is disabled before midnight and enabled after midnight, but this would be redundant.

## 4 TSIP Basics

### 4.1 Interface

TSIP is a proprietary protocol from Trimble® for communication between a GPS receiver and GPS Sink.

The TSIP protocol uses a simple binary, serial communications protocol that defines how data are transmitted in messages from one source to multiple sinks at a time.

Typical Baud rate	38400
Data bits	8
Parity	None
Stop bits	1
Handshake	None

Multibyte values are transferred in big endian format (MSB first)

### 4.2 Messages

TSIP messages always start with 0x10 and ends with 0x10 followed by 0x03 for synchronization of message boundaries. Then comes a Packet ID followed by a Subpacket ID byte and a 16bit length field. Then follows a Mode field which is always 2 for Responses. Then follows the payload of the length specified before followed by a two byte checksum.

There are many message types defined for GNSS sources, however only one contains the time of day and information about UTC offset: TSIP TIMING INFO (Date, Time and UTC offset).

The message format of this message is described in the next chapters,

## 4.2.1 TSIP TIMING INFO – Date, Time and UTC Offset

This message contains information about UTC offsets and Leap Seconds.

Byte	Item	Type	Value	Description
0	Start Byte	UINT8	0x10	Start of packet
1	Packet ID	UINT8	0xA1	Packet ID
2	Subpacket ID	UINT8	0x00	Subpacket ID
3–4	Length	UINT16	Any	Total length of mode + data + checksum
5	Mode	UINT8	2	2: Response
6–9	Time of Week	UINT32	Any	Time of week
10–11	Week Number	UINT16	Any	Week number
12	Hours	UINT8	0–23	Hours
13	Minutes	UINT8	0–59	Minutes
14	Seconds	UINT8	0–59	Seconds
15	Month	UINT8	1–12	Month
16	Day of month	UINT8	1–31	Day of month

Byte	Item	Type	Value	Description
17-18	Year	UINT16	Any	Four digits of year
19	Time base	UINT8		Bit 2:0: 0: GPS 1: GLO 2: BDS 3: GAL  Bit 3 - UTC (UTC according to the constellation set in bit 0-bit 2)
20	PPS base	UINT8		Bit 2:0: 0: GPS 1: GLO 2: BDS 3: GAL  Bit 3 - UTC (UTC according to the constellation set in bit 0-bit 2)
21	Flags	UINT8		Bit 0: 0: UTC invalid 1: UTC valid  Bit 1: 0: Time invalid 1: Time valid
22-23	UTC Offset	SINT16	Any	UTC offset from chosen constellation time
24-27	PPS Quantization Error	SINGLE	Any	
28-31	Bias	SINGLE	Any	In seconds
32-35	Bias rate	SINGLE	Any	In seconds/second
36	Checksum	UINT8	Any	
37	Delimiter 1	UINT8	0x10	End of packet 1
38	Delimiter 2	UINT8	0x03	End of packet 2

Figure 7: TSIP TIMING INFO Frame format

## 4.3 Message rate and phase

The message rates of these two messages shall be set to once per second if possible. It is important that the received TSIP message is received in a rather fixed phase to the second overflow (PPS) e.g. always around 500ms after the UTC second overflow otherwise time jumps can happen..

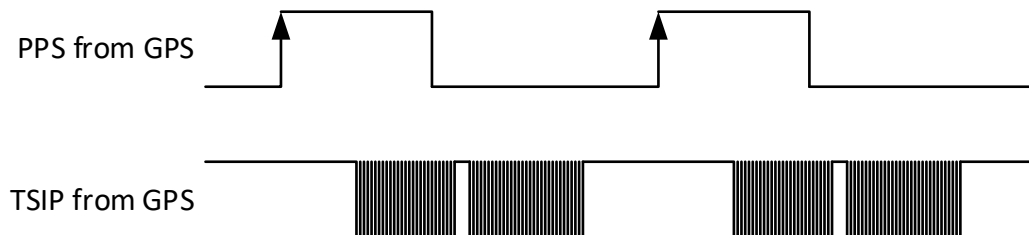


Figure 8: TSIP to PPS alignment

## 4.4 UTC vs TAI time bases

TSIP\_TIMING\_INFO contains the time of day on UTC base. UTC has an offset to TAI which is the time base normally used for the Counter Clock. This time offset will be extracted also from the TSIP\_TIMING\_INFO message and corrected so the local clock can still run on a TAI base. UTC in comparison to TAI or GPS time has so called leap seconds. A leap second is an additional second which is either added or subtracted from the current time to adjust for the earth rotation variation over time. Until 2020 UTC had additional 37 leap seconds, therefore TAI time is currently 37 seconds ahead of UTC. The issue with UTC time is, that the time makes jumps with the leap seconds which may cause that synchronized nodes go out of sync for a couple of seconds. Leap seconds are normally introduced at midnight of either the 30 of June or 31 of December. For an additional leap second the seconds counter of the UTC time will count 59 twice before wrapping around to zero, for one fewer leap second the UTC second counter will wrap directly from 58 to 0 by skipping 59 (this has not happened yet).

Since with TSIP we get the leap second and UTC offset information, the core just disables adjustments 4 seconds before and after midnight UTC of the two dates (actually 4 dates, but only two were used so far) until a new UTC offset is available and from the calculations there is no time jump because UTC made a jump and the UTC offset was also increased/decreased which will lead to a continuous time. Also it would be possible to do the same mechanism as for NMEA where the core is disabled before midnight and enabled after midnight, but this would be redundant.



## 5 Register Set

This is the register set of the TOD Slave Clock. It is accessible via AXI4Lite Memory Mapped. All registers are 32bit wide, no burst access, no unaligned access, no byte enables, no timeouts are supported. Register address space is not contiguous. Register addresses are only offsets in the memory area where the core is mapped in the AXI inter connects. Non existing register access in the mapped memory area is answered with a slave decoding error.

### 5.1 Register Overview

Registerset Overview			
Name	Description	Offset	Access
Tod SlaveControl Reg	Tod Slave Enable Control Register	0x00000000	RW
Tod SlaveStatus Reg	Tod Slave Error Status Register	0x00000004	WC
Tod SlaveUartPolarity Reg	Tod Slave UART Polarity Register	0x00000008	RW
Tod SlaveVersionReg	Tod Slave Version Register	0x00000004	WC
Tod SlaveCorrection Reg	Tod Slave Second Corrections Register	0x00000010	RW
Tod SlaveUartBaudRate Reg	Tod Slave UART Baud Rate Register	0x00000020	RW
Tod SlaveUtcStatus Reg	Tod Slave UTC Status Register	0x00000030	RO
Tod SlaveTimeToLeapSecond Reg	Tod Slave Time to Leap Second Register	0x00000034	RO
TodSlaveGnssStatus Reg	TodSlave GNSS Status Register	0x00000040	RO
TodSlaveSatelliteNumber Reg	TodSlave Satellite Number Register	0x00000044	RO

Table 4: Register Set Overview

## 5.2 Register Descriptions

### 5.2.1 General

#### 5.2.1.1 TOD Slave Control Register

Used for general control over the TOD Slave Clock, all configurations on the core shall only be done when disabled.

Tod SlaveControl Reg																																					
Reg Description																																					
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0						
-		PROTOCOL		GNSS				RESERVED			UBX_SAT_TSIP_SAT	UBX_MON_TSIP_POS	NMEA_UTC_UBX_STATUS_TSIP_STA	NMEA_ZDA_UBX_UTC_TSIP_UTC	NMEA_RMC_UBX_LS_TSIP_LS	-											ENABLE										
RO		RW		RW				RW			RW	RW	RW	RW	RW																	RW					
Reset: 0x00000000																																					
Offset: 0x0000																																					

Name	Description	Bits	Access
------	-------------	------	--------

-	Reserved, read 0	Bit: 31:30	RO
PROTOCOL	Serial Protocol: 0=NMEA, 1=UBX, 2=TSIP	Bit: 29:28	RW
GNSS	GNSS System to be used: 0=ALL 1=COMBINED 2=GPS 3=GLONASS 4=GALILEO 5=BEIDOU	Bit: 27:24	RW
RESERVED	Reserved, readback possible but no influence (write 0)	Bit: 23:21	RW
UBX_SAT	Disable UBX NAV SAT (if Protocol = UBX) Disable TSIP SATELLITE INFO (if Protocol = TSIP)	Bit: 20	RW
UBX_MON	Disable UBX HW MON (if Protocol = UBX) Disable TSIP POSITION INFO (if Protocol = TSIP)	Bit: 19	RW
NMEA_UTC_UBX_STATUS_TSIP_STA	Disable NMEA UTC (if Protocol = NMEA) Disable UBX NAV STATUS (if Protocol = UBX) Disable TSIP RECEIVER STATUS (if Protocol = TSIP)	Bit: 18	RW
NMEA_ZDA_UBX_UTC_TSIP_UTC	Disable NMEA ZDA (if Protocol = NMEA) Disable UBX NAV TIME UTC (if Protocol = UBX) Disable TSIP TIMING INFO (if Protocol = TSIP)	Bit: 17	RW
NMEA_RMC_UBX_LS_TSIP_LS	Disable NMEA RMC (if Protocol = NMEA) Disable UBX NAV TIME LS (if Protocol = UBX) Disable TSIP SYSTEM ALARMS (if Protocol = TSIP)	Bit: 16	RW
-	Reserved, read 0	Bit: 15:1	RO
ENABLE	Enable	Bit: 0	RW

### 5.2.1.2 TOD Slave Status Register

Shows the current status of the TOD Slave Clock.

Tod SlaveStatus Reg																															
Reg Description																															
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
																								UART_ERROR	CHECKSUM_ERROR	ERROR					
RO																								W	C	W	C	W	C		
Reset: 0x00000000																															
Offset: 0x0004																															

Name	Description	Bits	Access
-	Reserved, read 0	Bit: 31:2	RO
UART_ERROR	NMEA UART Error (sticky)	Bit: 2	WC
CHECKSUM_ERROR	NMEA Checksum Error (sticky)	Bit: 1	
PARSE_ERROR	NMEA Parser Error (sticky)	Bit: 0	

### 5.2.1.3 TOD Slave Polarity Register

Used for setting the UART signal polarity, shall only be done when disabled. Default value is set by the UartPolarity\_Gen generic.

Tod SlavePolarity Reg																															
Reg Description																															
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
																															POLARITY
RO																															RW
Reset: 0x0000000X																															
Offset: 0x0008																															

Name	Description	Bits	Access
-	Reserved, read 0	Bit:31:1	RO
POLARITY	UART Polarity (0 = Inversed, 1 = normal UART)	Bit: 0	RW

### 5.2.1.4 TOD Slave Version Register

Version of the IP core, even though is seen as a 32bit value, bits 31 down to 24 represent the major, bits 23 down to 16 the minor and bits 15 down to 0 the build numbers.

Tod SlaveVersion Reg																															
Reg Description																															
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
<div>VERSION</div>																															
RO																															
0xFFFFFFFF																															
Offset: 0x000C																															

Name	Description	Bits	Access
VERSION	Version of the core	Bit: 31:0	RO

### 5.2.1.5 TOD Slave Correction Register

Correction register to compensate for leap seconds between the different time domains. NMEA is UTC time, all other time in the system is TAI, this leads to a correction of 37 seconds by 2020. NMEA has NO message which contains the current UTC offset so this register must be used to pass UTC offset to TAI. For UBX/TSIP this register shall be set to 0 if UTC offset information is available.

Tod SlaveCorrection Reg																															
Reg Description																															
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
COR_SIGN	COR_S																														
RW	RW																														
Reset: 0x00000000																															
Offset: 0x0010																															

Name	Description	Bits	Access
COR_SIGN	Correction sign	Bit: 31	RW
COR_S	Correction in seconds to the time extracted from the NMEA => used to convert between TAI, UTC and GPS (leap seconds) for UBX/TSIP this shall be set to 0 if UTC Offset information is available	Bit: 30:0	RW

### 5.2.1.6 TOD Slave UART Baud Rate Register

This set the receive baud rate of the UART. The baud rate can only be changed when the core is disabled. Otherwise the changes have no effect. Only the most common baud rates are available from a range of 1.2k to 2m baud.

Tod SlaveUartBaudRate Reg																																			
Reg Description																																			
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0				
																												BAUD_RATE							
RO																												RW							
Reset: 0x0000000X																																			
Offset: 0x0020																																			

Name	Description	Bits	Access
-	Reserved, read 0	Bit: 31:4	RO



BAUD_RATE	<p>Encoded Baudrate of the UART receiver:</p> <p>0 =&gt; 1200  1 =&gt; 2400  2 =&gt; 4800  3 =&gt; 9600  4 =&gt; 19200  5 =&gt; 38400  6 =&gt; 57600  7 =&gt; 115200  8 =&gt; 230400  9 =&gt; 460800  10 =&gt; 921600  11 =&gt; 1000000  12 =&gt; 2000000  &gt;12 =&gt; not allowed undefined</p> <p>Default can be set by generic</p>	Bit: 3:0	RW
-----------	--	----------	----

### 5.2.1.7 TOD Slave UTC Status Register

This Register is only available in NMEA with UTC Message and in UBX/TSIP mode and only filled if UBX/TSIP is selected as Protocol and the UBX NAV TIME LS or TSIP TIMING INFO and/or TSIP SYSTEM ALARMS messages not disabled, otherwise it will be all 0. This allows to read the current Status for the UTC time, e.g. UTC Offset to TAI (our clock runs in TAI time), the announcement of a leap second and which one (Leap59 or Leap61) also it marks if either the UTC Offset information or the Leap Second information is valid (as indicated by the GPS receiver and some checks). The Leap Indications are earliest available 12h before the leap second event and maximum 12 hours after the event happened (depending on the announcement by the GPS receiver)

Tod SlaveUtcStatus Reg																															
Reg Description																															
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
															LEAP_INFO_VALID	-	LEAP61	LEAP59	LEAP_ANNOUNCE	-			UTC_INFO_VALID	UTC_OFFSET							
															RO	RO	RO	RO	RO				RO								
RO															Reset: 0x00000000																
Offset: 0x0030																															

Name	Description	Bits	Access
-	Reserved, read 0	Bit:31:17	RO

LEAP_INFO_VALID	Leap Second Information valid = 1	Bit:31:1	RO
-	Reserved, read 0	Bit:15	RO
LEAP61	Reserved, read 0	Bit:14	RO
LEAP59	Reserved, read 0	Bit:13	RO
LEAP_ANNOUNCE	Announce that a Leap Second will happen within the next 12 h	Bit:12	RO
-	Reserved, read 0	Bit:11:9	RO
UTC_INFO_VALID	UTC Offset Information valid = 1	Bit: 8	RO
UTC_OFFSET	Current UTC Offset to TAI	Bit: 7:0	RO

### 5.2.1.8 TOD Slave Time To Leap Second Register

This Register is only available in UBX mode and only filled if UBX is selected as Protocol and the UBX NAV TIME LS message not disabled, otherwise it will be all 0 (TSIP 7FFFFFFF). This shows the number of Seconds to the next Leap Second (if positive >0) or the number of Seconds since the last Leap Second (if negative <0) or that the Leap Second is in progress (if 0).

Tod SlaveTimeToLeapSecond Reg																															
Reg Description																															
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
TIME_TOLEAP																															
RO																															
Reset: 0x00000000																															
Offset: 0x0034																															

Name	Description	Bits	Access
TIME_TO_LEAP	Time in Seconds to next Leap Second (>0) or since last Leap Second (<0)	Bit: 31:0	RO

### 5.2.1.9 TOD Slave GNSS Status Register

This Register is only available in UBX/TSIP mode and only filled if UBX/TSIP is selected as Protocol and the UBX MON HW and/or UBX NAV STATUS or TSIP POSITION INFO, TSIP RECEIVER STATUS and/or TSIP SYSTEM ALARMS messages are not disabled.

TodSlaveGnssStatus Reg																															
Reg Description																															
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
-		ANT_JAM_VAL	FIX_SPOOF_VAL	-	SPOOF_STATE	FIX										FIX_OK	-			JAM_INDICATION								JAM_STATE	ANT_STATUS		
RO		RO	RO	RO	RO	RO										RO	RO			RO								RO	RO		
Reset: 0x00000000																															
Offset: 0x0040																															

Name	Description	Bits	Access
-	Reserved, read 0	Bit:31:30	RO
ANT_JAM_VAL	Antenna and Jamming info valid	Bit:29	RO
FIX_SPOOF_VAL	Fix and Spoofing info valid	Bit:28	RO
-	Reserved, read 0	Bit:27	RO
SPOOF_STATE	Spoofing detection state 0: Unknown or deactivated 1: No spoofing indicated 2: Spoofing indicated	Bit:26:25	RO

FIX	GNSS fix. This value does not qualify a fix as valid and within the limits. 0=No fix 1= Dead reckoning only 2=2-D fix 3=3-D fix 4=GPS+dead reckoning combined Else=Reserved	Bit:24:17	RO
FIX_OK	GNSS fix OK.	Bit:16	RO
-	Reserved, read 0	Bit:15:13	RO
JAM_INDICATION	CW jamming indicator, scaled (0=no CW jamming, 255 strong CW jamming)	Bit:12:5	RO
JAM_STATE	Output from jamming/interference monitor 0=Unkonwn or featured disabled 1=OK, no significant jamming 2=Warning, interference visible, but fix OK 3=Critical, interference visible and no fix	Bit:4:3	RO
ANT_STATUS	0=INIT 1=DONTKNOW 2=OK 3=SHORT 4=OPEN	Bit:2:0	RO

### 5.2.1.10 TOD Slave Number of Satellites Register

This Register is only available in UBX/TSIP mode and only filled if UBX/TSIP is selected as Protocol and the UBX NAV SAT or TSIP SATELLITE INFO message is not disabled.

TodSlaveSatelliteNumber Reg																															
Reg Description																															
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
															NR_SAT_VAL	NR_SAT_LOCKED								NR_SAT_SEEN							
RO															RO	RO								RO							
Reset: 0x00000000																															
Offset: 0x0044																															

Name	Description	Bits	Access
-	Reserved, read 0	Bit:31:17	RO
NR_SAT_VAL	Number of satellites info valid	Bit:16	RO
NR_SAT_LOCKED	Number of locked satellites	Bit:15:8	RO
NR_SAT_SEEN	Number of seen satellites	Bit:7:0	RO

## 6 Design Description

The following chapters describe the internals of the TOD Slave Clock: starting with the Top Level, which is a collection of subcores, followed by the description of all subcores.

### 6.1 Top Level – Tod Slave

#### 6.1.1 Parameters

The core must be parametrized at synthesis time. There are a couple of parameters which define the final behavior and resource usage of the core.

Name	Type	Size	Description
GpsSupport_Gen	boolean	1	Support for GPS (GPxxx) NMEA messages
GlonassSupport_Gen	boolean	1	Support for GLONASS (GLxxx) NMEA messages
GalileoSupport_Gen	boolean	1	Support for GALILEO (GAxxx) NMEA messages
BeidouSupport_Gen	boolean	1	Support for BEIDOU (GBxxx) NMEA messages
CombinedGnssSupport_Gen	boolean	1	Support for Combined (GNxxx) NMEA messages
AllGnssSupport_Gen	boolean	1	Support for any GNSS identifier
GxZdaMessageSupport_Gen	boolean	1	Support for GxZDA Messages: true = supported, false = not supported
GxRmcMessageSupport_Gen	boolean	1	Support for GxRMC Message: true = supported, false = not supported
GxUtcMessageSupport_Gen	boolean	1	Support for GxUTC Messages: true = supported, false = not supported
NmeaValidTimeoutMillisecond_Gen	natural	1	Timeout for NMEA UTC message



NmeaSupport_Gen	boolean	1	Support for NMEA Protocol
UbxNavTimeLs MessageSupport_Gen	boolean	1	Support for UBX_NAV_TIME_LS Messages: true = supported, false = not supported
UbxNavTimeUtc MessageSupport_Gen	boolean	1	Support for UBX_NAV_TIME_UTC Message: true = supported, false = not supported
UbxNavStatus MessageSupport_Gen	boolean	1	Support for UBX_NAV_STATUS Message: true = supported, false = not supported
UbxMonHw MessageSupport_Gen	boolean	1	Support for UBX_HW_MON Message: true = supported, false = not supported
UbxNavSat MessageSupport_Gen	boolean	1	Support for UBX_NAV_SAT Message: true = supported, false = not supported
UbxValidTimeout Millisecond_Gen	natural	1	Timeout for UBX status messages
UbxSupport_Gen	boolean	1	Support for UBX Protocol
TsipTimingInfo MessageSupport_Gen	boolean	1	Support for TSIP_TIMING_INFO Messages: true = supported, false = not supported
TsipPosInfo MessageSupport_Gen	boolean	1	Support for TSIP_POSITION_INFO Message: true = supported, false = not supported
TsipRecvStatusMes- sageSupport_Gen	boolean	1	Support for TSIP_RECEIVER_STATUS Message:

			true = supported, false = not supported
TsipSysAlarms MessageSupport_Gen	boolean	1	Support for TSIP_SYS_ALARMS Message: true = supported, false = not supported
TsipSatInfo MessageSupport_Gen	boolean	1	Support for TSIP_SATELLITE_INFO Mes- sage: true = supported, false = not supported
TsipValidTimeout Millisecond_Gen	natural	1	Timeout for TSIP status mes- sages
TsipSupport_Gen	boolean	1	Support for TSIP Protocol
StaticConfig_Gen	boolean	1	If Static Configuration or AXI is used: true = Static, false = AXI
NmeaCorrection_Gen	natural	1	NMEA, UBX, TSIP correction in seconds for when the message arrive to the next second overflow. There are some GPS receiver which send the NMEA of the next second and some of the current. Default is the next, then no correction is needed
ClockClkPeriod Nanosecond_Gen	natural	1	Clock Period in Nanosecond: Default for 50 MHz = 20 ns
UartBaudRate_Gen	natural	1	Default Baudrate encoded: 0 => 1200 1 => 2400 2 => 4800 3 => 9600 4 => 19200 5 => 38400 6 => 57600 7 => 115200 8 => 230400

			9 => 460800 10 => 921600 11 => 1000000 12 => 2000000
UartPolarity_Gen	boolean	1	true = normal UART (idle '1') false = inversed
AxiAddressRang Low_Gen	std_logic_vector	32	AXI Base Address
AxiAddressRange High_Gen	std_logic_vector	32	AXI Base Address plus Register Size Default plus 0xFFFF
Sim_Gen	boolean	1	If in Testbench simulation mode: true = Simulation, false = Synthesis

Table 5: Parameters

One of the two parameters GxZdaMessageSupport\_Gen and GxZdaMessageSupport\_Gen has to be true.

## 6.1.2 Structured Types

### 6.1.2.1 Clk\_Time\_Type

Defined in Clk\_Package.vhd of library ClkLib

Type represents the time used everywhere. For this type overloaded operators + and - with different parameters exist.

Field Name	Type	Size	Description
Second	std_logic_vector	32	Seconds of time
Nanosecond	std_logic_vector	32	Nanoseconds of time
Fraction	std_logic_vector	2	Fraction numerator (mostly not used)
Sign	std_logic	1	Positive or negative time, 1 = negative, 0 = positive.
TimeJump	std_logic	1	Marks when the clock makes a time jump (mostly not used)

Table 6: Clk\_Time\_Type

### 6.1.2.2 Clk\_UtcInfo\_Type

Defined in Clk\_Package.vhd of library ClkLib

Type represents the UTC info commonly provided by all cores having UTC information.

Field Name	Type	Size	Description
UtcOffset	std_logic_vector	16	UTC Offset
UtcOffsetValid	std_logic	1	If UTC Offset is valid
Leap59	std_logic	1	Leap Second 59
Leap61	std_logic	1	Leap Second 61

Table 7: Clk\_UtcInfo\_Type

### 6.1.2.3 Clk\_TimeAdjustment\_Type

Defined in Clk\_Package.vhd of library ClkLib

Type represents the time used everywhere. For this type overloaded operators + and - with different parameters exist.

Field Name	Type	Size	Description
TimeAdjustment	Clk_Time_Type	1	Time to adjust
Interval	std_logic_vector	32	Adjustment interval, for the drift correction this is the denominator of the rate in nanoseconds (TimeAdjustment every Interval = drift rate), for offset correction this is the period in which the time shall be corrected (TimeAdjustment in Interval), for setting the time this has no mining.
Valid	std_logic	1	Whether the Adjustment is valid or not

Table 8: Clk\_TimeAdjustment\_Type

### 6.1.2.4 Tod\_SlaveStaticConfig\_Type

Defined in Tod\_SlaveAddrPackage.vhd of library TodLib

This is the type used for static configuration.

Field Name	Type	Size	Description
Protocol	std_logic_vector	2	0=NMEA 1=UBX 2=TSIP
Gnss	std_logic_vector	4	Which GNSS mechanism shall be used (mainly used for NMEA) 0=ALL 1=COMBINED 2=GPS 3=GLONASS 4=GALILEO 5=BEIDOU
DisableMessages	std_logic_vector	8	Bit 0: Disable NMEA RMC (if Protocol = NMEA), Disable UBX NAV TIME LS (if Protocol = UBX), Disable TSIP SYSTEM ALARMS (if Protocol = TSIP) Bit 1: Disable NMEA ZDA (if Protocol = NMEA), Disable UBX NAV TIME UTC (if Protocol = UBX), Disable TSIP TIMING INFO (if Protocol = TSIP) Bit 2: Disable NMEA UTC (if Protocol = NMEA), Disable UBX NAV STATUS (if Protocol = UBX), Disable TSIP RECEIVER STATUS (if Protocol = TSIP) Bit 3: Disable UBX HW MON (if Protocol = UBX), Disable TSIP POSITION INFO (if Protocol =

			TSIP) Bit 4: Disable UBX NAV SAT (if Protocol = UBX), Disable TSIP SATELLITE INFO (if Protocol = TSIP)Bits 5-7: Reserved
Polarity	std_logic	1	'1' = normal UART, '0' = inverted signal level UART
Correction	Clk_Time_Type	1	Time to correct the parsed time to correct UTC to TAI or another base.
UartBaudRate	std_logic_vector	4	Baudrate encoded: 0 => 1200 1 => 2400 2 => 4800 3 => 9600 4 => 19200 5 => 38400 6 => 57600 7 => 115200 8 => 230400 9 => 460800 10 => 921600 11 => 1000000 12 => 2000000

Table 9: Tod\_SlaveStaticConfig\_Type

### 6.1.2.5 Tod\_SlaveStaticConfigVal\_Type

Defined in Tod\_SlaveAddrPackage.vhd of library TodLib

This is the type used for valid flags of the static configuration.

Field Name	Type	Size	Description
Enable_Val	std_logic	1	Enables the TOD Slave

Table 10: Tod\_SlaveStaticConfigVal\_Type

### 6.1.2.6 Tod\_GnssInfo\_Type

Defined in Tod\_SlaveAddrPackage.vhd of library TodLib

This is the type used for GNSS supervision, it is only filled when UBX or TSIP is used.

Field Name	Type	Size	Description
Fix	std_logic_vector	8	GNSS fix. This value does not qualify a fix as valid and within the limits. 0=No fix 1= Dead reckoning only 2=2-D fix 3=3-D fix 4=GPS+dead reckoning combined Else=Reserved
FixOk	std_logic	1	GNSS fix ok
SpoofingDetectionState	std_logic_vector	2	Spoofing detection state 0: Unknown or deactivated 1: No spoofing indicated 2: Spoofing indicated
FixAndSpoofingInfoValid	std_logic	1	Fix and Spoofing info valid
JammingDetectionState	std_logic_vector	2	Output from jamming/interference monitor 0=Unknown or featured disabled 1=OK, no significant jamming 2=Warning, interference visible, but fix OK 3=Critical, interference visible and no fix
JammingIndication	std_logic_vector	8	CW jamming indicator, scaled (0=no CW jamming, 255 strong CW jamming)
AntennaStatus	std_logic_vector	3	0=INIT 1=DONTKNOW

			2=OK 3=SHORT 4=OPEN NEO-M9 does not measure this and signals OK
AntennaAndJammingInfoValid	std_logic	1	Antenna and Jamming info valid
NumberOfSatellitesSeen	std_logic_vector	8	Numbers of Satellites seen
NumberOfSatellitesLocked	std_logic_vector	8	Numbers of Satellites locked to
NumberOfSatellitesInfoValid	std_logic	1	Numbers of Satellites info valid

Table 11: Tod\_GnssInfo\_Type

### 6.1.2.7 Tod\_SlaveStaticStatus\_Type

Defined in Tod\_SlaveAddrPackage.vhd of library TodLib

This is the type used for static status supervision.

Field Name	Type	Size	Description
CoreInfo	Clk_CoreInfo_Type	1	Infor about the Cores state
UtcInfo	Clk_UtcInfo_Type	1	Info about UTC offset and leap seconds (only available with UBX, TSIP or NMEA UTC)
GnssInfo	Tod_GnssInfo_Type	1	Info about GNSS fix, jamming and spoofing, nr of Satellites (only available with UBX or TSIP)

Table 12: Tod\_SlaveStaticStatus\_Type

### 6.1.2.8 Tod\_SlaveStaticStatusVal\_Type

Defined in Tod\_SlaveAddrPackage.vhd of library TodLib

This is the type used for valid flags of the static status supervision.

Field Name	Type	Size	Description
------------	------	------	-------------



CoreInfo_Val	std_logic	1	Core Info valid
UtcInfo_Val	std_logic	1	UTC Info valid
GnssInfo_Val	std_logic	1	GNSS Info valid

Table 13: Tod\_SlaveStaticStatusVal\_Type

### 6.1.2.9 Entity Block Diagram

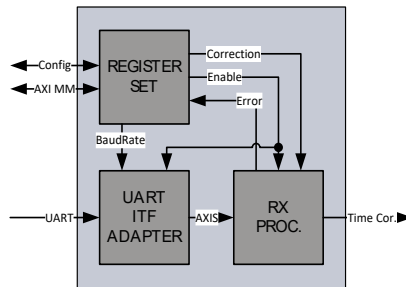


Figure 9: TOD Slave Clock

### 6.1.2.10 Entity Description

#### Rx Processor

This module handles all incoming NMEA or UBX or TSIP message. It extracts the time from the NMEA GxZDA or NMEA GxRMC or UBX NAV\_TIME\_UTC or TSIP TIMING\_INFO messages, converts the time from the Time of Day format (with UTC Offset in case of NMEA UTC, UBX or TSIP) to seconds since 1.1.1970 and does the offset and time adjustment of the clock aligned with the local clocks second overflow.

See 6.2.1 for more details.

#### UART Interface Adapter

This module converts the serial UART signal to an AXI stream. It handles the RS232 protocol data stream with one start, eight data, one stop and no parity. AXI stream from this module is 8 bit width. It can handle baud rates from 1.2k up to 1m.

See 6.2.2 for more details.

#### Registerset

This module is an AXI4Lite Memory Mapped Slave. It provides access to all registers and allows configuring the TOD Slave Clock. It can be configured to either run in AXI or StaticConfig mode. If in StaticConfig mode, the configuration of the registers is done via signals and can be easily done from within the FPGA without

CPU. If in AXI mode, an AXI Master has to configure the Datasets with AXI writes to the registers, which is typically done by a CPU

See 6.2.3 for more details.

### 6.1.2.11 Entity Declaration

Name	Dir	Type	Size	Description
Generics				
General				
GpsSupport_Gen	-	boolean	1	Support for GPS (GPxxx) NMEA messages
GlonassSupport_Gen	-	boolean	1	Support for GLONASS (GLxxx) NMEA messages
GalileoSupport_Gen	-	boolean	1	Support for GALILEO (GAxxx) NMEA messages
BeidouSupport_Gen	-	boolean	1	Support for BEIDOU (GBxxx) NMEA messages
CombinedGnssSupport_Gen	-	boolean	1	Support for Combined (GNxxx) NMEA messages
AllGnssSupport_Gen	-	boolean	1	Support for any GNSS identifier
GxZdaMessageSupport_Gen	-	boolean	1	Support for GxZDA Messages
GxRmcMessageSupport_Gen	-	boolean	1	Support for GxRMC Message
NmeaSupport_Gen	-	boolean	1	Support for NMEA Protocol
UbxNavTimeLsMessageSupport_Gen	-	boolean	1	Support for UBX_NAV_TIME_LS Messages: true = supported, false = not supported
UbxNavTimeUtcMessageSupport_Gen	-	boolean	1	Support for UBX_NAV_TIME_UTC Message: true = supported,

				false = not supported
UbxNavStatus MessageSupport_Gen	-	boolean	1	Support for UBX_NAV_STATUS Message: true = supported, false = not supported
UbxMonHw MessageSupport_Gen	-	boolean	1	Support for UBX_HW_MON Message: true = supported, false = not supported
UbxNavSat MessageSupport_Gen	-	boolean	1	Support for UBX_NAV_SAT Message: true = supported, false = not supported
UbxValidTimeout Millisecond_Gen	-	natural	1	Timeout for UBX status messages
UbxSupport_Gen	-	boolean	1	Support for UBX Protocol
TsipTimingInfo MessageSupport_Gen	-	boolean	1	Support for TSIP_TIMING_INFO Messages: true = supported, false = not supported
TsipPosInfo MessageSupport_Gen	-	boolean	1	Support for TSIP_POSITION_INF O Message: true = supported, false = not supported
TsipRecvStatusMes- sageSupport_Gen	-	boolean	1	Support for TSIP_RECEIVER_ST

				ATUS Message: true = supported, false = not supported
TsipSysAlarms MessageSupport_Gen	-	boolean	1	Support for TSIP_SYS_ALARMS Message: true = supported, false = not supported
TsipSatInfo MessageSupport_Gen	-	boolean	1	Support for TSIP_SATELLITE_IN FO Message: true = supported, false = not supported
TsipValidTimeout Millisecond_Gen	-	natural	1	Timeout for TSIP status messages
TsipSupport_Gen	-	boolean	1	Support for TSIP Protocol
StaticConfig_Gen	-	boolean	1	If Static Configura- tion or AXI is used
NmeaCorrection_Gen	-	natural	1	NMEA correction in seconds for when the message arrive to the next second overflow.
ClockClkPeriod Nanosecond_Gen	-	natural	1	Clock Period in Nanosecond
UartBaudRate_Gen	-	natural	1	Default Baudrate encoded: 0 => 1200 1 => 2400 2 => 4800 3 => 9600 4 => 19200 5 => 38400 6 => 57600

				7 => 115200 8 => 230400 9 => 460800 10 => 921600 11 => 1000000 12 => 2000000
UartPolarity_Gen	-	boolean	1	true = normal UART (idle '1') false = inversed
AxiAddressRang Low_Gen	-	std_logic_vector	32	AXI Base Address
AxiAddressRange High_Gen	-	std_logic_vector	32	AXI Base Address plus Registerset Size
Sim_Gen	-	boolean	1	If in Testbench simulation mode
<b>Ports</b>				
<b>System</b>				
SysClk_ClkIn	in	std_logic	1	System Clock
SysRstN_RstIn	in	std_logic	1	System Reset
<b>Config</b>				
StaticConfig_DatIn	in	Tod_Slave StaticConfig_Type	1	Static Configuration
StaticConfig_ValIn	in	Tod_Slave StaticConfigVal _Type	1	Static Configuration valid
<b>Status</b>				
StaticStatus_DatOut	out	Tod_Slave StaticStatus_Type	1	Static Status
StaticStatus_ValOut	out	Tod_Slave StaticStatusVal _Type	1	Static Status valid
<b>Timer</b>				
Timer1ms_EvtIn	in	std_logic	1	Millisecond timer adjusted with the Clock
<b>Time Input</b>				
ClockTime_DatIn	in	Clk_Time_Type	1	Adjusted Clock Time

ClockTime_ValIn	in	std_logic	1	Adjusted Clock Time valid
<b>AXI4 Lite Slave</b>				
AxiWriteAddrValid_ValIn	in	std_logic	1	Write Address Valid
AxiWriteAddrReady_RdyOut	out	std_logic	1	Write Address Ready
AxiWriteAddrAddress_AdrIn	in	std_logic_vector	32	Write Address
AxiWriteAddrProt_DatIn	in	std_logic_vector	3	Write Address Protocol
AxiWriteDataValid_ValIn	in	std_logic	1	Write Data Valid
AxiWriteDataReady_RdyOut	out	std_logic	1	Write Data Ready
AxiWriteDataData_DatIn	in	std_logic_vector	32	Write Data
AxiWriteDataStrobe_DatIn	in	std_logic_vector	4	Write Data Strobe
AxiWriteRespValid_ValOut	out	std_logic	1	Write Response Valid
AxiWriteRespReady_RdyIn	in	std_logic	1	Write Response Ready
AxiWriteRespResponse_DatOut	out	std_logic_vector	2	Write Response
AxiReadAddrValid_ValIn	in	std_logic	1	Read Address Valid
AxiReadAddrReady_RdyOut	out	std_logic	1	Read Address Ready
AxiReadAddrAddress_AdrIn	in	std_logic_vector	32	Read Address
AxiReadAddrProt_DatIn	in	std_logic_vector	3	Read Address Protocol
AxiReadDataValid_ValOut	out	std_logic	1	Read Data Valid
AxiReadDataReady_RdyIn	in	std_logic	1	Read Data Ready
AxiReadDataResponse_DatOut	out	std_logic_vector	2	Read Data
AxiReadDataData_DatOut	out	std_logic_vector	32	Read Data Response
<b>Time of Day Input</b>				
Uart_DatIn	in	std_logic	1	UART from the NMEA source
<b>Time Adjustment Output</b>				
TimeAdjustment_DatOut	out	Clk_TimeAdjustment	1	Time to set hard

		_Type		
TimeAdjustment_ValOut	out	std_logic	1	Time valid
<b>Offset Adjustment Output</b>				
OffsetAdjustment_DatOut	out	Clk_TimeAdjustment_Type	1	Calculated new Offset between Master and Slave (unused)
OffsetAdjustment_ValOut	out	std_logic;	1	Calculated new Offset valid
<b>Drift Adjustment Output</b>				
DriftAdjustment_DatOut	out	Clk_TimeAdjustment_Type	1	Calculated new Drift between Master and Slave Slave (unused)
DriftAdjustment_ValOut	out	std_logic;	1	Calculated new Drift valid Slave (unused)
<b>Offset Adjustment Input</b>				
OffsetAdjustment_DatIn	in	Clk_TimeAdjustment_Type	1	Calculated new Offset after the PI Servo loop Slave (unused)
OffsetAdjustment_ValIn	in	std_logic;	1	Calculated new Offset after the PI Servo loop valid Slave (unused)
<b>Drift Adjustment Input</b>				
DriftAdjustment_DatIn	in	Clk_TimeAdjustment_Type	1	Calculated new Drift after the PI Servo loop Slave (unused)
DriftAdjustment_ValIn	in	std_logic	1	Calculated new Drift after the PI Servo loop valid Slave (unused)

Table 14: TOD Slave Clock



## 6.2 Design Parts

The TOD Slave Clock core consists of a couple of subcores. Each of the subcores itself consist again of smaller function block. The following chapters describe these subcores and their functionality.

### 6.2.1 RX Processor

#### 6.2.1.1 Entity Block Diagram

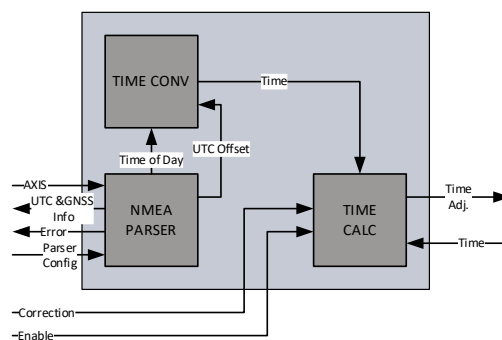


Figure 10: RX Processor

#### 6.2.1.2 Entity Description

##### NMEA Parser

This module parses all incoming NMEA frames. It extracts the time in case of NMEA from GxZDA or GxRMC frames in case of UBX from NAV\_TIME\_UTC and in case of TSIP from TIMING\_INFO, checks if the data is valid if GxRMC or UBX or TSIP is used and checks the CRC. The time is converted from ASCII decimal values to binary values for NMEA. No local time offset is used if GxZDA is used. After extraction the UTC time is in the format hh:mm:ss dd:mm:yyyy which will be passed to the time converter for conversion. In case of UBX NAV\_TIME\_LS or TSIP support also the current UTC offset is passed to the time conversion to get from UTC to TAI.

##### Time Converter

This module converts the time from the Time of Day format: hh:mm:ss dd:mm:yyyy into seconds since midnight 1.1.1970. It loops over the years, months and days taking the leap years into account and finally adds the seconds of the hours, minutes and seconds. If UBX or TSIP is used also the UTC corrections are taken into account. After this conversion a final correction is done if the received second is for the past second or next second. Then this timestamp is passed to the time calculation module.

## Time Calculation

This module calculates the reference second by adding or subtracting additional seconds from the Correction register to the received timestamp. It then checks that at least two messages were received before starting to correct the clock value. It waits until the local clock reaches the second boundary and sets the new time if the second part of the local time was different than expected. If the second part of the time is as expected, no correction is done.

### 6.2.1.3 Entity Declaration

Name	Dir	Type	Size	Description
Generics				
General				
ClockClkPeriod Nanosecond_Gen	-	natural	1	Clock Period in Nanosecond
Sim_Gen	-	boolean	1	If in Testbench simulation mode
RX Processor				
GpsSupport_Gen	-	boolean	1	Support for GPS (GPxxx) NMEA messages
GlonassSupport_Gen	-	boolean	1	Support for GLONASS (GLxxx) NMEA messages
GalileoSupport_Gen	-	boolean	1	Support for GALILEO (GAxxx) NMEA messages
BeidouSupport_Gen	-	boolean	1	Support for BEIDOU (GBxxx) NMEA messages
CombinedGnss Support_Gen	-	boolean	1	Support for Combined (GNxxx) NMEA messages
AllGnssSupport_Gen	-	boolean	1	Support for any GNSS identifier
GxZdaMessage Support_Gen	-	boolean	1	Support for GxZDA Messages
GxRmcMessage	-	boolean	1	Support for GxRMC

Support_Gen				Message
NmeaSupport_Gen	-	boolean	1	Support for NMEA Protocol
UbxNavTimeLs MessageSupport_Gen	-	boolean	1	Support for UBX_NAV_TIME_LS Messages: true = supported, false = not support- ed
UbxNavTimeUtc MessageSupport_Gen	-	boolean	1	Support for UBX_NAV_TIME_U TC Message: true = supported, false = not support- ed
UbxNavStatus MessageSupport_Gen	-	boolean	1	Support for UBX_NAV_STATUS Message: true = supported, false = not support- ed
UbxMonHw MessageSupport_Gen	-	boolean	1	Support for UBX_HW_MON Message: true = supported, false = not support- ed
UbxNavSat MessageSupport_Gen	-	boolean	1	Support for UBX_NAV_SAT Message: true = supported, false = not support- ed
UbxValidTimeout Millisecond_Gen	-	natural	1	Timeout for UBX status messages
UbxSupport_Gen	-	boolean	1	Support for UBX Protocol
TsipTimingInfo	-	boolean	1	Support for

MessageSupport_Gen				TSIP_TIMING_INFO Messages: true = supported, false = not supported
TsipPosInfo MessageSupport_Gen	-	boolean	1	Support for TSIP_POSITION_INF O Message: true = supported, false = not supported
TsipRecvStatusMes- sageSupport_Gen	-	boolean	1	Support for TSIP_RECEIVER_ST ATUS Message: true = supported, false = not supported
TsipSysAlarms MessageSupport_Gen	-	boolean	1	Support for TSIP_SYS_ALARMS Message: true = supported, false = not supported
TsipSatInfo MessageSupport_Gen	-	boolean	1	Support for TSIP_SATELLITE_IN FO Message: true = supported, false = not supported
TsipValidTimeout Millisecond_Gen	-	natural	1	Timeout for TSIP status messages
TsipSupport_Gen	-	boolean	1	Support for TSIP Protocol
NmeaCorrection_Gen	-	natural	1	NMEA correction in seconds for when the message arrive to the next second overflow.

Ports				
System				
SysClk_ClkIn	in	std_logic	1	System Clock
SysRstN_RstIn	in	std_logic	1	System Reset
Timer				
Timer1ms_EvtIn	in	std_logic	1	Millisecond timer adjusted with the Clock
Time of Day Error Output				
Tod_ErrOut	out	std_logic_vector	2	Marks a parser error
Parser Config Input				
TodParser Config_DatIn	in	Tod_Parser Config_Type	1	Parser Configuration
UTC Info Output				
TodUtcInfo_DatOut	out	Tod_UtcInfo_Type	1	UTC Information
TodUtcInfo_ValOut	out	std_logic	1	UTC Information valid, set at every update
GNSS Info Output				
TodGnssInfo_DatOut	out	Tod_GnssInfo_Type	1	GNSS Information
TodGnssInfo_ValOut	out	std_logic	1	GNSS Information valid, set at every update
Enable Input				
Enable_EnalIn	in	std_logic	1	Enables the correction
Time Input				
ClockTime_DatIn	in	Clk_Time_Type	1	Adjusted Clock Time
ClockTime_ValIn	in	std_logic	1	Adjusted Clock Time valid
Axi Input				
AxisValid_ValIn	in	std_logic	1	AXI Stream frame input
AxisReady_ValOut	out	std_logic	1	
AxisData_DatIn	in	std_logic_vector	8	
AxisStrobe_ValIn	in	std_logic_vector	1	
AxisKeep_ValIn	in	std_logic_vector	1	
AxisLast_ValIn	in	std_logic	1	
AxisUser_DatIn	in	std_logic_vector	2	
Time of Day Correction Input				

TodCorrection_DatIn	in	Clk_Time_Type	1	Additional correction to convert from UTC to a different time format with an offset
<b>Time Adjustment Output</b>				
TimeAdjustment_DatOut	out	Clk_TimeAdjustment_Type	1	Time to set hard
TimeAdjustment_ValOut	out	std_logic	1	Time valid

Table 15: RX Processor

## 6.2.2 UART Interface Adapter

### 6.2.2.1 Entity Block Diagram

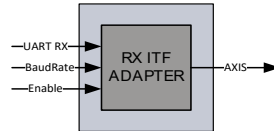


Figure 11: UART Interface Adapter

### 6.2.2.2 Entity Description

#### RX Interface Adapter

This module converts the serial UART signal to an AXI stream. It handles the RS232 protocol data stream with one start, eight data (LSB first), one stop and no parity. Data is oversampled and center aligned sampling is done. Metastability flipflops handle the asynchronous input. AXI stream from this module is 8 bit width. It can handle baud rates from 1.2k up to 2m baud. It also has an error detection internally to decide if a byte was valid or not. The receiver has no buffer and only pushes the byte to the next module. The next module has a half bit time on UART to acknowledge the receipt otherwise the byte is dropped. Since the next module can handle byte streams up to 400mbit no bytes will be dropped under normal conditions.

### 6.2.2.3 Entity Declaration

Name	Dir	Type	Size	Description
Generics				
General				
ClockClkPeriod Nanosecond_Gen	-	natural	1	Clock Period in Nanosecond
Interface Adapter				
UartBaudRate_Gen	-	natural	1	Default Baudrate encoded: 0 => 1200 1 => 2400 2 => 4800 3 => 9600 4 => 19200

				5 => 38400 6 => 57600 7 => 115200 8 => 230400 9 => 460800 10 => 921600 11 => 1000000 12 => 2000000
UartPolarity_Gen	-	boolean	1	true = normal UART (idle '1') false = inversed
Ports				
System				
SysClk_ClkIn	in	std_logic	1	System Clock
SysRstN_RstIn	in	std_logic	1	System Reset
Enable Input				
Enable_EnaIn	in	std_logic	1	Enables the Uart
UART Error Output				
Uart_ErrOut	err	std_logic	1	UART error detected (wrong baud rate)
UART Input				
Uart_DatIn	in	std_logic	1	UART from the NMEA source
UART Baud Rate Input				
UartBaudRate_DatIn	in	std_logic_vector	4	Baudrate encoded: 0 => 1200 1 => 2400 2 => 4800 3 => 9600 4 => 19200 5 => 38400 6 => 57600 7 => 115200 8 => 230400 9 => 460800 10 => 921600 11 => 1000000 12 => 2000000
UART Polarity Input				



UartPolarity_DatIN	in	std_logic	1	UART polarity true = normal UART (idle '1') false = inversed
<b>Axi Output</b>				
AxisValid_ValOut	out	std_logic	1	AXI Stream frame output
AxisReady_ValIn	in	std_logic	1	
AxisData_DatOut	out	std_logic_vector	8	
AxisStrobe_ValOut	out	std_logic_vector	1	
AxisKeep_ValOut	out	std_logic_vector	1	
AxisLast_ValOut	out	std_logic	1	
AxisUser_DatOut	out	std_logic_vector	2	

Table 16: UART Interface Adapter

## 6.2.3 Registerset

### 6.2.3.1 Entity Block Diagram

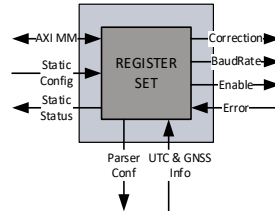


Figure 12: Registerset

### 6.2.3.2 Entity Description

#### Register Set

This module is an AXI4Lite Memory Mapped Slave. It provides access to all registers and allows configuring the TOD Slave Clock. AXI4Lite only supports 32 bit wide data access, no byte enables, no burst, no simultaneous read and writes and no unaligned access. It can be configured to either run in AXI or StaticConfig mode. If in StaticConfig mode, the configuration of the registers is done via signals and can be easily done from within the FPGA without CPU. For each configuration parameter a valid signal is available, the enable signal shall be set last (or simultaneously). To change configuration parameters the clock has to be disabled and enabled again, the correction value can be changed at runtime. If in AXI mode, an AXI Master has to configure the registers with AXI writes to the registers, which is typically done by a CPU. Parameters can in this case also be changed at runtime. There is also a Static Status which is put out as a Vector which contains information which otherwise can also be read via AXI from Registers.

### 6.2.3.3 Entity Declaration

Name	Dir	Type	Size	Description
Generics				
Register Set				
UartBaudRate_Gen	-	natural	1	Default Baudrate encoded: 0 => 1200 1 => 2400 2 => 4800

				3 => 9600 4 => 19200 5 => 38400 6 => 57600 7 => 115200 8 => 230400 9 => 460800 10 => 921600 11 => 1000000 12 => 2000000
UartPolarity_Gen	-	boolean	1	true = normal UART (idle '1') false = inversed
GpsSupport_Gen	-	boolean	1	Support for GPS (GPxxx) NMEA messages
GlonassSupport_Gen	-	boolean	1	Support for GLONASS (GLxxx) NMEA messages
GalileoSupport_Gen	-	boolean	1	Support for GALILEO (GAxxx) NMEA messages
BeidouSupport_Gen	-	boolean	1	Support for BEIDOU (GBxxx) NMEA messages
CombinedGnssSupport_Gen	-	boolean	1	Support for Combined (GNxxx) NMEA messages
AllGnssSupport_Gen	-	boolean	1	Support for any GNSS identifier
GxZdaMessageSupport_Gen	-	boolean	1	Support for GxZDA Messages
GxRmcMessageSupport_Gen	-	boolean	1	Support for GxRMC Message
NmeaSupport_Gen	-	boolean	1	Support for NMEA Protocol
UbxNavTimeLsMessageSupport_Gen	-	boolean	1	Support for UBX_NAV_TIME_LS

				Messages: true = supported, false = not supported
UbxNavTimeUtc MessageSupport_Gen	-	boolean	1	Support for UBX_NAV_TIME_U TC Message: true = supported, false = not supported
UbxNavStatus MessageSupport_Gen	-	boolean	1	Support for UBX_NAV_STATUS Message: true = supported, false = not supported
UbxMonHw MessageSupport_Gen	-	boolean	1	Support for UBX_HW_MON Message: true = supported, false = not supported
UbxNavSat MessageSupport_Gen	-	boolean	1	Support for UBX_NAV_SAT Message: true = supported, false = not supported
UbxSupport_Gen	-	boolean	1	Support for UBX Protocol
TsipTimingInfo MessageSupport_Gen	-	boolean	1	Support for TSIP_TIMING_INFO Messages: true = supported, false = not supported
TsipPosInfo MessageSupport_Gen	-	boolean	1	Support for TSIP_POSITION_INF

				O Message: true = supported, false = not supported
TsipRecvStatusMessageSupport_Gen	-	boolean	1	Support for TSIP_RECEIVER_STATUS Message: true = supported, false = not supported
TsipSysAlarmsMessageSupport_Gen	-	boolean	1	Support for TSIP_SYS_ALARMS Message: true = supported, false = not supported
TsipSatInfoMessageSupport_Gen	-	boolean	1	Support for TSIP_SATELLITE INFO Message: true = supported, false = not supported
TsipValidTimeoutMillisecond_Gen	-	natural	1	Timeout for TSIP status messages
TsipSupport_Gen	-	boolean	1	Support for TSIP Protocol
StaticConfig_Gen	-	boolean	1	If Static Configuration or AXI is used
AxiAddressRangeLow_Gen	-	std_logic_vector	32	AXI Base Address
AxiAddressRangeHigh_Gen	-	std_logic_vector	32	AXI Base Address plus Registerset Size
<b>Ports</b>				
<b>System</b>				
SysClk_ClkIn	in	std_logic	1	System Clock
SysRstN_RstIn	in	std_logic	1	System Reset
<b>Config</b>				

StaticConfig_DatIn	in	Tod_Slave StaticConfig_Type	1	Static Configuration
StaticConfig_ValIn	in	Tod_Slave StaticConfigVal _Type	1	Static Configuration valid
<b>Status</b>				
StaticStatus_DatOut	out	Tod_Slave StaticStatus_Type	1	Static Status
StaticStatus_ValOut	out	Tod_Slave StaticStatusVal _Type	1	Static Status valid
<b>AXI4 Lite Slave</b>				
AxiWriteAddrValid_ValIn	in	std_logic	1	Write Address Valid
AxiWriteAddrReady_RdyOut	out	std_logic	1	Write Address Ready
AxiWriteAddrAddress_AdrIn	in	std_logic_vector	32	Write Address
AxiWriteAddrProt_DatIn	in	std_logic_vector	3	Write Address Protocol
AxiWriteDataValid_ValIn	in	std_logic	1	Write Data Valid
AxiWriteDataReady_RdyOut	out	std_logic	1	Write Data Ready
AxiWriteDataData_DatIn	in	std_logic_vector	32	Write Data
AxiWriteDataStrobe_DatIn	in	std_logic_vector	4	Write Data Strobe
AxiWriteRespValid_ValOut	out	std_logic	1	Write Response Valid
AxiWriteRespReady_RdyIn	in	std_logic	1	Write Response Ready
AxiWriteRespResponse_DatOut	out	std_logic_vector	2	Write Response
AxiReadAddrValid_ValIn	in	std_logic	1	Read Address Valid
AxiReadAddrReady_RdyOut	out	std_logic	1	Read Address Ready
AxiReadAddrAddress_AdrIn	in	std_logic_vector	32	Read Address
AxiReadAddrProt_DatIn	in	std_logic_vector	3	Read Address Protocol
AxiReadDataValid_ValOut	out	std_logic	1	Read Data Valid
AxiReadDataReady	in	std_logic	1	Read Data Ready

RdyIn				
AxiReadDataResponse_DatOut	out	std_logic_vector	2	Read Data
AxiReadDataData_DatOut	out	std_logic_vector	32	Read Data Response
<b>UART Baud Rate Output</b>				
UartBaudRate_DatOut	out	std_logic_vector	4	Baudrate encoded: 0 => 1200 1 => 2400 2 => 4800 3 => 9600 4 => 19200 5 => 38400 6 => 57600 7 => 115200 8 => 230400 9 => 460800 10 => 921600 11 => 1000000 12 => 2000000
<b>UART Polarity Output</b>				
UartPolarity_DatOut	out	std_logic	1	UART polarity true = normal UART (idle '1') false = inversed
<b>Correction Output</b>				
TodCorrection_DatOut	out	Clk_Time_Type	1	Additional correction to the received UTC time
<b>UTC Info Input</b>				
TodUtcInfo_DatIn	in	Tod_UtcInfo_Type	1	UTC Information
TodUtcInfo_ValIn	in	std_logic		UTC Information valid, set at every update
<b>GNSS Info Input</b>				
TodGnssInfo_DatIn	in	Tod_GnssInfo_Type	1	GNSS Information
TodGnssInfo_ValIn	in	std_logic	1	GNSS Information valid, set at every update
<b>Parser Config Output</b>				
TodParser	out	Tod_Parser	1	Parser Configura-

Config_DatIn		Config_Type		tion
<b>Error Input</b>				
Tod_ErrIn	in	std_logic_vector	3	An error happened
<b>Enable Output</b>				
TodSlave Enable_DatOut	out	std_logic	1	Enable TOD Slave Clock

Table 17: Registerset



## 6.3 Configuration example

In both cases the enabling of the core shall be done last, after or together with the configuration.

### 6.3.1 Static Configuration

```
constant TodStaticConfigSlave_Con : Tod_SlaveStaticConfig_Type := (  
  Protocol           => "00", -- NMEA  
  Gnss               => std_logic_vector(to_unsigned(Tod_SlaveGnss_AllGnss_Con,4)),  
  DisableMessages    => x"01", -- no ZDA  
  Polarity           => '1',  
  Correction         => (  
    Second           => x"00000025", -- UTC 37 leap seconds  
    Nanosecond       => (others => '0'), -- no nanoseconds  
    Fraction         => (others => '0'), -- no fractions  
    Sign             => '0', -- UTC correct in positive  
    TimeJump         => '0'), -- no  
  UartBaudRate       => x"7"-115200 (same enum as with generic)  
);  
  
constant TodStaticConfigValSlave_Con : Tod_SlaveStaticConfigVal_Type := (  
  Enable_Val        => '1'  
);
```

Figure 13: Static Configuration

The UartBaudRate, Protocol and Gnss has to be configured before enabling; changes on this value only have an effect on a transition from disabled to enabled. The Correction value can be set at runtime and has immediate effect; only the seconds and sign part of the correction are used.

### 6.3.2 AXI Configuration

The following code is a simplified pseudocode from the testbench: The base address of the TOD Slave Clock is 0x10000000.

```
-- TOD SLAVE  
-- Config  
-- correction of plus 37 second to convert UTC to TAI for NMEA  
AXI WRITE 10000010 00000025  
-- change baud rate to 115200  
AXI WRITE 10000020 00000007  
  
-- enable TOD Slave, NMEA, no ZDA and all GNSS  
AXI WRITE 10000000 00010001
```

Figure 14: AXI Configuration

In the example the clock gets a correction of 36 seconds to correct UTC to TAI and the baud rate is set to 115200 baud/s

## 6.4 Clocking and Reset Concept

### 6.4.1 Clocking

To keep the design as robust and simple as possible, the whole TOD Slave Clock, including the Counter Clock and all other cores from NetTimeLogic are run in one clock domain. This is considered to be the system clock. Per default this clock is 50MHz. Where possible also the interfaces are run synchronous to this clock. For clock domain crossing asynchronous fifos with gray counters or message patterns with meta-stability flip-flops are used. Clock domain crossings for the AXI interface is moved from the AXI slave to the AXI interconnect.

Clock	Frequency	Description
<b>System</b>		
System Clock	50MHz (Default)	System clock where the Tod Slave runs on as well as the counter clock etc.
<b>UART Interface</b>		
UART RX	1.2 kHz – 1MHz	No clock, asynchronous data signal, external receive clock from the UART. Must be defined for the core prior to use of the interface not all frequencies apply.
<b>AXI Interface</b>		
AXI Clock	50MHz (Default)	Internal AXI bus clock, same as the system clock

Table 18: Clocks

### 6.4.2 Reset

In connection with the clocks, there is a reset signal for each clock domain. All resets are active low. All resets can be asynchronously set and shall be synchronously released with the corresponding clock domain. All resets shall be asserted for the first couple (around 8) clock cycles. All resets shall be set simultaneously and released simultaneously to avoid overflow conditions in the core. See the reference designs top file for an example of how the reset shall be handled.

Reset	Polarity	Description
<b>System</b>		
System Reset	Active low	Asynchronous set, synchronous release

		with the system clock
AXI Interface		
AXI Reset	Active low	Asynchronous set, synchronous release with the AXI clock, which is the same as the system clock

Table 19: Resets

## 7 Resource Usage

Since the FPGA Architecture between vendors and FPGA families differ there is a split up into the two major FPGA vendors.

### 7.1 Intel/Altera (Cyclone V)

Configuration	FFs	LUTs	BRAMs	DSPs
Minimal (Static Config, NMEA and RMC only)	570	1920	0	0
Maximal (AXI, NMEA, UBX, TSIP all GNSS and all Messages)	1600	7570	0	0

Table 20: Resource Usage Intel/Altera

### 7.2 AMD/Xilinx (Artix 7)

Configuration	FFs	LUTs	BRAMs	DSPs
Minimal (Static Config, NMEA and RMC only)	560	1210	0	0
Maximal (AXI, NMEA, UBX, TSIP all GNSS and all Messages)	1250	3250	0	0

Table 21: Resource Usage AMD/Xilinx

## 8 Delivery Structure

```
AXI                                -- AXI library folder
|-Library                         -- AXI library component sources
|-Package                        -- AXI library package sources

CLK                                -- CLK library folder
|-Library                         -- CLK library component sources
|-Package                        -- CLK library package sources

COMMON                            -- COMMON library folder
|-Library                         -- COMMON library component sources
|-Package                        -- COMMON library package sources

PPS                                -- PPS library folder
|-Package                        -- PPS library package sources

SIM                                -- SIM library folder
|-Doc                            -- SIM library command documentation
|-Package                        -- SIM library package sources
|-Testbench                      -- SIM library testbench template sources
|-Tools                          -- SIM simulation tools

TOD                                -- TOD library folder
|-Core                           -- TOD library cores
|-Doc                            -- TOD library cores documentations
|-Library                        -- TOD library component sources
|-Package                        -- TOD library package sources
|-Refdesign                       -- TOD library cores reference designs
|-Testbench                      -- TOD library cores testbench sources and sim/log
```

## 9 Testbench

The Tod Slave testbench consist of 3 parse/port types: AXI, CLK and TOD. The TOD transmit port takes the CLK port time as reference and send the timestamp generated by this clock as NMEA messages. The TOD receiver port takes the time of the Clock instance as reference and the NMEA data stream from the TOD transmit port. Once the clock is synchronized the CLK port and Clock generated time should be the same.. In addition for configuration and result checks an AXI read and write port is used in the testbench and for accessing more than one AXI slave also an AXI interconnect is required.

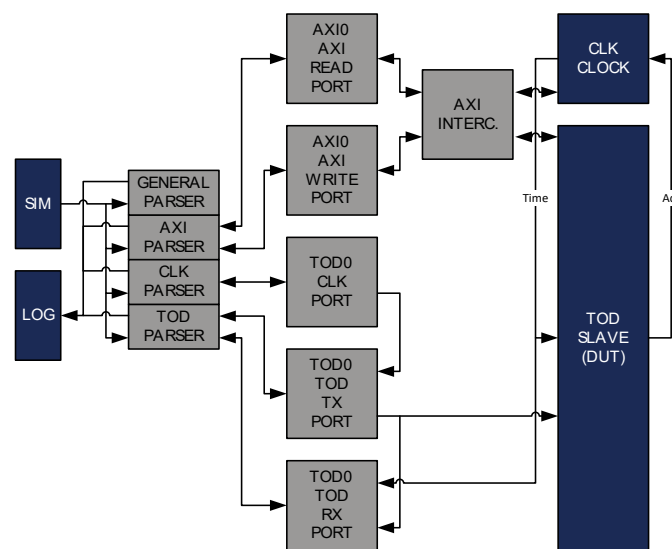


Figure 15: Testbench Framework

For more information on the testbench framework check the Sim\_ReferenceManual documentation.

With the Sim parameter set the time base for timeouts are divided by 1000 to 100000 to speed up simulation time.

### 9.1 Run Testbench

1. Run the general script first

```
source XXX/SIM/Tools/source_with_args.tcl
```

2. Start the testbench with all test cases

```
src XXX/TOD/Testbench/Core/TodSlave/Script/run_Tod_Slave_Tb.tcl
```

3. Check the log file LogFile1.txt in the XXX/TOD/Testbench/Core/TodSlave/Log/ folder for simulation results.



## 10 Reference Designs

The TOD Slave reference design contains a PLL to generate all necessary clocks (cores are run at 50 MHz), an instance of the TOD Slave Clock IP core and an instance of the Adjustable Counter Clock IP core (needs to be purchased separately). Optionally it also contains an instance of a PPS Slave Clock IP core and an instance of a PPS Master Clock IP core (both have to be purchased separately). To instantiate the optional IP cores, change the corresponding generics (PpsMasterAvailable\_Gen, PpsSlaveAvailable\_Gen) to true via the tool specific wizards.

The Reference Design with a PPS and TOD Slave Clock is intended to be connected to a GPS receiver with a baudrate of 9600. If another baud rate shall be used this can be set via the Static Configuration. The absolute second is corrected via the TOD Slave Clock and the Phase and Frequency is corrected via the PPS Slave Clock. The PPS Master Clock is used to create a PPS output which is compensated for the output delay and has a configurable duty cycle, if not available an uncompensated PPS is directly generated out of the MSB of the Time.

All generics can be adapted to the specific needs.

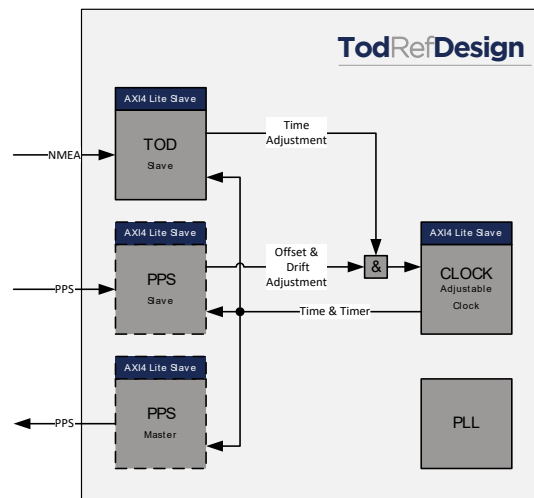


Figure 16: Reference Design

### 10.1 Intel/Altera: Terasic SocKit

The SocKit board is an FPGA board from Terasic Inc. with a Cyclone V SoC FPGA from Intel/Altera. (<http://www.terasic.com.tw/cgi-bin/page/archive.pl?Language=English&CategoryNo=205&No=816>)

1. Open Quartus 16.x

2. Open Project /TOD/Refdesign/Altera/SocKit/TodSlave/TodSlave.qpf
3. If the optional cores PPS Slave and PPS Master Clock are available add the files from the corresponding folders (PPS/Core, PPS/Library, PPS/Package and CLK/Library)
4. Change the generics (PpsMasterAvailable\_Gen, PpsSlaveAvailable\_Gen) in Quartus (in the settings menu, not in VHDL) to true for the optional cores that are available.
5. Rerun implementation
6. Download to FPGA via JTAG

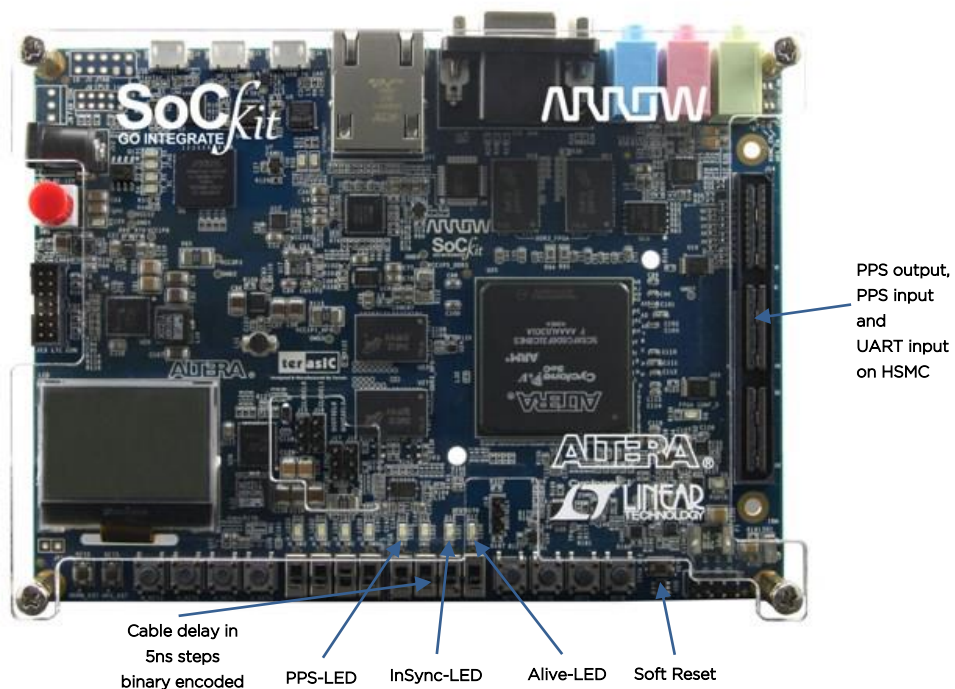


Figure 17: SocKit (source Terasic Inc)

For the ports on the HSMC connector the GPIO to HSMC adapter from Terasic Inc. was used.

## 10.2 AMD/Xilinx: Digilent Arty

The Arty board is an FPGA board from Digilent Inc. with an Artix7 FPGA from AMD/Xilinx. (<http://store.digilentinc.com/artix-7-fpga-development-board-for-makers-and-hobbyists/>)

1. Open Vivado 2019.1  
Note: If a different Vivado version is used, see chapter 10.3.

2. Run TCL script /TOD/Refdesign/Xilinx/Arty/TodSlave/TodSlave.tcl
  - a. This has to be run only the first time and will create a new Vivado Project
3. If the project has been created before open the project and do not rerun the project TCL
4. If the optional cores PPS Slave and PPS Master Clock are available add the files from the corresponding folders (PPS/Core, PPS/Library, PPS/Package and CLK/Library) to the corresponding Libraries (PpsLib and ClkLib).
5. Change the generics (PpsMasterAvailable\_Gen, PpsSlaveAvailable\_Gen) in Vivado (in the settings menu, not in VHDL) to true for the optional cores that are available.
6. Rerun implementation
7. Download to FPGA via JTAG

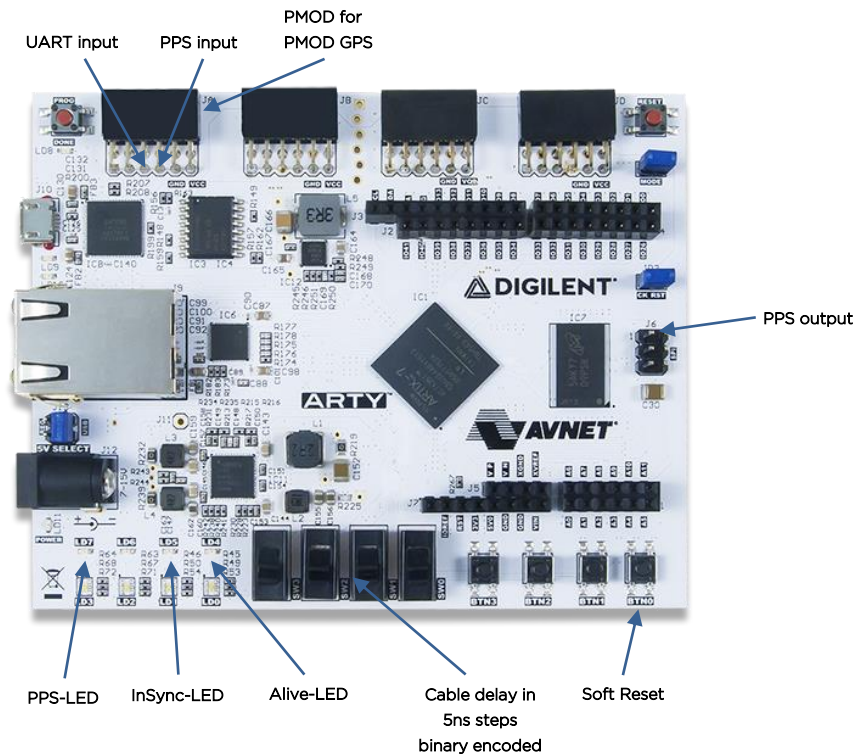


Figure 18: Arty (source Digilent Inc)

## 10.2.1 GPS receiver

As stated in earlier chapters the NMEA source often is a GPS receiver.

The GPS receiver used in the reference design is a PMOD GPS receiver from Digilent Inc. (<http://store.digilentinc.com/pmodgps-gps-receiver/>) which can be directly connected to the upper row of PMOD JA on the Arty. This receiver requires quite direct view to the sky, so an extension cable might be needed.

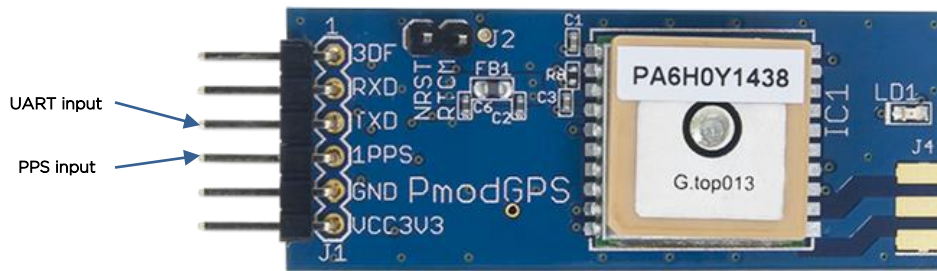


Figure 19: PMOD GPS (source Digilent Inc)

### 10.3 AMD/Xilinx : Vivado version

The provided TCL script for creation of the reference-design project is targeting AMD/Xilinx Vivado 2019.1.

If a lower Vivado version is used, it is recommended to upgrade to Vivado 2019.1 or higher.

If a higher Vivado version is used, the following steps are recommended:

- Before executing the project creation TCL script, the script's references of Vivado 2019 should be manually replaced to the current Vivado version. For example, if version Vivado 2022 is used, then:
  - The statement occurrences:
 

```
set_property flow "Vivado Synthesis 2019" $obj
```

 shall be replaced by:
 

```
set_property flow "Vivado Synthesis 2022" $obj
```
  - The statement occurrences:
 

```
set_property flow "Vivado Implementation 2019" $obj
```

 shall be replaced by:
 

```
set_property flow "Vivado Implementation 2022" $obj
```
- After executing the project creation TCL script, the AMD/Xilinx IP cores, such as the Clocking Wizard core, might be locked and a version upgrade might be required. To do so:
  1. At "Reports" menu, select "Report IP Status".
  2. At the opened "IP Status" window, select "Upgrade Selected". The tool will upgrade the version of the selected IP cores.

## A List of tables

Table 1:	Revision History.....	4
Table 2:	Definitions.....	8
Table 3:	Abbreviations .....	9
Table 4:	Register Set Overview .....	25
Table 5:	Parameters .....	43
Table 6:	Clk_Time_Type .....	43
Table 7:	Clk_UtcInfo_Type.....	44
Table 8:	Clk_TimeAdjustment_Type.....	44
Table 9:	Tod_SlaveStaticConfig_Type.....	46
Table 10:	Tod_SlaveStaticConfigVal_Type.....	46
Table 11:	Tod_GnssInfo_Type .....	48
Table 12:	Tod_SlaveStaticStatus_Type.....	48
Table 13:	Tod_SlaveStaticStatusVal_Type.....	49
Table 14:	TOD Slave Clock .....	56
Table 15:	RX Processor.....	62
Table 16:	UART Interface Adapter .....	65
Table 17:	Registerset .....	72
Table 18:	Clocks .....	75
Table 19:	Resets .....	76
Table 20:	Resource Usage Intel/Altera .....	77
Table 21:	Resource Usage AMD/Xilinx .....	77

## B List of figures

Figure 1:	Context Block Diagram .....	10
Figure 2:	Architecture Block Diagram.....	12
Figure 3:	NMEA to PPS alignment .....	15
Figure 4:	UBX NAV TIME UTC Frame format.....	18
Figure 5:	UBX NAV TIME UTC Frame format.....	19
Figure 6:	UBX to PPS alignment .....	20
Figure 7:	TSIP TIMING INFO Frame format .....	23
Figure 8:	TSIP to PPS alignment .....	24
Figure 9:	TOD Slave Clock .....	49
Figure 10:	RX Processor .....	57
Figure 11:	UART Interface Adapter .....	63
Figure 12:	Registerset .....	66

---

Figure 13:	Static Configuration.....	73
Figure 14:	AXI Configuration .....	73
Figure 15:	Testbench Framework .....	79
Figure 16:	Reference Design.....	81
Figure 17:	SockIt (source Terasic Inc).....	82
Figure 18:	Arty (source Digilent Inc) .....	83
Figure 19:	PMOD GPS (source Digilent Inc).....	84