


DL20 – Quick start Guide

v. 2021-1

Mads Rosenhøj Jeppesen, Sigurd Agerskov Madsen

July 9, 2021

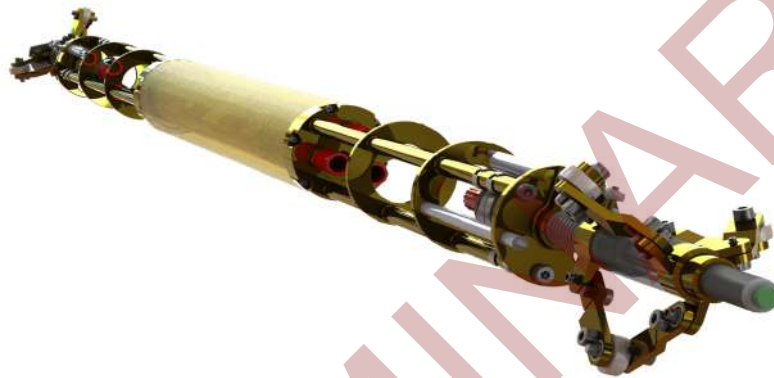

Introduction

The data logger (DL20) is the newest iteration of ice core drill logger. The newest version is an improvement of the previous system (DL81), optimized for measurement precision, modularity, and the possibility to execute special measurements. The DL20 measures pressure, inclination, azimuth angles, temperature, and hole diameter. The system contains the following sensors: 2x ISD4000, 1x ISM3D, 2x linear transducers, 1x end stop button, 1x end thermistor. The intended communication is 375VDC power line using a MM74HC942N modem, this is however not implemented in the current setup, instead a 15VDC supply is used. Data is logged on local SD storage and broadcasted via modem. Data stream can be monitored live via modem once 375VDC is implemented. Stored data can be downloaded using DL20 DG.

Contents

1	Overview of DL20 Device	3
2	Assembly	4
2.1	Electrical Housing	4
2.2	Bottom Caliper	5
2.3	Top Caliper	6
2.4	Fully assembled	8
3	Data Logging	9
3.1	Starting data logging	9
3.2	Data file format	10
4	Using DL20 DG	11
4.1	Connecting the DL20 DG	11
5	Downloading data files from DL20	14
5.1	Installing DL20 DG app	14
5.2	Installing CH340 Driver	14
5.3	Starting DL20 DG app	14
5.4	Downloading a datafile	16
5.5	Deleting a datafile	17
6	ISM3D calibration	18
6.1	Installing seaView	18
6.2	Using seaView	18
7	Advanced Features	18
7.1	DL20 Software	18
8	Appendix	19
8.1	Prerequisites to run DL20 DG app	19
8.2	Common Errors	19
8.2.1	DL20 - Data logging not starting	19
8.2.2	DL20 - No audible sound from system	19
8.2.3	DL20 - Continue beeping after Start Button Pressed	19
8.2.4	DL20 - "SD connection error" or no files generated	20
8.2.5	DL20 DG app - Connection Error	20
8.2.6	DL20 DG app - SD card Connection Error	20
8.2.7	DL20 DG app - System Connected, no files found	21
8.2.8	SD Card won't stay inserted in SD reader	21
8.3	How to install and update CH340 drivers	22

1 Overview of DL20 Device

The DL20 is shown in Figure 1. It has four main components; Electrical Housing (A), pressure chamber (B), bottom caliper (C), and top caliper (D). The system has and two external connections, main power (15VDC) and data connection for the DL20 DG.



Figure 1: DL20 Device.

2 Assembly

2.1 Electrical Housing

The electrical housing (Component A) is mounted inside the pressure chamber (Component B), by sliding it inside the pressure chamber, apply light pressure.

Take extra care not to damage the end flange of pressure chamber during installation
Do not bend electrical housing or cables during installation.



Figure 2: DL20 Assembly, electrical housing (B), pressure chamber (A).

2.2 Bottom Caliper

1. The bottom caliper (Component C) is connected to the Bottom side of the electrical housing and pressure chamber (Component B).



Figure 3: DL20 Assembly, bottom caliper.

2. The correct side of the electrical housing is marked **BOTTOM**, connect cables between the electrical housing and bottom caliper.



Figure 4: DL20 Assembly, bottom markings on electrical housing and Bottom caliper.

3. Cables are twisted and fitted inside the pressure chamber housing. All 6 Bolts are tightened, fastening the caliper to the pressure chamber.

Make sure cables are not clamped during installation.

Bolts are tightened to 3.2 Nm

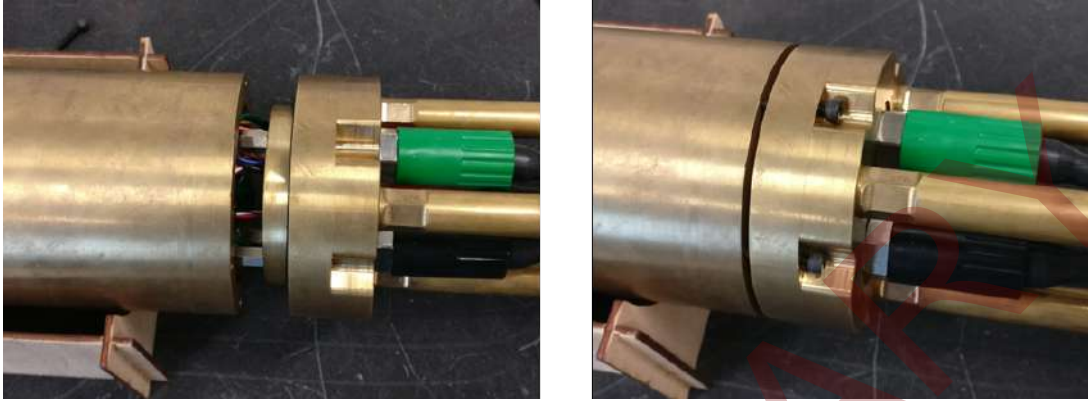


Figure 5: DL20 Assembly, fastening.

2.3 Top Caliper

1. The top caliper (Component D) is connected to the Top side of the electrical housing (Component B)



Figure 6: DL20 Assembly, top caliper.

2. The correct side of the electrical housing is marked **TOP**, connect cables between the electrical housing and top caliper.



Figure 7: DL20 Assembly, top markings on electrical housing and Top caliper.

3. Cables are twisted and fitted inside the pressure chamber housing. All 6 Bolts are tightened, fastening the caliper to the pressure chamber.

Make sure cables are not clamped during installation.

Bolts are tightened to 3.2 Nm



Figure 8: DL20 Assembly, fastening.

2.4 Fully assembled

DL20 fully assembled.



Figure 9: DL20 Assembled.

3 Data Logging

3.1 Starting data logging

To start data logging:

■ Warning: Data logging can not start with DL20 DG data cable connected!

1. Power on the system, supply **15VDC** to Main Power input ¹.



Figure 10: DL20 Main Power (15VDC).

2. Start data logging by pressing and holding the End Stop button for >3 seconds².

■ See appendix if system continues beeping or if no sound is heard



Figure 11: DL20 End stop button, press and hold 3 sec to start data logging.

¹Two beeps should be heard (1 high and 1 low note) followed by a low note every 2 sec.

²Two high pitch beeps notes should be heard followed by silence.

3.2 Data file format

The data files generated by the DL20 is in the following format:

QQQQQ FFFFF GGGGG VVVVV B \$ISHPR, hhh.hh, ll.ll, rrr.rr YY \$ISHPR, ddd.ddd, M, ppp.pppp, B, tt.tt, C xx \$ISHPR, DDD.DDD, M, PPP.PPPP, B, TT.TT, C XX	
QQQQQ	= Incrementing Sample number
FFFFF	= Transducer 1 (Top) digital value for position
GGGGG	= Transducer 2 (Bottom) digital value for position
VVVVV	= Temperature digital voltage measurement
B	= End Stop button value
\$ISHPR	= ISM3D measurements
hhh.hh	= Heading in degrees
ll.ll	= Pitch in degrees
rrr.rr	= Roll in degrees
YY	= NMEA standard checksum
\$ISHPR	= ISD4000 1 (Top) measurements
ddd.ddd,M,	= Depth in Meters
ppp.pppp,B,	= Pressure in Bar
tt.tt,C	= Temperature in degrees Celsius
xx	= NMEA standard checksum
\$ISHPR	= ISD4000 2 (Bottom) measurements
DDD.DDD,M,	= Depth in Meters
PPP.PPPP,B,	= Pressure in Bar
TT.TT,C	= Temperature in degrees Celsius
XX	= NMEA standard checksum

4 Using DL20 DG

Use the DL20 DG to calibrate the on-board ISM3D or to download data from the DL20's local storage.

■ The DL20 DG can **not** be used when data logging is active!



Figure 12: DL20 DG

4.1 Connecting the DL20 DG

To connect the DL20 DG:

1. Disconnect the main power from the DL20



Figure 13: DL20 Main Power.

2. Connect DL20 DG data cable to the DL20 bottom side

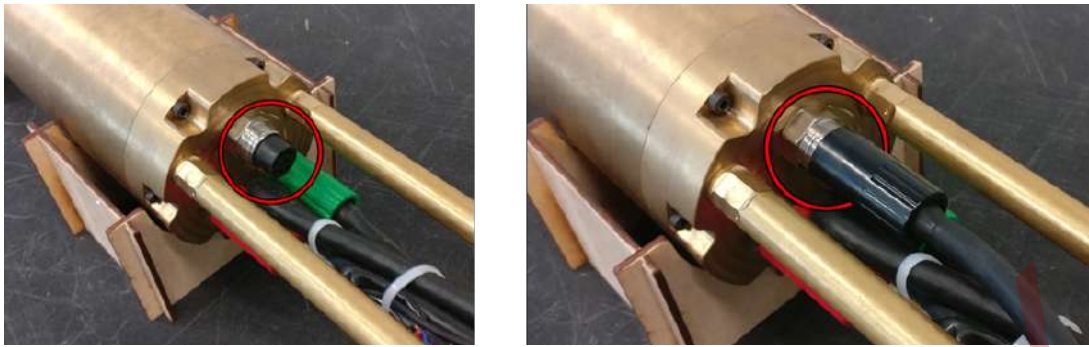


Figure 14: Connecting DL20 DG data cable to DL20.

3. Connect DL20 DG data cable to the DL20 DG

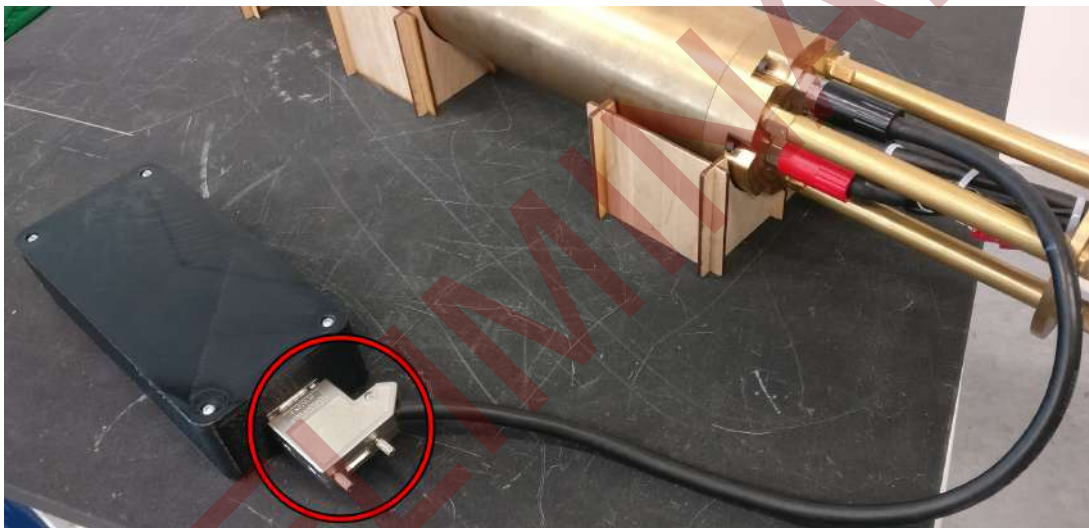


Figure 15: DL20 connection to DL20 DG.

4. Connect DL20 DG to a PC using USB cable



Figure 16: DL20 DG connection to PC.

- To access onboard ISM3D use the USB port marked **ISM**.
- To access DL20 local storage use USB port marked **SD**.



Figure 17: DL20 DG USB ports.

5 Downloading data files from DL20

5.1 Installing DL20 DG app

Download and install the DL20 DG app:

1. Download DL20 DG installer from [1].
2. Run installer as admin and follow instructions

5.2 Installing CH340 Driver

Download and install CH340 drivers to be able to connect to the DL20 DG.


1. Download CH34x drivers from [3]
2. Extract files and install using .exe file

■ See appendix for instruction if PC does not automatically update device drivers after install.


5.3 Starting DL20 DG app

To use the DL20 DG app:


1. Connect DL20 DG and use USB port marked **SD**.
2. Start DL20 DG app.
3. System will automatically detect and connect to the DL20 DG device

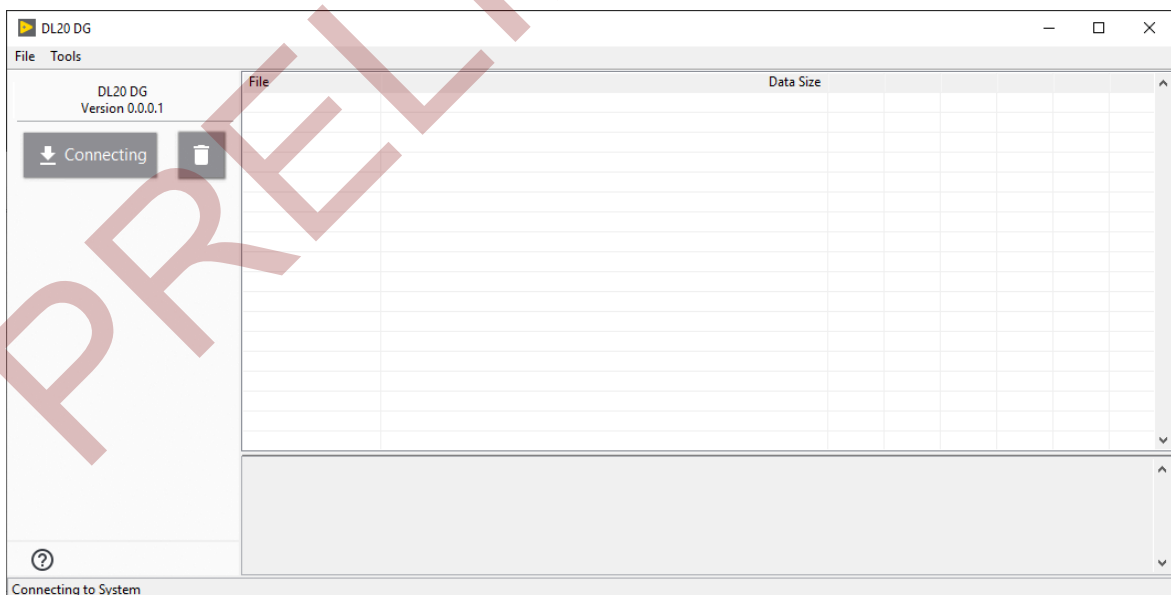

4. Wait for system to initialize, if connection is established a list of data files will display

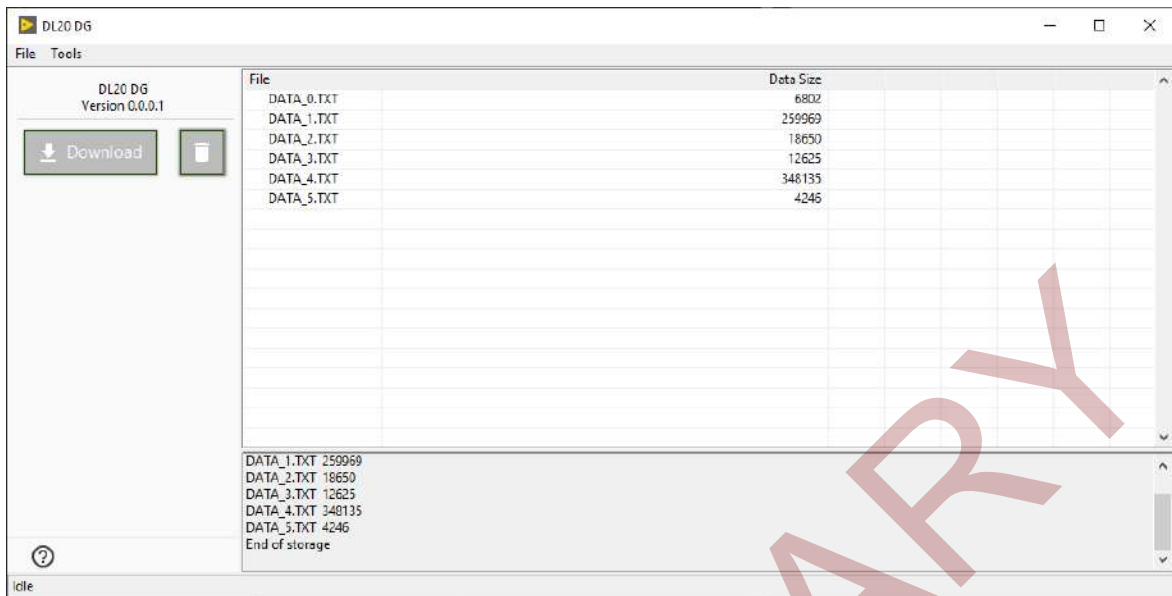

5. Errors will be displayed if initialization fails

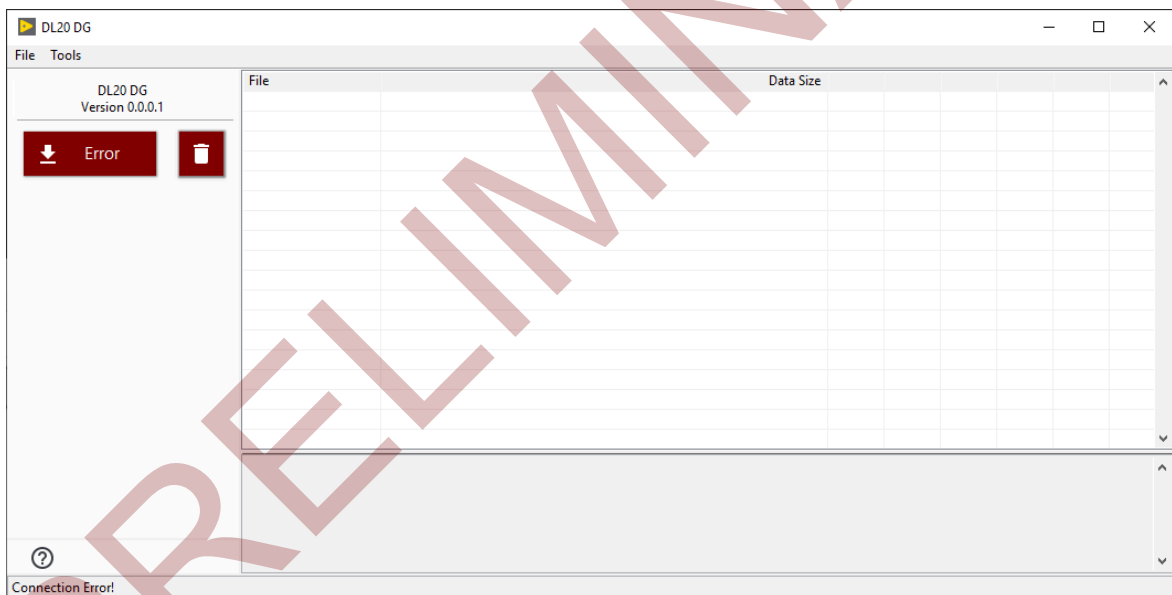


- See appendix for list of common errors.


5.4 Downloading a datafile

To download a datafile from the DL20 local storage:


1. Select file from list and press **Download**

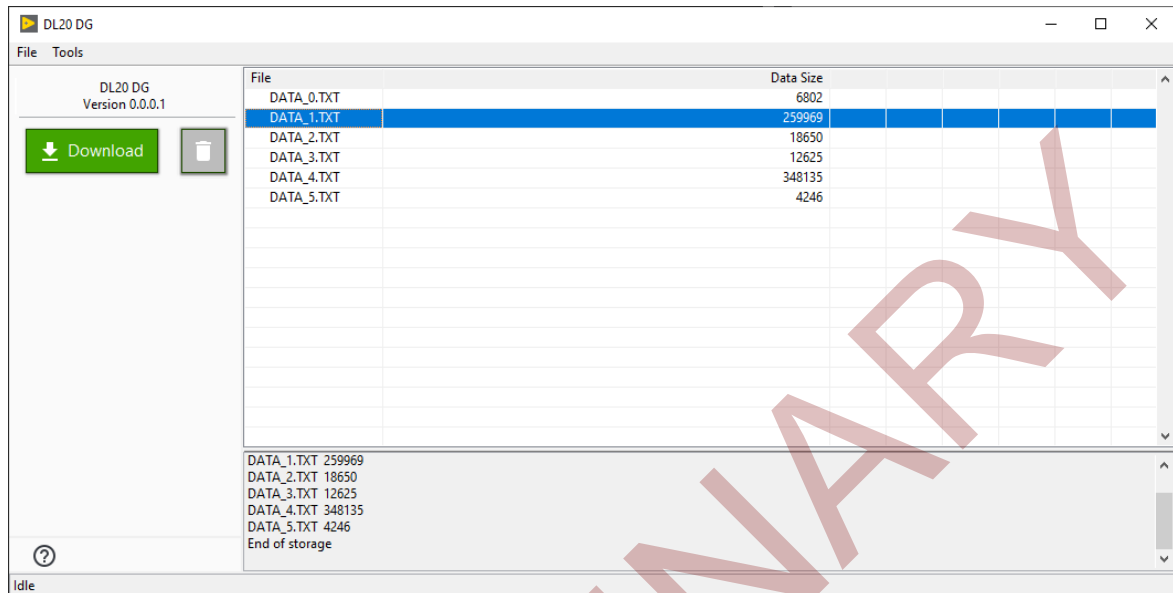

2. Choose a file location and name and confirm

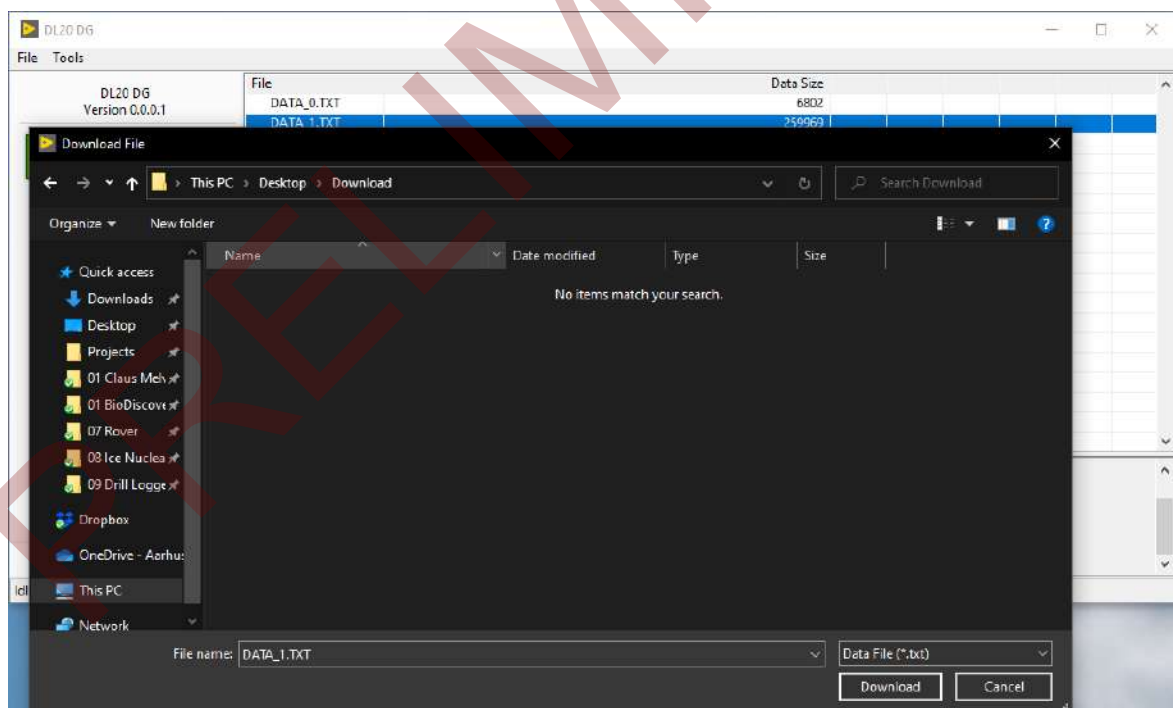


3. Wait for progress bar to fill during download

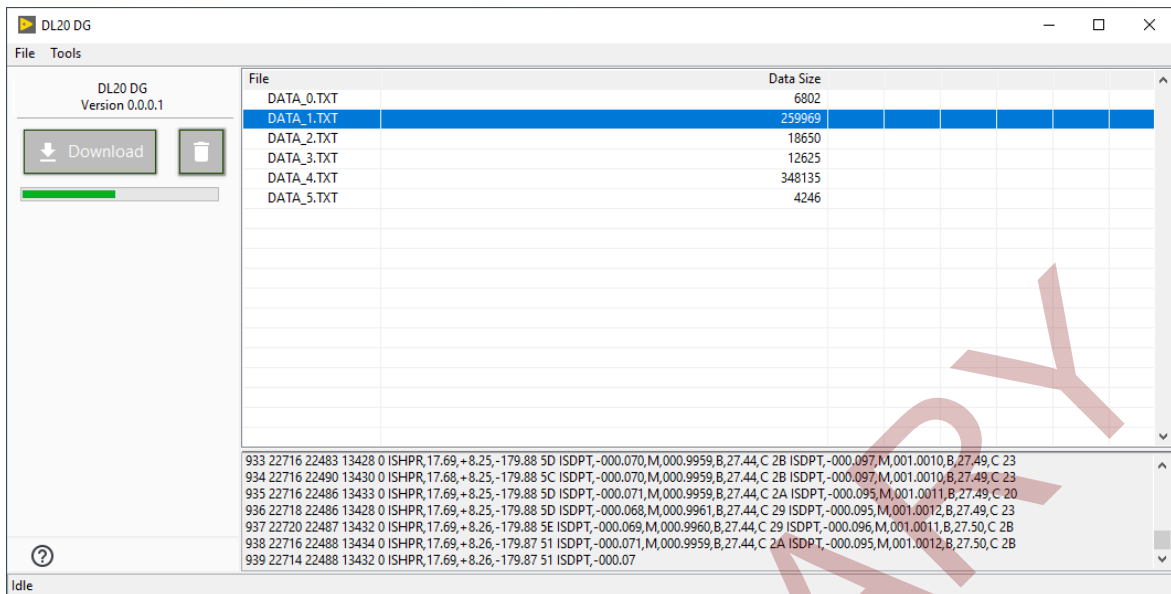

5.5 Deleting a datafile

To delete a datafile on the DL20 local storage:

1. Select file from list and press **Delete** icon

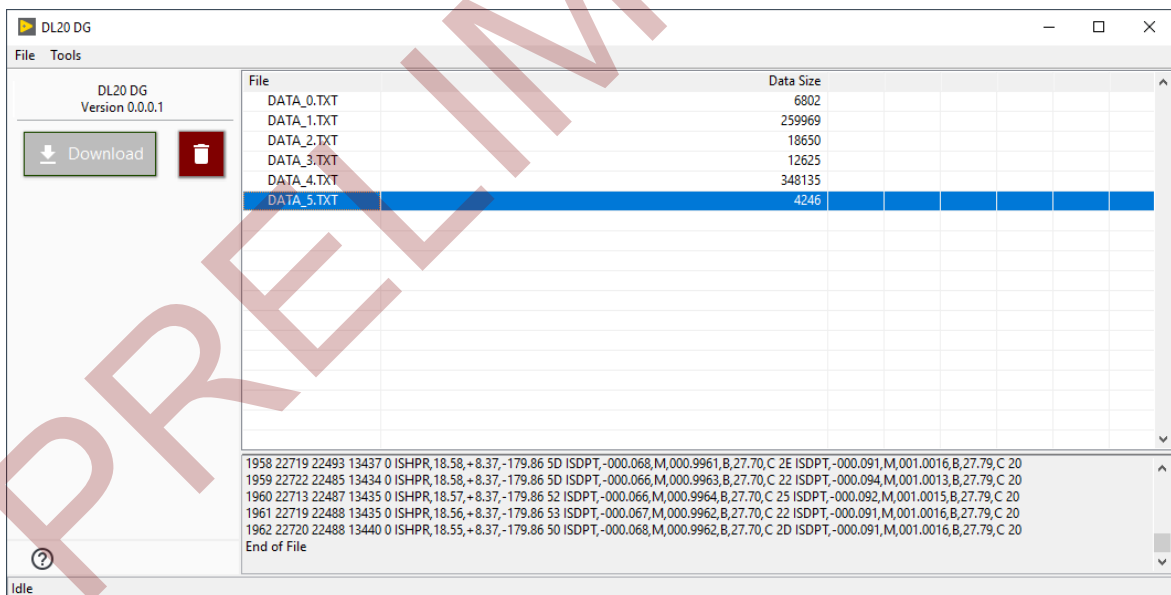

6 ISM3D calibration

6.1 Installing seaView

Calibration software made by impactsubsea:

1. Download **seaView v1.9.0** from [4]
2. Run installer as admin and follow instructions

6.2 Using seaView

To calibrate the onboard ISM3D:

1. Connect DL20 DG and use the USB port marked **ISM**
2. Start seaView

■ For instructions on how to use seaView see [4]

7 Advanced Features

7.1 DL20 Software

The DL20 firmware[2] has two possible modes, PC_COMM and MODEM_COMM. The mode is selected in the preamble of the software by uncommenting either PC_COMM or MODEM_COMM.

```
1 // #define MODEM_COMM 1 // <-- Uncomment for Low speed modem communication
2 #define PC_COMM 1 // <-- Uncomment for High speed PC communication
```

PC_COMM broadcasts high speed data via the internal processors USB port using this mode disables the onboard modem broadcast. In this mode the logging (and broadcast speed) is 2 Hz. The frequency can be set by increasing the predetermined sample rate in the ISM3D and the two ISD4000. The broadcast is set to a baud rate of 115200 resulting in a maximum of 576 kbps. One data package contains 133 Bytes, resulting in a maximum speed of 540 Hz. The ISM3D is rated to 250 Hz and the ISD4000 is rated to 100 Hz.

■ The highest sample rate in this mode is 100 Hz.

MODEM_COMM broadcasts low speed data via the onboard modem, using this mode disables the high speed USB broadcast. In this mode the logging (and broadcast speed) is 0.5 Hz. The modem has a maximum baud rate of 600, resulting in a maximum of 75 Bps. As one data package 133 Bytes is will take 1.8 sec to transmit.

■ The highest sample rate in this mode is 0.5 Hz.

The sample rate can be adjusted by altering the `sampleDt` variable, which is the time between each logged data.

The frequency at which data is broadcasted (either via PC or Modem communication) can be altered using the `surfaceFrequency` variable.

8 Appendix

8.1 Prerequisites to run DL20 DG app


To run DL20 DG app, you must have,

1. CH340 drivers properly installed on your PC.
2. DL20 DG is connected to PC via USB cable.
3. DL20 DG is connected to the DL20 via the data cable
4. DL20 main power disconnected

8.2 Common Errors

8.2.1 DL20 - Data logging not starting

- Make sure Power is supplied to system (15 VDC).
- Make sure End Stop Button is pressed for >3 seconds after system is powered up.
- Make sure DL20 DG data cable is disconnected.

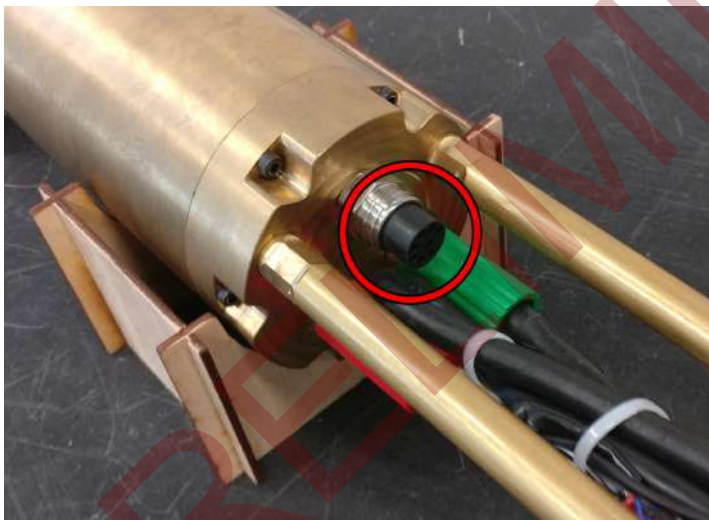

- Restart data logging following procedure explained in section 3.1 Starting data logging.

8.2.2 DL20 - No audible sound from system

- Make sure Power is supplied to system (15 VDC).
- Sound might be too low to hear, listen near end flanges of pressure chamber.

8.2.3 DL20 - Continue beeping after Start Button Pressed


- If beeps are long, system can't connect to local storage (See 8.2.4 DL20 - "SD connection error" or no files generated).
- If beeps are short with long delay data logging hasn't started (See 8.2.1 DL20 - Data logging not starting)

8.2.4 DL20 - "SD connection error" or no files generated

- Make sure SD card is inserted fully into SD card reader (See 8.3 How to install and update CH340 drivers).
- Restart system following procedure explained in section 3.1 Starting data logging.
- If data logging start does not start reformat SD card to FAT16 format.

8.2.5 DL20 DG app - Connection Error


- Make sure DL20 DG is connected to PC via USB port marked **SD**.
- Make sure DL20 main power is disconnected.
- Possible fix:
 1. Disconnect USB from DL20 DG.
 2. Reconnect DL20 DG to PC via USB port marked **SD**.
 3. Press **Tools** > **Reconnect Systems**

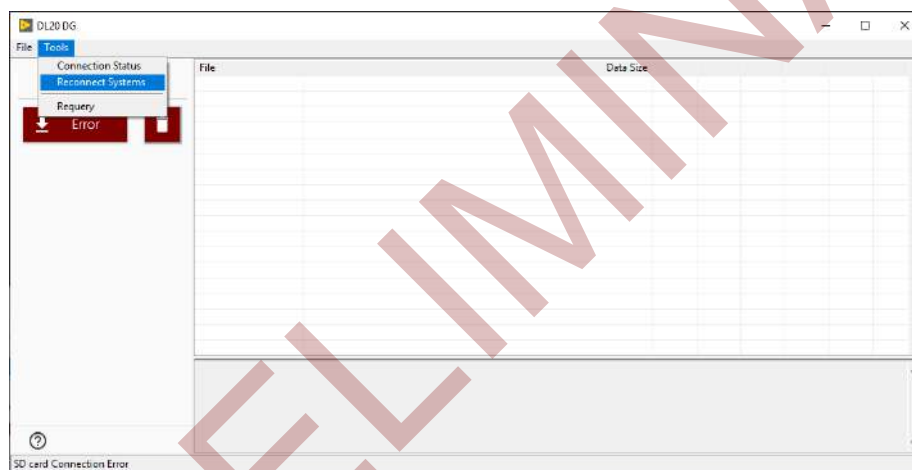

8.2.6 DL20 DG app - SD card Connection Error

- Make sure DL20 DG is connected to the DL20
- Make sure DL20 main power is disconnected
- Possible fix:
 1. Disconnect USB from DL20 DG
 2. Reconnect DL20 DG to PC via USB port marked **SD**.

3. Press **Tools** > **Reconnect Systems**

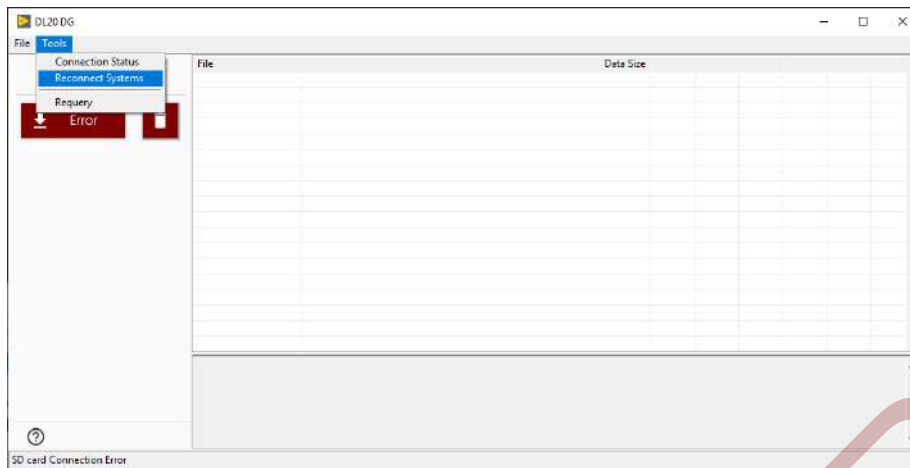


8.2.7 DL20 DG app - System Connected, no files found

- DL20 local storage might be empty.
- If system is connected and nothing happens, press **Tools** > **Requery**

8.2.8 SD Card won't stay inserted in SD reader

- Push until a audible *click* to release/lock SD card
- Possible fix:
 - Apply gentle pressure to SD card reader

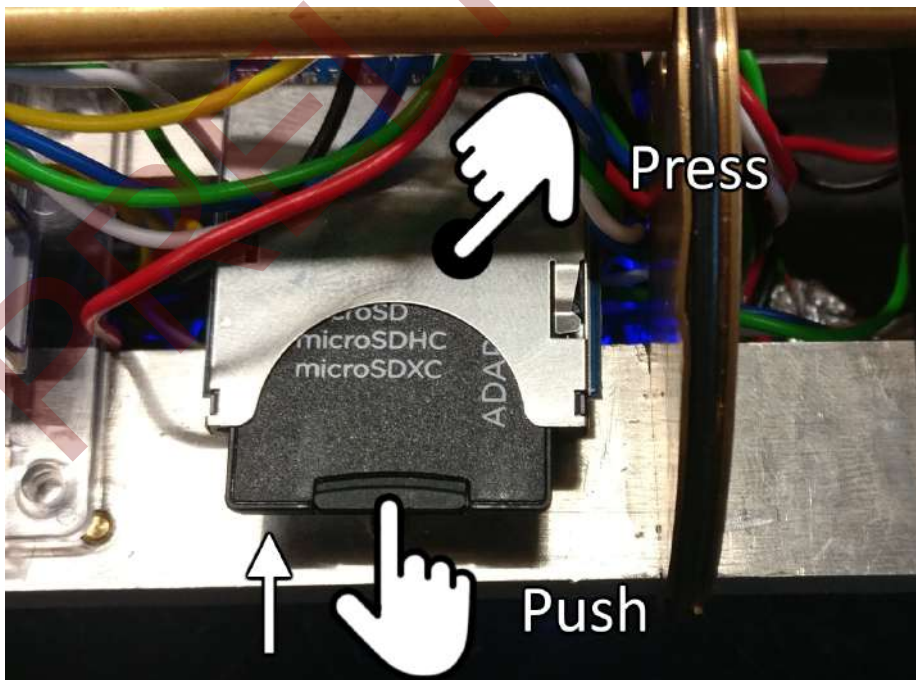


8.3 How to install and update CH340 drivers


1. Download and install CH34x driver [3]
2. Plug in DL20 data grabber (SD) to PC




3. Open Device manager, right click USB serial

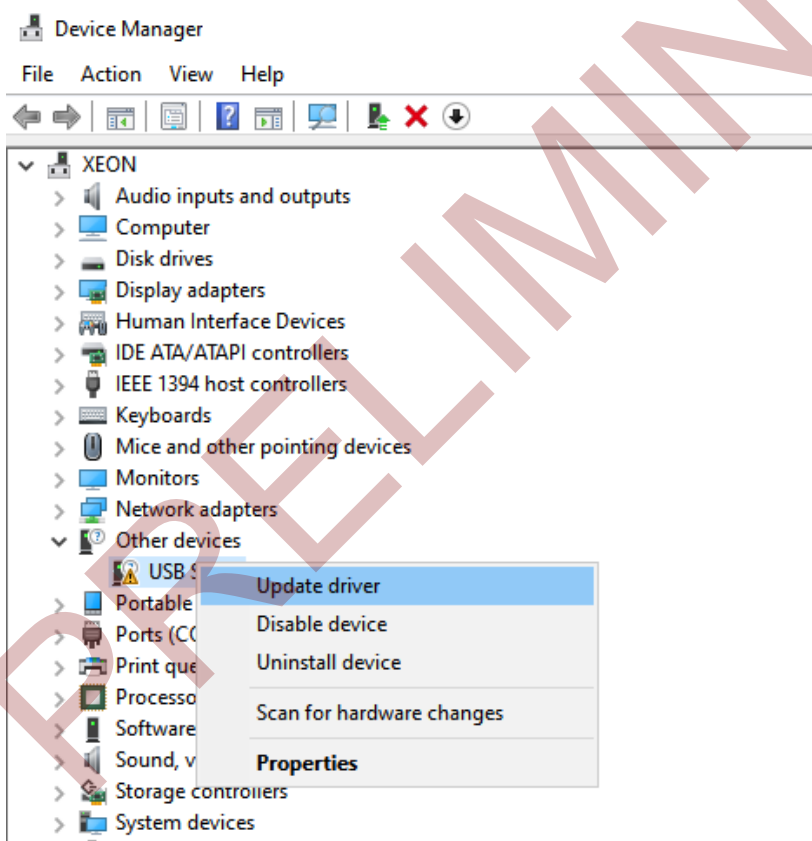


4. Browse my computer for drivers

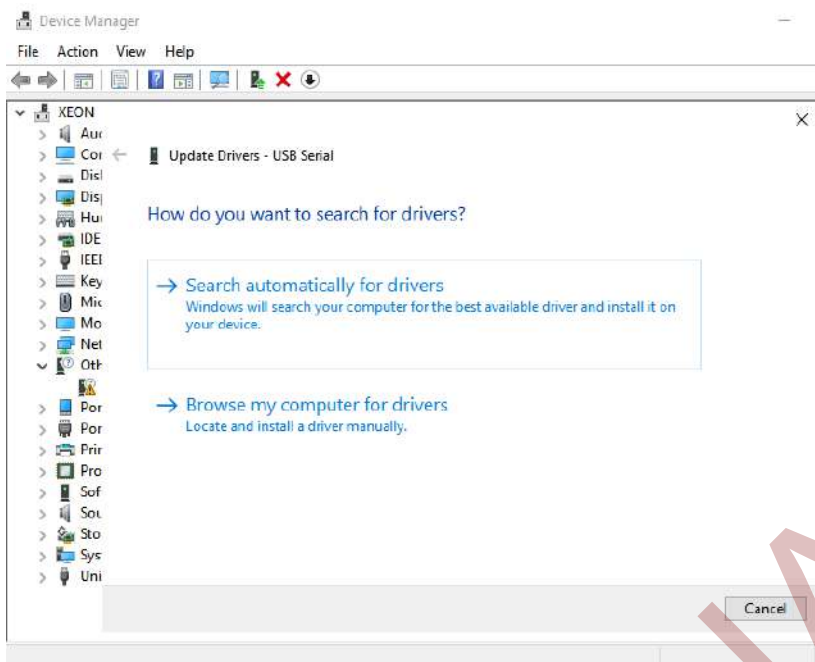


5. Let me pick from a list of available drivers on my computer

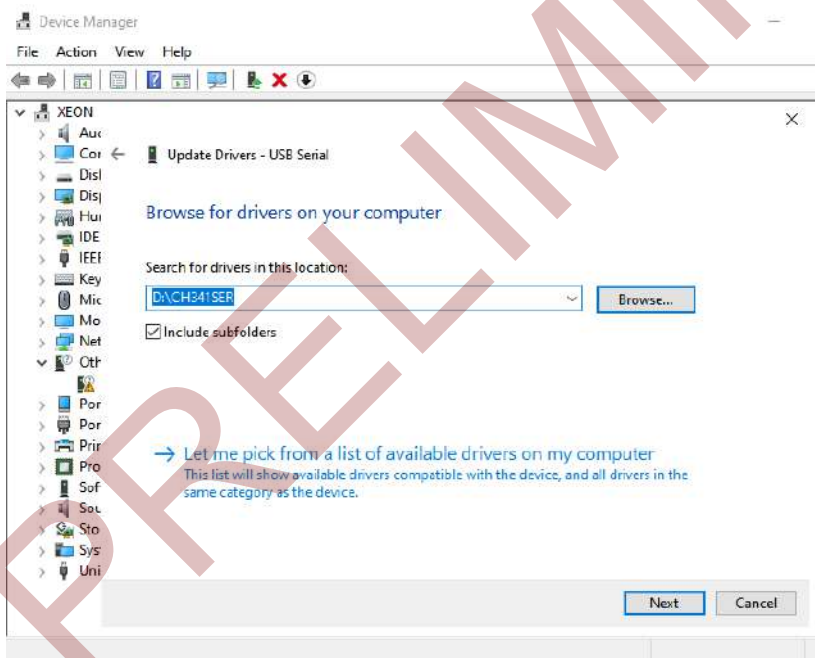


6. Select USB-SERIAL CH340, Next

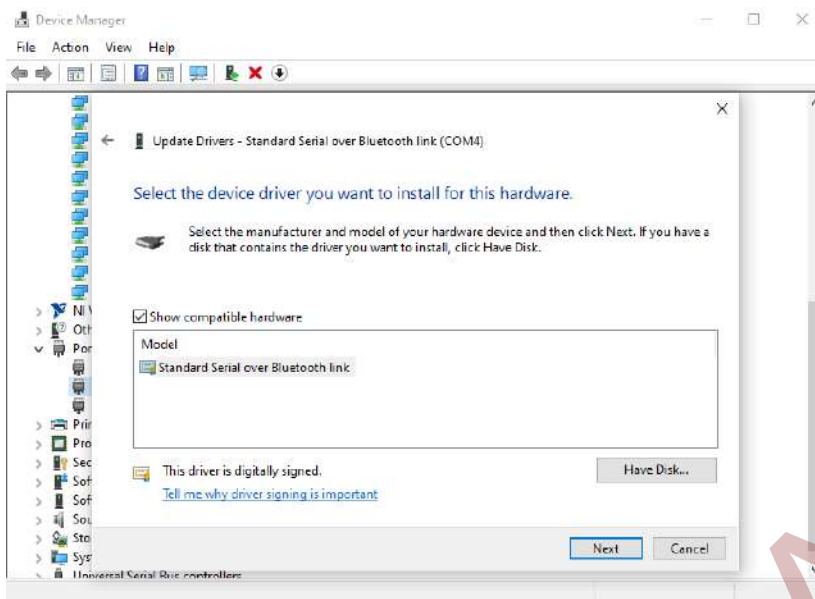

7. Finished, Close

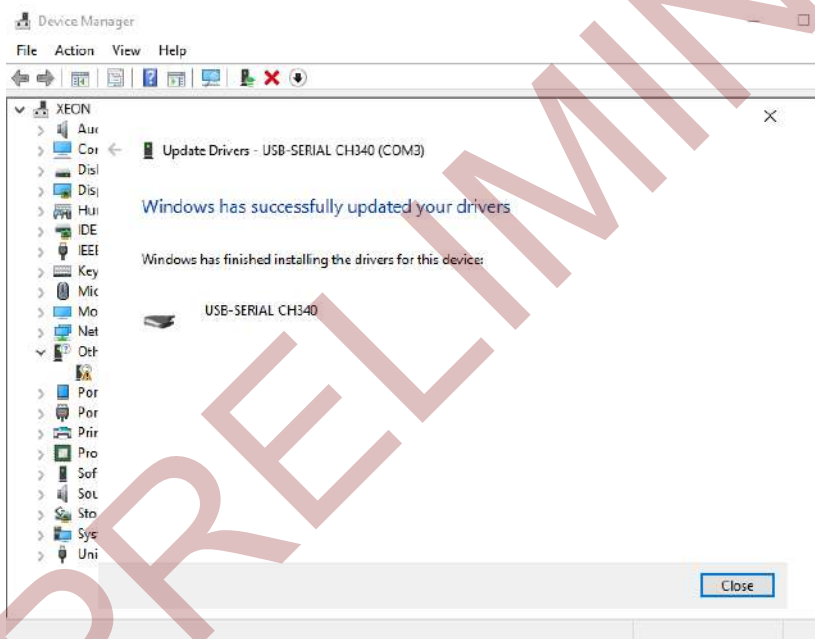

8. CH340 driver installed and working

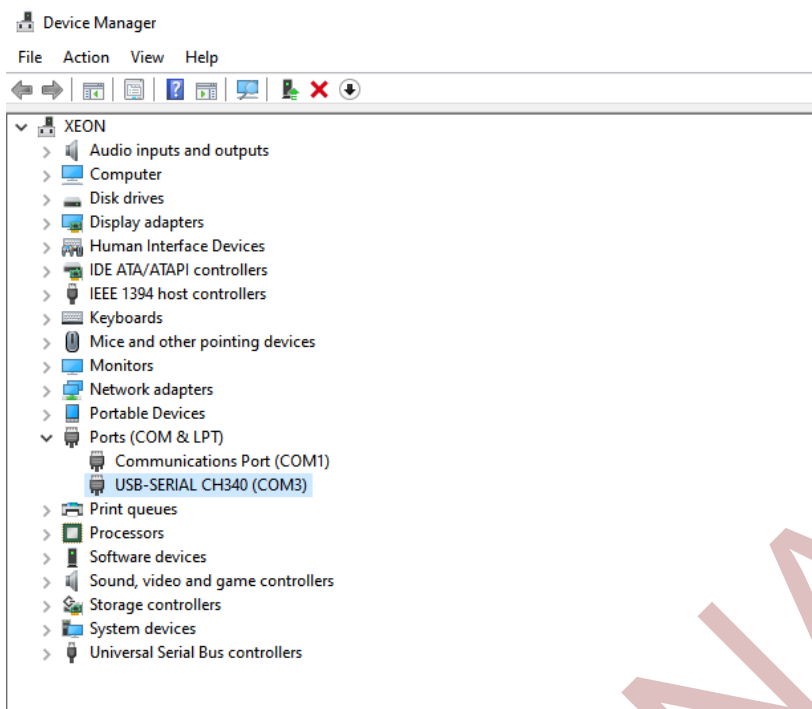

References

- [1] <https://github.com/MadsR/DL20/releases/>
- [2] <https://github.com/MadsR/DL20>
- [3] https://sparks.gogo.co.nz/assets/_site_/downloads/CH34x_Install_Windows_v3_4.zip
- [4] <https://www.impactsubsea.co.uk/seaview/>