


MEGR3092 Advanced Motorsports Instrumentation. Raspberry pi project.

V0.40 11/8/17

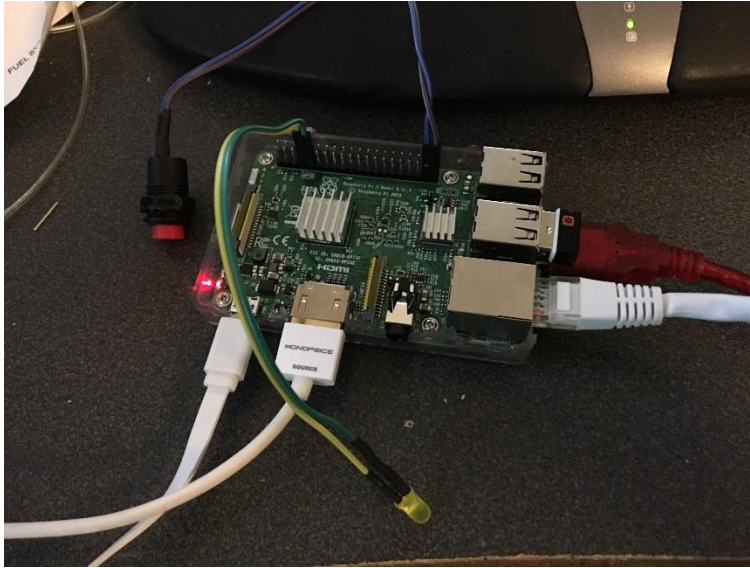

Logger build guide:

Parts:

USB-OBD cable Scan tool.net version (red)

Raspberry pi 3

UBLOX Neo 7 chipset USB GPS

Raspberry pi sense hat

HDMI LCD

Logitech K400 or similar keyboard/trackpad

****** High quality micro USB cables required, low quality cables can result it random reboots. Shorter cables generally have less voltage drop and are more reliable. A yellow lightning bolt on the upper right hand screen indicates low voltage. Undersized USB power supplies can also be problematic.

You will likely find this project easier with a HDMI display and a usb keyboard.

If those are not available, you should be able to login via SSH using a program called Putty. The Pi supports Bonjour by default. This means you can access it by typing the hostname.local from FTP, SSH or other client. Your hostname is likely obdpi.local if you have modified it. If you have not, it will default to raspberrypi.local

For Example, use filezilla to download you logs over a network connection. Hostname:Sftp://obdpi.local
User:pi Pw:gofast You cannot recover this password if you forget and you must start over. Proceed with caution.

You can use realVNC to remotely login via a phone or PC once your pi is setup and the VNC is enabled.

You will need to know the IP address or the hostname of the pi (as discussed above) to continue and login to your pi via putty over Ethernet.

Install NOOBS to your SD card first. Download NOOBS to a PC, then copy the unzipped files to the blank SD card.

<https://www.raspberrypi.org/downloads/noobs/>

Connect pi to hdmi, micro usb power and attach keyboard. A TV with HDMI works great as a monitor.

Install raspbian with pixel if you installed noobs.

(20-30 minutes)

Login the first time.

Open terminal. You now will see a “console”

Run “sudo raspi-config”

Change password. For the class images will have a password of “gofast”

“sudo passwd root”

“Sudo passwd pi”

Using sudo raspi-config under advanced, Change hostname to “obdpi”

Change keyboard to US, English.

Turn on rdp (remote desktop)

Sudo raspi-config and open advanced settings.

Turn on RDP

Turn on SSH

Enable SPI

Enable I2C

If you have a custom HDMI LCD, you need to edit the config.txt file in /boot

This file can also be edited from a PC on the SD card. Do not reformat your card on the PC if prompted.

Use this tutorial and install the software

<http://www.cowfishstudios.com/blog/obd-pi-raspberry-pi-displaying-car-diagnostics-obd-ii-data-on-an-aftermarket-head-unit>

Please use This for the git repository instead!

<https://github.com/macsbost/pyobd-pi.git>

from the pi directory run this command to give write permissions and access to every user

```
# sudo chmod 777 pyobd-pi
```

Change the Directory to go into the pyobd-pi folder

```
# cd pyobd-pi
```

Make a log directory

```
# sudo mkdir log
```

Run with a monitor attached or remote desktop in.

```
# python pyobd
```

select configure and choose the USBtty0 as the device.

**** baud rate in obd_io.py was changed to 115200 for our hardware. Other hardware may need 38400**

To test a connection, open up a terminal and run

```
:# cd pyobd-pi
```

```
# sudo su
```

```
# python obd_gui.py
```

Use the Left and Right arrow key to cycle through the gauge display.

Note: Left and Right mouse click will also work

To exit the program just press Control and C or Alt and Esc.

Install GPSD (GPS Daemon) 11/1/2017

Your ublox Neo 7 chipset GPS when plugged into your Pi will show up as `/dev/ttyACM0`

Linux devices show up as “folders”

```
# sudo apt-get install gpsd gpsd-clients python-gps
```

```
# sudo nano /etc/default/gpsd
```

Make sure the following lines are there:

```
START_DAEMON="true"
```

```
GPSD_OPTIONS=""
```

```
DEVICES="/dev/ttyACM0"
```

```
USB AUTO="true"
```

Save, then

```
# sudo /etc/init.d/gpsd restart
```

You can view the raw gps data by typing

```
# cat /dev/ttyACM0
```

You should see some GPRMC and other messages fly by rapidly.

Press Control C to exit.

You can run

```
# gpsmon
```

```
# xgps
```

```
# cgps
```

To view parsed gps data.

```
pi@raspberrypi: ~  
localhost:2947: Generic NMEA>  
Time: 2014-12-26T22:01:14.000Z Lat: 40 43' 34.176" N Lon: 74 00' 17.291" W  
Cooked PVT  
GPGLL GPGGA GPRMC GPVTG GPGSV  
Sentences  
Ch PRN Az El S/N Time: 220114.000 Time: 220114.000  
0 22 194 77 22 Latitude: 4043.5696 N Latitude: 4043.5696  
1 14 323 66 25 Longitude: 07400.2882 W Longitude: 07400.2882  
2 18 148 41 23 Speed: 0.25 Altitude: 33.5  
3 25 125 38 24 Course: 145.29 Quality: 2 Sats: 09  
4 31 225 34 36 Status: A FAA: D HDOP: 0.91  
5 12 74 34 38 MagVar: RMC Geoid: -34.2  
6 51 225 31 32 Mode: A 3 UTC: RMS:  
7 4 296 23 23 Sats: 22 12 31 24 32 25 4 1 MAJ: MIN:  
8 24 49 22 32 DOP: H=0.91 V=0.86 P=1.26 ORI: LAT:  
9 32 313 16 26 LON: ALT:  
10 1 323 9 21 GST  
11 11 302 8 0  
GSV  
(68) $GPGSV,3,3,12,24,22,049,32,32,16,313,26,01,09,323,21,11,08,302,*73\x0d\x0a  
(72) $GPRMC,220113.000,A,4043.5697,N,07400.2883,W,0.25,138.90,261214,,,D*70\x0d\x0a  
(39) $GPVTG,138.90,T,M,0.25,N,0.47,K,D*3F\x0d\x0a  
(82) $GPGGA,220114.000,4043.5696,N,07400.2882,W,2,09,0.91,33.5,M,-34.2,M,0000,00  
00*69\x0d\x0a  
(60) $GPGSA,A,3,22,12,31,24,32,25,04,18,14,,,1.26,0.91,0.86*08\x0d\x0a  
(72) $GPRMC,220114.000,A,4043.5696,N,07400.2882,W,0.25,145.29,261214,,,D*7F\x0d\x0a  
x0a
```

By using GPSD, many programs can access the gps hardware at one time. GPS can even be accessed remotely over an ethernet connection.

https://cdn-learn.adafruit.com/assets/assets/000/021/936/original/adafruit_products_gpsmon.png?1419631337

If you would like to log your data run:

```
# cd pyobd-pi
```

```
# python obdlog.py
```

Or For the latest version that also enables GPS and the rpi sense hat

```
# python obdgpslog17.py
```

To exit the program just press Control and C or Alt and Esc. You can close the window with a mouse and the "X"

The logged data file will be saved under:

```
/home/username/pyobd-pi/log/
```

A new file is started every time the pi boots and the python script loads.

Press up on the sense hat joystick to start logging.

Press down on the sense hat joystick to stop logging.

You can easily copy files from this directory to your google drive using the pi's web browser. Once on your drive they can be viewed from a PC.

data can be analyzed with megalogviewer, dataloglab or modified and viewed with McLaren Atlas.

Racerender can be used to overlay logged CSV data with video.

To update your operating system periodically run the following commands.

```
sudo apt-get update  
sudo apt-get upgrade  
sudo rpi-update
```

OBD-Pi: Raspberry Pi Displaying Car Diagnostics (OBD-II) Data On An Aftermarket Head Unit

In this tutorial you will learn how to connect your Raspberry Pi to a Bluetooth OBD-II adapter and display realtime engine data to your cars aftermarket head unit.

Hardware Required:

1. Raspberry Pi
2. Aftermarket head unit (Note: Must support Auxiliary input)
3. Plugable USB Bluetooth 4.0 Low Energy Micro Adapter
4. 2A Car Supply / Switch or Micro USB Car Charger
5. ELM327 Bluetooth Adapter or ELM327 USB Cable
6. RCA cable
7. Keyboard (*optional)

What is OBD-II?

OBD stands for On-Board Diagnostics, and this standard connector has been mandated in the US since 1996. Now you can think of OBD-II as an on-board computer system that is responsible for monitoring your vehicle's engine, transmission, and emissions control components.

Vehicles that comply with the OBD-II standards will have a data connector within about 2 feet of the steering wheel. The OBD connector is officially called a SAE J1962 Diagnostic Connector, but is also known by DLC, OBD Port, or OBD connector. It has positions for 16 pins.

pyOBD?

pyOBD (aka pyOBD-II or pyOBD2) is an open source OBD-II (SAE-J1979) compliant scantool software written entirely in Python. It is designed to interface with low-cost ELM 32x OBD-II diagnostic interfaces such as ELM-USB. It will basically allow you to talk to your car's ECU, display fault codes, display measured values, read status tests, etc.

I took a fork of pyOBD's software from their GitHub repository, <https://github.com/peterh/pyobd>, and used this as the basis for my program.

The program will connect through the OBD-II interface, display the gauges available dependent on the particular vehicle and display realtime engine data to the cars aftermarket head unit in an interactive GUI.

Software Installation

Before you start you will need a working install of Raspbian with network access.

We'll be doing this from a console cable connection, but you can just as easily do it from the direct HDMI/TV console or by SSH'ing in. Whatever gets you to a shell will work!

Note: For the following command line instructions, do not type the '#', that is only to indicate that it is a command to enter.

Before proceeding, run:

```
# sudo apt-get update
# sudo apt-get upgrade
# sudo apt-get autoremove
# sudo reboot
```


Install these components using the command:

```
# sudo apt-get install python-serial
# sudo apt-get install bluetooth (bluez-utils)? blueman
# sudo apt-get install python-wxgtk2.8 python-wxtools wx2.8-i18n libwxgtk2.8-dev
# sudo apt-get install git-core
# sudo reboot
```

Next, download the OBD-Pi Software direct from GitHub
(<https://github.com/Pbartek/pyobd-pi.git>)

Or using the command:

```
# cd ~
# git clone https://github.com/Pbartek/pyobd-pi.git
```

Vehicle Installation

The vehicle installation is quite simple.

1. Insert the USB Bluetooth dongle into the Raspberry Pi along with the SD card.
2. Insert the OBD-II Bluetooth adapter into the SAE J196216 (OBD Port) connector.
3. Connect you RCA cable to the back of your aftermarket head unit and plug the other end into your Raspberry Pi.
4. Install your 2A Car Supply / Switch or Micro USB Car Charger.
5. Finally turn your key to the ON position and navigate your head unit to Auxiliary input.
6. Enter your login credentials and run:

```
# startx
```
7. Launch BlueZ, the Bluetooth stack for Linux. Pair + Trust your ELM327 Bluetooth Adapter and Connect To: SPP Dev. You should see the Notification "Serial port connected to /dev/rfcomm0"

Note: Click the Bluetooth icon, bottom right (Desktop) to configure your device. Right click on your Bluetooth device to bring up Connect To: SPP Dev.

8. Open up Terminal and run:

```
# cd pyobd-pi
# sudo su
# python obd_gui.py
```

Use the Left and Right arrow key to cycle through the gauge display.

Note: Left and Right mouse click will also work

To exit the program just press Control and C or Alt and Esc.

Update:

Data Logging

If you would like to log your data run:

```
# cd pyobd-pi
# python obd_recorder.py
```

The logged data file will be saved under:

```
/home/username/pyobd-pi/log/
```

Enjoy and drive safe!

Helpful info:

<http://www.makeuseof.com/tag/15-useful-commands-every-raspberry-pi-user-should-know/>

<http://www.cowfishstudios.com/blog1.html>

<http://www.cowfishstudios.com/blog/obd-pi-raspberry-pi-displaying-car-diagnostics-obd-ii-data-on-an-aftermarket-head-unit>

to start pi gui # startx

to configure options: # sudo raspi-config

the software is installed in “/home/pi/pyobd-pi”

Our USB adapters show up as “ttyUSB0” under the root folder /dev

Change directory # cd pyobd-pi

To go back a directory # cd ..

To go back to your user home director # cd ~

To make a directory # mkdir

To remove a directory # rmdir

To close a program <Ctl C>

To start the gui # startx

Use “sudo” to increase your permission level to allow a program to execute. i.e. # sudo reboot

Display raspi IP address:

ifconfig eth0

Or

ip a

Iphone tools:

Fing – network scanner

Or, use raspberrypi.local or obdpi.local, depending on your hostname.

Webssh – ssh terminal

/boot/config.txt Remoter pro \$4.99 for graphical login over wifi to the xrdp server.

Connect your pi to your phone and use your phone as a remote control.

GIT:

To update our software, go into the pyobd-pi folder and execute

```
# sudo git pull
```

To configure git,

```
#sudo git config --global user.email email@uncc.edu
```

To save your changes:

```
# sudo git commit
```

When you are ready to push to the git server

```
# sudo git commit
```

To add a file to the repository

```
# sudo git add filename to add.example
```

Getting the python script to auto run on boot:

I have created a new script that responds to GPIO input to trigger logging.

This script is called obdlog.py. This does not require a logging switch. I recommend plugging in the OBD2 adapter to the car, boot the pi, then run this python script to log.

Alternatively, the latest script that uses a switch is called obdgpslog2.py The obdgpslog2 script can be used without a gps. You must use a logging switch to start logging with this version.

(follow the steps in this guide for auto load on boot, but look at the line below for the actual crontab command)

<http://www.instructables.com/id/Raspberry-Pi-Launch-Python-script-on-startup/step3/Add-logs-directory/>

To edit the crontab script use the following command

```
# sudo crontab -e
```

add one of the following lines to crontab script

Without GPS:

```
@reboot sleep 20 & sh /home/pi/pyobd-pi/launcher.sh >/home/pi/logs/cronlog 2>&1
```

With GPS:

```
@reboot sleep 20 & sh /home/pi/pyobd-pi/launchergps.sh >/home/pi/logs/cronlog 2>&1
```

You will need to create a /logs directory under /home/pi using the mkdir logs command.

** the sleep command is required to allow adequate time for devices to connect. It prevents the program from generating an exception if started too early in the boot process.

To stop your program after boot, should you need to, open the terminal and type in

```
# sudo killall python
```

You may want to do this to kill the program, modify it so that you can reload it without a reboot.

When auto started, you can view the terminal output by pressing ctl-alt-F2. You can get back to the gui by pressing ctl-alt-F7


Logging triggers:

The obdlog.py will log on start by default. It can be changed by changing the bootup log variable to False.

The obdgpslog2.py script will by default log when pins 37 and 39 on the pi are shorted. You need an SPST switch if you want to use a switch. Wire each leg of the switch to each pin. The pin is setup with an internal pull up. The switch shorts out the two pins and pulls the sense pin to ground. The script waits for the transition and then starts logging. If the system boots with the switch pressed in it will not log. It requires being unswitched and then rearmed.

If you wish to add an LED for indicating the python script is logging, it can be added between pins 33, 34 along with the appropriate resistor. . A 220-500 ohm resistor should work.

The positive side of the LED should point to pin 33.

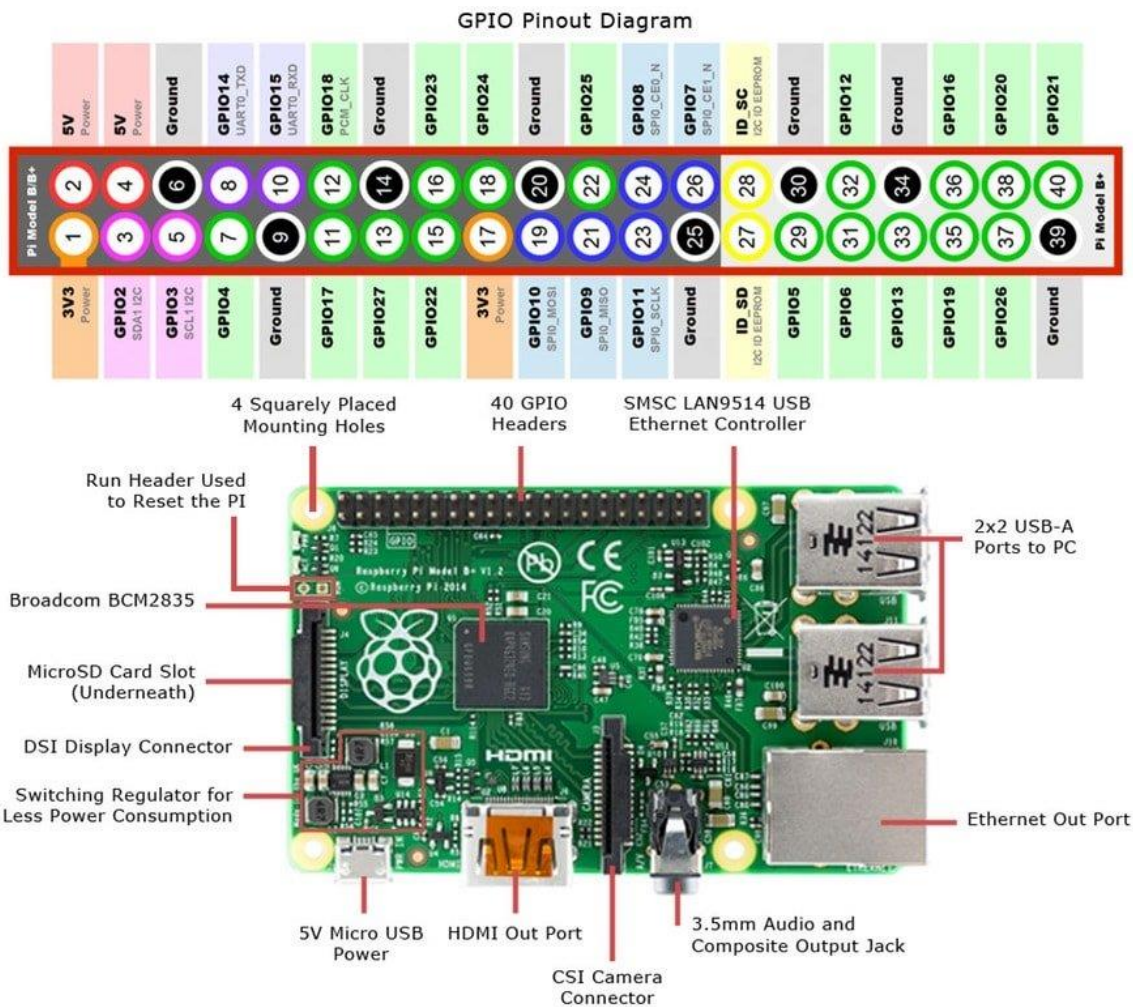

Default behavior can be changed for either script by editing the script files with a text editor.

If a HDMI monitor is not attached to the pi at boot, it defaults to the RCA or headphone jack video output.

To force the HDMI on at boot you can modify this file

`/boot/config.txt`

and add these two lines:

`hdmi_force_hotplug=1`

`hdmi_drive=2`

To have permissions to write this file use

`# cd /`

`# cd boot`

`# sudo nano config.txt`

Use PS to determine if your program is running

`# sudo ps aux | grep python`

You will see a list of 3 processes, two with python if it is running properly.

Adding a GPS Receiver

<https://blog.retep.org/2012/06/18/getting-gps-to-work-on-a-raspberry-pi/>

setup the port correctly

<http://catb.org/gpsd/installation.html>

For UBLOX ttyACM0

Fixes

<https://learn.adafruit.com/adafruit-ultimate-gps-on-the-raspberry-pi/setting-everything-up>

```
sudo dpkg-reconfigure gpsd
```

```
sudo service ntp restart
```

add to autostart

gpsd /dev/ttyACM0

GPS Fixes:

by amrbekhit » Wed Apr 16, 2014 11:10 am

I know this is quite an old post, but it shows up frequently in search results related to gpsd problems on bootup.

Here's a simpler solution than messing around with udev.

As brodieh rightly pointed out, running `ps aux | grep gps` shows that gpsd is not being started up with the correct parameters, despite the `/etc/defaults/gpsd` file being set up "correctly" via `dpkg-reconfigure gpsd`.

A simple way to fix that is to modify `/etc/default/gpsd` so that rather than the device name being placed under the `DEVICES` option, place it under the `GPSD_OPTIONS` option instead. For example, do this:

CODE: [SELECT ALL](#)

```
# Default settings for gpsd.

# Please do not edit this file directly - use `dpkg-reconfigure gpsd' to

# change the options.

START_DAEMON="true"

GPSD_OPTIONS="/dev/ttyACM0"

DEVICES=""

USB AUTO="true"

GPSD_SOCKET="/var/run/gpsd.sock"
```



Files can be opened by the megalogviewer

Copy with a usb stick, or SFTP Into the pi and get the log. You use this windows viewer to look at the data.