



celepixel

CelePixel
CeleX-5 Chipset
SDK Reference

CelePixel Technology Co. Ltd.

Content

Version Control.....	4
1. Overview	5
1.1. Introduction of CeleX-5 Chipset	5
1.1.1 Basic working principle of CeleX-5 Chipset	5
1.1.2 Terminology.....	5
1.2. Working Principle of CeleX-5 Sensors	7
1.2.1. Fixed Mode of CeleX-5 Sensor	7
1.2.1.1. Event Mode with ADC Disabled (<i>Event Off-Pixel Timestamp Mode</i>).....	7
1.2.1.2. Event Mode with In-Pixel Timestamp (<i>Event In-Pixel Timestamp Mode</i>)..	8
1.2.1.3. Event Mode with Intensity (<i>Event Intensity Mode</i>)	9
1.2.1.4. Full-Picture Mode.....	10
1.2.1.5. Optical-Flow Mode.....	10
1.2.1.6. Multi-Read Optical-Flow Mode	11
1.2.2. Loop Mode of CeleX-5 Sensor	11
1.2.3. Data Format of CeleX-5 Sensor	13
1.2.3.1. The Mechanism of Sensor Data Output	13
1.2.3.2. MIPI Data Format	13
1.2.3.3. Data Types Output by SDK.....	17
1.2.4. Methods to Create Full Picture and Event Frame	19
1.2.4.1. Method to Create Full Picture Frame.....	19
1.2.4.2. Method to Create Event Picture Frame.....	19
1.3. Data Structure of Bin File	22
1.3.1. Data structure of the bin file without IMU data.....	22
1.3.2. Data structure of the bin file with IMU data	22
2. CeleX-5 API Reference	24
2.1. Overview	24
2.2. CeleX5DataManager Class Reference	26
2.3. CeleX5 Class Reference	29
2.3.1 openSensor	31
2.3.2 isSensorReady	31
2.3.3 getMIPIData.....	31
2.3.4 setFpnFile	31
2.3.5 generateFPN.....	32
2.3.6 setSensorFixedMode.....	32
2.3.7 getSensorFixedMode.....	32
2.3.8 getFullPicBuffer	33
2.3.9 getFullPicMat	33
2.3.10 getEventPicBuffer	34
2.3.11 getEventPicMat	35
2.3.12 getEventDataVector.....	35
2.3.13 getOpticalFlowPicBuffer.....	36
2.3.14 getOpticalFlowPicMat	37
2.3.15 getFullPicFrameTime	37

2.3.16	setEventFrameTime.....	37
2.3.17	getEventFrameTime	37
2.3.18	setOpticalFlowFrameTime	37
2.3.19	getOpticalFlowFrameTime	38
2.3.20	setSensorLoopMode	38
2.3.21	getSensorLoopMode	38
2.3.22	setLoopModeEnabled	39
2.3.23	isLoopModeEnabled.....	39
2.3.24	setEventDuration.....	39
2.3.25	setPictureNumber	39
2.3.26	setThreshold.....	40
2.3.27	getThreshold	40
2.3.28	setBrightness.....	40
2.3.29	getBrightness.....	41
2.3.30	setContrast	41
2.3.31	getContrast.....	41
2.3.32	setClockRate.....	41
2.3.33	getClockRate.....	42
2.3.34	setEventDataFormat.....	42
2.3.35	getEventDataFormat	42
2.3.36	reset	42
2.3.37	startRecording	42
2.3.38	stopRecording.....	43
2.3.39	openBinFile.....	43
2.3.40	readBinFileData	43
2.3.41	getBinFileAttributes.....	43
2.3.42	getIMUData	44
2.3.43	setRowDisabled	44
3.	Appendix	46

Version Control

Version	Date	Section	Description	Author
1.0	2018.11.08	All	New	Xiaoqin Hu
1.2	2019.01.11	All	Update	Xiaoqin Hu
1.3	2019.03.15	1.2.3.2	Update	Xiaoqin Hu
1.4	2019.04.15	1.3	Update	Xiaoqin Hu
1.5	2019.07.16	All	The sensor modes have been modified as follow: <i>Event Address-only Mode</i> changed to <i>Event Off-Pixel Timestamp Mode</i> <i>Event Optical-flow Mode</i> changed to <i>Event In-Pixel Timestamp Mode</i> <i>Single Full-frame Optical-flow Mode</i> changed to <i>Optical-Flow Mode</i> <i>Full-frame Picture Mode</i> changed to <i>Full-Picture Mode</i> <i>Multiple Full-frame Optical-flow Mode</i> changed to <i>Multi-Read Optical-Flow Mode</i>	Xiaoqin Hu

1. Overview

1.1. Introduction of CeleX-5 Chipset

1.1.1 Basic working principle of CeleX-5 Chipset

The CeleX-5 chipset has two modes of operation: parallel port output data mode and MIPI serial port output data mode. This way of outputting data through the parallel port is the same as that of the CeleX-4 chipset, that is, the data of the Sensor is transmitted through an Opal Kelly FPGA processing board, and will not be described here.

This SDK uses the MIPI serial output mode as shown in Fig. 1-1, in which shows the basic working principle of the CeleX-5 Chipset. It needs a driver to convert MIPI data into USB3.0 data, then the PC applications could obtain the data from the USB3.0 Driver. Similarly, the PC can also configure the Sensor through the Driver.

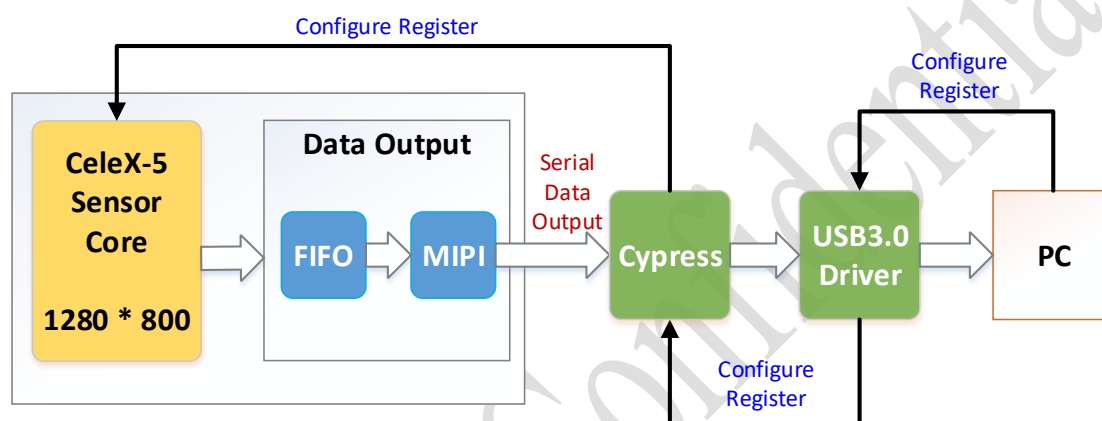


Fig. 1-1 Basic working principle of the CeleX-5 Chipset

1.1.2 Terminology

The following table lists some of the terms and their explanations that appear in this document.

No.	Terminology	Description
1	Event Mode	<i>Event Off-Pixel Timestamp Mode</i> , <i>Event In-Pixel Timestamp Mode</i> and <i>Event Intensity Mode</i> are collectively referred to as Event Mode, in which the sensor only detects the pixel whose intensity has changed and then marks it as an active pixel and outputs it.
2	Full-Frame Mode	<i>Full-Picture Mode</i> , <i>Optical-Flow Mode</i> and <i>Multi-Read Optical-Flow Mode</i> are collectively referred to as <i>Full-frame Mode</i> , in which the sensor outputs the information for each pixel in order (top to bottom, left to right) within a certain period of time.
3	Fixed Mode	For fixed mode, the sensor always works into only one of the six single modes unless being reconfigured.

4	Loop Mode	For loop mode, the sensor could automatically switch between three single modes.
5	Event Off-Pixel Timestamp Mode	Event mode of the CeleX-5 sensor, in which the sensor only outputs row/column address of the detected events. The pixel intensity and internal timestamp information are not available in the mode.
6	Event In-Pixel Timestamp Mode	Event mode of the CeleX-5 sensor, in which the sensor outputs row/column address of the detected events, together with the timing information. The pixel intensity information is not available in this mode.
7	Event Intensity Mode	Event mode of the CeleX-5 sensor, in which the sensor outputs row/column address of the detected events, together with the pixel intensity information. The internal timestamp information is not available in this mode.
8	Full-Picture Mode	Full-frame mode of the CeleX-5 sensor, in which the sensor could generate full-frame pictures with pixel intensity information, which is sampled at certain instant by all pixels simultaneously.
9	Optical-Flow Mode	Full-frame mode of the CeleX-5 sensor, in which the sensor could generate a full-frame internal timestamp picture after accumulating events in a specified time duration.
10	Multi-Read Optical-Flow Mode	Full-frame mode of the CeleX-5 sensor, in which the sensor could generate several full-frame internal timestamp pictures with pixel timing information within a time duration.
11	Event Binary Pic	The event binary frame output from the SDK
12	Event Gray Pic	The event gray frame from the SDK
13	Event Accumulated Gray Pic	The event accumulated gray frame output from the SDK
14	Event Count Pic	The event trigger number frame output from the SDK

1.2. Working Principle of CeleX-5 Sensors

CeleX™ is a family of smart image sensor specially designed for machine vision. Each pixel in CeleX™ sensor can individually monitor the relative change in light intensity and report an event if it reaches a certain threshold. Asynchronous row and column arbitration circuits process the pixel requests and make sure only one request is granted at a time in fairly manner when they received multiple simultaneous requests. The output of the sensor is not a frame, but a stream of asynchronous digital events. The speed of the sensor is not limited by any traditional concept such as exposure time and frame rate. It can detect fast motion which is traditionally captured by expensive, high speed cameras running at thousands of frames per second, but with drastic reduced amount of data. Besides, our technology allows post-capture change of frame-rate for video playback. One can view the video at 10,000 frames per second to see high speed events or at normal rate of 25 frames per second.

CeleX™ sensor can produce three kinds of outputs in parallel: logarithmic picture, motion, and full-frame optical flow. The sensor can greatly improve the performance for applications in broad areas including assisted/autonomous driving, UAV, robotics, surveillance, etc.

CeleX-5 is a multifunctional smart image sensor with 1Mega-pixels and some additional features integrating on-chip. The sensor supports several different output formats: pure binary address-events, address-events with either pixel intensity information or timing information.

In addition, the readout scheme of the sensor could either be asynchronous data stream or synchronous full frames. Different combinations of the output format and readout scheme lead to great flexibility of this sensor, which supports 6 separate operation modes in total.

To further meet the requirements of different applications, the sensor could also be configured into a loop-mode, in which it could automatically switch among three separate modes.

1.2.1. Fixed Mode of CeleX-5 Sensor

CeleX-5 Sensor provides six fixed working modes of CeleX-5 Sensors: *Event Off-Pixel Timestamp Mode*, *Event In-Pixel Timestamp Mode*, *Event Intensity Mode*, *Full-Picture Mode*, *Optical-Flow Mode*, *Multi-Read Optical-flow Mode*.

1.2.1.1. Event Mode with ADC Disabled (*Event Off-Pixel Timestamp Mode*)

In *Event Off-Pixel Timestamp Mode*, the CeleX-5 sensor detects motions in the field of view and outputs the detected row/column address and the off-pixel timestamp when the event is output.

The column ADC is disabled in this mode, so the pixel intensity or internal timestamp information is not available. The output data format in this mode is shown in the following table.

Notation	min	max	Comments
Row	0	799	Row address
Column	0	1279	Col address
Off-Pixel Timestamp	0	$2^{12} = 4095$	The timestamp when the event is output

As shown in Figure 1-2-1-1, the SDK collects Event data for a period of time to create an image frame. This time is called **Event Frame Time**. The length of this time could be changed by calling the API interface [setEventFrameTime](#). The range is from 100us to 1000ms. See Section [1.2.4.2](#) for how to create an Event image frame.

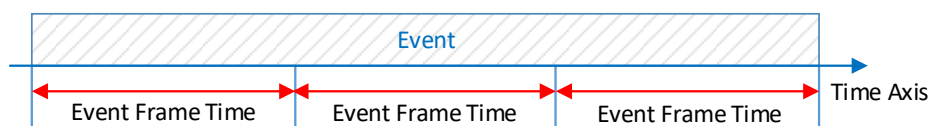


Fig. 1-2-1-1 Event In-Pixel Timestamp Mode

In this mode, events sequence within a period of time (*Event Frame Time*) could be obtained by calling the API interface [getEventDataVector](#).

Several types of Event image frames (such as: event binary pic, event count pic, etc.) could also be obtained by calling the API interface [getEventPicBuffer](#) or [getEventPicMat](#).

1.2.1.2. Event Mode with In-Pixel Timestamp (*Event In-Pixel Timestamp Mode*)

In *Event In-Pixel Timestamp Mode*, the CeleX-5 Sensor detects motions in the field of view and outputs the detected row/column address, Optical-flow T information (indicating the instant when the event generated), and the timestamp when the event is output.

It should be noted that there is no brightness information in this mode, and the specific information output in this mode is shown in the following table.

Notation	min	max	Comments
Row	0	799	Row address
Column	0	1279	Col address
In-Pixel Timestamp	0	4095	The timestamp when the event occurred
Off-Pixel Timestamp	0	$2^{16} = 65535$	The timestamp when the event is output

By means of a periodic ramp voltage, the pixel stores the instantaneous amplitude when fired. During readout, the stored amplitude is quantized by ADC into 12-bits, which is then used as the internal timestamp. Since the ramp is periodic, this means that the internal timestamp could only record a relatively short period of time which equals to the period of the ramp. By default, the period of the ramp voltage is 14ms and therefore, the resolution of the internal timestamp is about 3.5us (14ms/4096) in this case.

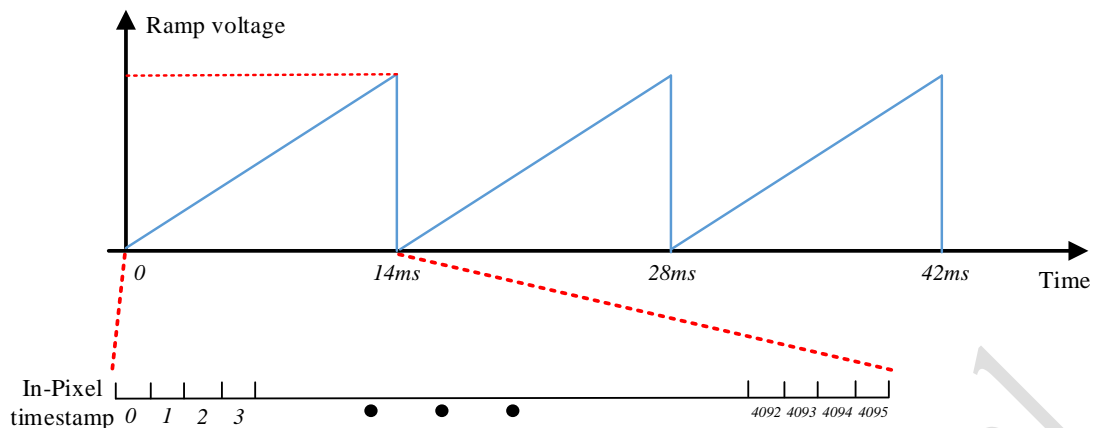


Fig. 1-2-1-2 Event In-Pixel Timestamp Mode

1.2.1.3. Event Mode with Intensity (*Event Intensity Mode*)

In *Event Intensity Mode*, the CeleX-5 Sensor detects light intensity change and outputs row/col address of the detected events, the pixel intensity information sampled at the instant when the event generated, and the off-pixel timestamp when the event is output.

It should be noted that there is no Optical-flow T information in this mode, and the specific information output in this mode is shown in the following table.

Notation	min	max	Comments
Row	0	799	Row address
Column	0	1279	Col address
Intensity	0	4095	brightness
Off-Pixel Timestamp	0	$2^{16} = 65535$	The timestamp when the event is output

As shown in Figure 1-2-1-3, the SDK collects Event data for a period of time to create an image frame. This time is called **Event Frame Time**. The length of this time could be changed by calling the API interface [setEventFrameTime](#). The range is from 100us to 1000ms. See Section [1.2.4.2](#) for how to create an Event image frame.




Fig. 1-2-1-3 Event Intensity Mode

In this mode, events sequence within a period of time (**Event Frame Time**) could be obtained by calling the API interface [getEventDataVector](#).

Several types of Event image frames (such as: event gray pic, event accumulated gray pic, etc.) could also be obtained by calling the API interface [getEventPicBuffer](#) or [getEventPicMat](#).

1.2.1.4. Full-Picture Mode

In *Full-Picture Mode*, the CeleX-5 Sensor could generate full-frame pictures with pixel intensity information, which is sampled at certain instant by all pixels simultaneously. Because the sensor could generate continuous full frames, it could be used as a frame-based APS sensor.

The operating frequency of the Sensor is linear with the frame rate of the transmitted data, ie the frequency is x MHz, then fps is x frames per second. If the operating frequency of the Sensor is 100MHz, it means that the Sensor can generate about 100 full-frame image frames per second, that is, the Transmission Time is 10ms.

In this mode, you can modify the working frequency of the Sensor by calling the API interface [setClockRate](#) to modify the transmission time (or Frame Time), and also improve the image quality by calling the API interfaces [setBrightness](#) and [setContrast](#).

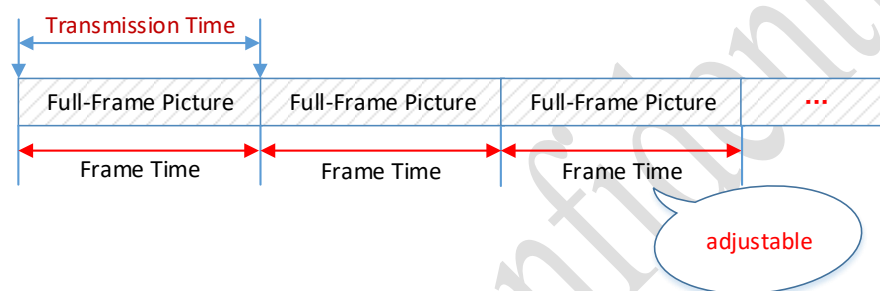


Fig 1-2-1-4. Full-Picture Mode

In this mode, you can modify the Transmission Time (or Frame Time) by calling the API [setFullPicFrameTime](#), for example, if it is set to 100ms, that means the sensor could generate about 100 full-frame pictures per second. You can also increase image quality by calling the API [setBrightness](#) and [setContrast](#).

1.2.1.5. Optical-Flow Mode

In *Optical-Flow Mode*, the CeleX-5 Sensor could generate a full-frame picture with pixel timing information. The sensor first accumulates events in a specified duration (*Accumulated Time*). After that, the sensor produces a full-frame picture with pixel timing information.

Parameters users could set are a) accumulated time (hardware parameter), b) transmission time (hardware parameters, related to main clock frequency).

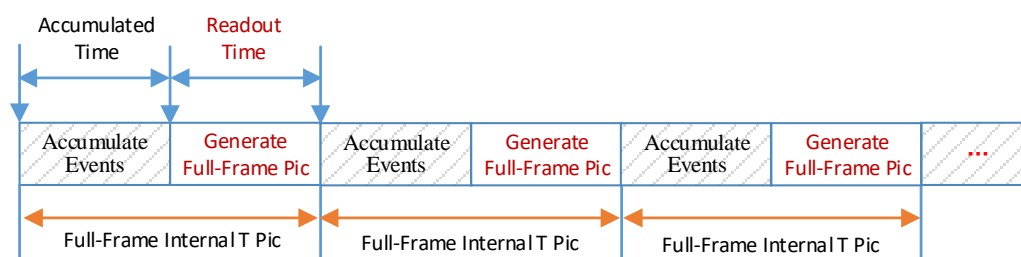


Fig. 1-2-1-5 Optical-Flow Mode

1.2.1.6. Multi-Read Optical-Flow Mode

In *Multi-Read Optical-Flow Mode*, the sensor could generate several full-frame pictures with pixel timing information within a time duration. Different from *Event In-Pixel Timestamp Mode*, sensor operating in this mode produces full-frame pictures instead of asynchronous events stream. Different from *Optical-Flow Mode*, the sensor could produce multiple full-frame pictures within a time duration.

It's not recommended to use this mode as a fixed mode, it's good to use it as one of the three mode in the *Loop Mode*. You could modify the duration of this mode in the loop by calling the API interface [setPictureNumber](#).

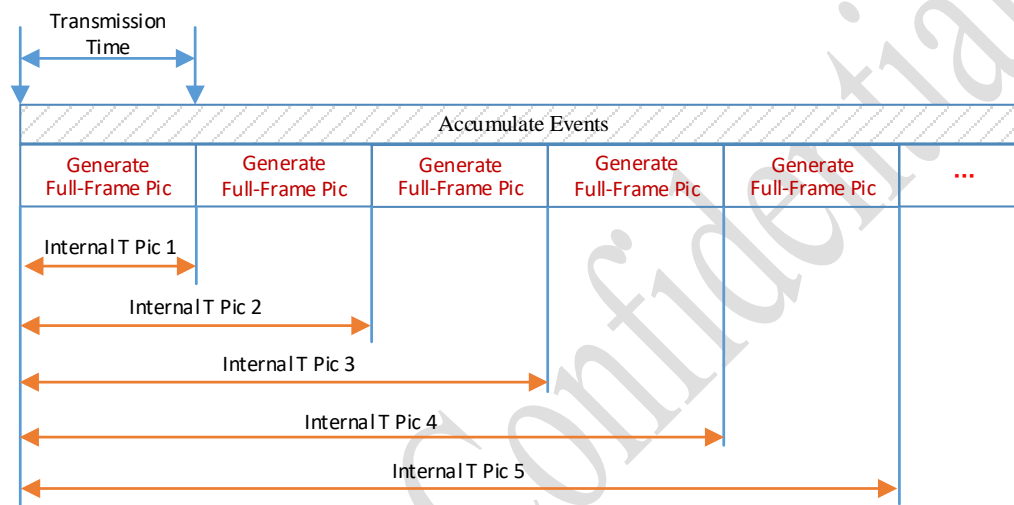


Fig. 1-2-1-6 Multi-Read Optical-Flow Mode

1.2.2. Loop Mode of CeleX-5 Sensor

The detailed operation of each single mode has been illustrated above. For fixed mode, the sensor always works into only one of the six single modes unless being reconfigured. For loop mode, the sensor could automatically switch between three single modes.




Fig. 1-2-2-1 Loop Mode

Fig. 1-2-2-1 shows the diagram of sensor operating in loop mode. After the select mode is configured to loop mode, the sensor would operate between Mode_1, Mode_2 and Mode_3 alternatively. This loop would continue until being reconfigured.

Here are some tips to select modes for the loop mode:

- The best choice is one Full-Picture mode, one event mode and one optical-flow mode;
- Only choose one full-frame optical-flow mode in the loop.

By default, the first loop (Mode_1) is *Full-Picture Mode*, in which the time duration is **10ms** and

you could modify the duration of this mode by calling the API interface [setPictureNumber](#).

The second loop (Mode_2) is *Event Mode*, in which the time duration is **20ms** and you could modify the event duration of this mode by calling the API interface [setEventDuration](#).

The third loop (Mode_3) is *Full-frame Optical-flow Mode*, in which the time duration is **30ms** and you could modify the duration of this mode by calling the API interface [setPictureNumber](#).

CelePixel Confidential

1.2.3. Data Format of CeleX-5 Sensor

1.2.3.1. The Mechanism of Sensor Data Output

The CeleX-5 Sensor outputs pixel data in order from top to bottom, left to right. Figure 1-2-3-1 shows the situation which all events in each row are triggered.

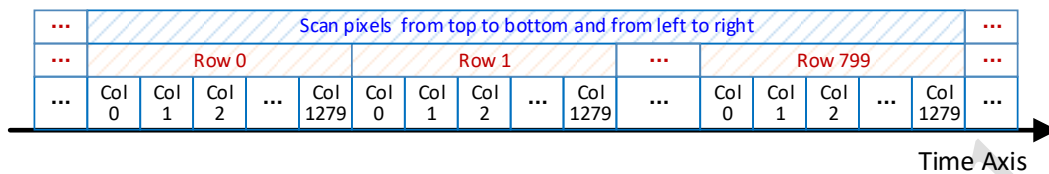


Fig. 1-2-3-1

In non-extreme conditions, (not all events in each row are triggered), the sequence of events output is shown in Figure 1-2-3-2. The row address of the triggered row is output first, and then output the column address of events triggered by the row.




Fig. 1-2-3-2

1.2.3.2. MIPI Data Format

The data format of the *Full-frame Mode* is relatively simple, and it represents continuous light intensity information (ADC), as shown in the Fig. 1-2-3-1. The ADC values of two consecutive pixels can be parsed from three consecutive bytes.

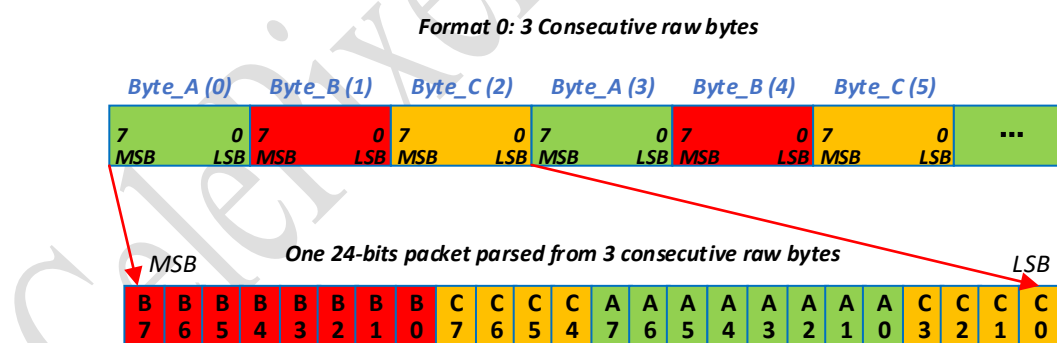


Fig. 1-2-3-3

In *Event Mode*, CeleX-5 sensor supports 3 data formats. You can set which data format to use by calling the API interface [setEventDataFormat](#), which should be called before [openSensor](#). Once the Sensor is enabled, calling this interface to modify the data format will not work.

If you don't care how to parse the data, you can skip the following sections, because the data has been parsed in the SDK and provided to the user in the form of images and (x, y, A, T) information.

The following sections describe these three data formats and how to parse out used information

like: row address, column address, ADC, row timestamp, and Temperature.

1. Format 0

The Format 0 has 4 packages as shown in the below figure, each of which is 24-bits (3 bytes). The lowest 2 bits represent the type (ID) of the package. For example, if $ID = 2b'10$, it means Package_A, from which the row address and row timestamp could be parsed.

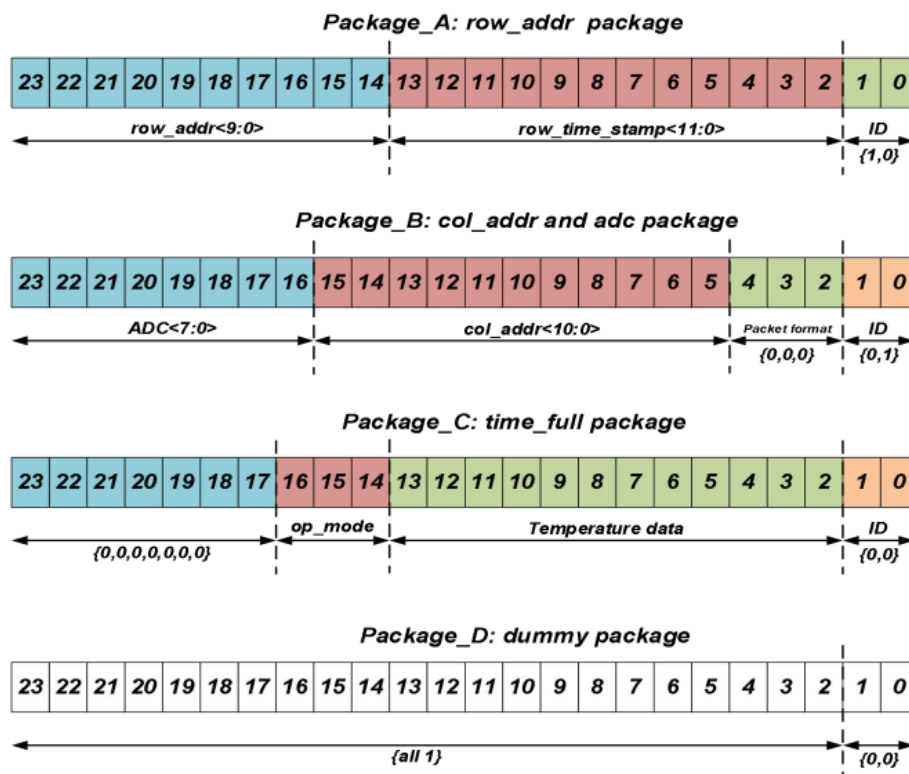


Fig. 1-2-3-4 Format 0: 24-bit packet with ADC data

It should be noted that this 24-bits data is not consecutive 24-bits in the original raw data, it needs to rearrange their order, the following figure shows how to parse this 24-bits data from three consecutive raw bytes.

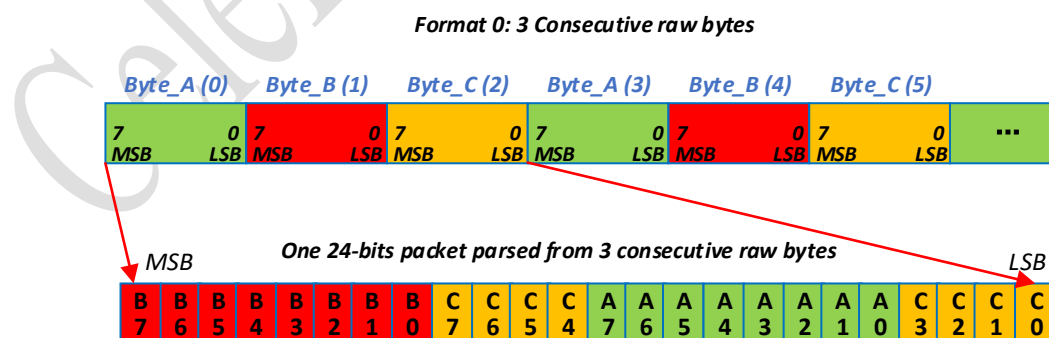


Fig. 1-2-3-5

2. Format 1

The Format 1 also has 4 packages as shown in Fig. 1-12, each of which is 28-bits. The lowest 2 bits represent the type (ID) of the package. For example, if ID = 2b'10, it means Package_A, from which the row address and row timestamp could be parsed. It differs from Format 0 in that the ADC information has 12 bits and the row timestamp has 16 bits.

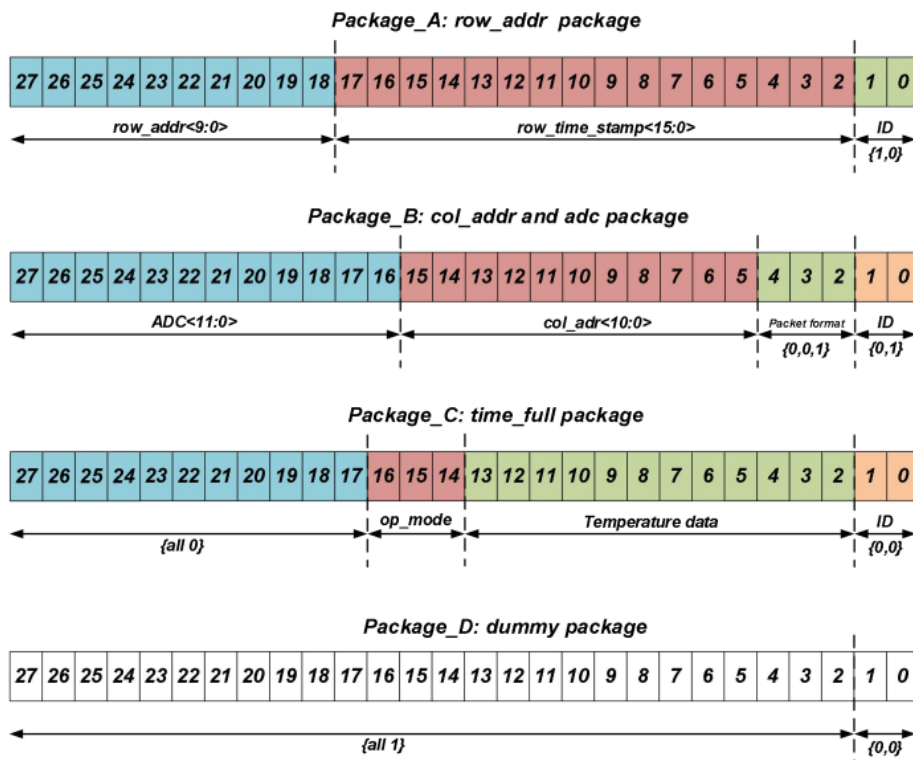


Fig. 1-2-3-6 Format 1: 28-bit packet with ADC data

Similarly, the 28-bit data is not consecutive 28-bits in the original raw data, it needs to be rearranged in order. The following figure shows how to parse the two 28-bits data from seven consecutive raw bytes (56-bits).

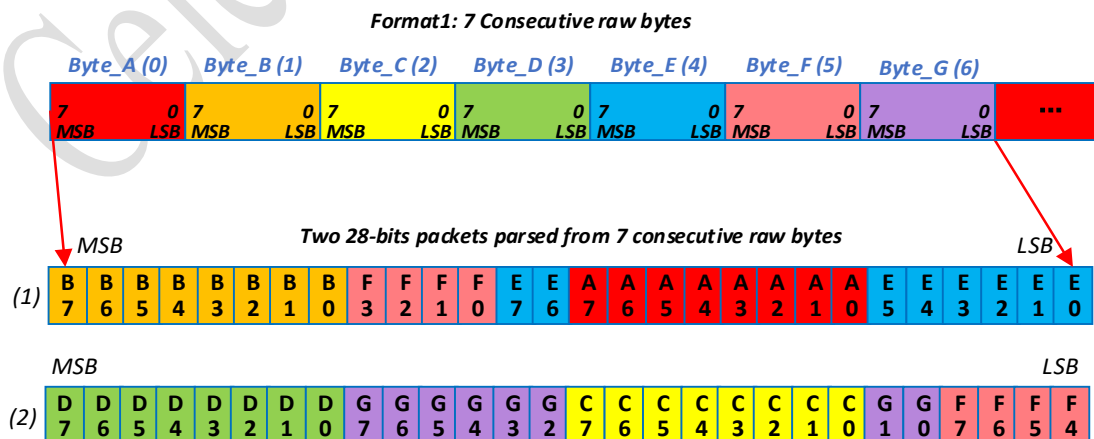


Fig. 1-2-3-7

2. Format 2

The Format 2 has 5 packages as shown in the below figure, each of which is 14-bits. The lowest 2 bits represent the type (ID) of the package. For example, if ID = 2b'10, it means Package_A, from which only the row address could be parsed. Unlike the first two data formats, there is no ADC information in the format 2. This format cannot be used if you want to get the ADC information of the Event.

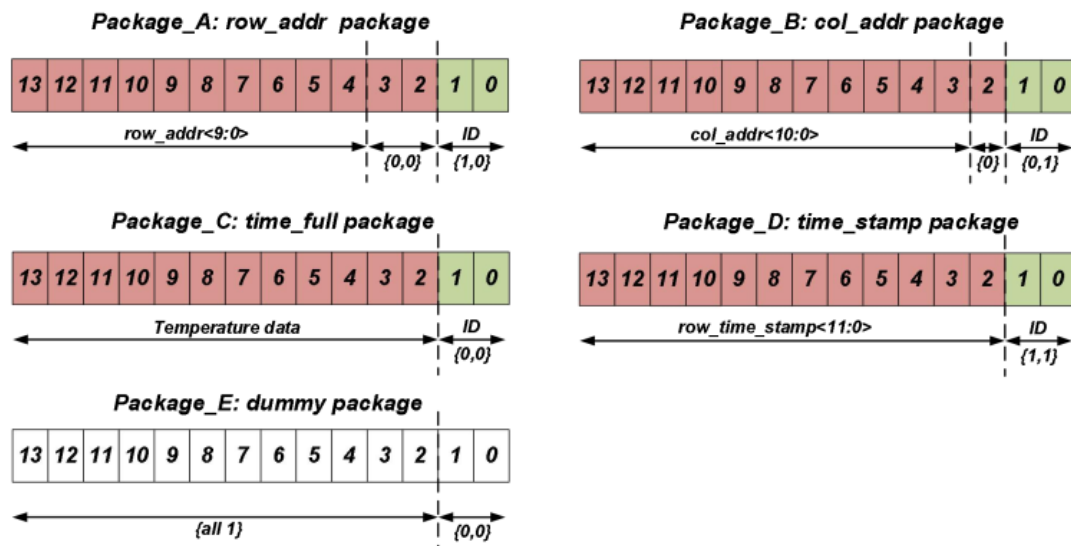


Fig. 2-3-1-8 Format 2: 14-bit packet without ADC data

Similarly, the 14-bits data is not consecutive 28-bits in the original raw data, it needs to be rearranged in order. The following figure shows how to parse the four 28-bits data from seven consecutive raw bytes (56-bits).

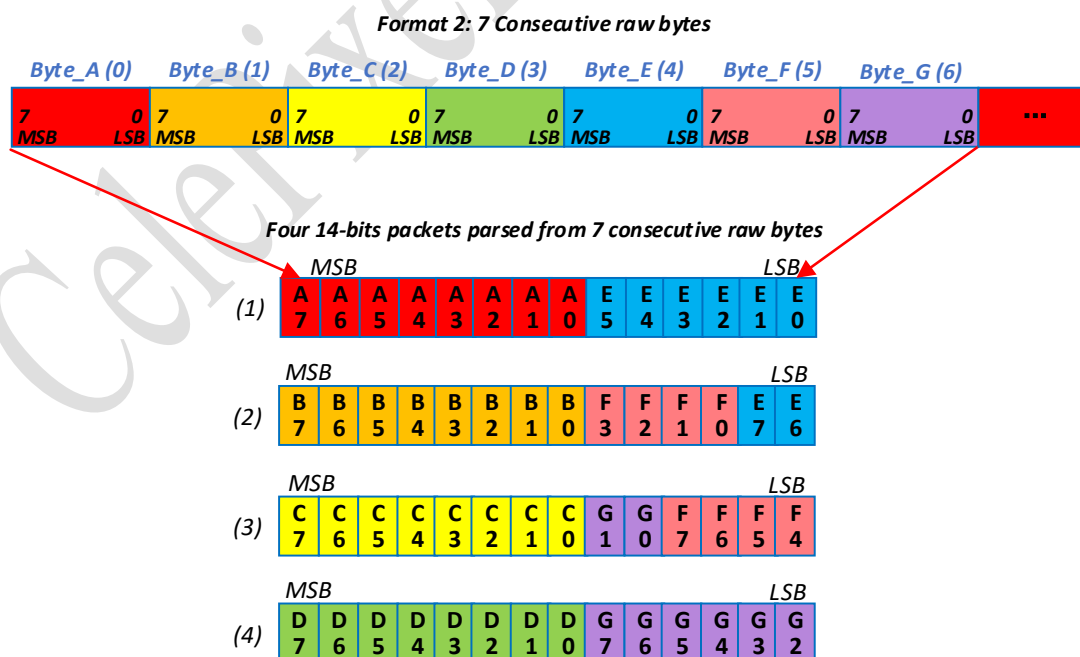


Fig. 2-3-1-9

1.2.3.3. Data Types Output by SDK

The data types output by the SDK are different when the CeleX-5 Sensor works in a different mode. The table below shows the types of data that users can obtain in different modes.

Table 1-1: Data Types Output by SDK

Sensor Mode	Data Types Output by SDK
Full-Picture Mode	Full Pic Buffer/Mat
Event Off-Pixel Timestamp Mode	Event Binary Pic Buffer/Mat Event Denoised Pic Buffer/Mat Event Count Pic Buffer/Mat Event Vector<row, col, timestamp>
Event In-Pixel Timestamp Mode	Event Optical-flow Pic Buffer/Mat Event Binary Pic Buffer/Mat Event Vector<row, col, optical-flow info, timestamp>
Event Intensity Mode	Event Binary Pic Buffer/Mat Event Gray Pic Buffer/Mat Event Count Pic Buffer/Mat Event Accumulated Pic Buffer/Mat Event Superimposed Pic Buffer/Mat Event Vector<row, col, brightness, polarity, timestamp>
Optical-flow Mode	Event Optical-flow Pic Buffer/Mat Event Optical-flow Direction Pic Buffer/Mat Event Optical-flow Speed Pic Buffer/Mat Event Binary Pic Buffer/Mat

xxx Pic Buffer is a single channel image array with row = 1280 and column = 800, and **xxx Pic Mat** is a single channel OpenCV mat with row = 1280 and column = 800.

Additionally, the **timestamp** in the Event Vector has different range and time accuracy (T-Unit) at different frequencies or mode, as described below.

1. Event data format = 1 (used in *Event Intensity Mode* and *Event In-Pixel Timestamp Mode*)

- (1) The default frequency of the Sensor is 70MHz, and the adjustable range is 20MHz ~ 70MHz.
- (2) The event timestamp range: 0 ~ 65535 (16 bits).
- (3) By default, the SDK creates a frame of Event images every 30ms, so the output timestamp range is 0 ~ 2142.

2. Event data format = 2 (used in *Event Off-Pixel Timestamp Mode*)

- (1) The default frequency of the Sensor is 100MHz, and the adjustable range is 20MHz ~ 100MHz.
- (2) The event timestamp range: 0 ~ 4095 (12 bits).
- (3) By default, the SDK creates a frame of Event images every 30ms, so the output timestamp

range is 0 ~ 1500.

Table 1-2: Time Accuracy and Timestamp Range at Different Frequencies

Clock (MHz)	T_Unit (us)	The number of time units corresponding to 30ms $30*1000 / \text{T_Unit}$
20	T_Unit = 25	$30*1000 / 25 = 1200$
30	T_Unit = 22	$30*1000 / 22 = 1363$
40	T_Unit = 25	$30*1000 / 25 = 1200$
50	T_Unit = 20	$30*1000 / 20 = 1500$
60	T_Unit = 17	$30*1000 / 17 = 1764$
70	T_Unit = 14	$30*1000 / 14 = 2142$
80	T_Unit = 25	$30*1000 / 25 = 1200$
90	T_Unit = 22	$30*1000 / 22 = 1363$
100	T_Unit = 20	$30*1000 / 20 = 1500$

1.2.4. Methods to Create Full Picture and Event Frame

CeleX-5 sensor can output a continuous stream of pixel events after powering-up. As illustrated in the last section, the X, Y, A, T information can be decoded from the events. Next, we will introduce how to create a visual frame with (X, Y, A, T) information.

1.2.4.1. Method to Create Full Picture Frame

- 1) Call the API interface [setClockRate](#) to set the working frequency of the Sensor, indicating that the Sensor generates a complete frame (Full Picture) after user-set Full-Picture Frame Time. This mode is compatible with the traditional Sensor, that is, regardless of whether there is a change of intensity on the pixel or not, its gray value can be retrieved.
- 2) Switch the sensor mode to Full-Picture mode.
- 3) Construct a 2D array to represent the Full Pic, regarded as $M[800][1280]$, which has 800 rows and each row consists of 1280 pixels. Initialize every pixel's brightness value to 0 at first.
- 4) When an event E is decoded into X, Y, A and T, the value of each pixel on $M[Y][X]$ is given brightness value of A, i.e., $M[Y][X] = A$. Repeat the same process for each decoded event. In the Full-Picture mode, the (T) information is invalid.
- 5) Repeat step 4 in the next Full-Picture frame time.

The above frame creation process is implemented by the API. You can directly call the API [getFullPicBuffer](#) to obtain the data array of the Full Picture frame.

1.2.4.2. Method to Create Event Picture Frame

There are many ways to create image frames in Event mode. The following content only describes the method to create Event Binary Pic, Event Gray Pic and Event Accumulated Gray Pic in the SDK.

- 1) Call the API [setEventFrameTime](#) to set the Event frame time, indicating that the SDK will combine the Event outputs from the Sensor after a certain time interval (i.e., the Event Frame Time set by the user) to generate an Event binary frame.
- 2) Switch the sensor mode to Event mode.
- 3) Construct three 2D array $M1[800][1280]$, $M2[800][1280]$ and $M3[800][1280]$ to represent the Event Binary Pic, Event Gray Pic and Event Accumulated Gray Pic. Initialize every pixel's brightness value to 0 at first.
- 4) Parse the data obtained from the data stream from the USB driver. When each event E is decoded as (X, Y, A, T), the value of the pixel on $M1[Y][X]$ is 255, and the value of the pixel on $M2[Y][X]$ and $M3[Y][X]$ is the brightness value A of the pixel.
- 5) In the new Event Frame Time, first set the value of each pixel in the 2D arrays M1 and M2 to 0. M3 remains unchanged. Then repeat step 4. That is, in each Event Frame Time, M1 and M2 are cleared each time, and the M3 array is updated based on the array created by the previous Event Frame Time.

The above frame creating process is implemented by the API. The user can directly call the API [getEventPicBuffer](#) to obtain the data arrays of Event frames. To help users understand the difference between Event Gray Pic and Event Accumulated Gray Pic, the above process is further illustrated in Fig. 1-2-4-1 and 1-2-4-2.

Fig. 1-2-4-1 and 1-2-4-2 describes the process above with a 5*5 array. We only list the first five frames, and each frame is an event gray frame in Fig. 1-2-4-1 and event accumulated gray frame

in Fig. 1-2-4-2.

“x” represents gray value in event gray frame and event accumulated gray frame. The red “x” indicates the pixels that changed in the first Event Frame Time, the blue “x” indicates the second, the green “x” indicates the third, and the purple “x” indicates the fourth, and the black “x” indicates the fifth.

In Fig. 1-2-4-2, it should be noted that when a pixel has changed before and it changed again, we replace the old gray value with the new one directly, which are marked in location (row0, col0) and location (row2, col4).

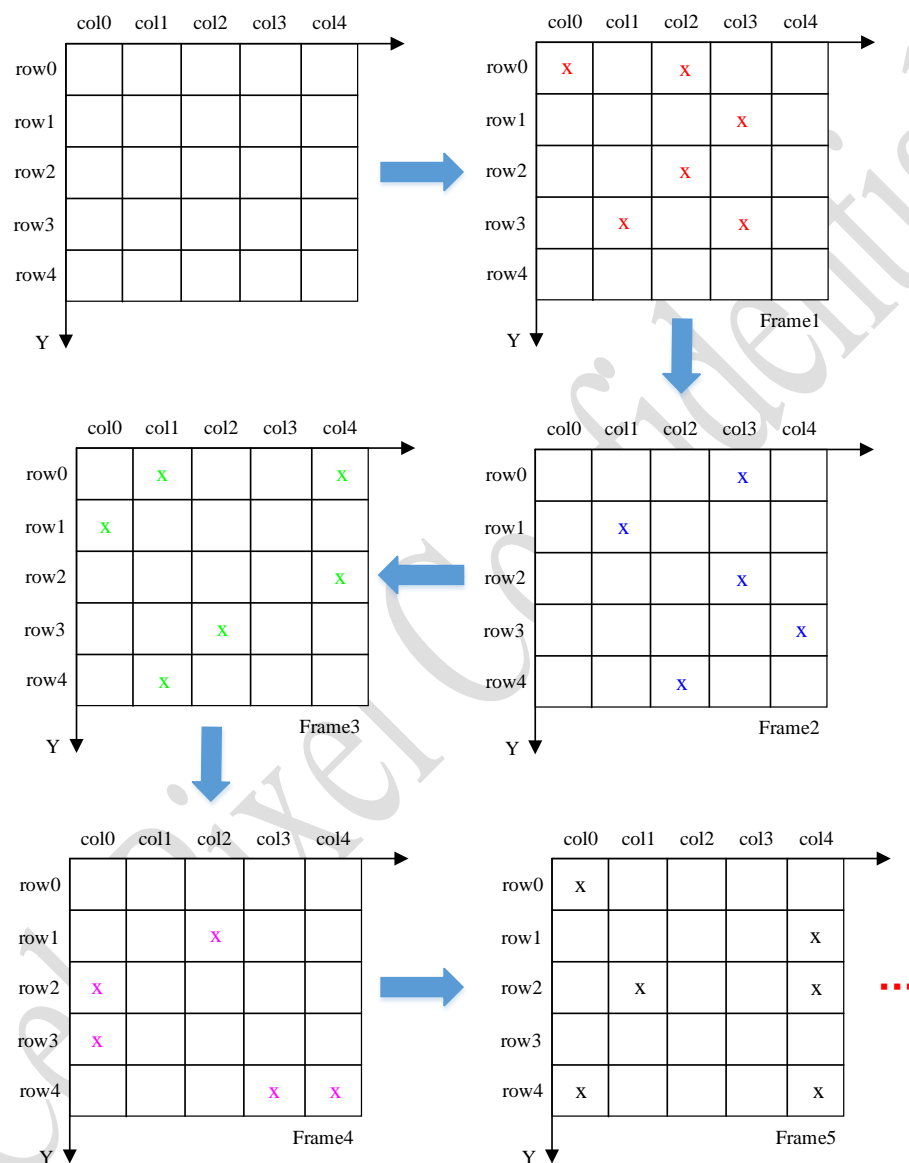


Fig. 1-2-4-1 Event Gray Pic in Event mode

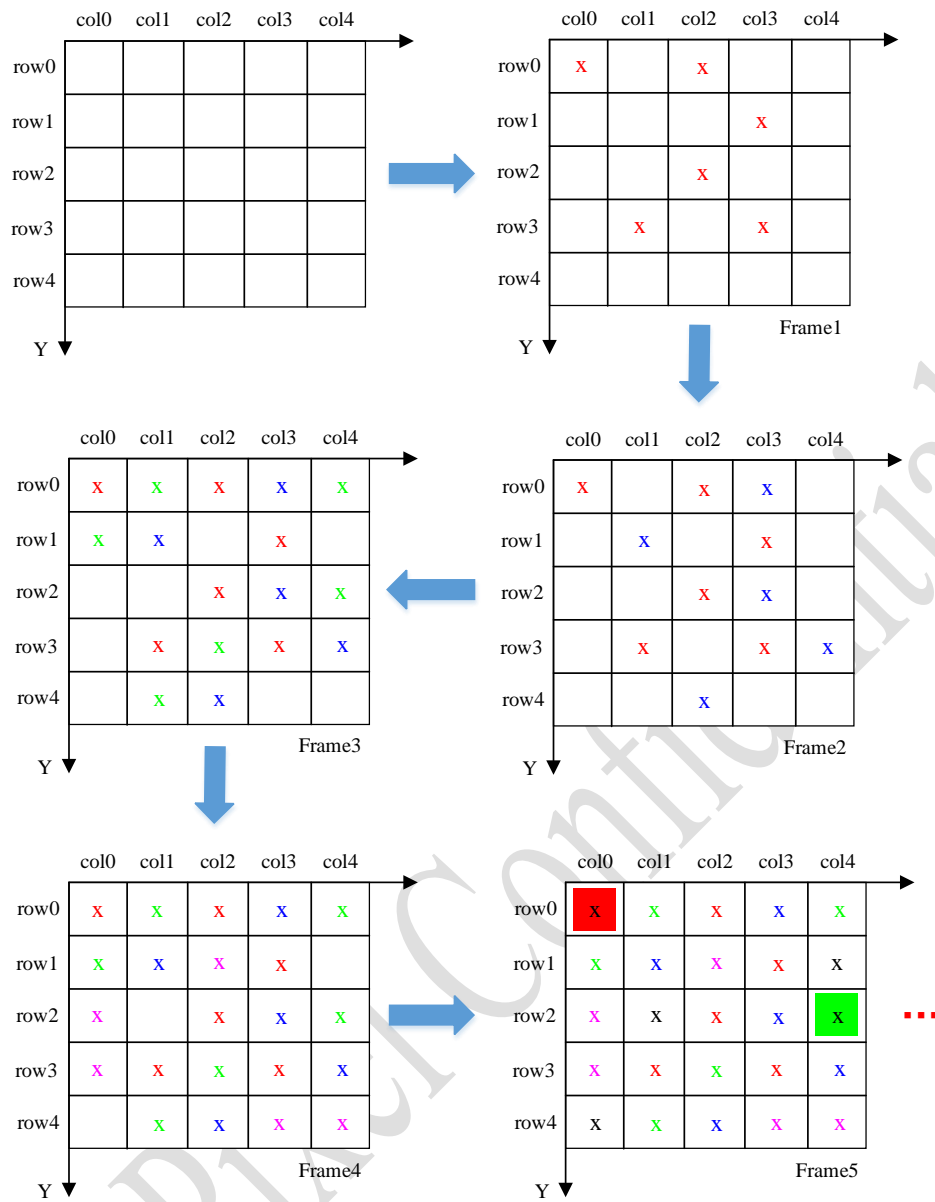


Fig. 1-2-4-2 Event Accumulated Gray Pic in Event mode

1.3. Data Structure of Bin File

1.3.1. Data structure of the bin file without IMU data

The bin file data structure without IMU data includes a header (*Bin Header*) and a specific image packet (*Image Package*), as shown in Figure 1-3-2-1.

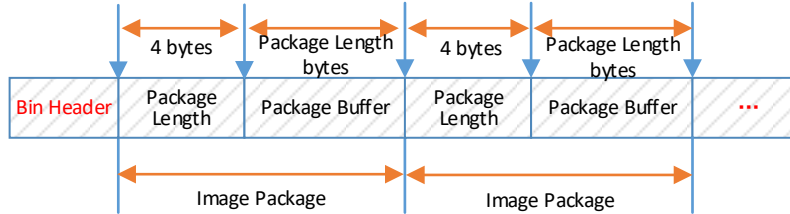


Fig. 1-3-2-1 The data structure of the bin file without IMU data

The format of the *Bin Header* is shown in the structure below, where the bit1 of *data_type* is used to indicate whether or not the IMU data is included.

```
typedef struct BinFileAttributes
{
    uint8_t    data_type; //bit0: 0: fixed mode; 1: loop mode
                // bit1: 0: no IMU data; 1: has IMU data
    uint8_t    loopA_mode;
    uint8_t    loopB_mode;
    uint8_t    loopC_mode;
    uint8_t    event_data_format;
    uint8_t    hour;
    uint8_t    minute;
    uint8_t    second;
    uint32_t    package_count;
} BinFileAttributes;
```

The *Package Length* refers to the size of a *Package Buffer*, and the *Package Buffer* stores the data in the MIPI format as described in section 1.2.3.1 (the default size of the Event data is 357001, and the default size of the Full-frame data is 153661).

1.3.2. Data structure of the bin file with IMU data

The bin file data structure with IMU data includes a header (*Bin Header*), a specific image packet (*Image Package*) and IMU data (*IMU Data*), as shown in Fig. 1-3-2-1.

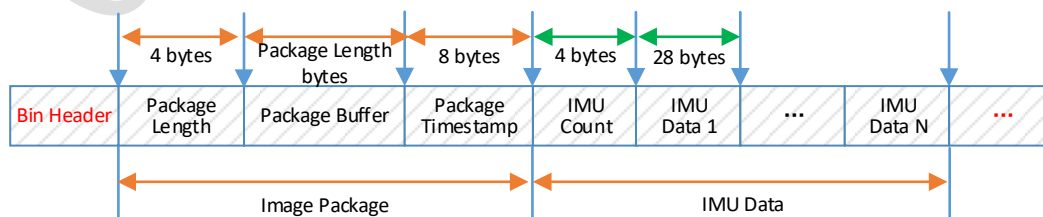


Fig. 1-3-2-1 The data structure of the bin file with IMU data

The format of the *Bin Header*, *Package Length*, and *Package Buffer* is as described in the previous section, where *Package Timestamp* is the timestamp of receiving the *Image Package*.

IMU Data includes the number of IMU data and specific information of each IMU data, where the *IMU Count* is the number, and the *IMU Data N* is the Nth IMU data (including the specific IMU data and timestamp information).

Users can obtain IMU data through the API interface [getIMUData](#) without having to parse the IMU data themselves, so the data format of *IMU Data N* is not introduced here.

CelePixel Confidential

2. CeleX-5 API Reference

2.1. Overview

The CeleX API provide a C++ interface to communicate with CeleX-5 Sensor.

To build an application using this API, you need to include the files in the *include* directory in you project. These contain all the functions that will make calls to the shared library. You will also need to include the CeleX.dll (Windows) library in the same directory as your executable or libCeleX.so (Linux) in the lib directory (e.g. /usr/local/lib).

To use the library, you could create an instance of [CeleX5](#) which encapsulated communication the CeleX-5 sensor. You can call [openSensor](#) to open the sensor that has connected to your PC and then you can call [getFullPicBuffer](#) and [getEventPicBuffer](#) to get various of frames that calculated using the raw data the sensor outputted.

You can also obtain the processed frame buffer by deriving your own data manager subclass from class [CeleX5DataManager](#) and override its virtual [onFrameDataUpdated](#) methods to receive the notification that the frame buffers are ready.

Here are enums and structs with brief descriptions:

<pre>enum CeleX5Mode { Unknown_Mode = -1, Event_Off-Pixel_Timestamp_Mode = 0, Event_In_Pixel_Timestamp_Mode = 1, Event_Intensity_Mode = 2, Full_Picture_Mode = 3, Optical_Flow_Mode = 4, Multi_Read_Optical_Flow_Mode = 6 };</pre>	<p>Unknown_Mode - Unknown mode</p> <p>Event_Off-Pixel_Timestamp_Mode - Event mode with ADC disabled (<i>Event Off-Pixel Timestamp Mode</i>)</p> <p>Event_In_Pixel_Timestamp_Mode - Event mode with internal timestamp (<i>Event In-Pixel Timestamp Mode</i>)</p> <p>Event_Intensity_Mode - Event mode with pixel intensity (<i>Event Intensity Mode</i>)</p> <p>Full_Picture_Mode - Full-frame mode with intensity (<i>Full-Picture Mode</i>)</p> <p>Optical_Flow_Mode - Full-frame mode with internal timestamp (<i>Optical-Flow mode</i>)</p> <p>Multi_Read_Optical_Flow_Mode - Full-frame mode with multi-read internal timestamp (<i>Multi-Read Optical-Flow mode</i>)</p>
<pre>enum DeviceType { Unknown_Device = 0, CeleX5_MIPI = 1, CeleX5_OpalKelly = 2, CeleX5_ZYNQ = 3 };</pre>	<p>Unknown_Device - Unknown device</p> <p>CeleX5_MIPI - CeleX5 MIPI device</p> <p>CeleX5_OpalKelly - CeleX5 OpalKelly device</p> <p>CeleX5_ZYNQ - CeleX5 ZYNQ device</p>
<pre>enum emEventPicMode { EventBinaryPic = 0,</pre>	<p>EventBinaryPic - The frame buffer (a matrix) contains Gray values(255) of active pixels obtained from Sensor, and other inactive pixels value is filled</p>

<pre> EventAccumulatedPic = 1, EventGrayPic = 2, EventCountPic = 3, EventDenoisedBinaryPic = 4, EventSuperimposedPic = 5 }; </pre>	<p>with Gray value(0).</p> <p>EventAccumulatedPic - The frame buffer (a matrix) contains light intensity of active pixels obtained from Sensor, and other inactive pixels value is filled by their existing light intensity value.</p> <p>EventGrayPic - The frame buffer (a matrix) contains light intensity (not 255) of active pixels obtained from the Sensor, and other inactive pixels value is filled with Gray value(0).</p> <p>EventCountPic - The event trigger number frame buffer (matrix).</p> <p>EventDenoisedBinaryPic - The frame buffer (matrix) is similar to the event binary buffer, except that it is a denoised event binary buffer with a simple custom algorithm.</p> <p>EventSuperimposedPic - The frame buffer (matrix) that superimposes event binary picture onto event accumulated picture in Event mode.</p>
<pre> enum emFullPicType { Full_Optical_Flow_Pic = 0, Full_Optical_Flow_Speed_Pic = 1, Full_Optical_Flow_Direction_Pic = 2 }; </pre>	<p>Full_Optical_Flow_Pic - The full-frame optical flow buffer.</p> <p>Full_Optical_Flow_Speed_Pic - The speed frame buffer of each pixel calculated on the optical flow raw frame.</p> <p>Full_Optical_Flow_Direction_Pic - The direction frame buffer of each pixel calculated on the optical flow raw frame.</p>
<pre> typedef struct BinFileAttributes { uint8_t data_type; uint8_t loopA_mode; uint8_t loopB_mode; uint8_t loopC_mode; uint8_t event_data_format; uint8_t hour; uint8_t minute; uint8_t second; uint32_t package_count; } BinFileAttributes; </pre>	<p>data_type - bit0: 0: fixed mode; 1: loop mode.</p> <p>- bit1: 0: no IMU data; 1: has IMU data.</p> <p>loopA_mode - The first working mode of the loop.</p> <p>loopB_mode - The second working mode of the loop.</p> <p>loopC_mode - The third working mode of the loop.</p> <p>event_data-format - The event data format used.</p> <p>hour, minute, second - The time length of the bin file recording.</p> <p>package_count - The package count of the recorded bin file.</p>
<pre> typedef struct EventData { uint16_t col; uint16_t row; uint16_t adc; </pre>	<p>col - The column information of one pixel in the frame buffer.</p> <p>row - The row information of one pixel in the frame buffer.</p>

<pre>uint32_t t; int8_t p; uint64_t t_increasing; }EventData;</pre>	<p>adc - In <i>Event Intensity Mode</i>, brightness is the “Intensity”; In <i>Event In-Pixel Timestamp Mode</i>, brightness is the “Optical-flow T”</p> <p>t - The timestamp when the event is output, it will be reset after the end of a frame.</p> <p>p - The polarity of one pixel in the frame buffer.(-1: intensity weakened; 1: intensity is increased; 0 intensity unchanged)</p> <p>t_increasing - The timestamp when the event is output, it won't be reset (a monotonically increasing value)</p>
<pre>typedef struct IMUData { double x_GYROS; double y_GYROS; double z_GYROS; uint32_t t_GYROS; double x_ACC; double y_ACC; double z_ACC; uint32_t t_ACC; double x_MAG; double y_MAG; double z_MAG; uint32_t t_MAG; double x_TEMP; uint64_t frameNo; std::time_t time_stamp; }IMUData;</pre>	<p>x_GYROS - Angular rate in the X-axis (gyroscopes)</p> <p>y_GYROS - Angular rate in the Y-axis (gyroscopes)</p> <p>z_GYROS - Angular rate in the Z-axis (gyroscopes)</p> <p>t_GYROS - Timestamp when angular rate is received</p> <p>x_ACC - Acceleration in the X-axis (accelerometer)</p> <p>y_ACC - Acceleration in the Y-axis (accelerometer)</p> <p>z_ACC - Acceleration in the Z-axis (accelerometer)</p> <p>t_ACC - Timestamp when acceleration is received</p> <p>x_MAG - Magnetometer component in the X-axis</p> <p>y_MAG - Magnetometer component in the Y-axis</p> <p>z_MAG - Magnetometer component in the Z-axis</p> <p>t_MAG - Timestamp when magnetometer is received</p> <p>frameNo - Frame number</p> <p>time_stamp - Timestamp when the IMU data received</p>

2.2. CeleX5DataManager Class Reference

This class allows to be notified about the processed frame buffer that is ready. To receive these notifications, you need to derive your own data manager subclass from this class and override its virtual *onFrameDataUpdated* methods.

```
#include <opencv2/opencv.hpp>
#include <celex5/celex5.h>
#include <celex5/celex5datamanager.h>
#include <celex5/celex5processeddata.h>
```

```

#ifdef _WIN32
#include <windows.h>
#else
#include<unistd.h>
#endif

#define FPN_PATH    "./FPN.txt"

class SensorDataObserver : public CeleX5DataManager
{
public:
    SensorDataObserver(CX5SensorDataServer* pServer)
    {
        m_pServer = pServer;
        m_pServer->registerData(this, CeleX5DataManager::CeleX_Frame_Data);
    }
    ~SensorDataObserver()
    {
        m_pServer->unregisterData(this, CeleX5DataManager::CeleX_Frame_Data);
    }
    virtual void onFrameDataUpdated(CeleX5ProcessedData* pSensorData);//overrides Observer operation
    CX5SensorDataServer* m_pServer;
};

void SensorDataObserver::onFrameDataUpdated(CeleX5ProcessedData* pSensorData)
{
    if (NULL == pSensorData)
        return;
    CeleX5::CeleX5Mode sensorMode = pSensorData->getSensorMode();
    if (CeleX5::Full_Picture_Mode == sensorMode)
    {
        //get fullpic when sensor works in FullPictureMode
        if (pSensorData->getFullPicBuffer())
        {
            cv::Mat matFullPic(800, 1280, CV_8UC1, pSensorData->getFullPicBuffer()); //full pic
            cv::imshow("FullPic", matFullPic);
            cv::waitKey(1);
        }
    }
    else if (CeleX5::Event_No_ADC_Mode == sensorMode)
    {
        //get buffers when sensor works in EventMode
        if (pSensorData->getEventPicBuffer(CeleX5::EventBinaryPic))

```

```

    {
        cv::Mat matEventPic(800, 1280, CV_8UC1,
            pSensorData->getEventPicBuffer(CeleX5::EventBinaryPic)); //event binary pic
        cv::imshow("Event Binary Pic", matEventPic);
        cvWaitKey(1);
    }
}

else if (CeleX5::Event_Intensity_Mode == sensorMode)
{
    //get buffers when sensor works in Full_Frame_Event_Mode
    if (pSensorData->getEventPicBuffer(CeleX5::EventBinaryPic))
    {
        cv::Mat matEventPic1(800, 1280, CV_8UC1,
            pSensorData->getEventPicBuffer(CeleX5::EventBinaryPic)); //event binary pic
        cv::Mat matEventPic2(800, 1280, CV_8UC1,
            pSensorData->getEventPicBuffer(CeleX5::EventGrayPic)); //event gray pic
        cv::imshow("Event Binary Pic", matEventPic1);
        cv::imshow("Event Gray Pic", matEventPic2);
        cvWaitKey(1);
    }
}
}

int main()
{
    CeleX5 *pCeleX = new CeleX5;
    if (NULL == pCeleX)
        return 0;
    pCeleX->openSensor(CeleX5::CeleX5_MIPI);
    pCeleX->setFpnFile(FPN_PATH);
    CeleX5::CeleX5Mode sensorMode = CeleX5::Event_Intensity_Mode;
    pCeleX->setSensorFixedMode(sensorMode);
    SensorDataObserver* pSensorData = new SensorDataObserver(pCeleX->getSensorDataServer());

    while (true)
    {
#ifdef _WIN32
        Sleep(5);
#else
        usleep(1000 * 5);
#endif
    }
    return 1;
}

```

2.3. CeleX5 Class Reference

This is the class that encapsulates the methods to get the data from the sensor as well as the functionality to adjust the working mode and configuration register parameters of the sensor.

Public Member Functions:

API Name	Description
<u>openSensor</u>	Start sensor via calling this interface
<u>isSensorReady</u>	Check whether CeleX-5 sensor is successfully initialized
<u>getMIPIData</u>	Read MIPI data from the USB3.0 driver
<u>setFpnFile</u>	Configure FPN used for creating a visual frame
<u>generateFPN</u>	Generate FPN
<u>setSensorFixedMode</u>	Set the fixed working mode of CeleX-5 sensor
<u>getSensorFixedMode</u>	Obtain the fixed working mode of CeleX-5 sensor
<u>getFullPicBuffer</u>	Obtain a visual frame in Full-Picture mode
<u>getFullPicMat</u>	Obtain the mat form of full picture buffer.
<u>getEventPicBuffer</u>	Obtain a visual frame in Event mode
<u>getEventPicMat</u>	Obtain the mat form of each event type picture buffer.
<u>getEventDataVector</u>	Get vector of event data in each frame time.
<u>getOpticalFlowPicBuffer</u>	Obtain the optical flow raw frame buffer.
<u>getOpticalFlowPicMat</u>	Obtain the mat form of frame buffer.
<u>getFullPicFrameTime</u>	Obtain the time of generating a full-frame picture when the CeleX-5 sensor works in <i>Full-Picture Mode</i>
<u>setEventFrameTime</u>	Set the frame time when CeleX-5 sensor is in the <i>Event Mode</i>
<u>getEventFrameTime</u>	Obtain the frame time when CeleX-5 sensor is in the <i>Event Mode</i>
<u>setOpticalFlowFrameTime</u>	Set the time of generating a full-frame picture when the CeleX-5 sensor works in <i>Full-frame Optical-flow Mode</i>
<u>getOpticalFlowFrameTime</u>	Obtain the time of generating a full-frame optical-flow picture when the CeleX-5 sensor works in <i>Full-frame Optical-flow Mode</i>
<u>setSensorLoopMode</u>	Set the working mode of one of three loops when CeleX-5 sensor works in the <i>Loop Mode</i>
<u>getSensorLoopMode</u>	Obtain the working mode of one of three loops when CeleX-5 sensor works in the <i>Loop Mode</i>
<u>setLoopModeEnabled</u>	Enable or disable the loop mode
<u>isLoopModeEnabled</u>	Check whether the loop mode is enabled
<u>setEventDuration</u>	Set the time duration of working in the event mode when the CeleX-5 sensor is in the <i>Loop Mode</i>
<u>setPictureNumber</u>	Set the picture number of working in the <i>Full-frame Mode</i> when the CeleX-5 sensor is in the loop mode

<u>setThreshold</u>	Configure the threshold value where the event triggers (the change of light intensity happen to a pixel is greater than the threshold, the pixel can be marked as an event/active pixel)
<u>getThreshold</u>	Get the threshold value for triggering an event
<u>setContrast</u>	Configure the contrast
<u>getContrast</u>	Return the contract
<u>setBrightness</u>	Configure the brightness
<u>getBrightness</u>	Get the brightness
<u>setClockRate</u>	Set the clock rate of the sensor
<u>getClockRate</u>	Obtain the clock rate of the sensor
<u>setEventDataFormat</u>	Set the event data format to be used
<u>getEventDataFormat</u>	Obtain the event data format have been used
<u>reset</u>	Reset the sensor and clear the data in the FIFO buffer
<u>startRecording</u>	Start to record the raw data of sensor and saved as bin format
<u>stopRecording</u>	Stop to record the raw data of sensor
<u>openBinFile</u>	Open the bin file in the user-specified directory
<u>readBinFileData</u>	Read data from the opened bin file
<u>getBinFileAttributes</u>	Obtain attributes of the bin file.
<u>getIMUData</u>	Obtain the IMU data packets
<u>setRowDisabled</u>	Modify the resolution of the image output by CeleX-5 Sensor (Disable outputting data for the specified rows)

2.3.1 openSensor

bool CeleX5::openSensor(**DeviceType** type)

Parameters

[in] **type** The device type of CeleX-5 sensor.

Returns

The state whether the CeleX-5 sensor is successfully started up.

This method is used to start up the CeleX-5 sensor. If the currently used CeleX-5 chipset supports serial output, type is *CeleX5_MIPI*, if it supports parallel output is supported, type is *CeleX5_Parallel*. For more details about type, please refer to the explanation of [DeviceType](#).

```
#include <celex5/celex5.h>

{
    CeleX5 *pCeleX = new CeleX5;
    if (pCeleX == NULL)
        return 0;
    pCeleX->openSensor(CeleX5::CeleX5_MIPI);
}
```

See also

[isSensorReady](#)

2.3.2 isSensorReady

bool CeleX5::isSensorReady()

Returns

The state of the CeleX-5 sensor

This method is used to check whether the CeleX-5 sensor is successfully started up. It returns true if the sensor is ready, or it returns false.

See also

[openSensor](#)

2.3.3 getMIPIData

void CeleX5::getMIPIData(**vector**<uint8_t> &buffer)

Parameters

[in] **buffer** The vector buffer to store the data have been read.

This method is used to read MIPI data from the USB3.0 driver.

2.3.4 setFpnFile

bool CeleX5::setFpnFile(**const string** &fpnFile)

Parameters

[in] **fpnFile** The directory path and file name of FPN file required.

Returns

The state of loading FPN file.

This method is used to set the FPN path, then the API will use this FPN to calculate the full frame picture. It returns true if the FPN file load successfully, or it returns false.

See also

[generateFPN](#)

2.3.5 generateFPN

void CeleX5::generateFPN(std::string fpnFile)

Parameters

[in] **fpnFile** The directory path and file name of generated FPN file to be saved.

This method is used to generate FPN file. Normally we are intending to name the generated FPN as “FPN.txt” and save it in the directory where the execution application is running.

FPN, known as Fixed Pattern Noise, is the term given to a particular noise pattern on digital imaging sensors often noticeable during longer exposure shots where particular pixels are susceptible to giving brighter intensities above the general background noise.

See also

[setFpnFile](#)

2.3.6 setSensorFixedMode

void CeleX5::setSensorFixedMode(CeleX5Mode mode)

Parameters

[in] **mode** The fixed working mode of CeleX-5 sensor.

This method is used to set the fixed working mode of CeleX-5 sensor including *Event Off-Pixel Timestamp Mode*, *Event In-Pixel Timestamp Mode*, *Event Intensity Mode*, *Full-Picture Mode*, *Optical-flow Mode* and *Multi-Read Optical-flow Mode*. For more details, please refer to the explanation of [CeleX5Mode](#).

See also

[getSensorFixedMode](#)

2.3.7 getSensorFixedMode

CeleX5Mode CeleX5::getSensorFixedMode()

Returns

The fixed working mode of CeleX-5 sensor.

This method is used to obtain the fixed working mode of CeleX-5 sensor.

See also

[setSensorFixedMode](#)

2.3.8 getFullPicBuffer

void getFullPicBuffer(**unsigned char*** buffer)

Parameters

[in] **buffer** The frame buffer (size is 1280 * 800) in *Full-Picture Mode*.

This method is used to obtain a full-frame picture buffer when sensor works in the *Full-Picture Mode*. You can get the buffer if the sensor is opened successfully. For example,

```
#include <opencv2/opencv.hpp>
#include <celex5/celex5.h>
int main()
{
    CeleX5 *pCeleX = new CeleX5;
    if (NULL == pCeleX)
        return 0;
    pCeleX->openSensor(CeleX5::CeleX5_MIPI);
    pCeleX->setFpnFile(FPN_PATH);
    pCeleX->setSensorFixedMode(CeleX5::Full_Picture_Mode);
    int imgSize = 1280 * 800;
    unsigned char* pBuffer1 = new unsigned char[imgSize];
    while (true)
    {
        if (sensorMode == CeleX5::Full_Picture_Mode)
        {
            //get fullpic when sensor works in Full-Picture Mode
            pCeleX->getFullPicBuffer(pBuffer1); //full pic
            cv::Mat matFullPic(800, 1280, CV_8UC1, pBuffer1);
            cv::imshow("FullPic", matFullPic);
            cvWaitKey(10);
        }
    }
}
```

See also

[getFullPicMat](#)

2.3.9 getFullPicMat

cv::Mat CeleX5::getFullPicMat()

Returns

The frame buffer (cv::Mat(800, 1280)) in *Full- Picture Mode*.

This method is used to obtain a full-frame picture mat. It is similar to call [getFullPicBuffer](#), for example,

```
#include <opencv2/opencv.hpp>
#include <celex5/celex5.h>

int main()
{
    CeleX5 *pCeleX = new CeleX5;
    if (pCeleX == NULL)
        return 0;

    pCeleX->openSensor(CeleX5::CeleX5_MIPI);
    pCeleX->setFpnFile(FPN_PATH);
    pCeleX->setSensorFixedMode(CeleX5:: Full_Picture_Mode);
    while (true)
    {
        if (sensorMode == CeleX5::Full_Picture_Mode)
        {
            if (!pCeleX->getFullPicMat().empty())
            {
                cv::Mat fullPicMat = pCeleX->getFullPicMat();
                cv::imshow("FullPic", fullPicMat);
                cv::waitKey(10);
            }
        }
    }
}
```

See also

[getFullPicBuffer](#)

2.3.10 getEventPicBuffer

void getEventPicBuffer(**unsigned char*** buffer, **emEventPicType** type = EventBinaryPic)

Parameters

[in] **type** The event frame buffer (size is 1280 * 800) according to the type you specify.

[in] **type** The event picture type.

This method is used to obtain an event picture buffer by the given event pic type when the sensor works in *Event Mode*. For more details, please refer to the explanation of [emEventPicMode](#).

```
#include <opencv2/opencv.hpp>
#include <celex5/celex5.h>

int main()
{
    CeleX5 *pCeleX = new CeleX5;
    if (NULL == pCeleX)
        return 0;

    pCeleX->openSensor(CeleX5::CeleX5_MIPI);
    pCeleX->setFpnFile(FPN_PATH);
```

```

pCeleX->setSensorFixedMode(CeleX5::Event_Address_Only_Mode);
int imgSize = 1280 * 800;
unsigned char* pBuffer1 = new unsigned char[imgSize];
while (true)
{
    if (sensorMode == CeleX5::Event_Address_Only_Mode
    {
        //get buffers when sensor works in Event Mode
        pCeleX->getEventPicBuffer(pBuffer1 , CeleX5::EventBinaryPic);
        cv::Mat matEventPic(800, 1280, CV_8UC1, pBuffer1);
        cv::imshow("Event-EventBinaryPic", matEventPic);
        cvWaitKey(10);
    }
}
}

```

See also

[getEventPicMat](#)

2.3.11 getEventPicMat

cv::Mat CeleX5::getEventPicMat(emEventPicMode type)

Parameters

[in] **type** The event picture type.

Returns

The event frame buffer (cv::Mat(800, 1280)) according to the type you specify.

This method is used to obtain an event picture mat by the given event pic type when the sensor works in *Event Mode*. This method can obtain seven different types of pictures include binary, gray, count etc. For more details about these types, please refer to [emEventPicType](#).

See also

[getEventPicBuffer](#)

2.3.12 getEventDataVector

bool CeleX5::getEventDataVector(std::vector<EventData>& data)

bool CeleX5::getEventDataVector(std::vector<EventData> &vector, uint64_t& frameNo)

Parameters

[out] **data** The vector of event data at each frame time.

[out] **frameNo** The frame number of the event data vector.

Returns

If the vector of event data is not empty, return true. Otherwise it will return false.

This method is used to obtain vector of event data at each frame time. Default frame time is 30ms. Each event data contains rows, columns, brightness and time information. For more details, please refer to the explanation of [EventData](#). It can be used in real-time or in the offline bin files.

2.3.13 getOpticalFlowPicBuffer

void CeleX5::getOpticalFlowPicBuffer(unsigned char* buffer, emFullPicType type = Full_Optical_Flow_Pic)

Parameters

[in] **buffer** The Optical-Flow frame buffer (size is 1280 * 800).

[in] **type** The full-frame optical flow type.

This method is used to obtain the Optical-flow frame buffer. For more type of the Optical-Flow, see [emFullPicType](#).

For example,

```
#include <opencv2/opencv.hpp>
#include <celex5/celex5.h>
int main()
{
    CeleX5 *pCeleX = new CeleX5;
    if (NULL == pCeleX)
        return 0;
    pCeleX->openSensor(CeleX5::CeleX5_MIPI);
    pCeleX->setSensorFixedMode(CeleX5::Full_Optical_Flow_1_Mode);
    int imgSize = 1280 * 800;
    unsigned char* pOpticalFlowBuffer = new unsigned char[imgSize];
    while (true)
    {
        //get optical-flow data when sensor works in EventMode
        //optical-flow raw data - display gray image
        pCeleX->getOpticalFlowPicBuffer(pOpticalFlowBuffer, CeleX5:: Full_Optical_Flow_Pic);
        cv::Mat matOpticalRaw(800, 1280, CV_8UC1, pOpticalFlowBuffer);
        cv::imshow("Optical-Flow Buffer - Gray", matOpticalRaw);
        cvWaitKey(10);
    }
    return 1;
}
```

See also

[getOpticalFlowPicMat](#)

2.3.14 getOpticalFlowPicMat

cv::Mat **CeleX5::getOpticalFlowPicMat** (**emFullPicType** type)

Returns

The optical flow frame buffer (cv::Mat(800, 1280)).

This method returns the optical flow picture buffer in cv::Mat form when it is called. For more type of the Optical-Flow, see [emFullPicType](#).

See also

[getOpticalFlowPicBuffer](#)

2.3.15 getFullPicFrameTime

uint32_t **CeleX5::getFullPicFrameTime**()

Returns

The time of generating a full-frame picture, unit is ms.

This method is used to obtain the time of generating a full-frame picture when the CeleX-5 sensor works in *Full-Picture Mode*.

2.3.16 setEventFrameTime

void **CeleX5::setEventFrameTime**(uint32_t msec)

Parameters

[in] msec The frame time of *Event Mode*, unit is ms.

This method is used to set the frame time when CeleX-5 sensor is in the *Event Mode*. It modifies the frame length when the software creates event frames without changing the hardware parameters.

See also

[getEventFrameTime](#)

2.3.17 getEventFrameTime

uint32_t **CeleX5::getEventFrameTime**()

Returns

The frame time of *Event Mode*, unit is ms.

This method is used to obtain the frame time when CeleX-5 sensor is in the *Event Mode*.

See also

[setEventFrameTime](#)

2.3.18 setOpticalFlowFrameTime

void **CeleX5::setOpticalFlowFrameTime**(uint32_t msec)

Parameters

[in] **msec** The time of generating a full-frame optical-flow picture, unit is ms.

This method is used to set the time of generating a full-frame picture when the CeleX-5 sensor works in *Full-frame Optical-flow Mode*. It changes the hardware parameters. The default value is 30ms, which means the sensor could generate about 33 full-frame optical-flow pictures per second. For more details about this time, please refers section [1.2.1.5](#).

See also

[getOpticalFlowFrameTime](#)

2.3.19 getOpticalFlowFrameTime

uint32_t CeleX5::getOpticalFlowFrameTime()

Returns

The time of generating a full-frame optical-flow picture, unit is ms.

This method is used to obtain the time of generating a full-frame optical-flow picture when the CeleX-5 sensor works in *Full-frame Optical-flow Mode*.

See also

[setOpticalFlowFrameTime](#)

2.3.20 setSensorLoopMode

void CeleX5::setSensorLoopMode(**CeleX5Mode** mode, **int** loopNum)

Parameters

[in] **mode** The working mode of CeleX-5 sensor.

[in] **loopNum** The number of the loop.

This method is used to set the working mode of one of three loops when CeleX-5 sensor works in the *Loop Mode*, the value of *loopNum* is 1, 2, and 3, which represent the first, second and third loop in the loop mode. For more details of the loop mode, see section [1.2.2](#).

See also

[getSensorLoopMode](#)

2.3.21 getSensorLoopMode

CeleX5Mode CeleX5::getSensorLoopMode(**int** loopNum)

Parameters

[in] **loopNum** The number of the loop.

Returns

The working mode of the given loopNum.

This method is used to get the working mode of one of three loops when CeleX-5 sensor works in the *Loop Mode*, for more details of the loop mode, see section [1.2.2](#).

See also[setSensorLoopMode](#)**2.3.22 setLoopModeEnabled****void** CeleX5::setLoopModeEnabled(**bool** enable)**Parameters**

[in] **enable** The state to enable or disable *Loop Mode*.

This method is used to enable the loop mode of the CeleX-5 sensor, for more details of the *Loop Mode*, see section [1.2.2](#).

See also[isLoopModeEnabled](#)**2.3.23 isLoopModeEnabled****bool** CeleX5::isLoopModeEnabled()**Returns**

The state whether the *Loop Mode* is enabled.

This method is used to check whether the loop mode is enabled, for more details of the loop mode, see section [1.3.2](#).

See also[setLoopModeEnabled](#)**2.3.24 setEventDuration****void** CeleX5::setEventDuration(**uint32_t** value)**Parameters**

[in] **value** The time duration of working in the *Event Mode*.

This method is used to set the time duration of working in the event mode when the CeleX-5 sensor is in the *Loop Mode*. For more details of the *Loop Mode*, see section [1.2.2](#).

See also[setPictureNumber](#)**2.3.25 setPictureNumber****void** setPictureNumber(**uint32_t** num, **CeleX5Mode** mode)**Parameters**

[in] **num** The picture number.

[in] **mode** The mode to be set the picture number.

This method is used to set the picture number of working in the *Full-frame Mode* when the CeleX-5 sensor is in the loop mode. For more details of the *Loop Mode*, see section [1.2.2](#).

See also

[setEventDuration](#)

2.3.26 setThreshold

void CeleX5::setThreshold(uint32_t value)

Parameters

[in] **value** Threshold value.

This method is used to configure the threshold value where the event triggers (the light intensity change of a pixel exceeds this threshold, the pixel can be marked as an event or active pixel). The large the threshold value is, the less pixels that the event will be triggered (or less active pixels). It could be adjusted from 50 to 511, and the default value is 171.

The threshold value only works when the CeleX-5 sensor is in the *Event Mode*, however, the Sensor still outputs a complete image regardless of the threshold value when it works in *Full-Picture Mode*.

See also

[getThreshold](#)

2.3.27 getThreshold

uint32_t CeleX5::getThreshold()

Returns

Threshold value.

This method is used to get threshold value where the event triggers.

See also

[setThreshold](#)

2.3.28 setBrightness

void CeleX5::setBrightness(uint32_t value)

Parameters

[in] **value** The register value associated with the brightness of the image.

This method is used to configure register parameter, which controls the brightness of the image CeleX-5 sensor generated. It could be adjusted from 0 to 1023, and the default value is 150.

See also

[getBrightness](#)

2.3.29 getBrightness

void CeleX5::getBrightness(uint32_t value)

Returns

The register value associated with the brightness of the image.

This method is used to get the register value associated with the brightness of the image that the CeleX-5 sensor generated.

See also

[setBrightness](#)

2.3.30 setContrast

void CeleX5::setContrast(uint32_t value)

Parameters

[in] **value** The register value associated with the contrast of the image.

This method is used to configure register parameter, which controls the contrast of the image CeleX-5 sensor generated. It could be adjusted from 1 to 3, and the default value is 1.

See also

[getContrast](#)

2.3.31 getContrast

uint32_t CeleX5::getContrast()

Returns

The register value associated with the contrast of the image.

This method is used to get the register value associated with the contrast of the image that the CeleX-5 sensor generated.

See also

[setContrast](#)

2.3.32 setClockRate

void CeleX5::setClockRate(uint32_t value)

Parameters

[in] **value** The clock rate of the CeleX-5 sensor, unit is MHz

This method is used to set the clock rate of the sensor. By default, the CeleX-5 sensor works at 100 MHz and the range of clock rate is from 20 to 100, step is 10.

See also

[getClockRate](#)

2.3.33 getClockRate

uint32_t CeleX5::getClockRate()

Returns

The clock rate of the CeleX-5 sensor, unit is MHz

This method is used to obtain the clock rate of the CeleX-5 sensor. The range of clock rate is from 20 to 100.

See also

[setClockRate](#)

2.3.34 setEventDataFormat

void CeleX5::setEventDataFormat(int format)

Parameters

[in] **format** The envet data format to be used.

This method is used to set the event data format to be used.

See also

[getEventDataFormat](#)

2.3.35 getEventDataFormat

int CeleX5::getEventDataFormat()

Returns

The event data format to be used.

This method is used to obtain the event data format have been used.

See also

[setEventDataFormat](#)

2.3.36 reset

void CeleX5::reset ()

This method is used to reset the sensor and clear the data in the FIFO buffer.

2.3.37 startRecording

void CeleX5::startRecording(std::string filePath)

Parameters

[in] **filePath** The directory path to save the bin file

This method is used to start recording the raw data of the sensor and save it as a bin file. The type in which data will be saved depends on which mode Sensor is working in.

See also

[stopRecording](#)

2.3.38 stopRecording

void CeleX5::stopRecording()

This method is used to stop recording the raw data of the sensor.

See also

[startRecording](#)

2.3.39 openBinFile

bool CeleX5::openBinFile(string filePath)

Parameters

[in] **filePath** The directory path and name of the bin file to be played.

Returns

The value whether the bin file is opened.

This method is used to open the bin file in the user-specified directory. It returns true if the bin file opens successfully, otherwise it returns false.

See also

[readBinFileData](#)

2.3.40 readBinFileData

bool CeleX5::readBinFileData()

Returns

The value whether the bin is read over.

This method is used to read data from the opened bin file. If reaching the end of the bin file it will return true, otherwise it will return false. Before reading the bin file, you need to open the file first.

See also

[openBinFile](#)

2.3.41 getBinFileAttributes

BinFileAttributes CeleX5::getBinFileAttributes(std::string& binFile)

Parameters

[in] **binFile** The path of the bin file.

Returns

A structure of the file attributes.

This method is used to obtain the attributes of the bin file. It will return a structure which includes hour, minute, second, mode, length, and clock rate when we call this method. For more details, please refer to the explanation of [BinFileAttributes](#).

2.3.42 getIMUData

int CeleX5::getIMUData(std::vector<IMUData>& data)

Parameters

[out] **data** Obtained IMU data packets.

Returns

The number of IMU data packets actually obtained.

This method is used to obtain the IMU data packets. For a detailed explanation of the IMU data packet, see [IMUData](#).

2.3.43 setRowDisabled


void setRowDisabled(uint8_t rowMask);

Parameters

[out] **rowMask** Bit parameters for the specified rows

This method is used to modify the resolution of the image output by CeleX-5 Sensor (Disable outputting data for the specified rows).

As shown in the figure below, the default image resolution of the CeleX-5 Sensor is 1280*800, which can be divided into 8 separate horizontal blocks. The size of each block is 1280*100, and each block has a corresponding control bit (rowMask[7] to rowMask[0] from top to bottom). For example, if you want to close the top 100 rows, just set rowMask[7] to 1 and the other control bits to 0, that is, set rowMask to 128 (b'10000000).

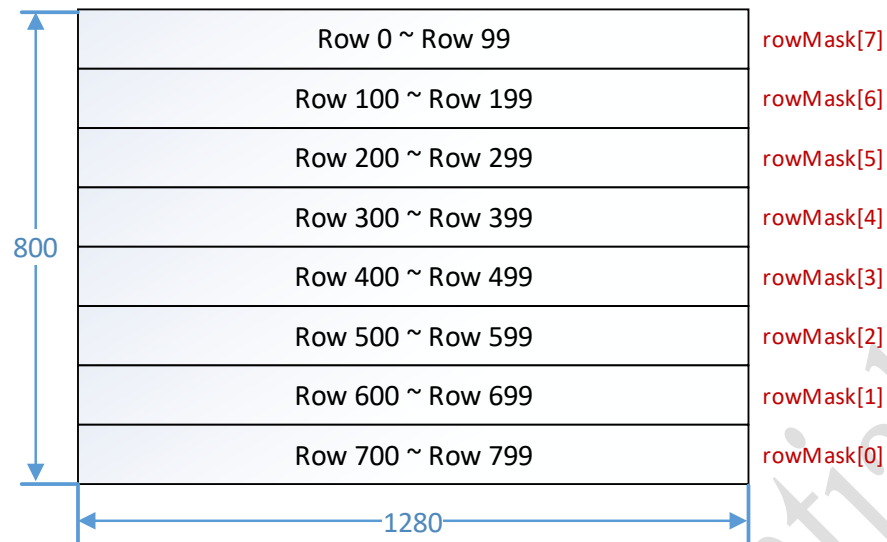

3. Appendix

Table 3-1: Sensor Operation Mode Control Parameters

Addr	Name	Width	Default	Note
50	SWITCH_RESET_GAPA	[7:0]	200	Set gap time during mode switching
51	SWITCH_RESET_GAPB	[7:0]	250	Set gap time during mode switching
52	SWITCH_RESET_GAPC	[7:0]	200	Set gap time during mode switching
53	SENSOR_MODE_1	[2:0]	0	The operation mode in fixed mode, or the first operation mode in loop mode
54	SENSOR_MODE_2	[2:0]	3	The second operation mode in loop mode
55	SENSOR_MODE_3	[2:0]	4	The third operation mode in loop mode
57	EVENT_DURATION	[7:0]	20	Duration of event mode when sensor operates in loop mode -- Low byte
58	EVENT_DURATION	[1:0]	0	Duration of event mode when sensor operates in loop mode -- High byte
59	PICTURE_NUMBER_1	[7:0]	1	Number of pictures to acquire in Mode_D
60	PICTURE_NUMBER_2	[7:0]	1	Number of pictures to acquire in Mode_E
61	PICTURE_NUMBER_3	[7:0]	1	Number of pictures to acquire in Mode_F
62	PICTURE_NUMBER_4	[7:0]	3	Number of pictures to acquire in Mode_G
63	PICTURE_NUMBER_5	[7:0]	3	Number of pictures to acquire in Mode_H
64	SENSOR_MODE_SELECT	[0]	0	Sensor operation mode select: 0: fixed mode / 1: loop mode

Table 3-2: Sensor Data Transfer Parameters

Addr	Name	Width	Default	Note
70	EXTERNAL_DATA	[5:0]	0	Data from external sensor --- high byte
71	EXTERNAL_DATA	[7:0]	0	Data from external sensor --- middle byte
72	EXTERNAL_DATA	[7:0]	0	Data from external sensor --- low byte
73	EVENT_PACKET_SELECT	[1:0]	2	Event packet format select
74	MIPI_PIXEL_NUM_EVENT	[7:0]	254	Number of pixels in one row at event mode = 4*(this value+1)
75	ADC_RESOLUTION_SEL	[0]	1	Sensor ADC resolution select: 1: 12bit / 0: 8bit
76	MIPI_PIXEL_NUM_FRAME	[6:0]	5 (fixed)	Number of pixels in one row at full-frame mode --- high byte
77	MIPI_PIXEL_NUM_FRAME	[7:0]	0 (fixed)	Number of pixels in one row at full-frame mode --- low byte
78	MIPI_DATA_SOURCE_SELECT	[0]	1	For event mode, MIPI data source select: 1: internal data / 0: external data
79	MIPI_ROW_NUM_EVENT	[7:0]	0	Number of rows in one frame at event mode --- high byte
80	MIPI_ROW_NUM_EVENT	[7:0]	200	Number of rows in one frame at event mode --- low byte

				mode --- low byte
81	MIPI_VIR_CHANNEL_ID	[5:0]	0	MIPI parameter, virtual channel ID
82	MIPI_HD_GAP_FULLFRAME	[2:0]	2	In full-frame mode, the interval between the last long packet and EOF -- high byte
83	MIPI_HD_GAP_FULLFRAME	[7:0]	132	In full-frame mode, the interval between the last long packet and EOF -- low byte
84	MIPI_HD_GAP_EVENT	[2:0]	2	In event mode, the interval between the last long packet and EOF -- high byte
85	MIPI_HD_GAP_EVENT	[7:0]	89	In event mode, the interval between the last long packet and EOF -- low byte
86	MIPI_GAP_EOF_SOF	[2:0]	0	High byte
87	MIPI_GAP_EOF_SOF	[7:0]	100	Low byte