



EEZ BB3 SCPI Reference guide

Modular T&M solution

Firmware version: M1 0.3

Ver. 0.2 DRAFT – 12/2019

www.envox.hr – github.com/eez-open



Free as in Freedom

Table of Contents

Start page.....	1
1. Introduction.....	11
1.1. About SCPI.....	11
2. Syntax and style.....	13
2.1. Root Specifier.....	13
2.2. Command termination.....	13
2.3. Command separators.....	13
2.4. Querying parameter settings.....	13
2.5. Using the MIN, MAX, and DEF Parameters.....	13
2.6. Command and message types.....	14
2.7. Required Commands.....	14
2.7.1. Base functionality for the Power supply instrument class.....	14
2.8. Multiple Commands in a Message.....	15
2.9. Moving Among Subsystems.....	15
2.10. SCPI parameter types.....	16
3. Registers and queues.....	17
3.1. Standard Event Status Register.....	17
3.2. Status Byte Register.....	19
3.3. OPERation Status Register.....	20
3.3.1. Operation INSTRument Status register.....	21
3.3.2. Operation Instrument SUMmary status register.....	22
3.4. QUEStionable Status Register.....	22
3.4.1. Questionable INSTRument Status register.....	24
3.4.2. Questionable Instrument SUMmary status register.....	24
3.5. Error queue.....	25
4. Common command reference.....	27
4.1. *CLS.....	27
4.2. *ESE.....	27
4.3. *ESR?.....	28
4.4. *IDN?.....	28
4.5. *OPC.....	28
4.6. *RCL.....	29
4.7. *RST.....	29
4.8. *SAV.....	30
4.9. *SRE.....	31
4.10. *STB?.....	31
4.11. *TRG.....	31
4.12. *TST?.....	32
4.13. *WAI.....	32
5. Subsystem command reference.....	33
5.1. ABORT.....	35
5.1.1. ABORt.....	35
5.1.2. ABORt:DLOG.....	35
5.2. CALibration.....	37
5.2.1. CALibration[:MODE].....	37
5.2.2. CALibration:CLEAR.....	38
5.2.3. CALibration:CURREnt[:DATA].....	38
5.2.4. CALibration:CURREnt:LEVEL.....	39
5.2.5. CALibration:CURREnt:RANGE.....	39

5.2.6. CALibration:PASSword:NEW.....	40
5.2.7. CALibration:REMark.....	40
5.2.8. CALibration:SAVE.....	41
5.2.9. CALibration:SCReen:INIT.....	41
5.2.10. CALibration:STATe.....	41
5.2.11. CALibration:VOLTage[:DATA].....	41
5.2.12. CALibration:VOLTage:LEVel.....	42
5.3. DIAGnostic.....	43
5.3.1. DIAGnostic[:INFOrmation]:ADC?.....	43
5.3.2. DIAGnostic[:INFOrmation]:FAN?.....	43
5.3.3. DIAGnostic[:INFOrmation]:CALibration?.....	43
5.3.4. DIAGnostic[:INFOrmation]:PROTection?.....	44
5.3.5. DIAGnostic[:INFOrmation]:TEST?.....	45
5.4. DISPlay.....	47
5.4.1. DISPlay:BRIGHtness.....	47
5.4.2. DISPlay:CMAP.....	47
5.4.3. DISPlay:CMAP:COLor:CATalog?.....	48
5.4.4. DISPlay:CMAP:COLor[:RGB].....	48
5.4.5. DISPlay:DATA?.....	48
5.4.6. DISPlay:VIEW.....	49
5.4.7. DISPlay[:WINdow][:STATe].....	49
5.4.8. DISPlay[:WINdow]:TEXT.....	49
5.4.9. DISPlay[:WINdow]:TEXT:CLEAr.....	50
5.5. FETCh.....	51
5.5.1. FETCh:AHOuR?.....	51
5.5.2. FETCh:WHOUr?.....	51
5.6. HCOPy.....	53
5.6.1. HCOPy:DESTination.....	53
5.6.2. HCOPy[:IMMediate].....	53
5.6.3. HCOPy:SDUMp[:IMMediate].....	53
5.7. INITiate.....	55
5.7.1. INITiate.....	55
5.7.2. INITiate:DLOG.....	55
5.7.3. INITiate:CONTInuous.....	57
5.8. INSTrument.....	59
5.8.1. INSTrument[:SElect].....	59
5.8.2. INSTrument:CATalog?.....	60
5.8.3. INSTrument:CATalog:FULL?.....	60
5.8.4. INSTrument:COUPle:TRACking.....	60
5.8.5. INSTrument:DISPlay:TRACe[<n>].....	62
5.8.6. INSTrument:DISPlay:TRACe:SWAP.....	62
5.8.7. INSTrument:DISPlay:YT:RATE.....	63
5.8.8. INSTrument:COUPle:TRIGger.....	63
5.8.9. INSTrument:NSElect.....	63
5.9. MEASure.....	65
5.9.1. MEASure[:SCALar]:CURRent[:DC].....	65
5.9.2. MEASure[:SCALar]:POWEr[:DC].....	65
5.9.3. MEASure[:SCALar]:TEMPerature[:THERmistor][:DC].....	66
5.9.4. MEASure[:SCALar][:VOLTage][:DC].....	66
5.10. MEMOry.....	67
5.10.1. MEMOry:NSTATes.....	67
5.10.2. MEMOry:STATe:CATalog.....	67

5.10.3. MEMory:STATe:DELeTe.....	68
5.10.4. MEMory:STATe:NAME.....	68
5.10.5. MEMory:STATe:RECall:AUTO.....	68
5.10.6. MEMory:STATe:RECall:SELeCt.....	69
5.10.7. MEMory:STATe:VALId.....	69
5.11. MMEMemory.....	71
5.11.1. MMEMemory:CATalog.....	72
5.11.2. MMEMemory:CATalog:LENGth.....	73
5.11.3. MMEMemory:CDIRectory.....	73
5.11.4. MMEMemory:CLOSe.....	74
5.11.5. MMEMemory:COpy.....	74
5.11.6. MMEMemory:DATE.....	75
5.11.7. MMEMemory:DELeTe.....	75
5.11.8. MMEMemory:DOWNload:ABORt.....	75
5.11.9. MMEMemory:DOWNload:DATA.....	76
5.11.10. MMEMemory:DOWNload:FNAME.....	76
5.11.11. MMEMemory:DOWNload:SIZE.....	76
5.11.12. MMEMemory:FEED.....	77
5.11.13. MMEMemory:INFOrmation.....	77
5.11.14. MMEMemory:LOAD:LIST.....	77
5.11.15. MMEMemory:LOAD:PROFile.....	78
5.11.16. MMEMemory:LOCK.....	78
5.11.17. MMEMemory:MDIRectory.....	78
5.11.18. MMEMemory:MOVE.....	78
5.11.19. MMEMemory:MDIRectory.....	79
5.11.20. MMEMemory:NAME.....	79
5.11.21. MMEMemory:OPEN.....	80
5.11.22. MMEMemory:STORe:LIST.....	80
5.11.23. MMEMemory:STORe:PROFile.....	80
5.11.24. MMEMemory:TIME.....	81
5.11.25. MMEMemory:UNLock.....	81
5.11.26. MMEMemory:UPLoad.....	81
5.12. OUTPut.....	83
5.12.1. OUTPut[:STATe].....	83
5.12.2. OUTPut[:STATe]:TRIGgered.....	84
5.12.3. OUTPut:DELAy:ON.....	84
5.12.4. OUTPut:DELAy:OFF.....	84
5.12.5. OUTPut:DPRog.....	84
5.12.6. OUTPut:MODE?.....	85
5.12.7. OUTPut:PROTection:CLEAr.....	85
5.12.8. OUTPut:PROTection:COUPle.....	86
5.12.9. OUTPut:PROTection:MEASure.....	86
5.12.10. OUTPut:TRACK[:STATe].....	87
5.13. SENSE.....	89
5.13.1. SENSE:AHOuR:RESet.....	89
5.13.2. SENSE:CURREnt[:DC]:RANGe.....	89
5.13.3. SENSE:DLOG:FUNCTion:CURREnt.....	90
5.13.4. SENSE:DLOG:FUNCTion:POWer.....	90
5.13.5. SENSE:DLOG:FUNCTion:VOLTagE.....	90
5.13.6. SENSE:DLOG:PERiod.....	91
5.13.7. SENSE:DLOG:TIME.....	91
5.13.8. SENSE:WHOUr:RESet.....	91

5.14. SOURce.....	93
5.14.1. [SOURce[<n>]]:ARB:AMPLitude.....	94
5.14.2. [SOURce[<n>]]:ARB:COUNT.....	95
5.14.3. [SOURce[<n>]]:ARB:FREQuency.....	95
5.14.4. [SOURce[<n>]]:ARB:FUNCTion:TYPE.....	95
5.14.5. [SOURce[<n>]]:ARB:OFFset.....	96
5.14.6. [SOURce[<n>]]:ARB:PHASe[:ADJust].....	96
5.14.7. [SOURce[<n>]]:ARB:SHAPE.....	97
5.14.8. [SOURce[<n>]]:CURRent.....	97
5.14.9. [SOURce[<n>]]:CURRent:STEP.....	98
5.14.10. [SOURce[<n>]]:CURRent:TRIGgered.....	99
5.14.11. [SOURce[<n>]]:CURRent:LIMit[:POSitive][:IMMediate][:AMPLitude].....	99
5.14.12. [SOURce[<n>]]:CURRent:MODE.....	100
5.14.13. [SOURce[<n>]]:CURRent:SLEW:FALLing.....	100
5.14.14. [SOURce[<n>]]:CURRent:SLEW:RISing.....	101
5.14.15. [SOURce[<n>]]:CURRent:PROTection:DELay[:TIME].....	101
5.14.16. [SOURce[<n>]]:CURRent:PROTection:STATe.....	101
5.14.17. [SOURce[<n>]]:CURRent:PROTection:TRIPped?.....	102
5.14.18. [SOURce[<n>]]:LIST:COUNT.....	102
5.14.19. [SOURce[<n>]]:LIST:CURRent[:LEVel].....	102
5.14.20. [SOURce[<n>]]:LIST:DWELL.....	103
5.14.21. [SOURce[<n>]]:LIST:VOLTage[:LEVel].....	103
5.14.22. [SOURce[<n>]]:POWer:LIMit.....	104
5.14.23. [SOURce[<n>]]:POWer:PROTection[:LEVel].....	105
5.14.24. [SOURce[<n>]]:POWer:PROTection:DELay[:TIME].....	105
5.14.25. [SOURce[<n>]]:POWer:PROTection:STATe.....	106
5.14.26. [SOURce[<n>]]:POWer:PROTection:TRIPped?.....	106
5.14.27. [SOURce[<n>]]:VOLTage.....	106
5.14.28. [SOURce[<n>]]:VOLTage:LIMit[:POSitive][:IMMediate][:AMPLitude].....	107
5.14.29. [SOURce[<n>]]:VOLTage:STEP.....	108
5.14.30. [SOURce[<n>]]:VOLTage:TRIGgered.....	108
5.14.31. [SOURce[<n>]]:VOLTage:MODE.....	109
5.14.32. [SOURce[<n>]]:VOLTage:PROGram[:SOURce].....	109
5.14.33. [SOURce[<n>]]:VOLTage:PROTection[:LEVel].....	110
5.14.34. [SOURce[<n>]]:VOLTage:PROTection:DELay[:TIME].....	111
5.14.35. [SOURce[<n>]]:VOLTage:PROTection:STATe.....	111
5.14.36. [SOURce[<n>]]:VOLTage:PROTection:TRIPped?.....	112
5.14.37. [SOURce[<n>]]:VOLTage:PROTection:TYPE.....	112
5.14.38. [SOURce[<n>]]:VOLTage:SENSe[:SOURce].....	113
5.14.39. [SOURce[<n>]]:VOLTage:SLEW:FALLing.....	113
5.14.40. [SOURce[<n>]]:VOLTage:SLEW:RISing.....	114
5.15. STATus.....	115
5.15.1. STATus:OPERation[:EVENT]?.....	116
5.15.2. STATus:OPERation:CONDition?.....	116
5.15.3. STATus:OPERation:ENABLE.....	116
5.15.4. STATus:OPERation:INSTrument[:EVENT]?.....	117
5.15.5. STATus:OPERation:INSTrument:CONDition?.....	117
5.15.6. STATus:OPERation:INSTrument:ENABLE.....	117
5.15.7. STATus:OPERation:INSTrument:ISUMmary[<n>][:EVENT]?.....	118
5.15.8. STATus:OPERation:INSTrument:ISUMmary[<n>]:CONDition?.....	118
5.15.9. STATus:OPERation:INSTrument:ISUMmary<n>:ENABLE.....	118
5.15.10. STATus:PREset.....	119

5.15.11. STATus:QUEStionable[:EVENT]?	119
5.15.12. STATus:QUEStionable:CONDition?	119
5.15.13. STATus:QUEStionable:ENABle	120
5.15.14. STATus:QUEStionable:INSTrument[:EVENT]?	120
5.15.15. STATus:QUEStionable:INSTrument:CONDition?	120
5.15.16. STATus:QUEStionable:INSTrument:ENABle	120
5.15.17. STATus:QUEStionable:INSTrument:ISUMmary[<n>][:EVENT]?	121
5.15.18. STATus:QUEStionable:INSTrument:ISUMmary[<n>]:CONDition?	121
5.15.19. STATus:QUEStionable:INSTrument:ISUMmary[<n>]:ENABle	122
5.16. SYSTem	123
5.16.1. SYSTem:BEEPer	125
5.16.2. SYSTem:BEEPer:KEY:STATe	125
5.16.3. SYSTem:BEEPer:STATe	125
5.16.4. SYSTem:CAPability?	126
5.16.5. SYSTem:CHANnel[:COUNT]?	126
5.16.6. SYSTem:CHANnel:INfOrmation:AHOur:TOTal?	126
5.16.7. SYSTem:CHANnel:INfOrmation:CURRent?	127
5.16.8. SYSTem:CHANnel:INfOrmation:ONTime:LAST?	127
5.16.9. SYSTem:CHANnel:INfOrmation:ONTime:TOTal?	127
5.16.10. SYSTem:CHANnel:INfOrmation:POWer?	127
5.16.11. SYSTem:CHANnel:INfOrmation:PROGram?	128
5.16.12. SYSTem:CHANnel:INfOrmation:VOLTage?	128
5.16.13. SYSTem:CHANnel:INfOrmation:WHOur:TOTal?	128
5.16.14. SYSTem:CHANnel:MODEl?	129
5.16.15. SYSTem:CHANnel:SLOT?	129
5.16.16. SYSTem:CHANnel:SNO?	129
5.16.17. SYSTem:COMMunicate:ENABle	130
5.16.18. SYSTem:COMMunicate:ETHernet:ADDReSS	130
5.16.19. SYSTem:COMMunicate:ETHernet:DHCP	130
5.16.20. SYSTem:COMMunicate:ETHernet:DNS	131
5.16.21. SYSTem:COMMunicate:ETHernet:GATEway	131
5.16.22. SYSTem:COMMunicate:ETHernet:MAC	131
5.16.23. SYSTem:COMMunicate:ETHernet:PORT	132
5.16.24. SYSTem:COMMunicate:ETHernet:SMASk	132
5.16.25. SYSTem:COMMunicate:NTP	132
5.16.26. SYSTem:COMMunicate:RLSTate	133
5.16.27. SYSTem:COMMunicate:SERial:BAUD	133
5.16.28. SYSTem:COMMunicate:SERial:PARity	133
5.16.29. SYSTem:CPU:INfOrmation:ONTime:LAST?	134
5.16.30. SYSTem:CPU:INfOrmation:ONTime:TOTal?	134
5.16.31. SYSTem:CPU:MODEl?	134
5.16.32. SYSTem:DATE	134
5.16.33. SYSTem:DIGital:INPut:DATA	135
5.16.34. SYSTem:DIGital:OUTPut:DATA	135
5.16.35. SYSTem:DIGital:PIN<n>:FUNCTion	135
5.16.36. SYSTem:DIGital:PIN<n>:POLarity	136
5.16.37. SYSTem:ERRor	137
5.16.38. SYSTem:ERRor:COUNt?	137
5.16.39. SYSTem:INHibit?	137
5.16.40. SYSTem:KEY:DEFine	137
5.16.41. SYSTem:KEY:DELete	138
5.16.42. SYSTem:KLOCK	138

5.16.43. SYSTem:LOCAl.....	138
5.16.44. SYSTem:MEASure[:SCALar][:VOLTage][:DC]?.....	139
5.16.45. SYSTem:PASSword:CALibration:RESet.....	139
5.16.46. SYSTem:PASSword:FPANel:RESet.....	139
5.16.47. SYSTem:PASSword:NEW.....	139
5.16.48. SYSTem:PON:OUTPut:DISable.....	139
5.16.49. SYSTem:POWER.....	140
5.16.50. SYSTem:POWER:PROTection:TRIP.....	140
5.16.51. SYSTem:REMOte.....	140
5.16.52. SYSTem:RESet.....	141
5.16.53. SYSTem:RWLock.....	141
5.16.54. SYSTem:TEMPerature:PROTection[:HIGH][:LEVel].....	141
5.16.55. SYSTem:TEMPerature:PROTection[:HIGH]:CLEar.....	142
5.16.56. SYSTem:TEMPerature:PROTection[:HIGH]:DELay[:TIME].....	142
5.16.57. SYSTem:TEMPerature:PROTection[:HIGH]:STATe.....	142
5.16.58. SYSTem:TEMPerature:PROTection[:HIGH]:TRIPped?.....	143
5.16.59. SYSTem:TIME.....	143
5.16.60. SYSTem:TIME:DST.....	144
5.16.61. SYSTem:TIME:ZONE.....	144
5.16.62. SYSTem:VERSion?.....	144
5.17. TRIGger.....	145
5.17.1. TRIGger[:SEQuence][:IMMediate].....	145
5.17.2. TRIGger[:SEQuence]:DELay.....	145
5.17.3. TRIGger[:SEQuence]:EXIT:CONDition.....	146
5.17.4. TRIGger[:SEQuence]:SOURce.....	146
5.17.5. TRIGger:DLOG[:IMMediate].....	147
5.17.6. TRIGger:DLOG:SOURce.....	147
6. Device-specific (unclassified) commands.....	149
6.1.1. APPLy.....	149
6.1.2. DEBUg.....	149
7. Error messages.....	151
7.1. Command Error [-199, -100].....	151
7.2. Execution Error [-299, -200].....	152
7.3. Device-Specific Error [-399, -300], [1, 32767].....	154
7.3.1. Self-Test Error Messages.....	157
8. Parameters and settings.....	159
8.1. Programming parameters.....	159
8.1.1. Voltage.....	159
8.1.2. Current.....	159
8.1.3. Power.....	159
8.2. Reset Settings (*RST).....	160
8.3. Special modes of operation.....	162
8.4. Default settings.....	162
9. Software simulator.....	165
9.1. SIMULator.....	167
9.1.1. SIMULator:EXIT.....	167
9.1.2. SIMULator:GUI.....	167
9.1.3. SIMULator:LOAD.....	167
9.1.4. SIMULator:LOAD:STATe.....	168
9.1.5. SIMULator:PIN1.....	168
9.1.6. SIMULator:PWRGood.....	169
9.1.7. SIMULator:QUIT.....	169

9.1.8. SIMULator:RPOL.....	169
9.1.9. SIMULator:TEMPerature.....	170
9.1.10. SIMULator:VOLTage:PROGram:EXTernal.....	170
10. Programming examples.....	171
10.1. Set channel output values and working with the OCP.....	171
10.2. Voltage and current calibration.....	173
10.3. Working with profiles.....	174
10.4. Get identification info and self-test results.....	175
10.5. Programming output voltage using the list of values.....	176
11. SCPI commands scheduled for upcoming releases.....	179
12. SCPI commands summary.....	181

1. Introduction

This manual contains reference information for programming the open hardware/open source EEZ Bench Box 3 (BB3) that includes [STM32F7 MCU board](#) and multiple peripheral modules such as [DCP405](#) or [DCM220](#) power modules over the remote interface using the SCPI programming language.

The SCPI (*Standard Commands for Programmable Instruments*, often pronounced “skippy”) is an open standard freely available on the [IVI Foundation](#) web pages. The current version is SCPI 1999.0.

SCPI is a pure software standard, and can be used over many communication interfaces. SCPI communications are ASCII text, and therefore can be supported in programs written in almost any computer language, such as C, C++, etc.

The physical communications link is not defined by SCPI. It was originally created with the IEEE 488 (GPIB) environment in mind, but it can also be used with RS-232 (serial), Ethernet, USB, VXIbus, HiSLIP, etc. The BB3 supports Serial (via USB) and Ethernet communication.

The application software that uses SCPI commands is called a *Controller* and that in a SCPI enabled device – such as the BB3 – is called an *Instrument*.

Please note that IEEE 488 standard documents are not freely available, and when it's mentioned in this manual we do so only for reference purposes. Those who wish to research the GPIB for better understanding or possible modification/improvement of the BB3 remote control may wish to purchase standards documents from the IEEE.

1.1. About SCPI

The SCPI 1999.0 standard document says (Section 1.3) the goal of SCPI is to reduce Automatic Test Equipment (ATE) program development time. SCPI does this goal by providing a consistent programming environment for instrument control and data usage. This is achieved by use of defined program messages, instrument responses, and data formats across all SCPI instruments, regardless of manufacturer.

A consistent program environment uses the same commands and parameters to control instruments that have the same function.

SCPI programming consistency is both vertical and horizontal. Vertical programming consistency defines program messages within an instrument class. An example of vertical consistency is using the same command for reading DC voltage from different multimeters supporting SCPI. Horizontal consistency uses the same command to control similar functions across instrument classes. For example, the trigger command would be the same for trigger functions found in conforming counters, oscilloscopes, function generators, etc.

A key to consistent programming is the reduction of multiple ways to control similar instrument functions. The philosophy of SCPI is that the same instrument functions are to be controlled by the same SCPI commands. To simplify learning, SCPI uses industry-standard names, and terms that are manufacturer and customer supported.

SCPI is designed to be expanded with new defined commands in the future without causing programming problems. As new instruments are introduced, the intent is to maintain program compatibility with existing SCPI instruments.

Additional links:

- Wikipedia [SCPI](#)
- Technopedia [Standard Commands For Programmable Instruments \(SCPI\)](#)
- Wikipedia [IEEE-488](#)
- Keysight (ex. Agilent) [Developing a SCPI command set](#)
- NI (National Instrument) [GPIB Hardware and Software Specifications](#)

Implementation links:

- [Open source SCPI device](#) library
- Keysight (ex. Agilent) [Application Note 1465-29](#)
- Keysight (ex. Agilent) [Command Expert](#)

2. Syntax and style

Throughout this document, the following conventions are used for the SCPI command syntax:

- Square brackets ([]) indicate optional keywords or parameters. The braces are not sent with the command string.
- Braces ({}) enclose parameters within a command string.
- Triangle brackets (<>) indicate that you must substitute a value or a code for the enclosed parameter.
- A vertical bar (|) separates one of two or more alternative parameters.

2.1. Root Specifier

When it precedes the first header of a message unit, the colon becomes the root specifier. It tells the command parser that this is the root or the top node of the command tree.

2.2. Command termination

A command string sent to the BB3 must terminate with a <new line>character. A <carriage return> followed by a <new line>is also accepted. Command string termination will always reset the current SCPI command path to the root level.

2.3. Command separators

A colon (:) is used to separate a command keyword from a lower-level keyword as shown below:

```
SOURce1:CURRent:PROTection:STATe
```

A semicolon (;) is used to separate two commands within the same subsystem, and can also minimize typing. For example, sending the following command string,

```
SOURce1:VOLTage 20;CURRent 300mA
```

is the same as sending the following two commands:

```
SOURce1:VOLTage 20  
SOURce1:CURRent 1.5
```

Use a colon and a semicolon to link commands from different subsystems. For example, in the following command string, an error is generated if you do not use the colon and semicolon:

```
SYSTem:BEEP;;SOURce1:CURRent 2.5
```

2.4. Querying parameter settings

You can query the value of most parameters by adding a question mark (?) to the command. For example, the following command sets the output voltage to 25.5 V:

```
VOLTage 25.5
```

You can query the value by executing:

```
VOLTage?
```

If error is occurred use [SYSTem:ERRor\[:NEXT\]?](#) to get more information about error.

2.5. Using the MIN, MAX, and DEF Parameters

For many commands, you can substitute "MIN" or "MAX" in place of a parameter. In some cases you may also substitute "DEF". For example, consider the following command:

```
[SOURce[<n>]]:VOLTage[:LEVel][:IMMediate][:AMPLitude] {<voltage>|MIN|DEF|MAX|UP|DOWN}
```

Instead of selecting a specific value for the <voltage> parameter, you can substitute MIN to set the voltage to its minimum value, MAX to set the voltage to its maximum value, or DEF to set the voltage to its default value. For list of parameter values see [Section 8.1](#)

2.6. Command and message types

SCPI commands can be divided to **common** and **subsystem** commands.

- Common commands are defined by the IEEE 488.2 standard to perform common interface functions. They begin with an * and consist of three letters (command) or three letters and a ? (query). Description of supported common commands can be found in [Section 4](#)
- Subsystem commands are specific to instrument functions. They can be a single command or a group of commands. The groups are comprised of commands that extend one or more levels below the root. See [Section 5](#) for commands that is created in accordance to the SCPI 1999.0 standard. Commands that is not defined by SCPI 1999.0 is labeled "unclassified" and are presented in [Section 6](#)

There are two types of SCPI messages, **program** and **response**.

- A program message consists of one or more properly formatted SCPI commands sent from the controller to the instrument. The message, which may be sent at any time, requests the instrument to perform some action.
- A response message consists of data in a specific SCPI format sent from the instrument to the controller. The instrument sends the message only in response to a **query** header.

2.7. Required Commands

The following commands are required in all SCPI instruments (see SCPI 1999.0 Section 4.2.1):

Mnemonic	SCPI 1999.0 Command Reference Section	SCPI 1999.0 Syntax and Style Section
:SYSTem		
:ERRor	21.8	
[:NEXT]?	21.8.3e	1996
:VERSion?	19.16	1991
:STATus	18	5
:OPERation		
[:EVENT]?		
:CONDition?		
:ENABle		
:ENABle?		
:QUESTionable		
[:EVENT]?		
:CONDition?		
:ENABle		
:ENABle?		
:PRESet		

2.7.1. Base functionality for the Power supply instrument class

SCPI Command	Description
OUTPut	
[:STATe] <bool>	Enables the specified output channel(s)
[SOURce[<n>]]	
CURRent	

```

[:LEVel]
  [:IMMediate][:AMPLitude] <current>   Sets the output current
VOLTage
  [:LEVel]
  [:IMMediate][:AMPLitude] <voltage>   Sets the output voltage

```

All SCPI power supplies shall implement the status reporting structure. STATus Subsystem defines the commands which shall be used to control the status reporting structure. For a power supply, the bits of interest in the QUESTionable status structure are VOLTage and CURRent. When a power supply is operating as a voltage source, bit 1 (CURRent) shall be set. When a power supply is operating as a current source, bit 0 (VOLTage) shall be set. When the output is unregulated, both bits shall be set (for example, while the output is changing to a new programmed value).

2.8. Multiple Commands in a Message

Multiple SCPI commands can be combined and sent as a single message with one message terminator. There are two important considerations when sending several commands within a single message:

- Use a semicolon to separate commands within a message.
- There is an implied header path that affects how commands are interpreted by the BB3.

The header path can be thought of as a string that gets inserted before each command within a message. For the first command in a message, the header path is a null string. For each subsequent command the header path is defined as the characters that make up the headers of the previous command in the message up to and including the last colon separator. An example of a message with two commands is:

```
OUTPut:STATe ON,CH1;PROTection:CLEAr CH1
```

which shows the use of the semicolon separating the two commands, and also illustrates the header path concept. Note that with the second command, the leading header OUTPut was omitted because after the OUTPut:STATe ON command, the header path became defined as OUTPut and thus the instrument interpreted the second command as:

```
OUTPut:PROTection:CLEAr CH1
```

In fact, it would have been syntactically incorrect to include the OUTPut explicitly in the second command, since the result after combining it with the header path would be:

```
OUTPut:OUTPut:PROTection:CLEAr CH1
```

which is incorrect.

You can combine common commands (IEEE488) with subsystem commands in the same message. Treat the common command as a message unit by separating it with a semicolon (the message unit separator). Common commands do not affect the header path; you may insert them anywhere in the message.

```
*TST?;SYSTem:ERRor?
```

2.9. Moving Among Subsystems

In order to combine commands from different subsystems, you need to be able to reset the header path to a null string within a message. You do this by beginning the command with a colon (:), which discards any previous header path. For example, you could clear the output protection and check the status of the Operation Condition register in one message by using a root specifier as follows:

```
OUTPut:PROTection:CLEAr CH1;:STATus:OPERation:CONDition?
```

The following message shows how to combine commands from different subsystems as well as within the same subsystem:

```
SOURce1:VOLTage:LEVel 7.5;:VOLTage:PROTection:DELay 10;:CURRent:LEVel 0.5
```

Note the use of the optional header LEVel to maintain the correct path within the subsystems, and the

use of the root specifier to move between subsystems.

2.10. SCPI parameter types

The SCPI language defines several different data formats to be used in program messages and response messages:

Numeric Commands that require numeric parameters will accept all commonly used representations of numbers like integer (also known as NR1 format specified in ANSI X3.42-1990) or decimal representations of numbers including optional signs, decimal points (NR2 format), and scientific notation (i.e. 10E3 or NR3 format). Special values for numeric parameters like MINimum, MAXimum, and DEFault are also accepted. You can also send engineering unit suffixes (V, A, or SEC) with numeric parameters. If only specific numeric values are accepted, the BB3 will automatically round the input numeric parameters. The following command uses a numeric parameter:

```
VOLT:STEP {<step>}
```

Discrete Used to program settings that have a limited number of values such as BUS and IMM or CH1 and CH2. Query responses will always return the short form in all uppercase letters. The following command uses discrete parameters:

```
CAL:CURR:LEV {MIN|MID|MAX}
```

Boolean Represent a single binary condition that is either true or false. For a false condition, the BB3 will accept OFF or 0. For a true condition, the BB3 will accept ON or any nonzero value (i.e. 1 but also 2.34 or -3). When you query a Boolean setting, the BB3 will always return 0 or 1. The following command uses a Boolean parameter:

```
OUTP {OFF|ON}
```

String Can contain virtually any set of ASCII characters. A string must begin and end with matching quotes, either with a single quote or with a double quote. You can include the quote delimiter as part of the string by typing it twice without any characters in between. The following command uses a string parameter:

```
CAL:REM <quoted string>
```

Data block #<length-digits><length><block>

<length-digits>	NR1	<length> number of digits (e.g. 2 for two digit number)
<length>	NR1	Limited only with available space on SD card
<block>	Discrete	Only exact size is allowed as defined with <length>

Downloads text *Hello world* and store into the file "test file" in the current directory. Digit 2 denotes two digits of data length (11).

```
MMEM:DOWN:FNAM "test file"
MMEM:DOWN:DATA #211Hello world
MMEM:DOWN:FNAM ""
```

3. Registers and queues

SCPI requires the status mechanism described in Section 11 of IEEE 488.2, including full implementation of the status register structure. Summary of implemented registers structure for the BB3 is shown on Fig. 1. (commands used to access registers are written in parentheses).

All SCPI instruments have to implement status registers in the same way. The status system records various instrument conditions in the following register groups:

- the Status Byte register,
- the Standard Event register,
- the QUEStionable Status register group, and
- the OPERation Status register group.

The Status Byte register records high-level summary information reported in the other register groups. Message interchanging between Controller and Instrument is accomplished by using input buffer and Output queue and Error queue. The length of the Input buffer is 48 characters. Both Output and Error queue can handle up to 20 messages.

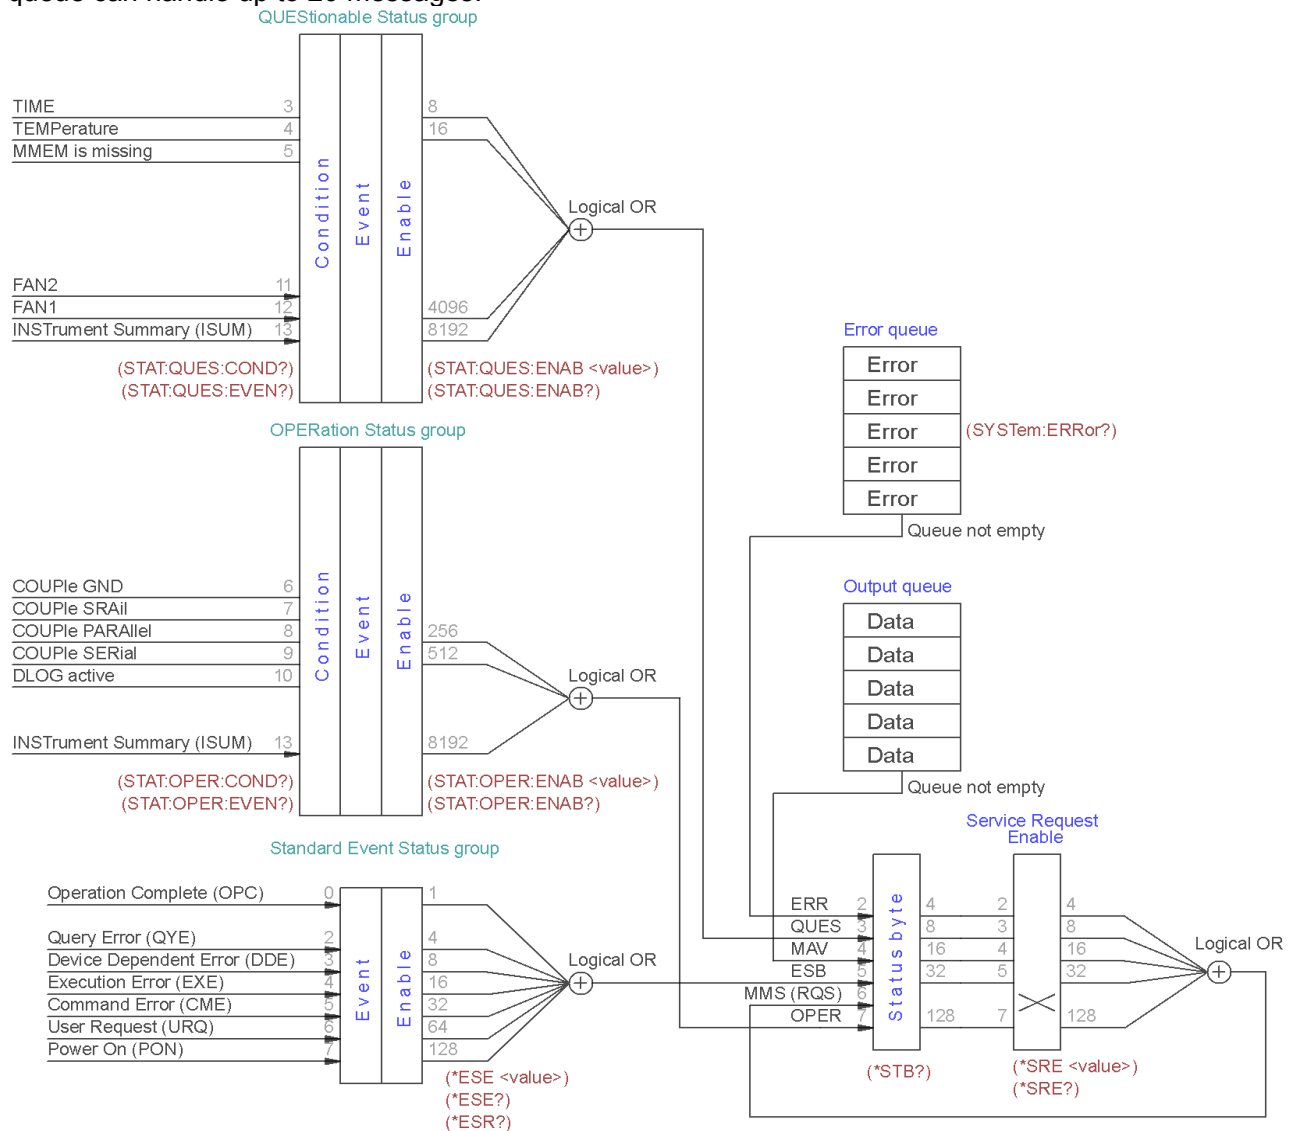


Fig. 1: Summary of status structure registers

3.1. Standard Event Status Register

An status register group is consist of Condition, Event and Enable registers (see Fig. 1):

- The Condition register is a read-only register, which holds the live (unlatched) operational status of the instrument. Reading the Condition register does not clear it.
- The Event register is a read-only that reports defined conditions within the BB3. Bits in an event register are latched. Once an event bit is set, subsequent state changes are ignored. Bits in the Event register are automatically cleared by a query of that register (such as *ESR? or

STATus:QUESTionable:EVENT?) or by sending the *CLS (clear status) command. A reset (*RST) or device clear will *not* clear bits in event registers (See [Section 8.2](#)). Querying an event register returns a decimal value which corresponds to the binary-weighted sum of all bits set in the register.

- The ENABLE register is used to define which bits of the Event Status register will latch ESB (bit 5) of the Status byte register.

An error status (bit 2, 3, 4 or 5) records one or more errors in the BB3 error queue. The SYSTem:ER-Ror? command can be used to read the error queue.

Implementation of the Standard Event Status register follows IEEE 488.2 Section 11.5.1.1:

Bit	Decimal value	Description
0	1	Operation Complete (OPC) – This event bit is generated in response to the *OPC command. It indicates that the BB3 has completed all selected pending operations (including *OPC).
1	2	Not used
2	4	Query ERROR (QYE) – Query Errors are detected by the Output Queue Control. This event bit indicates that either <ul style="list-style-type: none"> • An attempt is being made to read data from the Output Queue when no output is either present or pending, or • Data in the Output Queue has been lost. Events that generate Query Errors do not generate Execution Errors, Command Errors, or Device-Specific Errors.
3	8	Device-Specific ERROR (DDE) – This event bit indicates that an error has occurred that is neither a Command Error, a Query Error, nor an Execution Error. A Device-Specific Error is any executed device operation that did not properly complete due to some condition, such as over-range, a self-test or calibration error. Following a Device-Specific Error, the BB3 will continue to process the input stream. Events that generate Device-Specific Errors do not generate Command Errors, Query Errors, or Execution Errors.
4	16	Execution ERROR (ERR) – This event bit indicates that: <ul style="list-style-type: none"> • A <PROGRAM DATA> element following a header was evaluated by the BB3 as outside of its legal input range or is otherwise inconsistent with the BB3's module capabilities. • A valid program message could not be properly executed due to some BB3 condition. Following an Execution Error, the BB3 will continue parsing the input stream. Execution Errors will be reported by the BB3 after rounding and expression evaluation operations have taken place. Rounding a numeric data element, for example, will not be reported as an Execution Error. Events that generate Execution Errors do not generate Command Errors, Query Errors, or Device-Specific Errors.
5	32	Command ERROR (CME) – Command Errors are detected by the parser. This event bit indicates that one of the following events has occurred: <ul style="list-style-type: none"> • An IEEE 488.2 syntax error has been detected by the parser. That is, a controller-to-device message was received that is in violation of this standard. Possible violations include a data element that violates the device listening formats or whose type is unacceptable to the device (see also IEEE 488.2 Section 7.1.2.2). • A semantic error has occurred indicating that an unrecognized header

was received. Unrecognized headers include incorrect device-specific headers and incorrect or unimplemented common commands described in [Section 4](#)

When the BB3 detects a Command Error, parser synchronization may be lost. *When a Command Error is detected, any prior parsable elements of the same <PROGRAM MESSAGE> will be executed. That is also true for all parsable elements that follows after detected Command Error.*

The Command Error bit not be set to report any other device-specific condition. Events that are reported as Command Errors cannot be reported as Execution Errors, Query Errors, or Device-Specific Errors.

6	64	User Request (URQ) – This event bit indicates that the BB3 input device (TFT Touch screen) has been for any reason activated. The setting of this event-bit occur regardless of the IEEE 488.1 Remote/Local state of the device (<i>not implemented yet</i>)
7	128	Power On (PON) – This event bit indicates that an off-to-on transition has occurred in the device's power supply (i.e. AUX PS module). See also SYSTem:POWer.
8 – 15	–	Not used, always zero

3.2. Status Byte Register

The Status Byte summary register reports conditions from the other status registers (see Fig. 1). Query data that is waiting in the BB3's output buffer is immediately reported through the "Message Available" (MAV) bit (bit 4) of the Status Byte register. Bits in the summary register are NOT latched. Clearing an event register will clear the corresponding bits in the Status Byte summary register. Reading all messages in the output buffer, including any pending queries, will clear the message available bit (MAV). The Status Byte summary register is cleared when the *CLS (clear status) command has been executed.

The Status Byte enable register (request service) is cleared when the *SRE 0 command has been executed.

Querying the Standard Event register (*ESR? command) will clear only bit 5 (ESR) in the Status Byte summary register. For example, 24 (8 + 16) is returned when you have queried the status of the Status Byte register, QUES and MAV conditions have occurred.

Bit	Decimal value	Description
0 – 1	–	Not used, always zero
2	4	ERR – Error queue bit indicates that one or more errors have been stored in the Error queue.
3	8	QUES – One or more bits are set in the QUEStionable Status register (bits must be enabled in the enable register).
4	16	MAV – The Message Available bit indicates whether or not the Output Queue is empty. Whenever the device is ready to accept a request by the controller to output data bytes, the MAV is TRUE. The MAV is FALSE when the Output Queue is empty. This bit is used to synchronize information exchange with the controller. The controller can, for example, send a query command to the device and then wait for MAV to become TRUE.
5	32	ESB – One or more bits are set in the Standard Event register (bits must be enabled in the enable register, see *ESE command).
6	64	MMS – Master Status summary bit indicates that one or more bits are set in the Status Byte Register (bits must be enabled, see *SRE command). Also used to indicate a request for service (RQS).

7 128 OPER – One or more bits are set in the OPERation Status register.

3.3. OPERation Status Register

The OPERation status register contains conditions which are part of the instrument's normal operation. Each channel of the BB3 is considered as separate "instrument". Up to six logical outputs (channels) of the BB3 include an INSTRument summary status register and an individual instrument ISUMmary register for each logical output.

The bit definition of OPERation Status register shown on Fig. 1.:

Bit	Decimal value	Modules	Description
0 – 5	–		Not used, always zero
6	64		COUPle CGND indicates that all channels Vout- terminals are coupled together.
7	128	DCP405	COUPle SRAil indicates that two modules are connected as split rail.
8	256	DCP405	COUPle PARAllel indicate that two modules are connected in parallel.
9	512	DCP405	COUPle SERial indicate that two modules are connected in serial.
10	1024		Internal data logging is in progress.
11 – 12	–		Not used, always zero
13	8192		INSTRument Summary Bit – One of n multiple logical instruments is reporting OPERational status.
14 – 15	–		Not used, always zero

The Event Status Enable register is cleared when the STAT:EVENT:ENAB 0 command is executed. The *CLS command can be also used to clear the register.

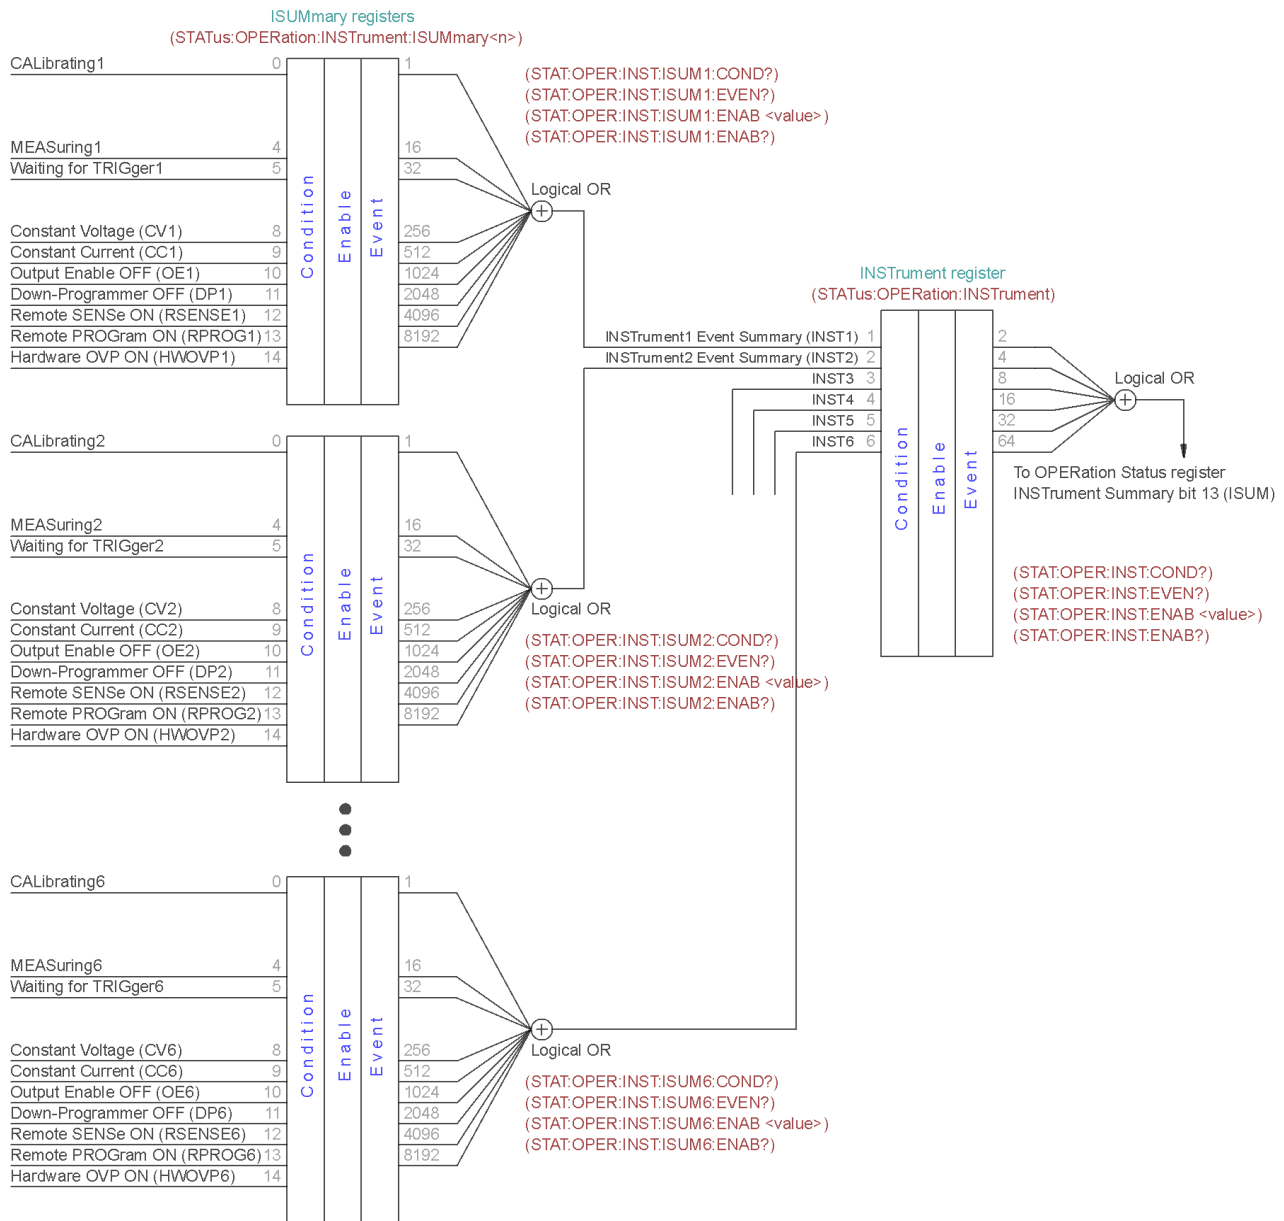


Fig. 2: OPERATION status registers summary

3.3.1. Operation INSTRument Status register

The bit definition of OPERATION INSTRument Status register shown on Fig.2.:

Bit	Decimal value	Description
0	–	Not used, always zero
1	2	INST1 – Instrument1 summary bit indicate that one or more bits are changed in the Channel 1 OPERATION INSTRument Summary register
2	4	INST2 – Instrument2 summary bit indicate that one or more bits are changed in the Channel 2 OPERATION INSTRument Summary register
3	8	INST3 – Instrument3 summary bit indicate that one or more bits are changed in the Channel 3 OPERATION INSTRument Summary register
4	16	INST4 – Instrument4 summary bit indicate that one or more bits are changed in the Channel 4 OPERATION INSTRument Summary register
5	32	INST5 – Instrument5 summary bit indicate that one or more bits are changed in the Channel 5 OPERATION INSTRument Summary register
6	64	INST6 – Instrument6 summary bit indicate that one or more bits are changed in

		the Channel 6 OPERation INSTRument Summary register
7 – 15	–	Not used, always zero

3.3.2. Operation Instrument SUMmary status register

The ISUMmary registers report to the INSTRument register, which in turn reports to bit 13 of the Operation Status register. This is illustrated on Fig. 2. Using such a status register configuration allows a status event to be cross-referenced by output channel and type of event. The INSTRument register indicates which channel(s) have generated an event. The ISUMmary register represent a pseudo-operation Status register for a particular logical output.

The bit definition of OPERation INSTRument ISUMmary Status register shown on Fig.2.:

Bit	Decimal value	Modules	Description
0	1		CALibrating – Channel is performing calibration
1 – 3	–		Not used, always zero
4	16		MEASuring – Channel is performing measurement (<i>not implemented yet</i>)
5	32		Waiting for TRIGger – Channel is waiting for the trigger event
6 – 7	–		Not used, always zero
8	256		CV – Channel is entered CV operation mode
9	512		CC – Channel is entered CC operation mode
10	1024		OE – Output is switched off
11	2048	DCP405	DP – Down-programmer is switched off
12	4096	DCP405	RSense – Remote voltage sense is switched on
13	8192	DCP405	RPROG – Remote voltage programming is switched on
14	16384	DCP405	HWOVP – Hardware OVP is switched on
15	–		Not used, always zero

3.4. QUEStionable Status Register

The Questionable Status register provides information about unexpected operations of the BB3. Each channel of the BB3 is considered as separate "instrument". Up to six logical outputs (channels) of the BB3 include an INSTRument summary status register and an individual instrument ISUMmary register for each logical output.

The ISUMmary registers report to the INSTRument register, which in turn reports to bit 13 of the Questionable Status register. This is illustrated on Fig. 3. Using such a status register configuration allows a status event to be cross-referenced by output channel and type of event. The INSTRument register indicates which channel(s) have generated an event. The ISUMmary register represent a pseudo-Questionable Status register for a particular logical output.

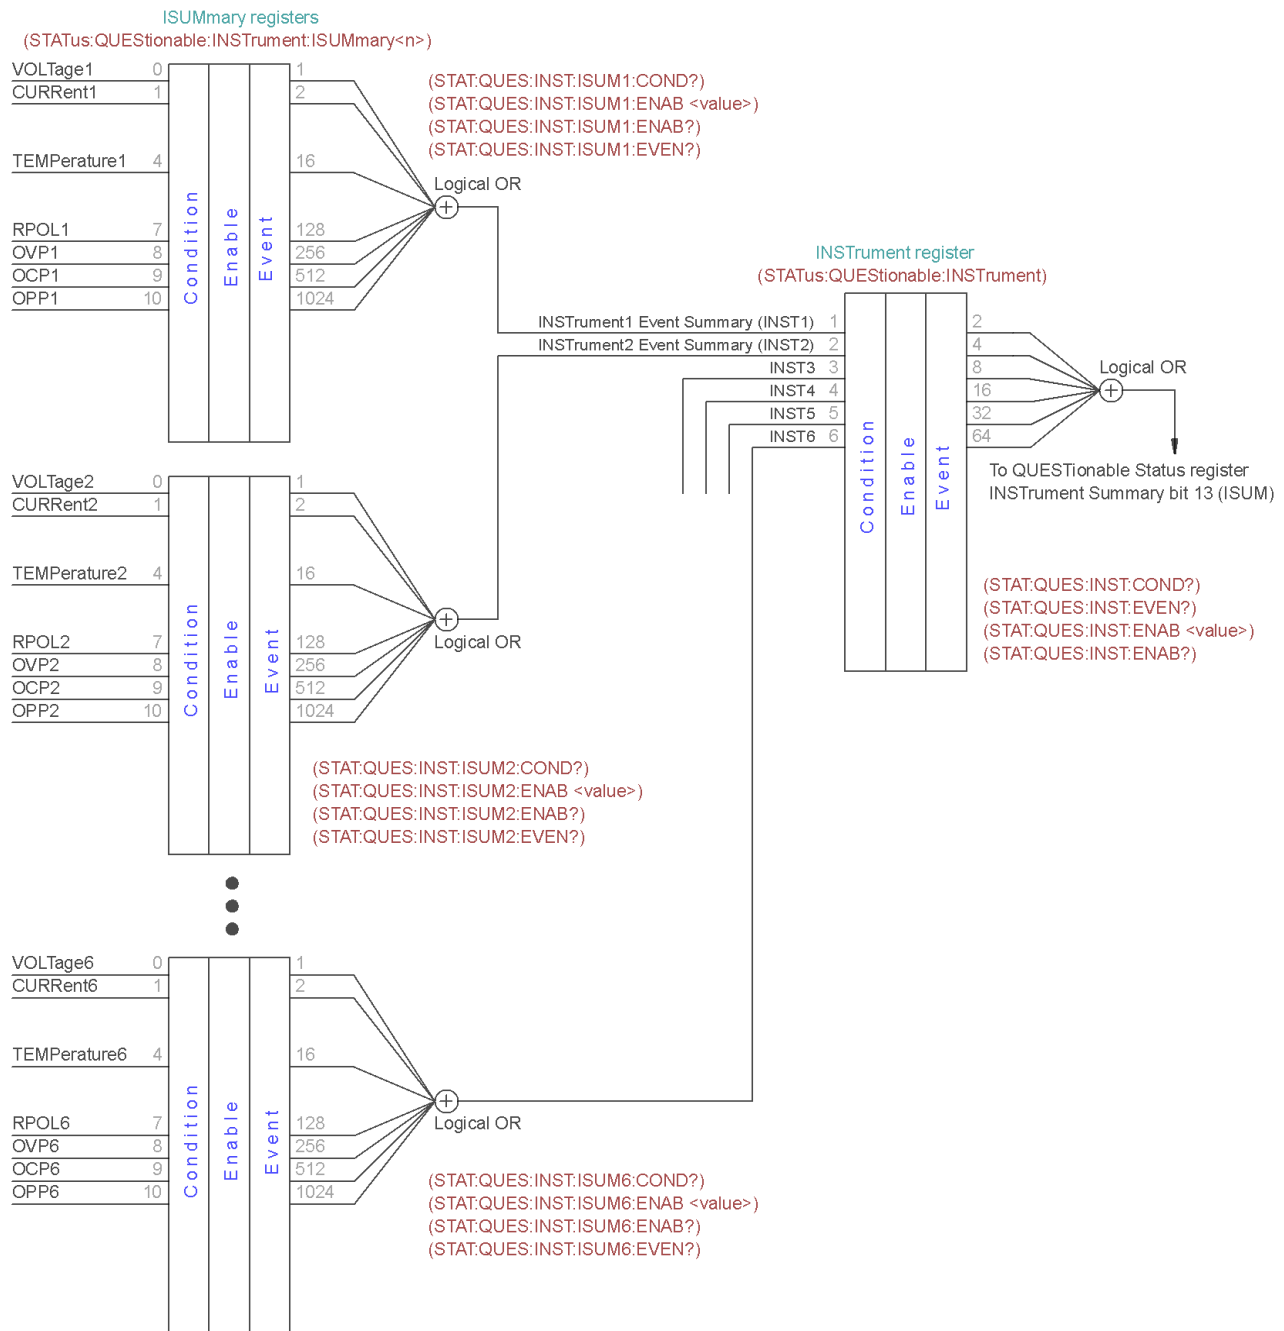


Fig. 3: QUESTIONable INSTRument registers summary

For example, if one of the two channels is in constant voltage (CV) mode and due to an overload loses regulation, bit 13 is set (latched). To read the register, the command STATUS:QUESTIONable? is required. To make use of bit 13 (ISUM), enable register must be correctly set. The command STAT:QUES:INST:ENAB 6 (2 + 4) has to be send to enable the Questionable instrument register, followed by the command STAT:QUES:INST:ISUM<n>:ENAB 19 for each channel to enable the QUESTIONable INSTRument SUMMARY register, where n is 1 or 2.

Bit definition for QUESTIONable Status register shown on Fig. 1.:

Bit	Decimal value	Description
0 – 2	–	Not used, always zero
3	8	TIME – indicate abnormal time/date situation due to RTC failure or conflict between current and time/date retrieved from the stored configuration.
4	16	TEMPerature – temperature measurement that use the AUX temperature sensor on the AUX PS module require attention (i.e. over-temperature condition is

detected, sensor is not functional, etc.).

Do not confuse this sensor with that is connected to a power module.

5	32	MMEM – SD card is not inserted
6 – 10	–	Not used, always zero
11	2048	FAN2 – auxiliary fan failure is detected (if installed)
12	4096	FAN1 – cooling fan failure is detected
13	8192	INSTrument summary, is described later in this chapter in association with multiple logical instruments.
14 – 15	–	Not used, always zero

The Questionable Status Enable register is cleared when the STAT:QUES:ENAB 0 command is executed. The *CLS command can be also used to clear the register.

3.4.1. Questionable INSTrument Status register

Bit definition for QUESTionable INSTrument register:

Bit	Decimal value	Description
0	–	Not used, always zero
1	2	INST1 – Instrument1 summary bit indicate that one or more bits are changed in the Channel 1 OPERation INSTrument Summary register.
2	4	INST2 – Instrument2 summary bit indicate that one or more bits are changed in the Channel 2 OPERation INSTrument Summary register.
3	8	INST3 – Instrument3 summary bit indicate that one or more bits are changed in the Channel 3 OPERation INSTrument Summary register.
4	16	INST4 – Instrument4 summary bit indicate that one or more bits are changed in the Channel 4 OPERation INSTrument Summary register.
5	32	INST5 – Instrument5 summary bit indicate that one or more bits are changed in the Channel 5 OPERation INSTrument Summary register.
6	64	INST6 – Instrument6 summary bit indicate that one or more bits are changed in the Channel 6 OPERation INSTrument Summary register.
7 – 15	–	Not used, always zero

3.4.2. Questionable Instrument SUMmary status register

There are three questionable instrument summary registers, one for each power module output. These registers provide information about voltage and current regulation.

Bit definition for QUESTionable INSTrument SUMmary register:

Bit	Decimal value	Modules	Description
0	1		VOLTage – This bit is set when the voltage becomes unregulated, therefore a channel enters CC operation mode. <i>If the over-voltage protection (OVP) is activated (see VOLTage:PROtection:STATe) channel output will be switched off.</i>
1	2		CURRent – This bit is set when the current becomes unregulated, therefore a channel enters CV operation mode. <i>If the over-current protection (OCP) is activated (see CURRent:PROtection:STATe) channel output will be switched off.</i>
2 – 3	–		Not used, always zero
4	16		TEMPerature – the temperature sensor on the module requires atten-

tion (i.e. over-temperature condition is detected, sensor is not functional, etc.).

Do not confuse this sensor with the AUX sensor available on the AUX PS module.

5 – 6	–		Not used, always zero
7	128	DCP405	RPOL – Remote sense reverse polarity is detected.
8	256		OVP – Over-voltage protection is activated. The query VOLT:PROT:TRIP? returns value of this bit. See also STAT:QUES.
9	512		OCP – Over-current protection is activated. The query CURR:PROT:TRIP? returns value of this bit. See also STAT:QUES.
10	1024		OPP – Over-power protection is activated. The query POW:PROT:TRIP? returns value of this bit. See also STAT:QUES.
11 – 15	–		Not used, always zero

Please note here that CURRent bit is use for questionable Voltage operating mode and vice versa.

If 0 and 1 bits is true that indicate neither the voltage nor the current is regulated (so-called unregulated or UR mode), and both bits false indicate the BB3 channel are off.

To read the register for each BB3 channel, the command STAT:QUES:INST:ISUM[<n>]? has to be send, where [<n>] is 1, 2 or 3. If [<n>] is not specified the currently selected channel is used.

Use STAT:QUES:INST:ISUM<n>:COND? to determine operating mode (CV or CC) for the BB3 channel (where n is 1, 2 or 3 depending on the output).

The Questionable Status event register is cleared with:

- the *CLS (clear status) command or
- the event register is queried using the STAT:QUES? (status questionable event register) command.

3.5. Error queue

The error queue contains items that include a numerical and textual description of the error or event.

The <Error/event_number> is a unique integer in the range [-32 768, 32 767]. All positive numbers are instrument-dependent. All negative numbers are reserved by the SCPI standard with certain standard error/event codes. The value, zero, is also reserved to indicate that no error or event has occurred.

The second parameter of the full response is a quoted string containing an <Error/event_description>. Each <Error/event_number> has a unique and fixed <Error/event_description> associated with it. An example:

```
-113,"Undefined header"
```

The maximum string length of <Error/event_description> plus <Device-dependent_info> is 255 characters. List of all error/event messages can be found in [Section 7](#) of this document.

As errors and events are detected, they are placed in a queue. This queue is first in, first out. If the queue overflows, the last error/event in the queue is replaced with error:

```
-350,"Queue overflow"
```

Any time the queue overflows, the least recent errors/events remain in the queue, and the most recent error/event is discarded. Reading an error/event from the head of the queue removes that error/event from the queue, and opens a position at the tail of the queue for a new error/event, if one is subsequently detected.

If the error queue is not empty, bit 2 of the Instrument Summary Status Register is set. A query returns only the oldest error code and associated error description information from the error queue. To return all error codes and associated description information, use repetitive queries until an error value of zero is returned, or until bit 2 of the status register is 0.

The error queue is cleared when any of the following occur (IEEE 488.2, section 11.4.3.4):

- Upon power up

EEZ BB3 SCPI reference

- Upon receipt of a *CLS command
- Upon reading the last error message from the queue

4. Common command reference

This section summarizes the mandatory subset of IEEE 488.2 commands required for any SCPI compliant instrument.

Common command	Description
*CLS	Clears all status data structures
*ESE {<value>}	Programs the Standard Event Status Enable register bits
*ESR?	Reads the Standard Event Status Register
*IDN?	Returns the UNIQUE identification of the BB3
*OPC	Operation Complete Command used for program synchronization
*RCL {<profile>}	Recalls the BB3 state stored in the specified storage location
*RST	Reset BB3 to the initial state
*SAV {<profile>}	Stores the current BB3 state in the specified storage location
*SRE	Enables bits in the Status Byte enable register.
*STB?	Reads the Status Byte register
*TRG	Generates a software trigger
*TST?	Returns Self-Test results
*WAI	Waits until all pending commands are completed

4.1. *CLS

Syntax [*CLS](#)

Description Clear Status Command. This command clears all status data structures in the BB3:

- Standard Event Status Register
- OPERation Event Status Register
- QUEStionable Event Status Register
- Error/Event Queue

The corresponding condition and enable registers are unaffected. If *CLS immediately follows a program message terminator (<NL>), then the output queue and the MAV bit are also cleared.

Return None

Related Commands [*ESR?](#)
STATus:OPERation[:EVENT]
STATus:OPERation:INSTrument[:EVENT]
STATus:OPERation:INSTrument:ISUMmary[<n>][:EVENT]
STATus:QUEStionable[:EVENT]
STATus:QUEStionable:INSTrument[:EVENT]
STATus:QUEStionable:INSTrument:ISUMmary[<n>][:EVENT]
SYSTem:ERRor

4.2. *ESE

Syntax [*ESE {<value>}](#)
[*ESE?](#)

Description Standard Event Status Enable Command. This command sets the Standard Event Status Enable register bits in the BB3. Those settings determine which events of the Standard Event Status Event register (see [*ESR?](#)) are allowed to set the ESB (Event Summary Bit) of the Status Byte register. A 1 in the bit position enables the corresponding event. All of the enabled events of the Standard Event Status Event Register are logically ORed sets the Event Summary Bit (ESB) of the Status Byte Register.

A STATUS:PRESet command does not clear the bits in the Status Byte register. See also [Section 3.1](#) in this document.

Parameters	Name	Type	Range	Default
	<value>	NR1	0 – 255 (A decimal value which corresponds to the binary-weighted sum of the bits in the register. See also table in Section 3.1).	–
Return	The query reads the enable register and returns a decimal value which corresponds to the binary-weighted sum of all bits set in the register.			
Usage example	To enable bit 2 (decimal value = 4), bit 3 (decimal value = 8), and bit 7 (decimal value = 128), the corresponding decimal value would be 140 (4 + 8 + 128): *ESE 140 Read value of the Standard Event Status Enable register: *ESE? 140			
Errors	-200, "Execution error"			
Related Commands	*CLS *ESR *RST STATUS:PRESet			

4.3. *ESR?

Syntax	*ESR?
Description	Standard Event Status Register (see Section 3.2) Query. Reading the Standard Event Status Event register clears it.
Return	The BB3 returns a decimal value which corresponds to the binary-weighted sum of all bits in the register.
Usage example	If ERRor (bit 2) is set: ESR? 4

4.4. *IDN?

Syntax	*IDN?
Description	Identification query for the UNIQUE identification of the BB3. (see also IEEE 488.2 10.14).
Return	The following system parameters will be displayed: <vendor>, <model>, <serial number>, <firmware>. The <model> include information about the CPU in use in brackets and could be <i>STM32F7</i> or <i>Simulator</i> . More information about the simulator can be found in Section 9 .
Usage example	*IDN? Envox,EEZ BB3 (STM32F7),00001,v0.1

4.5. *OPC

Syntax	*OPC *OPC?
Description	Operation Complete Command. The command is mainly used for program synchronization. It causes the BB3 to set the OPC bit (bit 0) of the Standard Event Status register when the BB3 has completed all pending operations *OPC. Pending operations

are complete when:

- All commands sent before *OPC is received, including paralleled commands, have been completed. Most commands are sequential and are completed before the next command is executed. Commands that affect output voltage, current, or state, relays, and trigger actions are executed in parallel with subsequent commands. *OPC provides notification that all parallel commands have completed.
- All triggered actions are completed.

Query whether the current operation is completed and the query returns 1.
See also IEEE 488.2 Section 12.5 – 12.8.

Return Query causes the BB3 to place a 1 in the output buffer when all pending operations are completed. *OPC? does not suspend processing of commands.

Usage example *OPC?
1

if current operation is not completed:

*OPC?
0

4.6. *RCL

Syntax *RCL {<profile>}

Description This command recalls the BB3 state stored in the specified storage location. The BB3 has ten storage locations in non-volatile memory to store BB3 states. It is not possible to recall the BB3 state from a storage location that is empty or was deleted (Error 400 will be generated). When the firmware is started for the first time, storage locations 1 through 9 are empty (location 0 has the power-on state).

The BB3 uses location 0 to automatically save the state of the BB3 at power down.

Parameters	Name	Type	Range	Default
	<profile>	NR1	0 – 9	–
Return	None			
Usage example	*RCL 2			
Errors	400, "Cannot load empty profile"			
Related Commands	*SAV MEMory:STATe:DELeTe MEMory:STATe:RECall:AUTO MEMory:STATe:RECall:SELEct SYSTem:POWeR			

4.7. *RST

Syntax *RST

Description Reset Command. Restores the BB3 to its initial state (as predefined in the BB3 firmware, see [Section 8.2](#)) and clears the error queue. The reset command does NOT affect calibration data, nor any of saved configuration profiles (0 to 9). When *RST is issued, all outputs are set to OFF, and voltage and current are programmed to 0. The power up sequence is started. All SPI peripherals are reinitialize except the controller if an active Ethernet connection exists.

Return None

Usage example *RST
MEMory:RECall:AUTO

SYSTem:POWer

Related Commands *RST
*SAV
MEMory:STAtE:CATalog?

4.8. *SAV

Syntax *SAV {<profile>}

Description This command stores the current instrument state in the specified storage location. Any state previously stored in the same location is overwritten without generating any errors. The BB3 has nine storage locations in non-volatile memory which are available to the user for storing BB3 states. The following channel and system parameters are stored in the non-volatile memory:

- Calibration status ([CALibration:STAtE](#))
- Output enable state ([OUTPut\[:STAtE\]](#))
- Output track state ([OUTPut:TRACk\[:STAtE\]](#))
- Channel coupling state ([INSTrument:COUPle:TRACking](#))
- Remote sense state ([\[SOURce\[<n>\]\]:VOLTage:SENSe\[:SOURce\]](#))
- Output voltage ([\[SOURce\[<n>\]\]:VOLTage](#))
- Output voltage limit ([\[SOURce\[<n>\]\]:VOLTage:LIMit](#))
- Output voltage step ([\[SOURce\[<n>\]\]:VOLTage:STEP](#))
- OVP status ([\[SOURce\[<n>\]\]:VOLTage:PROTection:STAtE](#))
- OVP delay ([\[SOURce\[<n>\]\]:VOLTage:PROTection:DELay](#))
- Output current ([\[SOURce\[<n>\]\]:CURRent](#))
- Output current limit ([\[SOURce\[<n>\]\]:CURRent:LIMit](#))
- Output current step ([\[SOURce\[<n>\]\]:CURRent:STEP](#))
- OCP status ([\[SOURce\[<n>\]\]:CURRent:PROTection:STAtE](#))
- OCP delay ([\[SOURce\[<n>\]\]:CURRent:PROTection:DELay](#))
- Output power limit ([\[SOURce\[<n>\]\]:POWER:LIMit](#))
- OPP level ([\[SOURce\[<n>\]\]:POWER:PROTection\[:LEVel\]](#))
- OPP status ([\[SOURce\[<n>\]\]:POWER:PROTection:STAtE](#))
- OPP delay ([\[SOURce\[<n>\]\]:POWER:PROTection:DELay](#))
- OTP level ([SYSTem:TEMPerature:PROTection\[:HIGH\]\[:LEVel\]](#))
- OTP status ([SYSTem:TEMPerature:PROTection\[:HIGH\]:STAtE](#))
- OTP delay ([SYSTem:TEMPerature:PROTection\[:HIGH\]:DELay](#))
- Power on state ([SYSTem:POWER](#))
- Simulator load value ([SIMUlator:LOAD](#))
- Simulator load connection ([SIMUlator:LOAD:STAtE](#))

Users can assign an arbitrary name to each of locations 1 through 9 using the [MEMory:STAtE:NAME](#) command.

A reset ([*RST](#) command) does not affect the configurations stored in memory. Once a state is stored, it remains constant until it is overwritten using this command or specifically deleted using the [MEMory:STAtE:DELeTe](#) command.

The BB3 uses location 0 to automatically hold the state of the BB3 at power down.

Parameters	Name	Type	Range	Default
	<profile>	NR1	1 – 9	–
Return	None			
Usage example	*SAV 2			
Related Commands	*RCL *RST MEMory:STAtE:CATalog? MEMory:STAtE:NAME			

MEMory:STATe:DELeTe

4.9. *SRE

Syntax *SRE {<value>
*SRE?**Description** Enable bits in the Status Byte enable register (see [Section 3.2](#)).

Parameters	Name	Type	Range	Default
	<value>	NR1	0 – 255 (A decimal value which corresponds to the binary-weighted sum of the bits in the register. See also table in Section 3.1).	–

Return Query the Status Byte enable register. The BB3 returns a decimal value which corresponds to the binary-weighted sum of all bits set in the enable register.**Usage example** *SRE 32**Related Commands** *STB

4.10. *STB?

Syntax *STB?**Description** Read Status Byte Query. This query reads the Status Byte register (see [Section 3.2](#)), which contains the status summary bits and the Output Queue MAV bit. The Status Byte is a read-only register and its bits are not cleared when it is read.

A serial poll also returns the value of the Status Byte register, except that bit 6 returns Request for Service (RQS) instead of Master Status Summary (MSS). A serial poll clears RQS, but not MSS. When the MSS bit is set, the BB3 has one or more reasons for requesting service.

Return The BB3 returns a decimal value which corresponds to the binary-weighted sum of all bits in the register.**Usage example** If OPER (bit 7) is set:*STB?
128**Related Commands** *SRE

4.11. *TRG

Syntax *TRG**Description** This command generates a trigger to the trigger subsystem which has selected a bus (software) trigger as its source (TRIGger[:SEQuence]:SOURce BUS).**Return** None**Usage example** Generate a trigger operation after 5 seconds:TRIG:SOUR BUS
TRIG:DEL 5
INIT
*TRG**Errors** -211, "Trigger ignored"
304, "Incompatible transient modes"
307, "List lengths are not equivalent"

Related Commands	*WAI ABORt INITiate TRIGger[:SEQuence]:DELay TRIGger[:SEQuence]:SOURce
-------------------------	--

4.12. *TST?

Syntax	*TST?
Description	<p>Self-Test Query. The self-test query causes an internal self-test, and places a response into the Output Queue indicating whether or not the BB3 completed the self-test without detected errors.</p> <p><i>Note: All all terminal connections must be removed while the internal self-test is being performed.</i></p> <p>If an active Ethernet connection exists, testing of the Ethernet controller will be skipped. You can use DIAGnostic[:INFOrmation]:TEST? for to produce a detailed report of the latest self-test.</p> <p>If a fan is installed, and not running, this command will start it for the short time to obtain speed information.</p>
Return	0 or 1 depends of the self-test results. See also DIAGnostic[:INFOrmation]:TEST? .
Usage example	<p>If all tests passed:</p> <pre>*TST? 0</pre> <p>If one or more tests failed:</p> <pre>*TST? 1</pre>
Related Commands	DIAGnostic[:INFOrmation]:TEST? SYSTem:BEEP:STATe

4.13. *WAI

Syntax	*WAI
Description	<p><i>Not implemented yet</i></p> <p>The Wait-to-Continue Command causes the BB3 to wait until all pending commands are completed before executing any other commands.</p> <p>Pending operations are as defined under the *OPC command.</p>
Return	None
Usage example	<p>For example, the *WAI command can be used to make a voltage measurement after an OUTPut ON command has completed:</p> <pre>OUTPut ON; *WAI; :MEASure:VOLTag?</pre>
Related Commands	*OPC

5. Subsystem command reference

This section summarizes the Standard Commands for Programmable Instruments (SCPI) available to program the BB3 remotely.

- [ABORt](#)
- [CALibration](#)
- [DIAGnostic](#)
- [DISPlay](#)
- [FETCh](#) (*not implemented yet*)
- [HCOPY](#) (*not implemented yet*)
- [INITiate](#)
- [INSTrument](#)
- [MEASure](#)
- [MEMory](#)
- [MMEMory](#)
- [OUTPut](#)
- [SENSe](#)
- [SOURce](#)
- [STATus](#)
- [SYSTem](#)
- [TRIGger](#)

5.1. ABORT

Abort commands cancel any triggered actions.

SCPI command	Description
ABORt	Resets the trigger system to the Idle state
:DLOG	Stops the internal data logging session

5.1.1. ABORt

Syntax [ABORt](#)

Modules [DCP405](#) [DCP405B](#) [DCM220](#)

Description The ABORt command resets the trigger system and places all trigger sequences in the IDLE state. Any actions related to the trigger system that are in progress will be also aborted as quickly as possible. As a result, subsequent triggers have no effect on the input level.

*ABORt is also executed at power-on and upon execution of the *RST command.*

Usage example ABOR

Related Commands *RST
INITiate
[SOURce[<n>]]:CURRent:TRIGgered
[SOURce[<n>]]:VOLTage:TRIGgered
[SOURce[<n>]]:LIST:COUNT

5.1.2. ABORt:DLOG

Syntax [ABORt:DLOG](#)

Modules [DCP405](#) [DCP405B](#) [DCM220](#)

Description This command stops the internal data logging session.

*ABORt:DLOG is also executed at power-on and upon execution of the *RST command.*

Usage example ABOR:DLOG

Related Commands *RST

5.2. CALibration

This subsystem provides commands for the power modules calibration. Only one channel can be calibrated at a time. If calibration mode has not been enabled with CALibration:STATe, the calibration commands will generate an error. Use CALibration:SAVE to save any changes, otherwise all changes will be lost on exit from calibration mode. Within the same calibration session both output voltage and current can be calibrated for the currently selected channel.

Calibration cannot start if channel output is not enabled (OUTPut[:STATe] ON). During calibration process three points has to be entered: MIN, MID and MAX. But in practice two point calibration is performed to re-scale the output programmed and measured values by correcting both slope and offset errors. MID point is used only as an additional validation that between entered MIN and MAX values it's possible to "draw" a line within allowed minor tolerance.

SCPI Command	Description
CALibration[:MODE] {<bool>}, {<password>}	Enables/disables calibration mode
:CLEar {<password>}	Clears all calibration parameters
:CURRent	
[:DATA] {<new value>}	Enters the calibration value
:LEVel {<level>}	Calibrates the output current programming
:RANGe {range}	Sets current range for multiple current range module
:PASSword	
:NEW {<old>}, {<new>}	Changes calibration password
:REMark {<string>}	Saves calibration information
:SAVE	Saves the new cal constants in non-volatile memory
:SCReen:INIT	Initiates touchscreen calibration procedure
:STATe {<bool>}, {<password>}	Enables calibration parameters
:VOLTage	
[:DATA] {<new value>}	Enters the calibration value
:LEVel {<level>}	Calibrates the output voltage programming

5.2.1. CALibration[:MODE]

Syntax [CALibration\[:MODE\] {<bool>}, {<password>}](#)
[CALibration\[:MODE\]?](#)

Modules [DCP405](#) [DCP405B](#) [DCM220](#)

Description This command enables or disables calibration mode. Calibration mode must be enabled for the channel to accept any calibration commands. The first parameter specifies the ON (1) or OFF (0) state. The second parameter is the password. Successful execution of this command set both output VOLTage and CURRent of the selected channel to the MINimum value (see [Section 8.1](#)). Execution of this command also affects bit 0 (CALibrating) of the Operation Instrument Isummary register (see [Section 3.3.2](#)).

If both voltage and current calibration parameters exists on calibration mode exit (CALibration[:MODE] OFF) the CALibration:STATe ON command will automatically follows.

Parameters	Name	Type	Range	Default
	<bool>	Boolean	ON OFF 0 1	OFF
	<password>	Quoted string	4 to 16 characters	"eezbb3"

Return The returned parameter is 0 (OFF) or 1 (ON).

Usage example See [Section 10.2](#)

Errors	102,"Invalid cal password"
	104,"Bad sequence of calibration commands"
	312,"Cannot execute when the channels are coupled"
Related Commands	CALibration:STATe DIAGnostic[:INFORMa]tion:OTIME? INSTrument:COUPLe:TRACking

5.2.2. CALibration:CLEar

Syntax CALibration:CLEar {<password>}

Modules DCP405 DCP405B DCM220

Description Clear all calibration parameters stored in the non-volatile memory for the currently selected channel. After successful execution of this command CALibration:STATe will be set to OFF (0) and further usage of the calibration data will be disabled. This command will be also filled calibration remark with the date and note that calibration data has been cleared.

Parameters	Name	Type	Range	Default
	<password>	Quoted string	4 to 16 characters	"eezbb3"

Return None

Usage example DIAG:CAL?

```
"remark=20170331 new
cal","u_cal_params_exists=1","u_min_level=0.150V","u_min_data=0.1
06V","u_min_adc=0.165V","u_mid_level=19.100V","u_mid_data=19.056V",
","u_mid_adc=18.500V","u_max_level=38.000V","u_max_data=37.956V",
"u_max_adc=36.791V","u_min_range=0.000V","u_max_range=40.000V","i
_5A_cal_params_exists=1","i_5A_min_level=0.050A","i_5A_min_data=0
.057A","i_5A_min_adc=0.050A","i_5A_mid_level=2.425A","i_5A_mid_da
ta=2.438A","i_5A_mid_adc=2.368A","i_5A_max_level=4.800A","i_5A_ma
x_data=4.811A","i_5A_max_adc=4.686A","i_5A_min_range=0.000A","i_5
A_max_range=5.000A","i_500mA_cal_params_exists=1","i_500mA_min_le
vel=0.0050A","i_500mA_min_data=0.0060A","i_500mA_min_adc=0.0051A"
,"i_500mA_mid_level=0.2425A","i_500mA_mid_data=0.2617A","i_500mA
_mid_adc=0.2368A","i_500mA_max_level=0.4800A","i_500mA_max_data=0.
5170A","i_500mA_max_adc=0.4686A","i_500mA_min_range=0.0000A","i_5
00mA_max_range=0.0000A"
```

CAL:STAT?

1

CAL:CLE "eezbb3"

CAL:STAT?

0

DIAG:CAL?

```
"remark= Not
calibrated","u_cal_params_exists=0","i_cal_params_exists=0"
```

Errors 102,"Invalid cal password"

Related Commands CALibration:STATe
DIAGnostic[:INFORMa]tion:CALibration?

5.2.3. CALibration:CURREnt[:DATA]

Syntax CALibration:CURREnt[:DATA] {<new value>}

Modules DCP405 DCP405B DCM220

Description This command can only be used when calibration is enabled and the output state of the

currently selected channel is ON. It enters a current value that is obtained by reading an external meter. The minimum calibration level (CAL:CURR:LEV MIN) has to be selected first for the value being entered, then the middle and maximum calibration levels (CAL:CURR:LEV MID and CAL:CURR:LEV MAX) for the value being entered. Three successive values must be selected and entered. Data values are expressed in base units – either volts or amperes, depending on which function is being calibrated.

Parameters	Name	Type	Range	Default
	<new value>	NR2	-0.2 A to MAX + 0.2 A The maximum value is dependent on the power module current rating. See Section 8.1	–
Return	None			
Usage example	See Section 10.2			
Errors	104, "Bad sequence of calibration commands" 107, "Cal value out of range"			

5.2.4. CALibration:CURRent:LEVel

Syntax CALibration:CURRent:LEVel {<level>}

Modules DCP405 DCP405B DCM220

Description This command can only be used when calibration is enabled and the output state of the currently selected channel is ON. It sets the power module to a calibration point that is entered with the CAL:CURR command. During calibration, three points must be entered and the low-end point (MIN) must be selected and entered first.

This command will set output voltage to MAXimum / 2 (for example 20 V for the DCP405 power module that provides 0 – 40 V).

When calibration LEVel is set it's possible to override its default value using the CURRent command. That could be especially useful when LOW range is calibrating with average 3½-digit multimeter with full scale of 200 mA that is not enough to measure MID and MAX level. Therefore instead of predefined 242.5 mA and 480 mA one can set e.g. 100 mA and 200 mA to stay within multimeter's low current range (next one is usually 10 A or 20 A that cannot be used to get satisfactory results).

Parameters	Name	Type	Range	Default
	<level>	Discrete	MIN MID MAX (see also Section 8.1)	–
Return	None			
Usage example	See Section 10.2			
Errors	101, "Calibration state is off" 104, "Bad sequence of calibration commands"			
Related Commands	CALibration:STATe INSTrument:NSElect INSTrument[:SElect] [SOURce[<n>]]:CURRent			

5.2.5. CALibration:CURRent:RANGe

Syntax CALibration:CURRent:RANGe {<range>}

Modules DCP405 DCP405B

Description When BB3 is equipped with power modules that has multiple current range (e.g.

DCP405 that can be find out with the SYSTem:CHANnel:MODEl? command) it's recommended to perform calibration of all ranges. Use this command to select current range on which calibration will be accomplished.

Parameters	Name	Type	Range	Default
	<range>	Discrete NR2	LOW HIGH 0.05 5	HIGH 5
Return	None			
Usage example	See Section 10.2			
Errors	101, "Calibration state is off" -241, "Hardware missing"			
Related Commands	CALibration:CURRent:LEVel CALibration:STATe SYSTem:CHANnel:MODEl?			

5.2.6. CALibration:PASSword:NEW

Syntax	CALibration:PASSword:NEW {<old>}, {<new>}			
Description	Enter a new calibration password. To change the password, first unsecure the BB3 using the old password. Then, the new code has to be entered. The calibration code may contain up to 16 characters over the remote interface. Minimum length is 4 characters. The new password is automatically stored in non-volatile memory and does not have to be stored with CALibration:SAVE.			
Parameters	Name	Type	Range	Default
	<old>	Quoted string	4 to 16 characters	eezbb3
	<new>	Quoted string	4 to 16 characters	–
Return	None			
Usage example	CAL:PASS:NEW "eezbb3", "mycal1234"			
Errors	102, "Invalid cal password" 105, "Cal password too long" 106, "Cal password too short"			

5.2.7. CALibration:REMark

Syntax	CALibration:REMark {<user remark> CALibration:REMark?			
Description	Record calibration information about the power module. The calibration message is consist of two parts: <ul style="list-style-type: none"> • datetime stamp in format <i>yyyymmdd</i> and • up to 32 characters. <p>The BB3 should be in calibration mode before sending a calibration message.</p>			
Parameters	Name	Type	Range	Default
	<user remark>	Quoted string	0 to 32 characters	"Calibration passed"
Return	Query the calibration message.			
Usage example	When CAL:REM with text "Calibrated by EEZ" is executed at 2015-09-14: CAL:REM "Calibrated by EEZ" CAL:REM? "20150904 Calibrated by EEZ" See also Section 10.2			

Errors The following errors could be generated by command but not query:

```
101,"Calibration state is off"
104,"Bad sequence of calibration commands"
```

Related Commands CALibration:STATE

5.2.8. CALibration:SAVE

Syntax CALibration:SAVE

Description This command saves calibration constants in non-volatile memory after the calibration procedure has been completed. If calibration mode is exited by programming CALibration:STATE OFF without first saving the new constants, the previous constants are re-stored. Execution of this command also affects bit 0 (CALibrating) of the Operation Instrument Isummary register (see [Section 3.3.2](#)).

Return None

Usage example See [Section 10.2](#)

Errors

```
-340,"Calibration failed"
101,"Calibration state is off"
104,"Bad sequence of calibration commands"
111,"No new cal data exists"
```

5.2.9. CALibration:SCReen:INIT

Syntax CALibration:SCReen:INIT

Description Use this command to initiate calibration procedure when touchscreen calibration data are lost or corrupted. Calibration has to be performed locally on the BB3.

New calibration procedure can be initiated also by touching the screen and hold for more then 30 seconds.

Return None

Usage example CAL:SCR:INIT

5.2.10. CALibration:STATE

Syntax CALibration:STATE {<bool>}
CALibration:STATE?

Modules DCP405 DCP405B DCM220

Description This command enables or disables usage of calibration parameters if they exists.

Parameters	Name	Type	Range	Default
	<bool>	Boolean	OFF ON 0 1	ON

Return The returned parameter is 0 (OFF) or 1 (ON).

Usage example CAL:STAT OFF

Errors 110,"Cal params missing or corrupted"

Related Commands DIAGnostic[:INFormation]:OTIME?

5.2.11. CALibration:VOLTage[:DATA]

Syntax CALibration:VOLTage[:DATA] {<new value>}

Modules DCP405 DCP405B DCM220

Description This command can only be used when calibration is enabled and the output state of the currently selected channel is ON. It enters a voltage value that you obtained by reading an external meter. You must first select the minimum calibration level (CAL:VOLT:LEV MIN) for the value being entered. You must then select the middle and maximum calibration levels (CAL:VOLT:LEV MID and CAL:VOLT:LEV MAX) for the value being entered. Three successive values must be selected and entered. The BB3 then computes new voltage calibration constants. These constants has to be stored in non-volatile memory with CALibration:SAVE command.

Parameters	Name	Type	Range	Default
	<new value>	NR2	-0.5 V to MAX + 0.5 V The maximum value is dependent on the power module voltage rating. See Section 8.1	–

Return None

Usage example See [Section 10.2](#)

Errors 104, "Bad sequence of calibration commands"
107, "Cal value out of range"

Related Commands CALibration:SAVE
CALibration:STATE
INSTrument:NSElect
INSTrument[:SElect]

5.2.12. CALibration:VOLTage:LEVel

Syntax CALibration:VOLTage:LEVel {<level>}

Modules DCP405 DCP405B DCM220

Description This command can only be used when calibration is enabled and the output state of the currently selected channel is ON. It sets the power module to a calibration point that is entered with the CAL:VOLT[:DATA] command. During calibration, three points must be entered and the low-end point (MIN) must be selected and entered first.

This command will set output current to 50 mA.

When calibration LEVel is set it's possible to override its default value using the VOLTage command.

Parameters	Name	Type	Range	Default
	<level>	Discrete	MIN MID MAX (see also Section 8.1)	–

Return None

Usage example See Section [Section 10.2](#)

Errors 101, "Calibration state is off"
104, "Bad sequence of calibration commands"

Related Commands CALibration:STATE
INSTrument:NSElect
INSTrument[:SElect]
[SOURce[<n>]]:VOLTage

5.3. DIAGnostic

The purpose of the DIAGnostic subsystem is to provide a tree node for all of the BB3 service and diagnostic routines used in routine maintenance and repair.

SCPI command	Description
DIAGnostic	
[:INFormation]	
:ADC?	Returns the latest values acquired by ADC
:CALibration?	Returns a list of the calibration parameters
:FAN?	Returns status of the cooling fan.
:PROTection?	Returns the information about all protections.
:TEST?	Returns results of the most recent self-test

5.3.1. DIAGnostic[:INFormation]:ADC?

Syntax `DIAGnostic[:INFormation]:ADC? [<channel>]`

Modules **DCP405** **DCP405B** **DCM220**

Description This query returns the latest values acquired by ADC (Analog-to-Digital Converter) of the currently selected channel.

Parameters	Name	Type	Range	Default
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	n/a

Return Return a list of quoted strings. The U_SET and I_SET are values measure on DAC outputs, and U_MON and I_SET on the channel output terminals.

Usage example `DIAG:ADC? CH2`

"U_SET=10.1202", "U_MON=10.12", "I_SET=3.00", "I_MON=1.23"

Related Commands `MEASure[:SCALar]:CURRent[:DC]`
`MEASure[:SCALar]:VOLTag[:DC]`
`[SOURce[<n>]]:CURRent[:LEVel][:IMMediate][:AMPLitude]`
`[SOURce[<n>]]:VOLTag[:LEVel][:IMMediate][:AMPLitude]`

5.3.2. DIAGnostic[:INFormation]:FAN?

Syntax `DIAGnostic[:INFormation]:FAN?`

Description Use this query to obtain information about cooling fan state.

Return Returns -1 if cooling fan is not installed (see SYSTem:CPU:[INFormation]?), 0 if fan is stalled (fault condition) or measured fan speed in rpm.

Cooling fan is periodically tested while it's working (that depends of measured channel's temperature sensor value). When it does not passed the test, programmed output current is automatically limited to 2 A.

Usage example `DIAG:FAN?`

1205.00

Related Commands `MEASure[:SCALar]:TEMPerature[:THERmistor][:DC]`
`SYSTem:CPU:[INFormation]`

5.3.3. DIAGnostic[:INFormation]:CALibration?

Syntax `DIAGnostic[:INFormation]:CALibration? [<channel>]`

Modules **DCP405** **DCP405B** **DCM220**

Description This query returns a list of calibration parameters for the currently selected channel. If the selected channel is in the calibration mode (CALibration[:MODE] ON) then all calibration information collected to the current calibration step will be returned. Otherwise the calibration data stored in non-volatile memory will be returned.

Parameters	Name	Type	Range	Default
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	n/a

Return The information will be returned as a list of quoted strings.

Usage example Calibration parameters for BB3 when the channel 1 is not in the calibration mode:

```
DIAG:INFO:CAL? CH1
"remark=20161211
he2","u_cal_params_exists=1","u_min_level=0.15V","u_min_data=0.13
V","u_min_adc=0.11V","u_mid_level=19.10V","u_mid_data=19.07V","u_
mid_adc=18.75V","u_max_level=38.00V","u_max_data=37.90V","u_max_a
dc=37.35V","u_min_range=0.019735V","u_max_range=39.997578V","i_ca
l_params_exists=1","i_min_level=0.05A","i_min_data=0.04A","i_min_
adc=0.04A","i_mid_level=2.42A","i_mid_data=2.42A","i_mid_adc=2.42
A","i_max_level=4.80A","i_max_data=4.81A","i_max_adc=4.79A","i_mi
n_range=0.012135A","i_max_range=4.999954A"
```

The query results when a channel is just entered the calibration mode:

```
DIAG:INFO:CAL?
"u_level=none", "i_level=none"
```

The query results when a channel is at the step MIDdle of the voltage calibration:

```
DIAG:INFO:CAL?
"u_min=0.11V", "u_level=mid", "u_level_value=24.05V",
"u_adc=24.14V", "i_level=none"
```

Related Commands CALibration:REMark
CALibration:SAVE

5.3.4. DIAGnostic[:INFOrmation]:PROTection?

Syntax **DIAGnostic[:INFOrmation]:PROTection?**

Modules **DCP405** **DCP405B** **DCM220**

Description This query returns information about all supported output protection mechanisms.

Return The information will be returned as a list of quoted strings.

Usage example

```
DIAG:PROT?
"CH1 u_tripped=0",
"CH1 u_state=0",
"CH1 u_type=1",
"CH1 u_delay=5 ms",
"CH1 u_level=38V",
"CH1 i_tripped=0",
"CH1 i_state=0",
"CH1 i_delay=20 ms",
"CH1 p_tripped=0",
"CH1 p_state=0",
"CH1 p_delay=10 s",
"CH1 p_level=155W",
"CH2 u_tripped=0",
"CH2 u_state=0",
"CH2 u_type=0",
```

```
"CH2 u_delay=5 ms",
"CH2 u_level=40V",
"CH2 i_tripped=0",
"CH2 i_state=0",
"CH2 i_delay=20 ms",
"CH2 p_tripped=0",
"CH2 p_state=1",
"CH2 p_delay=10 s",
"CH2 p_level=155W"
```

Related Commands

```
[SOURce[<n>]]:CURRent:PROTection:DELAy[:TIME]
[SOURce[<n>]]:CURRent:PROTection:STATe
[SOURce[<n>]]:CURRent:PROTection:TRIPped?
[SOURce[<n>]]:POWEr:PROTection
[SOURce[<n>]]:POWEr:PROTection:DELAy[:TIME]
[SOURce[<n>]]:POWEr:PROTection:STATe
[SOURce[<n>]]:POWEr:PROTection:TRIPped?
[SOURce[<n>]]:VOLTage:PROTection:DELAy[:TIME]
[SOURce[<n>]]:VOLTage:PROTection:STATe
[SOURce[<n>]]:VOLTage:PROTection:TRIPped?
SYSTem:TEMPerature:PROTection[:HIGH][:LEVel]
SYSTem:TEMPerature:PROTection[:HIGH]:DELAy[:TIME]
SYSTem:TEMPerature:PROTection[:HIGH]:STATe
SYSTem:TEMPerature:PROTection[:HIGH]:TRIPped?
```

5.3.5. DIAGnostic[:INFORMATION]:TEST?

Syntax `DIAGnostic[:INFORMATION]:TEST?`

Modules `DCP405` `DCP405B` `DCM220`

Description This query returns results of the most recent self-test (see [*TST?](#) command).

Return The information will be returned in the following format: "<return code, device name, installed, return message>" where the return code could be one of the following values:

- 0 – failed
- 1 – passed
- 2 – skipped

This information format will repeat with as many iterations as the number of devices found in configuration parameters of the BB3. While in the standby mode this command will returns only test results for the MCU board peripherals.

Usage example Return self-test results when SD card is not found:

```
DIAG:TEST?
"2, EEPROM, installed, passed",
"1, SD card, installed, failed",
"2, Ethernet, installed, passed",
"2, RTC, installed, passed",
"2, DateTime, installed, passed",
"4, BP option, not installed, failed",
"2, Fan, installed, passed",
"2, AUX temp, installed, passed",
"2, CH1 temp, installed, passed",
"2, CH2 temp, installed, passed",
"2, CH3 temp, installed, passed",
"2, CH4 temp, installed, passed"
```

Related Commands `*TST?`
`SYSTem:POWEr`

5.4. DISPlay

The DISPlay commands are used to set the display mode, turn on or off the front panel TFT display, select main page appearance, display and clear the text sent using a controller application. DISPlay is independent of, and does not modify, how data is returned to the controller application.

SCPI command	Description
DISPlay	
:BRIGhtness {<value>}	Sets the intensity of the front panel TFT display
:CMAP {<palette>}	Sets color palette (theme)
:CMAP:COLor:CATalog?	Returns names and RGB values of all available colors
:CMAP:COLor[:RGB] {<name>, <red>, <green>, <blue>}	Sets RGB value for the selected color
:DATA?	Reads screen image data
:VIEW {<mode>}	Sets the front panel TFT display main page appearance
[[:WINDOW]	
[:STATe] {<bool>}	Sets the front panel TFT display state
:TEXT {<message>}	Displays a message on the front panel TFT display
:CLEar	Clear a message on the front panel TFT display

5.4.1. DISPlay:BRIGhtness

Syntax [DISPlay:BRIGhtness {<value>}](#)
[DISPlay:BRIGhtness?](#)

Description Controls the intensity of the front panel TFT display. The range of the parameter is 1 to 20, where 20 is full intensity and 1 is fully blanked.

Parameters	Name	Type	Range	Default
	<value>	NR1	1 – 20	20

Return This query returns set front panel's TFT display brightness value.

Usage example DISP:BRIG?
20

Related Commands *RST

5.4.2. DISPlay:CMAP

Syntax [DISPlay:CMAP {<palette>}](#)
[DISPlay:CMAP?](#)

Description *Not implemented yet*

Use this command to set any of predefined or custom color palette (theme) of the front panel TFT display.

Parameters	Name	Type	Range	Default
	<palette>	Discrete	CUSTom DEFault DARK LIGHt	DEFault

Return This query returns selected front panel's TFT display color palette.

Usage example DISP:CMAP?
"DEF"

Related Commands DISPlay:CMAP:CATalog?

DISPlay:CMAP:COLor[:RGB]

5.4.3. DISPlay:CMAP:COLor:CATalog?

Syntax DISPlay:CMAP:COLor:CATalog?**Description** *Not implemented yet*

This query requests a list of defined color names and their RGB values.

Return Returns a comma separated list of all currently available color names (as quoted string) that follows three NR1 values for red, green and blue color components.

Usage example DISP:CMAP:COL:CAT?
 "background", 0, 0, 0, "foreground", 255, 255, 255

Related Commands DISPlay:CMAP
 DISPlay:CMAP:COLor[:RGB]

5.4.4. DISPlay:CMAP:COLor[:RGB]

Syntax DISPlay:CMAP {<name>, <red>, <green>, <blue>} [, <name>, <red>, <green>, <blue>]
 DISPlay:CMAP:COLor[:RGB]? {<name>}

Description *Not implemented yet*

Use this command to define RGB values of one or more colors specified by their <name> of the CUSTom palette (use DISPlay:CMAP command to set and query currently selected palette). Error -221 will be generated If other the CUSTom palette is selected.

Parameters	Name	Type	Range	Default
	<name>	Quoted string	4 to 16 characters	–
	<red>	NR1	0 – 255	–
	<green>	NR1	0 – 255	–
	<blue>	NR1	0 – 255	–

Return This query returns specified front panel's TFT display color.

Usage example DISP:CMAP:COL "background", 255, 0, 0
 DISP:CMAP:COL? "background"
 255, 0, 0

Errors -221, "Settings conflict"
 -222, "Data out of range"
 -223, "Too much data"

Related Commands DISPlay:CMAP
 DISPlay:CMAP:CATalog?

5.4.5. DISPlay:DATA?

Syntax DISPlay:DATA?

Description This query reads screen image data. The image is formatted as a .png file. Use the HCOPy[:IMMediate] or HCOPy:SDUMp[:IMMediate] command to capture screen image and save it as a file on the SD card.

Return Screen image data is returned in the IEEE-488.2 # data block format (see [Section 2.10](#)).

Usage example DISP:DATA?
 #<length-digits><length><block>

Related Commands HCOPy[:IMMediate]
 HCOPy:SDUMp[:IMMediate]

MMEMory:FEED

5.4.6. DISPlay:VIEW

Syntax `DISPlay:VIEW {<mode>}`
`DISPlay:VIEW?`

Description Use this command to set front panel TFT display main page appearance. The following modes are available:

- 1 – Numerical
- 2 – Bar graph horizontal
- 3 – Bar graph vertical
- 4 – YT view (scroll)
- 5 – YT view (scan line)

Parameters	Name	Type	Range	Default
	<mode>	NR1 Discrete	1 – 5 DEFault	DEFault
Return	This query returns set front panel's TFT display main page appearance numeric value (NR1).			
Usage example	<code>DISP:VIEW 2</code>			
Related Commands	*RST			

5.4.7. DISPlay[:WINDow][:STATe]

Syntax `DISPlay[:WINDow][:STATe] {<bool>}`
`DISPlay[:WINDow][:STATe]?`

Description Turn the front panel TFT display off or on. When the display is turned off, outputs are not sent to the display and all indicators are disabled except the Event view indicator. The display state is automatically turned on when you return to the local mode. Press and hold the display for about a second to return to the LOCAL from the REMote control.

Parameters	Name	Type	Range	Default
	<bool>	Boolean	ON OFF 0 1	–
Return	<code>DISPlay?</code> query the front panel TFT display state. Returns 0 (OFF) or 1 (ON).			
Usage example	<code>DISP ON</code>			
Related Commands	SYSTem:LOCAL SYSTem:REMOte			

5.4.8. DISPlay[:WINDow]:TEXT

Syntax `DISPlay[:WINDow]:TEXT {<text message>}`
`DISPlay[:WINDow]:TEXT?`

Description Display a message on the front panel TFT display. The BB3 will display up to 32 characters in a message.

Parameters	Name	Type	Range	Default
	<text message>	Quoted string	–	–
Return	Query the message sent to the front panel TFT display and returns a quoted string.			
Usage example	Send "Hello world" textual message: <code>DISP:TEXT "Hello world"</code>			

5.4.9. **DISPlay[:WINDow]:TEXT:CLEar**

Syntax	DISPlay[:WINDow]:TEXT:CLEar
Description	Clear the message displayed on the front panel TFT display.
Return	None
Usage example	DISP:TEXT:CLE

5.5. FETCh

Fetch commands return measurement data that has been previously acquired. FETCh queries do not generate new measurements, but allow additional measurement calculations from the same acquired data.

SCPI command	Description
FETCh	
:AHOu? {<channel>}	Returns the delivered energy in amp-hours
WHOu? {<channel>}	Returns the delivered energy in watt-hours

5.5.1. FETCh:AHOu?

Syntax [FETCh:AHOu? {<channel>}](#)

Description *Not implemented yet*

Use this command to query delivered energy on the specified channel in amp-hours accumulated after last power-on or SENSE:AHOu:RESet command.

This value is measured independently of channel's total delivered energy in amp-hours stored in non-volatile memory that can be queried using the SYSTem:CHANnel:INFORmation:AHOu:TOTal? Command.

If channels are coupled (in series or parallel) or in tracking mode, this command will return a sum of delivered energy on both channels.

Parameters	Name	Type	Range	Default
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	–

Usage example
FETCh:AHO? CH1
1340.30

Related Commands
FETCh:WHOu?
INSTrument:COUPle:TRACking
OUTPut:TRACk[:STATe]
SENSE:AHOu:RESet
SYSTem:CHANnel:INFORmation:AHOu:TOTal?

5.5.2. FETCh:WHOu?

Syntax [FETCh:WHOu? {<channel>}](#)

Description *Not implemented yet*

Use this command to query delivered energy on the specified channel in watt-hours accumulated after last power-on or SENSE:AHOu:RESet command.

This value is measured independently of channel's total delivered energy in watt-hours stored in non-volatile memory that can be queried using the SYSTem:CHANnel:INFORmation:WHOu:TOTal? Command.

If channels are coupled (in series or parallel) or in tracking mode, this command will return a sum of delivered energy on both channels.

Parameters	Name	Type	Range	Default
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	–

Usage example
FETCh:WHO? CH1
100.30
OUTP 0

EEZ BB3 SCPI reference

FETC:WHO:RES CH1
FETC:WHO? CH1

0

Related FETCh:AHOuR?
Commands INSTrument:COUPle:TRACking
 OUTPut:TRACk[:STATe]
 SENSE:WHOuR:RESet
 SYSTem:CHANnel:INFOrmation:WHOuR:TOTal?

5.6. HCOPy

The Hardcopy commands are used to print the entire display to a specified file rather than “printing” to an external device.

SCPI command	Description
HCOPy	
[:IMMediate]	Initiates hardcopy output
:DESTination {<destination>}	Sets the hardcopy destination
:SDUMp[:IMMediate]	Initiates hardcopy output

5.6.1. HCOPy:DESTination

Syntax [HCOPy:DESTination {<destination>}](#)

Description *Not implemented yet*

This command sets the hardcopy destination. The destination is always set to MMEMory (i.e. SD Card). This command is included only for compatibility with the SCPI standard. The destination file on the mass memory device is specified by the MMEMory:NAME command.

Usage example HCOPy:DEST MMEM

Related Commands MMEMory:CLOSe
MMEMory:NAME
MMEMory:OPEN

5.6.2. HCOPy[:IMMediate]

Syntax [HCOPy\[:IMMediate\]](#)

Description *Not implemented yet*

This command immediately initiates hardcopy output according to the current HCOPy setup parameters. This command is the same as HCOPy:SDUMp[:IMMediate].

Usage example MMEM:NAME "sample1.png"
MMEM:OPEN
HCOP:DEST "MMEM"
HCOP
MMEM:CLOS

Related Commands HCOPy:DESTination
HCOPy:SDUMp[:IMMediate]

5.6.3. HCOPy:SDUMp[:IMMediate]

Syntax [HCOPy:SDUMp\[:IMMediate\]](#)

Description *Not implemented yet*

This command initiates a screen dump of the entire TFT display's screen, and is the same as the HCOPy[:IMMediate] command.

Usage example MMEM:NAME "sample2.png"
MMEM:OPEN
HCOP:DEST "MMEM"
HCOP:SDUM
MMEM:CLOS

Related Commands HCOPy:DESTination
HCOPy[:IMMediate]

5.7. INITiate

INITiate commands initialize the trigger system. This enables the trigger system to receive triggers.

SCPI command	Description
INITiate	
[:IMMediate]	Completes one full trigger cycle
:DLOG {<filename>}	Enables internal data log session
:CONTinuous {<bool>}	Enables/disables continuous transient triggers

5.7.1. INITiate

Syntax INITiate[:IMMediate]

Description The INITiate command is used to initialize the trigger system of the BB3. This command completes one full trigger cycle when the trigger source is an IMMediate and initiates the trigger subsystem when the trigger source is BUS.

For example, when the IMMediate is selected as a trigger source, an INITiate command immediately transfers the VOLTage:TRIGgered[:AMPLitude] and CURRent:TRIGgered[:AMPLitude] values to VOLTage[:LEVel][:IMMediate][:AMPLitude] and CURRent[:LEVel][:IMMediate][:AMPLitude] values. Any delay is ignored.

Execution of this command also affects bit 5 (Waiting for TRIGger) of the Operation Instrument Isummary register (see [Section 3.3.2](#)).

Usage example Generate a trigger operation after 5 seconds:

```
TRIG:SOUR BUS
TRIG:DEL 5
INIT
*TRG
```

Errors

- 213, "Init ignored"
- 307, "List lengths are not equivalent"
- 308, "Cannot be changed while transient trigger is initiated"
- 309, "Cannot initiate while in fixed mode"

Related Commands *TRG
INSTrument:COUPle:TRIGger

5.7.2. INITiate:DLOG

Syntax INITiate:DLOG {<filename>}

Modules DCP405 DCP405B DCM220

Description The command starts the internal data logging session. All selected measurements defined with SENSE:DLOG:FUNCTION:CURRent and SENSE:DLOG:FUNCTION:VOLTage commands will be saved periodically in the specified filename. The data logging session will last until time specified with the SENSE:DLOG:TIME not expired or is interrupted prematurely (e.g. using the ABORT:DLOG or *RST command).

Data log file contains header and data section. The header is 28 bytes long and include the following information in little-endian format, i.e. the least significant byte (LSB) value is at the lowest address:

Position	Name	Description
0 – 7	FILE_ID	Always contains 0x45 0x45 0x5a 0x2d 0x44 0x4c 0x4f 0x47 (i.e. EEZ-DLOG text in ASCII format)
8 – 9	VERSION	File format version (e.g. 0x01 0x00)

10 – 11	FLAGS	0 – jitter column not included 1 – jitter column included
12 – 15	COLUMNS	Information about measured values that will be stored. A four bits per channel are used in the following manner (up to 8 channels can be supported): <i>Bit Output value</i> 0 Channel 1 Voltage 1 Channel 1 Current 2 Channel 1 Power 3 Channel 1 Reserved for future use 4 Channel 2 Voltage ...
16 – 19	PERIOD	Sampling frequency as specified with the SENSE:DLOG:PERIOD command written as float (e.g. IEEE-754 32-bit floating point number in little-endian format)
20 – 23	DURATION	Internal data logging duration as defined with the SENSE:DLOG:TIME command. If data logging is interrupted prematurely (e.g. using the ABORT:DLOG or *RST command) recorded duration can be calculated from the log file size: $(\text{FILE_SIZE} - \text{HEADER_SIZE}) / (1 + \text{NUM_COLUMNS}) * \text{PERIOD}$
24 – 27	START_TIME	Date and time when internal data logging session started written using the Unix time format.

The Log file data section contains multiple rows recorded with sampling frequency (every PERIOD) for the max. duration specified in DURATION field in the header. Number of recorded columns in each row depends of selected values for data logging as specify in COLUMNS and FLAGS fields in the header. For example:

Position	Description
0 – 3	Jitter (if Jitter flag is set in FLAG field)
4 – 7	First value (e.g. output voltage on Channel 1)
8 – 11	Second value (e.g. output current on Channel 2)
...	

Parameters	Name	Type	Range	Default
	<filename>	Quoted string	File name, either / (slash) or \ (back-slash) can be used as the path separator. 1 to 255 characters	–
Usage example	INIT:DLOG "test_log.dlog"			
Related Commands	*RST ABORT:DLOG MMEMory:INFOrmation? SENSE:DLOG:FUNCtion:CURRent SENSE:DLOG:FUNCtion:VOLTage SENSE:DLOG:PERiod SENSE:DLOG:TIME			

5.7.3. INITiate:CONTInuous

Syntax `INITiate:CONTInuous {<bool>}`
`INITiate:CONTInuous?`

Description This command is used to select whether the trigger system is continuously initiated or not. With CONTInuous set to OFF, the trigger system remain in the IDLE state until CONTInuous is set to ON or INITiate:IMMediate is received. Once CONTInuous is set to ON, the trigger system will be initiated and exit the IDLE state. On completion of each trigger cycle, with CONTInuous ON, the trigger system immediately commence another trigger cycle without entering the IDLE state. When INITiate:CONTInuous is set to OFF, the current trigger cycle will be completed before entering the IDLE state. The return to IDLE also occur as the result of an ABORT or *RST command.

The ABORT command force the trigger system to the IDLE state; however, the value of INITiate:CONTInuous is unaffected.

If INITiate:CONTInuous was set to ON prior to receiving ABORT, it remains ON and the trigger system immediately exit the IDLE state.

Parameters	Name	Type	Range	Default
	<bool>	Boolean	OFF ON 0 1	OFF
Return	The query command returns 0 if continuous transients are disabled (OFF), and 1 if continuous transients are enabled (ON).			
Usage example	INIT:CONT ON			
Related Commands	*RST ABORT			

5.8. INSTRument

Each channel of the BB3 is considered as separate (logical) instrument, which is required by the SCPI standard. The INSTRument subsystem provides a mechanism to identify and select instruments and establish coupling to simplify programming of more channels at once.

SCPI command	Description
INSTRument	
[:SElect] {<channel>}	Selects the output to be programmed
:CATalog?	Returns a quoted string of the list of valid choices for the instrument channels
:FULL?	Returns a list of string – number pairs
:COUPle	
:TRACking {<type>}	Selects independent, common ground-tracking, split rail-tracking, parallel-tracking, or series-tracking mode
:TRIGger {<mode>}	Selects a coupling between channels trigger systems
:DISPlay	
:TRACe[<n>] {<value>}	Selects output value on the specified display trace
:SWAP	Swaps positions of selected output values
:YT	
:RATE {<duration>}	Selects YT view sample duration
:NSElect {<channel>}	Selects the output to be programmed

5.8.1. INSTRument[:SElect]

Syntax [INSTRument\[:SElect\] {<channel>}](#)
[INSTRument\[:SElect\]?](#)

Description *Not implemented yet*

This command selects the output to be programmed by the output identifier. The outputs of the BB3 are considered as separate logical instruments. The INSTRument command provides a mechanism to identify and select an output.

When one output is selected, the other output is unavailable for programming until selected. The following commands are affected by the INSTRument command: SOURce, MEASure, and CALibration.

Parameters	Name	Type	Range	Default
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	–
Return	Query returns the currently selected output by the INSTRument[:SElect] or INSTRument:NSElect command. The returned value is CH1, CH2, CH3, CH4, CH5 or CH6.			
Usage example	INST? CH1 INST:SEL? CH1			
Related Commands	INSTRument:CATalog? INSTRument:CATalog:FULL? INSTRument:NSElect			

5.8.2. INSTRument:CATalog?

Syntax INSTRument:CATalog?

Description *Not implemented yet*

This query returns a comma-separated list of strings which contains the names of all logical instruments. If no logical instruments are defined, a single null string is returned

Usage example INST:CAT?
"CH1", "CH2", "CH3", "CH4"

Related Commands INSTRument[:SElect]
INSTRument:CATalog:FULL?
INSTRument:NSElect

5.8.3. INSTRument:CATalog:FULL?

Syntax INSTRument:CATalog:FULL?

Description *Not implemented yet*

Use this query to get a list of string – number pairs. The string contains the name of the logical instrument. The immediately following NR1-formatted number is its associated logical instrument number. All response data elements are comma separated. If no logical instrument is defined, a null string followed by a zero is returned.

Usage example INST:CAT:FULL?
"CH1", 1, "CH2", 2

Related Commands INSTRument[:SElect]
INSTRument:CATalog?
INSTRument:NSElect

5.8.4. INSTRument:COUPle:TRACking

Syntax INSTRument:COUPle:TRACking {<type>}
INSTRument:COUPle:TRACking?

Description This command selects how channel's outputs will be internally connected:

- independent (NONE)
- common ground (CGND) controls K_CGND power relay state that connects Vout- outputs of all three modules together (DCP405, DCP405B, DCM220)
- split rail (SRAil) controls K_SRAIL power relay state that combines CH1 Out- and CH2 Out+. The CH1 Out+ becomes positive rail, and CH2 Out- negative rail (DCP405, DCP405B).
- parallel-tracking (PARAllel) controls K_PAR power relay state when max. output current is doubled, e.g. 10 A instead of 5 A (DCP405, DCP405B), or
- series-tracking (SERies) that controls K_SER power relay state and max. output voltage is doubled, e.g. 80 V instead of 40 V (DCP405, DCP405B).

When channels are coupled, resulting output will be present on different output terminals as indicated with red module's OE LED instead of green OE LED.

Coupled channels in series or parallel will be seen as single channel. Therefore the following commands will affect the both channel regardless of which channel is currently selected using the INSTRument[:SElect] or INSTRument:NSElect command):

- OUTPut[:STATe], OUTPut:DPRog, OUTPut:PROTection:CLEar
- MEASure[:SCALar]:CURRent[:DC], MEASure[:SCALar]:POWER[:DC], MEASure[:SCALar][:VOLTage][:DC]
- SIMULator:LOAD, SIMULator:LOAD:STATe
- [SOURce[<n>]]:CURRent, [SOURce[<n>]]:CURRent:STEP, [SOURce[<n>]]:CURRent:TRIGgered, [SOURce[<n>]]:CURRent:LIMit,

- [SOURce[<n>]]:CURRent:MODE, [SOURce[<n>]]:CURRent:PROTection:DELAy,
- [SOURce[<n>]]:CURRent:PROTection:STATe,
- [SOURce[<n>]]:CURRent:PROTection:TRIPped?, [SOURce[<n>]]:LIST:COUNT,
- [SOURce[<n>]]:LIST:CURRent, [SOURce[<n>]]:LIST:DWELl,
- [SOURce[<n>]]:LIST:VOLTage[:LEVel], [SOURce[<n>]]:POWEr:LIMit,
- [SOURce[<n>]]:POWEr:PROTection[:LEVel],
- [SOURce[<n>]]:POWEr:PROTection:DELAy[:TIME],
- [SOURce[<n>]]:POWEr:PROTection:STATe,
- [SOURce[<n>]]:POWEr:PROTection:TRIPped?, [SOURce[<n>]]:VOLTage,
- [SOURce[<n>]]:VOLTage:LIMit, [SOURce[<n>]]:VOLTage:STEP,
- [SOURce[<n>]]:VOLTage:TRIGgered, [SOURce[<n>]]:VOLTage:MODE,
- [SOURce[<n>]]:VOLTage:PROTection[:LEVel],
- [SOURce[<n>]]:VOLTage:PROTection:DELAy,
- [SOURce[<n>]]:VOLTage:PROTection:STATe,
- [SOURce[<n>]]:VOLTage:PROTection:TRIPped?
- TRIGger[:SEQuence][:IMMediate], TRIGger[:SEQuence]:DELAy,
- TRIGger[:SEQuence]:SLOPe, TRIGger[:SEQuence]:SOURce

The following channel specific commands will generate a device specific error 312 when channels are coupled:

- CALibrate,
- OUTPut:TRACk[:STATe],
- SIMUlator:RPOL, SIMUlator:VOLTage:PROGram,
- [SOURce[<n>]]:VOLTage:PROGram,
- [SOURce:]VOLTage:SENSe (series-tracking only)

Channels coupled in parallel could have only one down-programmer circuit active that is on the channel 1. State of the channel 2 down-programmer will always be off regardless of what is set with the OUTPut:DPRog command.

If channels are calibrated (CAL:STAT? 1) a max. value of the channel that has lower calibrated value will be used as a reference and multiplied by two. For example, if channel 1 max. voltage is 39.98 V and channel 2 max. voltage is 40.00 V the new max. value for the SERies-tracking will become 79.96 V instead of 80.00 V.

Two conditions requires special attention: that is entering CC mode while channels are coupled in SERies or entering CV mode when PARAllel coupling is active. For example when coupled in SERies and output voltage is set to 60 V and current to 1.7 A with connected load of 1 Ω the power module will enters the CC mode of operation (see OUTPut:MODE?) and output voltage will drop to 1.7 V. Coupling mechanism will set both channels to 30 V (initially set value divided by two) but that value cannot be maintained on any output and there is no warranty that new voltage will be equally shared between channels (i.e. $1.7 / 2 = 1.35$ V per channel). It's even possible that outputs become unbalanced in a way that one of the channels becomes negative like -0.6 V on one channel and +2.3 V on another that still resulting in required +1.7 V limited by max. current. To avoid such situation coupling mechanism also include *balancing* to ensure that such deviation when one channel is pushed to sink instead of source power is rectified. That is accomplished by calculating and set more appropriate output voltage values during the CC mode of operation. The measured output voltage (using the MEASure[:SCALar][:VOLTage][:DC]? Command) will return that newly programmed value, that could be e.g. 30.93 V instead of 60 V. When output come back to CV mode of operation (e.g. load is disconnected), initial set 60 V will be measured again.

Execution of this command also affects bit 8 (PARAllel) or bit 9 (SERies) of the Operation status register (see [Section 3.3](#)).

At *RST, channels will be uncoupled (NONE).

Parameters	Name	Type	Range	Default
<type>		Discrete	NONE CGND SRAil	NONE

PARAllel|SERies

Return	Query returns the currently selected output coupling state.
Usage example	<pre> INST:COUP:TRAC SER VOLT 70 VOLT? 70.00 INST:COUP:TRAC PAR CURR 9 CURR? 9.00 </pre>
Errors	312, "Cannot execute when the channels are coupled"
Related Commands	<p>*SAV</p> <pre> MEASure[:SCALar]:CURRent[:DC] MEASure[:SCALar][:VOLTage][:DC] OUTPut:DPRog OUTPut:MODE? OUTPut:TRACk[:STATe] </pre>

5.8.5. INSTRument:DISPlay:TRACe[<n>]

Syntax	<pre> INSTRument:DISPlay:TRACe[<n>] {<value>} INSTRument:DISPlay:TRACe[<n>]? </pre>			
Description	<p>This command sets the output value that will be displayed on the display position (trace) defined with [<n>]. This command affects only display modes 2, 3 and 4 (see the DISPlay:VIEW command).</p> <p>An attempt to select the same value on both positions (traces) will generate an execution error.</p>			
Parameters	Name	Type	Range	Default
	<value>	Discrete	VOLTage CURRent POWER	–
Return	Query returns the currently selected displayed output value on the selected display position (trace).			
Usage example	<pre> INST:DISP:TRAC2? CURR </pre>			
Errors	-200, "Execution error"			
Related Commands	<pre> DISPlay:VIEW INSTRument:DISPlay:TRACe:SWAP INSTRument:DISPlay:YT:RATE </pre>			

5.8.6. INSTRument:DISPlay:TRACe:SWAP

Syntax	<pre>INSTRument:DISPlay:TRACe:SWAP</pre>
Description	Use this command to swap output values display positions.
Usage example	<pre> INST:DISP:TRAC1? VOLT INST:DISP:TRAC2? CURR INT:DISP:TRAC:SWAP INST:DISP:TRAC1? CURR INST:DISP:TRAC2? </pre>

VOLT

Related DISPlay:VIEW
Commands INSTrument:DISPlay:TRACe[<n>] {<value>}
 INSTrument:DISPlay:YT:RATE

5.8.7. INSTrument:DISPlay:YT:RATE

Syntax INSTrument:DISPlay:YT:RATE {<duration>}
 INSTrument:DISPlay:YT:RATE?

Description This command sets the sample duration in seconds when YT (mode 4, see the DISPlay:VIEW command) display view is selected.

Parameters	Name	Type	Range	Default
	<duration>	NR2	0.02 – 300	0.1

Return The query command returns the programmed sample duration in seconds.

Usage example INST:DISP:YT:RATE 10

Related DISPlay:VIEW
Commands INSTrument:DISPlay:TRACe[<n>] {<value>}
 INSTrument:DISPlay:TRACe:SWAP

5.8.8. INSTrument:COUPle:TRIGger

Syntax INSTrument:COUPle:TRIGger {<mode>}
 INSTrument:COUPle:TRIGger?

Description *Not implemented yet*

This command defines a coupling between channels trigger systems. Use ALL parameter to couple or NONE to remove coupling.

At *RST, trigger systems are uncoupled.

Parameters	Name	Type	Range	Default
	<mode>	Discrete	ALL CH1 CH2 CH3 CH4 CH5 CH6 NONE	ALL

Return This query returns the currently coupled output.

Usage example INST:SEL CH1
 VOLT:TRIG 12
 CURR:TRIG 1.5
 INST:SEL CH2
 VOLT:TRIG 5
 CURR:TRIG MAX
 INST:COUP:TRIG ALL
 TRIG:SOUR IMM
 INIT

Related *RST
Commands INSTrument:COUPle:TRACking

5.8.9. INSTrument:NSElect

Syntax INSTrument:NSElect {<channel>}
 INSTrument:NSElect?

Description This command is used in conjunction with the SElect command. It serves the same purpose, except that it uses a numeric value instead of the identifier used in the SElect command.

Parameters	Name	Type	Range	Default
	<channel>	NR1	1 – 6	–
Return	When queried it returns the logical instrument number of the currently selected BB3 channel. Note that the numbering used for logical instruments directly corresponds to the numbers used in status reporting for multiple instruments; specifically the STATUS:QUESTIONable:INSTrument and STATUS:OPERation:INSTrument commands.			
Usage example	INST:NSEL 2 INST:NSEL? 2			
Related Commands	STATUS:QUEStionable:INSTrument STATUS:OPERation:INSTrument			

5.9. MEASure

Measure commands return back the output voltage, current, power or temperature. They trigger the acquisition of new data before returning the reading. Measurements are performed by digitizing the instantaneous output voltage, current or temperature. Output power is calculated as product of measured voltage and current. Keyword [:DC] is optional since all measurement are by default of the DC level of the signal.

SCPI command	Description
MEASure	
[:SCALar]	
:CURRent	
[:DC]? [<channel>]	Takes a measurement; returns the average current
:POWer	
[:DC]? [<channel>]	Takes a measurement; returns the average power
:TEMPerature	
[:DC]? [<sensor>]	Takes a measurement; returns the average temperature
[:VOLTage]	
[:DC]? [<channel>]	Takes a measurement; returns the average voltage

5.9.1. MEASure[:SCALar]:CURRent[:DC]

Syntax MEASure[:SCALar]:CURRent[:DC]? [<channel>]

Description Query the current measured across the current sense resistor inside the power module.

Parameters	Name	Type	Range	Default
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	–

Return Returns the average output current in amperes as decimal number (NR2).

Usage example Measure current on the currently selected channel (CH1) and CH2:

```
MEAS:CURR?;:MEAS:CURR? CH2  
1.23;0.12
```

Related Commands INSTRument:COUPle:TRACking

5.9.2. MEASure[:SCALar]:POWer[:DC]

Syntax MEASure[:SCALar]:POWer[:DC]? [<channel>]

Description Query the output power calculated as product of measured voltage and current value.

Parameters	Name	Type	Range	Default
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	n/a

Return Returns the average output power in watts as decimal number (NR2).

Usage example MEAS:POW? CH2
80.44

Related Commands

5.9.3. MEASure[:SCALar]:TEMPerature[:THERmistor][:DC]**Syntax** `MEASure[:SCALar]:TEMPerature[:THERmistor][:DC]? [<sensor>]`**Description** Query the temperature measured using the specified temperature sensors as follows:

- AUX – auxiliary temperature sensor (built-in fan controller) used to monitor temperature inside BB3 chassis
- CH1, CH2, CH3, CH4, CH5, CH6 – temperature sensor connected to channel power module used to regulate fan speed

All installed sensors are periodically tested. When sensor does not passed the test, programmed output current is automatically limited to 2 A. If load that draws more current than 2 A output current will be set to zero.

Parameters	Name	Type	Range	Default
	<sensor>	Discrete	AUX CH1 CH2 CH3 CH4 CH5 CH6	AUX
Return	Returns the average temperature value in degrees Celsius (°C) as decimal number (NR2). If self-test detect selected temperature sensor failure or sensor is not installed a -240 or -241 error will be generated.			
Usage example	<pre>MEAS:TEMP? CH2 49</pre>			
Errors	<pre>-240, "Hardware error" -241, "Hardware missing"</pre>			
Related Commands	<pre>DIAGnostic[:INFormation]:FAN? SYSTem:CPU:OPTion? SYSTem:TEMPerature:PROTection[:HIGH][:LEVel] SYSTem:TEMPerature:PROTection[:HIGH]:DELay[:TIME] SYSTem:TEMPerature:PROTection[:HIGH]:STATE SYSTem:TEMPerature:PROTection[:HIGH]:TRIPped?</pre>			

5.9.4. MEASure[:SCALar][:VOLTage][:DC]**Syntax** `MEASure[:SCALar][:VOLTage][:DC]? [<channel>]`**Description** Query the voltage measured at the sense terminals of the selected channel.

Parameters	Name	Type	Range	Default
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	n/a
Return	Returns the average output voltage in volts as decimal number (NR2).			
Usage example	<pre>MEAS:VOLT? CH1 43.25</pre> <p>Query voltage of the channel 2 that is currently selected:</p> <pre>INST CH2 MEAS? 12.40</pre>			
Related Commands	INSTrument:COUPle:TRACking			

5.10. MEMory

The MEMory subsystem works with BB3 state files that are saved to ([*SAV](#)) and recalled from ([*RCL](#)) non-volatile storage locations numbered 0 through 9. The storage location 0 named "Power down state" is used to store the current BB3 parameters.

SCPI command	Description
MEMory	
:NSTates?	Returns total number of state storage memory locations
:STATe	
:CATalog?	Lists the names associated with all ten state storage locations
:DELeTe {<profile>}	Deletes the contents of a state storage location
:ALL	Deletes the contents of all state storage locations
:NAME {<profile>}. {<name>}	Assigns a custom name to a state storage locations
:RECall	
:AUTO {<bool>}	Specifies whether the power-down state is recalled from location 0 on power-on
:SELeCt {<profile>}	Specifies which BB3 state will be used at power on
:VALid? {<profile>}	Determines whether a storage location contains a valid state

5.10.1. MEMory:NSTates

Syntax [MEMory:NSTates?](#)

Description Returns the total number of *SAV/*RCL states available in the BB3.

Return Returns numeric value (NR1) which is one greater than the maximum that can be sent as a parameter to the *SAV and *RCL commands.

Usage example
MEM:NST?
10

5.10.2. MEMory:STATe:CATalog

Syntax [MEMory:STATe:CATalog?](#)

Description This query requests a list of defined names in the MEMory:STATe subsystem.

Return The BB3 returns a list of defined <name>'s in a comma separated list. Each <name> is returned in a quoted string.

Usage example
MEM:STAT:CAT?
""
"12V/1A",
"list v",
"4ch",
"tracking",
"parallel",
"long lists",
"list all channels",
"Saved at 2019-10-22 09:33:55",
"--Empty--"

Related Commands MEMory:STATe:NAME

5.10.3. MEMory:STATe:DELeTe

Syntax `MEMory:STATe:DELeTe {<profile>}`
`MEMory:STATe:DELeTe:ALL`

Description When used with a profile number this command deletes the contents of the specified storage location. The `MEMory:STATe:DELeTe:ALL` deletes the contents of storage locations 1 through 9.

An error is generated on an attempt to recall a deleted state.

Parameters	Name	Type	Range	Default
	<profile>	NR1	1 – 9	–
Return	None			
Usage example	<code>MEM:STAT:DEL 2</code>			
Related Commands	*RCL *SAV			

5.10.4. MEMory:STATe:NAME

Syntax `MEMory:STATe:NAME {<profile>}, {<name>}`
`MEMory:STATe:NAME? {<profile>}`

Description This command associates a <name> with a *SAV/*RCL register number. May assign same name to different locations and state names are unaffected by [*RST](#). Deleting a storage location's contents `MEMory:STATe:DELeTe` resets associated name to “--Empty--”

Parameters	Name	Type	Range	Default
	<profile>	NR1	1 – 9	–
	<name>	Quoted string	0 to 32 characters	–
Return	Returns a *SAV/*RCL register number associates with profile number.			
Usage example	<code>MEM:STAT:DEF, 2, "All outputs on"</code> <code>MEM:STAT:DEF? 2</code> " All outputs on"			
Related Commands	<code>MEMory:STATe:DELeTe</code>			

5.10.5. MEMory:STATe:RECall:AUTO

Syntax `MEMory:STATe:RECall:AUTO {<bool>}`
`MEMory:STATe:RECall:AUTO?`

Description This command disables or enables the automatic recall of a specific stored BB3 state selected using the `MEMory:STATe:RECall:SElect` command when power is turned on. Select ON to automatically recall one of the ten stored states or the “power-down” state (location 0) when power is turned on. Select OFF to issue a reset ([*RST](#)) when power is turned on.

Parameters	Name	Type	Range	Default
	<bool>	Boolean	ON OFF 0 1	–
Return	The query command returns 0 (OFF) or 1 (ON).			
Usage example	<code>MEM:STAT:REC:AUTO?</code> 1			
Related Commands	*SAV <code>MEMory:STATe:RECall:SElect</code>			

SYSTem:POWer

5.10.6. MEMory:STATe:RECall:SElect

Syntax `MEMory:STATe:RECall:SElect {<profile>}`
`MEMory:STATe:RECall:SElect?`

Description This command selects which BB3 state will be used at power on if the automatic recall mode is enabled (see `MEMory:STATe:RECall:AUTO ON` command). If the automatic recall mode is disabled (`MEMory:STATe:RECall:AUTO OFF`), then a “factory reset” (return to the default values) is issued when power is turned on.

Parameters	Name	Type	Range	Default
	<profile>	NR1	0 – 9	–

Return The query command returns numeric value (NR1) for 0 to 9 indicating which instrument state will be used at power on.

Usage example `MEM:STAT:REC:SEL?`
 2

Related Commands *SAV
`MEMory:STATe:RECall:AUTO`
`SYSTem:POWer`

5.10.7. MEMory:STATe:VALid

Syntax `MEMory:STATe:VALid? {<profile>}`

Description This command queries the specified storage location to determine if a valid state is currently stored in this location.

*Use this command before sending the [*RCL](#) command to determine if a valid state has been previously stored on queried location.*

Parameters	Name	Type	Range	Default
	<profile>	NR1	0 – 9	–

Return Returns 0 if no state has been stored or if it has been deleted. It returns 1 if a valid state is stored in this location.

Usage example `MEM:STAT:VAL? 2`
 1

Related Commands *RCL
 *SAV

5.11. MMEMemory

The MMEMemory commands are used to store, read or delete file in the BB3's SD card. It can also query SD card information. In addition it is used for storing and recalling values used by [SOURCE[<n>]]:LIST subsystem. File and directory (folder) names cannot contain the following characters: \ / : * ? " < > |

SCPI command	Description
MMEMory	
:CATalog [<directory>]	Returns a list of items in the specified directory (folder)
:LENGth [<directory>]	Returns the number of items in the specified directory
:CDIRectory [<directory>]	Changes the current directory
:CLOSe	Closes the file specified in NAME
:COPY [<source>], [<destination>]	Copies <source> to <destination>
:DATE? [<filename>]	Returns date that the specified file was last saved
:DELeTe [<filename>]	Deletes an existing file
:DOWNload	
:ABORt	Aborts current download session
:DATA [<block>]	Downloads data from the host computer
:FNAME [<filename>]	Creates or opens the specified filename for download data
:SIZE [<filesize>]	Sets information about file size used for progress bar
:FEED	Sets data handle used to feed data into the file
:INFormation?	Returns used and free space
:LOAD	
:LIST<n> [<filename>]	Loads stored LIST to the specified channel
:PROFile [<filename>]	Loads stored user profile
:LOCK [<password>]	Sets write protection
:MDIRectory [<directory>]	Makes a new directory
:MOVE [<source>], [<destination>]	Moves or renames <source> to <destination>
:NAME [<filename>]	Sets the file name to be opened or closed
:OPEN	Opens the file specified in NAME
:RDIRectory [<directory>]	Removes the specified directory
:STORe	
:LIST<n> [<filename>]	Saves specified channel LIST
:PROFile [<filename>]	Saves specified user profile
:TIME? [<filename>]	Returns time that the specified file was last saved
:UNLock [<password>]	Clears write protection
:UPLoad? [<filename>]	Uploads data to the host computer

5.11.1. MMEMory:CATalog

Syntax [MMEMory:CATalog? \[<directory>\]](#)

Description Returns the list of files and directories (folders) names, types and sizes in the current or specified directory. Number of items (files/directories) corresponds to the value returned by the MMEMory:CATalog:LENGth? command.

To read out the information in the root directory (folder), specify "\" (backslash) or "/". If <directory> is not set, this function is applied to the current directory. If directory=<path>, this function is applied to <current directory>\<path>.

Error occurs if the specified directory does not exist.

Parameters	Name	Type	Range	Default
------------	------	------	-------	---------

	<div> <div><directory></div> <div>Quoted string</div> <div>Directory name, either / (slash) or \ (backslash) can be used as the path separator. 1 to 255 characters</div> <div>–</div> </div>
Return	<p>Returns all files in the directory as list of comma delimited quoted strings of <filename>, <filetype> and <filesize>. The following file types are supported:</p> <ul style="list-style-type: none"> • BIN – binary data • CSV – textual data (comma separated) • FOLD – directory (folder) • LIST – LIST program data • LOG – trace (display) or logged data (file extension .log) • PROF – user profile data (file extension .profile) • STAT – instrument (setting) state or user profiles (file extension .conf)
Usage example	<pre>MMEM:CAT? "USER,FOLD,0","SCPI.PDF,BIN,1274844","SCH5B13A.PDF,BIN,296589", "Documents,FOLD,0","Lists,FOLD,0","Videos,FOLD,0", "profile0.profile,PROF,264" MMEM:CAT? "USER" "LST_2_3.CSV,BIN,88","FERY2.PDF,BIN,2443"</pre>
Errors	<pre>-250,"Mass storage error" -251,"Missing mass storage" -252,"Missing media" -256,"File name not found"</pre>
Related Commands	<pre>MMEMory:CATalog:LENGth? MMEMory:INFormation? MMEMory:DATE? MMEMory:TIME?</pre>

5.11.2. MMEMory:CATalog:LENGth

Syntax	MMEMory:CATalog:LENGth? [<directory>]			
Description	This command returns the number of items in the current or specified directory (folder). The result corresponds to the number of files returned by the MMEMory:CATalog? command.			
Parameters	Name	Type	Range	Default
	<directory>	Quoted string	Directory name, either / (slash) or \ (backslash) can be used as the path separator. 1 to 255 characters	–
Return	The query command returns number (NR1) of items (files and directories).			
Usage example	MMEM:CAT:LEN? "USER" 2			
Errors	-256,"File name not found"			
Related Commands	MMEMory:CATalog?			

5.11.3. MMEMory:CDIRectory

Syntax	<pre>MMEMory:CDIRectory {<directory>} MMEMory:CDIRectory?</pre>
Description	<p>Changes the current directory to the specified directory (folder). This directory must exist otherwise an error will be generated.</p> <p>At *RST, this value is set to the root path.</p>

Parameters	Name	Type	Range	Default
	<directory>	Quoted string	Directory name, either / (slash) or \ (backslash) can be used as the path separator. 1 to 255 characters	–
Return	This query returns the full path of the current directory.			
Usage example	<pre>MMEM:CDIR "TEST/Test folder2" MMEM:CDIR? "TEST/Test folder2"</pre>			
Errors	-256, "File name not found"			
Related Commands	<pre>*RST MMEMory:CATalog? MMEMory:MDIRectory MMEMory:RDIRectory</pre>			

5.11.4. MMEMory:CLOSe

Syntax `MMEMory:CLOSe`

Description *Not implemented yet*

Use this command to close the selected file specified in NAME. An attempt to CLOSe a file that was not open generate an error.

This command is included only for compatibility with the SCPI standard and may not be used.

Usage example

```
MMEM:CLOS
```

Errors -256, "File name not found"

Related Commands

```
*RST
MMEMory:NAME
MMEMory:OPEN
```

5.11.5. MMEMory:COPY

Syntax `MMEMory:COPY {<source>}, {<destination>}`

Description Makes a copy of an existing file in the current directory. The file names must include any file extension.

If <destination> is a file name, the copy file is created in the current directory. When <destination> is a <path> (e.g. "test lists/test022") the source file is duplicated in <current directory>/<path>.

Parameters	Name	Type	Range	Default
	<source>	Quoted string	Source file name, 1 to 255 characters	–
	<destination>	Quoted string	Copy file name or directory name, either / (slash) or \ (backslash) can be used as the path separator. 1 to 255 characters	–
Usage example	<pre>MMEM:COPY "test.bin", "new2/test_new.bin"</pre>			
Errors	<pre>-253, "Corrupt media" -254, "Media full" -256, "File name not found" -258, "Media protected"</pre>			

Related Commands MMEemory:CATalog?
MMEemory:CDIRectory
MMEemory:LOCK
MMEemory:MDIRectory
MMEemory:MOVE

5.11.6. MMEemory:DATE

Syntax MMEemory:DATE? {<filename>}

Description Returns the (year, month, day) that the specified file was last saved.

Parameters	Name	Type	Range	Default
	<filename>	Quoted string	File name or directory name, either / (slash) or \ (backslash) can be used as the path separator. 1 to 255 characters	—

Return Comma-separated numbers (NR1) of year, month, day formatted as yyyy, mm, dd

Usage example MMEM:DATE? "test.002"
2017, 10, 1

Errors -256,"File name not found"

Related Commands MMEemory:TIME

5.11.7. MMEemory:DELeTe

Syntax MMEemory:DELeTe {<filename>}

Description Use this command to delete a file in the current directory. If SD card is locked using the MMEemory:LOCK command, an error -258 will be generated.

Parameters	Name	Type	Range	Default
	<filename>	Quoted string	File name, either / (slash) or \ (backslash) can be used as the path separator. 1 to 255 characters	—

Usage example MMEM:DEL "test.002"

Errors -256,"File name not found"
-258,"Media protected"

Related Commands MMEemory:CATalog?
MMEemory:CDIRectory
MMEemory:RDIRectory
MMEemory:LOCK

5.11.8. MMEemory:DOWNload:ABORt

Syntax MMEemory:DOWNload:ABORt

Description Use this command to abort currently running file transfer from the host initiated with the MMEemory:DOWNload:DATA command. If not active file transfer exists, the command will be ignored without generating any error.

Usage example MMEM:ABOR

Related Commands MMEemory:DOWNload:DATA

5.11.9. MMEemory:DOWNload:DATA**Syntax** MMEemory:DOWNload:DATA {<block>}**Description** Downloads data from the host computer to a file in the SD card. This is a multiple steps process:

- The filename must have been previously specified by MMEemory:DOWNload:FNAME.
- The data can be transferred in single or more blocks. Receiving of first block will erase all previously stored, and each consecutive block will be appended to the end
- Download is finished when MMEemory:DOWNload:FNAME with empty name was sent

Use MMEemory:INFOrmation? command first to check available space.

Parameters	Name	Type	Range	Default
	<block>	Data block	–	–
Usage example	Downloads text <i>Hello world</i> and store into the file "test file" in the current directory. Digit 2 denotes two digits of data length (11). MMEemory:DOWN:FNAME "test file" MMEemory:DOWN:DATA #211Hello world MMEemory:DOWN:FNAME ""			
Errors	-253, "Corrupt media" -254, "Media full" -258, "Media protected"			
Related Commands	MMEemory:DOWNload:FNAME MMEemory:INFOrmation? MMEemory:LOCK			

5.11.10. MMEemory:DOWNload:FNAME**Syntax** MMEemory:DOWNload:FNAME {<filename>}**Description** Creates or opens the specified filename prior to writing data to that file with MMEemory:DOWNload:DATA.

Parameters	Name	Type	Range	Default
	<filename>	Quoted string	File name, either / (slash) or \ (backslash) can be used as the path separator. 1 to 255 characters	–
Usage example	MMEemory:DOWNload:FNAME "new_list.bin"			
Errors	-258, "Media protected"			
Related Commands	MMEemory:DOWNload:DATA			

5.11.11. MMEemory:DOWNload:SIZE**Syntax** MMEemory:DOWNload:SIZE {<filesize>}**Description** This command define filesize used by progress bar displayed on the local console during the file transfer. If filesize is not provided, progress bar will not be displayed.

Parameters	Name	Type	Range	Default
	<filesize>	NR1	0 to 2.147.483.648 (2 GiB) as limited by SD Card FAT	0
Usage	MMEemory:DOWNload:SIZE 124000			

example

Related Commands MMEMory:DOWNload:DATA
MMEMory:DOWNload:FNAME

5.11.12. MMEMory:FEED

Syntax MMEMory:FEED
MMEMory:FEED?

Description *Not implemented yet*

Use this command to set data handle used to feed data into the file specified by MMEMory:NAME command. The data handle is fixed to HCOPy. This command is included only for compatibility with the SCPI standard, and may not be used.

Return The command returns data handle name (that is fixed to HCOPy).

Usage example MMEM:FEED?
HCOP

Related Commands HCOPy:DESTination

5.11.13. MMEMory:INFOrmation

Syntax MMEMory:INFOrmation?

Description Use this command to find out total amount of storage currently used and storage available on the SD card. The sum of that two amounts represents SD card capacity in bytes.

Return The command returns used space and free space as two comma separated integers.

Usage example MMEM:INFO?
3932160,7732461568

Related Commands MMEMory:DOWNload:DATA

5.11.14. MMEMory:LOAD:LIST

Syntax MMEMory:LOAD:LIST<n> {<filename>}

Description Load stored LIST program from SD card location defined by <filename> to the channel defined with <n>.

Parameters	Name	Type	Range	Default
	<filename>	Quoted string	File name, either / (slash) or \ (backslash) can be used as the path separator. 1 to 255 characters	–

Usage example MMEM:LOAD:LIST1 "DC_DC conv testing.list"
MMEM:LOAD:LIST2 "DC_DC conv testing.list"
TRIG:SOUR BUS
INIT
*TRG

Errors -200,"Execution error"
-256,"File name not found"

Related Commands MMEMory:STORe:LIST[<n>]
[SOURce[<n>]]:LIST:COUNT
[SOURce[<n>]]:LIST:CURREnt[:LEVel]
[SOURce[<n>]]:LIST:DWELI
[SOURce[<n>]]:LIST:VOLTage[:LEVel]

5.11.15. MMEMory:LOAD:PROFile**Syntax** `MMEMory:LOAD:PROFile {<filename>}`**Description** This command loads data from user profile file to the user profile 0.

Parameters	Name	Type	Range	Default
	<filename>	Quoted string	File name, either / (slash) or \ (backslash) can be used as the path separator. 1 to 255 characters	–

Usage example `MMEM:LOAD:PROF "old settings.profile"`**Errors** `-256,"File name not found"`

Related Commands

- *RCL
- *SAV
- MEMory:STATe:RECall:AUTO
- MMEMory:STORe:PROFile

5.11.16. MMEMory:LOCK**Syntax** `MMEMory:LOCK {<password>}`
`MMEMory:LOCK?`**Description** Use this command to enable write protection of SD card. All writing, deleting or modifying attempts on files or directories will generate an error if SD card is locked.

Parameters	Name	Type	Range	Default
	<password>	Quoted string	System password (4 to 16 characters)	–

Return This query returns 0 if SD card is unlocked, or 1 if SD card is locked.

Usage example

```
MMEM:LOCK "test123"
MMEM:LOCK?
1
```

Errors `122,"Invalid sys password"`

Related Commands

- MMEMory:UNLock
- SYSTem:PASSword:NEW

5.11.17. MMEMory:MDIRectory**Syntax** `MMEMory:MDIRectory {<directory>}`**Description** This command creates a new directory. If directory=<path>, this command creates a <current directory>/<path> directory.

Parameters	Name	Type	Range	Default
	<directory>	Quoted string	Directory name, either / (slash) or \ (backslash) can be used as the path separator. 1 to 255 characters	–

Usage example `MMEM:MDIR "test folder"`**Errors** `-258,"Media protected"`

Related Commands

- MMEMory:CDIRectory
- MMEMory:RDIRectory

5.11.18. MMEMory:MOVE**Syntax** `MMEMory:MOVE {<source>}, {<destination>}`

Description This command moves or renames an existing file. If destination is a file name, the source file is renamed to the new file name in the current directory. When destination=<path>, the source file is moved to <current directory>/<path>.

Error occurs if the source file does not exist or the destination file already exists.

Parameters	Name	Type	Range	Default
	<source>	Quoted string	Source file name, 1 to 255 characters	–
	<destination>	Quoted string	New file name or directory name, either / (slash) or \ (backslash) can be used as the path separator. 1 to 255 characters	–

Usage example

Rename file:

```
MMEM:MOVE "old name", "new name"
```

Move file from current directory to "/Test" directory:

```
MMEM:MOVE "new name", "/Test/new name"
```

Move and rename file:

```
MMEM:MOVE "/Test/new name", "/Documents/new doc"
```

Errors -256, "File name not found"
-258, "Media protected"

Related Commands MMEMory:CDIRectory
MMEMory:COPY

5.11.19. MMEMory:MDIRectory

Syntax MMEMory:MDIRectory {<directory>}

Description This command creates a new directory. If directory=<path>, this command creates a <current directory>/<path> directory.

Parameters	Name	Type	Range	Default
	<directory>	Quoted string	Directory name, either / (slash) or \ (backslash) can be used as the path separator. 1 to 255 characters	–

Usage example MMEM:MDIR "test folder"

Errors -258, "Media protected"

Related Commands MMEMory:CDIRectory
MMEMory:RDIRectory

5.11.20. MMEMory:NAME

Syntax MMEMory:NAME {<filename>}
MMEMory:NAME?

Description *Not implemented yet*

This command specifies the name of the file used by MMEMory:OPEN and MMEMory:CLOSe commands.

Parameters	Name	Type	Range	Default
	<filename>	Quoted string	File name, either / (slash) or \ (backslash) can be used as the path separator. 1 to 255 characters	–

Return	This query returns the name of the file that can be used by MMEMory:OPEN and MMEMory:CLOSe commands.
Usage example	MMEM:NAME "screenimg.png" MMEM:NAME? Screenimg.png
Errors	-257, "File name error"
Related Commands	MMEMory:CLOSe MMEMory:OPEN

5.11.21. MMEMory:OPEN

Syntax	MMEMory:OPEN
Description	<i>Not implemented yet</i>

Use this command to open the file specified in NAME.

This command is included only for compatibility with the SCPI standard and may not be used

Usage example	MMEM:OPEN
Errors	-256, "File name not found"
Related Commands	*RST MMEMory:CLOSe MMEMory:NAME

5.11.22. MMEMory:STORe:LIST

Syntax	MMEMory:STORe:LIST<n> {<filename>}
---------------	------------------------------------

Description	Store LIST program of channel defined with <n> to SD card location defined by <file-name>. Stored file type will be TRAC. Default file extension is .list
--------------------	---

Parameters	Name	Type	Range	Default
	<filename>	Quoted string	File name, either / (slash) or \ (backslash) can be used as the path separator. 1 to 255 characters	–

Usage example	MMEM:STOR:LIST1 "DC_DC conv testing.list"
----------------------	---

Errors	-258, "Media protected"
Related Commands	MMEMory:LOAD:STATE [SOURce[<n>]]:LIST:COUNT [SOURce[<n>]]:LIST:CURREnt[:LEVel] [SOURce[<n>]]:LIST:DWELI [SOURce[<n>]]:LIST:VOLTage[:LEVel]

5.11.23. MMEMory:STORe:PROFile

Syntax	MMEMory:STORe:PROFile {<filename>}
---------------	------------------------------------

Description	This command stores the BB3 state (i.e. user profile 0) to SD card location defined by <filename>. Stored file type will be STAT. Default file extension is .conf
--------------------	---

Parameters	Name	Type	Range	Default
	<filename>	Quoted string	File name, either / (slash) or \ (backslash) can be used as the path separator. 1 to 255 characters	–

Usage example MMEM:STOR:PROF "Both channels 5V_3A.profile"

Errors -258, "Media protected"

Related Commands *RCL
*SAV
MEMory:STAtE:RECall:AUTO
MMEMory:LOAD:PROFile

5.11.24. MMEMory:TIME

Syntax MMEMory:TIME? {<filename>}

Description Returns the (hours, minute, seconds) that the specified file was last saved.

Parameters	Name	Type	Range	Default
	<filename>	Quoted string	File name or directory name, either / (slash) or \ (backslash) can be used as the path separator. 1 to 255 characters	–
Return	Comma-separated numbers (NR1) of hours, minute, seconds formatted as hh, mm, ss			
Usage example	MMEM:TIME? "test.002" 22, 10, 14			
Errors	-256, "File name not found"			
Related Commands	MMEMory:DATE			

5.11.25. MMEMory:UNLock

Syntax MMEMory:UNLock {<password>}

Description Disable write protection of SD card activated by the MMEMory:LOCK command.

Parameters	Name	Type	Range	Default
	<password>	Quoted string	System password (4 to 16 characters)	–
Usage example	MMEM:LOCK? 1 MMEM:UNL "test123" MMEM:LOCK? 0			
Errors	122, "Invalid sys password"			
Related Commands	MMEMory:LOCK SYSTem:PASSword:NEW			

5.11.26. MMEMory:UPLoad

Syntax MMEMory:UPLoad? {<filename>}

Description This command uploads the contents of a file from the instrument to the host computer. The format for <file> is "[<path>]<file_name>", where <path> must be an absolute folder path. If <path> is omitted, the folder specified by the MMEMory:CDIRectory command is used. Absolute paths begin with a "/" or "\" and start at the root folder of SD card.

Parameters	Name	Type	Range	Default
	<filename>	Quoted string	File name or directory name, either / (slash) or \ (backslash) can	–

be used as the path separator. 1 to 255 characters

Return	The query returns the file contents are returned as an IEEE 488.2 definite-length block.
Usage example	<pre>MMEM:UPL? "test file" #211Hello world</pre>
Errors	-257,"File name error"
Related Commands	MMEMory:DOWNload:DATA

5.12. OUTPut

The OUTPut subsystem controls the output state, coupling outputs and protections, protection clear and tracking state.

SCPI command	Description
OUTPut	
[:STATe] {<bool>}	Controls the specified channel output state
TRIGgered {<bool>} [, <channel>]	Controls channel output state with trigger
:DElay	
:ON {<time>}	Sets the delay time for turning the output on
:OFF {<time>}	Sets the delay time for turning the output off
:DPRog {<DprogState>}	Controls down-programmer circuit
:MODE?	Returns the channel mode of operation
:PROTection	
:CLEar	Resets latched protection
:COUPle {<bool>}	Enables channel coupling for protection faults
:MEASure {<bool>}	Enables measuring of output voltage before channel output is turned on
:TRACk[:STATe] {<bool>}	Enables channels to operate in the track mode

5.12.1. OUTPut[:STATe]

Syntax [OUTPut\[:STATe\] {<bool>} \[, <channel>\]](#)
[OUTPut\[:STATe\]? \[<channel>\]](#)

Modules **DCP405** **DCP405B** **DCM220**

Description This command enables or disables the specified output channel(s). The enabled state is ON (1); the disabled state is OFF (0). The state of a disabled output is a condition of zero output voltage and zero source current.
Execution of this command also affects bit 10 (OE) and bit 11 (DP) of the Operation Instrument Summary register (see [Section 3.3.2](#)).
Self-test operation initiated by [*TST?](#) command will put all BB3 modules into disable state.
When channels are not coupled together (INSTrument:COUPle:TRACking) this command activate green OE LED indicator between output terminals.

Execution of the OUTP ON command on the channel which has one or more protection tripped (OCP, OVP, OPP or OTP) will generate error 201.
Use OUTPut:PROTection:CLEar command to clear all tripped protections.

Parameters	Name	Type	Range	Default
	<bool>	Boolean	ON OFF 0 1	–
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	–

Return The query command returns 0 if the output is OFF, and 1 if the output is ON.

Usage example
OUTP ON, CH1
OUTP? CH1
1

Errors 108, "Cal output disabled"
201, "Cannot execute before clearing protection"

Related *TST

Commands INSTRument:COUPle:TRACking
 OUTPut:PROTection:CLEar
 [SOURce:]VOLTage:SENSe[:SOURce]

5.12.2. OUTPut[:STATe]:TRIGgered

Syntax OUTPut[:STATe]:TRIGgered {<bool>} [, <channel>]
 OUTPut[:STATe]:TRIGgered? [<channel>]

Modules DCP405 DCP405B DCM220

Description This command programs the pending triggered channel's output state. The pending triggered output state is a stored value that is transferred to the output terminals when a trigger occurs.

Parameters	Name	Type	Range	Default
	<bool>	Boolean	ON OFF 0 1	—
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	—

Return Query the triggered output state presently programmed. If no triggered level is programmed, the OUTPut? state is returned.

Usage example
 OUTP?
 0

 OUTP:TRIG ON
 TRIG:SOUR IMM
 INIT
 OUTP?
 1

Errors 108, "Cal output disabled"
 201, "Cannot execute before clearing protection"

Related Commands *TST
 OUTPut:PROTection:CLEar
 [SOURce:]VOLTage:SENSe[:SOURce]

5.12.3. OUTPut:DELaY:ON

Not implemented yet

5.12.4. OUTPut:DELaY:OFF

Not implemented yet

5.12.5. OUTPut:DPRog

Syntax OUTPut:DPRog {<DprogState>}
 OUTPut:DPRog?

Modules DCP405

Description A down-programmer is a circuit built into the channel's output of a power module that actively pulls the output voltage down when the programmed output voltage value is moving from a higher setting to a lower setting. The down-programmer circuit is active by default and only rare situation requires to be turned off. One such situation is when battery is connected as a load. Another one is connecting two channel in parallel when only one down-programmer circuit is enough for actively pulls the output voltage down while lower voltage is set. Execution of this command also affects bit 11 (DP) of the Operation Instrument Summary register (see Section [Section 3.3.2](#)).

Despite of the down-programmer state programmed by this command, it will be deacti-

vated when the channel output is turned off (i.e. `OUTPut[:STATe] OFF`) after `DP_OFF_DELAY_PERIOD` in seconds). When the channel output is turned on again, down-programmer will be set back to the state programmed with this command.

If negative output power (`DP_NEG_LEV`) is measured and last more then `DP_NEG_DELAY` seconds the down-programmer will be switched off and an error 500 will be generated.

Parameters	Name	Type	Range	Default
	<code><DprogState></code>	Discrete	AUTO 0 1	AUTO
Return	This query returns 0 (OFF) if down-programmer is disabled, or 1 (ON) when down-programmer is enabled.			
Usage example	<pre>OUTP:DPR? 1</pre>			
Errors	<pre>500,"Down-programmer on CH1 switched off" 501,"Down-programmer on CH2 switched off"</pre>			
Related Commands	<code>OUTPut[:STATe]</code>			

5.12.6. OUTPut:MODE?

Syntax `OUTPut:MODE? [<channel>]`

Modules `DCP405` `DCP405B` `DCM220`

Description This command simplify resolving a results that can be obtained reading the bit 8 (CV) and 9 (CC) of the read-only Instrument Isummary Operation Status register for a specific channel (see table in the [Section 3.3.2](#)). The power module can works in one of the three output modes:

- CV (Constant Voltage), when the output voltage equals the voltage setting value and the output current is determined by the load
- CC (Constant Current), when the output current equals the current setting value and the output voltage is determined by the load and
- UR (Unregulated) that is critical mode when neither CV nor CC mode is active

The UR mode is not supported by DCM220 module and in [software simulator](#).

Parameters	Name	Type	Range	Default
	<code><channel></code>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	–
Return	The query returns CV, CC or UR.			
Usage example	<pre>Set output voltage to 20 V and max. current, check that output voltage is as defined that indicate the constant voltage mode of operation: VOLT 20; CURR MAX MEAS:VOLT? 20.0 OUTP:MODE? CV</pre>			
Related Commands	<pre>STATus:OPERation:INSTrument:ISUMmary[<n>][:EVENT] STATus:OPERation:INSTrument:ISUMmary[<n>]:CONDition STATus:OPERation:INSTrument:ISUMmary[<n>]:ENABLE</pre>			

5.12.7. OUTPut:PROTection:CLEAr

Syntax `OUTPut:PROTection:CLEAr [<channel>]`

Modules `DCP405` `DCP405B` `DCM220`

Description This command clears the latched protection status that disables the output when an over-voltage, over-current or a power-limit condition is detected. All conditions that generate the fault must be removed before the latched status can be cleared. The output is restored to the state it was in before the fault condition occurred.

Parameters	Name	Type	Range	Default
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	–

Usage example The following command clears the latched protection status on all channels:
 OUTP:PROT:CLE

Related Commands [SOURce[<n>]]:CURRent:PROTection:STATe
 [SOURce[<n>]]:POWEr:PROTection:STATe
 [SOURce[<n>]]:VOLTage:PROTection:STATe

5.12.8. OUTPut:PROTection:COUPle

Syntax OUTPut:PROTection:COUPle {<bool>}
 OUTPut:PROTection:COUPle?

Modules DCP405 DCP405B DCM220

Description This command enables or disables output coupling for protection faults. When enabled, all output channels are disabled when a protection fault occurs on any output channel. When disabled, only the affected output channel is disabled when a protection fault is triggered.

Parameters	Name	Type	Range	Default
	<bool>	Boolean	ON OFF 0 1	OFF

Return The query command returns 0 if the protection coupling is OFF (disabled), and 1 if the protection coupling is ON (enabled).

Usage example OUTP:PROT:COUP ON
 OUTP:PROT:COUP?
 1

Related Commands OUTPut:PROTection:CLEar

5.12.9. OUTPut:PROTection:MEASure

Syntax OUTPut:PROTection:MEASure {<bool>}
 OUTPut:PROTection:MEASure?

Modules DCP405 DCP405B DCM220

Description *Not implemented yet*

This command enables or disables measuring of output voltage before channel output will be enabled.

If non-zero voltage is present on the output due to e.g. intentionally connected battery or wrong wiring that brings some other power source to the output terminals an error message will be generated.

Parameters	Name	Type	Range	Default
	<bool>	Boolean	ON OFF 0 1	OFF

Return The query command returns 0 if the voltage measuring is disabled (OFF) before output is going to be enabled, and 1 if voltage measuring is ON (enabled).

Usage example OUTP:PROT:MEAS ON

Errors 505, "External voltage on CH1 detected"

506,"External voltage on CH2 detected"

Related Commands OUTPut[:STATe]

5.12.10. OUTPut:TRACk[:STATe]

Syntax OUTPut:TRACk[:STATe] {<bool>}
OUTPut:TRACk[:STATe]?

Modules **DCP405** **DCP405B** **DCM220**

Description This command enables or disables two or more power modules to operate in the track mode. For example, when the track mode is first enabled, the CH2 output will be set to the same voltage level as the CH1 output. Once enabled, any change of the programmed voltage level in either CH1 or CH2 will be reflected in the other channel. The TRACk OFF command returns the power modules to the non-track mode.

A device-specific error 312 will be generated if this command is tried to executed when channels are in any of coupled mode.

The following commands will affect the both channel regardless of which channel is currently selected using the INSTRument[:SELEct] or INSTRument:NSELEct command):

- OUTPut:PROTEction:CLEAr
- [SOURce[<n>]]:CURRent, [SOURce[<n>]]:CURRent:STEP,
[SOURce[<n>]]:CURRent:TRIGgered, [SOURce[<n>]]:CURRent:LIMit,
[SOURce[<n>]]:CURRent:PROTEction:DELay,
[SOURce[<n>]]:CURRent:PROTEction:STATe,
[SOURce[<n>]]:CURRent:PROTEction:TRIPped?, [SOURce[<n>]]:LIST:COUNT,
[SOURce[<n>]]:LIST:CURRent, [SOURce[<n>]]:LIST:DWELI,
[SOURce[<n>]]:LIST:VOLTage[:LEVel], [SOURce[<n>]]:POWER:LIMit,
[SOURce[<n>]]:POWER:PROTEction[:LEVel],
[SOURce[<n>]]:POWER:PROTEction:DELay[:TIME],
[SOURce[<n>]]:POWER:PROTEction:STATe,
[SOURce[<n>]]:POWER:PROTEction:TRIPped?, [SOURce[<n>]]:VOLTage,
[SOURce[<n>]]:VOLTage:LIMit, [SOURce[<n>]]:VOLTage:STEP,
[SOURce[<n>]]:VOLTage:TRIGgered, [SOURce[<n>]]:VOLTage:MODE,
[SOURce[<n>]]:VOLTage:PROTEction[:LEVel],
[SOURce[<n>]]:VOLTage:PROTEction:DELay,
[SOURce[<n>]]:VOLTage:PROTEction:STATe,
[SOURce[<n>]]:VOLTage:PROTEction:TRIPped?
- TRIGger[:SEQuence][:IMMediate], TRIGger[:SEQuence]:DELay,
TRIGger[:SEQuence]:SLOPe, TRIGger[:SEQuence]:SOURce

The following channel specific commands will generate a device-specific error 313 when channels are in tracking mode:

- CALibrate,
- INSTRument:COUPlE:TRACking,
- OUTPut:TRACk[:STATe],
- SIMULator:RPOL, SIMULator:VOLTage:PROGram,
- [SOURce[<n>]]:VOLTage:PROGram,

At *RST, the tracking mode is disabled.

Parameters	Name	Type	Range	Default
	<bool>	Boolean	ON OFF 0 1	OFF
Return	Query the tracking mode state of the power modules. The returned value is 0 (OFF) or 1 (ON).			
Usage example	OUTP:TRAC ON VOLT 12			

EEZ BB3 SCPI reference

MEAS?

12.00

MEAS? CH2

12.00

Errors 312, "Cannot execute when the channels are coupled"
313, "Cannot execute in tracking mode"

Related *RST

Commands INSTRument:COUPle:TRACking

5.13. SENSE

The SENSE control the current measurement range, energy counting/window, and the data acquisition sequence.

SCPI command	Description
SENSe	
:AHOuR	
:RESet {<channel>}	Resets the amp-hour (Ah) measurement to zero
:CURRent	
[:DC]	
RANGe[:UPPer] {<range>}	Selects a DC current measurement range
:DLOG	
:FUNction	
:CURRent {<bool>}, {<channel>}	Enables/disables output current internal data logging
:POWer {<bool>}, {<channel>}	Enables/disables output power internal data logging
:VOLTagE {<bool>}, {<channel>}	Enables/disables output voltage internal data logging
:PERiod {<time>}	Sets the sample period for internal data logging
:TIME {<time>}	Sets the sample duration for internal data logging
:WHOur	
:RESet {<channel>}	Resets the watt-hour (Wh) measurement to zero

5.13.1. SENSE:AHOuR:RESet

Syntax SENSE:AHOuR:RESet {<channel>}

Description *Not implemented yet*

Use this command to reset the amp-hour counter to zero of the specified channel. If channels are coupled (in series or parallel) or in tracking mode, both channel's counters will be reset to zero.

Parameters	Name	Type	Range	Default
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	–

Usage example SENSE:AHO:RES

Related Commands FETCH:WHOur?
INSTrument:COUPle:TRACking
OUTPut:TRACk[:STATe]
SENSe:AHOuR:RESet
SYSTem:CHANnel:INFOrmation:AHOuR:TOTal?

5.13.2. SENSE:CURRent[:DC]:RANGe[:UPPer]

Syntax SENSE:CURRent[:DC]:RANGe[:UPPer] {<range>}
 SENSe:CURRent[:DC]:RANGe[:UPPer]?

Modules DCP405 DCP405B

Description This command selects a DC current measurement range when Power board with multiple current ranges is installed (e.g. r5B12 that can be find out with the SYSTem:CHANnel:MODEl? command). The entered value must be higher than the maximum current that you expect to measure. Units are in amperes.

Parameters	Name	Type	Range	Default
	<range>	NR2 Discrete	0.5, 5, MIN MAX DE-Fault	DEF
Usage example	SENS:CURR:RANG? 0.05			
Errors	-241, "Hardware missing"			
Related Commands	SENSe:CURRent[:DC]:RANGe:AUTO SYSTem:CHANnel:MODEl?			

5.13.3. SENSE:DLOG:FUNCTION:CURRent

Syntax	SENSe:DLOG:FUNCTION:CURRent {<bool>}, {<channel>} SENSe:DLOG:FUNCTION:CURRent? {<channel>}			
Description	Use this command to enable or disable output current internal data logging on the specified channel.			
Parameters	Name	Type	Range	Default
	<bool>	Boolean	ON OFF 0 1	OFF
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	–
Return	The query command returns the status (0 or 1) of the output current internal data logging enabled on the specified channel			
Usage example	SENS:DLOG:FUNC:CURR ON, CH1			
Related Commands	INIT:DLOG SENSe:DLOG:FUNCTION:POWER SENSe:DLOG:FUNCTION:VOLTage SENSe:DLOG:PERiod SENSe:DLOG:TIME			

5.13.4. SENSE:DLOG:FUNCTION:POWER

Syntax	SENSe:DLOG:FUNCTION:POWER {<bool>}, {<channel>} SENSe:DLOG:FUNCTION:POWER? {<channel>}			
Description	Use this command to enable or disable output power internal data logging on the specified channel.			
Parameters	Name	Type	Range	Default
	<bool>	Boolean	ON OFF 0 1	OFF
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	–
Return	The query command returns the status (0 or 1) of the output power internal data logging enabled on the specified channel			
Usage example	SENS:DLOG:FUNC:VOLT OFF, CH2			
Related Commands	INIT:DLOG SENSe:DLOG:FUNCTION:CURRent SENSe:DLOG:FUNCTION:VOLTage SENSe:DLOG:PERiod SENSe:DLOG:TIME			

5.13.5. SENSE:DLOG:FUNCTION:VOLTage

Syntax `SENSe:DLOG:FUNCTION:VOLTage {<bool>}, {<channel>}`
`SENSe:DLOG:FUNCTION:VOLTage? {<channel>}`

Description Use this command to enable or disable output voltage internal data logging on the specified channel.

Parameters	Name	Type	Range	Default
	<bool>	Boolean	ON OFF 0 1	OFF
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	–

Return The query command returns the status (0 or 1) of the output voltage internal data logging enabled on the specified channel

Usage example `SENS:DLOG:FUNC:VOLT OFF, CH2`

Related Commands `INIT:DLOG`
`SENSe:DLOG:FUNCTION:CURRENT`
`SENSe:DLOG:FUNCTION:POWER`
`SENSe:DLOG:PERIOD`
`SENSe:DLOG:TIME`

5.13.6. SENSE:DLOG:PERIOD

Syntax `SENSe:DLOG:PERIOD {<time>}`
`SENSe:DLOG:PERIOD?`

Description Use this command to set the sample period in seconds. For the sample period, the minimum is 5 ms, and it has to be in integral of 5 ms, while the maximum is 120 s. The entered value will be rounded to the nearest 20 ms integral.

Parameters	Name	Type	Range	Default
	<time>	NR2	0.005 – 120	0.02

Return The query command returns the sample period in seconds.

Usage example `SENS:DLOG:PER 1`

Related Commands `SENSe:DLOG:TIME`

5.13.7. SENSE:DLOG:TIME

Syntax `SENSe:DLOG:TIME {<time>}`
`SENSe:DLOG:TIME?`

Description This command sets the sample duration, the entered value is in seconds. For sample duration, the maximum is 86 400 000 seconds or 24 000 hours or 1000 days (depending of the available space on the installed SD Card, see the `MMEMory:INFORMATION?` command).

Parameters	Name	Type	Range	Default
	<time>	NR1	1 – 86400000	60

Return The query command returns the sample duration in seconds.

Usage example `SENS:DLOG:TIME 3600`

Related Commands `MMEMory:INFORMATION?`
`SENSe:DLOG:PERIOD`

5.13.8. SENSE:WHOur:RESet**Syntax** `SENSe:WHOur:RESet {<channel>}`**Description** *Not implemented yet*

Use this command to reset the watt-hour counter to zero of the specified channel. If channels are coupled (in series or parallel) or in tracking mode, both channel's counters will be reset to zero.

Parameters	Name	Type	Range	Default
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	–

Usage example `SENS:WHO:RES`

Related Commands `FETCh:AHour?`
`INSTrument:COUPle:TRACking`
`OUTPut:TRACk[:STATe]`
`SENSe:WHOur:RESet`
`SYSTem:CHANnel:INFOrmation:WHOur:TOTal`

5.14. SOURce

The SOURce commands are used to set the output voltage and current values, remote voltage sensing, and implemented protection mechanisms on the specified channel. Although the [APPLY](#) command provides the most straightforward method to program the BB3 over the remote interfaces, the SOURce commands give you more flexibility to change individual parameters.

SCPI command	Description
[SOURce[<n>]]	
:ARB	
:AMPLitude {<amplitude>}	Sets the arbitrary waveform amplitude
:COUNT {<count>}	Sets the number of arbitrary waveforms
:FREQuency {<frequency>}	Sets the arbitrary waveform frequency
:FUNCTion {<type>}	Sets the arbitrary waveform parameter type
:OFFset {<level>}	Sets the offset level of the arbitrary waveform
:PHASe[:ADJust] {<angle>}	Set the arbitrary waveform start phase
:SHAPE {<waveform>}	Selects the shape of the arbitrary waveform
:CURRent	
[:LEVel]	
[:IMMediate][:AMPLitude] {<current>}	Sets the output current
:STEP[:INCRement] {<step>}	Sets the step of the current change
:TRIGgered[:AMPLitude] {<current>}	Sets the triggered output current
:LIMit	
[:POSitive][:IMMediate][:AMPLitude] {<current>}	Sets the output current limit
:MODE {<mode>}	Sets the current trigger mode
:PROTection	
:DELay	
[:TIME] {<time>}	Sets the over-current protection (OCP) programming delay
:STATe {<bool>}	Enables/disables over-current protection on the selected channel
:TRIPped?	Returns status of over-current protection activation
:SLEW	
:FALLing	Sets the falling current slew rate
:RISing	Sets the rising current slew rate
:LIST	
:COUNT	Sets the number of times that the list is executed
:CURRent[:LEVel]	Specifies the current setting for each list step
:DWELl	Specifies the dwell time for each list step
:VOLTage[:LEVel]	Specifies the voltage setting for each list step
:POWer	
:LIMit {<power>}	Sets the output power limit
:PROTection[:LEVel]	Sets the over-power protection (OPP) level
:DELay	

[:TIME] {<time>}	Sets the over-power protection programming delay
:STATe {<bool>}	Enables/disables over-power protection on the selected channel
:TRIPped?	Returns status of over-power protection activation
:VOLTage	
[:LEVel]	
[:IMMediate][:AMPLitude] {<voltage>}	Sets the output voltage
:STEP[:INCRement] {<step>}	Sets the step of the voltage change
:TRIGgered[:AMPLitude] {<voltage>}	Sets the triggered output voltage
:LIMit	
[:POSitive][:IMMediate][:AMPLitude] {<voltage>}	Sets the output voltage limit
:MODE {<mode>}	Sets the voltage trigger mode
:PROGram[:SOURce] {<source>}	Sets voltage programming source
:PROTection[:LEVel]	Sets the over-voltage protection (OVP) level
:DELay	
[:TIME] {<time>}	Sets the over-voltage protection (OVP) programming delay
:STATe {<bool>}	Enables/disables over-voltage protection on the selected channel
:TRIPped?	Returns status of over-voltage protection activation
:TYPE {<type>}	Selects the over-voltage protection (OVP) type
:SENSe[:SOURce] {<source>}	Sets voltage sense inputs source
:SLEW	
:FALLing	Sets the falling voltage slew rate
:RISing	Sets the rising voltage slew rate

5.14.1. [SOURce<n>]:ARB:AMPLitude

Syntax [\[SOURce<n>\]:ARB:AMPLitude {<amplitude>}](#)
[\[SOURce<n>\]:ARB:AMPLitude? \[<query amplitude>\]](#)

Modules **DCP405** **DCP405B**

Description *Not implemented yet*

This command sets the selected parameter type (current or voltage) arbitrary waveform amplitude.

Parameters	Name	Type	Range	Default
	<amplitude>	NR2	0 to MAXimum, MIN DEF MAX The maximum value is dependent on the module voltage or current rating. See Section 8.1	0

Return The query command returns the set current or voltage amplitude of the waveform for the specified channel.

Usage ARB:CURR:AMP 4

example

Errors 150, "Power limit exceeded"
-222, "Data out of range"

Related Commands [SOURce[<n>]]:ARB:FUNCTION:TYPE

5.14.2. [SOURce[<n>]]:ARB:COUNT

Syntax [SOURce[<n>]]:ARB:COUNT {<count>}
[SOURce[<n>]]:ARB:COUNT?

Modules DCP405 DCP405B

Description *Not implemented yet*

This command sets the number of arbitrary waveforms for the current or voltage. The waveforms count range is 1 through 65535. 0 or INFinity indicates infinity.

Use ABORt to stop the waveforms at any time. When the waveform is aborted, the output returns to the settings that were in effect before the waveform started.

Parameters	Name	Type	Range	Default
	<count>	NR1 Discrete	0 1 – 65535 INFinity	1
Return	The query command returns the arbitrary waveforms count for the specified channel.			
Usage example	ARB:COUN? 20			
Related Commands	ABORt			

5.14.3. [SOURce[<n>]]:ARB:FREQUENCY

Syntax [SOURce[<n>]]:ARB:FREQUENCY {<frequency>}
[SOURce[<n>]]:ARB:FREQUENCY? [<query frequency>]

Modules DCP405 DCP405B

Description *Not implemented yet*

Sets the frequency in Hz of the current or voltage arbitrary waveform. The maximum possible frequency depends of the waveform selected with the [SOURce[<n>]]:ARB:FUNCTION:TYPE command, and it is the greatest for the sinusoidal type (HSINusoid or SINusoid).

Parameters	Name	Type	Range	Default
	<frequency>	NR2	1 mHz – 200 Hz	0.1
Return	The query command returns the set current or voltage frequency of the waveform for the specified channel.			
Usage example	ARB:FREQ 10			
Errors	-222, "Data out of range"			
Related Commands	[SOURce[<n>]]:ARB:AMPLitude [SOURce[<n>]]:ARB:FUNCTION:TYPE			

5.14.4. [SOURce[<n>]]:ARB:FUNCTION:TYPE

Syntax [SOURce[<n>]]:ARB:FUNCTION {<type>}
[SOURce[<n>]]:ARB:FUNCTION?

Modules **DCP405** **DCP405B****Description** *Not implemented yet*

Specifies either a voltage or current arbitrary waveform. Only one type of arbitrary waveform may be output at a time.

Parameters	Name	Type	Range	Default
	<type>	Discrete	VOLTage CURRent	0.1
Return	The query command returns the selected arbitrary waveforms type for the specified channel.			
Usage example	ARB:FUNC VOLT			
Related Commands	[SOURce[<n>]]:ARB:COUNt [SOURce[<n>]]:ARB:FREQuency			

5.14.5. [SOURce[<n>]]:ARB:OFFset**Syntax** [SOURce[<n>]]:ARB:OFFset {<offset>}
[SOURce[<n>]]:ARB:OFFset?**Modules** **DCP405** **DCP405B****Description** *Not implemented yet*

Sets the offset level of the current or voltage arbitrary waveform output. The maximum offset level is determined by arbitrary waveform selected current or voltage amplitude set by [SOURce[<n>]]:ARB:AMPLitude command that sum of them cannot be greater then selected parameter maximum allowed value (see the [SOURce[<n>]]:CURRent:LIMit[:POSitive][:IMMediate][:AMPLitude] or [SOURce[<n>]]:VOLTage:LIMit[:POSitive][:IMMediate][:AMPLitude] command).

Parameters	Name	Type	Range	Default
	<offset>	NR2	0 to MAX - set AMPLitude The maximum value is dependent on the module voltage or current rating. See Section 8.1	0

Return**Usage example** ARB:FUNC:TYPE VOLT
ARB:OFF 5**Errors** -222, "Data out of range"**Related Commands** [SOURce[<n>]]:ARB:AMPLitude
[SOURce[<n>]]:ARB:FREQuency
[SOURce[<n>]]:CURRent:LIMit[:POSitive][:IMMediate][:AMPLitude]
[SOURce[<n>]]:VOLTage:LIMit[:POSitive][:IMMediate][:AMPLitude]**5.14.6. [SOURce[<n>]]:ARB:PHASe[:ADJust]****Syntax** [SOURce[<n>]]:ARB:PHASe[:ADJust] {<angle>}
[SOURce[<n>]]:ARB:PHASe[:ADJust]?**Modules** **DCP405** **DCP405B****Description** *Not implemented yet*

Use this command to set the arbitrary waveform start phase of the specified source channel is degrees (°).

Parameters	Name	Type	Range	Default
	<phase>	NR1	0 – 360	0
Return	The query returns the start phase of the specified source channel.			
Usage example	ARB:PHAS 90			
Errors	-222, "Data out of range"			
Related Commands	[SOURce[<n>]]:ARB:AMPLitude [SOURce[<n>]]:ARB:FREQuency			

5.14.7. [SOURce[<n>]]:ARB:SHAPE

Syntax [SOURce[<n>]]:ARB:SHAPE {<waveform>}
[SOURce[<n>]]:ARB:SHAPE?

Modules DCP405 DCP405B

Description *Not implemented yet*

Selects the shape of the arbitrary waveform output for the specified channel. SQUARE selects the square current or voltage waveform. Use one of the following shapes:

- HSINusoid – half cycle (half wave rectified) sinusoidal current or voltage waveform
- SINusoid – full cycle sinusoidal current or voltage waveform
- SQUARE – square current or voltage waveform

Parameters	Name	Type	Range	Default
	<waveform>	Discrete	HSINusoid SINusoid SQUare	SQUare
Return	The query returns the shape of the arbitrary waveform output for the specified channel.			
Usage example	ARB:SHAP SIN			
Related Commands	[SOURce[<n>]]:ARB:AMPLitude [SOURce[<n>]]:ARB:FREQuency [SOURce[<n>]]:ARB:PHASe[:ADJust]			

5.14.8. [SOURce[<n>]]:CURRENT

Syntax [SOURce[<n>]]:CURRENT[:LEVel][:IMMediate][:AMPLitude] {<current>}
[SOURce[<n>]]:CURRENT[:LEVel][:IMMediate][:AMPLitude]? [<query current>]

Modules DCP405 DCP405B DCM220

Description This command sets the immediate current level of the channel. Units are in amperes. When [:SOURce[<n>]] or [<n>] is omitted, the currently selected channel will be affected by this command.

This command also increases or decreases the immediate current level using the 'UP' or DOWN parameter by a predetermined amount. The command CURRENT:STEP sets the amount of increase or decrease. A new increment setting will *not* cause an execution error -222, "Data out of range" when the maximum or the minimum rated current is exceeded – the output value will be set to the maximum or the minimum value instead.

At *RST, the signal being sourced will be set to a "safe" condition. This is achieved by setting the amplitude to its MINimum value (see [Section 8.1](#)).

Parameters	Name	Type	Range	Default
	<current>	NR2 Discrete	0 to MAXimum, MIN	–

			DEF MAX UP DOWN	
			The maximum value is dependent on the module current rating. See Section 8.1	
	<query current>	Discrete	MIN DEF MAX	–
Return	The query command returns the programmed current level. CURR? MIN, CURR? DEF and CURR? MAX can be used to obtain minimum, default and maximum current level on the currently selected channel. For actual output current value use MEASure:CURRent command.			
Usage example	<p>A 10 Ω load is connected and voltage is set to 20 V. With MAX current set measured current will be 2 A. When new current value is set to 1.2 A, voltage will drop to 12 V (the channel enters the CC mode of operation):</p> <pre> INST CH1 VOLT 20 CURR MAX MEAS:VOLT? 20.00 CURR 1.2 MEAS:VOLT? 12.00 Query that returns maximum current of the currently selected channel: CURR? MAX 5.00 </pre>			
Errors	<pre> 150, "Power limit exceeded" -222, "Data out of range" </pre>			
Related Commands	<pre> *SAV *RST APPLy MEASure[:SCALar]:CURRent[:DC]? [SOURce[<n>]]:CURRent[:LEVel][:IMMediate]:STEP[:INCRement] </pre>			

5.14.9. [SOURce[<n>]]:CURRent:STEP

Syntax	<pre> [SOURce[<n>]]:CURRent[:LEVel][:IMMediate]:STEP[:INCRement] {<step>} [SOURce[<n>]]:CURRent[:LEVel][:IMMediate]:STEP[:INCRement]? [<query step>] </pre>			
Modules	<div>DCP405</div> <div>DCP405B</div> <div>DCM220</div>			
Description	Set the step of the current change of the channel. When [SOURce[<n>]] or [<n>] is omitted, the currently selected channel will be affected by this command. Step change is performed by using UP and DOWN as parameter for the [SOURce[<n>]]:CURRent command.			
Parameters	Name	Type	Range	Default
	<step>	NR2 Discrete	0.01 to 1 DEFault	0.05
	<query step>	Discrete	DEFault	–
Return	The query returns the step of the current change of the specified channel.			
Usage example	<p>Return default step value:</p> <pre> CURR:STEP? DEF 0.05 </pre> <p>When a 10 Ω load is connected with voltage set to 20 V and current to 1 A the first channel enters CC mode of operation. Current is then increased from 1 A in two steps to</p>			

1.2 A:

```
APPL CH1, 20, 1
MEAS:VOLT?
```

```
10.00
```

```
CURR:STEP 0.1
CURR UP
MEAS:CURR?
```

```
1.10
```

```
CURR UP
MEAS:CURR?
```

```
1.20
```

```
MEAS:VOLT?
```

```
12.00
```

Related Commands *SAV
[SOURce[<n>]]:CURRent

5.14.10. [SOURce[<n>]]:CURRent:TRIGgered

Syntax [SOURce[<n>]]:CURRent[:LEVel]:TRIGgered[:AMPLitude] {<current>}
[SOURce[<n>]]:CURRent[:LEVel]:TRIGgered[:AMPLitude]? [<query current>]

Modules **DCP405** **DCP405B**

Description This command programs the pending triggered current level. The pending triggered current level is a stored value that is transferred to the output terminals when a trigger occurs.

A pending triggered level is not affected by subsequent CURRent commands.

Parameters	Name	Type	Range	Default
	<current>	NR2 Discrete	0 to maximum, MIN DEF MAX The MAXimum value is dependent on the module current rating. See Section 8.1	0.00
	<query current>	Discrete	MIN DEF MAX	—

Return Query the triggered current level presently programmed. If no triggered level is programmed, the CURRent level is returned. CURR:TRIG? MIN and CURR:TRIG? MAX return the lowest and highest programmable triggered current levels.

Usage example On the currently selected channel voltage will be set to 3.3 V and current to 1 A when INITiate command is executed:

```
VOLT:TRIG 3.3
CURR:TRIG 1
TRIG:SOUR IMM
INIT
```

Related Commands ABORt

5.14.11. [SOURce[<n>]]:CURRent:LIMit[:POSitive][:IMMediate][:AMPLitude]

Syntax [SOURce[<n>]]:CURRent:LIMit[:POSitive][:IMMediate][:AMPLitude] {<current>}
[SOURce[<n>]]:CURRent:LIMit[:POSitive][:IMMediate][:AMPLitude]? [<query current>]

Modules **DCP405** **DCP405B** **DCM220**

Description This command sets the channel's output current limit. Units are in amperes. When [:SOURce[<n>]] or [<n>] is omitted, the currently selected channel will be affected

by this command.

This command could be used as mean of protection against incidental programming of too high output current that can be set for example with [SOURce[<n>]]:CURRent:STEP command.

Maximum limit value will be affected with detected failure of cooling fan or channel's temperature sensor. Use CURR:LIM? MAX to query actual value.

Parameters	Name	Type	Range	Default
	<current>	NR2 Discrete	0 to MAXimum, MIN DEF MAX The MAXimum value is dependent on the module current rating. See Section 8.1	MAXimum
	<query current>	Discrete	MIN DEF MAX	—
Return	The query returns the max. allowed output current of the specified channel. Querying MAX on an output channel returns the maximum current limit.			
Usage example	Normal mode of operation for 5 A module: CURR:LIM MAX? 5.00 Max. allowable current with faulty cooling fan or temperature sensor: CURR:LIM MAX? 1.00			
Related Commands	*SAV [SOURce[<n>]]:CURRent:STEP [SOURce[<n>]]:POWer:LIMit [SOURce[<n>]]:VOLTage:LIMit[:POSitive][:IMMediate][:AMPLitude]			

5.14.12. [SOURce[<n>]]:CURRent:MODE

Syntax [SOURce[<n>]]:CURRent:MODE {<mode>}
[SOURce[<n>]]:CURRent:MODE?

Modules DCP405 DCP405B

Description This command determines what happens to the output current when the transient system is initiated and triggered:

- FIXed – the output current remains at the immediate value
- LIST – the output follows the list values when a trigger occurs.
- STEP – the output goes to the triggered level when a trigger occurs.

Parameters	Name	Type	Range	Default
	<mode>	Discrete	FIXed LIST STEP	FIXed
Return	The query command returns the current mode of the currently selected channel.			
Usage example	CURR:MODE? FIX			
Related Commands	[SOURce[<n>]]:LIST:CURRent[:LEVel] [SOURce[<n>]]:VOLTage:MODE			

5.14.13. [SOURce[<n>]]:CURRent:SLEW:FALLing

Not implemented yet

5.14.14. [SOURCE[<n>]]:CURRENT:SLEW:RISing*Not implemented yet***5.14.15. [SOURCE[<n>]]:CURRENT:PROTection:DElay[:TIME]**

Syntax [SOURCE[<n>]]:CURRENT:PROTection:DElay[:TIME] {<time>}
 [SOURCE[<n>]]:CURRENT:PROTection:DElay[:TIME]? [<query time>]

Modules **DCP405** **DCP405B** **DCM220**

Description This command sets the over-current protection delay. The over-current protection function will not be triggered on the selected output channel during the delay time. After the delay time has expired, the over-current protection function will be active. This prevents momentary changes in output status from triggering the over-current protection function. Programmed values can range from 0 to 10 seconds. See also [Section 8.1](#)

Parameters	Name	Type	Range	Default
	<time>	NR2 Discrete	0 – 10 DEFault	20 ms
	<query time>	Discrete	DEFault	–

Return The query command returns the programmed delay time.

Usage example Get default OCP delay of 20 milliseconds:

```
CURR:PROT:DEL? DEF
```

```
0.02
```

Related Commands *SAV
 OUTPut:PROTection:CLEar

5.14.16. [SOURCE[<n>]]:CURRENT:PROTection:STATe

Syntax [SOURCE[<n>]]:CURRENT:PROTection:STATe {<bool>}
 [SOURCE[<n>]]:CURRENT:PROTection:STATe?

Modules **DCP405** **DCP405B** **DCM220**

Description This command enables or disables the over-current protection (OCP) function. The enabled state is ON (1); the disabled state is OFF (0). Since the power modules do not have a dedicated over-current protection circuit that can be programmed independently of output current level, entering the CC (constant current) mode of operation is used as a trigger to start OCP sequence. When delay time specified with the [SOURCE[<n>]]:CURRENT:PROTection:DElay[:TIME] command expired the output turns off and the Questionable Condition status register OCP bit 9 is set. An error tone will also follow if beeper is enabled (see SYSTem:BEEPer:STATe). [SOURCE[<n>]]:CURRENT:PROTection:TRIPped? command can be used to query whether over-current protection occurred on the selected channel.

Parameters	Name	Type	Range	Default
	<bool>	Boolean	ON OFF 0 1	OFF

Return The query command returns 0 if the current protection state is OFF, and 1 if the current protection state is ON.

Usage example CURR:PROT:STAT?

```
0
```

Related Commands *SAV
 OUTPut:PROTection:CLEar
 OUTPut:PROTection:COUPle
 [SOURCE[<n>]]:CURRENT:PROTection:DElay[:TIME]
 [SOURCE[<n>]]:CURRENT:PROTection:TRIPped
 SYSTem:BEEPer:STATe

5.14.17. [SOURce[<n>]]:CURRent:PROTection:TRIPped?**Syntax** [SOURce[<n>]]:CURRent:PROTection:TRIPped?**Modules** DCP405 DCP405B DCM220**Description** Query whether OCP occurred on the currently selected channel. When protection is tripped bit 9 (OCP) of the Questionable Instrument Summary register will be set (see [Section 3.4.2](#)).The [OUTPut:PROTection:CLEAr](#) command can be send to clear OCP condition on the selected channel.**Return** This query returns a 1 if the protection circuit is tripped and a 0 if it is untripped.**Usage example** CURR:PROT:TRIP?

1

Related Commands OUTPut:PROTection:CLEAr**5.14.18. [SOURce[<n>]]:LIST:COUNT****Syntax** [SOURce[<n>]]:LIST:COUNT {<count>}
[SOURce[<n>]]:LIST:COUNT?**Modules** DCP405 DCP405B DCM220**Description** This command sets the number of times that the list is executed before it is completed. The list count range is 1 through 65535. Use the INFinity parameter or 0 to execute a list continuously.

Use ABORt to stop the list at any time. When the list is aborted, the output returns to the settings that were in effect before the list started.

Parameters	Name	Type	Range	Default
	<count>	NR1 Discrete	0 1 – 65535 INFinity	1

Return The query command returns the list count. Multiple responses are separated by commas. If a repeat count of 0 is returned, it means the list is set to repeat continuously.**Usage example** LIST:COUNT?

10

Related Commands ABORt
INITiate[:IMMediate]
MMEMory:LOAD:LIST[<n>]
MMEMory:STORe:LIST[<n>]**5.14.19. [SOURce[<n>]]:LIST:CURRent[:LEVel]****Syntax** [SOURce[<n>]]:LIST:CURRent[:LEVel] {<current>}, ...]
[SOURce[<n>]]:LIST:CURRent[:LEVel]?**Modules** DCP405 DCP405B DCM220**Description** This command specifies the current setting for each list step in amperes. A comma-delimited list of up to 256 steps may be programmed.

The order in which the current values are entered determines the sequence when the list executes.

To create a valid list, the VOLTage, CURRent and DWELl lists must either all be the same length, or have a length of 1, which is interpreted as having the same length as the list with the maximum length.

This command overwrites any previously programmed current list; it does not append to the previous list.

Parameters	Name	Type	Range	Default
------------	------	------	-------	---------

<current>	NR2 Discrete	0 to maximum, MIN DEF MAX UP DOWN The MAXimum value is dependent on the power module current rating. See Section 8.1	–
-----------	--------------	---	---

Return The query command returns the programmed current level. Multiple responses are separated by commas.

Usage example LIST:CURR 0.25

Errors 306, "Too many list points"

Related Commands MMEMory:LOAD:LIST[<n>]
MMEMory:STORe:LIST[<n>]
[SOURce[<n>]]:CURRENT:MODE
[SOURce[<n>]]:LIST:COUNT

5.14.20. [SOURce[<n>]]:LIST:DWELI

Syntax [SOURce[<n>]]:LIST:DWELI {<time>}[, ...]
[SOURce[<n>]]:LIST:DWELI?

Modules DCP405 DCP405B DCM220

Description This command specifies the dwell time for each list step. A comma-delimited list of up to 256 steps may be programmed. Dwell time is the time that the output will remain at a specific step. Dwell times can be programmed from 0 through 65535 seconds.

Note that min. dwell time that can be achieved during the list execution depends of MCU activity and waveform shape. Therefore one have to find that out experimentally while list is executed on desired number of channels (one or two). Usage of oscilloscope is recommended for fast transitions since e.g. YT view resolution cannot be set to less then 20 ms. The expected usable min. dwell time goes well below 10 ms (down to 1 ms).

Parameters	Name	Type	Range	Default
	<time>	NR2	0 – 65535	–

Return The query command returns the programmed dwell times. Multiple responses are separated by commas.

Usage example LIST:DWEL 20ms,10ms,10ms,50ms

Errors 306, "Too many list points"

Related Commands MMEMory:LOAD:LIST[<n>]
MMEMory:STORe:LIST[<n>]
[SOURce[<n>]]:LIST:COUNT

5.14.21. [SOURce[<n>]]:LIST:VOLTage[:LEVel]

Syntax [SOURce[<n>]]:LIST:VOLTage[:LEVel] {<voltage>}[, ...]
[SOURce[<n>]]:LIST:VOLTage[:LEVel]?

Modules DCP405 DCP405B DCM220

Description This command specifies the voltage setting for each list step in volts. A comma-delimited list of up to 256 steps may be programmed.
The order in which the voltage values are entered determines the sequence when the list executes.

To create a valid list, the VOLTage, CURRENT and DWELI lists must either all be the same length, or have a length of 1, which is interpreted as having the same length as the list with the maximum length.

This command overwrites any previously programmed voltage list; it does not append to

the previous list.

Parameters	Name	Type	Range	Default
	<voltage>	NR2 Discrete	0 to maximum, MIN DEF MAX UP DOWN The maximum value is dependent on the power module voltage rating. See Section 8.1	–
Return	The query command returns the programmed voltage level. Multiple responses are separated by commas.			
Usage example	Programming the list that contain 4 steps and will be executed 20 times on the channel 2. Execution will start by receiving remote command (*TRG) since BUS is selected as a trigger source: <pre> INST CH2 LIST:COUN 20 LIST:VOLT 0,1.5,3,4.5 LIST:CURR 0.25 LIST:DWEL 20ms,10ms,10ms,50ms OUTP ON *OPC? 0 TRIG:SOUR BUS INIT *TRG </pre>			
Errors	306, "Too many list points"			
Related Commands	MMEMory:LOAD:LIST[<n> MMEMory:STORe:LIST[<n> [SOURce[<n>]]:LIST:COUNt [SOURce[<n>]]:VOLTage:MODE			

5.14.22. [SOURce[<n>]]:POWer:LIMit

Syntax	[SOURce[<n>]]:POWer:LIMit {<power>} [SOURce[<n>]]:POWer:LIMit? [<query power>]			
Modules	<div>DCP405</div> <div>DCP405B</div> <div>DCM220</div>			
Description	This command sets the channel's output power limit. Units are in Watts. Such limitation is required if AC/DC power module <i>cannot</i> provides the same power as connected channel power module. For example, if power module can deliver 200 W but AC/DC power module offers only 155 W then MAXimum allowable continuous power is only 155 W.			
Parameters	Name	Type	Range	Default
	<power>	NR2 Discrete	0 to MAXimum, MIN DEF MAX The MAXimum value is dependent on the power module power rating. See Section 8.1	MAXimum
	<query power>	Discrete	MIN MAX	–
Return	The query returns the max. allowed output power of the specified channel. Querying MAX on an output channel returns the maximum rated power limit.			
Usage example	<pre> POW:LIM DEF POW:LIM? </pre>			

150.00

Related Commands *SAV
 [SOURce[<n>]]:CURRent:LIMit[:POSitive][:IMMediate][:AMPLitude]
 [SOURce[<n>]]:VOLTagE:LIMit[:POSitive][:IMMediate][:AMPLitude]

5.14.23. [SOURce[<n>]]:POWER:PROTection[:LEVel]

Syntax [SOURce[<n>]]:POWER:PROTection[:LEVel] {<power>}
 [SOURce[<n>]]:POWER:PROTection[:LEVel]?

Modules DCP405 DCP405B DCM220

Description Set the over-power protection (OPP) value of the channel. When [:SOURce[<n>]] or [<n>] is omitted, the currently selected channel will be affected by this command. When the over-power protection function of the specified channel is enabled ([SOURce[<n>]]:POWER:PROTection:STATe), the output turns off automatically when the output power exceeds the over-power protection value currently set. [SOURce[<n>]]:POWER:PROTection:TRIPped? command can be used to query whether over-power protection occurred on the selected channel.

Parameters	Name	Type	Range	Default
	<power>	NR2 Discrete	0 to MAXimum, MIN DEF MAX The maximum value is dependent on the power module power rating. See Section 8.1	DEFault

Return Query the over-power protection (OPP) value of the selected channel.

Usage example Set power protection to 50 W on the channel 2:

```
SOUR2:POW:PROT 50
```

Related Commands *SAV
 OUTPut:PROTection:COUPLe
 [SOURce[<n>]]:POWER:PROTection:TRIPped?
 [SOURce[<n>]]:POWER:PROTection:STATe

5.14.24. [SOURce[<n>]]:POWER:PROTection:DELAy[:TIME]

Syntax [SOURce[<n>]]:POWER:PROTection:DELAy[:TIME] {<time>}
 [SOURce[<n>]]:POWER:PROTection:DELAy[:TIME]? [<query time>]

Modules DCP405 DCP405B DCM220

Description This command sets the over-power protection (OPP) delay. The over-power protection function will not be triggered on the selected output channel during the delay time. After the delay time has expired, the over-power protection function will be active. This prevents momentary changes in output status from triggering the over-power protection function. Programmed values can range from 0 to 300 seconds. See also [Section 8.1](#)

Parameters	Name	Type	Range	Default
	<time>	NR2 Discrete	0 – 300 DEFault	10
	<query time>	Discrete	DEFault	–

Return The query command returns the programmed delay time.

Usage example Get default OPP delay of 10 seconds:

```
POW:PROT:DEL? DEF
```

```
10
```

Related Commands *SAV
OUTPut:PROTection:CLEar

5.14.25. [SOURce[<n>]]:POWer:PROTection:STATe

Syntax [SOURce[<n>]]:POWer:PROTection:STATe {<bool>}
[SOURce[<n>]]:POWer:PROTection:STATe?

Modules DCP405 DCP405B DCM220

Description This command enables or disables the over-power protection (OPP) function. The enabled state is ON (1); the disabled state is OFF (0). If the over-power protection function is enabled and the measure output power reach value set by [SOURce[<n>]]:POWer:PROTection[:LEVel] the output is disabled and the Questionable Condition status register OPP bit 10 is set.

Parameters	Name	Type	Range	Default
	<bool>	Boolean	ON OFF 0 1	OFF

Return The query command returns 0 if the current protection state is OFF, and 1 if the current protection state is ON.

Usage example
POW:PROT:STAT ON
POW:PROT:STAT?
1

Related Commands *SAV
OUTPut:PROTection:CLEar
[SOURce[<n>]]:POWer:PROTection[:LEVel]

5.14.26. [SOURce[<n>]]:POWer:PROTection:TRIPped?

Syntax [SOURce[<n>]]:POWer:PROTection:TRIPped?

Modules DCP405 DCP405B DCM220

Description Query whether OPP occurred on the currently selected channel. When protection is tripped bit 10 (OPP) of the Questionable Instrument lsummary register will be set (see [Section 3.4.2](#)).
The [OUTPut:PROTection:CLEar](#) command can be send to clear OPP condition on the selected channel.

Return This query returns a 1 if the protection circuit is tripped and a 0 if it is untripped.

Usage example
POW:PROT:TRIP?
0

Related Commands OUTPut:PROTection:CLEar

5.14.27. [SOURce[<n>]]:VOLTage

Syntax [SOURce[<n>]]:VOLTage[:LEVel][:IMMediate][:AMPLitude] {<voltage>}
[SOURce[<n>]]:VOLTage[:LEVel][:IMMediate][:AMPLitude]? [<query voltage>]

Modules DCP405 DCP405B DCM220

Description This command sets the immediate voltage level of the output channel. Units are in volts. When [:SOURce[<n>]] or [<n>] is omitted, the currently selected channel will be affected by this command.

This command also increases or decreases the immediate voltage level using the 'UP' or DOWN parameter by a predetermined amount. The command VOLTage:STEP sets the amount of increase or decrease. A new increment setting will *not* cause an execution error -222, "Data out of range" when the maximum or the minimum rated current is exceeded – the output value will be set to the maximum or the minimum value instead.

At *RST, the signal being sourced will be set to a "safe" condition. This is achieved by setting the amplitude to its MINimum value (see [Section 8.1](#)).

Parameters	Name	Type	Range	Default
	<voltage>	NR2 Discrete	0 to MAXimum, MIN DEF MAX UP DOWN The maximum value is dependent on the power module voltage rating. See Section 8.1	–
	<query voltage>	Discrete	MIN DEF MAX	–
Return	The query command returns the programmed voltage level. VOLT? MIN, VOLT? DEF and VOLT? MAX can be used to obtain minimum, default and maximum voltage level on the currently selected channel. For actual output voltage value use MEASure:VOLTage? command.			
Usage example	<p>A 10 Ω load is connected and current is set to 1 A. With MAX voltage set measured voltage will be 10 V. When new voltage value is set to 5 V, current will drop to 0.5 A (the channel enters the CV mode of operation):</p> <pre> INST CH1 VOLT MAX CURR 1 MEAS:CURR? 1.00 VOLT 5 MEAS:CURR? 0.50 </pre> <p>Query that returns maximum current of the currently selected channel:</p> <pre> CURR? MAX 5.00 </pre>			
Errors	150, "Power limit exceeded" -222, "Data out of range"			
Related Commands	*SAV *RST APPLy MEASure[:SCALar]:VOLTage[:DC]? [SOURce[<n>]]:VOLTage[:LEVel][:IMMediate]:STEP[:INCRement]			

5.14.28. [SOURce[<n>]]:VOLTage:LIMit[:POSitive][:IMMediate][:AMPLitude]

Syntax	[SOURce[<n>]]:VOLTage:LIMit[:POSitive][:IMMediate][:AMPLitude] {<voltage>} [SOURce[<n>]]:VOLTage:LIMit[:POSitive][:IMMediate][:AMPLitude]? [<query voltage>]
Modules	DCP405 DCP405B DCM220
Description	<p>This command sets the channel's output voltage limit. Units are in volts. When [:SOURce[<n>]] or [<n>] is omitted, the currently selected channel will be affected by this command.</p> <p>This command could be used as mean of protection against incidental programming of too high output voltage that can be set for example with [SOURce[<n>]]:VOLTage:STEP command.</p>

Parameters	Name	Type	Range	Default
	<voltage>	NR2 Discrete	0 to MAXimum, MIN DEF MAX	MAXimum

The MAXimum value is dependent on the power module current rating. See [Section 8.1](#)

	<query voltage>	Discrete	MIN MAX	—
Return	The query returns the max. allowed output voltage of the specified channel. Querying MAX on an output channel returns the maximum voltage limit.			
Usage example	VOLT:LIM 20			
Related Commands	*SAV [SOURce[<n>]]:CURRent:STEP [SOURce[<n>]]:POWer:LIMit [SOURce[<n>]]:VOLTage:LIMit[:POSitive][:IMMediate][:AMPLitude]			

5.14.29. [SOURce[<n>]]:VOLTage:STEP

Syntax	[SOURce[<n>]]:VOLTage[:LEVel][:IMMediate]:STEP[:INCRement] {<step>} [SOURce[<n>]]:VOLTage[:LEVel][:IMMediate]:STEP[:INCRement]? [<query step>]			
Modules	DCP405 DCP405B DCM220			
Description	Set the step of the voltage change of the channel. When [SOURce[<n>]] or [<n>] is omitted, the currently selected channel will be affected by this command. Step change is performed by using UP and DOWN as parameter for the [SOURce[<n>]]:VOLTage command.			
Parameters	Name	Type	Range	Default
	<step>	NR2 Discrete	0.01 to 10 DEFault	0.1
	<query step>	Discrete	DEFault	—
Return	The query returns the step of the voltage change of the specified channel.			
Usage example	Return default step value: VOLT:STEP? DEF 0.10 By connecting a 10 Ω load and current set to 2 A and voltage to 10 V the first channel enters the CV mode of operation. Voltage is then decreased from 10 V in two steps to 6 V: APPL CH1, 10,2 MEAS:CURR? 1.0 VOLT:STEP 2 VOLT DOWN VOLT DOWN MEAS:VOLT? 6.0 MEAS:CURR? 0.60			
Related Commands	*SAV [SOURce[<n>]]:VOLTage			

5.14.30. [SOURce[<n>]]:VOLTage:TRIGgered

Syntax	[SOURce[<n>]]:VOLTage[:LEVel]:TRIGgered[:AMPLitude] {<voltage>} [SOURce[<n>]]:VOLTage[:LEVel]:TRIGgered[:AMPLitude]? [<query voltage>]
---------------	---

Modules **DCP405** **DCP405B** **DCM220**

Description This command programs the pending triggered voltage level. The pending triggered current level is a stored value that is transferred to the output terminals when a trigger occurs.

A pending triggered level is not affected by subsequent VOLTage commands.

Parameters	Name	Type	Range	Default
	<voltage>	NR2 Discrete	0 to maximum, MIN DEF MAX The maximum value is dependent on the power module voltage rating. See Section 8.1	0.00
	<query voltage>	Discrete	MIN MAX	
Return	Query the triggered voltage level presently programmed. If no triggered level is programmed, the VOLTage level is returned. VOLT:TRIG? MIN and VOLT:TRIG? MAX return the lowest and highest programmable triggered voltage levels.			
Usage example	On the currently selected channel voltage will be set to 3.3V and current to 1A when INITiate command is executed: VOLT:TRIG 3.3 CURR:TRIG 1 TRIG:SOUR IMM INIT			
Related Commands	ABORt			

5.14.31. [SOURce[<n>]]:VOLTage:MODE

Syntax [SOURce[<n>]]:VOLTage:MODE {<mode>}
[SOURce[<n>]]:VOLTage:MODE?

Modules **DCP405** **DCP405B** **DCM220**

Description This command determines what happens to the output voltage when the transient system is initiated and triggered:

- FIXed – the output current remains at the immediate value
- LIST – the output follows the list values when a trigger occurs.
- STEP – the output goes to the triggered level when a trigger occurs.

Parameters	Name	Type	Range	Default
	<mode>	Discrete	FIXed LIST STEP	FIXed
Return	The query command returns the voltage mode of the currently selected channel.			
Usage example	VOLT:MODE? LIST			
Related Commands	[SOURce[<n>]]:LIST:VOLTage[:LEVel] [SOURce[<n>]]:CURRent:MODE			

5.14.32. [SOURce[<n>]]:VOLTage:PROGram[:SOURce]

Syntax [SOURce[<n>]]:VOLTage:PROGram[:SOURce] {<source>}
[SOURce[<n>]]:VOLTage:PROGram[:SOURce]?

Modules **DCP405**

Description Use this command to define source for output voltage programming if channel support this option (use the SYSTem:CHANnel[:INfOrmatIOn]:PROGram? to query channel programming capability).

A channel's D/A converter controlled by CPU is used by default for voltage output programming. That source can be calibrated (see the CALibrate subsystem) and provide output within safe limits.

The external voltage programming could be used when fast interaction with an external process is required. For example, if tracking output of the connected D.U.T. (i.e. a power supply) is needed the BB3's power module like DCP405 effectively becomes a pre-regulator keeping its output voltage in relation with changes of the D.U.T. output keeping constant difference between connected D.U.T input and output and in that way its max. power dissipation.

Max. D/A converter programmed voltage of 2.5 V would results with MAXimal voltage output regardless of the channel's voltage range (see [Section 8.1](#)). Therefore if EXTer-nal programming source is selected, any voltage value higher then 2.5 V could produce unexpected results and eventually damage the power module and/or connected load.

To limit possible damage when programming source is set to EXTer-nal, the over-voltage protection (OVP) will be activated and set to MAXimum ([SOURce[<n>]]:VOLTage:PRO-Tection[:LEVel]) with protection delay time set to zero ([SOURce[<n>]]:VOLTage:PRO-Tection:DELaY[:TIME]). Further adjustment of OVP level and delay is also allowed (e.g. to decrease OVP level or increase delay time).

The enabled state is EXTer-nal (1); the disabled state is INTer-nal (0). Execution of this command also affects bit 13 (RPROG) of the Operation Instrument Isummary register (see [Section 3.3.2](#)) and activate dedicated LED indicator (*Rprog*) on the module's front panel.

Self-test operation initiated by [*TST?](#) command will reset voltage programming on all channels to the internal/local source.

If external programming source is selected the DIAGnostic[:INFORmation]:ADC? Query returns 0.00 value for U_SET.

Parameters	Name	Type	Range	Default
	<source>	Discrete	INTer-nal EXTer-nal	INTer-nal
Return	The query command returns 0 if the local (internal) voltage programming is selected, and 1 if the remote (external) sense is selected.			
Usage example	VOLT:PROG EXT VOLT:PROG? 1			
Errors	-241, "Hardware missing" 312, "Cannot execute when the channels are coupled"			
Related Commands	*TST DIAGnostic[:INFORmation]:ADC? INSTrument:COUPle:TRACking OUTPut[:STATe] [SOURce[<n>]]:VOLTage:PROTection[:LEVel] [SOURce[<n>]]:VOLTage:PROTection:DELaY[:TIME] [SOURce[<n>]]:VOLTage:PROTection:TRIPped? SYSTem:CHANnel[:INFORmation]:PROGram?			

5.14.33. [\[SOURce\[<n>\]\]:VOLTage:PROTection\[:LEVel\]](#)

Syntax [\[SOURce\[<n>\]\]:VOLTage:PROTection\[:LEVel\] {<voltage>}](#)
[\[SOURce\[<n>\]\]:VOLTage:PROTection\[:LEVel\]?](#)

Modules [DCP405](#) [DCP405B](#) [DCM220](#)

Description Set the over-voltage protection (OVP) value of the channel. When [:SOURce[<n>]] or [<n>] is omitted, the currently selected channel will be affected by this command. When the over-voltage protection function of the specified channel is enabled ([SOURce[<n>]]:VOLTage:PROTection:STATe), the output turns off automatically when the output voltage exceeds the over-voltage protection value currently set.

[SOURce[<n>]]:VOLTage:PROTection:TRIPped? command can be used to query whether over-voltage protection occurred on the selected channel.

An execution error -222, "Data out of range" will be generated when output voltage is controlled internally ([SOURce[<n>]]:VOLTage:PROGram[:SOURce]) and OVP value is set below programmed output voltage ([SOURce[<n>]]:VOLTage).

Parameters	Name	Type	Range	Default
	<voltage>	NR2 Discrete	0 to maximum, MIN DEF MAX The maximum value is dependent on the power module voltage rating. See Section 8.1	–
Return	Query the over-voltage protection (OVP) value of the selected channel.			
Usage example	Set voltage protection to 10.2 V on the channel 1: SOUR1:VOLT:PROT 10.2			
Errors	-222, "Data out of range"			
Related Commands	*SAV OUTPut:PROTection:COUPle [SOURce[<n>]]:VOLTage [SOURce[<n>]]:VOLTage:PROGram[:SOURce] [SOURce[<n>]]:VOLTage:PROTection:TRIPped? [SOURce[<n>]]:VOLTage:PROTection:STATe			

5.14.34. [SOURce[<n>]]:VOLTage:PROTection:DElay[:TIME]

Syntax	[SOURce[<n>]]:VOLTage:PROTection:DElay[:TIME] {<time>} [SOURce[<n>]]:VOLTage:PROTection:DElay[:TIME]? [<query time>]			
Modules	DCP405 DCP405B DCM220			
Description	This command sets the over-voltage protection delay. The over-voltage protection function will not be triggered on the selected output channel during the delay time. After the delay time has expired, the over-voltage protection function will be active. This prevents momentary changes in output status from triggering the over-voltage protection function. Programmed values can range from 0 to 10 seconds. See also Section 8.1			
Parameters	Name	Type	Range	Default
	<time>	NR2 Discrete	0 – 10 DEfault	5 ms
	<query time>	Discrete	DEfault	–
Return	The query command returns the programmed delay time.			
Usage example	Get default OVP delay of 50 milliseconds: VOLT:PROT:DEL? DEF 0.050			
Related Commands	*SAV OUTPut:PROTection:CLEar			

5.14.35. [SOURce[<n>]]:VOLTage:PROTection:STATe

Syntax	[SOURce[<n>]]:VOLTage:PROTection:STATe {<bool>} [SOURce[<n>]]:VOLTage:PROTection:STATe?			
Modules	DCP405 DCP405B DCM220			

Description This command enables or disables the over-voltage protection (OVP) function. The enabled state is ON (1); the disabled state is OFF (0). Power modules that do not have a dedicated over-voltage protection circuit can be programmed independently of output current level, entering the CV (constant voltage) mode of operation is used as a trigger to start OVP sequence. When delay time specified with the [SOURce[<n>]]:VOLTage:PROTection:DELAy[:TIME] command expired the output turns off and the Questionable Condition status register OCP bit 8 is set. An error tone will also follow if beeper is enabled (see SYSTem:BEEPer:STATe). [SOURce[<n>]]:VOLTage:PROTection:TRIPped? command can be used to query whether over-voltage protection occurred on the selected channel.

Parameters	Name	Type	Range	Default
	<bool>	Boolean	ON OFF 0 1	OFF
Return	The query command returns 0 if the voltage protection state is OFF, and 1 if the voltage protection state is ON.			
Usage example	VOLT:PROT:STAT? 0			
Related Commands	*SAV OUTPut:PROTection:CLEAr [SOURce[<n>]]:VOLTage:PROTection:DELAy[:TIME] [SOURce[<n>]]:VOLTage:PROTection:TRIPped SYSTem:BEEPer:STATe			

5.14.36. [SOURce[<n>]]:VOLTage:PROTection:TRIPped?

Syntax [SOURce[<n>]]:VOLTage:PROTection:TRIPped?

Modules DCP405 DCP405B DCM220

Description Query whether OVP occurred on the currently selected channel. When protection is tripped bit 8 (OVP) of the Questionable Instrument lsummary register will be set (see [Section 3.4.2](#)). When channel's output voltage is controlled remotely ([SOURce[<n>]]:VOLTage:PROGram[:SOURce]) this protection will change voltage control back to INTERNAL source. The [OUTPut:PROTection:CLEAr](#) command can be send to clear OVP condition on the selected channel.

Return This query returns a 1 if the protection circuit is tripped and a 0 if it is untripped.

Usage example VOLT:PROT:TRIP?
0

VOLT:PROG?
0

Related Commands OUTPut:PROTection:CLEAr
[SOURce[<n>]]:VOLTage:PROGram[:SOURce]

5.14.37. [SOURce[<n>]]:VOLTage:PROTection:TYPE

Syntax [SOURce[<n>]]:VOLTage:PROTection:TYPE {<type>}
[SOURce[<n>]]:VOLTage:PROTection:TYPE?

Modules DCP405

Description Use this command to select one of the following types of over-voltage protection mechanism:

- HW – on-board OVP triac crow-bar circuit is active with trip level set to about 3 % over output voltage set using the [SOURce[<n>]]:VOLTage[:LEVel][:IMMediate][:AMPLitude] {<voltage>} command.
- SW – MCU is monitoring output voltage and compare it with trip level set using

the [SOURce[<n>]]:POWER:PROTection[:LEVel] command. If trip level is reached OVP will disable output when time set by [SOURce[<n>]]:POWER:PROTection:DELay[:TIME] command passed.

The HW OVP circuit will cause that output terminals be shorted, and that could damage one or both of the on-board fuses. If that happened be sure to use new fuse with the same current rating.

Parameters	Name	Type	Range	Default
	<type>	Discrete	HW SW	SW
Return	The query command returns type of currently active OVP mechanism.			
Usage example	VOLT:PROT:TYPE HW			
Errors	-241, "Hardware missing"			
Related Commands	*RST [SOURce[<n>]]:VOLTage[:LEVel][:IMMediate][:AMPLitude] {<voltage>} [SOURce[<n>]]:POWER:PROTection[:LEVel] [SOURce[<n>]]:VOLTage:PROTection:STATe			

5.14.38. [SOURce[<n>]]:VOLTage:SENSe[:SOURce]

Syntax [SOURce[<n>]]:VOLTage:SENSe[:SOURce] {<source>}
[SOURce[<n>]]:VOLTage:SENSe[:SOURce]?

Modules DCP405

Description This command enables or disables remote sensing. The enabled state is EXTERNAL (1); the disabled state is INTERNAL (0). Execution of this command also affects bit 12 (RSENSE) of the Operation Instrument Summary register (see [Section 3.3.2](#)). Self-test operation initiated by *TST? command will put remote sense on all channels into disable state. When channels are not coupled together (INSTrument:COUPle:TRACking) this command turn on a dedicated LED indicator (Rsense) mounted on the power module's front panel.

Remote sensing has no effect during CC (Constant Current) operation. Rsense indicator will not be affected if output state is off (OUTPut OFF command).

Parameters	Name	Type	Range	Default
	<source>	Discrete	INTERNAL EXTERNAL	INTERNAL
Return	The query command returns 0 if the internal sense is selected, and 1 if the remote (external) sense is selected.			
Usage example	VOLT:SENS EXT VOLT:SENS? 1			
Errors	-241, "Hardware missing" 312, "Cannot execute when the channels are coupled"			
Related Commands	*SAV *TST INSTrument:COUPle:TRACking OUTPut[:STATe] SYSTem:CHANnel[:INfOrmatIOn]:PRoGrama?			

5.14.39. [SOURce[<n>]]:VOLTage:SLEW:FALLing

Not implemented yet

5.14.40. [SOURce[<n>]:VOLTage:SLEW:RISing

Not implemented yet

5.15. STATus

Status register programming lets you determine the operating condition of the instrument at any time. This subsystem controls the SCPI-defined status-reporting structures. SCPI defines, in addition to those in IEEE 488.2, QUEStionable, OPERation, INSTRument SUMmary and INSTRument registers. These registers conform to the IEEE 488.2 specification and each may be comprised of a condition register, an event register, an enable register. The purpose and definition of the SCPI-defined registers is described in "Volume 1: Syntax and Style". SCPI also defines an IEEE 488.2 queue for status. The queue provides a human readable record of instrument events. The application programmer may individually enable events into the queue.

STATus:PRESet enables errors and disables all other events.

SCPI command	Description
STATus	
:OPERation	
[:EVENT]?	Returns the value of the Operation Event register
:CONDition?	Returns the value of the Operation Instrument Condition register
:ENABLE {<value>}	Enables specific bits in the Operation Event register
:INSTRument[<n>]	
[:EVENT]?	Returns the value of the Operation Instrument Event register
:CONDition?	Returns the value of the Operation Instrument Condition register
:ENABLE {<value>}	Enables specific bits in the Operation Instrument Event register
:ISUMmary<n>	
[:EVENT]?	Returns the value of the Operation Instrument Isummary Event register
:CONDition?	Returns the value of the Operation Instrument Isummary Condition register
:ENABLE {<value>}	Enables specific bits in the Operation Instrument Isummary Event register
:PRESet	Presets all enable registers to power-on state
:QUEStionable	
[:EVENT]?	Returns the value of the Questionable Event register
:CONDition?	Returns the value of the Questionable Condition register
:ENABLE {<value>}	Enables specific bits in the Questionable Event register
:INSTRument[<n>]	
[:EVENT]?	Returns the value of the Questionable Instrument Event register
:CONDition?	Returns the value of the Questionable Instrument Condition register
:ENABLE {<value>}	Enables specific bits in the Questionable Instrument Event register
:ISUMmary<n>	
[:EVENT]?	Returns the value of the Questionable Instrument Isummary Event register
:CONDition?	Returns the value of the Questionable Instrument Isummary Condition register

[:ENABLE {<value>}](#)

Enables specific bits in the Questionable Instrument Summary Event register

5.15.1. STATus:OPERation[:EVENT]?**Syntax** [STATus:OPERation\[:EVENT\]?](#)**Description** This query returns the value of the read-only Operation Status Event register. The bits are latched and reading the register will clear it. The *CLS command can be also used to clear the register.**Return** The value returned is the binary-weighted sum of all bits set in the register. For example, if bit 9 (decimal value = 512) and bit 13 (decimal value = 8192) are set, this command will return 8704. See table in the [Section 3.3](#) for bits description.**Usage example** If GROUp PARAllel (bit 8) is set (next query returns 0 since the first query clears the event register):

STAT:OPER?

256

STAT:OPER?

0

Related *CLS**Commands** *STB?

STATus:OPERation:ENABLE

5.15.2. STATus:OPERation:CONDition?**Syntax** [STATus:OPERation:CONDition?](#)**Description** This query returns the value of the read-only Operation Status Condition register.**Return** The value returned is the binary-weighted sum of all bits set in the register. For example, if bit 9 (decimal value = 512) and bit 13 (decimal value = 8192) are set, this command will return 8704. See table in the [Section 3.3](#) for bits description.**Usage example** If GROUp PARAllel (bit 8) is set:

STAT:OPER:COND?

256

Related STATus:OPERation:ENABLE
Commands**5.15.3. STATus:OPERation:ENABLE****Syntax** [STATus:OPERation:ENABLE {<value>}](#)
[STATus:OPERation:ENABLE?](#)**Description** This command and its query set and read the value of the Operation Status Enable register. The Enable register is a mask for enabling specific bits from the Operation Event register to set the operation summary bit 7 (OPER) of the Status Byte register. This bit is the logical OR of all the Operational Event register bits that are enabled by the Operation Status Enable register.

Parameters	Name	Type	Range	Default
	<value>	NR1	A decimal value which corresponds to the binary-weighted sum of the bits in the register (see the table in Section 3.3)	PREset=0

Return Query the Operation Status Enable register. The BB3 returns a binary-weighted decimal

representing the bits set in the enable register.

Usage example Enable ISUM (bit 13):
 STAT:OPER:ENAB 8192

Related Commands *CLS
 *STB?
 STATus:OPERation[:EVENT]?

5.15.4. STATus:OPERation:INSTrument[:EVENT]?

Syntax STATus:OPERation:INSTrument[:EVENT]?

Description This query returns the value of the read-only Instrument Operation Status Event register. The bits are latched and reading the register will clear it. The *CLS command can be also used to clear the register.

Return The value returned is the binary-weighted sum of all bits set in the register. For example, if bit 1 (decimal value = 2) and bit 2 (decimal value = 4) are set, this command will return 6. See table in the [Section 3.3.1](#) for bits description.

Usage example If bit 2 (INST2) is set:
 STAT:OPER:INST?
 4

Related Commands *CLS
 STATus:PREset

5.15.5. STATus:OPERation:INSTrument:CONDition?

Syntax STATus:OPERation:INSTrument:CONDition?

Description This query returns the value of the read-only Instrument Operation Status Condition register.

Return The value returned is the binary-weighted sum of all bits set in the register. For example, if bit 1 (decimal value = 2) and bit 2 (decimal value = 4) are set, this command will return 6. See table in the [Section 3.3.1](#) for bits description.

Usage example If bit 2 (INST2) is set:
 STAT:OPER:INST:COND?
 4

Related Commands STATus:PREset

5.15.6. STATus:OPERation:INSTrument:ENABLE

Syntax STATus:OPERation:INSTrument:ENABLE {<value>}
 STATus:OPERation:INSTrument:ENABLE?

Description Enable bits in the Instrument Operation Status Enable register. The selected bits are then reported to the Operation Status Event register.

Parameters	Name	Type	Range	Default
	<value>	NR1	A decimal value which corresponds to the binary-weighted sum of the bits in the register (see the table in Section 3.3.1)	PREset=0

Return Query the Instrument Operation Status Enable register. The BB3 returns a binary-weighted decimal representing the bits set in the enable register.

Usage example Enable INST1 (bit 1) and INST2 (bit 2):
 STAT:OPER:INST:ENAB 6

Related Commands *CLS
 STATus:PREset

5.15.7. STATus:OPERation:INSTrument:ISUMmary[<n>][:EVENT]?

Syntax STATus:OPERation:INSTrument:ISUMmary[<n>][:EVENT]?

Description This query returns the value of the read-only Instrument Isummary Operation Status Event register for a specific channel of the BB3 represented by numeric value [<n>]. When [<n>] is omitted, the system queries the Instrument Isummary Operation Status Event register of the current channel. The bits are latched and reading the register will clear it. The *CLS command can be also used to clear the register.

Return The value returned is the binary-weighted sum of all bits set in the register. See table in the [Section 3.3.2](#) for bits description.

Usage example If bit 8 (CV1) and bit 10 (OE1) on the channel 1 are set ($256 + 1024 = 1280$):
 STAT:OPER:INST:ISUM1?
 1280

Related Commands *CLS
 OUTPut:MODE?

5.15.8. STATus:OPERation:INSTrument:ISUMmary[<n>]:CONDition?

Syntax STATus:OPERation:INSTrument:ISUMmary[<n>]:CONDition?

Description This query returns the value of the read-only Instrument Isummary Operation Status Condition register for a specific channel of the BB3 represented by numeric value [<n>]. When [<n>] is omitted, the system queries the Instrument Isummary Operation Status Condition register of the current channel.

Return The value returned is the binary-weighted sum of all bits set in the register. See table in the [Section 3.3.2](#) for bits description.

Usage example If bit 8 (CV1) and bit 10 (OE1) on the channel 1 are set ($256 + 1024 = 1280$):
 STAT:OPER:INST:ISUM1:COND?
 1280

Related Commands OUTPut:MODE?

5.15.9. STATus:OPERation:INSTrument:ISUMmary<n>:ENABLE

Syntax STATus:OPERation:INSTrument:ISUMmary[<n>]:ENABLE {<value>}
 STATus:OPERation:INSTrument:ISUMmary[<n>]:ENABLE?

Description Enable bits in the Instrument Isummary Operation Status Enable register for a specific channel of the BB3 represented by numeric value [<n>]. When [<n>] is omitted, the system queries the Instrument Isummary Operation Status Enable register of the current channel. The selected bits are then reported to the Status Byte.

This command and its query set and read the value of the Operation Status Enable register. The Enable register is a mask for enabling specific bits from the Operation Event register to set the operation summary bit (OPER) of the Status Byte register. This bit (bit 7) is the logical OR of all the Operational Event register bits that are enabled by the Operation Status Enable register

Parameters	Name	Type	Range	Default
	<value>	NR1	A decimal value	PREset=0

which corresponds to the binary-weighted sum of the bits in the register (see the table in [Section 3.3.2](#))

Return	Query the Instrument Isummary Operation Status Enable register. The BB3 returns a binary-weighted decimal representing the bits set in the enable register.
Usage example	The query returns that VOLT1 (bit 0), CURR1 (bit 1) and TEMP1 (bit 4) are set ($1 + 2 + 16 = 19$): <pre>INST? CH2 INST CH1 STAT:OPER:INST:ISUM:ENABLE? 19</pre>
Related Commands	*CLS STATus:PREset

5.15.10. STATus:PREset

Syntax	STATus:PREset
Description	This command clears all bits in the Enable registers.
Return	None
Usage example	STAT:PRE
Related Commands	*CLS

5.15.11. STATus:QUEStionable[:EVENTt]?

Syntax	STATus:QUEStionable[:EVENTt]?
Description	Query the Questionable Status event register. The bits are latched and reading the register will clear it. The *CLS command can be also used to clear the register.
Return	The BB3 returns a decimal value which corresponds to the binary-weighted sum of all bits in the register. See table in the Section 3.4 for bits description.
Usage example	If the error is detected in RTC (Real-time clock) circuit, the bit 3 (TIME) is set and this command returns 8: <pre>STAT:QUES? 8</pre>
Related Commands	*CLS

5.15.12. STATus:QUEStionable:CONDition?

Syntax	STATus:QUEStionable:CONDition?
Description	Query the Questionable Status condition register.
Return	The BB3 returns a decimal value which corresponds to the binary-weighted sum of all bits in the register. See table in the Section 3.4 for bits description.
Usage example	If the error is detected in RTC (Real-time clock) circuit, the bit 3 (TIME) is set and this command returns 8: <pre>STAT:QUES:COND? 8</pre>

5.15.13. STATus:QUESTionable:ENABle

Syntax STATus:QUESTionable:ENABle {<value>}
STATus:QUESTionable:ENABle?

Description Enable bits in the Questionable Status Enable register. The selected bits are then reported to the Status Byte.
When <enable value> is set to 0, executing this command will clear the Questionable Status Enable register.

Parameters	Name	Type	Range	Default
	<value>	NR1	A decimal value which corresponds to the binary-weighted sum of the bits in the register (see table in Section 3.4)	PREset=0

Return Query the Questionable Status Enable register. The BB3 returns a binary-weighted decimal representing the bits set in the enable register.

Usage example The query returns that TIME (bit 3), TEMPerature (bit 4) and ISUM (bit 13) are enabled ($8 + 16 + 8192 = 8216$):

```
STAT:QUES:ENAB?
```

```
8216
```

Related Commands *CLS
STATus:PREset

5.15.14. STATus:QUESTionable:INSTrument[:EVENT]?

Syntax STATus:QUESTionable:INSTrument[:EVENT]?

Description Query the questionable instrument event register. The bits are latched and reading the register will clear it. The *CLS command can be also used to clear the register.

Return The BB3 returns a decimal value which corresponds to the binary-weighted sum of all bits in the register and clears the register. See table in the [Section 3.4.1](#) for bits description.

Usage example Result of the query when INST1 (bit 1) and INST2 (bit 2) are set ($2 + 4 = 6$):

```
STAT:QUES:INST?
```

```
6
```

Related Commands *CLS

5.15.15. STATus:QUESTionable:INSTrument:CONDition?

Syntax STATus:QUESTionable:INSTrument:CONDition?

Description Query the questionable instrument condition register.

Return The BB3 returns a decimal value which corresponds to the binary-weighted sum of all bits in the register and clears the register. See table in the [Section 3.4.1](#) for bits description.

Usage example Result of the query when INST1 (bit 1) and INST2 (bit 2) are set ($2 + 4 = 6$):

```
STAT:QUES:INST:COND?
```

```
6
```

5.15.16. STATus:QUESTionable:INSTrument:ENABle

Syntax STATus:QUESTionable:INSTrument:ENABle {<value>}

STATus:QUEStionable:INSTrument:ENABle?

Description Set the value of the questionable instrument enable register. This register is a mask for enabling specific bits from the questionable instrument event register to set the instrument summary bit 13 (ISUM) of the Questionable Status register. The ISUM bit of the Questionable Status register is the logical OR of all the questionable instrument event register bits that are enabled by the questionable instrument enable register.

Parameters	Name	Type	Range	Default
	<value>	NR1	A decimal value which corresponds to the binary-weighted sum of the bits in the register (see table in Section 3.4.1)	PREset=0

Return Query the Questionable Instrument Enable register. The BB3 returns a binary-weighted decimal representing the bits set in the enable register.

Usage example Set INST1 (bit 1) and INST2 (bit 2):

```
STAT:QUES:INST:ENAB 6
```

Related Commands *CLS

5.15.17. STATus:QUEStionable:INSTrument:ISUMmary[<n>][:EVENT]?

Syntax **STATus:QUEStionable:INSTrument:ISUMmary[<n>][:EVENT]?**

Description Return the value of the Questionable Instrument Isummary Event register for a specific channel of the BB3 represented by numeric value [<n>]. When [<n>] is omitted, the system queries the questionable instrument Isummary enable register of the current channel. The event register is a read-only register which holds (latches) all events. Reading the Questionable Instrument Isummary Event register clears it. The *CLS command can be also used to clear the register.

When the power module is operating as a voltage source, bit 1 (CURRENT) is set. When the power module is operating as a current source, bit 0 (VOLTage) is set. When the output is unregulated (UR), both bits are set (for example, while the output is changing to a new programmed value or when the power module is sinking instead of sourcing because down-programmer is active with battery with higher voltage then set output is connected).

Return The BB3 returns a binary-weighted decimal representing the bits set in the enable register. See table in the [Section 3.4.2](#) for bits description.

Usage example Result of the query when over-current protection (OCP) condition is detected (bit 9):

```
STAT:QUES:INST:ISUM1?
```

```
512
```

Related Commands *CLS

5.15.18. STATus:QUEStionable:INSTrument:ISUMmary[<n>]:CONDition?

Syntax **STATus:QUEStionable:INSTrument:ISUMmary[<n>]:CONDition?**

Description Return the value of the Questionable Instrument Isummary Condition register for a specific channel of the BB3 represented by numeric value [<n>]. When [<n>] is omitted, the system queries the questionable instrument Isummary enable register of the current channel.

When the power module is operating as a voltage source, bit 1 (CURRENT) is set. When the power module is operating as a current source, bit 0 (VOLTage) is set. When the out-

put is unregulated (UR), both bits are set (for example, while the output is changing to a new programmed value or when the power module is sinking instead of sourcing because down-programmer is active with battery with higher voltage then set output is connected).

Return The BB3 returns a binary-weighted decimal representing the bits set in the enable register. See table in the [Section 3.4.2](#) for bits description.

Usage example Result of the query when over-current protection (OCP) condition is detected (bit 9):

```
STAT:QUES:INST:ISUM1:COND?
```

```
512
```

5.15.19. **STATus:QUESTionable:INSTrument:ISUMmary[<n>]:ENABLE**

Syntax `STATus:QUESTionable:INSTrument:ISUMmary[<n>]:ENABLE {<value>}`
`STATus:QUESTionable:INSTrument:ISUMmary[<n>]:ENABLE?`

Description Set the value of the Questionable Instrument Isummary Enable register for a specific channel of the BB3 represented by numeric value [<n>]. When [<n>] is omitted, the system queries the Questionable Instrument Isummary Enable register of the current channel. The *CLS command can be used to clear the register.

This register is a mask for enabling specific bits from the Questionable Instrument Isummary Event register to set the Instrument Summary bit (bits 1 and 2) of the Questionable Instrument register. These bits are the logical OR of all the Questionable Instrument Isummary Event register bits that are enabled by the Questionable Instrument Isummary Enable register.

Parameters	Name	Type	Range	Default
	<value>	NR1	A decimal value which corresponds to the binary-weighted sum of the bits in the register (see table in Section 3.4.2)	PREset=0

Return Query the value of the Questionable Instrument Isummary Enable register.

Usage example Enable bits for all events on channel 2 – VOLT2 (bit 0, value=1), CURR (bit 1, decimal value=2), TEMP2 (bit 4, value 16), OVP1 (bit 8, value=256), OCP2 (bit 9, value=512), OPP2 (bit 10, value=1024), therefore the enable value is 1 + 2 + 16 + 256 + 512 + 1024 = 1811:

```
STAT:QUES:INST:ISUM2:ENAB 1811
```

Related Commands *CLS
STATus:PREset

5.16. SYSTem

System commands control system functions that are not directly related to output control, measurement, or status functions.

SCPI command	Description
SYSTem	
:BEEPer[:IMMediate]	Issues a single beep immediately
:KEY	
:STATe {<bool>}	Enables click tone for local control
:STATe {<bool>}	Enables beeper function
:CAPability?	Returns an <instrument_specifier>
CHANnel	
[:COUNT]?	Returns the number of output channels
INFOrmation	
:AHOuR	
TOTal?	Returns channel's total delivered energy in Ah
:CURRent?	Returns output current capability
:ONTime	
LAST?	Returns time passed after last output enable
TOTal?	Returns channel's total active time
:POWer?	Returns output power capability
:PROGram?	Returns programmable features of the channel
:VOLTage?	Returns output voltage capability
:WHOUr	
:TOTal?	Returns channel's total delivered energy in Wh
:MODEl?	Returns the channel model and version name
:SLOT?	Returns the channel slot number
:SNO?	Returns the channel serial number
COMMunicate	
:ENABLE {<bool>}, {<interface>}	Enables the remote interface
ETHernet	
:ADDRess {<ip_address>}	Sets the static LAN (IP) address
:CONTRol?	Returns the control connection port
:DHCP {<bool>}	Enables the use of the Dynamic Host Configuration Protocol (DHCP)
:DNS <ip_address>	Sets the IP address of the DNS server.
:GATEWay {<ip_address>}	Sets the IP address of the default gateway
:MAC?	Returns the MAC address
:PORT {<number>}	Sets the port number
:SMASk {<mask>}	Sets the static subnet mask
:NTP {<server>}	Set s NTP service server address
:RLSTate {<state>}	Places the instrument in remote or local mode
SERial	

:BAUD {<speed>}	Sets the baud rate (speed)
:PARity {<parity>}	Sets the parity mode
:CPU	
:INFormation	
:ETHerNet	
:TYPE?	Returns the type of Ethernet controller
:ONtime	
LAST?	Returns time passed after last power on
TOTal?	Returns BB3's total active time
:MODEl?	Returns the control board model name
:DATE {<year>}, {<month>}, {<day>}	Sets the date of the system clock
:DIGital	
:INPut:DATA? {<pin>}	Reads the state of the digital port pins
:OUTPut:DATA {<pin>}, {<state>}	Sets the state of the digital port pins
:PIN<n>	
:FUNCTion {<function>}	Sets the selected pin's function
:POLarity {<polarity>}	Sets the selected pin's polarity
:ERRor	
[:NEXT]?	Queries and clears errors from the error queue
:COUNT?	Queries the error/event queue for the number of un-read items
:INHibit?	Queries system inhibit state
:KEY	
:DEFine {<key>, <block>}	Sets the definition of the key
:DELete {<key>}	Removes the definition of the key
:KLOCK#syst_meas_volt	Disables front panel [lock/unlock] icon
:LOCal	Places the BB3 in the local mode
:MEASure	
[:SCALar]	
[:VOLTage]	
[:DC]? {<device>}	Takes a voltage measurement of the RTC battery
:PASSword	
:CALibration	
:RESet	Resets the calibration password to initial value
:FPANel	
:RESet	Resets the front panel lock password to initial value
:NEW {<old>}, {<new>}	Changes system password
:PON:OUTPut:DISable {<bool>}	Sets output state on power up
:POWer {<bool>}	Enters the BB3 into the standby mode
:PROTection:TRIP {<bool>}	Enters the BB3 into the standby mode in case of protection trip
:REMote	Places the BB3 in the remote mode

<code>:RESet</code>	Initiate low-level (hardware) reset
<code>:RWLock</code>	Places the BB3 in the remote mode and disables front panel [lock/unlock] icon
<code>:TEMPerature</code>	
<code>:PROTection</code>	
<code>[[:HIGH]</code>	
<code>[[:LEVel] {<temperature>} [, <sensor>]</code>	Sets the OTP value
<code>:CLEar {<sensor>}</code>	Clears the latched protection status of the over-temperature protection (OTP)
<code>:DElay</code>	
<code>[[:TIME] {<delay>} [, <sensor>]</code>	Sets the OTP programming delay
<code>:STATe {<bool>} [, <sensor>]</code>	Enables/disables OTP on the selected temperature sensor
<code>:TRIPped? {<sensor>}</code>	Returns status of OTP activation
<code>:TIME {<hours>}, {<minutes>}, {<seconds>}</code>	Sets the time of the system clock
<code>:DTS {rules}</code>	Defines daylight saving time (DST) rules
<code>:ZONE {zone}</code>	Defines time zone
<code>:VERsion?</code>	Returns the SCPI version number

5.16.1. SYSTem:BEEPer

Syntax	<code>SYSTem:BEEPer[:IMMediate]</code>
Description	This command issues a single beep immediately.
Usage example	<code>SYST:BEEP</code>

5.16.2. SYSTem:BEEPer:KEY:STATe

Syntax	<code>SYSTem:BEEPer:KEY:STATe {<bool>}</code> <code>SYSTem:BEEPer:KEY:STATe?</code>			
Description	Use this command to enable or disable generation of audible “click” sound when front panel option is selected.			
Parameters	Name	Type	Range	Default
	<code><bool></code>	Boolean	ON OFF 0 1	OFF
Usage example	<code>SYST:BEEP:KEY:STAT ON</code>			
Related Commands	<code>SYSTem:BEEPer[:IMMediate]</code> <code>SYSTem:BEEPer:STATe</code>			

5.16.3. SYSTem:BEEPer:STATe

Syntax	<code>SYSTem:BEEPer:STATe {<bool>}</code> <code>SYSTem:BEEPer:STATe?</code>
Description	<p>When the beeper is enabled, the BB3 generates audible sound in any of the following situations:</p> <ul style="list-style-type: none"> the power is turns on or off (see <code>SYSTem:POWer</code>), when error occurs during front panel operation or remote operation (see Section 7 for the list of error messages),

- self-test is failed and
- any of the protection function is “tripped”

Parameters	Name	Type	Range	Default
	<bool>	Boolean	ON OFF 0 1	ON
Usage example	SYST:BEEP:STAT ON SYST:BEEP:STAT? 1			
Related Commands	SYSTem:BEEPer[:IMMediate] SYSTem:POWer			

5.16.4. SYSTem:CAPability?

Syntax	SYSTem:CAPability?
Description	This query returns the BB3's capabilities and outputs the appropriate specifiers. See also SCPI Volume 4: Section 7.1, 1.4.1, 7.2.1, 7.2.2, and 7.2.3
Usage example	SYSTem:CAPability? DCSUPPLY WITH (MEASURE MULTIPLE TRIGGER)

5.16.5. SYSTem:CHANnel[:COUNt]?

Syntax	SYSTem:CHANnel[:COUNt]?
Modules	DCP405 DCP405B DCM220
Description	This query returns the number of output channels in a mainframe.
Usage example	SYSTem:CHANnel? 2
Related Commands	INSTRument[:SElect] INSTRument:NSElect

5.16.6. SYSTem:CHANnel:INFOrmation:AHOuR:TOTal?

Syntax	SYSTem:CHANnel:INFOrmation:AHOuR:TOTal? [<channel>]
Modules	DCP405 DCP405B DCM220

Description *Not implemented yet*

This query returns total delivered energy in amp-hours (Ah) of the currently selected channel. This information is stored every 10 minutes in non-volatile memory. Therefore it's possible that up to the last 10 minutes of calculated energy is lost after restart caused with power outage or system reset.

Energy specified in amp-hours can be easily converted into e.g. Coulombs (1 Ah = 3600 C).

Parameters	Name	Type	Range	Default
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	–
Usage example	SYST:CHAN:INFO:AHO:TOT? CH1 1344.35			
Related commands	FETCh:AHOuR? FETCh:WHOuR? SENSE:AHOuR:RESet SYSTem:CHANnel:INFOrmation:WHOuR:TOTal?			

5.16.7. SYSTem:CHANnel:INFOrmation:CURRent?**Syntax** SYSTem:CHANnel:INFOrmation:CURRent? [<channel>]**Modules** DCP405 DCP405B DCM220**Description** Use this query to get currently selected channel output current capability.

Parameters	Name	Type	Range	Default
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	–

Usage example SYST:CHAN:INFO:CURR? CH2
5.00

5.16.8. SYSTem:CHANnel:INFOrmation:ONTime:LAST?**Syntax** SYSTem:CHANnel:INFOrmation:ONTime:LAST? [<channel>]**Modules** DCP405 DCP405B DCM220

Description This query returns time passed after last activation of the currently selected channel. Resolution is 1 minute and this information is stored every 10 minutes in non-volatile memory. Therefore it's possible that up to 10 minutes is lost after restart caused with power outage or system reset.

Parameters	Name	Type	Range	Default
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	–

Usage example SYST:CHAN:INFO:ONT:LAST?
15m

5.16.9. SYSTem:CHANnel:INFOrmation:ONTime:TOTal?**Syntax** SYSTem:CHANnel:INFOrmation:ONTime:TOTal? [<channel>]**Modules** DCP405 DCP405B DCM220

Description This query returns total active time of the currently selected channel. Resolution is 1 minute and this information is stored every 10 minutes in non-volatile memory. Therefore it's possible that up to 10 minutes is lost after restart caused with power outage or system reset.

Parameters	Name	Type	Range	Default
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	–

Usage example SYST:CHAN:INFO:ONT:TOT?
1h 45m

5.16.10. SYSTem:CHANnel:INFOrmation:POWer?**Syntax** SYSTem:CHANnel:INFOrmation:POWer? [<channel>]**Modules** DCP405 DCP405B DCM220**Description** Use this query to get currently selected channel output power capability.

Parameters	Name	Type	Range	Default
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	–

Usage example SYST:CHAN:INFO:POW?
160.00

5.16.11. SYSTem:CHANnel:INFOrmation:PROGram?**Syntax** SYSTem:CHANnel:INFOrmation:PROGram? [<channel>]**Modules** DCP405 DCP405B DCM220**Description** This query returns names of all selected channel's functionality that can be controlled by firmware. Depending of the module model (see the SYSTem:CHANnel:MODEl? query) various combination of the following features can be returned:

- Volt – program the output voltage while channel is in the CV mode of operation (see [SOURce[<n>]]:VOLTage and APPLy commands)
- Current – program the output current while channel is in the CC mode of operation (see [SOURce[<n>]]:CURRent and APPLy commands)
- Power – set max. allowed output power regardless of the channel mode of operation (see [SOURce[<n>]]:POWer:LIMit)
- OE – set channel power output (see OUTPut[:STATe])
- Dprog – control down-programmer circuit (see OUTPut:DPRog)
- Rprog – control output voltage programming source (see [SOURce[<n>]]:VOLTage:PROGram[:SOURce])

Parameters	Name	Type	Range	Default
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	–
Usage example	SYST:CHAN:INFO:PROG? CH1 "Volt", "Current", "Power", "OE", "DProg", "Rprog"			
Related Commands	APPLy OUTPut:DPRog OUTPut:MODE? OUTPut[:STATe] [SOURce[<n>]]:CURRent [SOURce[<n>]]:POWer:LIMit [SOURce[<n>]]:VOLTage [SOURce[<n>]]:VOLTage:PROGram[:SOURce] SYSTem:CHANnel:MODEl?			

5.16.12. SYSTem:CHANnel:INFOrmation:VOLTage?**Syntax** SYSTem:CHANnel:INFOrmation:VOLTage? [<channel>]**Modules** DCP405 DCP405B DCM220**Description** Use this query to get currently selected channel output voltage capability.

Parameters	Name	Type	Range	Default
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	–
Usage example	SYST:CHAN:INFO:VOLT? 40.00			

5.16.13. SYSTem:CHANnel:INFOrmation:WHOur:TOTal?**Syntax** SYSTem:CHANnel:INFOrmation:WHOur:TOTal? [<channel>]**Modules** DCP405 DCP405B DCM220**Description** *Not implemented yet*

This query returns total delivered energy in watt-hours (Wh) of the currently selected channel. This information is stored every 10 minutes in non-volatile memory. Therefore it's possible that up to the last 10 minutes of calculated energy is lost after restart caused

with power outage or system reset.

Energy specified in watt-hours can be easily converted into e.g. Joules (1 Wh = 3600 J).

Parameters	Name	Type	Range	Default
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	–
Usage example	SYST:CHAN:INFO:WHO:TOT? CH1 2044.15			
Related commands	FETCh:AHOur? FETCh:WHOur? SENSe:WHOur:RESet SYSTem:CHANnel:INFormation:AHOur:TOTal?			

5.16.14. SYSTem:CHANnel:MODEl?

Syntax SYSTem:CHANnel:MODEl? [<channel>]

Modules DCP405 DCP405B DCM220

Description This query returns the model name and version of the specified channel.

Parameters	Name	Type	Range	Default
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	–
Usage example	SYST:CHAN:MOD? "DCP405B_R2B7"			
Related Commands	SYSTem:CHANnel:VERSion? SYSTem:CPU:MODEl?			

5.16.15. SYSTem:CHANnel:SLOT?

Syntax SYSTem:CHANnel:SLOT? [<channel>]

Modules DCP405 DCP405B DCM220

Description *Not implemented yet*

This query returns the DIB backplane slot number of the specified channel.

Parameters	Name	Type	Range	Default
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	–
Usage example	SYST:CHAN:SLOT? CH4 3			
Related Commands	SYSTem:CHANnel:SNO? SYSTem:CHANnel:VERSion?			

5.16.16. SYSTem:CHANnel:SNO?

Syntax SYSTem:CHANnel:SNO? [<channel>]

Modules DCP405 DCP405B DCM220

Description *Not implemented yet*

This query returns the serial number of the specified channel.

Parameters	Name	Type	Range	Default
------------	------	------	-------	---------

	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	—
Usage example	SYST:CHAN:SNO? "000001"			
Related Commands	SYSTem:CHANnel:SLOT? SYSTem:CHANnel:VERSion?			

5.16.17. SYSTem:COMMunicate:ENABLE

Syntax SYSTem:COMMunicate:ENABle {<bool>}, {<interface>}
SYSTem:COMMunicate:ENABle? {<interface>}

Description Enables or disables the remote interface Serial (via USB), Ethernet, NTP service, or the remote service Sockets. The setting is effective after rebooting the BB3. This command setting is not changed by power off or the [*RST](#) command.

Remote service Sockets is not supported yet

Parameters	Name	Type	Range	Default
	<bool>	Boolean	ON OFF 0 1	—
	<interface>	Discrete	SERial ETHernet NTP SOCKets	—
Return	This query returns the status of the selected interface that could be 0 (OFF) or 1 (ON).			
Usage example	SYST:COMM:ENAB 1, ETH SYST:COMM:ENAB 0, SER			

5.16.18. SYSTem:COMMunicate:ETHernet:ADDRess

Syntax SYSTem:COMMunicate:ETHernet:ADDRess {<ip_address>}
SYSTem:COMMunicate:ETHernet:ADDRess?

Description Set the IP address of the system manually if the DHCP mode is not enabled. If the DHCP mode is enabled setting the IP address using this command will be ignored.

Parameters	Name	Type	Range	Default
	<ip_address>	Quoted string	15 characters max. formatted as four groups of up to 3 digits (range 0–255), separated by “.”	—
Return	The query returns the current IP address sets manually or assigned by the DHCP server.			
Usage example	SYST:COMM:ETH:ADDR? "192.168.10.100"			
Related Commands	SYSTem:COMMunicate:ETHernet:DHCP			

5.16.19. SYSTem:COMMunicate:ETHernet:DHCP

Syntax SYSTem:COMMunicate:ETHernet:DHCP {<bool>}
SYSTem:COMMunicate:ETHernet:DHCP?

Description Enable or disable the DHCP mode. In DHCP mode, the DHCP server in the current network assigns network parameters (IP Address, DNS address, GATEway address and the Subnet MASK) for the BB3.

Parameters	Name	Type	Range	Default
	<bool>	Boolean	ON OFF 0 1	ON
Return	Query the status of the DHCP mode.			

Usage example SYST:COMM:ETH:DHCP?
1

5.16.20. SYSTem:COMMunicate:ETHernet:DNS

Syntax SYSTem:COMMunicate:ETHernet:DNS {<ip_address>}
SYSTem:COMMunicate:ETHernet:DNS?

Description Set the DNS (Domain Name Service) address if the DHCP mode is not enabled. If the DHCP mode is enabled setting the DNS address using this command will be ignored.

Parameters	Name	Type	Range	Default
	<ip_address>	Quoted string	15 characters max. formatted as four groups of up to 3 digits (range 0–255), separated by “.”	–

Return The query returns the DNS address sets manually or assigned by the DHCP server. If DHCP is used query will return “unknown”.

Usage example SYST:COMM:ETH:DNS "192.168.1.200"

Related Commands SYSTem:COMMunicate:ETHernet:DHCP

5.16.21. SYSTem:COMMunicate:ETHernet:GATEway

Syntax SYSTem:COMMunicate:ETHernet:GATEway {<ip_address>}
SYSTem:COMMunicate:ETHernet:GATEway?

Description Set the network gateway address if the DHCP mode is not enabled. If the DHCP mode is enabled setting the network gateway address using this command will be ignored.

Parameters	Name	Type	Range	Default
	<ip_address>	Quoted string	15 characters max. formatted as four groups of up to 3 digits (range 0–255), separated by “.”	–

Return The query returns the network gateway address sets manually or assigned by the DHCP server. If DHCP is used query will return “unknown”.

Usage example SYST:COMM:ETH:GATE?
"192.168.10.1"

Related Commands SYSTem:COMMunicate:ETHernet:DHCP

5.16.22. SYSTem:COMMunicate:ETHernet:MAC

Syntax SYSTem:COMMunicate:ETHernet:MAC {<mac_address>}
SYSTem:COMMunicate:ETHernet:MAC?

Description Use this command to set Ethernet MAC address. You can set any combination of six hexadecimal values separated by “-”. The Ethernet connection will work as long as two different machine in the LAN don't have the same MAC address.

Parameters	Name	Type	Range	Default
	<mac_address>	Quoted string	17 characters formatted as six groups of 2 digits separated by “-”	74-69-69-2D-30-00

Return The query returns the MAC address as a quoted string (six hexadecimal values sepa-

rated by “-”).

Usage example `SYST:COMM:ETH:MAC?`
`"70-60-50-40-30-20"`

5.16.23. SYSTem:COMMunicate:ETHernet:PORT

Syntax `SYSTem:COMMunicate:ETHernet:PORT {<number>}`
`SYSTem:COMMunicate:ETHernet:PORT?`

Description Use this command to change default (5025) Ethernet communication port for SCPI.

Parameters	Name	Type	Range	Default
	<number>	NR1	1-65535	5025

Return The query returns the Ethernet communication port number.

Usage example `SYST:COMM:ETH:PORT?`
`5025`

Related Commands `SYSTem:COMMunicate:ENABLE`
`SYSTem:COMMunicate:ETHernet:CONTRol?`

5.16.24. SYSTem:COMMunicate:ETHernet:SMASk

Syntax `SYSTem:COMMunicate:ETHernet:SMASk {<mask>}`
`SYSTem:COMMunicate:ETHernet:SMASk?`

Description Set the subnet mask if the DHCP mode is not enabled. If the DHCP mode is enabled setting the network gateway address using this command will be ignored.

Parameters	Name	Type	Range	Default
	<mask>	Quoted string	15 characters max. formatted as four groups of up to 3 digits (range 0–255), separated by “.”	–

Return The query returns the subnet mask sets manually or assigned by the DHCP server. If DHCP is used query will return “unknown”.

Usage example `SYST:COMM:ETH:SMAS "255.255.255.0"`

Related Commands `SYSTem:COMMunicate:ETHernet:DHCP`

5.16.25. SYSTem:COMMunicate:NTP

Syntax `SYSTem:COMMunicate:NTP {<server>}`
`SYSTem:COMMunicate:NTP?`

Description Use this command to set the NTP service server network address. The BB3 will try to establish connection with selected NTP service on each power up (hard reset), when *RST is issued or once per day (24h as defined with `CONF_NTP_PERIOD_SEC` parameter in firmware)

Parameters	Name	Type	Range	Default
	<server>	Quoted string	IP address or NTP server host name up to 32 characters	europe.pool.ntp.org

Return The query command returns the NTP service server network address.

Usage example `SYST:COMM:ENAB NTP`
`SYST:COMM:NTP "ntp.ubuntu.com"`

Related Commands *RST
 SYSTem:COMMunicate:ENABLE
 SYSTem:DATE
 SYSTem:TIME

5.16.26. SYSTem:COMMunicate:RLState

Syntax SYSTem:COMMunicate:RLState {<state>}
 SYSTem:COMMunicate:RLState?

Description This command configures the remote/local state of the BB3 according to the following settings:

- **LOCal** – The BB3 is set to front panel and remote interface control.
- **REMOte** – The BB3 is set to front panel and remote interface control.
- **RWLock** – The front panel keys are disabled. The BB3 can only be controlled via the remote interface. This programmable setting is completely independent from the front panel lock/unlock function that is available from the front panel menu. If you use this command to lock the front panel, the front panel will be unlocked when AC power is cycled.

The **LOCal** parameter is the same as SYSTem:LOCAl, the **REMOte** parameter is the same as SYSTem:REMOte, and the **RWLock** parameter is the same as SYSTem:RWLock.

The remote/local state is unaffected by *RST or any SCPI commands other than SYSTem:COMMunicate:RLState.

Parameters	Name	Type	Range	Default
	<state>	Discrete	LOCAl REMOte RWLock	LOCAl
Return	The query command returns control state of the BB3 that could be LOC, REM, or RWL.			
Usage example	SYST:COMM:RLST? "LOC"			
Related Commands	*RST SYSTem:LOCAl SYSTem:REMOte SYSTem:RWLock			

5.16.27. SYSTem:COMMunicate:SERial:BAUD

Syntax SYSTem:COMMunicate:SERial:BAUD {<speed>}
 SYSTem:COMMunicate:SERial:BAUD?

Description Set the baud rate of the serial (via USB) interface and the unit is Baud.

Parameters	Name	Type	Range	Default
	<speed>	NR1	4800 9600 19200 38400 57600 115200	9600
Return	Query the baud rate of the serial interface.			
Usage example	SYST:COMM:SER:BAUD 38400 SYST:COMM:SER:BAUD? 38400			
Related Commands	SYSTem:COMMunicate:ENABLE			

5.16.28. SYSTem:COMMunicate:SERial:PARity

Syntax SYSTem:COMMunicate:SERial:PARity {<parity>}

SYSTem:COMMunicate:SERial:PARity?**Description** Set the parity mode of the serial (via USB) interface.

Parameters	Name	Type	Range	Default
	<parity>	Discrete	EVEN MARK NONE ODD SPACE	NONE

Return Query the parity mode of the serial interface.

Usage example SYST:COMM:SER:PAR?

NONE

Related Commands SYSTem:COMMunicate:ENABle

5.16.29. SYSTem:CPU:INFOrmation:ONTime:LAST?**Syntax** SYSTem:CPU:INFOrmation:ONTime:LAST?**Description** This query returns time passed after last activation of the BB3. Resolution is 1 minute and this information is stored every 10 minutes in non-volatile memory. Therefore it's possible that up to 10 minutes is lost after restart caused with power outage or system reset.

Usage example SYST:CPU:INFO:ONT:LAST?

15m

5.16.30. SYSTem:CPU:INFOrmation:ONTime:TOTal?**Syntax** SYSTem:CPU:INFOrmation:ONTime:TOTal?**Description** This query returns total active time of the BB3. Resolution is 1 minute and this information is stored every 10 minutes in non-volatile memory. Therefore it's possible that up to 10 minutes is lost after restart caused with power outage or system reset.

Usage example SYST:CPU:INFO:ONT:TOT?

"1h 45m"

5.16.31. SYSTem:CPU:MODel?**Syntax** SYSTem:CPU:MODel?**Description** This query returns the model name and version of the MCU board. If simulator is used it returns "Simulator".

Usage example SYST:CPU:MOD?

"STM32, M1 0.2"

Related Commands SYSTem:CPU:INFOrmation:ONTime:LAST?

SYSTem:CPU:INFOrmation:ONTime:TOTal?

5.16.32. SYSTem:DATE

Syntax SYSTem:DATE {<year>}, {<month>}, {<day>}

SYSTem:DATE?

Description Sets the date of the system clock (RTC). Specify the year, month, and day. The self-test procedure compare date and time stored in RTC registers with values stored in the non-volatile memory (EEPROM). When the later is greater then former or any of them lost integrity (i.e. any of value is outside allowed range: for example seconds are higher then 60 or months are higher then 12, etc.) self-test will failed. The *TST? will return 1 and detailed report could be queried using the DIAGnostic:TEST? command.

The bit 3 (TIME) of the Questionable Status register will be set (see [Section 3.4](#)) if date-

time self-test failed or datetime was never set.

Parameters	Name	Type	Range	Default
	<year>	NR1	2000 – 2099	–
	<month>	NR1	1 – 12	–
	<day>	NR1	1 – 31	–
Return	Query the current date of the system clock in YYYY, MM, DD format.			
Usage example	SYST:DATE? 2015, 10, 24			
Related Commands	*TST? DIAGnostic[:INFormation]:TEST? SYSTem:TIME			

5.16.33. SYSTem:DIGital:INPut:DATA

Syntax SYSTem:DIGital:INPut:DATA? {<pin>}
Description This query reads the state of the digital control port.
Applies only to pin 1.

Parameters	Name	Type	Range	Default
	<pin>	NR1	1	1
Return	The query returns the value of the state of input pin.			
Usage example	SYST:DIG:INP:DATA? 1 1			
Related Commands	SYSTem:DIGital:PIN<n>:FUNctioN SYSTem:DIGital:PIN<n>:POLarity			

5.16.34. SYSTem:DIGital:OUTPut:DATA

Syntax SYSTem:DIGital:OUTPut:DATA {<pin>}, {<state>}
 SYSTem:DIGital:OUTPut:DATA? {<pin>}
Description This command sets the output data on the digital output pin. Applies only to pin 3 and 4.

Parameters	Name	Type	Range	Default
	<pin>	NR1	3 – 4	–
	<state>	Discrete	ON OFF 0 1	–
Return	The query returns the last programmed value on the selected pin.			
Usage example	SYST:DIG:OUTP:DATA 3, 0			
Errors	-114, "Header suffix out of range"			
Related Commands	SYSTem:DIGital:PIN<n>:FUNctioN SYSTem:DIGital:PIN<n>:POLarity			

5.16.35. SYSTem:DIGital:PIN<n>:FUNctioN

Syntax SYSTem:DIGital:PIN<n>:FUNctioN {<function>}
 SYSTem:DIGital:PIN<n>:FUNctioN?
Description Use this command to set function of the selected digital port pin. The pin function is saved in non-volatile memory.

All input functions applies only to pin 1 and 2 and all output functions applies only to pin 3 and pin 4.

- **DINPut** – The pin is in digital input mode.
- **DOUTput** – The pin is in digital output mode.
- **FAULt** – Setting FAULt means that pin functions as an isolated fault output. The fault signal is true when any output is in a protected state (from OCP, OVP, OTP, OPP) or Fan fault is detected.
- **INHibit** – When pin is configured as an inhibit input, a true signal at the pin will disable all output channels.
- **ONCouple** – output pin synchronize channel output state.
- **TINPut** – The pin is configured as a trigger input. When configured as a trigger input, the pin can be selected as the source for trigger signals. See TRIGger[:SEQuence]:SOURce.
- **TOUTput** – This allows a BUS trigger to be sent to any digital port pin that has been configured as a trigger output. A trigger out pulse is generated when the state is on and a bus trigger is received. A BUS trigger is generated using the *TRG command.

Parameters	Name	Type	Range	Default
	<function>	Discrete	DINP DOUT FAUL INH ONC TINP TOUT	–
Return	The query command returns DINP, DOUT, FAUL, INH or TINP.			
Usage example	SYST:DIG:PIN1:FUNC INH SYST:DIG:PIN2:FUNC TINP SYST:DIG:PIN3:FUNC FAUL SYST:DIG:PIN4:FUNC ONC			
Errors	-114, "Header suffix out of range"			
Related Commands	TRIGger[:SEQuence]:SOURce SYSTem:DIGital:INPut:DATA SYSTem:DIGital:OUTPut:DATA			

5.16.36. SYSTem:DIGital:PIN<n>:POLarity

Syntax	SYSTem:DIGital:PIN<n>:POLarity {<polarity>} SYSTem:DIGital:PIN<n>:POLarity?
Description	This command sets the polarity of the selected digital port pin. The pin polarity is saved in non-volatile memory. <ul style="list-style-type: none"> • POSitive – a logical true signal is a voltage high at the pin. For trigger inputs and outputs, POSitive means a rising edge. • NEGative – a logical true signal is a voltage low at the pin. For trigger inputs and outputs, NEGative means a falling edge.

Parameters	Name	Type	Range	Default
	<polarity>	Discrete	POSitive NEGative	–
Return	The query command returns POS or NEG.			
Usage example	SYST:DIG:PIN1:POL POS SYST:DIG:PIN2:POL NEG			
Errors	-114, "Header suffix out of range"			
Related Commands	TRIGger[:SEQuence]:SOURce SYSTem:DIGital:INPut:DATA SYSTem:DIGital:OUTPut:DATA			

5.16.37. SYSTem:ERRor**Syntax** SYSTem:ERRor[:NEXT]?**Description** This query command reads and clear errors from the error queue. A record of up to 20 errors can be stored in the BB3's error queue. See also "Error Messages" in [Section 7](#). Errors are retrieved in first-in-first-out (FIFO) order. The first error returned is the first error that was stored. The BB3 beeps once each time an error is generated. The error queue is cleared when power has been off or after a *CLS command.**Return** SYSTem:ERRor[:NEXT]? queries and clears the error messages in the error queue. The query returns the number and content of the error message.**Usage example**
SYST:ERR?
-113, "Undefined header"**Errors** If more than 20 errors have occurred, the last error stored in the queue (the most recent error) is replaced with:
-350, "Queue overflow"
No additional errors are stored until you remove errors from the queue.**Related Commands** *CLS
*RST
SYSTem:ERRor:COUNT**5.16.38. SYSTem:ERRor:COUNT?****Syntax** SYSTem:ERRor:COUNT?**Description** This query command queries the error/event queue for the number of unread items. As errors and events may occur at any time, more items may be present in the queue at the time it is actually read.**Usage example**
SYST:ERR:COUNT?
10**Related Commands** *CLS
*RST
SYSTem:ERRor[:NEXT]**5.16.39. SYSTem:INHibit?****Syntax** SYSTem:INHibit?**Description** Use this command to query BB3's inhibit state that is controlled with digital input (see [SOURce]:DIGital:PIN<n>:FUNCTION command). When BB3 is in inhibited state, all channel's output will be disabled (OFF) and triggered action (e.g. LIST) will be paused.

Channel output state command (OUTPut[:STATe]) can be used when BB3 is in inhibited mode but it will not affect output (i.e. change it to enable state).

Return Returns 0 if inhibit is not active or 1 if inhibit is active.**Usage example**
SYST:INH?
0**Related Commands** OUTPut[:STATe] {<bool>} [, <channel>]
[SOURce]:DIGital:PIN<n>:FUNCTION**5.16.40. SYSTem:KEY:DEFine****Syntax** SYSTem:KEY:DEFine {[<key>], <block>}
SYSTem:KEY:DEFine? [<key>]**Description** *Not implemented yet*

This command sets user defined switch on the BB3 front panel so that pressing the user defined switch will execute a function that could be one or sequence of SCPI commands. Since only one switch is available the <key> parameter is not mandatory.

Parameters	Name	Type	Range	Default
	<key>	NR1	1	1
	<block>	Quoted string	3 to 100	–
Return	Query returns function consists of one or more SCPI commands as quoted string.			
Usage example	SYST:KEY:DEF "OUTP 0"			
Related Commands	SYSTem:KEY:DELeTe			

5.16.41. SYSTem:KEY:DELeTe

Syntax SYSTem:KEY:DELeTe [<key>]

Description *Not implemented yet*

Use this command to clear defined function of the user defined switch on the BB3 front panel.

Parameters	Name	Type	Range	Default
	<key>	NR1	1	1
Usage example	SYST:KEY:DEL			
Related Commands				

5.16.42. SYSTem:KLOCK

Syntax SYSTem:KLOCK

Description This command similar to the SYSTem:REMOte command disables all front-panel options except for [Lock/Unlock] icon. You can push and hold the [Lock/Unlock] for a few seconds to unlock the front panel. The system password may be needed if it is set. Lock state is saved in non-volatile memory. Therefore, the front panel remains locked even after AC power is cycled.

Usage example SYST:KLOC

Related Commands SYSTem:COMMunicate:RLSTate
SYSTem:REMOte

5.16.43. SYSTem:LOCaL

Syntax SYSTem:LOCaL

Description This command places the BB3 in the local mode during remote operation. All options on the front panel are fully functional.

Usage example SYST:LOC

Related Commands SYSTem:COMMunicate:RLSTate
SYSTem:REMOte
SYSTem:RWLock

5.16.44. SYSTem:MEASure[:SCALar][:VOLTage][:DC]?**Syntax** SYSTem:MEASure[:SCALar][:VOLTage][:DC]? {<device>}**Description** Returns voltage of the RTC (Real-time-clock) backup battery.

Parameters	Name	Type	Range	Default
	<device>	Discrete	VBAT	VBAT

Usage example
 SYST:MEAS? VBAT
 3.07

5.16.45. SYSTem:PASSword:CALibration:RESet**Syntax** SYSTem:PASSword:CALibration:RESet**Description** This command resets the calibration password to the firmware default setting, which is "eezbb3". This command does not reset the system password.

Usage example
 SYST:PASS:CAL:RES

Related Commands
 CALibration[:MODE]
 CALibration:PASSword:NEW

5.16.46. SYSTem:PASSword:FPANel:RESet**Syntax** SYSTem:PASSword:FPANel:RESet**Description** This command resets the front panel lockout password to the firmware default setting, which is empty space (""). This command does not reset the calibration password.

Usage example
 SYST:PASS:FPAN:RES

Related Commands
 SYSTem:KLOCK
 SYSTem:PASSword:NEW

5.16.47. SYSTem:PASSword:NEW**Syntax** SYSTem:PASSword:NEW {<old>}, {<new>}**Description** Enter a new system password. To change the password, first unsecure the BB3 using the old password. Then, the new code has to be entered. The calibration code may contain up to 16 characters over the remote interface. Minimum length is 4 characters. The new password is automatically stored in non-volatile memory

Parameters	Name	Type	Range	Default
	<old>	Quoted string	0 to 16 characters	–
	<new>	Quoted string	4 to 16 characters	–

Usage example
 SYST:PASS:NEW "", "mypass2016"

Errors
 122, "Invalid sys password"
 125, "Sys password too long"
 126, "Sys password too short"

Related Commands
 SYSTem:KLOCK

5.16.48. SYSTem:PON:OUTPut:DISable

Syntax
 SYSTem:PON:OUTPut:DISable {<bool>}
 SYSTem:PON:OUTPut:DISable?

Description This command controls status off all channel outputs on power up. If enabled (ON), all

outputs will be disabled regardless of what is stored in user profile selected for auto recall.

Parameters	Name	Type	Range	Default
	<bool>	Boolean	ON OFF 0 1	OFF
Return	Query returns status of forced output disabling on power up.			
Usage example	OUTP? 1 SYST:PON:OUTP:DIS 1 (Restart) OUTP? 0			
Related Commands	MEMory:STATe:RECall:AUTO SYSTem:POWer			

5.16.49. SYSTem:POWer

Syntax [SYSTem:POWer {<bool>}](#)
[SYSTem:POWer?](#)

Description This command controls powering down and powering up sequence of the AC power inputs. The “Standby” indicator will be switched on when the BB3 enters the standby mode.

Parameters	Name	Type	Range	Default
	<bool>	Boolean	ON OFF 0 1	OFF
Return	Query returns BB3 power standby status.			
Usage example	SYST:POW ON SYST:POW? 1			
Related Commands	*RST *TST? SYSTem:BEEP:STATe			

5.16.50. SYSTem:POWer:PROTection:TRIP

Syntax [SYSTem:POWer:PROTection:TRIP {<bool>}](#)
[SYSTem:POWer:PROTection:TRIP?](#)

Description Use this command to shut down (set to standby mode) the BB3 when any of channel's protection tripped. The SYSTem:POWer command has to be used to power the BB3 on again.

Parameters	Name	Type	Range	Default
	<bool>	Boolean	ON OFF 0 1	OFF
Return	Query returns status of shutdown when tripped mode.			
Usage example	SYST:POW:PROT:TRIP? 1			
Related Commands	SYSTem:POWer			

5.16.51. SYSTem:REMote

Syntax [SYSTem:REMote](#)

Description Use this command to place the BB3 into remote mode for serial (via USB) or Ethernet remote control. All front-panel options are disabled except for [Lock/Unlock] icon. You can push and hold the [Lock/Unlock] for a few seconds to unlock the front panel. The system password may be needed if it is set.

Usage example SYST:REM

Related Commands SYSTem:COMMunicate:RLState
SYSTem:LOCal
SYSTem:RWLock

5.16.52. SYSTem:RESet

Syntax SYSTem:RESet

Description Use this command to initiate low-level (hardware) reset. When executed the power up procedure will start and currently active SCPI session will be lost.

Usage example SYST:RES

Related Commands *RST

5.16.53. SYSTem:RWLock

Syntax SYSTem:RWLock

Description Places the BB3 in the remote mode for serial (via USB) or Ethernet remote control. This command is the same as SYSTem:REMOte, except that all front panel options are disabled, including the [Lock/Unlock] icon.

Usage example SYST:RWL

Related Commands SYSTem:COMMunicate:RLState
SYSTem:LOCAl
SYSTem:REMOte

5.16.54. SYSTem:TEMPerature:PROTection[:HIGH][:LEVel]

Syntax SYSTem:TEMPerature:PROTection[:HIGH][:LEVel] {<temperature>} [, <sensor>]
SYSTem:TEMPerature:PROTection[:HIGH][:LEVel]? [<sensor>]

Description Set the over-temperature protection (OTP) value in degrees Celsius (°C) of the selected temperature sensor. When the over-temperature protection function of the specified temperature sensor is enabled (SYSTem:TEMPerature:PROTection[:HIGH]:STATE), one of the following action will be performed when the temperature exceeds the over-temperature protection value currently set:

- AUX – Switch off power of the main transformer and set bit 4 of the Questionable Status register
- CH1, CH2, CH3, CH4, CH5, CH6 – Disable channel output (OUTPut OFF) and set bit 4 of the Questionable Instrument Summary register.

If any of above mentioned temperature sensors cause over-temperature condition an error tone will also follow if beeper is enabled (see SYSTem:BEEPer:STATE).

SYSTem:TEMPerature:PROTection[:HIGH]:TRIPped? command can be used to query whether over-temperature protection occurred on the selected temperature sensor.

Parameters	Name	Type	Range	Default
	<temperature>	NR2	0 – 100	70 for CH1, CH2, and 50 for AUX

	<sensor>	Discrete	AUX CH1 CH2 CH3 CH4 CH5 CH6	AUX
Return	Query the over-temperature protection (OTP) value of the selected temperature sensor.			
Usage example	SYST:TEMP:PROT 50, AUX SYST:TEMP:PROT? 50			
Related Commands	*RST SYSTem:TEMPerature:PROTection[:HIGH]:STATe SYSTem:TEMPerature:PROTection[:HIGH]:TRIPped?			

5.16.55. SYSTem:TEMPerature:PROTection[:HIGH]:CLEar

Syntax	SYSTem:TEMPerature:PROTection[:HIGH]:CLEar [<sensor>]			
Description	This command clears the latched protection status when an over-temperature is detected. All conditions that generate the fault must be removed before the latched status can be cleared. The output is restored to the state it was in before the fault condition occurred.			
	Name	Type	Range	Default
	<sensor>	Discrete	AUX CH1 CH2 CH3 CH4 CH5 CH6	AUX
Usage example	SYST:TEMP:PROT:CLE			
Related Commands	SYSTem:TEMPerature:PROTection[:HIGH]:TRIPped			

5.16.56. SYSTem:TEMPerature:PROTection[:HIGH]:DELay[:TIME]

Syntax	SYSTem:TEMPerature:PROTection[:HIGH]:DELay[:TIME] {<delay>} [, <sensor>] SYSTem:TEMPerature:PROTection[:HIGH]:DELay[:TIME]? [<sensor>]			
Description	This command sets the over-temperature protection delay. The over-temperature protection function will not be triggered during the delay time. After the delay time has expired, the over-temperature protection function will be active. Programmed values can range from 0 to 300 seconds. See also Section 8.1			
Parameters	Name	Type	Range	Default
	<delay>	NR1	0 – 300 seconds	10
	<sensor>	Discrete	AUX CH1 CH2 CH3 CH4 CH5 CH6	AUX
Return	The query returns programmed over-temperature protection delay.			
Usage example	SYST:TEMP:PROT:DEL 30, CH2			
Related Commands	*RST SYSTem:TEMPerature:PROTection[:HIGH][:LEVel]			

5.16.57. SYSTem:TEMPerature:PROTection[:HIGH]:STATe

Syntax	SYSTem:TEMPerature:PROTection[:HIGH]:STATe {<bool>} [, <sensor>] SYSTem:TEMPerature:PROTection[:HIGH]:STATe? [<sensor>]			
Description	This command enables or disables the over-temperature protection (OTP) function. The enabled state is ON (1); the disabled state is OFF (0). If the over-temperature protection function is enabled and the measured output power reach value set by [SOURce[<n>]]:POWEr:PROTection[:LEVel] the output is disabled and the Questionable Condition status register OPP bit 10 is set.			

Parameters	Name	Type	Range	Default
	<bool>	Boolean	ON OFF 0 1	OFF
	<sensor>	Discrete	AUX CH1 CH2 CH3 CH4 CH5 CH6	AUX
Return	The query command returns 0 if the current protection state is OFF, and 1 if the current protection state is ON.			
Usage example	SYST:TEMP:PROT:STAT? CH1 0			
Related Commands	*RST SYSTem:TEMPerature:PROTection[:HIGH]:CLEar			

5.16.58. SYSTem:TEMPerature:PROTection[:HIGH]:TRIPped?

Syntax	SYSTem:TEMPerature:PROTection[:HIGH]:TRIPped? [<sensor>]			
Description	Query whether OTP occurred on the selected temperature sensor. When protection is tripped bit 4 (TEMPerature) of the Questionable Status register will be set (see Section 3.4). The SYSTem:TEMPerature:PROTection[:HIGH]:CLEar command can be send to clear OTP condition caused by the selected temperature sensor.			
Parameters	Name	Type	Range	Default
	<sensor>	Discrete	AUX CH1 CH2 CH3 CH4 CH5 CH6	AUX
Return	This query returns a 1 if the protection circuit is tripped and a 0 if it is untripped.			
Usage example	SYST:TEMP:PROT:TRIP? 0			
Related Commands	SYSTem:TEMPerature:PROTection[:HIGH]:CLEar SYSTem:TEMPerature:PROTection[:HIGH]:STATE			

5.16.59. SYSTem:TIME

Syntax	SYSTem:TIME {<hours>}, {<minutes>}, {<seconds>} SYSTem:TIME?			
Description	Sets the time of the system clock (RTC). Specify the hours, minutes, and seconds. The self-test procedure compare date and time stored in RTC registers with values stored in the non-volatile memory (EEPROM). When the later is greater then former or any of them lost integrity (i.e. any of value is outside allowed range: for example seconds are higher then 60 or months are higher then 12, etc.) self-test will failed. The *TST? will return 1 and detailed report could be queried using the DIAGnostic:TEST? command. <i>The bit 3 (TIME) of the Questionable Status register will be set (see Section 3.4) if date-time self-test failed or datetime was never set.</i>			
Parameters	Name	Type	Range	Default
	<hours>	NR1	0 – 23	–
	<minutes>	NR1	0 – 59	–
	<seconds>	NR1	0 – 59	–
Return	Query the current time of the system clock in HH, MM, SS format.			
Usage example	SYST:TIME? 15, 10, 33			
Related Commands	*TST? DIAGnostic[:INFormation]:TEST?			

SYSTem:DATE

5.16.60. SYSTem:TIME:DST

Syntax SYSTem:TIME:DST {<rules>}
SYSTem:TIME:DST?

Description Use this command to define daylight saving time (DST) rules used in your region.

Firmware v1.0 support limited number of region: Europe, US/Canada and Australia/New Zealand.

Parameters	Name	Type	Range	Default
	<rules>	Discrete	OFF EU USA AUS	OFF
Return	Query the DTS rule name used for adjust time.			
Usage example	SYST:TIME:DST EU			
Related Commands	SYSTem:COMMunicate:ENABLE SYSTem:COMMunicate:NTP SYSTem:TIME			

5.16.61. SYSTem:TIME:ZONE

Syntax SYSTem:TIME:ZONE {<zone>}
SYSTem:TIME:ZONE?

Description Use this command to define time zone as offset from GMT.

Parameters	Name	Type	Range	Default
	<zone>	Quoted string	-12:00 to 14:00	—
Return	Query the time zone as offset from GMT in the following format: “[sign]hh:mm GMT”			
Usage example	SYST:TIME:ZONE 1 SYST:TIME:ZONE? "+01:00 GMT"			
Related Commands	SYSTem:COMMunicate:ENABLE SYSTem:COMMunicate:NTP SYSTem:TIME			

5.16.62. SYSTem:VERSion?

Syntax SYSTem:VERSion?

Description This command returns the version of the SCPI (Standard Commands for Programmable Instruments) standard with which the instrument is in compliance

Return The command returns a string in the form “YYYY.V”, where YYYY represents the year of the version and V represents a version for that year.

Usage example SYST:VERS?
1999.0

5.17. TRIGger

The BB3's triggering system allows a change in output voltage, current or start internal data logging when receiving a trigger from selected source. Triggering the BB3 is a multi-step process and consists of the following steps:

- An output has to be selected (the INSTRument:SElect command) following by configuring the BB3 for the triggered output level by using CURRent:TRIGgered and VOLTage:TRIGgered commands.
- The source from which the BB3 will accept the trigger must be specified. The BB3 could accept e.g. a BUS (software) trigger or an IMMEDIATE trigger from the remote interface.
- The time delay between the detection of the trigger on the specified trigger source and the start of any corresponding output change can be programmed if needed. Such time delay is valid only for the BUS trigger source.
- Trigger programming is completed by providing an INITiate[:IMMEDIATE] command. If the IMMEDIATE source is selected, the selected output is set to the triggered level immediately. But if the trigger source is the BUS, the BB3 is set to the triggered level after receiving the *TRG command.

SCPI command	Description
TRIGger	
[:SEquence]	
[:IMMEDIATE]	Starts the trigger immediately
:DElay {<delay>}	Sets the time delay between the detection of a trigger event and the start of any corresponding trigger action
:EXIT	
:CONDition {<condition>}	Sets channels condition when LIST execution stopped
:SOURce {<source>}	Sets the trigger source
:DLOG	
[:IMMEDIATE]	
:SOURce {<source>}	Sets the internal data logger trigger source

5.17.1. TRIGger[:SEquence][:IMMEDIATE]

Syntax TRIGger[:SEquence][:IMMEDIATE]

Description This event command causes a defined LIST to immediately start without the selected trigger occurring.

Usage example TRIG

Related Commands *TRG

5.17.2. TRIGger[:SEquence]:DElay

Syntax TRIGger[:SEquence]:DElay {<delay>}
TRIGger[:SEquence]:DElay?

Description This command sets the time delay between the detection of an event on the specified trigger source and the start of any corresponding trigger action on the peripheral module output.

Parameters	Name	Type	Range	Default
	<delay>	NR1 Discrete	0 – 3600 MIN MAX	MIN

Return The query command returns the programmed delay in seconds.

Usage TRIG:DEL 10

example

5.17.3. TRIGger[:SEQuence]:EXIT:CONDition

Syntax TRIGger[:SEQuence]:EXIT:CONDition {<condition>}
 TRIGger[:SEQuence]:EXIT:CONDition?

Description This command sets channels condition when LIST execution is not prematurely stopped (e.g. with ABORt command or by user action).
 Use [SOURce[<n>]]:LIST:COUNT to set finite number of LIST loops.

Parameters	Name	Type	Range	Default
	<condition>	Discrete	OFF FIRSt LAST STANdbY	OFF

Return The query command returns the programmed exit condition.

Usage example TRIG:EXIT:COND STAN

Related Commands ABORt
 INITiate
 [SOURce[<n>]]:LIST:COUNT
 [SOURce[<n>]]:CURRent:MODE
 [SOURce[<n>]]:VOLTage:MODE

5.17.4. TRIGger[:SEQuence]:SOURce

Syntax TRIGger[:SEQuence]:SOURce {<source>}
 TRIGger[:SEQuence]:SOURce?

Description This command selects the source from which the BB3 will accept a trigger.

- BUS – enables LAN and serial (via USB) triggering using the *TRG command.
- IMMEDIATE – the BB3 executes a complete trigger operation immediately after executing the INITiate command without delay.
- MANual – enables triggering by selecting the encoder knob switch.
- PIN<n> – selects a digital port pin configured as a trigger input. <n> specifies the pin number.

When the trigger source is set to BUS, the *WAI command can ensure the synchronization. After executing the *WAI command, the BB3 will only execute new command when all the pending operations are completed.

Also when the trigger source is set to BUS, you can use the *OPC command to report that the operation is completed. The *OPC? command will return “1” to the output buffer and the *OPC command will set the bit 0 (OPC bit, operation complete) in the standard event register when the operation is finished.

The wait for the BUS, EXTeRnal, or KEY trigger can be bypassed by sending the TRIGger[:SEQuence]:IMMEDIATE command.

The APPLY command automatically sets the source to IMMEDIATE.

Parameters	Name	Type	Range	Default
	<source>	Discrete	BUS IMM MAN PIN1 PIN2	–

Return The query command returns the programmed trigger subsystem source.

Usage example TRIG:SOUR BUS
 TRIG:SOUR?

BUS

Related Commands *OPC
 *RST
 *TRG
 *WAI

ABORt
 APPLy
 INITialize
 TRIGger[:SEQuence][:IMMediate]

5.17.5. TRIGger:DLOG[:IMMediate]

Syntax TRIGger:DLOG[:IMMediate]

Description The command sends an immediate trigger signal to the data logger. This will trigger the internal data log session regardless of the selected trigger source. You must initiate (see the INIT:DLOG command) the data logger before you trigger it.

Usage example TRIG:DLOG

Related Commands *TRG
INITialize:DLOG

5.17.6. TRIGger:DLOG:SOURce

Syntax TRIGger:DLOG:SOURce {<source>}
TRIGger:DLOG:SOURce?

Description The command selects the trigger source for the data logger in the same fashion as the TRIGger[:SEQuence]:SOURce command.

Parameters	Name	Type	Range	Default
	<source>	Discrete	BUS IMM MAN PIN1 PIN2	–

Return The query command returns the programmed trigger subsystem source.

Usage example TRIG:DLOG:SOUR PIN1
TRIG:SOUR?
PIN1

Related Commands INITialize
TRIGger[:SEQuence]:SOURce
TRIGger:DLOG[:IMMediate]

6. Device-specific (unclassified) commands

The commands in this section are specific to the BB3, and so are not included in the 1999.0 version of the SCPI standard. However, these commands are designed with the SCPI standard in mind, and they follow all of the command syntax rules defined by the standard.

6.1.1. APPLy

The APPLy command provides the most straightforward method to program the BB3 remotely.

Syntax `APPLy {<channel>}, {<voltage>} [, <current>]`
`APPLy? {<channel>} [, <query param>]`

Description This command is a combination of the [INSTrument:SElect](#) (or [INSTrument:NSElect](#)), [\[SOURce\[<n>\]\]:VOLTage](#) and [\[SOURce\[<n>\]\]:CURRent](#) commands.

The APPLy changes the power module's output to the newly programmed values only if the programmed values are valid within the presently selected power module operating range. An execution error will occur if the programmed values are not valid within the selected range. You can substitute MINimum, MAXimum, or DEFault in place of a specific value for the voltage and current parameters (see table below).

Parameters	Name	Type	Range	Default
	<channel>	Discrete	CH1 CH2 CH3 CH4 CH5 CH6	–
	<voltage>	NR2 Discrete	0 to MAXimum, MIN DEF MAX UP DOWN The MAXimum value is dependent on the power module voltage rating. See Section 8.1	–
	<current>	NR2 Discrete	0 to MAXimum, MIN DEF MAX UP DOWN The MAXimum value is dependent on the power module current rating. See Section 8.1	–
	<query param>	Discrete	CURR VOLT	–

Return APPLy? query the voltage/current of the specified channel.

Usage example Set the voltage and current of CH1 to 35.5V and 0.5A respectively:

```
APPL CH1,35.5,0.5
```

Query the voltage and current settings of the first channel:

```
APPL? CH1
```

```
CH1:50V/3A, 35.500, 0.500
```

Query only current setting of the second channel:

```
APPL? CH2, CURR
```

```
0.25
```

Errors -221,"Power limit exceeded"
 -222,"Data out of range"

Related Commands INSTrument:NSElect
 INSTrument[:SElect]
 [SOURce[<n>]]:VOLTage[:LEVel][:IMMediate][:AMPLitude]
 [SOURce[<n>]]:CURRent[:LEVel][:IMMediate][:AMPLitude]
 TRIGger[:SEquence]:SOURce

6.1.2. DEBUg

Syntax `DEBUg?`

Description Use this command to collect various runtime information that can be used in debugging

	process.
Usage example	DEBU? CH1 U_DAC = 0 CH2 U_DAC = 32768 CH1 U_MON = 0 CH2 U_MON = 4095 CH1 U_MON_DAC = 0 CH2 U_MON_DAC = 16383 CH1 I_DAC = 39321 CH2 I_DAC = 6554 CH1 I_MON = 0 CH2 I_MON = 3276 CH1 I_MON_DAC = 19660 CH2 I_MON_DAC = 3276 AUX TEMP = 373 CH1 TEMP = 561 CH2 TEMP = 373 MAIN_LOOP_DURATION = 15998 16696 17409 / 0 0 0 / 1844 346805388 ADC_COUNTER = 120 / 0 / 296
Related Commands	DIAGnostic[:INFOrmation]:ADC?

7. Error messages

The system-defined error/event numbers are chosen on an enumerated ("1 of N") basis. The SCPI-defined error/event numbers and the <error/event_description> portions of the full queue item are listed here. The first error/event described in each class (for example, -100, -200, -300, -400) is a "generic" error.

7.1. Command Error [-199, -100]

An <error/event number> in the range [-199, -100] indicates that a syntax error has been detected by the BB3's SCPI command parser. The occurrence of an error in this class cause the command error bit (CME, bit 5) in the Standard Event Status Register (see [Section 3.1](#)) to be set.

Return string	Description
0, "No error"	The queue is completely empty. Every error/event in the queue has been read, or the queue was purposely cleared by a power-on event, *CLS, etc.
-100, "Command error"	Generic syntax error.
-101, "Invalid character"	An invalid character was found in the command string. There may be a character such as #, \$, or % in the command keyword or within a parameter. Example: OUTP:STAT #ON
-103, "Invalid separator"	An invalid separator was found in the command string. There may be a comma instead of a colon, semicolon, or blank space, or a blank space instead of a comma. Example: TRIG:SOUR,BUS
-104, "Data type error"	The wrong parameter type was found in the command string. A string might have been sent when a string was expected, or vice versa. Example (the password must be a quoted string): CAL ON, 123
-108, "Parameter not allowed"	More parameters were received than expected for the command. There may be an extra parameter, or parameter added to a command that does not accept a parameter. Example: INST CH1, CH2
-109, "Missing parameter"	Fewer parameters were received than expected for the command. One or more parameters that are required for this command was not received. Example: APPL
-113, "Undefined header"	A command was received that is not valid for the BB3. The command may have been misspelled, or it may not be a valid command. Short forms of commands, may contain up to four letters.

	<p>Example:</p> <pre>MEASU:CURR?</pre>
-114, "Header suffix out of range"	<p>The numeric suffix attached to a command header is not one of the allowable values.</p> <p>Example:</p> <pre>STAT:QUES:INST:ISUM3?</pre>
-131, "Invalid suffix"	<p>A suffix was incorrectly specified for a numeric parameter. It may have been misspelled.</p> <p>Example (use A instead of V):</p> <pre>VOLT 3A</pre>
-138, "Suffix not allowed"	<p>A suffix was received following a numeric parameter which does not accept a suffix.</p> <p>Example (SEC is not a valid suffix):</p> <pre>STAT:QUES:ENAB 10 SEC</pre>
-151, "Invalid string data"	<p>An invalid character string was received. Check to see if you have enclosed the character string in single or double quotes.</p> <p>Example:</p> <pre>DISP:TEXT 'ON</pre>

7.2. Execution Error [-299, -200]

An <error/event number> in the range [-299, -200] indicates an error has been detected by the BB3's execution control block. The occurrence of any error in this class sets the execution error bit (EXE, bit 4) in the Standard Event Status Register (see [Section 3.1](#)). One of the following events has occurred:

- A <PROGRAM DATA> element following a header was evaluated by the BB3 as outside of its legal input range, or as otherwise inconsistent with the BB3's capabilities.
- A valid program message could not be properly executed. Probably due to some BB3 condition.

Execution errors will be reported by the BB3 after rounding and expression evaluation has taken place. Rounding a numeric data element, for example, will not be reported as an execution error. Events that generate execution errors will not generate Command Errors, device-specific errors, or Query Errors; see the other error definitions in this section.

Return string	Description
-200, "Execution error"	This is the generic execution error when more specific error is not assigned in the case that command execution failed.
-221, "Settings conflict"	Indicates that a legal program data element was parsed but could not be executed due to the current device state.
-222, "Data out of range"	<p>A numeric parameter value is outside the valid range for the command.</p> <p>Example:</p> <pre>VOLT 166</pre>
-223, "Too much data"	A character string was received but could not be executed because the string length was more than 32 characters. This error can be generated by the CALibration:REMark command.

-224, "Illegal parameter value"

A discrete parameter was received which was not a valid choice for the command. You may have used an invalid parameter choice.

Example:

VOLT ON

-230, "Digital pin function mismatch"

Operation with digital pin is not possible due to incorrect function definition.

Example:

DIG:PIN1:FUNC INH
DIG:INP:DATA? 1

-240, "Hardware error"

Command or query could not be executed because failure is detected during power-up self-test. Use the [*TST?](#) command to query self-test results. See also [Section 7.3.1](#)

-241, "Hardware missing"

Command or query could not be executed because of missing BB3 hardware.

Example (remote sense cannot be activated on the DCP405B power module):

OUTP:SENS ON

-250, "Mass storage error"

Indicates that a SD card error occurred. This error message is generated when the firmware cannot detect the more specific errors described for errors -252 through -258.

-252, "Missing media"

Command or query could not be executed because of a missing SD card.

-256, "File name not found"

Command or query could not be executed because the file name on the device media was not found; for example, an attempt was made to read or copy a nonexistent file.

-257, "File name error"

Command or query could not be executed because the file name on the device media was in error; for example, an attempt was made to copy to a duplicate file name.

-258, "Media protected"

Command or query could not be executed because the SD card access is locked (MMEMory:LOCK command).

-259, "File transfer aborted"

Command or query for file transfer is aborted before transfer is completed.

-260, "CH1 fault detected"

A POWERGOOD signal failure has been detected on Channel 1. If such a condition has happened, BB3 firmware will be immediately put into the standby mode.

-261, "CH2 fault detected"

A POWERGOOD signal failure has been detected on Channel 2. If such a condition has happened, BB3 firmware will be immediately put into the standby mode.

-262, "CH3 fault detected"

A POWERGOOD signal failure has been detected on Channel 3. If such a condition has happened, BB3 firmware will be immediately put into the standby mode.

-263, "CH4 fault detected"

A POWERGOOD signal failure has been detected on Channel 4. If such a condition has happened, BB3 firmware will be immediately put into the standby mode.

-264, "CH5 fault detected"

A POWERGOOD signal failure has been detected on Channel 5. If such a condition has happened, BB3 firmware will be immediately put into the standby mode.

-265, "CH6 fault detected"	A POWERGOOD signal failure has been detected on Channel 6. If such a condition has happened, BB3 firmware will be immediately put into the standby mode.
-270, "CH1 output fault detected"	A prohibited state has been detected on the Channel 1 output (e.g., negative power is measured for extended period of time). The Channel 1 output will be turned off.
-271, "CH2 output fault detected"	A prohibited state has been detected on the Channel 2 output (e.g., negative power is measured for extended period of time). The Channel 1 output will be turned off.
-272, "CH3 output fault detected"	A prohibited state has been detected on the Channel 3 output (e.g., negative power is measured for extended period of time). The Channel 1 output will be turned off.
-273, "CH4 output fault detected"	A prohibited state has been detected on the Channel 4 output (e.g., negative power is measured for extended period of time). The Channel 1 output will be turned off.
-274, "CH5 output fault detected"	A prohibited state has been detected on the Channel 5 output (e.g., negative power is measured for extended period of time). The Channel 1 output will be turned off.
-275, "CH6 output fault detected"	A prohibited state has been detected on the Channel 6 output (e.g., negative power is measured for extended period of time). The Channel 1 output will be turned off.

7.3. Device-Specific Error [-399, -300], [1, 32767]

An <error/event number> in the range [-399, -300] or [1, 32767] indicates that the BB3 has detected an error which is not a command error, a query error, or an execution error. Most likely, some BB3 operations did not properly complete, possibly due to an abnormal hardware or firmware condition. These codes are also used for self-test response errors. The occurrence of any error in this class sets the device-specific error bit (DDE, bit 3) in the Standard Event Status Register (see [Section 3.1](#)).

Events that generate device-specific errors do not generate command errors, execution errors, or query errors; see the other error definitions in this section.

Return string	Description
-211, "Trigger ignored"	A *TRG was received but the trigger was ignored. The trigger source should be set to the BUS and the trigger subsystem should be initiated by the INITiate[:IMMdate] command.
-213, "Init ignored"	An INITiate command was received but could not be executed because a measurement was already in progress.
-310, "System error"	An internal firmware error has been detected.
-330, "Self-test failed"	The BB3's complete self-test failed from the remote interface (*TST? command). In addition to this error, more specific self-test errors are also reported. See also Section 7.3.1
-350, "Queue overflow"	The error queue is full because more than 16 errors have occurred. No additional errors will be stored until errors have been removed from the queue. The error queue is cleared when power has been turned off, or after a *CLS (clear status) command has been executed.
-363, "Input buffer overrun"	Input buffer overrun. The Serial or Ethernet port input buffer has lost data due to an overflow.
100, "Channel not found"	A non existing channel number has been specified.

Example:

```
SOUR3:VOLT?
```

101, "Calibration mode is off"	Calibration is not enabled. The BB3 will not accept calibration commands.
102, "Invalid password"	The calibration password is incorrect.
104, "Bad sequence of cal commands"	Calibration commands have not been entered in the proper sequence.
105, "Password too long"	A calibration password was received which contained more than 16 characters.
106, "Password too short"	A calibration password was received which contained less than 4 characters.
107, "Cal value out of range"	The specified calibration value (CALibration:CURRent:DATA or CALibration:VOLTage:DATA) is not valid for the BB3's present measurement function and range.
108, "Cal output disabled"	The Calibration operation has been aborted by sending the OUTPut OFF command during an output calibration.
109, "Invalid cal data"	One or more calibration data values are impossible or out of range, and will prohibit the calibration parameters calculation. For example the MID value is lower then MIN, or the MIN value is higher then MAX, or the MID value is so out of accepted tolerance that it cannot be predicted with newly calculated calibration parameters.
110, "Cal params missing or corrupted"	Calibration parameters activation started by the CALibration:STATe ON, "<password>" command failed because calibration has never been conducted or existing parameters are corrupted.
111, "No new cal data exists"	There was an attempt to save calibration data with the CALibration:SAVE command without calibration data.
150, "Power limit exceeded"	The product of voltage and current exceeds channel power limitation. For example if channel power limit is 155 W and the following sequence is executed: VOLT 38 CURR 4.4
151, "Voltage limit exceeded"	Set voltage exceeds channel capability. Example: VOLT 60
152, "Current limit exceeded"	Set current exceeds channel capability. Example: CURR 5.5
201, "Cannot execute before clearing protection"	Example: a command such as OUTP ON cannot be executed on a channel where one or more protections will be tripped.
270, "CH1 ADC timeout detected"	Channel 1 has been switched off after 3 consecutive ADC timeouts were detected.
304, "Incompatible transient modes"	For example, VOLTage and CURRent cannot be in both STEP and LIST modes at the same time (see [SOURce[<n>]]:CURRent:MODE and [SOURce[<n>]]:VOLTage:MODE)
306, "Too many list points"	Too many list points have been specified.
307, "List lengths are not"	One or more lists are not the same length.

equivalent"

For example, number of CURRent steps is not equal to one or number of VOLTage steps

```
LIST:VOLT 0, 5, 10, 15, 20
LIST:CURR 1, 2
```

308, "Cannot be changed while transient trigger is initiated"	An attempt to change a setting which cannot be changed while the instrument is waiting for or executing a trigger sequence.
309, "Cannot initiate while in fixed mode"	Cannot initiate transient generator. Either the VOLTage or CURRent function is set to FIXEd mode.
310, "List not found"	A list cannot be found on the SD card.
311, "List is empty"	A list cannot be started because it's empty.
312, "Cannot execute when the channels are coupled"	Cannot execute a command when the channel outputs are coupled. Example (an attempt to set remote sensing on the channel that is coupled in series): INST:COUP:TRAC SER VOLT:SENS EXT
313, "Cannot execute in tracking mode"	Cannot execute a command when the tracking mode is active.
320, "Firmware update error"	An attempt to upload firmware via LAN has failed due to communication error, checksum error, etc. (<i>Not implemented yet</i>).
400, "Cannot load empty profile"	An attempt has been made to recall an empty or erased user profile with *RCL command.
401, "Module mismatch in profile"	An attempt has been made to recall user profile that contains different peripheral modules configuration.
410, "No FAT file system on mass media"	Command or query could not be executed because the SD card was not formatted or has filesystem that is not supported.
500, "Down-programmer on CH1 switched off"	The down programmer has been switched off because a negative output power (DP_NEG_LEV) has been measured on Channel 1 that has lasted more then DP_NEG_DELAY seconds.
501, "Down-programmer on CH2 switched off"	The down programmer has been switched off because a negative output power (DP_NEG_LEV) has been measured on Channel 2 that has lasted more then DP_NEG_DELAY seconds.
502, "Down-programmer on CH3 switched off"	The down programmer has been switched off because a negative output power (DP_NEG_LEV) has been measured on Channel 3 that has lasted more then DP_NEG_DELAY seconds.
503, "Down-programmer on CH4 switched off"	The down programmer has been switched off because a negative output power (DP_NEG_LEV) has been measured on Channel 4 that has lasted more then DP_NEG_DELAY seconds.
504, "Down-programmer on CH5 switched off"	The down programmer has been switched off because a negative output power (DP_NEG_LEV) has been measured on Channel 5 that has lasted more then DP_NEG_DELAY seconds.
510, "External voltage on CH1 detected"	An external voltage has been measured (e.g., from a battery or other power source intentionally or mistakenly left connected) on Channel 1 while output is switched from off to on. (<i>Not implemented yet</i>).
511, "External voltage on CH2 detected"	An external voltage has been measured (e.g., from a battery or other power source intentionally or mistakenly left connected) on Channel 2 while output is switched from off to on. (<i>Not implemented yet</i>).
512, "External voltage on CH3"	An external voltage has been measured (e.g., from a battery or

detected"	other power source intentionally or mistakenly left connected) on Channel 3 while output is switched from off to on. (<i>Not implemented yet</i>).
513, "External voltage on CH4 detected"	An external voltage has been measured (e.g., from a battery or other power source intentionally or mistakenly left connected) on Channel 4 while output is switched from off to on. (<i>Not implemented yet</i>).
514, "External voltage on CH5 detected"	An external voltage has been measured (e.g., from a battery or other power source intentionally or mistakenly left connected) on Channel 5 while output is switched from off to on. (<i>Not implemented yet</i>).
615, "MCU EEPROM save failed"	The STM32F7 MCU board non-volatile memory (an EEPROM) is damaged or not responsive.
616, "SLOT1 EEPROM save failed"	The non-volatile memory (an EEPROM) on the peripheral module inserted into slot #1 is damaged or not responsive.
617, "SLOT2 EEPROM save failed"	The non-volatile memory (an EEPROM) on the peripheral module inserted into slot #2 is damaged or not responsive.
618, "SLOT3 EEPROM save failed"	The non-volatile memory (an EEPROM) on the peripheral module inserted into slot #3 is damaged or not responsive.

7.3.1. Self-Test Error Messages

During power-up, the BB3 will start self-test sequences when communication with all SPI devices that is marked as installed will be established. The scope of the self-test depends on device capability and it could vary from simply reading device registers, and waiting for expected responses to more complex operations such as setting DAC registers and reading back those values using the ADC (if ADC test passed). Every test failure will be announced by an error beep, and one error message per failed test will be inserted into the error queue. The device-specific error bit (DDE, bit 3) in the Standard Event Status Register (see [Section 3.1](#)) will also be set.

Return string	Description
210, "CH1 IOEXP test failed"	Communication with the Channel 1 I/O expander is not possible. Probably because the I/O expander is not functional.
211, "CH2 IOEXP test failed"	Communication with the Channel 2 I/O expander is not possible. Probably because the I/O expander is not functional.
212, "CH3 IOEXP test failed"	Communication with the Channel 3 I/O expander is not possible. Probably because the I/O expander is not functional.
213, "CH4 IOEXP test failed"	Communication with the Channel 4 I/O expander is not possible. Probably because the I/O expander is not functional.
214, "CH5 IOEXP test failed"	Communication with the Channel 5 I/O expander is not possible. Probably because the I/O expander is not functional.
220, "CH1 ADC test failed"	Communication with the Channel 1 ADC is not possible. Probably because values written into various registers are not equal to the returned values.
221, "CH2 ADC test failed"	Communication with the Channel 2 ADC is not possible. Probably because values written into various registers are not equal to the returned values.
222, "CH3 ADC test failed"	Communication with the Channel 3 ADC is not possible. Probably because values written into various registers are not equal to the returned values.
223, "CH4 ADC test failed"	Communication with the Channel 4 ADC is not possible. Probably because values written into various registers are not equal to the returned values.

224,"CH5 ADC test failed"	Communication with the Channel 5 ADC is not possible. Probably because values written into various registers are not equal to the returned values.
230,"CH1 DAC test failed"	The Channel 1 DAC is not functional. Possibly because communication has failed, or because there's a difference between the test voltage data sent to the Channel 1 DAC and that read back.
231,"CH2 DAC test failed"	The Channel 2 DAC is not functional. Possibly because communication has failed, or because there's a difference between the test voltage data sent to the Channel 2 DAC and that read back.
232,"CH3 DAC test failed"	The Channel 3 DAC is not functional. Possibly because communication has failed, or because there's a difference between the test voltage data sent to the Channel 1 DAC and that read back.
233,"CH4 DAC test failed"	The Channel 4 DAC is not functional. Possibly because communication has failed, or because there's a difference between the test voltage data sent to the Channel 1 DAC and that read back.
234,"CH5 DAC test failed"	The Channel 5 DAC is not functional. Possibly because communication has failed, or because there's a difference between the test voltage data sent to the Channel 1 DAC and that read back.
235,"CH6 DAC test failed"	The Channel 6 DAC is not functional. Possibly because communication has failed, or because there's a difference between the test voltage data sent to the Channel 1 DAC and that read back.
240,"MCU EEPROM test failed"	The non-volatile memory on the STM32F7 MCU board has failed the checksum integrity test.
250,"RTC test failed"	The RTC (real time clock) on the STM32F7 MCU board is not present, or the date or time values returned are not valid, or the last datetime value stored into non-volatile memory is greater than RTC datetime.
260,"Ethernet test failed"	The Ethernet controller on the STM32F7 MCU board test failed.
630,"Fan test failed"	The measured fan speed during the self-test procedure is not within expected range.

For example, if SPI-bus cable is accidentally not connected, or wrongly wired, on Channel 1 two errors will be generated and placed into the error queue which can be checked using the following command sequence:

```

SYST:ERR:COUN?
2
SYST:ERR?
210,"CH1 IOEXP test failed"
SYST:ERR?
220,"CH1 ADC test failed"

```

8. Parameters and settings

8.1. Programming parameters

The BB3 firmware can be build to support any combination of various type of peripheral modules that that are inserted into BB3 chassis.

Use the [*IDN?](#) command to find out what channels are defined in the BB3's firmware.

8.1.1. Voltage

Power module model	DCP405	DCP405B	DCM220
MAXimum [V]	40	40	20
MINimum [V]	0	0	1
DEFault [V]	0	0	0
Value after *RST or *TST?	0	0	0
STEP MINimum [V]	10m	10m	10m
STEP MAXimum [V]	5	5	2
STEP DEFault [V]	100m	100m	100m
PROtection DELay MINimum [s]	0	0	0
PROtection DELay MAXimum [s]	10	10	10
PROtection DELay DEFault [s]	5m	5m	5m
CALibration VALue MINimum[V]	0.15	0.15	2
CALibration VALue MIDdle[V]	20	20	10
CALibration VALue MAXimum[V]	38	38	18

8.1.2. Current

Programming range or model	DCP405, DCP405B	DCM220
MAXimum [A]	5	4
MINimum [A]	0	0
DEFault [A]	0	0
Value after *RST or *TST?	0	0
STEP and STEP MINimum [A]	10m	10m
STEP MAXimum [A]	1	1
STEP DEFault [A]	50m	50m
PROtection DELay MINimum [s]	0	0
PROtection DELay MAXimum [s]	10	10
PROtection DELay DEFault [s]	20m	20m
CALibration VALue MINimum[A]	50m	500m
CALibration VALue MIDdle[A]	2.425	2
CALibration VALue MAXimum[A]	4.8	3.5

8.1.3. Power

The total number of possible combinations for the BB3's power parameters is 6, of which two typical examples are given below:

Programming range or model	DCP405, DCP405B	DCM220
----------------------------	-----------------	--------

MINimum [W]	0	0
DEFault [W]	155	80
MAXimum [W]	155	80
PROtection LEVel DEFault [W]	155	80
PROtection DELay MINimum [s]	1	1
PROtection DELay MAXimum [s]	300	300
PROtection DELay DEFault [s]	10	10

8.2. Reset Settings (*RST)

At power-on or after execution of the [*RST](#) common command, device settings will be set to the states listed in the following table. See also the [MEMory:STATe:RECall:AUTO](#) command.

Command	Power on	*RST
*ESE	0	Not affected
*ESR	0	Not affected
*SRE	0	Not affected
*STB?	0	???
CAL[:MODE]	OFF	
CAL:STAT	ON if valid calibrating data for both voltage and current exists in the non-volatile memory, otherwise OFF.	
DISP:BRIG	Power down state	20
DISP:VIEW	Power down state	1
DISP[:STAT]	Power down state	Not affected
INST:NSEL	1	
INST:SEL	CH1	
MEMM:CDIR	/	
MEMM:DOWN:FNAME	""	
MMEM:LOCK	Power down state	Not affected
OUTP[:STAT]	Power down state	OFF
OUTP:PROT:COUP	Power down state	OFF
OUTP:TRAC	Power down state	OFF
SENS:CURRE:RANG	Power down state	DEF (Best)
SENS:CURRE:RANG:AUTO	Power down state	ON
SENS:DLOG:FUNC:CURRE	Power down state	OFF
SENS:DLOG:FUNC:POW	Power down state	OFF
SENS:DLOG:FUNC:VOLT	Power down state	OFF
SENS:DLOG:PER	Power down state	0.02
SENS:DLOG:TIME	Power down state	60
[SOUR[n]]:CURRE	Power down state	DEF (see Section 8.1)
[SOUR[n]]:CURRE:PROT:DEL	Power down state	DEF (see Section 8.1)
[SOUR[n]]:CURRE:PROT:STAT	Power down state	OFF
[SOUR[n]]:CURRE:PROT:TRIP?	0	
[SOUR[n]]:CURRE:STEP	Power down state	DEF (see Section 8.1)

[SOUR[n]]:POW:PROT[:LEV]	Power down state	DEF (see Section 8.1)
[SOUR[n]]:POW:PROT:DEL	Power down state	DEF (see Section 8.1)
[SOUR[n]]:POW:PROT:STAT	Power down state	ON
[SOUR[n]]:POW:PROT:TRIP?	0	
[SOUR[n]]:VOLT	Power down state	DEF (see Section 8.1)
[SOUR[<n>]]:VOLT:PROG[:SOUR]	INT	
[SOUR[n]]:VOLT:PROT:DEL	Power down state	DEF (see Section 8.1)
[SOUR[n]]:VOLT:PROT:STAT	Power down state	OFF
[SOUR[n]]:VOLT:PROT:TRIP?	0	
[SOUR[n]]:VOLT:STEP	Power down state	DEF (see Section 8.1)
[SOUR[<n>]]:VOLT:SENS[:SOUR]	Power down state	OFF
STAT:OPER[:EVEN]	0	Not affected
STAT:OPER:COND	0	Not affected
STAT:OPER:ENAB	0	Not affected
STAT:OPER:INST[:EVEN]	0	Not affected
STAT:OPER:INST:COND	0	Not affected
STAT:OPER:INST:ENAB	0	Not affected
STAT:OPER:INST:ISUM[:EVEN]	0	Not affected
STAT:OPER:INST:ISUM:COND	0	Not affected
STAT:OPER:INST:ISUM:ENAB	0	Not affected
STAT:QUES[:EVEN]	0	Not affected
STAT:QUES:COND	0	Not affected
STAT:QUES:ENAB	0	Not affected
STAT:QUES:INST[:EVEN]	0	Not affected
STAT:QUES:INST:COND	0	Not affected
STAT:QUES:INST:ENAB	0	Not affected
STAT:QUES:INST:ISUM[:EVEN]	0	Not affected
STAT:QUES:INST:ISUM:COND	0	Not affected
STAT:OPER:INST:ISUM:ENAB	0	Not affected
SYST:CHAN:INFO:ONT:LAST?	0	
SYST:CHAN:INFO:ONT:TOT?	Power down state	Not affected
SYST:CPU:INFO:ONT:LAST?	0	
SYST:CPU:INFO:ONT:TOT?	Power down state	Not affected
SYST:ERR:COUN?	0	
SYST:POW	Power down state	ON
SYST:TEMP:PROT [AUX]	Power down state	55
SYST:TEMP:PROT:DEL [AUX]	Power down state	30
SYST:TEMP:PROT:STAT [AUX]	Power down state	ON
SYST:TEMP:PROT CH1 CH2	Power down state	75
SYST:TEMP:PROT:DEL CH1 CH2	Power down state	30
SYST:TEMP:PROT:STAT CH1 CH2	Power down state	ON
TRIG:DEL	Power down state	0

TRIG:SLOP	Power down state	POS
TRIG:SOUR	Power down state	IMM
TRIG:SOUR:DLOG	Power down state	IMM

8.3. Special modes of operation

Operations will differ when tracking or any of coupling modes between channels have been selected. The following table shows how special modes of operation affects some features:

	Calibration (CAL)	Remote sensing (VOLT:SENS)	Voltage programming (VOLT:PROG)	Tracking control (OUTP:TRAC)	Coupling (INST:COUP:TRAC)
TRACking	Disabled		Disabled		Disabled
Common ground	Disabled				
Split rails coupling	Disabled				
Coupled in PARallel	Disabled		Disabled	Disabled	
Coupled in SERies	Disabled	Disabled	Disabled	Disabled	

8.4. Default settings

Function	State / Value	SCPI command reference
Over-current protection (OCP)	OFF	CURR:PROT:STAT
Over-voltage protection (OVP)	OFF	VOLT:PROT:STAT
Over-power protection (OPP)	ON	POW:PROT:STAT
OPP trip level	155.00 W	POW:PROT:TRIP
OPP delay	10 s	POW:PROT:DEL
Channel Over-temperature protection (OTP)	ON	SYST:TEMP:PROT:STAT
Channel OTP trip level	75.00 °C	SYST:TEMP:PROT:TRIP
Channel OTP delay	30 s	SYST:TEMP:PROT:DEL
AUX sensor OTP	ON	SYST:TEMP:PROT:STAT AUX
AUX sensor OTP trip level	50 °C	SYST:TEMP:PROT:TRIP AUX
AUX sensor OTP delay	10 s	SYST:TEMP:PROT:DEL AUX
Shutdown when protection tripped	OFF	SYST:POW:PROT:TRIP
Switch off all outputs when protection tripped	OFF	OUTP:PROT:COUP
Remote voltage programming	OFF	VOLT:PROG
Remote voltage sense	OFF	VOLT:SENS
Coupling mode	NONE	INST:COUP:TRAC
Tracking mode	OFF	OUTP:TRAC
Calibration password	eezbb3	CAL:PASS:NEW
System password	Not defined	SYST:PASS:NEW
Communication mode	Local	SYST:LOC
Front panel lock	OFF	SYST:KLOC
Front panel display	ON	DISP:STAT
Ethernet communication	OFF	SYST:COMM:ENAB 0, ETH
Force disabling of all outputs on power up	OFF	SYST:PON:OUTP:DIS

Beeper	ON	SYST:BEEP:STAT
“Key pressed” click tone	OFF	SYST:BEEP:KEY:STAT
Ethernet port communication	5025	SYST:COMM:ETH:PORT
Ethernet MAC	74-69-69-2D-30-00	SYST:COMM:ETH:MAC
Serial port communication	OFF	SYST:COMM:ENAB 0, SER
Serial port speed	9600	SYST:COMM:SER:BAUD
Serial port parity bit	NONE	SYST:COMM:SER:PAR
NTP service	OFF	SYST:COMM:ENAB 0, NTP
NTP server	europe.pool.ntp.org	SYST:COMM:NTP

9. Software simulator

The BB3 firmware can be compiled and executed on a Windows, Linux or OS X system. The software simulator is a terminal application that can respond to almost all of currently supported SCPI command described in this document. SCPI commands could be entered directly in the simulator's terminal window (Fig. 4) or remotely by using the e.g. a [Telnet](#) client (Fig. 5).

Fig. 4: Simulator welcome screen

Fig. 5: Remote connection using a telnet client

The simulator also has built-in GUI. When started, open a separate window with the picture of the BB3 front panel.



Fig. 6: Firmware simulator GUI

The GUI simulator front panel currently displays only changes in LED indicators and indicates whether load is applied on the output terminals or not. For example if an $8.2\ \Omega$ load is connected to channel 2 and causes that channel to enter CC mode, the GUI front panel will indicate that in the following way:

Fig. 7: Simulator GUI with a connected load on channel 2

9.1. SIMUlator

The SIMUlator software subsystem implements a set of unclassified SCPI commands for managing external parameters and events such as load impedance, connection and disconnection of the load, sensor temperature or the BB3 control circuit power supply state. Thus it is possible to exercise the measuring and protection commands that depend on external events.

For example, a MEASure:CURRent? command without a connected load will always return zero, or activation of the VOLTage:PROTection:STATe will automatically trip the OVP signal since a channel in CC operation cannot start when output is switched on, etc.

SCPI command	Description
SIMUlator	
:EXIT	Closes simulator
:GUI	Starts simulator's GUI
:LOAD {<resistance>}	Sets the value of the simulated load
:STATe {<bool>}	"Connects" a simulated load to the channel output
:PIN1 {<bool>}	Sets the value of the PIN1 input
:PWRGood {<bool>}	Sets the PWRGOOD signal state
:QUIT	Closes simulator
:RPOL {<bool>}	Sets the RPOL signal
:TEMP {<temperature>}	Sets the temperature sensor value
:VOLT:PROG:EXT {<voltage>}	Sets the output voltage when a channel is in external programming mode

9.1.1. SIMUlator:EXIT

Syntax [SIMUlator:EXIT](#)

Description This command close all Simulator windows (terminal and GUI if started).

Usage example `SIMU:EXIT`

9.1.2. SIMUlator:GUI

Syntax [SIMUlator:GUI](#)

Description This command starts the GUI simulation in a new window (see Fig. 6 and Fig. Error: Reference source not found).

Usage example `SIMU:GUI`

Related Commands [SIMUlator:EXIT](#)

9.1.3. SIMUlator:LOAD

Syntax [SIMUlator:LOAD {<resistance>}](#)
[SIMUlator:LOAD?](#)

Description This command define the impedance of a simulated load connected to a channel output. Units are in ohms. With a load connected it is possible to simulate several BB3 operations: e.g., CC mode of operation, current and power measurement, OCP and OPP functionality, etc.

The simulated load value can be also changed by clicking and dragging the load's image. Move to the left to decrease, or to the right to increase the simulated value in increments of 1 Ω .

The simulator currently cannot emulate the "UR" mode of operation (see the [OUTPut:MODE?](#) command).

Parameters	Name	Type	Range	Default
	<resistance>	NR2 Discrete	0 – 9999999 INFinite	–
Return	The query command returns the programmed load value.			
Usage example	SIMU:LOAD 8.2			
Related Commands	OUTPut:MODE?			

9.1.4. SIMUlator:LOAD:STATe

Syntax [SIMUlator:LOAD:STATe {<bool>}](#)
[SIMUlator:LOAD:STATe?](#)

Description This command "connects" or "disconnects" the simulated load on the channel output. If the GUI simulator has been started (via the SIMUlator:GUI command) a load symbol with the currently selected value in Ohms will be displayed (See Fig. 7).

Another possibility to connect (or disconnect) a load is by click on its image.

Parameters	Name	Type	Range	Default
	<bool>	Boolean	ON OFF 0 1	–
Return	The query command returns the load state.			
Usage example	SIMU:LOAD:STAT?			
	0			
	MEAS:CURRE?			
	0.00			
	SIMU:LOAD:STAT ON			
	MEAS:CURRE?			
	1.50			
Related Commands	OUTPut:MODE? SIMUlator:GUI SIMUlator:LOAD			

9.1.5. SIMUlator:PIN1

Syntax [SIMUlator:PIN1 {<bool>}](#)
[SIMUlator:PIN1?](#)

Description This command can be used to simulate the state of the PIN1 input on the BB3 front panel push-in connector that can be used for initiate trigger.

Parameters	Name	Type	Range	Default
	<bool>	Boolean	ON OFF 0 1	–
Return	The query command returns the state of the simulated PIN1 input.			
Usage example	VOLT:TRIG 12.00			
	CURRE:TRIG 2.50			
	TRIG:SOUR PIN1			
	OUTP 1			


```
INIT
SIMU:PIN1
```

Related Commands

```
ABORt
INITiate[:IMMediate]
TRIGger[:SEquence]:DELay
TRIGger[:SEquence]:SLOPe
TRIGger[:SEquence]:SOURce
```

9.1.6. SIMUlator:PWRGood

Syntax `SIMUlator:PWRGood {<bool>}`
`SIMUlator:PWRGood?`

Description This command can be used to simulate an internal power supply failure. When the PWR-GOOD signal is changed from 1 to 0 the BB3 will go into the standby mode (equal to the command SYSTem:POW OFF).

The simulated BB3 mode cannot be changed until PWRGOOD is not changed to 1.

Parameters	Name	Type	Range	Default
	<bool>	Boolean	ON OFF 0 1	ON

Return The query command returns the PWRGOOD signal state.

Usage example

```
SYST:POW?
1

SIMU:PWRG 0
SYST:POW?
0
```

Related Commands `SYSTem:POWer`

9.1.7. SIMUlator:QUIT

Syntax `SIMUlator:QUIT`

Description Same as SIMUlator:EXIT

Usage example `SIMU:QUIT`

9.1.8. SIMUlator:RPOL

Syntax `SIMUlator:RPOL {<bool>}`
`SIMUlator:RPOL?`

Description This command can be used to simulate detection of a remote sensing reverse polarity condition.

Parameters	Name	Type	Range	Default
	<bool>	Boolean	ON OFF 0 1	ON

Return The query command returns the RPOL signal state.

Usage example

```
STAT:QUES:INST:ISUM2?
0

SIMU:RPOL 1
STAT:QUES:INST:ISUM2?
128
```

Errors 312, "Cannot execute when the channels are coupled"

Related Commands INSTRument:COUPle:TRACking
[SOURce[<n>]]:VOLTage:SENSe[:SOURce]
STATus:QUEStionable:INSTRument[:EVENT]?

9.1.9. SIMULator:TEMPerature

Syntax SIMULator:TEMPerature {<temperature>} [, <sensor>]
SIMULator:TEMPerature? [<sensor>]

Description This command sets the simulated temperature in degrees Celsius (°C), and then reads it from the simulated temperature sensor.

Parameters	Name	Type	Range	Default
	<temperature>	NR2	0 – 100	–
	<sensor>	Discrete	AUX CH1 CH2 CH3 CH4 CH5 CH6	AUX

Return The query command returns the set temperature value.

Usage example SIMU:TEMP 45, CH2
MEAS:TEMP? CH2
45.00

Related Commands MEASure[:SCALar]:TEMPerature[:THERmistor][:DC]

9.1.10. SIMULator:VOLTage:PROGram:EXTernal

Syntax SIMULator:VOLTage:PROGram:EXTernal {<voltage>}
SIMULator:VOLTage:PROGram:EXTernal?

Description This command sets the simulated voltage that will be used for output voltage programming when the simulated channel is set in external / remote programming mode (see [SOURce[<n>]]:VOLTage:PROGram[:SOURce]). For full range, apply 2.5 V; if a higher value is entered channel's OVP will trip.

Parameters	Name	Type	Range	Default
	<voltage>	NR2	Positive value	0.00

Return The query command returns the simulated external output voltage programming value.

Usage example VOLT:PROG EXT
SIMU:VOLT:PROG:EXT 1.25
MEAS?
20.00

Errors 312, "Cannot execute when the channels are coupled"

Related Commands INSTRument:COUPle:TRACking
[SOURce[<n>]]:VOLTage:PROGram[:SOURce]
[SOURce[<n>]]:VOLTage:PROTection:TRIPped?

10. Programming examples

10.1. Set channel output values and working with the OCP

This is a SCPI commands sequence that sets a voltage, current, and the over-current protection (OCP) on the channel two:

INST?	<i>Check currently selected output</i>
1	
INST CH2	<i>Select channel two as current channel</i>
VOLT 10	<i>Set output voltage</i>
CURR	<i>Set output current</i>
CURR:PROT:STAT?	<i>Check OCP status</i>
0	
CURR:PROT:STAT 1	<i>Enable OCP</i>
CURR:PROT:DEL 100ms	<i>Set OCP delay</i>
OUTP 1	<i>Enable output</i>
MEAS?	<i>Measure output voltage</i>
10.00	
MEAS:CURR?	<i>Measure output current</i>
0.00	<i>Current is zero since no load is connected</i>

If [software simulator](#) is used, connection of the load can be also simulated:

SIMU:LOAD 20	<i>Define connected load impedance</i>
MEAS?	<i>Measure voltage once again</i>
10.00	
MEAS:CURR?	<i>Measure current once again</i>
0.50	<i>Measured current</i>

The following command sequence could be used to test channel mode with load previously defined and after the load impedance is lowered enough that output current reach programmed value. The OCP has to be disabled because previously defined 100 ms delay does not give us enough time to execute the whole sequence for testing channel mode and output voltage and current values:

OUTP:MODE?	<i>Check mode of operation</i>
"CV"	<i>The channel is in constant-voltage mode since output current is below previously programmed level</i>
SIMU:LOAD?	<i>Check load value</i>
10	
CURR:PROT:STAT?	<i>Check OCP status</i>
1	
CURR:PROT:STAT OFF	<i>Disable OCP</i>
SIMU:LOAD 4	<i>Decrease load impedance</i>
OUTP:MODE?	<i>Check once again mode of operation</i>
"CC"	<i>Channel enters constant-current mode since $I_{max} = U / R = 10 / 4 = 2.5 \text{ A}$ and current is limited to the 1 A</i>

EEZ BB3 SCPI reference

```
MEAS:CURR?           Measure output current
1.00
MEAS?                Measure output voltage
4.00                 Output voltage is decreased since  $U = I * R = 1 * 4 = 4 \text{ V}$ 
```

The OCP will “trip” when output current reach programmed value and channel stay in the CC mode for more then programmed OCP delay time. To test that with e.g. the [software simulator](#) we’ll disable channel output first, enable OCP and when change channel output back to enabled state:

```
OUTP OFF             Disable channel output
CURR:PROT:TRIP?      Check OCP status
0                    OCP is not activated
CURR:PROT:STAT ON     Enable OCP
VOLT?                Check programmed output voltage
10.00
CURR?                Check programmed output current
1.00
SIMU:LOAD?           Check simulated load value
4
OUTP ON              Enable channel output
CURR:PROT:TRIP?      Check OCP status once again
1                    OCP has been tripped
OUTP?                Check channel output state
0                    Channel output is changed to OFF stated by the OCP
```

The channel output state cannot be changed to enabled until any of protection is active. We have to clear protection first. If the same load that caused the first protection trip is still connected the channel output will be disabled immediately after the protection programmed delay time expired. Therefore we also have to disconnect load or disable protection. The later method will be used in the command sequence that follows:

```
OUTP ON              First attempt to enable channel output
OUTP?
0                    This attempt failed, the channel output remain disabled
OUTP:PROT:CLE        Channel protections reset
OUTP ON              Second to enable channel output
0                    Channel output was enabled for a short time (100ms) and returns back to OFF state
CURR:PROT:TRIP?      Check OCP status
1                    OCP has been tripped
OUTP:PROT:CLE        Reset channel protections once again
CURR:PROT:STAT OFF   Disable OCP
OUTP ON              Third attempt to enable channel output
OUTP?
1                    Output is finally enabled
OUTP:MODE?
```

"CC"

Channel enters CC mode of operation

10.2. Voltage and current calibration

For optimum calibration results the following condition are recommended:

- the calibration ambient temperature is stable and between 20 °C and 30 °C.
- ambient relative humidity is less than 80 %.
- Allow a one hour warm-up period before verification or calibration (use e.g. SYST:CHAN:INFO:ONT:LAST? or SYST:CPU:INFO:ONT:LAST? to get that info).
- Use short and thick cables to connect test setups.

Step	Commands	Description
1	*RST	
2	SYST:RWL	Make sure that BB3 is in remote mode and cannot be unlock from local console (TFT display)
3	INST {CH1 CH2}; OUTP ON	Select the channel to be calibrated and enable the channel output.
4	VOLT:PROT:STAT OFF CURR:PROT:STAT OFF POW:PROT:STAT OFF	Disable if required the voltage, current and power protections.
5	CAL ON, "<password>"	BB3 enters calibration mode on the channel selected in step 1. Both voltage and current on the selected channel are set to the MINimum value. The VOLT? and CURR? commands can be optionally used here to test channel output values.
6		For voltage calibration, connect a digital voltmeter (DVM) across the power module's output terminals.
7	CAL:VOLT:LEV MIN	Set the channel to the low-end (MIN) calibration point.
8	CAL:VOLT 81.8mV	Enter the reading you obtained from the external DVM.
9	CAL:VOLT:LEV MID	Set the channel to the middle (MID) calibration point.
10	CAL:VOLT 19.68	Enter the reading you obtained from the DVM.
11	CAL:VOLT:LEV MAX	Set the channel to the high (MAX) calibration point.
12	CAL:VOLT 39.2	Enter the reading you obtained from the DVM.
13		For current calibration, connect current monitoring resistor (shunt) across the output terminals and connect the DVM across the shunt resistor. Its resistance has to be less then 5 Ω and rated for 25 W or more for measuring MAX current level.
14		Repeat step 7 through step 12 by substituting CURR for VOLT for current calibration. For example, CAL:CURR:LEV MIN.
15	CAL_CURR:RANG LOW	For low current range (i.e. 0 – 50 mA) calibration use this command to change the range and repeat once again procedure mentioned in step 14.
16	CAL:REM "<string>"	Record calibration information such as next calibration due date for future reference. The calibration string may contain up to 40 characters. You don't need to enter current date and time since that information will be recorded automatically.
17	CAL:SAVE	Save to non-volatile memory new calibration data.
18	CAL OFF, "<password>"	BB3 exit calibration mode. Both voltage and current on the selected channel are again set to the MINimum value.
19	SYST:REM	Enable local console unlock. Alternatively SYST:LOC can be executed to make local console enabled again.

10.3. Working with profiles

The following command sequence could be used to store current set of parameters to the profile location 4 in the non-volatile memory:

MEM:STAT:VAL? 4	<i>Check to see if profile selected location is empty</i>
0	
MEM:STAT:NAME? 4	<i>We can also check that by querying profile location name</i>
--Not used--	
INST CH1	<i>Examine currently programmed output values of the first channel</i>
VOLT?;:CURR?;:OUTP?	
0.00;0.00;0	
INST CH2	<i>Examine currently programmed output values of the second channel</i>
VOLT?;:CURR?;:OUTP?	
0.00;0.00;0	
VOLT 12;:CURR 300mA	<i>Reprogram both channel output values that will be stored as a new profile</i>
INST CH1	
VOLT 12;:CURR 300mA	
OUTP 1;:OUTP 1, CH2	
*SAV 4	<i>All profile parameters is now storing on the selected location</i>
MEM:STAT:NAME? 4	<i>Check profile name</i>
" "	
MEM:STAT:NAME 4, "Dual 12V/300mA, Output ON"	<i>Set the profile name (only ASCII characters are allowed!)</i>
MEM:STAT:NAME? 4	<i>Check the profile name once again</i>
"Dual 12V/300ma, Output ON"	

We can now turn the BB3 off (when it enters the standby mode) turn it on again and check some of the programmed parameters:

SYST:POW 0	<i>The BB3 enters the standby mode</i>
SYST:POW 1	<i>Returns back from the standby mode. Please note that this command can be executed with the minimum of 5 seconds delay otherwise a -200,"Execution error" will be generated (you can check that with the SYST:ERR? command)</i>
VOLT?;:CURR?;:OUTP?	<i>Query programmed voltage, current and output state of the currently selected channel</i>
0.00;0.00;0	<i>Returned data indicate that previously saved values in profile number 4 were not used</i>
*RCL 4	<i>Recall parameters from desired location and execute query once again</i>
VOLT?;:CURR?;:OUTP?	
12.00;0.30;1	<i>The channel output values are now programmed using the selected profile</i>

We can automate above mentioned process that channel profile parameters stored in non-volatile memory are using on power up. First we'll check what is a current status of automatic recall and what profile will be used in the case of automatic recall:

MEM:STAT:REC:AUTO?	<i>Query status of automatic profile recall during power on sequence</i>
0	<i>Automatic recall is turned off</i>

MEM:STAT:REC:AUTO ON	<i>Turn on automatic recall</i>
MEM:STAT:REC:SEL?	<i>Query which profile will be used when automatic recall is turned on</i>
0	<i>Selected profile was 0</i>
MEM:STAT:REC:SEL 4	<i>Change power on profile to 4</i>
SYST:POW 0	<i>Switch the BB3 to the standby mode once again</i>
SYST:POW 1	<i>Returns back from the standby mode. Again wait at least 5 seconds before enters this command</i>
VOLT?::CURR?::OUTP?	<i>Query programmed voltage, current and output state of the currently selected channel</i>
12.00;0.30;1	<i>The channel output values are programmed using the selected profile</i>

10.4. Get identification info and self-test results

The BB3's identification information could be beneficial when more than one instrument are controlled. Additionally in the following example information about self-test will be queried:

*IDN?	<i>Query identification string</i>
Envox,EEZ BB3 (STM32),0000000,M1 0.2	<i>BB3 with two different channels is identified, the first channel is 0-50V/3A and the second is 0-40V/5A. Serial number is 00001, and firmware version M1.0.93</i>
*TST?	<i>Execute self-test and query result</i>
0	<i>Self-test is passed</i>
DIAG:TEST?	<i>Query additional information about self-test</i>
"2, EEPROM, installed, passed",	
"2, SD card, installed, passed",	
"2, Ethernet, installed, passed",	
"2, RTC, installed, passed",	
"2, DateTime, installed, passed",	
"4, BP option, not installed, failed",	
"2, Fan, installed, passed",	
"2, AUX temp, installed, passed",	
"2, CH1 temp, installed, passed",	
"2, CH2 temp, installed, passed"	

The self-test could be performed even when the BB3 is in the standby mode. We'll first switch the BB3 into the standby mode. At the end of this example we are using additional diagnostic command that allows us to query information about channel's ADC measurements.

SYST:POW 0	<i>The BB3 enters the standby mode</i>
DIAG:TEST?	<i>Query additional information about self-test</i>
"2, EEPROM, installed, passed",	
"2, SD card, installed, passed",	
"2, Ethernet, installed, passed",	
"2, RTC, installed, passed",	
"2, DateTime, installed, passed",	
"4, BP option, not installed, failed",	
"2, Fan, installed, passed",	
"2, AUX temp, installed, passed",	
"2, CH1 temp, installed, passed",	
"2, CH2 temp, installed, passed"	

SYST:POW 1

Returns back from the standby mode

DIAG:ADC?

Additional information about currently selected channel ADC inputs

"U_SET=12.02 V", "U_MON=12.00 V", "I_SET=0.30 A", "I_MON=0.00 A"

U_{SET} and I_{SET} are measured values of the DAC outputs, U_{MON} and I_{MON} are actual output values. I_{MON} is 0 because no load is connected. A small difference between set and actual output voltage exists because calibration data are currently in use.

10.5. Programming output voltage using the list of values

The BB3 comes with simple “arbitrary waveform generator” functionality that can be accomplished using the LIST commands. The following example changes in the loop output voltage between five output values each half a second long while current is set to 3 A.

INST CH1

Select the channel that has to be programmed

VOLT:MODE LIST

Set voltage programming mode to the list of values

LIST:VOLT 5, 10, 20, 40, 0

Define sequence of output voltage

CURR:MODE LIST

Set current programming mode to the list of values.

LIST:CURR 3

Only one output current value is defined. Single value or number of values equivalent to other parameters (LIST:VOLT and LIST:DWEL) is allowed.

LIST:DWEL 0.5

Only one value for the duration of each step is chosen. Single value or number of values equivalent to other parameters (LIST:VOLT and LIST:CURR) is allowed.

LIST:COUN INF

Repeat continuously LIST sequence


TRIG:SOUR IMM

Define type of trigger. In this case the list execution will start immediately after INIT command is received.

INIT

Start the trigger.

Resulting output voltage and current waveform with connected load of 4.7 Ω is shown on the picture below.

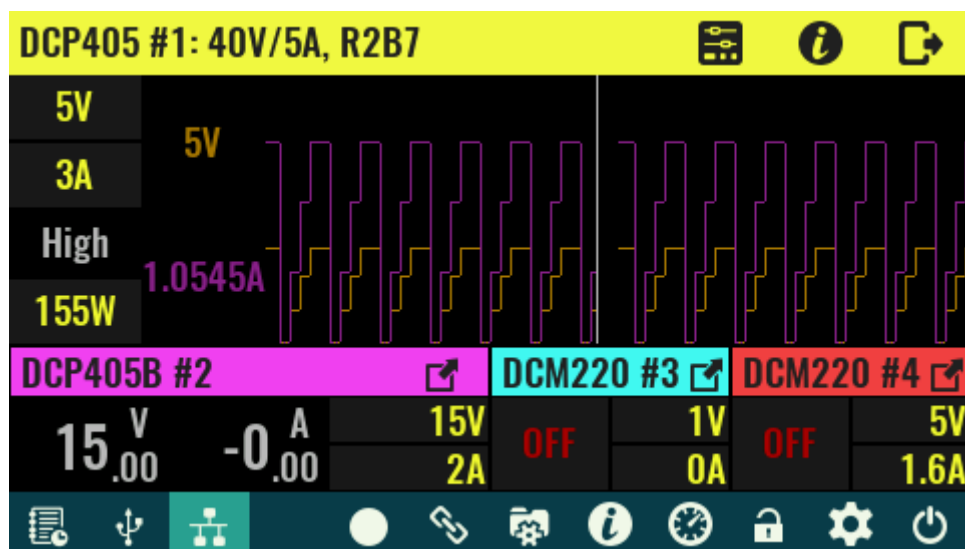

11. SCPI commands scheduled for upcoming releases

Please note that the following list is preliminary.

SCPI command	Description
DCL	Requires the client (controller) to send a "DCL\n" string
*SRE	Sets the value of the Service Request Enable register
*WAI	Waits until all pending commands are completed
CALibration	
:TEMPerature	
[:DATA] {<new value>}	Enters the calibration value
INSTrument	
:COUPle	
:TRIGger {<mode>}	Selects a coupling between channels trigger systems
OUTPut	
:DELay	
:ON {<time>}	Sets the delay time for turning the output on
:OFF {<time>}	Sets the delay time for turning the output off
:DPRog {<bool>}	Controls down-programmer circuit
[SOURce[<n>]]	
:CURRent	
:SLEW	
:FALLing	Sets the falling current slew rate
:RISing	Sets the rising current slew rate
:VOLTage	
:SLEW	
:FALLing	Sets the falling voltage slew rate
:RISing	Sets the rising voltage slew rate
SYSTem	
:COMMunicate	
:ETHernet	Ethernet communication parameters
:CONTRol?	Queries communication port for SRQ handling
:HOSTname {<name>}	Sets the Ethernet communication host name
:DIGital	
:TOUTput	
:BUS[:ENABLE] {<Bool>}	Enables/disables BUS-generated triggers on digital pins
:ERRor	
:ALL?	Queries the error/event queue for all the unread items
:CODE[:NEXT]?	Queries the error/event queue for the next item code
:TIME	
:TIMer	
[:STATe]	Sets the internal timer state
:COUNT	Queries the current value of the internal timer

12. SCPI commands summary

Common command	Description
*CLS	Clears all status data structures
*ESE {<value>}	Programs the Standard Event Status Enable register bits
*ESR?	Reads the Standard Event Status Register
*IDN?	Returns the UNIQUE identification of the BB3
*OPC	Operation Complete Command used for program synchronization
*RCL {<profile>}	Recalls the BB3 state stored in the specified storage location
*RST	Reset BB3 to the initial state
*SAV {<profile>}	Stores the current BB3 state in the specified storage location
*STB?	Reads the Status Byte register
*TRG	Generates a software trigger
*TST?	Returns Self-Test results
*WAI	Waits until all pending commands are completed

SCPI Command	Description
ABORT	Resets the trigger system to the Idle state
:DLOG	Stops the internal data logging session
CALibrate[:MODE] {<bool>, <password>}	Enables/disables calibration mode
:CLEar {<password>}	Clears all calibration parameters
:CURRent	
[:DATA] {<new value>}	Enters the calibration value
:LEVel {<level>}	Calibrates the output current programming
:RANGe {<range>}	Sets current range for multiple current range model
:PASSword	
:NEW {<old>, <new>}	Changes calibration password
:REMark {<string>}	Saves calibration information
:SAVE	Saves the new cal constants in non-volatile memory
:STATe {<bool>, <password>}	Enables calibration parameters
:VOLTage	
[:DATA] {<new value>}	Enters the calibration value
:LEVel {<level>}	Calibrates the output voltage programming
DIAGnostic	
[:INfOrmation]	
:ADC?	Returns the latest values acquired by ADC
:CALibration?	Returns a list of the calibration parameters
:FAN?	Returns status of the cooling fan.
:PROTection?	Returns the information about all protections.
:TEST?	Returns results of the most recent self-test
DISPlay	

:BRiGhtness {<value>}	Sets the intensity of the front panel TFT display
:CMAp {<palette>}	Sets color palette (theme)
:CMAp:COLor:CATalog?	Returns names and RGB values of all available colors
:CMAp:COLor[:RGB] {<name>, <red>, <green>, <blue>}	Sets RGB value for the selected color
:DATA?	Reads screen image data
:MODE {<mode>}	Sets the main page appearance
[:WINDow]	
[:STATe] {<bool>}	Sets the front panel TFT display state
:TEXT {<message>}	Displays a message on the front panel TFT display
:CLEar	Clear a message on the front panel TFT display
<hr/>	
INITiate	
[:IMMediate]	Completes one full trigger cycle
:DLOG {<filename>}	Enables internal data log session
:CONTinuous {<bool>}	Enables/disables continuous transient triggers
<hr/>	
INSTrument	
[:SElect] {<channel>}	Selects the output to be programmed
:CATalog?	Returns a quoted string of the list of valid choices for the instrument channels
:FULL?	Returns a list of string – number pairs
:COUPle	
:TRACking {<type>}	Selects independent, parallel-tracking, or series-tracking mode
:DISPlay	
:TRACe[<n>] {<value>}	Selects output value on the specified display trace
:SWAP	Swaps positions of selected output values
:YT	
:RATE {<duration>}	Selects YT view sample duration
:NSElect {<channel>}	Selects the output to be programmed
<hr/>	
MEASure	
[:SCALar]	
:CURRent	
[:DC]? [<channel>]	Takes a measurement; returns the average current
:POWer	
[:DC]? [<channel>]	Takes a measurement; returns the average power
:TEMPerature	
[:DC]? {<sensor>}	Takes a measurement; returns the average temperature
[:VOLTage]	
[:DC]? [<channel>]	Takes a measurement; returns the average voltage
<hr/>	
MEMory	
:NSTATes?	Returns total number of state storage memory locations

:STATe

:CATalog?	Lists the names associated with all ten state storage locations
:DELeTe {<profile>}	Deletes the contents of a state storage location
:ALL	Deletes the contents of all state storage locations
:NAME {<profile>, <name>}	Assigns a custom name to a state storage locations
:RECall	
:AUTO {<bool>}	Specifies whether the power-down state is recalled from location 0 on power-on
:SELeT {<profile>}	Specifies which BB3 state will be used at power on
:VALid? {<profile>}	Determines whether a storage location contains a valid state

MMEMory

:CATalog [<directory>]	Returns a list of items in the specified directory (folder)
:LENGth [<directory>]	Returns the number of items in the specified directory
:CDIRectory {<directory>}	Changes the current directory
:COPY {<source>}, {<destination>}	Copies <source> to <destination>
:DATE? {<filename>}	Returns date that the specified file was last saved
:DELeTe {<filename>}	Deletes an existing file
:DOWNload	
:ABORt	Aborts current download session
:DATA :DATA {#<length>, <encoding>, <block>}	Downloads data from the host computer
:FNAMe {<filename>}	Creates or opens the specified filename for download data
:SIZE {<filesize>}	Sets information about file size used for progress bar
:LOAD	
:LIST[<n>] {<filename>}	Loads stored LIST to the specified channel
:PROFile {<filename>}	Loads stored user profile
:STATe {<filename>}	Loads the instrument setup
:LOCK {<password>}	Sets write protection
:MDIRectory {<directory>}	Makes a new directory
:MOVE {<source>}, {<destination>}	Moves or renames <source> to <destination>
:RDIRectory {<directory>}	Removes the specified directory
:STORe	
:LIST[<n>] {<filename>}	Saves specified channel LIST
:PROFile {<filename>}	Saves specified user profile
:STATe {<filename>}	Saves the instrument setup
:TIME? {<filename>}	Returns time that the specified file was last saved
:UNLock {<password>}	Clears write protection
:UPLoad? {<filename>}	Uploads data to the host computer

OUTPut

[:STATe] {<bool>}	Enables the specified output channel(s)
TRIGGered {<bool>} [, <channel>]	Controls channel output state with trigger

:MODE?	Returns the channel mode of operation
:PROTection	
:CLEar	Resets latched protection
:COUPle {<bool>}	Enables channel coupling for protection faults
:TRACk[:STATe] {<bool>}	Enables channels to operate in the track mode
<hr/>	
SIMUlator	
:EXIT	Closes simulator
:GUI	Starts simulator's GUI
:LOAD {<value>}	Sets value of the virtual load
:STATe {<bool>}	"Connects" virtual load to the channel output
:PIN1 {<bool>}	Sets value of the PIN1 input
:PWRGood {<bool>}	Sets the PWRGOOD signal state
:RPOL {<bool>}	Sets the RPOL signal state
:TEMP {<value>}	Sets the temperature sensor value
:VOLT:PROG:EXT {<voltage>}	Sets the output voltage when channel is in external programming mode
<hr/>	
SENSe	
:CURRent	
[:DC]	
RANGe[:UPPer] {<range>}	Selects a DC current measurement range
AUTO {<bool>}	Enables/disables seamless measurement auto ranging
:DLOG	
:FUNCTion	
:CURRent {<bool>}, {<channel>}	Enables/disables output current internal data logging
:POWer {<bool>}, {<channel>}	Enables/disables output power internal data logging
:VOLTage {<bool>}, {<channel>}	Enables/disables output voltage internal data logging
:PERiod {<time>}	Sets the sample period for internal data logging
:TIME {<time>}	Sets the sample duration for internal data logging
<hr/>	
[SOURce[<n>]]	
:CURRent	
[:LEVel]	
[:IMMediate][:AMPLitude] {<current>}	Sets the output current
:STEP[:INCRement] {<step>}	Sets the step of the current change
:TRIGgered [:AMPLitude] {<current>}	Sets the triggered output current
:LIMit	
[:POSitive][:IMMediate] [:AMPLitude] {<current>}	Sets the output current limit
:PROTection	
:DELay	
[:TIME] {<time>}	Sets the over-current protection (OCP) programming delay
:STATe {<bool>}	Enables/disables over-current protection on the selected

	channel
:TRIPped?	Returns status of over-current protection activation
:LIST	
:COUNT	Sets the number of times that the list is executed
:CURRENT[:LEVel]	Specifies the current setting for each list step
:DWELl	Specifies the dwell time for each list step
:VOLTage[:LEVel]	Specifies the voltage setting for each list step
:POWER	
:LiMit {<power>}	Sets the output power limit
:PROTection[:LEVel]	Sets the over-power protection (OPP) level
:DELay	
[:TIME] {<time>}	Sets the over-power protection programming delay
:STATe {<bool>}	Enables/disables over-power protection on the selected channel
:TRIPped?	Returns status of over-power protection activation
:VOLTage	
[:LEVel]	
[:IMMediate][:AMPLitude] {<voltage>}	Sets the output voltage
:STEP[:INCRement] {<step>}	Sets the step of the voltage change
:TRIGGered [:AMPLitude] {<voltage>}	Sets the triggered output voltage
:LiMit	
[:POSitive][:IMMediate] [:AMPLitude] {<voltage>}	Sets the output voltage limit
:PROGram[:SOURce] {<source>}	Sets voltage programming source
:PROTection[:LEVel]	Sets the over-voltage protection (OVP) level
:DELay	
[:TIME] {<time>}	Sets the over-voltage protection (OVP) programming delay
:STATe {<bool>}	Enables/disables over-voltage protection on the selected channel
:TRIPped?	Returns status of over-voltage protection activation
:SENSe[:SOURce] {<source>}	Sets voltage sense inputs source
<hr/>	
STATus	
:OPERation	
[:EVENT]?	Returns the value of the Operation Event register
:CONDition?	Returns the value of the Operation Instrument Condition register
:ENABle {<value>}	Enables specific bits in the Operation Event register
:INSTrument[<n>]	
[:EVENT]?	Returns the value of the Operation Instrument Event register
:CONDition?	Returns the value of the Operation Instrument Condition register

:ENABLE {<value>}	Enables specific bits in the Operation Instrument Event register
:ISUMmary<n> [:EVENT]?	Returns the value of the Operation Instrument Isummary Event register
:CONDition?	Returns the value of the Operation Instrument Isummary Condition register
:ENABLE {<value>}	Enables specific bits in the Operation Instrument Isummary Event register
:PREset	Presets all enable registers to power-on state
:QUEStionable [:EVENT]? :CONDition? :ENABLE {<value>}	Returns the value of the Questionable Event register Returns the value of the Questionable Condition register Enables specific bits in the Questionable Event register
:INSTrument[<n> [:EVENT]? :CONDition? :ENABLE {<value>}	Returns the value of the Questionable Instrument Event register Returns the value of the Questionable Instrument Condition register Enables specific bits in the Questionable Instrument Event register
:ISUMmary<n> [:EVENT]? :CONDition? :ENABLE {<value>}	Returns the value of the Questionable Instrument Isummary Event register Returns the value of the Questionable Instrument Isummary Condition register Enables specific bits in the Questionable Instrument Isummary Event register

SYSTem	
:BEEPer[:IMMediate] :STATe {<bool>}	Issues a single beep immediately Enables beeper function
:KEY :STATe {<bool>}	Enables click tone for local control
:CAPability?	Returns an <instrument_specifier>
:CHANnel [:COUNt]? :INFOrmation :AHOur TOTal?	Returns the number of output channels
:CURRent? :ONtime LAST? TOTal?	Returns output current capability
:POWer? :PROGram?	Returns time passed after last output enable Returns channel's total active time Returns output power capability Returns programmable features of the channel

:VOLTage?	Returns output voltage capability
:WHOur	
TOTal?	Returns channel's total delivered energy in Wh
:MODEl?	Returns the channel model and version name
:SLOT?	Returns the channel slot number
:SNO?	Returns the channel serial number
:COMMunicate	
:ENABLE {<bool>, <interface>}	Enables the remote interface
:ETHernet	
:ADDRess {<ip_address>}	Sets the static LAN (IP) address
:DHCP {<bool>}	Enables the use of the Dynamic Host Configuration Protocol (DHCP)
:DNS <ip_address>	Sets the IP address of the DNS server.
:GATEway {<ip_address>}	Sets the IP address of the default gateway
:MAC?	Returns the MAC address
:PORT {<number>}	Sets the port number
:SMASk {<mask>}	Sets the static subnet mask
:NTP {<server>}	Set s NTP service server address
:RLState {<state>}	Places the instrument in remote or local mode
:SERial	
:BAUD {<speed>}	Sets the baud rate (speed)
:PARity {<parity>}	Sets the parity mode
CPU	
:INFOrmation	
:ETHernet	
:TYPE?	Returns the type of Ethernet controller
:ONtime	
LAST?	Returns time passed after last power on
TOTal?	Returns BB3's total active time
:TYPE?	Returns the type of CPU
:MODEl?	Returns the control board model name
:DATE {<yyyy>,<mm>,<dd>}	Sets the date of the system clock
:DIGital	
:INPut:DATA? [<pin>]	Reads the state of the digital port pins
:OUTPut:DATA [<pin>] {<state>}	Sets the state of the digital port pins
:PIN<n>	
:FUNCTion {<function>}	Sets the selected pin's function
:POLarity {<polarity>}	Sets the selected pin's polarity
:TOUTput	
:BUS[:ENABLE] {<Bool>}	Enables/disables BUS-generated triggers on digital pins
:ERRor	
[:NEXT]?	Queries and clears errors from the error queue

:COUNT?	Queries the error/event queue for the number of unread items
:INHibit?	Queries system inhibit state
:KEY	
:DEFine {<key>, <block>}	Sets the definition of the key
:DELete {<key>}	Removes the definition of the key
:KLOCK	Disables front panel [lock/unlock] icon
:LOCAL	Places the BB3 in the local mode
:PASSWORD	
:CALibration	
:RESet	Resets the calibration password to initial value
:FPANel	
:RESet	Resets the front panel lock password to initial value
:NEW {<old>, <new>}	Changes system password
:POWER {<bool>}	Enters the BB3 into the standby mode
:PROTection:TRIP {<bool>}	Enters the BB3 into the standby mode in case of protection trip
:REMote	Places the BB3 in the remote mode
:RWLOCK	Places the BB3 in the remote mode and disables front panel [lock/unlock] icon
:TEMPerature	
:PROTection	
[:HIGH]	
[:LEVel] {<temperature>[, <sensor>]}	Sets the OTP value
:CLEAr [, {<sensor>}]	Clears the latched protection status of the over-temperature protection (OTP)
:DELay	Sets time-out period
[:TIME] {<delay>[, <sensor>]}	Sets the OTP programming delay
:STATe {<bool>[, <sensor>]}	Enables/disables OTP on the selected temperature sensor
:TRIPped? [<sensor>]	Returns status of OTP activation
:TIME {<hh>,<mm>,<ss>}	Sets the time of the system clock
:DTS {rules}	Defines daylight saving time (DST) rules
:ZONE {zone}	Defines time zone
:VERSion?	Returns the SCPI version number

TRIGger

[:SEQUence]	
[:IMMediate]	
:DELay {<delay>}	Sets the time delay between the detection of a trigger event and the start of any corresponding trigger action
:EXIT	
:CONDition {<condition>}	Sets channel's condition when LIST execution stopped
:SOURce {<source>}	Sets the trigger source

:DLOG

[:IMMediate]

:SOURce {<source>}

Sets the internal data logger trigger source

