

# CCDciel

## English documentation

Edited: April 22 2018

Last version is available from the wiki at  
<http://www.ap-i.net/ccdcie/en/documentation/start>

**CCDciel is a free CCD capture software intended for the amateur astronomer.**


CCDciel has all functionality required for advanced imaging of celestial objects including sequences for fully automated unattended operation. But it is also possible to make simple capture in a manual way.

For devices connection it uses the [INDI](#) and [ASCOM](#) standards drivers. It can control the CCD/CMOS camera, focuser, filter wheel, rotator and telescope mount and uses image resolving software such astrometry.net for accurate positioning. It can serve both the beginner astro photographer as the advanced who can take a nap while the equipment is imaging.

You can use CCDciel on Windows, macOS or Linux.

The program is still in beta version but it is now quit stable and run smoothly on every platform

In any case I will appreciate your help for testing this software and reporting any bug or other problem you may encounter.

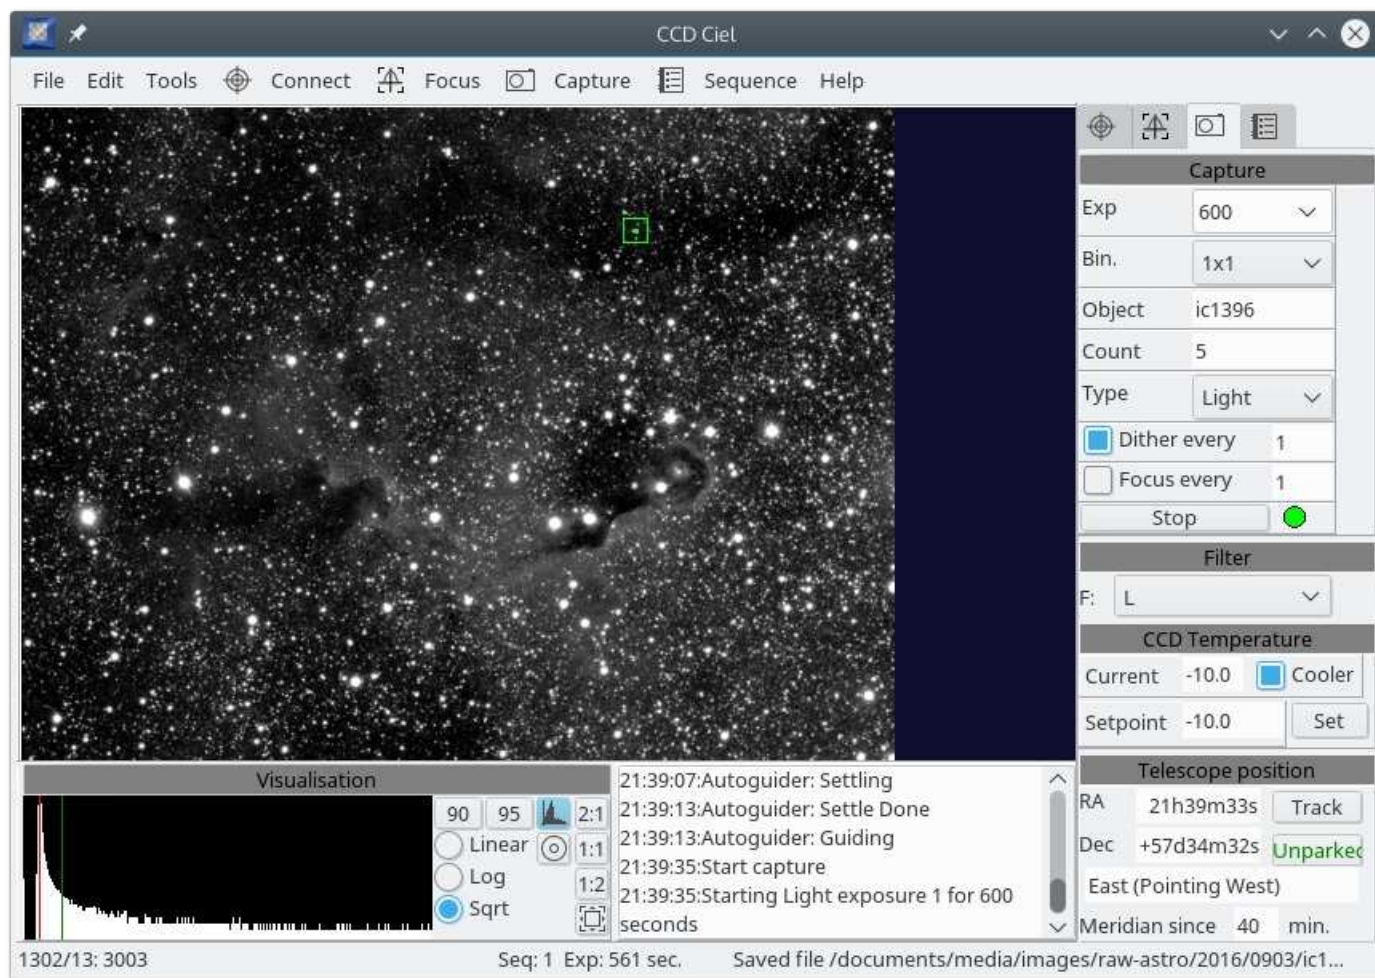

A copy of [the program documentation](#) in pdf format is included with the program.

To install the program, look a the [specific instructions](#) for your computer and [download from SourceForge](#) the version you need, always get the latest version as it is frequently improved!

The source code is available from [GitHub](#)

[Contact](#)

# Documentation

## Tutorial

Start by this tutorial to quickly get an idea how the program work.

- [The program screen](#)
- [Connecting the equipment](#)
- [Global configuration](#)
- [Focusing](#)
- [Simple capture](#)
- [Automated sequence](#)

## Reference Manual

This give detailed information on every program aspect.

The pages follow the order of the main menu.

- [Menu File](#) with the devices configuration
- [Menu Edit](#) with the preferences settings
- [Menu Tools](#) and toolbox
- [Menu Help](#)
- [Right click menu](#)
- [Status bar](#)





## Installation

To install the software look at the page corresponding to your computer.

- [Installation on Ubuntu, Debian](#)
- [Installation on Linux](#)
- [Installation on Windows](#)
- [Installation on macOS](#)

## External dependencies






You must install this softwares to take full advantage of CCDciel, at least one of the equipment driver, one for plate solving, one auto-guider and one planetarium.

- **Equipment driver**
  - [ASCOM](#)
  - [INDI](#)
- **Plate solving**
  - [Astrometry.net](#)
  - [Star Locator Elbrus](#)
  - [PlateSolve 2](#)
- **Auto-guider**
  -  [PHD2](#)
  -  [Lin\\_guider](#)
- **Planetarium**
  -  [Cartes du Ciel](#)
  -  [Halo Northern SKY](#)

## Credit

### Tools

CCDciel make use of the following development tools:

-  [Free Pascal](#) compiler
-  [Lazarus](#) IDE and library
-  [BGRABitmap](#) component
-  [Synapse](#) library
-  [WCSTools](#) library

### Developer

- Patrick Chevalley
- Han Kleijn

## License

Copyright (C) 2015-2017 Patrick Chevalley  
<http://www.ap-i.net/ccdciel>


This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 3 of the License, or (at your option) any later version.

 <https://www.gnu.org/licenses/gpl.html>

# Tutorial

## 1- The program screen

When you start the program you see the following screen:

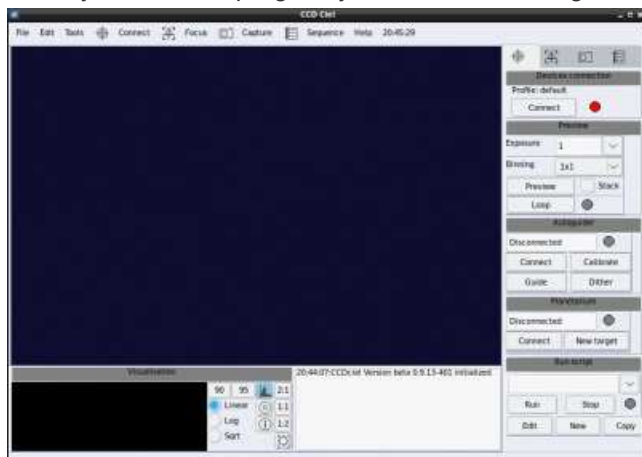

On the top you have the standard menu: **File**, **Edit**, **Tools**, **Help**, and four menus with a icon: **Connect**, **Focus**, **Capture** and **Sequence**. The four menus with icons are the same as on the left tabbed menus.

These four tabbed menus are used for connecting the equipment, focusing the camera, take a capture or run a sequence of operation.


On the bottom left there is the **visualisation** control for the picture preview and on the right a text log with activity messages.

The taken or loaded images will be displayed in the middle.

The plate solving functions are available from the image **right click menu**.

The layout is under **Tools** customisable for either a small monitor or laptop. For example if you do not use a motorized rotator, you can uncheck the rotator entry under tools to simplify the Capture tab.

You can drag and drop every tool to another part of the screen. Just hold left mouse button down and drag the tool title to one of the screen border and drop it by releasing the mouse button.

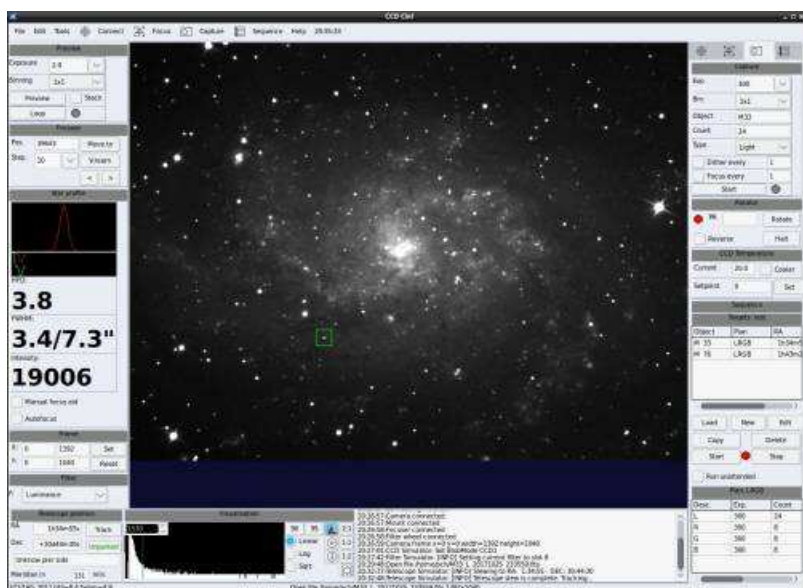

If you have a large monitor, you can make all the controls visible at the same time without using the tabs.

**Next tutorial >>**

# Tutorial

## 2- Connecting the equipment

When you are a first time user, you have to select first the correct equipment drivers and set some settings.


First step is to select INDI interface (typical in Linux) or the ASCOM interface (typical MS-Windows) to communicate with your camera, mount and any other equipment.

The program will automatically open the **File**→**devices setup** menu.


Create a new profile for your equipment.

All the devices and all the program options will be stored in this profile, allowing to have completely different settings for your different equipments or locations.

Select either **INDI**

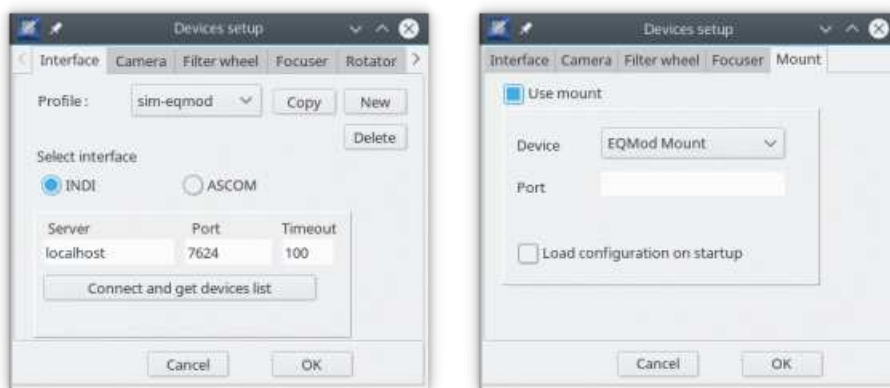

or **ASCOM** interface.

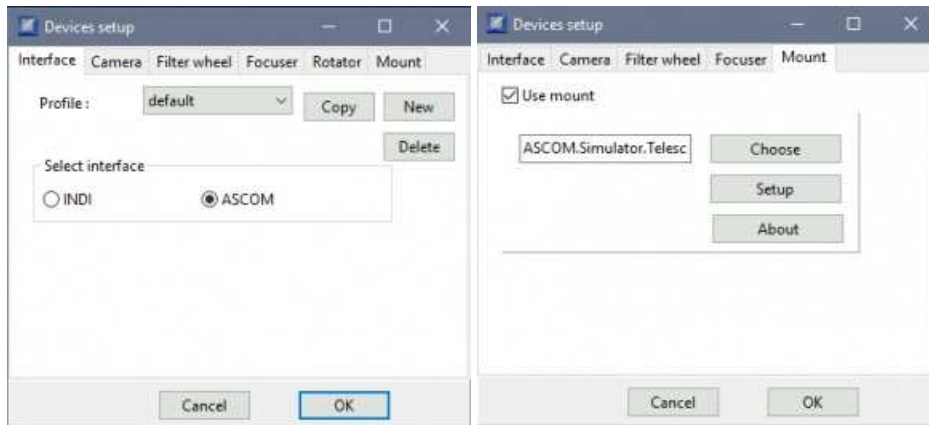

Select also the mandatory camera driver and other equipment like mount or focuser but that can also be done later.

Click okay and program will create a new default profile for your equipment. All the devices and all the program options will be stored in this default profile. You could later create an additional profile with different settings, equipment or location.


Next menu will show the default options. The first thing to do is to set the capture folder to something like like in Linux to /home/username/capture which or for windows from the default C:\ to something like C:\CCDciel

When ready click the OK button.

Select the left tab (pointer icon) and locate the Connect button at the top. The red dot indicates no connection to any device. Below the connect button you will see the mandatory camera, mount if selected and any other equipment.



Click on Connect and after a few seconds the light should change to green if all listed equipment is connected.

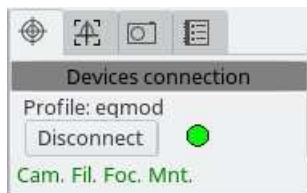

In the connection phase, the indication light will first turn orange and finally green if all equipment is successfully connected. In case of a connection failure or if an error occurs, the indication light will turn red. All program activities and errors will be logged, so in case of device connection problem have look to the [log](#) for an error indication.

Devices with a connection problem could be disabled temporary in **File**→**devices setup** menu. As a bare minimum only an imaging camera is required to operate.

[Next tutorial >>](#)


# Tutorial

## 3- Global configuration

You access the global configuration from the menu **Edit** → **Preferences**.

All this options will be stored in the current profile.

There are a number of options for every part of the program and many can be **examined later**.

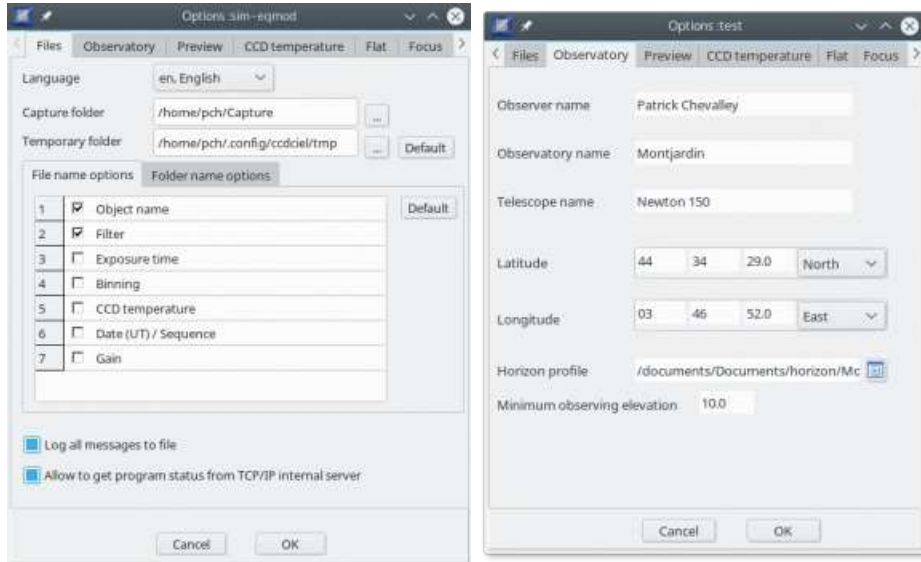

To start it is essential you set:

1. a valid folder for the captured images.
2. be sure the temporary folder path contain only ASCII characters.
3. your observatory latitude and longitude since they are used in several program functions.

**Next tutorial >>**



# Tutorial

## 4- Focusing

### Manual focus

Point your telescope somewhere high in the sky and set the **Preview** exposure time and binning. Click on the Loop button.

If you are way out of focus start first with a long 10-15 seconds exposure time to see some large out of focus stars disk and move the focuser to reduce the size. If you near the correct focus reduce the exposure time to 1 seconds less.


Preview	
Exposure	5
Gain	ISO 800
Binning	1x1
Preview	Stack <input type="checkbox"/>
Loop	<input type="radio"/>

Leave the preview looping and click on the Focus tab to show the **focuser** and **star profile**

Double click on a star in somewhere the middle of the captured image. Check the recorded star intensity for saturation or have look to the star profile. The intensity value should be smaller then the sensor maximum value of typically 65535. In case of saturation select a fainter star or reduce the exposure time. Checkmark the "Manual focus aid" to magnify the star image.


Use the focuser buttons or manually adjust the focuser to make the star image as small and bright as possible. It could be beneficial to use a very short exposure time to reduce the seeing and have a quick visual feedback.

When ready uncheck "Manual focus aid".

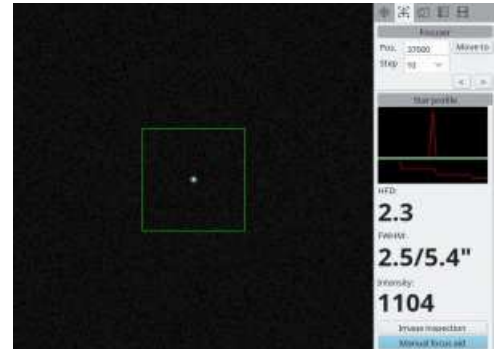

### Auto-focus

To configure the auto-focus use the **focuser calibration** wizard to help you set the different parameters specific to your setup.

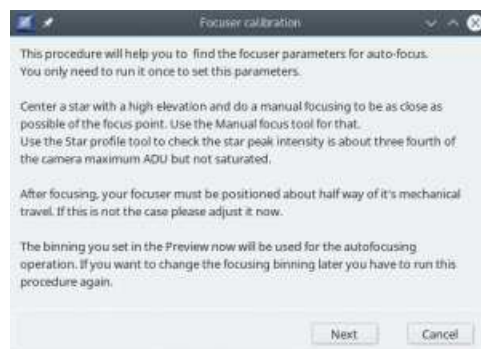

Later you can refine them in the **auto-focus preferences**.

[Next tutorial >>](#)

# Tutorial

## 5- Simple capture

Open the **Capture** tab and set the required options:

- The exposure time
- The binning
- The name of the object
- The number of exposures to take
- Be sure the type is Light, other setting may let the shutter closed!

You can also choose to dither between exposures and to regularly adjust the auto-focus.

Dither introduces a small artificial cyclic drift typically required for CMOS sensors when imaging very faint objects. It helps to smoothen out unequal sensitivity of the individual pixels. Leave this option off in the beginning

Binning combines pixels if they are too small to record any details and reduces noise. Typically you set this on 1×1 or for large sensors on 2×2.

If you have a **filter** wheel you can specify the filter to use.

You can specify the **frame** dimensions if you don't want to use the full sensor surface.

If you have a rotator the green/red light indicate if it is **calibrated** or not. Then you can set the rotation angle.

And if you can control the **CCD temperature** enter the desired value in Setpoint, and click the Set button.

When all settings are correct click on the **START** button to start capturing.

The telescope box will indicate the telescope position, the park and tracking status and the remaining time to reach the **meridian**.



The **status bar** shows the image number (count) in progress and the remaining exposure time

Seq: 1 Exp: 293 sec.

After each exposure is finished, the image is shown and the file is saved according the settings. A message in the status bar indicates the last saved file

Saved /home/pch/Capture/M27\_G\_20160522\_203117.fits 1380x1040

it will continue for the number of exposures (=count) set.

After finishing you could change the filter and start the next series. Or automate it fully using a sequence.

Next tutorial >>

# Tutorial

## 6- Automated sequence

Sequences allows you to fully automate the imaging. At the sequence tab you can specify all steps required for unattended operation.

The sequence example on the right will first image the objects M13 and M92, wait for dawn to take some sky flat and finally park the telescope.

Attached to the M13 and M92 objects is the same LRGB-4H plan specifying 24 images using a luminance filter (L), 8 images using a red filter (R) and finally 8 images using a blue filter (B). All images with an exposure of 300 seconds and the total duration of the plan is around 4 hours.

After that it wait for the dawn to take a series of sky flat.

The last object in the list is a “Script” with a plan specifying how to park the telescope.


Running this sequence should keep the equipment unattended busy for around 8 hours.

To take full advantage of this automation you need to configure and test individually:

- the [astrometry resolver](#) for plate solving and the [slewing](#) options
- the [focuser](#) and [autofocus](#) options and [calibration](#)
- the [rotator](#) connection and calibration.
- the [autoguider](#) connection and preferences
- the [planetarium](#) connection to help to set the object coordinates
- the [automated meridian flip](#) options
- the [flat automatic exposure](#) options

**And most important you must be sure your telescope mount and all the equipment include a way to protect themselves against an unwanted operation. This include hardware slew and tracking limit on the mount.**

You can read more on how to edit a sequence in the specific [sequence](#) page.

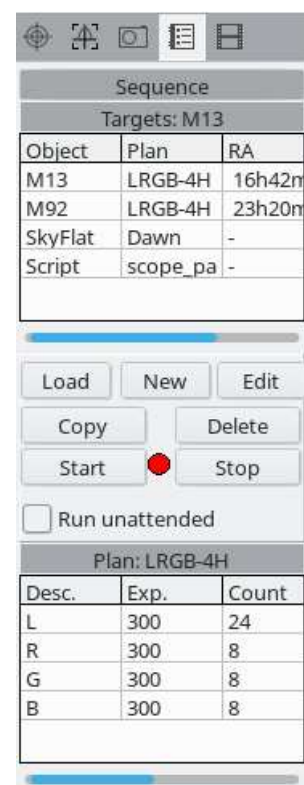

## File Menu

The **File** menu includes the following options:

- Devices Setup
- Bad pixel map
- Focuser calibration

- 
- Open FITS file
  - Open picture file
  - Save FITS file


- 
- Open reference image
  - Clear reference image

- 
- Quit

# Device setup

Open this window from the menu File → Device setup before to connect to any devices.

## Interface

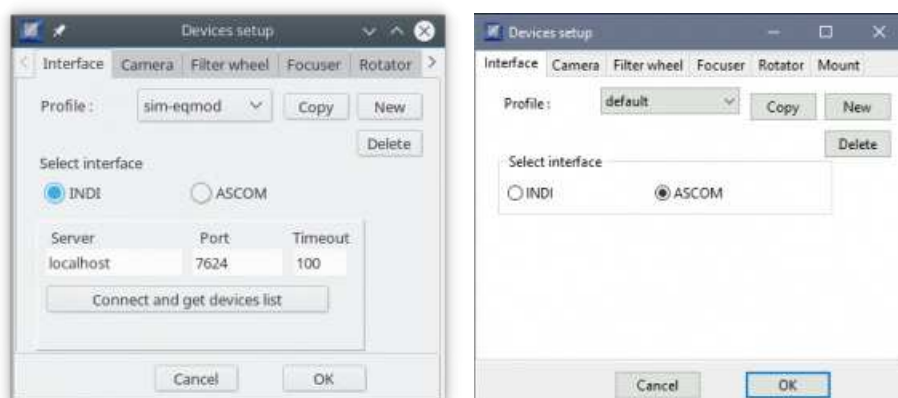

The first tab “Interface” let you select the kind of drivers you want to use, INDI or ASCOM if running on Windows.

Create a new profile for your equipment.

All the devices and all the program options will be stored in this profile, allowing to have completely different settings for your different equipments or locations.

The **Copy** button copy the current profile to a new one, allowing to change a piece of the equipment.


The **New** button create a totally empty profile, with no equipment and no options. This can be use to create a profile for another observatory and be sure to not left behind an incompatible option.

For INDI you have to enter the network name or IP address, and the port of the INDI server, then click the button “Connect and get devices list” to make the program know which devices are available.

For ASCOM there is no additional information.

Note that the program will close and restart if you change between INDI and ASCOM.

## Camera

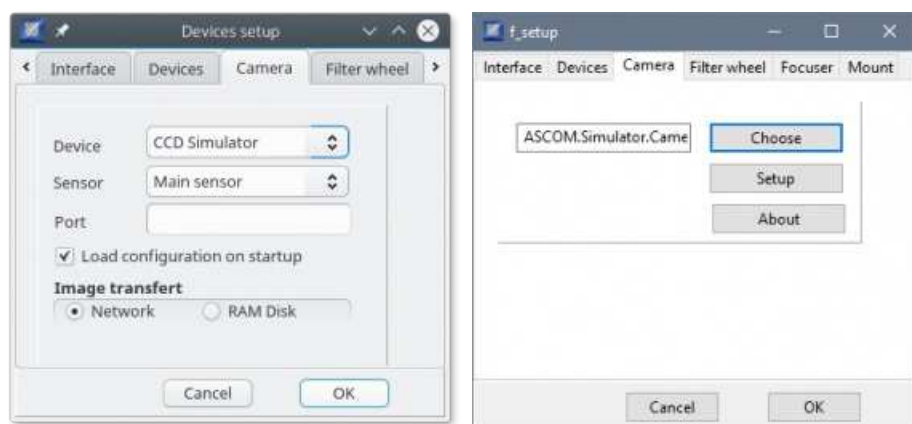

Select the camera to use with CCDciel, from the dropdown list for INDI or using the ASCOM chooser.

A camera is mandatory so you cannot leave this page unconfigured.

For ASCOM you can click the Setup button to access the driver options now before the camera is connected.

For INDI the “sensor” field is to select the sensor to use for dual-chip camera, you probably always want “Main sensor” here.

Check the corresponding box if you want to automatically load the INDI saved configuration when the device is connected.


Then select how you want INDI to transfer the image data:

- **Network** the normal transfer mode you can use with local and remote INDI server.
- **RAM disk** may improve the performance if you use a local INDI server. Be sure the path you set point to an in memory disk, it's size need to be two time the size of one of your FITS image.

For INDI the driver options are available from the menu Edit/INDI settings.

---

## Filter wheel

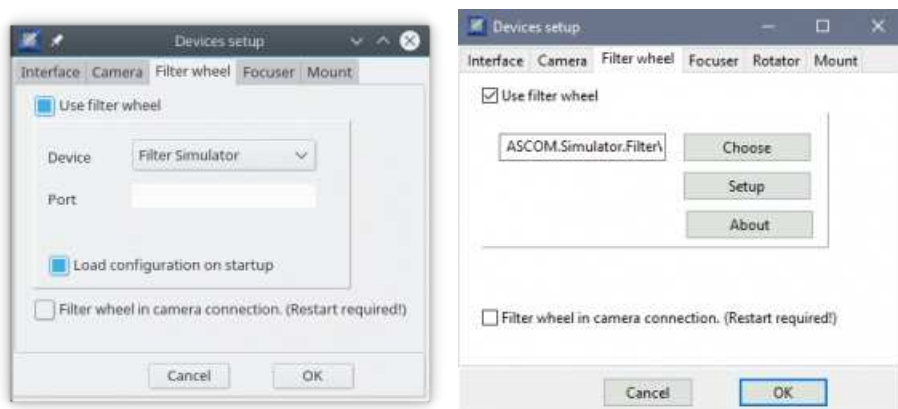


Check "Use filter wheel".

Select the filter wheel to use with CCDciel, from the dropdown list for INDI or using the ASCOM chooser.

Or check the corresponding box if the filter wheel is commanded by the camera driver.

---

## Focuser

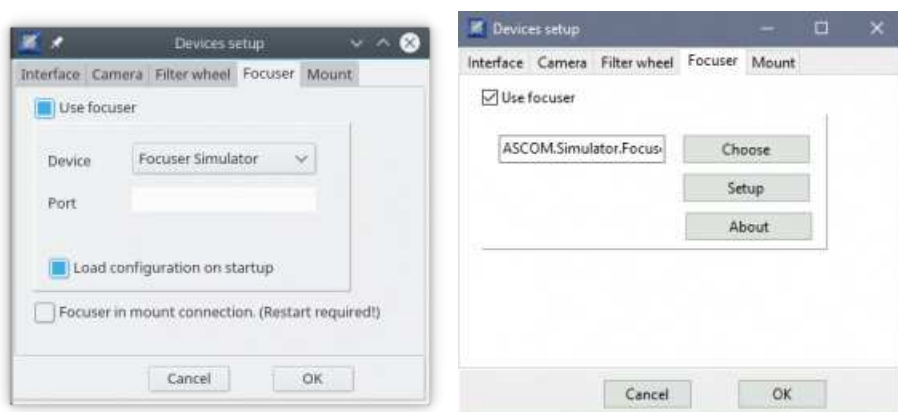


Check "Use focuser".

Select the focuser to use with CCDciel, from the dropdown list for INDI or using the ASCOM chooser.

Or check the corresponding box if the focuser is commanded by the mount driver.

## Rotator

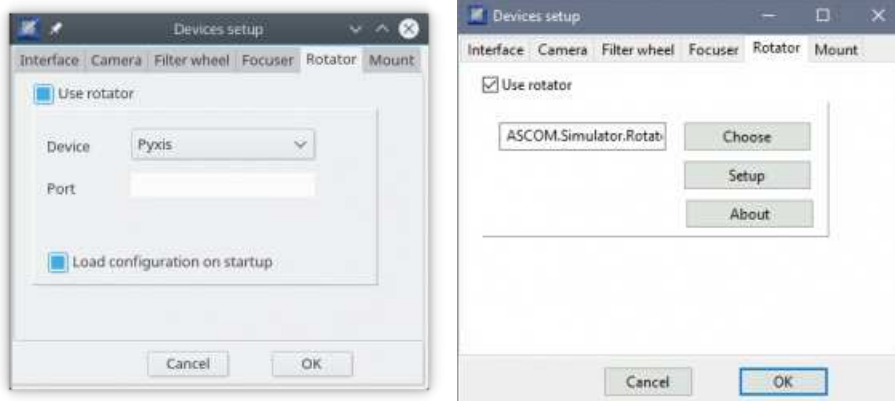


Check “Use rotator”.

Select the rotator to use with CCDciel, from the dropdown list for INDI or using the ASCOM chooser.

---

## Mount

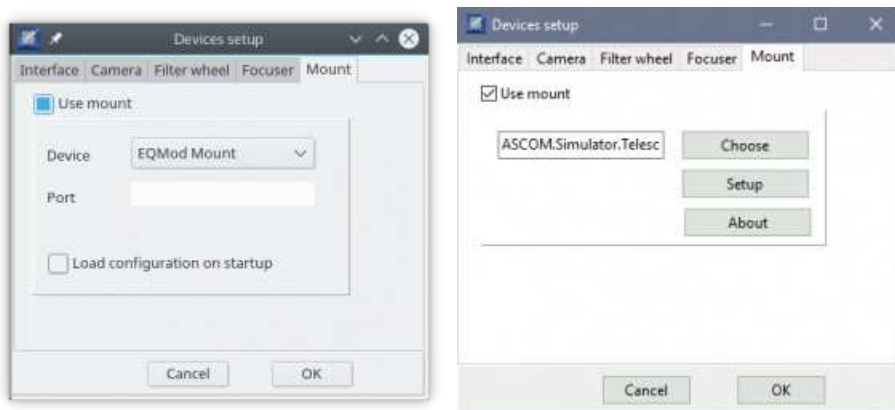


Check “Use mount”.

Select the telescope mount to use with CCDciel, from the dropdown list for INDI or using the ASCOM chooser.

---

## Watchdog

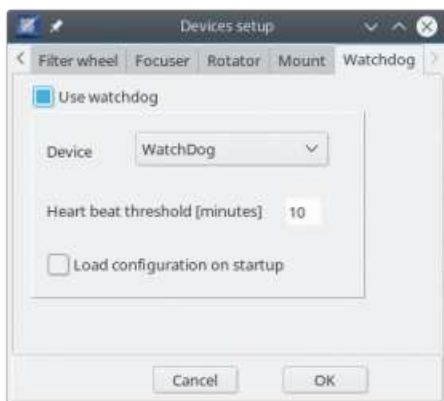

Check “Use watchdog”, select the INDI driver and set the threshold value in minutes.

The [watchdog](#) is a specific INDI driver that can park the mount and the dome if the connection is lost with CCDciel for more than the threshold time limit.

There is no similar function when using ASCOM drivers.

Click OK after you finish your setting.



## Bad/Hot pixel map

The bad pixel map will prevent the auto-focus or slewing function locking on a hot pixel rather than on a star.

The bad pixel map will be only applied on preview images, focus or slewing images. It is not applied on captured images. Those images are not altered.

Use the menu **File** → **Bad pixel map** → **Apply to current image** if you want to apply the bad pixel map to an image you load in the program.

You have two options to create, using the camera directly or using a processed dark frame. The second option is preferred because the processed dark has less noise and you can use a lower **sigma** value to detect fainter deviant pixels.

### Create from the camera

Procedure:

1. Camera should be connected and cooling on if available.
2. Set the required binning in **Preview tool**. Use the same binning as for the focus and slewing
3. Select an exposure time between 10 and 60 seconds.
4. Cover the camera or telescope similar as taking a dark image. If your camera has a shutter it will remain closed during the exposure.
5. Select menu **File** → **Bad pixel map** → **Create from camera**
6. Click Continue. A dark will be taken and number of hot pixels will be reported in the log window.



### Create from a dark file

Select menu **File** → **Bad pixel map** → **Create from dark file**

Select the dark file from the file dialog.

### Clear the bad pixel map

To remove/clear the bad pixel map select the menu **File** → **Bad pixel map** → **Clear bad pixel map**

### Check the bad pixel map

Take a preview image and check if the bright hot pixels are suppressed.

Or open a saved raw image and use the menu **File** → **Bad pixel map** → **Apply to current image**

If you still see some not removed hot pixel you can retry the procedure after setting a lower value for **sigma**.

## Possible errors

**Error:** If you get an error message: “too many hot pixels”, increase the sigma threshold value in the menu **Edit** → **Preferences** → **preview** options. If successful the program log will report the number of hot pixels suppressed.



A typical threshold value is 5 for CCD and 8 for a modern CMOS sensors. Decrease the threshold value if you want suppress more hot pixels. Normally you should suppress maybe 5 to 30 hot pixels but you can go much higher.

## Focuser calibration


This function help you to set the **auto-focus parameters** specific to your focuser, telescope and camera because it is not immediately evident what to set for all this numbers.

The principle is you start by centering and manually focusing a star that is used by the procedure to find how the star diameter change with an increasing movement of the focuser.


At the end it propose you new auto-focus parameters you can save to the configuration.

If you use an absolute position focuser it set to use the V curve focusing method and give you the opportunity to learn a new curve using the same star you already centered in the image.

To start the procedure select the menu **File → Focuser calibration**

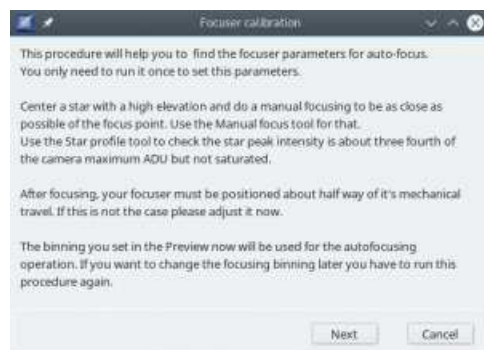


The first screen give you information about centering, focusing and correctly exposing the star. Do it now, before to click the Next button.

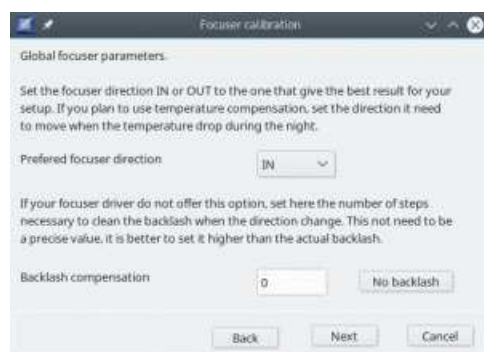

The next screen let you select the direction you want to move the focuser in the auto-focus operations. Depending on you setting the focuser can work better when moved in or out of focus. If you want to configure the temperature compensation, set the direction to compensate when the focuser cool down during the night.

If the focuser need a backlash correction you can enter the value now. But be sure to let it disabled if the compensation is done elsewhere.


Indicate the number of additional steps to use for the compensation, this must be greater than the actual backlash, don't hesitate to use a large value.

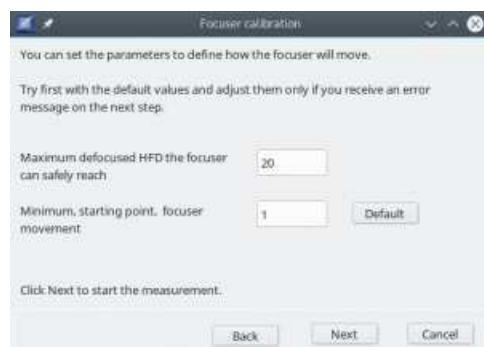

Then it offer you to change two measurement parameters, the maximum defocused star diameter (HFD) it will try to reach, and the initial movement of the focuser in step.

You can change the first parameter if you know what your equipment can achieve, otherwise keep the default and follow the recommendation if the first try fail.

The minimum movement is not really important to change because any way the program will double the value until it see enough change in the star diameter. You can just save a few time if you know your focuser need more steps even for fine focus.

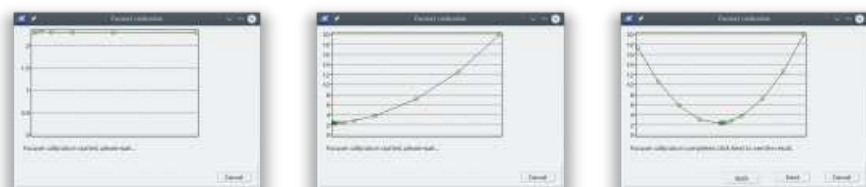

It start slowly, just wait until it reach the maximum diameter.

Then it start to move the focuser on the opposite side, much quickly as it know what speed to use.

You can check if the curve is symmetrical and as not evidence of gross error.

Param	Value	Param	Value
Binning	1x1	Autofocus method	V curve
Start HFD	16	Vcurve center	17987
Near HFD	12	Vcurve half width	716
Near num	3	Vcurve N steps	15
Tolerance	7.9	Dynamic num	7
Min. SNR	3.0	Dynamic movement	134
Star detection window	80	Iterative Max. speed	200
Focus window	400	Iterative Min. speed	150

Click Next to save this values to the configuration for this profile.

Next Cancel

Now the program know how your focusing system react.

You can review the parameters before to click Next to save them to the configuration.

Later you can view or change this values in the [auto-focus parameters](#).

The data are now recorded in the profile.

You can review the other auto-focus options using the menu:  
Edit / Preferences / Autofocus.


If the Vcurve method is active, you need to learn the curve using the next window that will open after you close this one.  
You can also do this learning later using the button V-learn in the focuser tool.

Back Close

The procedure is completed and you can close this window.

With an absolute position focuser the focusing method is set to Vcurve and now you must learn a new curve for the new parameters.

The **Vcurve learning** automatically open, already filled with the correct setting. Do not change any value and just click the **Learn** button and after it complete click the **Save** button.

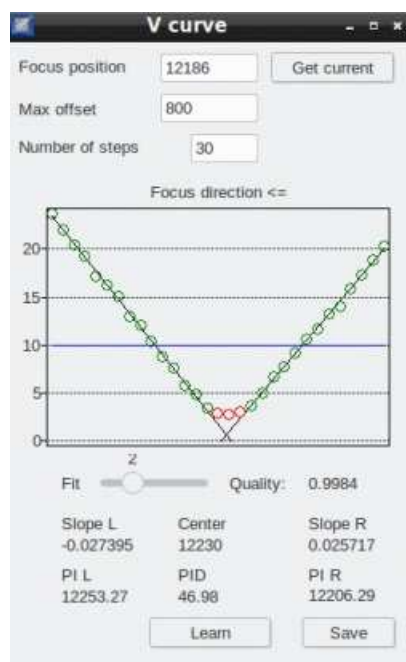

The initial setting is now completed.

You can now open the **auto-focus parameters** and without changing any of the detailed parameters you can change the auto-focus method between Vcurve and Dynamic depending on your preferences.

Select also how you prefer to run the auto-focus automatically as part of a sequence.

You have the choice to stay at the current target position and use whatever stars are present, or slew to a nearby star of fixed magnitude.

Later you can also alter this choice target by target in the sequence editor.

If you use the Vcurve method it is strongly recommended to slew to a focus star.

# Open FITS file

From the menu File → Open FITS file.

This let you load a FITS file in the preview window instead of taking the image with the camera.

This is useful if you want to review a previous shot from the capture sequence, or to play with some other image.

Note this is not a multi-purpose FITS file viewer. It is intended to display images from the camera but it could fail displaying FITS files from other programs.

# Open picture file

From the menu File → Open picture file.

This let you load an picture file in one of the following format: **png, bmp, jpg, tif, gif, tga**.

This support monochrome picture both 8 or 16 bit per pixel, or color picture 3×8 or 3×16 bit per pixel.

The image is converted in 16 bit FITS format to load it in the preview window.

If you want you can then save to a file in FITS format using the menu **Save FITS file**.

This is useful if you want to review a previous shot from the capture sequence, or to play with some other image.

# Save FITS file

From the menu File → Save FITS file.

This let you save to a FITS file the image in the preview window.

This is not used part of the capture sequence as the files are automatically saved, but this can be useful to save an image taken with the Preview function or loaded with File → Open FITS file.


Be careful this Preview image can be processed for bad pixel if you create a [bad pixel map](#).



## Reference image

You can load a reference image of the object you want to capture to adjust the position of the telescope and the rotation of the camera. This is very useful to continue a sequence over many night.

You can adjust the display threshold and the color of the reference image in the **preview** options. Normally you want the threshold to display only the stars from the reference image.

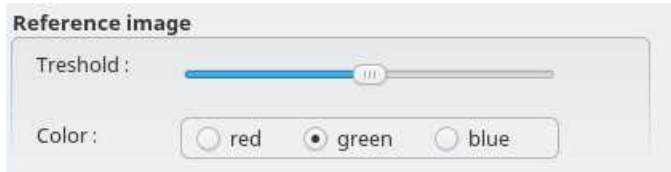

To load the image use the menu **File / Open reference image**

Then start a preview loop, it show the new image over the reference.



You can now move the telescope or rotate the camera to match the reference.

When you are satisfied with the result you can remove the reference image from the menu **File / Clear reference image**

### Tips:

To help to center the telescope open first the reference image with File / Open FITS file. Right click on the image and select "Resolve and slew to image center". After the telescope stop slewing process as above to adjust the rotation.

# Quit

From the menu File → Quit.

Exit the program and save the configuration.

If the devices are connected you are asked if you want to disconnect them.

## Edit Menu


The **Edit** menu consists of the following items:

- Preferences
- INDI settings
- View FITS header

# Preferences

From the menu Edit → Preferences. Set the global preferences and options for the program.

## Files

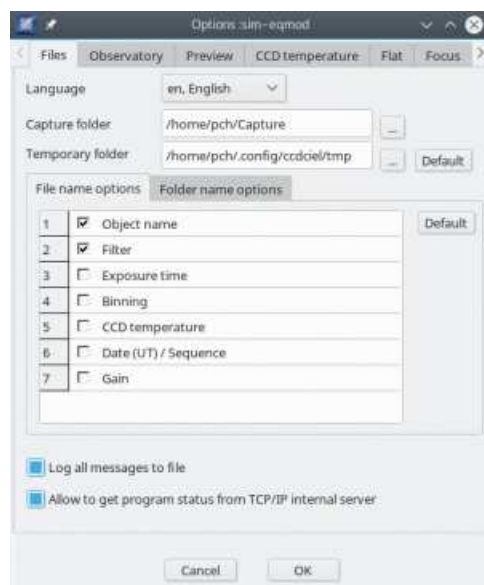

### Language

You can change the program language from the list if you prefer to use another language than the one selected automatically. The program must be restarted after changing the language.

### Capture folder

The base capture folder should be specified. The other configured sub-folder are created under this one.

### Temporary folder

Normally you not need to change the temporary file folder. This is only required if the default path based on your user name contain accentuated non-ASCII characters. Be sure you specify a path with only ASCII characters.

### File and folder name

You can specify how the image files are named and if they are stored in named folders. A typical imaging session will produce a great number of files so it is important to preserve the details for later processing.

One way of working is to make subfolders based on object name and select for file names all details; object name, the filter, a date sequence, exposure time, binning. This is all depending on personal preferences and image processing software used later.

For **folder name** you have the choice between two date. One to make a folder with the same UT time as for the file name, the other is based on local time and change at noon to allow to put all the files for a given night to the same folder.

For **file name**, if Date/Sequence is checked the UT date and time is appended. If it is not checked a sequence number is appended to make the file unique.

You can reorder the different elements with a mouse drag and drop of the sequence number column.

### Journaling

At the bottom you can select to save all log messages to a file for further inspection or debugging. it is recommended to always let it checked.

You can look at the log using the function in the [Help](#) menu.

If this option is checked it also save the images in the case the auto-focus fail to find stars, they can be used later to help to adjust the parameters.

The log file and failed auto-focus images are conserved for a period of 30 days, then they are automatically removed.

And you can activate a TCP/IP [server](#) to get remotely the status of CCDciel

## Observatory



Options test

< Files Observatory Preview CCD temperature Flat Focus >

Observer name: Patrick Chevalley

Observatory name: Montjardin

Telescope name: Newton 150

Latitude: 44 34 29.0 North

Longitude: 03 46 52.0 East

Horizon profile: /documents/Documents/horizon/Mc

Minimum observing elevation: 10.0

Cancel OK

### General information

The informations on top will be set in each FITS file for the OBSERVER, ORIGIN and TELESCOP keyword.

### Observatory location

The latitude and longitude of the observatory is used to get the Alt/Az position of the object, or for the scope\_alignment script. It is mandatory you set them before you can use the timing functions in the sequence planner.


### Local horizon

The “Horizon profile” and “Minimum observing elevation” are used to compute the object rise and set time in the [sequence planner](#). If this values are set the rise/set time are relative to this limits.

You can set only one value or both. In the last case the highest elevation is used.

The horizon profile file is the same as the local horizon line in [Skychart](#).

## Preview

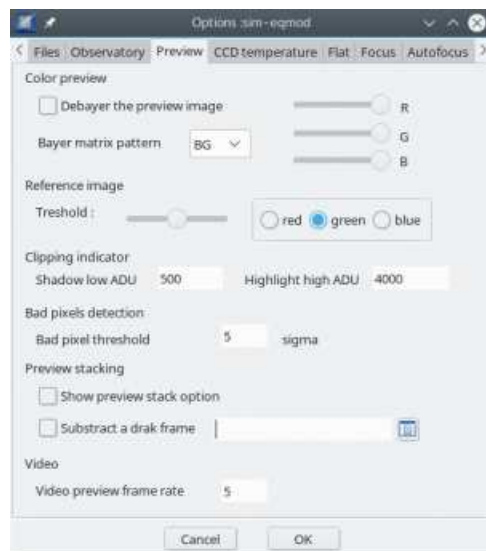

This settings affect only the **preview**, the FITS files are always recorded in RAW format to allow further preprocessing.

### Color

If you use a color camera you can **debayer** the preview image by checking the corresponding box and selecting the color pattern for your sensor. If you don't know what to select, make a test on a colorful subject on daytime. You can also do some color balance with the cursors on the right.

### Reference image

The **reference image** help you to frame a previous image, for example to continue a sequence. Select the threshold and color for the display of the **reference image**.

### Image clipping

The image **clipping indicator** level. You can set the low and high threshold in ADU for this indicator.

### Bad pixel map

The **bad pixel map** prevent the auto-focus function to lock on a hot pixel. Select the threshold for detection of hot pixels for the **bad pixel map**.

### Stacking

**Preview stacking** allow you to stack the preview frames in real time. This feature is normally use for demonstration in public event.

You can select to disable this option to not risk an unwanted use during your imaging session.


Using a **dark frame subtraction** before the image addition improve the result quality.

This dark image must always be in 16bit format, even for a 8bit camera.

### Video

Select the preview rate for the **video**. **Video** require a suitable camera and is available only with INDI devices.

## Camera

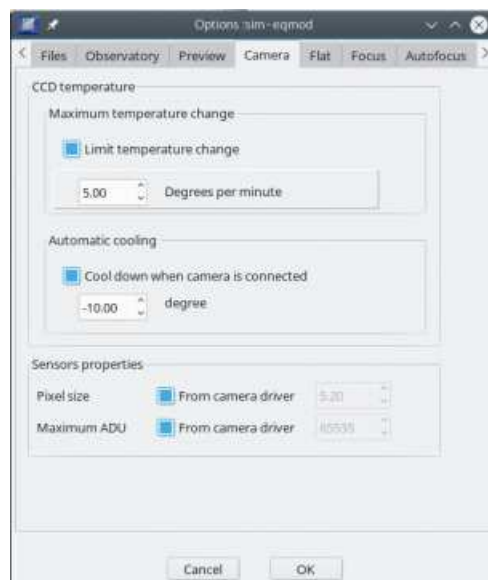

### CCD temperature

Configure how you prefer to cool down and warm up you CCD sensor.

Consult your camera documentation to know if you need to limit the temperature change.  
In this case check "Limit temperature change" and indicate the maximum rate in degree (Celsius) per minute.

Check the corresponding box if you want your camera to start cooling as soon it is connect to the program and indicate the target temperature you want.

### Sensor properties

Enter the camera pixel size and maximum ADU, or if applicable for your driver, check the box to get it automatically.  
The maximum ADU is used to avoid saturated stars during autofocus.  
The pixel size is required to speedup the astrometry solving by estimating the image scale.

---

## Flat



### Automatic flat

Configure the method to use to capture a flat series from a sequence.

### Twilight flat

For the twilight flat it is required to configure the automatic exposure as the sky lightness changes a lot during dusk or dawn. You can also configure this automatic exposure for use with other light sources.

The program will adjust the exposure time between the two limits to maintain the image level.

Set the shortest exposure time that gives uniform sensor illumination. This depends on the kind of shutter used by the camera.


Set the longest exposure time you want for a flat. You have to take the corresponding dark separately.

Then give an image mean level range that makes an acceptable flat. Start with 80% of your camera's full range but check there is no saturated part in the center of the flat image, specifically if the vignetting is important.

---



## Focus

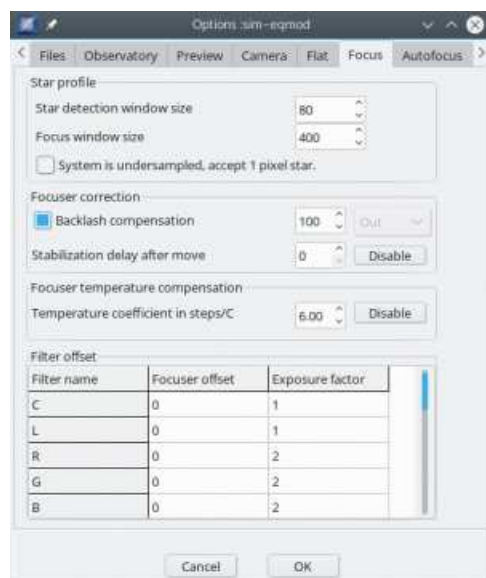

### Star profile

Select the size in unbinned pixel of the star detection area and the size of the zoomed window for the focus mode. If you use a binning different than 1×1 for the focus operation the window size is reduced accordingly.

Normally a single pixel star is rejected as a hot pixel during focus operations. If your optical configuration produce undersampled image with single pixel star you can check this box. But be careful to make a [bad pixel map](#) to reject the hot pixel.

### Focuser correction

If this is not already done by your focuser driver you can activate a backlash compensation. But be sure to let it disabled if the compensation is done elsewhere.

Indicate the number of additional steps to use for the compensation, this must be greater than the actual backlash, don't hesitate to use a large value.

Indicate the direction the focuser will always finish to move, the best depend on your configuration. If you configure the auto-focus this control is disabled and will be set to the same as the focus move direction.

If it take some time for the focus position to stabilize after a move you can set a delay to wait after every focuser movement. This is more likely of use if the motor directly move the primary mirror of a SCT.

### Focuser temperature compensation

If your focuser can measure the temperature you can set here the temperature coefficient (in steps per Celsius) used to adjust the focuser position between the exposures, or to shift the auto-focus V curve accordingly. The coefficient is positive if the focuser needs to move UP in position when the temperature drop. The routine will adapt the focuser if the temperature difference is larger then 0.5 degrees.

Note that for a reflector telescope you typically have to turn the focuser OUT to correct for tube shrinkage. For a refractor you typically have to turn the focuser IN since the change in refraction coefficient is dominant and much larger then the tube shrinkage.

The temperature coefficient will help to reduce the number of autofocus actions required. It will work best when the temperature drops slowly and all parts of the telescope have time to adapt to the changing ambient temperature.

The compensation factor has to be measured empirical. Start with an almost zero factor=1 and monitor the autofocus focus position in the log as function of the reported temperature. If you sufficient data points which show a repeatable temperature coefficient enter the estimated factor in this menu. Some telescopes like a SCT could have less predictable coefficient and you most likely have to disable the coefficient and rely on the autofocus routine only.

If the factor is set well, the result of each autofocus routine run should be close to the previous focus position.


### Filter offset

For each filter you can also set a focuser offset in focuser steps that will be applied to the focuser when you change the filter.

The filter exposure factor is used for the auto-focus functions and the **automatic sky flat**. For example if your R filter require two time the exposure of the L filter set :  $L=1$   $R=2$


---

## Auto-Focus

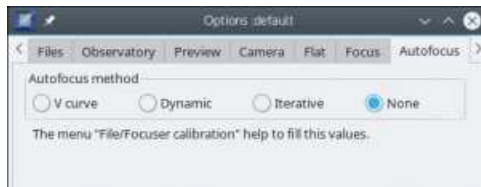

This section is initially empty. It can be hard to fill with the right values for your specific equipment. It is strongly suggested you use the [focuser calibration](#) wizard to set the correct default parameters.

After the wizard is run it select one of the focus method Vcurve or Dynamic depending on your focuser capabilities. You can return at this page if you want to change the method or adjust some parameters.

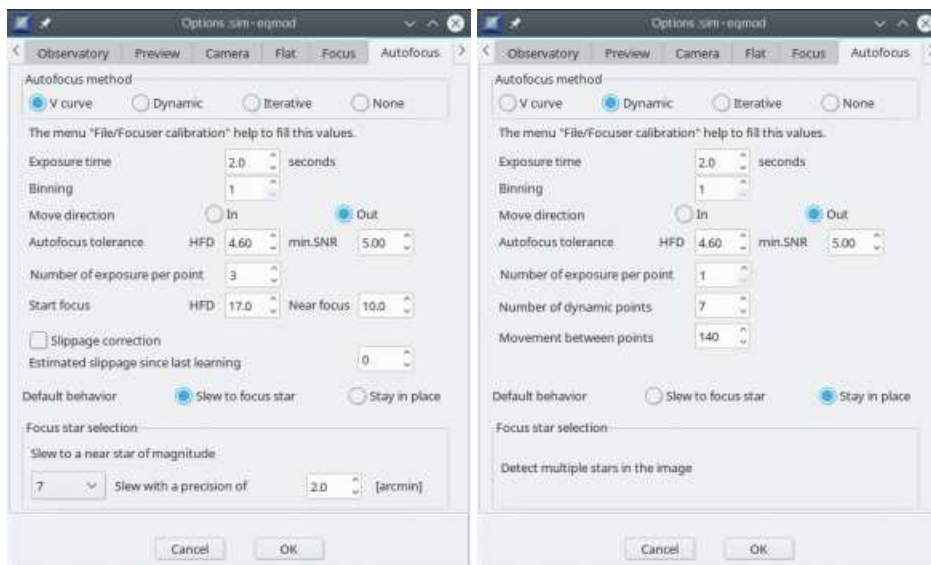

Select the auto-focus method:

- **V curve:** This is the preferred method for an absolute position focuser. By measuring the size of a defocused star it can accurately calculate the ideal focus position. In advance your system has to be analyzed using the V-curve learning tool. This routine will measure the star size (HFD value) as function of the focuser position of your setup. The slope of the two lines left and right of the focus position is constant. Temperature changes, filters and slippage will only shift the focus but not the slope of the two lines.  
Once the V-curve (slope) has been measured accurately and saved using the V-curve learning tool, every auto focus operation will be done quick and efficient.  
This method work best with a single bright star and you need to configure the focus star magnitude you want to slew before to run the focus.
- **Dynamic:** This method can be used with relative position focuser. It require you start very near of the focus position and it make a small V curve every time.  
This method also work with multiple faint star, it is the best if you want to stay in place on the object your are imaging for the autofocus.
- **Iterative:** A dumb method that move in one direction or another as long the star diameter is smaller. I as the advantage to work with any kind of focuser and you can start with a very defocused star. But it is slow and imprecise.
- **None:** If you want to use your focuser only manually.

## Common parameters

- **Exposure time** to use for the auto-focus operation. This time is multiplied by the filter exposure factor above.
- **Binning** to use for the auto-focus. Use binning 1×1 unless you are way oversampled.
- **The move direction** of the focuser. Depending on you setting the focuser can work better when moved in or out of focus.
- **Autofocus tolerance** is the maximum HFD that can be considered as a successful focus. If the HFD after an auto focus operation is higher than this value the focuser position is set back to its previous value.
- **The minimum SNR** of the star during the measurement. If a measurement SNR is higher than this value the auto focus operation is canceled and the focuser position is set back to its previous value.
- **Number of exposure per point** The number of exposures we take to get a mean HFD value for each focuser position. Increase this value if the seeing is not good. But set to 1 when using multiple stars detection.
- **Default behavior** for focus star selection. Select if you want to slew to a bright star or stay on the object you are imaging to do the auto-focus. This can be selected object by object in the [target editor](#).
- **Focus star selection** when using "Slew to focus star". Select the magnitude of a star that gives a good SNR for the auto-focus operation using the above exposure time. The telescope is moved to a nearby star of this magnitude to run the auto-focus. You can set here the precision required for the slew to put the star in half the image height. Use a lower precision than for [target slewing](#) to speed up the process.

Method	Target field	V- curve focusing	Dynamic focusing
Slew to database star	Always a bright star	+++	+++
Stay in place	Medium bright stars	++	+++
Stay in place	Faint stars	+	++
Stay in place	Narrow band filter + faint stars	-	-
Dynamic focusing can work in the bottom non-linear part of the V-curve. HFD as low as 3 (twice minimum)			
V-curve requires HFD in 15-10 range minimum. Below HFD 10 not optimal performance.			


If the auto-focus fails to find stars and the journaling to file is active, the image is saved in the same folder as the log so you can review them later to help to adjust the parameters.

## V curve parameters

- **Start focus HFD:** The focus starting point on the V curve used to determine the Near focus position. Use a high value near the top of the V curve but inside the measurement area. A typical value is 20.0.
- **Near focus HFD:** We move the focuser to get this HFD to make the measurement on the V curve. This is **not** the focus HFD, it must be half way on the linear part of the curve. For example if your focus HFD is 3.0 and you make a V curve up to a HFD of 20.0, you can set 10.0 here.
- **Slippage correction** If your focuser is prone to slippage you can activate a correction here. You must have configured the **filter offset** and the focuser **temperature compensation**, so we can be confident that the remaining offset is slippage.

The autofocus routine finds the focus in four focus movements using the slope information from the **V-curve learning**.

1. Move beyond the **Start focus HFD** to (1) taken into account any temperature drift. This to fix any mechanical hysteresis in your system.
  2. Move to calculated **Start focus HFD** (2) taken into account any temperature drift. Here a number of exposures is taken and the average new start HFD is calculated.
  3. Based on the average new start HFD of step 2) move using the slope factor to the calculated **Near focus HFD** position (3). This (3) will be already adapted to any focus drift and should be spot-on. Take a number of exposures and use the average new near HFD and slope factor to calculate the new focus position.
  4. Move to the new calculated focus position (4).
- - If the SNR, signal to noise is too low, the routine is aborted.
  - - Any focus drift will result in a drift of the new start HFD but not in the new near HFD.

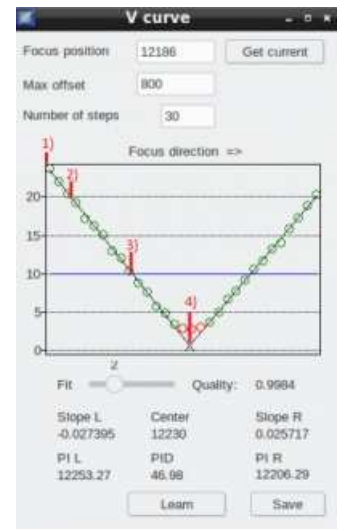


## Dynamic parameters

- **Number of dynamic points:** The number of points we take on the curve. Do not set too high as this is done at every focus operation. Recommended default value is 7.
- **Movement between points:** The number of focuser steps we move between each measurement of the curve. It must be set high enough to make a measurable change in star diameter, but not too high so faint stars can still be detected. The maximum focuser movement in and out of current position will be  $(\text{Number of dynamic points}) \times (\text{Movement between points}) / 2$

## Iterative parameters

- **Initial movement** in focuser steps. This is the movement we use between measurement on the first iteration. It is then divided by two every time we change the direction.
  - **Final movement** in focuser steps. When we reach this movement value we consider we are at the focus. This is typically the focus tolerance of your optical system.
-

## Astrometry

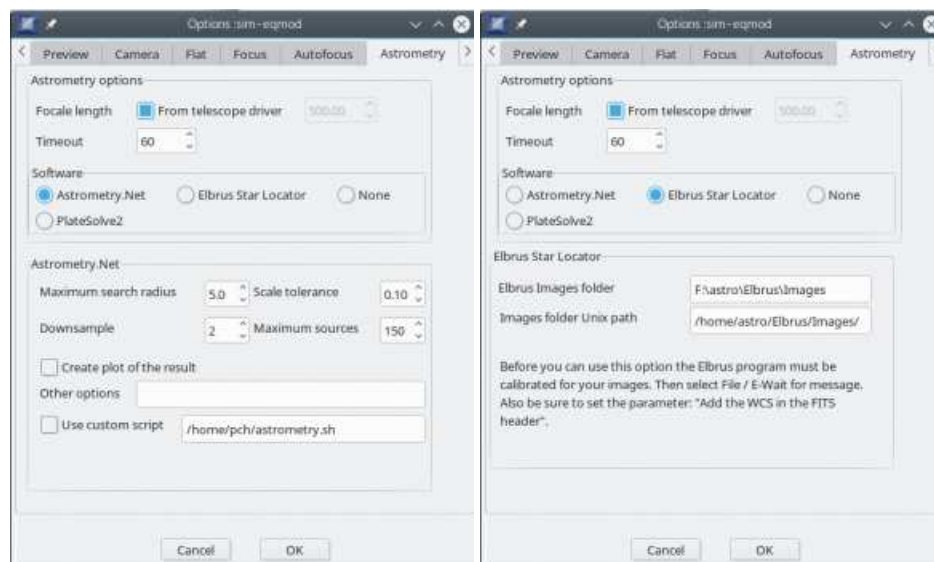

### Global options

It is important the program know your telescope focal length to estimate the image scale to speedup the solving process. Enter telescope focal length, or if applicable for your driver, check the box to get it automatically.

You can also adjust the timeout (in seconds) for a solve operation.

### Software selection

Select the software you want to use for the astrometry resolution of the images, you can use [astrometry.net](#) , [Elbrus star locator](#) or [PlateSolve 2](#).

For each software you can adjust a few option to make them work quickly and reliably with your images.

### Astrometry.net options

- Maximum search radius: Is a tolerance in degrees to the telescope position. Set this value high enough if you use the plate solving to make a pointing model.
- Scale tolerance: The tolerance on the pixel scale derived from the focal length and pixel size.
- Downsample: the image by this factor. Use at least 4 or 8 for DSLR images. For CCD it is better to use binning.
- Maximum number of source to consider.
- Create plot of the result: create png image with indication useful for debugging.
- Other options: any other option you want to give to the solve-field command.
- Use custom script: Use a script instead of the solve-field command. There is two example with the program, one for remote execution using ssh, the other for remote solving with the astrometry.net python script.
- On Windows only, you need to specify the Cygwin path to where astrometry.net is installed, for example C:\cygwin. See the [installation instruction](#) for more details.


### Elbrus options

- Elbrus images folder: the folder where Elbrus wait for new images to solve.
- Images folder Unix path: **Unix only**, the unix path corresponding to the previous one where CCDciel save the image for measurement.

### PlateSolve 2 options

- Program folder: the folder you install the PlateSolve2 program.
- Wait after solve: the number of second the PlateSolve2 window remain visible after solving is complete.

## Slew

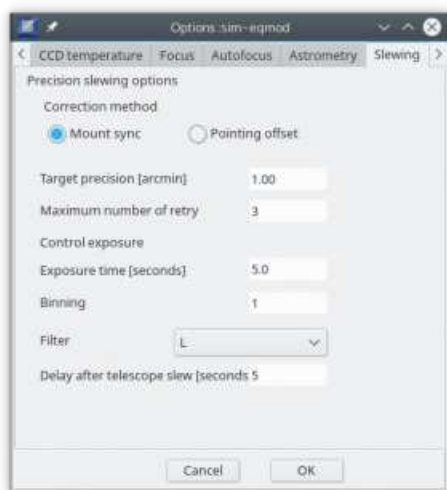

You can adjust how to correct the mount position after plate solving a control picture.

### Correction method

If your mount allow to sync anywhere select “Mount sync”, if not select “Pointing offset” to make the correction in software. Use “Pointing offset” if your telescope use a pointing model, this avoid any problem by using Sync with the model, but this can result in a wrong position to be reported in other softwares.

### Pointing options

Then set the precision you want/can reach and the maximum number of pointing/correction retry before to give up.


Set the parameters (exposure time, binning and filter) for the control exposure. This must give enough stars with your telescope/camera combination for the astrometry resolver to work.

If your mount need some time to stabilize after the movement you can increase the delay to wait before to take the plate solving picture.

---



## Meridian

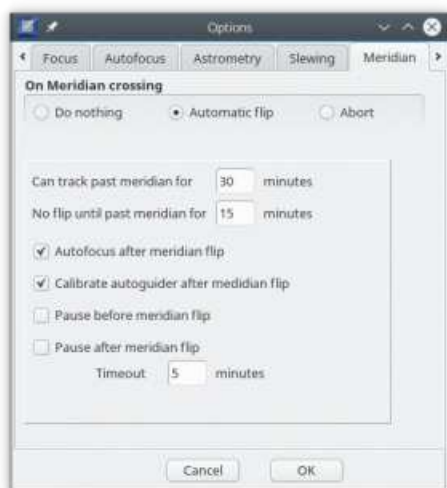

Configure here what you want to do when the mount reach the meridian.

- **Do nothing:** select this option if your mount is not affected by the meridian (fork mount).
- **Automatic flip:** automatically do a reversal of the mount to continue to track past meridian.
- **Abort:** abort the current capture and stop the mount.

### Automatic flip options

- **Can track past meridian for:** the number of minute your mount can safely track past the meridian without flip. This depend on the declination, set the smaller value here.
- **No flip until past meridian for:** the minimum number of minute after the meridian we wait before to initiate the flip. This two parameters allow to loss the minimal time during a capture sequence, otherwise you can wait for a long as a single exposure time.
- **Autofocus after meridian flip:** In some case the focus point can move after a flip.
- **Calibrate autoguider after meridian flip:** If your mount do not report the side of pier to the autoguider you must check this option.
- **Pause before meridian flip:**
- **Pause after meridian flip:** this two checkbox give you a prompt before or after the flip to let you the time to do some manual operation on the mount (moving the counterweight for example).
- **Timeout:** The maximum time we wait for the after meridian pause, if you not close the prompt after this time the sequence continue automatically.

## Autoguider



### Software selection

Select your autoguiding software, this can be [PHD2](#) or [Lin\\_Guider](#).

### PHD2 options

For **PHD2** you need to set the network name of the computer running PHD2 and the port number.

### Dithering

Set the options for dithering between the exposure, the number of pixel (in the guide camera) and if you want to dither only in RA (if you have a lot of DEC backlash).

### Settle tolerance

The settle tolerance define how we consider the autoguiding as good after a dither operation or after it start. It must stay within the number of pixel for Min.time. But we wait for the maximum of Timeout if this is not possible. Set also the maximum time to wait if a new calibration is required.


### Star lost action

In the case of guide star lost (passing clouds...) we can try to restart the guider after some time. This is useful if the star as moved out of the search area, but if the clouds are still there we can start guiding on a hot pixel. A value of zero disable this function.

Then we can abort the current sequence after some time, maybe the next object on the plan is in a clear area.

### Lin\_Guider options


For **Lin\_Guider** you can choose to communicate by a local Unix socket or by the TCP network, on Windows only the TCP option is available. The selection must correspond to the one in the Lin\_Guider general setting.

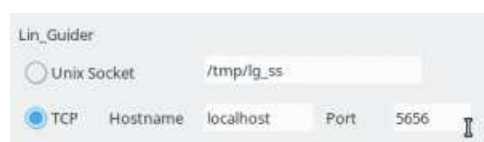

### Dithering

Set the number of pixels for dithering between the exposure.

## Planetarium

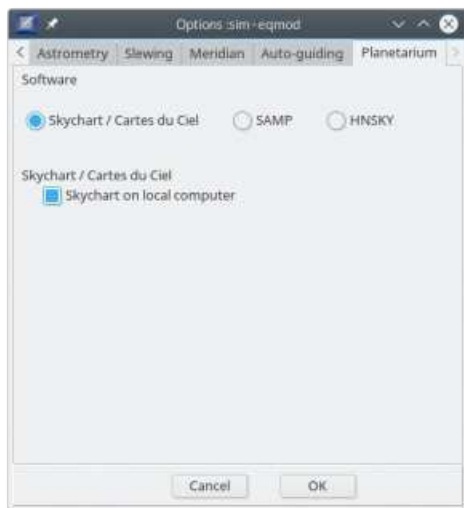

Select the planetarium application you want to use.

You can use the planetarium to select a target, or to display a solved image or image frame.


You have the choice between 🌐 [Skychart](#), 🌐 [HNSKY](#), or a 🌐 [SAMP](#) application like 🌐 [Aladin](#) or 🌐 [Topcat](#).


---

# INDI settings

From the menu Edit → INDI settings.

This menu is not active if you select the ASCOM devices interface.

This open a standard  [INDI client](#) window where you can set any specific option for your devices.

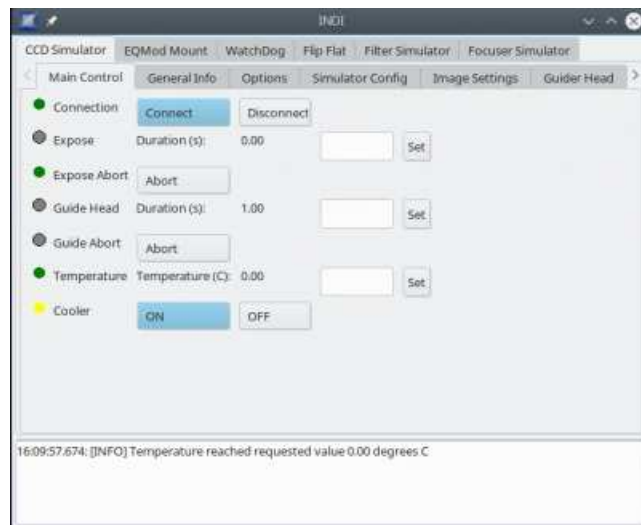

# View FITS header

From the menu Edit → View header.



Show the FITS header of the current file.

## Tools Menu

The **Tools** menu let you select the tools you want to include or not in your screen.

Check or uncheck each tool to make it visible or not.

You can also move each tool on another part of the screen to suite your need just by dragging the tool title to one of the main window border.

It includes the following options:

- Connection
- Preview
- Autoguider
- Planetarium
- Script
- Focuser
- Star profile
- Magnifier
- Capture
- Filters
- Frame
- Rotator
- CCD Temperature
- Telescope mount
- Sequence
- Video
- Visualisation
- Messages
- Clock
- Reset to default

By default many tools are grouped in four tabs on the right of the window.




This correspond to the main functionality for a capture session.

- Connection and preview
- Focusing
- Simple capture
- Automated sequence

You can use the keyboard F1 to F4 to select one of the tabs.

This same function are also available from the main menu:

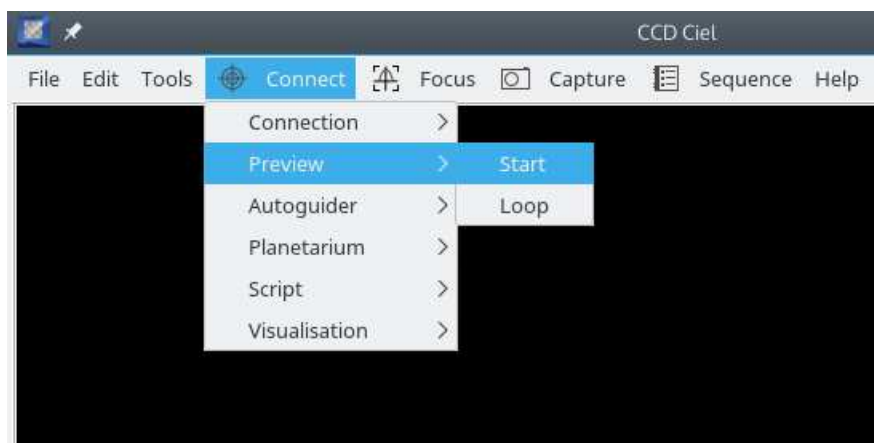

# Connection Tool



This tool let you connect or disconnect your equipment and monitor the status.

It is a mandatory tool as the first thing to do after starting the program is to click the Connect button.

# Preview Tool

Preview	
Exposure	5 ▾
Gain	ISO 800 ▾
Binning	1x1 ▾
Preview	Stack <input type="checkbox"/>
Loop	<input checked="" type="radio"/>

This tool is to take a preview exposure for focusing or centering purpose.

Set the **exposure time** and the **binning** to use for the preview.

You can also change the **gain** or the “ISO” if the camera support this setting

This setting is totally independent of the **Capture** setting.

Click **Preview** for a single exposure or **Loop** to take exposure continuously until you stop it with the same button. The light change to green when the loop is active.

If you activate the “preview stacking” in the **preferences** you also see a **Stack** check-box.

When it is checked, every preview frame is added to the previous ones.

If a bright enough star is present the frames will be aligned on this star.

After you start the Loop, you see the object image to appear progressively in the screen as the number of frame increase. This function is often use in public demonstration.

You can use the menu **File/ Save FITS file...** to record the stacked image after you stop the Loop.

A new stack is started when you start the Loop, or after you take a preview without this option.



# Autoguider Tool




This tool is to interface with the [external autoguider](#).

Start the autoguider application and then click the Connect button.

It show the autoguider status and let you to start or stop autoguiding, force a new calibration, or dither.

This functions are used automatically by the [sequence](#) tool when the autoguider is connected.

# Planetarium Tool

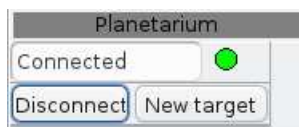

This tool is to control the connection to the [planetarium](#).

It is used to display an astrometry resolved image with the right click menu, or to set the targets coordinates in the [sequence](#) preparation.


Click the **New target** button, click or search an object in the planetarium, then click OK.

This make a plate solved slew to the object position and set the object name in the [Capture](#) tool.

You must have a camera and mount connected before you can use this function.

The same box is used in the sequence editor to set the target coordinates.

Note that the target coordinates are apparent and could differ from the planetarium if the planetarium displays the position in equinox J2000 coordinates.

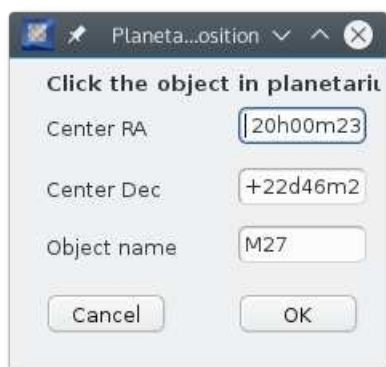

# Script



This tool let you create or run a **script**

The scripts can be used to automate some task in CCDciel or to interface with external program for example to manage your observatory and equipment.


The same scripts can be used as a step in a **sequence**, or in specific conditions, but this box is a convenient way to create, test and quickly run any script.

# Focuser Tool

With this tool you can control your motorized focuser manually. The control are adapted if you use an absolute or relative focuser. The temperature is reported if available.



With a relative focuser you can set the desired movement in steps, then click the arrow buttons < > to move the focuser in or out.

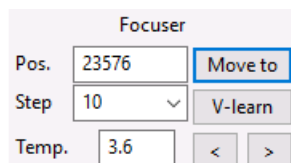

With an absolute position focuser you can set the movement as with the relative focuser, or set an absolute position and click **Move to**.

The button **V-learn** start the V-curve learning.

## V curve learning

If you not already do it, it is strongly suggested you use the [focuser calibration](#) wizard to set the correct default parameters before to use this procedure.

### Introduction

In case you have an absolute position focuser and want to use the [V-curve auto-focus](#) you have to run the V-curve learning routine first.

The routine steps the focuser and measures at several positions the size (HFD value) of a star. This will result in a typical V-curve of two lines left and right of the focus point, The slope of the lines will be used later in the autofocus routine for finding the focus. in this screenshot the routine will step from position 12186+800 to position 12186-800.

The focus position shown as 12186 should be approximately the best focus position. The maximum offset 800 as shown should be selected such that the HFD value at the beginning and end is above the **Start HFD focus=20** so in this example 25.

### Steps to follow

If you are using filters, select the luminance filter. Start an preview loop of about one second exposure and center on and select a bright star. Run the manual focus aid and check if the peak intensity indication is about 80% of saturation level using the star\_profile tool. If not adapt the exposure accordingly or select an other star.

Be sure to stop the preview loop and press the **V-learn** button

The first time you launch this tool all the settings and graphic are empty.

Indicate the most accurate focus position you can estimate, as you make a manual focus just before you can click the **Get current** button here.

Set the Max offset value such that moving to the best focus position plus this offset give a defocused image with an HFD around 25.

Set the number of step to 30, this is a good value that allow for precision curve. But for the first try you can save some time by setting it to 10. Just remember to repeat with 30 when you are accustomed with the procedure.

When this three numbers are set click the **Learn** button on the bottom.

This curve is slowly build up until the procedure is finished. Progress in is also reported in the Log and Star profile tools.

After the measurement are completed the curve should look as in the screen shot here. The graph shows the HFD value as function of the focuser position.

Check the following important points before you continue:

- The curve must be centered with top left and right about at the same level focus in the middle.
- It must extent to about the double of the value of Near focus HFD in the options, indicated by a blue line here.
- The two branches of the V must show a long linear part, specifically on the side of the base of the focus direction arrow (right on the screen shot).
- The branches must not flatten on the top. If you remark such behavior you must reduce the Max offset value.
- The move direction should be such that the learn routine moves the focuser in the same the direction as you have to adjust the focuser manually during the night when it is cooling down. If not change the direction in settings. For a reflector (mirrors) type of telescope you typically have to turn the focuser out if the temperature drops. For a refractor (lenses) type of telescope you typically have to turn the focuser in.


At the center of the V with the points marked in red.

It is important to exclude this points from the linear regression and you can use the **Fit** cursor to exclude more or less points.

When you adjust this cursor, look to maximize the Quality value on the right but also check the aspect of the black regression line across the green circles. The linearity must be specially good at the intersection with the blue line.

When you are satisfied by the result click the **Save** button. This will save the curve parameters and mean temperature for use in the auto-focus routine.

You can now try the Autofocus in the [Star profile](#) tool.

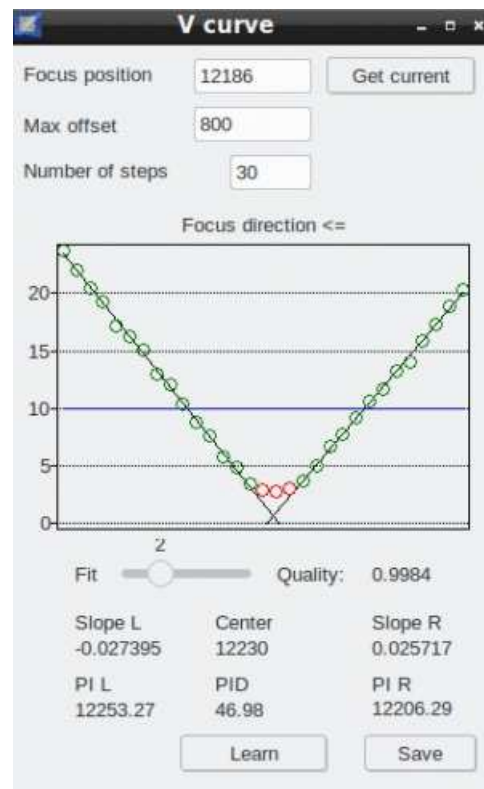

# Star profile Tool

With this tool you can check the focus or start an autofocus run. It can be used with **motorized focuser** or manual focuser.

Make first a **preview** exposure and double click on a non saturated star.

The top curve is a cross-section of the star image. Try to make it as narrow as possible.

Below the previous relative HFD measurement in red and the intensity in green.

The HFD (Half Flux Diameter) unit is pixels.

The FWHM (Full Width at Half Maximum) units are pixels and arc-seconds.


Optimum focus is reached when HFD and FWHM are at minimum.

The star peak intensity should be not be saturated.

Click **Manual focus aid** to start a **preview** loop on the selected star area. See **zoomed**


Click **Autofocus** to start the auto-focus procedure on the selected star. You must have configured the **auto-focus** in advance and if applicable run the **V curve learning** tool and saved the result.

When the autofocus is running it show a plot of the HFD versus the focuser position. The aspect of the plot depend on the selected focusing method.

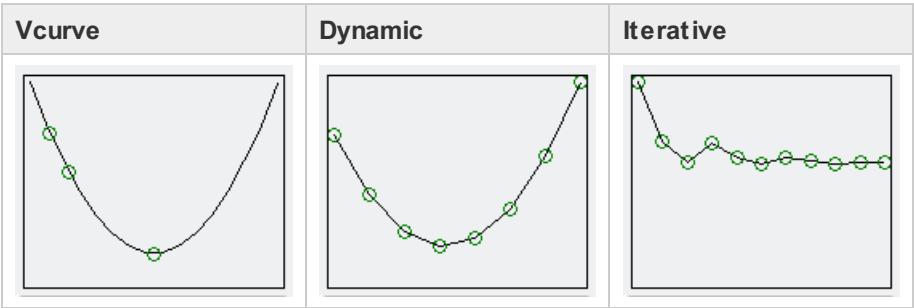

If you move the mouse over the graph it display the values of the focuser position and HFD. You can click a button to not close the graph when the auto-focus is completed to let you more time for examination. Click the button again to close the graph.

Click **Image inspection** to detect the stars in your image and indicate the HFD for each and plot a tilt indicator in the image.

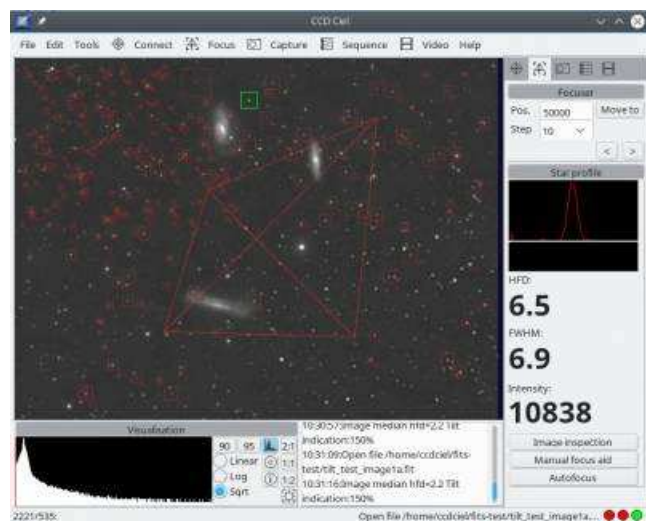


The tilt is indicated in the log as % ratio between the best and worst corner median values. In addition as an graphical indication it draws an trapezium in the image based on the four median values.

There can be some variation in images of the same series, so a tilt of maybe 20% looks normal but anything more indicates a camera mounting problem.

# Magnifier Tool

This tool show a magnified part of the image below the mouse cursor.

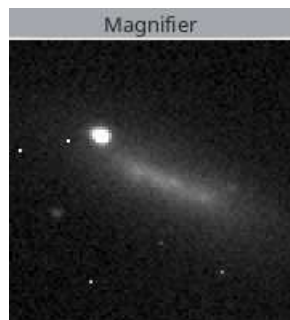

The zoom level is at least of 2x, or 3x the main image zoom level.



# Capture Tool

This tool is to take a series of exposures.

Set the exposure time, the gain if supported, and the binning to use.

Enter an object name. The object name will be used for the file name and stored in the FITS header at keyword OBJECT.

Set the number of consecutive exposures to be taken.

Select the type of frame: Light for sky exposure. Bias, Dark, Flat for the calibration. This selection will be used for the folder name and stored in the FITS header at keyword IMAGETYP. If your camera has a shutter, it will be closed for Bias and Dark.


Capture	
Exp	300
Gain	ISO 400
Bin.	1x1
Object	M42
Count	15
Type	Light
<input checked="" type="checkbox"/> Dither every	1
<input type="checkbox"/> Focus every	1
Start	

If dithering is required, put a checkmark and enter the image interval. Dithering requires the autoguider to be connected, [configured](#) and guiding from the [Autoguider](#) tool before you start capturing.

if autofocus is required, put a checkmark and enter the image interval. Autofocus must have been configured in [auto-focus](#) and [V curve learning](#) should have been run and result saved. For autofocus the telescope will automatically slew to a database star of configured magnitude. The slew to and return will only work accurately if you have configured the [plate solver](#) and [slewing](#) options.

Click the Start button to begin the exposure series. The same button can be used to interrupt the series.

# Filter Tool



With this tool you can control your filter wheel.

It will show the currently mounted filter.

To change the filter, select one from the list.

# Frame Tool

Frame		
X:	<input type="text" value="0"/>	<input type="text" value="1280"/> <input type="button" value="Set"/>
Y:	<input type="text" value="0"/>	<input type="text" value="1024"/> <input type="button" value="Reset"/>

This tool is to set the sensor area used for imaging.

The first row is the horizontal starting point and width.


The second row is the vertical starting point and height.

You can set the values with the mouse on a preview exposure. Press the Shift key and the mouse left button to draw the frame.

Click the Set button to send the values to the camera.

Click the Reset button to reset to full frame.

# Rotator Tool

The Rotator Tool interface is a small rectangular window. It features a green circular status indicator on the left. To its right is the label 'PA' followed by a text input field containing the value '9.8'. Further right is a button labeled 'Rotate'. Below these elements, there is a checkbox labeled 'Reverse' which is currently unchecked, and a button labeled 'Halt' to its right.

<div><div></div> PA 9.8 Rotate</div>
<div><input type="checkbox"/> Reverse Halt</div>

With this tool you can control your motorized rotator.

To rotate to a new position type the new Position Angle and click **Rotate**.

Check **Reverse** if your optical configuration require to reverse the rotation to match the celestial position angle.

The light is red when the PA field is the rotator raw value without calibration.

Use the [right click menu](#) **Resolve and sync the rotator** to calibrate the rotation angle. After that the light is green and PA field indicate the celestial position angle.

The last calibration is restored when the rotator is connected.

# CCD Temperature Tool

The image shows a software window titled "CCD Temperature". It contains two input fields: "Current" with the value "-9.5" and "Setpoint" with the value "-10.0". To the right of the "Current" field is a checked checkbox labeled "Cooler". To the right of the "Setpoint" field is a button labeled "Set".

CCD Temperature	
Current	-9.5 <input checked="" type="checkbox"/> Cooler
Setpoint	-10.0 <input type="button" value="Set"/>

With this tool you can set the camera cooling setpoint and read the current imaging sensor<sup>1</sup> temperature.

To start cooling, enter the temperature **Setpoint** (target) and click on the **Set** button. Automatically the **Cooler** check mark will be checked.

To stop cooling un-check **Cooler**

If you have configured a **maximum temperature rate** the button text change to "Cancel" to let you cancel the current temperature change.

<sup>1</sup>) CCD or CMOS imaging sensor.

# Telescope Tool



The screenshot shows a window titled "Telescope position". It contains several input fields and buttons. The "RA" field is set to "20h00m24" with a "Track" button next to it. The "Dec" field is set to "+22d46m2" with an "Unparke" button next to it. Below these is a field labeled "West (Pointing East)". At the bottom, the "Meridian in" field is set to "25" with a "min." label next to it.

This tool display the current telescope RA/DEC position, the side of pier if reported by the driver, the time to or from the meridian.

You can park or unpark the mount using the corresponding button.  
The Track button start the mount tracking.

Use the [planetarium](#) or the [sequence](#) tool if you want to move the telescope at a new location from CCDciel.

# Sequence Tool

This tool is to control a complex sequence of exposure on one or more objects.

The top grid show the current list of targets.

You can Load an existing file with a list of target, create a New one, Edit the current list, Copy to a new list or Delete a list.

Use the Start and Stop button to start or interrupt a sequence.

When the sequence start it first check if the autoguider and camera cooling are available and try to start them if not.

The “Run unattended” check box control how the program react in case of error.

- If is not checked a message prompt you on the screen what you want to do.
- If it is checked the operation is canceled.

The bottom grid show you the plan for the current target.

When the sequence is running the current target and step is highlighted.



# Target editor

## Add a target


After you click New or Edit, the target editor let you modify the target list.

A target can be an object you want to take the images or a script to run in the sequence.

You can type the object name and coordinates in the corresponding box or click the Planetarium button to select the object in the connected [planetarium](#) application. The coordinates can also be selected by plate solving the current image. Or click the “No move” button to not change the telescope position.

Note that the target coordinates are apparent and could differ from the planetarium if the planetarium displays the position in equinox J2000 coordinates.

Select the exposure plan to apply to this target using the dropdown box, or use the New button to create a [new plan](#), or the Edit button to change the plan. You can also copy an existing plan or delete one.

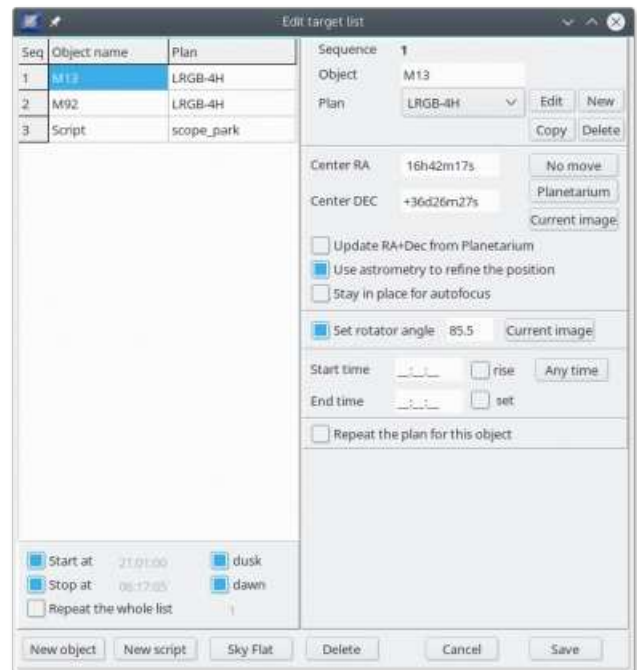

The plan are saved in separated files and can be shared by many target list. This way you not have to edit the detail of the plan every time.

If you are imaging a fast moving asteroid or comet you can check “Update RA+Dec” to ask the planetarium for the object coordinates just before the telescope is slewed to the target.

Be sure the planetarium is connected before to run the sequence.

Check the name of the object is compatible with the search function of the planetarium. No problem if you set the coordinate and name from the planetarium.

The planetarium must be set to follow the system time, otherwise the asteroid position is not updated.

Check “Use astrometry...” box to refine the telescope position with an [astromery](#) solved control exposure. In this case you are ensured the selected object is framed exactly as required.

You can check “Stay in place for autofocus” if you are sure that the center of the image field contain suitable stars for auto-focus. It is recommended to use the Dynamic focus method in this case.

If unchecked, the telescope is first moved to a focus star of the magnitude defined in the [auto-focus preference](#), and returned to the target after the operation.

The default value for this option is also set in the auto-focus preference.

Check “Set rotator angle” to move the [rotator](#) at the specified angle.

You can type the position angle or use the current image orientation after plate solving.

Be sure the rotator is calibrated before to start the sequence if you use celestial PA.

---

## Set the start and end time

You can set a time range for this target to be imaged, it will no be images before “Start time” or after “End time”. If “End time” is reach during exposure plan it is stopped and the next target is selected.

Click “rise” or “set” to automatically use the rise or set time of the object above the limits you define in the [Observatory](#) configuration, for the date of the observation.

To not use this function click the “Any time” button.



Start time  ☐ rise

End time  ☐ set

You can also define when the whole sequence start and stop.  
 Check the box “Start at” or “Stop at” and enter the time you want.  
 Check “dusk” or “dawn” to adjust the time for the astronomical twilight for the date of the observation.

☒ Start at 21:42:57 ☒ dusk

☒ Stop at 05:49:29 ☒ dawn

## Repeat a target

You can set this target to repeat it's whole plan for a number of time at a given interval between two consecutive start.  
 Set the number of repetition and the interval. If the interval is smaller than the total plan duration the next repetition start immediately.  
 You can also start a preview loop while waiting for the next repetition, this is useful to keep the Sun or Moon centered if you do an eclipse sequence.

☒ Repeat the plan for this object

Repeat

Interval  [seconds]

☐ Preview when waiting to repeat

Preview exposure  [seconds]

## Add a script

To add a script you just have to select the one you want from the list, or create a new script here.

Seq	Object name	Plan
1	M13	LRGB-4H
2	M92	LRGB-4H
3	Script	scope_park

Sequence

Script

## Add an automatic flat

To add an automated flat click the **Sky flat** button.

Edit target list

Seq	Object name	Plan
1	SkyFlat	Dusk
2	M13	L-3x2
3	M92	L-1

Sequence

Flat time  
☒ at dusk ☐ at dawn

Count

Binning

Filters

- ☐ C
- ☒ L
- ☒ R
- ☒ G
- ☒ B
- ☐ Ha
- ☐ Oiii
- ☐ Sii

☐ Start at 00:00:00 ☐ dusk

☐ Stop at 00:00:00 ☐ dawn

☐ Repeat the whole list

Set if you want the flat series to be taken at dusk or at dawn, this change the position in the list.

Select the number of flat to take for each filter, the binning and finally check the filters to use.  
The automatic exposure time must be configured in the [flat preferences](#).  
To better manage the changing sky luminosity the filter are selected from the darker to the lighter at dusk, from the lighter to the darker at dawn. This require you configure the [filter exposure factor](#).  
When you add a sky flat to the plan this disable the “Start at dusk” and “Stop at dawn” global options. Do not re-enable them otherwise the sequence will not run during the twilight and the flat are bypassed.  
For the same reason you must be careful the sky flat remain in first or last position in the list. The only acceptable steps before or after them are script to manage the equipment because they will run in full daylight.

---

### Repeat the whole sequence

You can also repeat the whole list a number of time by checking the box at the bottom of the list.  
There is no option for the interval here, the repetition is immediate. But you can add scripts in the sequence to delay the execution in a more flexible way.



### Manage the target list

You can add a new target , script , flat or delete one with the four buttons at the bottom of the list .

You can change the target order with a mouse drag/drop on the first column of the list .

Seq	Nom de l'objet	Plan
1	M13	LRGB-4H
2	M92	LRGB-4H
3	SkyFlat	Dawn
4	Script	scope_park

The target list is saved when you click the Save button. If this is a new one you are asked for a file name.

---

# Plan editor

## Add a step

Use the plan editor to specify the exposure steps to take of a target.

Give a description of the step that can be used to make a subfolder.

Set the type of frame, exposure time, gain, binning, number of exposure, as in the **Capture** tool.

Set the filter to use as in the **Filters** tool.

Check corresponding box if you want to run an auto-focus at the start of this step.

For long steps you can also repeat the auto-focus after a given number of images.

Seq	Description
1	L
2	R
3	G
4	B

**Step 1**  
Description: L  
Type: Light  
Exposure: 300 [seconds]  
Gain: ISO 800  
Binning: 1x1  
Count: 24  
Filter: 2  
☒ Autofocus before to start  
☒ Autofocus every: 10  
☒ Dither every: 1  
☐ Repeat this step  
Add Delete Cancel Save

## Repeat a step

You can repeat the same step at a specified interval. Set the number of repetition and the interval.

If the interval is smaller than the step duration the repetition is immediate.

☒ Repeat this step  
Repeat: 2  
Interval: 600 [seconds]

## Manage the steps

You can add a new step or delete one with the two button at the bottom of the list.

You can change the steps order with a mouse drag/drop on the first column of the list.

The plan is saved when you click the Save button.

# Video tool

This tool is only available for INDI camera with video stream capability, specifically on Linux and Mac. Because of the way INDI record the video, the file is written on the computer running the INDI server.

The video tool appear in a new tab after the Sequence if the INDI camera you connected as video stream capability.

You must first set the preview rate in the **Preview** options. Do not use a too high value as this preview frames have to transit by the network.

Check **Preview** to visualize the frames.

Select the exposure range in the drop down box then adjust with the cursor.

Depending on the camera there can be other settings for the Gain, Gamma or Brightness.

The **More settings** button open the INDI client for this camera, this let you to access some properties specific to your camera.


Two more drop down list are to select the image size and the frame rate.

Next are the video capture options, you can limit the capture time or the number of frames.

The object name is use for the filename the same way as the static images.


Click the **Start** to start recording. The recording to the video file is always directly done by the INDI driver without any action from CCDciel.

Use the **Stop** button if you want the stop the recording before the planned end.

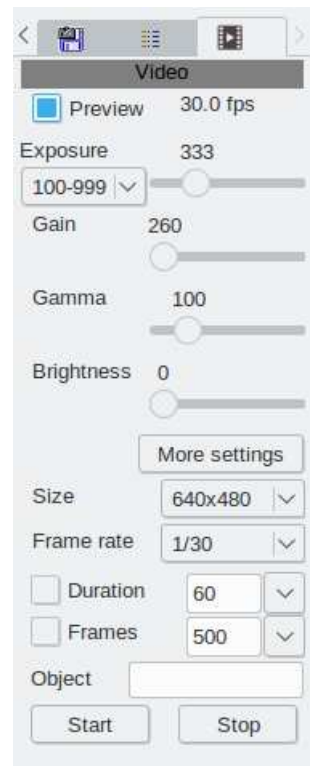

# Visualisation Tool

This tool is to control the aspect of the preview image. None of the setting here have any influence to the image saved as a FITS file. They are only to help you to view the most of detail on the single raw images.

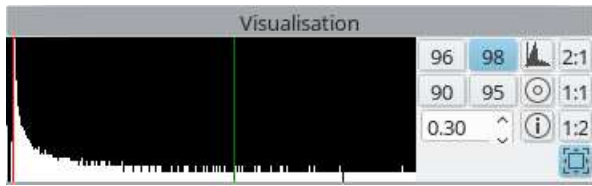

It is separated in two part, an histogram of the image and the control buttons.


On the top left, two rows of buttons are to control the range of histogram drawing, using from 90% to 98% or the full histogram range. Reducing the histogram range help to see faint nebulae in the image.

Bellow you can adjust the Gamma value for the display. This also help to better see the faint part of the image but without saturation of the bright area.

The four right button are preselected zoom level for the image.


You can also get other zoom level using the mouse wheel rotation

When the zoomed image is bigger than the screen you can move it with the left mouse button.

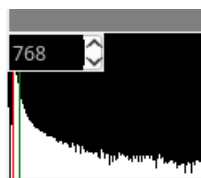


On the histogram you can move the high (green) and low (red) clipping bar with the mouse.

You can also directly edit the low and high threshold by moving the mouse cursor to the top left or right to display the edit box.

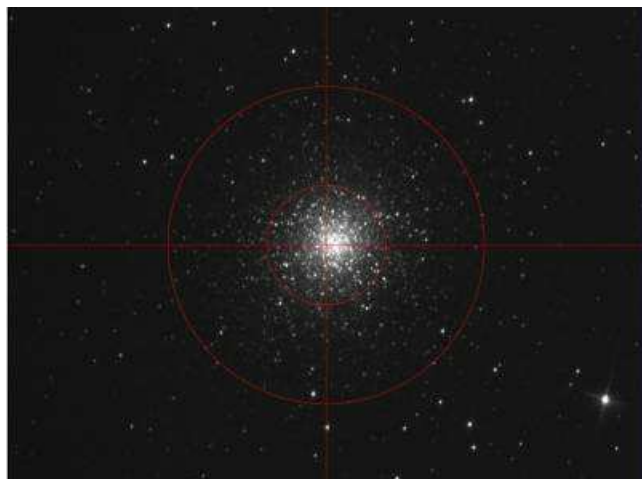

The bull eye button show the mark on the image. If the image is plate solved it also display an arrow with the North and East direction and print the image rotation angle.

A focus star can be automatically selected in the square that circumscribe the external circle.

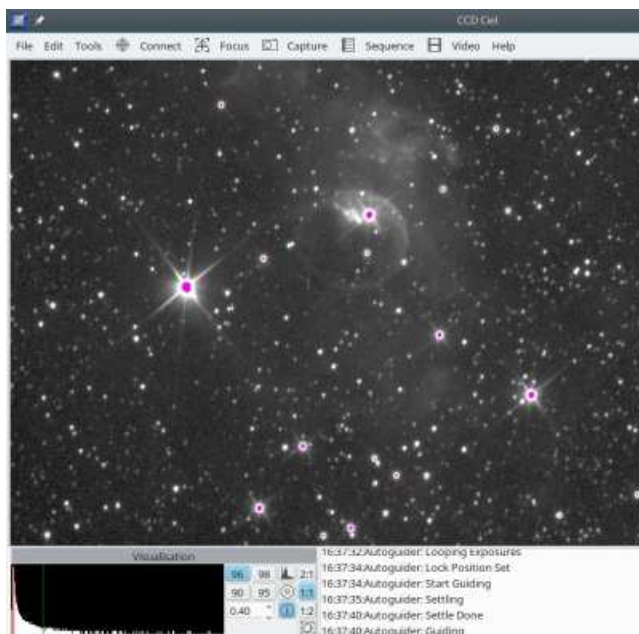

The (i) button let you check for saturation in the image.

The overflow in the highlight area is marked in pink.

The clipped shadows area is marked in yellow.

You can define the clipping level for your camera in ADU in the [preferences](#), the default are 0 and 65535.

# Logging



A screenshot of a log window with a light gray background and a thin border. It contains a list of log messages, each starting with a timestamp and a description. On the right side of the window, there is a vertical scrollbar with a small square slider.

```
15:57:42:Precision slew terminated.  
15:57:47:Start plan L-300x10  
15:57:47:Filter Simulator: Setting current filter to slot 2  
15:57:53:Start step L 300 sec  
15:57:53:Start capture  
15:57:53:Starting Light exposure 1 for 300 seconds
```

This text window will report all messages (Log) from the program and drivers.

If **configured**, the messages (log) will be also stored in a text log file for further study. It essential to use this option if you let the program run unattended.

The file location is:

Linux:

/home/[your user name]/.config/ccdcie/Log

Windows:


C:\Users\[your user name]\AppData\Local\ccdcie\log

Note that above folders are typically hidden.

The **Help** menu provide a quick access to this folder and the current log file.

# Clock

This tool show the current local time in the menu bar.

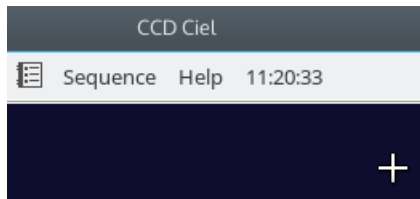

This is useful if you not have another clock on the computer screen but you may want to disable it if you use some remote desktop display on a slow network.



# Help

Some help to use the software.

- **PDF documentation** open the PDF documentation installed with the software
- **Online documentation** open the documentation in a web browser
- **Show current log** open the current log file using the default text editor
- **Browse log files** open the log file folder in the file explorer
- **Report a problem** open the CCDciel bug tracker
- **Download latest version** open the SourceForge download page. Ignore this entry if you use a package from your Linux distribution.
- **About** show the program version and copyright notice.

# Right click menu

Right click on the preview image to show the following menu:

Resolve
Resolve and Slew to image center
Resolve and Slew to cursor
Resolve and Sync the mount
Resolve and Rotate
Resolve and Sync the rotator
Resolve and show image in planetarium
Resolve and show image frame in planetarium
View last resolver log
Preview debayer
Preview raw
Image cleanup

## Plate solving functions

The image will be resolved (plate solved) and if successful, the image position, pixel size and orientation will be saved in the FITS file.

A second resolve request for the same image will use the saved solution, for example you can first show the image in the planetarium, and then slew to cursor without running the plate solver again.

Once the image is resolved the astronomical position of the mouse cursor will be displayed at the left bottom status bar in apparent coordinates.

### Resolve

Resolve the image using the [astrometry](#) software and load the solved image in the preview.

You can show the RA/DEC of the cursor by moving the cursor on the image.  
If you save the FITS file now it will include the astrometry solution.

### Resolve and Slew to image center

Resolve the image using the [astrometry](#) software and if the resolution is successful move the telescope at the position of the image center.

This useful to center the telescope on an image taken on a previous session.

### Resolve and Slew to cursor

Resolve the image using the [astrometry](#) software and if the resolution is successful move the telescope at the cursor position.

Can be useful to refine an object position but be careful of the mount backlash.

### Resolve and Sync the mount

Resolve the image using the [astrometry](#) software and if the resolution is successful Sync the telescope at the current position.

If you use Eqmod for your telescope driver, this can be used to set the alignment points.

### Resolve and Rotate

Resolve the image using the [astrometry](#) software and if the resolution is successful set the [rotator](#) angle to match the image orientation. The rotator must be calibrated before this function can work reliably.

### **Resolve and Sync the rotator**

Resolve the image using the [astrometry](#) software and if the resolution is successful calibrate the [rotator](#) angle to match the celestial position angle.

### **Resolve and show image in planetarium**

Resolve the image using the [astrometry](#) software and if the resolution is successful view the image in the [planetarium](#).

### **Resolve and show image frame in planetarium**

Resolve the image using the [astrometry](#) software and if the resolution is successful center the [planetarium](#) at the position and draw a frame of the CCD field.

### **View last resolver log**

You can take a look at the output log of the astrometry resolver to help to solve a problem or to refine the performance.

## **Preview functions**

The default display mode for bayer matrix color images is set in the [preview preference](#). You can switch between the two mode with this menu.

### **Preview debayer**

Debayer and display the color image if the current image is a raw color image with bayer matrix.

### **Preview raw**


Display the raw image in black/white.

### **Image cleanup**


Remove any marking and redraw the image.

# The status bar

The status bar at the bottom of the program window show a number of information.




On the right, three lamp indicate the status of the **planetarium**, **autoguider** and **devices connection**.



When a capture is running the status bar show the sequence number and the remaining time of the current exposure. On the right it show the name of the last saved image and the size of this image.



When a preview is running it show the remaining time of the current exposure, the time of the currently displayed preview and the size of the image



The left part of the status bar show information for the image at the mouse cursor position:

- The X/Y image coordinate of the cursor.
- The pixel intensity.
- The HFD and FWHM of the star under the cursor
- If the image is plate solved it also show the Right ascension and Declination of the cursor position, using the apparent coordinates if the telescope mount use the coordinates of the date, or J2000 if the telescope use this system. It show the apparent coordinates if no telescope is connected.

# TCP/IP server

If you activate the server in the [preferences](#) you can connect locally or remotely to get informations about the program.

The program listen on port 3277 and use the following command:

status	Return the devices connection status
sequence	Return informations about current sequence
capture	The capture informations in the status bar
log	The last 10 lines of the current log
quit	disconnect from the server

For example:

```
$ telnet localhost 3277
Trying ::1...
Trying 127.0.0.1...
Connected to localhost.
Escape character is '^]'.
OK! id=1

status
Planetarium connected, Autoguider guiding, Devices connected

sequence
Targets: test1 Plan: L-3x2 Start step R

capture
Seq: 2 Exp: 19 sec. Saved /home/pch/Capture/M13_Red_20180217_161453.fits 1392x1040

log
17:13:46:Saved file /home/pch/Capture/M13_Red_20180217_161346.fits
17:13:46:Starting Light exposure 2 for 20 seconds
17:14:07:Saved file /home/pch/Capture/M13_Red_20180217_161407.fits
17:14:07:Starting Light exposure 3 for 20 seconds
17:14:27:Saved file /home/pch/Capture/M13_Red_20180217_161427.fits
17:14:27:Stop capture
17:14:33:Start step R
17:14:33:Start capture
17:14:33:Starting Light exposure 1 for 20 seconds
17:14:53:Saved file /home/pch/Capture/M13_Red_20180217_161453.fits
17:14:53:Starting Light exposure 2 for 20 seconds

quit
Connection closed by foreign host.
```

# CCDciel Script

The scripts can be executed from the [script](#) tool or part of a [sequence](#).

There is also standard script that are executed on defined occasion:

- **startup** is executed when the program is launched, even before any device is connected. This is the place you can automatically connect the devices, the autoguider and the planetarium.
- **shutdown** is executed when the program is closed.
- **end-sequence** is executed when a [sequence](#) is terminated normally. This is the place you can warmup the ccd and park the telescope. This script is not executed if you click the Stop button in the sequence tool.
- **unattended\_error** is executed when a [sequence](#) is aborted, you can do the same as in end\_sequence and add more cleanup. This script is not executed if you click the Stop button in the sequence tool.


The script language is very powerful and allow for complex tasks.

But this can also be as simple as sending a list of command to different devices.

There is limitations if you use an ARM processor for example with a Raspberry PI device. In this case some function are not working, specifically the command that require a TStringList.

## Script editor

The editor allow to write a script .

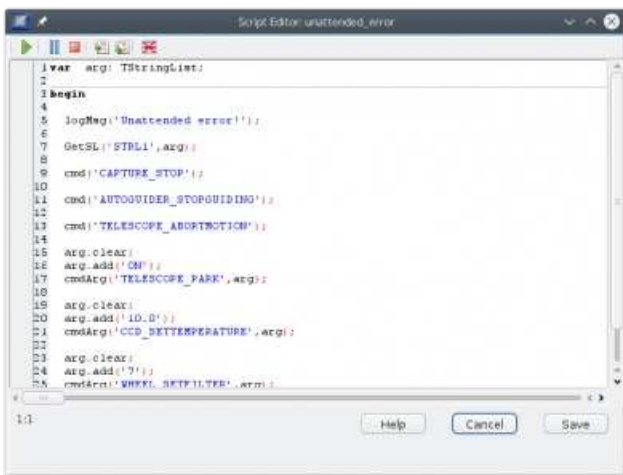

The language to use is [Pascal Script](#), based on [Object Pascal](#).

Define first the global variables, then the procedure and function if any, then the private variable, and finally the main code start with **begin** and end with **end**.

Read the [script example](#) page for a quick start.


The functions specific to the interface with CCDciel are described in a separate [script reference](#) page.

Use the **Save** button to record your change and return to the main window.

The top button are related to the debugging function as describe below.

# Script debugger

Simple debugging function are available to test your code.

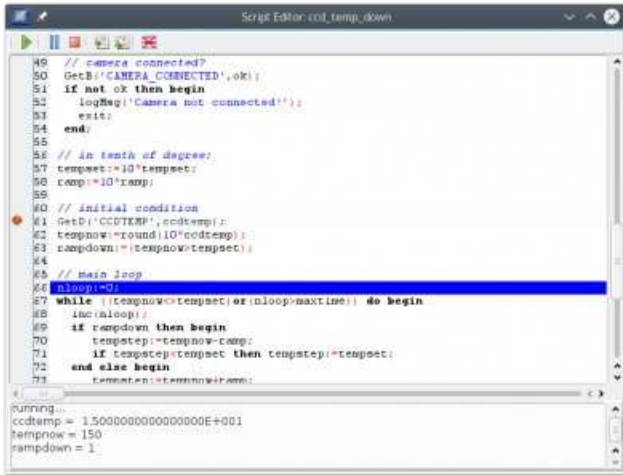

To run the script in debug mode press the green arrow **Run** button. The program is first compiled.

In case of compilation error, the corresponding row is highlighted in yellow, and the error message is show in the bottom message area.

If the compilation finish without error the program start to run and stop on the first code line of the main procedure. The current execution position is highlighted in blue.

You can now use the **Step over** button to execute your program line by line.

The **Step into** button do the same, except if the current line is a call to one of your function. In this case **Step into** allow to run the function line by line, but **Step over** execute the function and stop at the main program next line.

You can also set a breakpoint on a specific line to jump directly at this position.

To set a breakpoint click on the leftmost column to show a red icon.

Use the Run button to jump to the next breakpoint. The current line is then highlighted in red.

You can remove a breakpoint by clicking on the red icon or all at at time with the **Remove all breakpoint** button.

You can display the value of variables when the program is in pause at a breakpoint or after a **Step over** click.

Just click on the variable name anywhere in the program source to display the value in the message area.

Note this work only for local variables, not for object properties.

You can use the **Pause** button to pause the program execution. This can be useful to examine the condition of an infinite loop for example.

The **Stop** button terminate the program execution immediately.

# Script example

This page give tips and example of scripting functions.

You can also look at the template code provided with the program.

For more details about a specific function see the [script reference](#) page.

## Generality

We first look in detail at the code of the scope\_unpark script you can use to unpark the telescope. To open this script locate the [script](#) tool, select “scope\_unpark” in the dropdown list and click the Edit button.

This cover many programming basis.

The full script code look as following:

```
{
  This script unpark the telescope mount
}

var ok,parked: boolean;
  arg: TStringList;
  r: string;
begin

  // telescope connected?
  GetB('TELESCOPE_CONNECTED',ok);
  if not ok then begin
    logMsg('Telescope not connected!');
    exit;
  end;

  // get park status
  GetB('TELESCOPE_PARKED',parked);

  if parked then begin
    getSI('STRL1',arg);
    arg.clear;
    arg.add('OFF');
    r:=cmdArg('TELESCOPE_PARK',arg);
    if r<>msgOK then logMsg('Telescope park: '+r);
  end
  else begin
    logMsg('Telescope already unparked');
  end;
end.
```

Take a look at each part in detail:

```
{
  This script unpark the telescope mount
}
```

Is a comment, you can use `// {...} (*..*)` to enclose your comments.

```
var ok,parked: boolean;
  arg: TStringList;
```



```
r: string;
```

Define the variable we use later in the script.

Important variable type are: integer, double, string, boolean.

The TStringlist type is use here to send a command argument to CCDciel.

```
begin
```

The start of our script.

```
GetB('TELESCOPE_CONNECTED',ok);
```

We ask CCDciel about the status of a boolean variable to know if the telescope is connected, the result is in our variable ok.

```
if not ok then begin
  logMsg('Telescope not connected!');
  exit;
end;
```

We test the result of the previous command, ok is true if the telescope is connected, so we add the negation “not” to test for “not connected”. If the result of the test “not connected” is true we execute the code block starting at “begin” up to the corresponding “end”, this write a message in the log and exit the script.

```
GetB('TELESCOPE_PARKED',parked);
```

We continue and we do the same to check if the telescope is parked, with the result in our parked variable..

```
if parked then begin
```

We test if the telescope is parked, in this case we can unpark.

```
GetSL('STRL1',arg);
arg.clear;
```

Request a TStringList object identified by STRL1. We clear any data that may stay in the object. We need this TStringlist to pass argument to a CCDciel command.

```
arg.add('OFF');
r:=cmdArg('TELESCOPE_PARK',arg);
```

Add the argument 'OFF' for the command and execute 'TELESCOPE\_PARK' 'OFF'. This effectively unpark the telescope and the result is in variable r.

```
if r<>msgOK then logMsg('Telescope park: '+r);
```

We test the result is different than msgOK, in this case we write a message to the log to show the error from the driver.

```
end.
```

The end of the script.

## Open a document

The following code open an html page in the default web browser.

You can use any document type with this function, the document open with the default application the same way as if you double click the document in the file explorer.

```
begin
  OpenFile('document.html');
end.
```

## Run a command

There is three different way to run an external command or program, depending if you want to wait for a result or the command completion or not.

### No wait

If the command can run for an undetermined time or do not produce an output you need to use the following form. This example run the Skychart program and exit immediately without waiting you exit Skychart.

```
begin
  Run('skychart');
end.
```

### Wait until the end of the command

If you need to wait the end of a command but it only produce an exit code to signal success or failure you can use the following form.

```
begin
  if runWait('/bin/bash -c open_dome.sh') then
    logmsg('Dome opened')
  else
    logmsg('Fail to open the dome')
  end.
```

### Wait for a result

The following command run the DIR command in the current directory. The result is stored in a stringlist and the first entry is show in the log.

```
var r:TstringList;
begin
  GetSL('STRL1',r);
  r.clear;
```

```
RunOutput('dir',r);  
logmsg(r[0]);  
end.
```

# Script reference

This page contain reference material for scripting functions.

See the [script](#) description page for general information.

See the [script example](#) page for a quick start with the programming functions.

## Script language

The language to use is [W Pascal Script](#).

For a complete reference of the Object Pascal language you can read the [Free Pascal Reference guide](#). But beware that some feature are not implemented by the script language, for example: no pointer, no assembler, no overloading.

In addition to the standard Pascal Script feature the following CCDciel specific function are added.

---

## Constants

name	value
deg2rad	degree to radian conversion constant
rad2deg	radian to degree conversion constant
msgOK	returned when a CCDciel command complete successfully
msgFailed	returned when a CCDciel command fail

---

## Global variables access

<b>function GetS(varname:string; var str: string):Boolean;</b>	
Get the global string variable identified by varname	
varname	value
LASTERROR	The text of the last error
Str1 .. Str10	Ten global variable for your use

<b>function SetS(varname:string; str: string):Boolean;</b>	
Set the global string variable identified by varname for later use	
varname	value
Str1 .. Str10	Ten global variable for your use

<b>function GetSL(varname:string; var stlr: Tstringlist):Boolean;</b>	
Get the global stringlist variable identified by varname	
varname	value
Str1 .. Str10	Ten global variable for your use

<b>function SetSL(varname:string; stlr: Tstringlist):Boolean;</b>	
---	--

Set the global stringlist variable identified by varname for later use

varname	value
Str1 .. Str10	Ten global variable for your use

**function GetI(varname:string; var i: Integer):Boolean;**

Get the global integer variable identified by varname

varname	value
Int1 .. Int10	Ten global variable for your use

**function SetI(varname:string; i: Integer):Boolean;**

Set the global integer variable identified by varname for later use

varname	value
Int1 .. Int10	Ten global variable for your use

**function GetD(varname:string; var x: double):boolean;**

Get the global double variable identified by varname

varname	value
TelescopeRA	The telescope position right ascension
TelescopeDE	The telescope position declination
TimeNow	The current time in TDateTime format
CCDTEMP	The current CCD temperature
Double1 .. Double10	Ten global variable for your use

**function SetD(varname:string; x: Double):Boolean;**

Set the global double variable identified by varname for later use

varname	value
Double1 .. Double10	Ten global variable for your use

**function GetB(varname:string; var x: boolean):boolean;**

Get the global boolean variable identified by varname

varname	value
TELESCOPE_CONNECTED	True if the telescope is connected
TELESCOPE_PARKED	True if the telescope is parked
TELESCOPE_EQMOD	True if the telescope use the EqMod driver
AUTOGUIDER_CONNECTED	True if the auto-guider is connected
AUTOGUIDER_RUNNING	True if the auto-guider is running

AUTOGUIDER_GUIDING	True if the auto-guider is guiding
WHEEL_CONNECTED	True if the filter wheel is connected
FOCUSER_CONNECTED	True if the focuser is connected
CAMERA_CONNECTED	True if the camera is connected
PLANETARIUM_CONNECTED	True if the planetarium is connected
PREVIEW_RUNNING	True if the preview is running
PREVIEW_LOOP	True if the preview is in loop
CAPTURE_RUNNING	True if a capture is running

## Commands

<b>function Cmd(cname:string):string;</b>
Execute a simple command cname in CCDciel.

Valid Cmd() command are:

Command	Description
TELESCOPE_ABORTMOTION	Stop any telescope movement
TELESCOPE_TRACK	Start telescope tracking
EQMOD_CLEARPOINTS	Clear EqMod alignment data
EQMOD_CLEARSYNCDELTA	Clear Eqmod sync delta
EQMOD_STDSYNC	Set Eqmod in Standard sync mode
EQMOD_APPENDSYNC	Set Eqmod in Add point on sync mode
AUTOGUIDER_CONNECT	Connect to the autoguider software
AUTOGUIDER_CALIBRATE	Force a new calibration of the autoguider
AUTOGUIDER_STARTGUIDING	Start to guide
AUTOGUIDER_STOPGUIDING	Stop guiding
AUTOGUIDER_PAUSE	Pause guiding
AUTOGUIDER_UNPAUSE	Restart after pause
AUTOGUIDER_DITHER	Dither now
AUTOGUIDER_SHUTDOWN	Close the autoguider program
WHEEL_GETFILTER	Get the current filter number in the wheel
PREVIEW_SINGLE	Start a single preview
PREVIEW_LOOP	Start a preview loop
PREVIEW_WAITLOOP	Wait until the user stop the preview loop
PREVIEW_STOP	Stop any in progress preview or preview loop
CAPTURE_START	Start a capture
CAPTURE_STOP	Stop a capture
ASTROMETRY_SOLVE	Plate solve the current image
ASTROMETRY_SYNC	Plate solve the current image and sync the telescope
ASTROMETRY_SLEW_IMAGE_CENTER	Plate solve the current image and slew the telescope
PLANETARIUM_CONNECT	Connect the planetarium software
PLANETARIUM_SHOWIMAGE	Plate solve the current image and show in planetarium

PLANETARIUM_SHUTDOWN	Close the planetarium software
PROGRAM_SHUTDOWN	Close CCDciel
CLEAR_REFERENCE_IMAGE	Remove the reference image
AUTOFOCUS	Run auto-focus at the current position
AUTOMATICAUTOFOCUS	Move to a bright star and run auto-focus, return to last position when finished

```
function CmdArg(cname:string; arg:Tstringlist):string;
```

Execute a command cname in CCDciel with parameters arg. Add each parameter to the string list.

Valid CmdArg() command are:

Command	Arguments	Description
DEVICES_CONNECTION	ON/OFF	Connect or disconnect the devices
TELESCOPE_SLEW	RA, DEC	Slew to specified coordinates
TELESCOPE_SYNC	RA, DEC	Sync to specified coordinates
TELESCOPE_PARK	ON/OFF	Park or unpark the telescope
WHEEL_SETFILTER	number	Set the filter number in the wheel
WHEEL_GETFILTERSNAME	arg	On return arg contain the name of the filters
WHEEL_SETFILTERSNAME	arg	Put each filter name in arg
CCD_SETTEMPERATURE	temp	Set the CCD temperature
PREVIEW_SETEXPOSURE	exp	Set the preview exposure time
PREVIEW_SETBINNING	bin	Set the preview binning
CAPTURE_SETEXPOSURE	exp	Set the capture exposure
CAPTURE_SETBINNING	bin	Set the capture binning
CAPTURE_SETOBJECTNAME	name	Set the capture object name
CAPTURE_SETCOUNT	count	Set the capture image count
CAPTURE_SETFRAMETYPE	Light/Bias/Dark/Flat	Set the capture frame type
CAPTURE_SETDITHER	count	Set the capture Dither count
SEQUENCE_START	sequence	Load and start the sequence
SAVE_FITS_FILE	filename	Save the FITS file
OPEN_FITS_FILE	filename	Open the FITS file
OPEN_REFERENCE_IMAGE	filename	Load a reference image

## Delay functions

```
procedure Wait(wt:integer);
```

Wait wt seconds before to continue the execution

```
function WaitTill(hour:string; showdialog: boolean):boolean;
```

Wait until the time is "hour", encoded as 23:30:00 .

If the time is already passed by less than 12h the function return immediately, if it is passed for more than 12h it wait for

the next day.

If showdialog is true a dialog with time countdown is show, this dialog also allow to cancel or to continue immediately, it return False if the wait is canceled.

---

## Coordinates conversion

**Procedure Eq2Hz(var ra,de : double ; var a,h : double);**

Convert Equatorial ra,de to Alt/Az a,h for the location and time of the current chart, all angle in radian

**Procedure Hz2Eq(var a,h : double; var ra,de : double);**

Convert Alt/Az a,h to equatorial ra,de for the location and time of the current chart, all angle in radian

---

## Formating and conversion

**Function ARtoStr(var ar: Double) : string;**

Return a string formatted Right Ascension of ar value

**Function DEtoStr(var de: Double) : string;**

Return a string formatted Declination of de value

**Function StrtoAR(str:string; var ar: Double) : boolean;**

Convert a formatted string to Right Ascension decimal value

**Function StrtoDE(str:string; var de: Double) : boolean;**

Convert a formatted string to Declination decimal value

**Function JDtoStr(var jd: Double) : string;**

Format a julian date to YYYY-MM-DD string

**Function StrtoJD(dt:string; var jdt: Double) : boolean;**

Convert a formatted string YYYY-MM-DD to julian date value

**Function FormatFloat(Const Format : String; var Value : double) : String;**

Format a decimal number according to the  [Format](#) specification



**Function Format(Const Fmt : String; const Args : Array of const) : String;**

The  **Format** Pascal function

**Procedure StrtoFloatD(str:string; var defval: Double; var val: Double);**

Convert a string to a floating point value. Return defval if the string is a invalid number

**function IsNumber(str: String): boolean;**

Return True if the string represent a valid number

**function StringReplace(str,s1,s2: String): string;**

Replace all occurrence of s1 by s2 in str

---

## Dialog

**function MsgBox(const aMsg: string):boolean;**

A message confirmation dialog. Return True if YES is clicked.

**Procedure ShowMessage(const aMsg: string);**

Display a message.

**Procedure LogMsg(const aMsg: string);**

Write a message to the log

---

## Run external program

**function Run(cmdline:string):boolean;**

Execute the specified command. Return immediately without waiting for the execution to end.

**function RunWait(cmdline:string):boolean;**

Execute the specified command. Wait for termination.

**function RunOutput(cmdline:string; var output:TStringlist):boolean;**

Execute the specified command, wait for termination and put the stdout to "output". **Beware** this function can completely

lock the main program if it not finish in time.

---

**function OpenFile(fn:string):boolean;**


Open a document file using the default program

---

# Installation on Ubuntu, Debian

Bellow installation procedure uses only command line approach, because this is the simpler way to follow instructions just by copy-pasting the commands in terminal.

This same procedure can be used with any system using deb packages (Debian, Mint, Raspbian, ...)

CCDciel and it's dependency are available from the same repository as  [Skychart](#), but you need the unstable repository as long this program is in beta version only.

1. Add Skychart unstable repository:

```
sudo apt-add-repository 'deb http://www.ap-i.net/apt unstable main'
```

2. Install the public key:

```
apt-key adv --keyserver keyserver.ubuntu.com --recv-keys AA716FC2
```

3. Update repository:

```
sudo apt-get update
```

4. Install CCDciel:

```
sudo apt-get install ccdciel
```

See also the list of the [optional dependencies](#) to install to take full advantage of the software.

# Installation on Linux

If your Linux system use deb packages,see [Installation on Ubuntu](#).

For other Linux system you can download rpm or tar packages from the Sourceforge [download](#) link.

The requirement are Gtk2 and [libpasastro](#).


See also the list of [dependencies](#) to install to take full advantage of the software.

You can also compile the [source code](#) using [Lazarus](#).

# Installation on Windows

CCDciel can run on any current version of Windows. It may run on XP but you can experience ASCOM driver crash.

The CCDciel installer always install a 32bit version even in a 64bit Windows system because very few ASCOM driver work with a 64bit application.

To use the devices connected to your Windows computer you need the  [ASCOM platform](#) and the drivers for you hardware.



But you can also use the devices connected to a remote Linux system (Raspberry PI for example) using the INDI protocol.


You can download the setup installer from the Sourceforge  [download](#) link.

See also the list of the [optional dependencies](#) to install to take full advantage of the software.

# Installation on macOS

CCDciel can run on a recent version of macOS, the minimal version required to run the program is 10.10 Yosemite.

To use the devices connected to your Mac computer you need the  [INDI](#) library and the drivers for you hardware, available from  [CloudMakers](#).

You can download the dmg installer from the Sourceforge  [download](#) link.

See also the list of the [optional dependencies](#) to install to take full advantage of the software.

# ASCOM

 **ASCOM** Platform is the standard astronomical equipment driver for Windows.

Install the ASCOM platform and the drivers you need from  <http://ascom-standards.org/Downloads/Index.htm> or from your equipment manufacturer.

# INDI

🌐 **INDI** Library is the standard astronomical 🌐 **equipment** driver for Linux and macOS.

You can install INDI with the packages provided by your Linux distribution, but as this is a rapidly moving project it is best to get the 🌐 **latest version** directly from the project.

For example for Debian/Ubuntu see 🌐 <https://launchpad.net/~mutlaqja/+archive/ubuntu/ppa>

For macOS the best option is to get the version from 🌐 **CloudMakers**.

There is no INDI server for Windows but you can run CCDciel on Windows to connect to a remote Linux computer. Or use 🌐 **wINDI** to use your **ASCOM** devices with the INDI protocol.



# Astrometry.net

Astrometry.net can be used to solve the image you just take with your camera. Astrometric solving will give the exact astronomical position of the image center, its orientation and size.

CCDciel requires a local copy of the Astrometry.net software including the indexes on your computer. It can also run Astrometry.net on a remote host using the provided script.

At page <http://astrometry.net/use.html> you can find detailed instructions how to install the software and indexes.

## Linux

On Linux astrometry.net is probably packaged by your distribution. This is the easiest and preferred way to install the software.

For example on Debian or Ubuntu just do:

```
sudo apt-get install astrometry.net
```

Then to install some indexes:

```
sudo apt-get install astrometry-data-2mass-08-19 astrometry-data-2mass-07
```

## macOS

For macOS the best option is to get the version from [CloudMakers](#).

To use the CloudMakers version you need to change the following in the CCDciel Preferences at the [astrometry tab](#):

- Check **Use custom script**
- Enter the script name: /Applications/CCDciel/scripts/astrometry-macos.sh

If you use another version of astrometry.net on your Mac you must be sure it can be called from CCDciel without specifying a path.

If you need to add the path you can modify one of the example script located in /Applications/CCDciel/scripts to suit your needs.

## Windows

A number of Windows package include a fully automated install of Cygwin and astrometry.net and it is best to get one of them. CCDciel do not use this applications but the astrometry.net they install. Cygwin is a tool required to run a compiled version of Astrometry.net under Windows.

The following list indicate tested application and give the Cygwin path you must configure in the [astrometry preferences](#). At the time of writing all these application use the same 2010 version 0.38 of Astrometry.net.

- [ANSVR](#), set Cygwin path to C:\Users\[your user name]\AppData\Local\cygwin\_ansvr  
Install up to step 9 as indicated in the web based instruction.
- [Astrotortilla](#), set Cygwin path to C:\cygwin
- [All sky plate solver](#), set Cygwin path to C:\Users\[your user name]\AppData\Local\Astrometry
- [Windows subsystem for Linux](#), is not a real option for now as it require a 64 bits version of CCDciel but there is almost no 64 bits ASCOM drivers available.

# ELBRUS

Elbrus star locator can be used to solve the image you just take with your camera.

Look at the program page for instruction 🌐 <http://www.astrosurf.com/pulgar/elbrus/elbrusin.htm>

Before you can use it the Elbrus program must be calibrated for your images. Then select File / E-Wait for message.

Also be sure to set the parameter: "Add the WCS in the FITS header".

This is a Windows only software but I find it easy to install and use on Linux with Wine.

On the [astrometry preference](#) you can set both the DOS and Unix path to the image data to help with this use.

To install Wine on Linux or macOS see 🌐 [Wine web pages](#).

On Linux the best way is to install the wine packages provided by your distribution.

# PlateSolve 2

PlateSolve 2 can be used to solve the image you just taken with your camera. Astrometric solving will give the exact astronomical position of the image center, its orientation and size.

Look at the program page for instruction <http://planewave.com/downloads/software/>

Download and install the program and download and extract one of the two available star catalogs e.g. the UCAC3 in a sub folder. Configure the star catalog in the PlateSolve2 program. Then configure the **program path** in CCDciel.

You could test its operation manually by loading an image in PlateSolve2. It requires a position and image dimensions if not contained in the image header.

---

## Linux and Mac

This is a Windows only software but it runs on Linux with Wine.

Use winetricks to install the required VB6 dependency:

```
winetricks vb6run
```

To install Wine on Linux or macOS see [Wine web pages](#).

On Linux the best way is to install the wine packages provided by your distribution.

## Table of Content

CCDciel	1
CCDciel is a free CCD capture software intended for the amateur astronomer.	2
Documentation	3
Tutorial	3
Reference Manual	3
Installation	3
External dependencies	3
Credit	4
Tools	4
Developer	4
License	4
Tutorial	5
1- The program screen	5
Tutorial	6
2- Connecting the equipment	6
Tutorial	8
3- Global configuration	8
Tutorial	9
4- Focusing	9
Manual focus	9
Auto-focus	9
Tutorial	10
5- Simple capture	10
Tutorial	11
6- Automated sequence	11
File Menu	12
Device setup	13
Interface	13
Camera	13
Filter wheel	14
Focuser	14
Rotator	15
Mount	15
Watchdog	15
Bad/Hot pixel map	17
Create from the camera	17
Create from a dark file	17
Clear the bad pixel map	17
Check the bad pixel map	17
Possible errors	18
Focuser calibration	19
Open FITS file	22
Open picture file	23
Save FITS file	24
Reference image	25
Quit	26
Edit Menu	27
Preferences	28
Files	28
Observatory	29
Preview	30
Camera	31
Flat	32
Focus	33
Auto-Focus	35
Astrometry	39
Slew	40
Meridian	41
Autoguider	42
Planetarium	43
INDI settings	44

View FITS header	45
Tools Menu	46
Connection Tool	47
Preview Tool	48
Autoguider Tool	49
Planetarium Tool	50
Script	51
Focuser Tool	52
V curve learning	52
Star profile Tool	54
Magnifier Tool	56
Capture Tool	57
Filter Tool	58
Frame Tool	59
Rotator Tool	60
CCD Temperature Tool	61
Telescope Tool	62
Sequence Tool	63
Target editor	64
Add a target	64
Set the start and end time	64
Repeat a target	65
Add a script	65
Add an automatic flat	65
Repeat the whole sequence	66
Manage the target list	66
Plan editor	67
Add a step	67
Repeat a step	67
Manage the steps	67
Video tool	68
Visualisation Tool	69
Logging	71
Clock	72
Help	73
Right click menu	74
Plate solving functions	74
Resolve	74
Resolve and Slew to image center	74
Resolve and Slew to cursor	74
Resolve and Sync the mount	74
Resolve and Rotate	74
Resolve and Sync the rotator	75
Resolve and show image in planetarium	75
Resolve and show image frame in planetarium	75
View last resolver log	75
Preview functions	75
Preview debayer	75
Preview raw	75
Image cleanup	75
The status bar	76
TCP/IP server	77
CCDciel Script	78
Script editor	78
Script debugger	79
Script example	80
Generality	80
Open a document	82
Run a command	82
No wait	82
Wait until the end of the command	82
Wait for a result	82
Script reference	84
Script language	84
Constants	84

Global variables access	84
Commands	86
Delay functions	87
Coordinates conversion	88
Formating and conversion	88
Dialog	89
Run external program	89
Installation on Ubuntu, Debian	91
Installation on Linux	92
Installation on Windows	93
Installation on macOS	94
ASCOM	95
INDI	96
Astrometry.net	97
Linux	97
macOS	97
Windows	97
ELBRUS	98
PlateSolve 2	99
Table of Content	100