

## ITEA2 PROJECT

**2012-2015**

Frame to be used to indicate a customer reference number.


Client :	C/Ref. :
----------	----------

Work-Package 2 : “Requirements”

API Requirements for OpenETCS – appendix - Application Layer v1.2

N. Boverie

September 2014

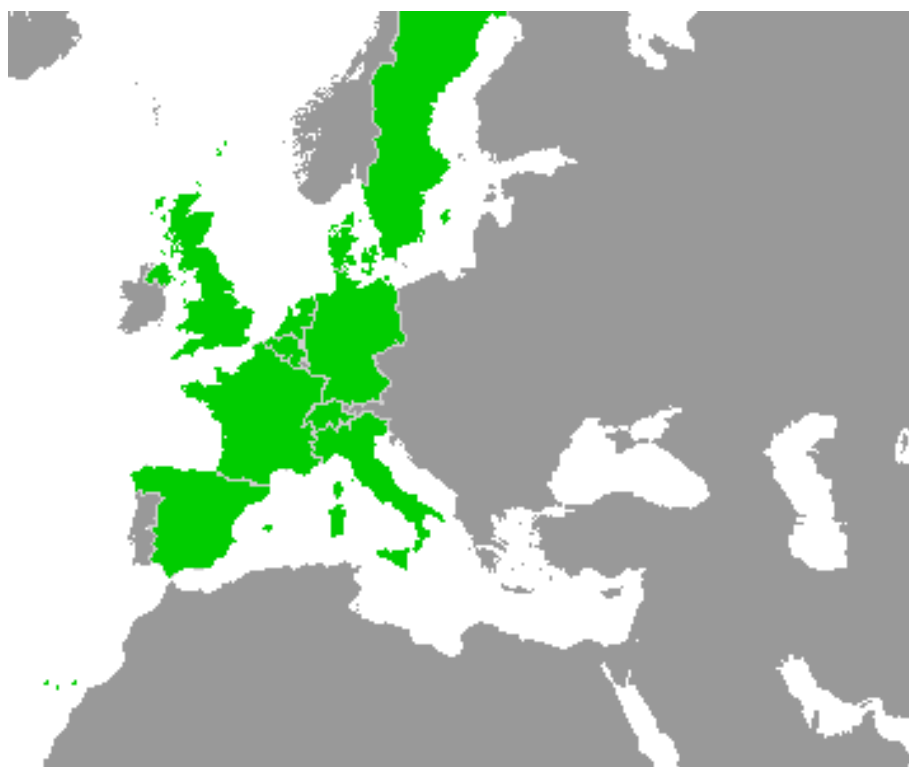

## ITEA2 PROJECT

**2012-2015**

Amendment record

Rev. <sup>1</sup>	Author	Version	Date	§	Modifications
	N. Boverie	1.0	06/02/2014	All	creation of the document
	N. Boverie	1.1	03/07/2014	All	* According to review sheet OETCS_API_review_2014_07_03_SINGLE_sheet.xlsx
	N. Boverie	1.2	08/09/2014	§3	Update of the DMI interface (Baseline 3)

---

1 M : meeting review, R : read-back process

# ITEA2 PROJECT

## 2012-2015

### Table of Content

<b>1. INTRODUCTION .....</b>	<b>4</b>
1.1 SUBJECT .....	4
1.2 FIELD OF APPLICATION .....	4
1.3 DOCUMENT DESCRIPTION .....	4
<b>2. DOCUMENTS &amp; TERMINOLOGY .....</b>	<b>5</b>
2.1 REFERENCE DOCUMENTS .....	5
2.2 APPLICABLE DOCUMENTS .....	5
2.3 DEFINITIONS .....	5
2.4 ABBREVIATIONS .....	5
<b>3. OPENETCS APPLICATION - DMI INTERFACE .....</b>	<b>6</b>
3.1 TELEGRAM STRUCTURE AND PRINCIPLES .....	6
3.2 TELEGRAM HEADER .....	7
3.3 PACKETS.....	8
3.4 VARIABLES.....	34
<b>4. OPENETCS APPLICATION - JRU INTERFACE .....</b>	<b>77</b>
4.1 JRU MESSAGES DEFINITION .....	77
4.2 OPENETCS APPLICATION – JRU CONTROL MESSAGES .....	78
4.3 OPENETCS APPLICATION-JRU DATA MESSAGES .....	79
<b>5. OPENETCS APPLICATION - TIU INTERFACE .....</b>	<b>100</b>
5.1 COMPONENTS OF LANGUAGE .....	100
5.1.1 <i>Introduction</i> .....	100
5.1.2 <i>Definition of Variables</i> .....	100
5.1.3 <i>Definition of Packets</i> .....	101
5.2 PACKETS.....	102
5.2.1 <i>List of Packets</i> .....	102
5.2.2 <i>PACKETS: TIU to OpenETCS application</i> .....	103
5.2.3 <i>PACKETS: OpenETCS application to TIU</i> .....	108
5.3 VARIABLES.....	114
5.3.1 <i>List of Variables</i> .....	114

## ITEA2 PROJECT

**2012-2015**

### 1. INTRODUCTION

#### 1.1 SUBJECT

This appendix document provides the OpenETCS application layer interface definition (telegram definition) for:

- the DMI interface
- the JRU interface
- the TIU interface

This document is an appendix document of the ALSTOM proposal for the Application Programming Interface (API) Specification of the OpenETCS Onboard Application Software (applicable document /5/).

This specification shall be directly based on the Application Programming Interface (API) Specification of the ALSTOM ERTMS Onboard CORE Application Software.

#### 1.2 FIELD OF APPLICATION

This document is to be considered in the frame of the OpenETCS program.

This specification is compliant to Unisig Baseline 3 of the ETCS Onboard unless explicitly mentioned in the document.

As the ALSTOM development for the ETCS Baseline 3 is still in progress, this document could be modified in the future.

This document is an appendix of the applicable document /5/.

Note: the modifications of this version 1.2 of the present document (compared to the previous 1.1 version) consist in a revision of the DMI interface in order to be as well as possible compliant to Baseline 3.

#### 1.3 DOCUMENT DESCRIPTION

For each interface, the following definition is provided:

- Telegram structure
- Packets
- Variables

## **ITEA2 PROJECT**

**2012-2015**

## **2. DOCUMENTS & TERMINOLOGY**

### **2.1 REFERENCE DOCUMENTS**

/1/ System Requirements Specification, ref. SUBSET-026, v3.3.0

/2/ Glossary of terms and abbreviations, ref. SUBSET-023, v3.0.0

/3/ ERTMS/ETCS – ETCS Driver Machine Interface, ERA\_ERTMS\_015560, v.3.3.0

/4/ FIS Juridical Recording, ref SUBSET-027, v3.0.0

### **2.2 APPLICABLE DOCUMENTS**

/5/ API Requirements for OpenETCS

### **2.3 DEFINITIONS**

	Refer to /5/
--	--------------

Refer also to /2/

### **2.4 ABBREVIATIONS**

	Refer to /5/
--	--------------

Refer also to /2/

## ITEA2 PROJECT

2012-2015

### 3. OPENETCS APPLICATION - DMI INTERFACE

#### 3.1 TELEGRAM STRUCTURE AND PRINCIPLES

This section describes the messages of the proprietary application layer between the DMI and the OpenETCS application (EVC CORE board).

This section provides the list of packets for each function.

The packets are grouped together into telegrams.


The telegrams between the OpenETCS application and the DMI are transmitted in an aperiodic way.

The telegram from/to the OpenETCS application shall be composed of a telegram header followed by zero, one or several packets.

The typical maximum number of packets in a single applicative telegram from the OpenETCS application to the DMI is 30 packets.

The applicative telegram from the DMI to the OpenETCS application shall not contain more than 10 packets.

The Application telegram structure is described below:

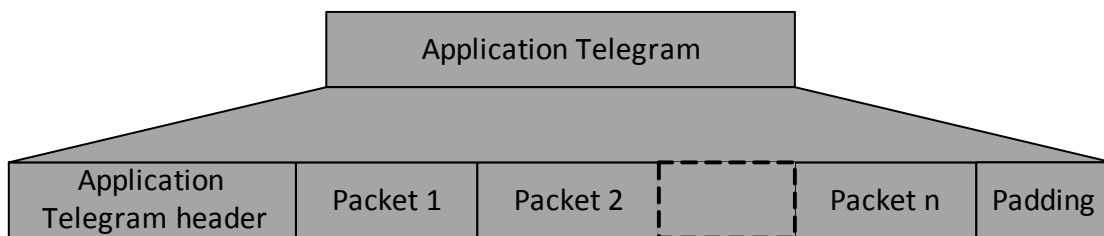

Application Telegram structure

The general telegram between the OpenETCS application and the DMI shall be built as following.

Description	General telegram structure between DMI and OpenETCS	
Content	Group	Comment
	Telegram header	General telegram header between DMI and OpenETCS.
	Packet(s)	Optional packets (0 to N packets) as needed by application
	Padding	0 to 7 bits when required.

## ITEA2 PROJECT

### 2012-2015

The same packet may be present more than one time in a telegram.

If needed to obtain an integer number of bytes, padding shall be added at the end of the telegram.

The padding bits value shall always be set to 1.

However, no monitoring of the padding bits value is required for the OpenETCS or the DMI.

Each packet and the header are composed of several variables.

The following packets shall always be followed (immediately or not) by the corresponding packet 5 (menu button accessibility) in the same telegram:

- Packet 3: confirmation request,
- Packet 6: Screen request,
- Packet 15: data view request,
- Packet 41: Menu window request,
- Packet 179: Request for additional data entry,
- Packet 181: Confirmation for additional data entry.

### 3.2 TELEGRAM HEADER

The header shall be built as following.

Description	General telegram header between DMI and OpenETCS		
<i>Content</i>	Variable	Length	Comment
	DMI_NID_TELEGRAM	8	Telegram Identification Number: 1: Telegram from EVC (OpenETCS application) to DMI 3: Telegram from DMI to EVC (OpenETCS application)
	DMI_L_TELEGRAM	16	Telegram length in bytes including everything (from DMI_NID_TELEGRAM to padding).

In case the telegram length is not as expected in the header, the DMI shall reject the telegram.

In case the packet length is not as expected in the packet, the DMI shall reject the telegram.

In case the packet identifier is not known by the DMI, the DMI shall skip the packet based on the packet length, without rejecting the whole telegram.

## ITEA2 PROJECT

2012-2015

### 3.3 PACKETS

Packet 02: Delete instantiated element (from EVC to DMI)

<b>Description</b>	EVC commands the deletion of an instantiated message (text message or acknowledgeable indicator).		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_NID_EVC_MESSAGE	8	Message instance identifier.

Packet 03: Confirmation request (from EVC to DMI)

<b>Description</b>	This packet is sent from the EVC to the DMI when a confirmation screen has to be displayed.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_M_CONFIRMATION_WINDOW	8	Identifier of the confirmation screen
	DMI_N_ITER_TEXT	5	Number of i-iteration.
	DMI_Q_TEXT_CONFIRM (i)	8	Identifier of the predefined text for confirmation
	DMI_L_TEXT (i)	8	Number of characters in text field. Length of free text to be added at the end of the predefined text.
	DMI_X_TEXT (i,j)	8	Characters of text field to be added at the end of the predefined text. The number of iterations is equal to the value of DMI_L_TEXT.
	DMI_N_ITER	5	Number of k-iterations.
	DMI_NID_DATA (k)	10	Identifier of the k <sup>th</sup> data
	DMI_Q_VALUE_TYPE (k)	2	Type of the k <sup>th</sup> data value
	DMI_Q_DATA_STATUS (k)	3	Status of the k <sup>th</sup> data value for display purpose.



## ITEA2 PROJECT

2012-2015

	DMI_L_VALUE (k)	8	If DMI_Q_VALUE_TYPE = 1 *: String size of the k <sup>th</sup> data value (number of DMI_X_VALUE)
	DMI_X_VALUE (k,l)	8	If DMI_Q_VALUE_TYPE = 1 *: l <sup>th</sup> text string element of the k <sup>th</sup> data value
	DMI_NID_VALUE (k)	8	If DMI_Q_VALUE_TYPE = 2 *: Identifier of the k <sup>th</sup> data value
	DMI_T_CLOCK (k)	32	If DMI_Q_VALUE_TYPE = 3 *: k <sup>th</sup> data value (if it is a clock)

\*: if DMI\_Q\_VALUE\_TYPE has another value, this variable is not transmitted.

Packet 04 : Screen control (From EVC to DMI)

<b>Description</b>	This packet sends to the DMI information to manage each display unit.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	BUILD_IMAGE	1	DMI activity
	PRIMARY_DISPLAY_OTHER	1	Function allocation for primary display
	PRIMARY_DISPLAY_PA	1	Function allocation for primary display
	PRIMARY_DISPLAY_SPEEDO	1	Function allocation for primary display
	PRIMARY_DISPLAY_SPARE	1	Spare (defined for any possible future use not to impact the interface)
	SECONDARY_DISPLAY_OTHER	1	Function allocation for secondary display
	SECONDARY_DISPLAY_PA	1	Function allocation for secondary display
	SECONDARY_DISPLAY_SPEEDO	1	Function allocation for secondary display
	SECONDARY_DISPLAY_SPARE	1	Spare (defined for any possible future use not to impact the interface)

Packet 05: Menu button accessibility (from EVC to DMI)

## ITEA2 PROJECT

2012-2015

<b>Description</b>	<p>This packet contains information to configure menu button accessibility.</p> <p>This packet is sent only when the button accessibility change.</p> <p>This packet contains only buttons concerned by the modification of button accessibility.</p>		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_N_ITER_BUTTON	8	Number of i-iterations.
	DMI_NID_BUTTON (i)	10	Identifier of button
	DMI_M_BUTTON_STATUS (i)	1	Status of button

Packet 06: Screen request (From EVC to DMI)

<b>Description</b>	<p>This packet is used when a screen shall be displayed</p> <p>All the leaves are always listed in the packet.</p> <p>DMI_Q_VALUE_TYPE(1) corresponds to the default value sent by EVC.</p> <p>DMI_Q_VALUE_TYPE(2) corresponds to a predefined choice sent by EVC</p>		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_M_ENTRY_WINDOW	8	Screen request identifier
	DMI_N_ITER	5	Number of i-iterations.
	DMI_NID_DATA (i)	10	Identifier of the $i^{\text{th}}$ data
	DMI_Q_VALUE_TYPE(1) (i)	2	Type of the default value for the $i^{\text{th}}$ data.
	DMI_L_VALUE (i)	8	If DMI_Q_VALUE_TYPE = 1 *: String size of the $i^{\text{th}}$ default data value (number of DMI_X_VALUE)
	DMI_X_VALUE (i,j)	8	If DMI_Q_VALUE_TYPE = 1 *: $j^{\text{th}}$ text string element of the $i^{\text{th}}$ default data value.
	DMI_NID_VALUE (i)	8	If DMI_Q_VALUE_TYPE = 2 *: Identifier of the $i^{\text{th}}$ default data value

## ITEA2 PROJECT

2012-2015

	DMI_T_CLOCK (i)	32	If DMI_Q_VALUE_TYPE = 3 *: i <sup>th</sup> default data value (if it is a clock)
	DMI_Q_VALUE_TYPE(2) (i)	2	Type of predefined values for the i <sup>th</sup> data.
	DMI_N_ITER_VALUE (i)	5	If DMI_Q_VALUE_TYPE(2) (i) ≠ 0: Number of predefined values for the i <sup>th</sup> data.
	DMI_L_VALUE (i,k)	8	If DMI_Q_VALUE_TYPE(2) (i) = 1 *: Size of the k <sup>th</sup> predefined value for the i <sup>th</sup> data (when it is a string).
	DMI_X_VALUE (i,k,l)	8	If DMI_Q_VALUE_TYPE = 1 *: l <sup>th</sup> text string element of the k <sup>th</sup> predefined value for the i <sup>th</sup> data (when it is a string).
	DMI_NID_VALUE (i,k)	8	If DMI_Q_VALUE_TYPE(2) (i) = 2 *: Identifier of the k <sup>th</sup> predefined value for the i <sup>th</sup> data (when it is not a string).
	DMI_T_CLOCK (i,k)	32	If DMI_Q_VALUE_TYPE(2) (i) = 3 *: k <sup>th</sup> predefined value for the i <sup>th</sup> data (if it is a clock).

\*: if DMI\_Q\_VALUE\_TYPE has another value, this variable is not transmitted.

### Packet 07: Sound activation (From EVC to DMI)

Description	EVC command to generate a sound.		
Content	Variable	Length	Comment
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_NID_EVC_SOUND	8	Sound identifier
	DMI_Q_SOUND	8	Sound qualifier

### Packet 08: Analog train speed info (from EVC to DMI)

## ITEA2 PROJECT

**2012-2015**

<b>Description</b>	This packet contains speed driving information (from EVC to DMI) to be displayed by means of CSG needle.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_V_TRAIN_ANALOG	10	Analogic value of current train speed

Packet 09: EVC Text message (from EVC to DMI)

<b>Description</b>	Text message for the DMI with or without acknowledgement transmitted from EVC to DMI		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_NID_EVC_MESSAGE	8	Message instance identifier
	DMI_M_XATTRIBUTE	10	Attribute of message
	DMI_Q_ACK	1	Acknowledgement qualifier
	DMI_Q_PRIORITY	1	Priority qualifier
	DMI_Q_TEXT	8	Predefined text qualifier
	DMI_L_TEXT	8	Number of DMI_X_TEXT
	DMI_X_TEXT (i)	8	i <sup>th</sup> text string element.

Packet 11: Update indicator (from EVC to DMI)

<b>Description</b>	This packet contains indicator displayed in the LCD screen.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_N_ITER_INDICATOR	8	Number of i-iterations.
	DMI_NID_EVC_INDICATOR(i)	10	Indicator Identifier
	DMI_NID_EVC_ICON(i)	8	Icon identifier
	DMI_Q_INDICATOR(i)	2	Indicator qualifier

## ITEA2 PROJECT

**2012-2015**

Packet 13: Echo Data (from EVC to DMI)

<b>Description</b>	This packet is used to send Echo Data to the DMI		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_N_ITER	5	Number of i-iterations.
	DMI_NID_DATA (i)	10	Identifier of the i <sup>th</sup> data
	DMI_Q_VALUE_TYPE (i)	2	Type of value for the i <sup>th</sup> data.
	DMI_Q_DATA_STATUS (i)	3	If DMI_Q_VALUE_TYPE (i) ≠ 0 : Data status of the i <sup>th</sup> data.
	DMI_L_VALUE (i)	8	If DMI_Q_VALUE_TYPE (i) = 1 *: String size for the i <sup>th</sup> value (when it is a string).
	DMI_X_VALUE (i, j)	8	If DMI_Q_VALUE_TYPE (i) = 1 *: j <sup>th</sup> character of the i <sup>th</sup> value (when it is a string).
	DMI_NID_VALUE (i)	8	If DMI_Q_VALUE_TYPE (i) = 2 *: Value identifier of the i <sup>th</sup> data.
	DMI_T_CLOCK (i)	32	If DMI_Q_VALUE_TYPE (i) = 3 *: Value of the i <sup>th</sup> data (if it is a clock).

\*: if DMI\_Q\_VALUE\_TYPE has another value, this variable is not transmitted.

Packet 15: Data view (From EVC to DMI)

<b>Description</b>	This packet is used to request a data view window and transmit ETCS and technical data for data view purpose.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length

## ITEA2 PROJECT

**2012-2015**

	DMI_M_VIEW_WINDOW	8	Data View window request identifier.
	DMI_N_ITER_DATA_VIEW	8	Number of i-iterations.
	DMI_NID_DATA (i)	10	Identifier of the $i^{\text{th}}$ data
	DMI_Q_VALUE_TYPE (i)	2	Type of value for the $i^{\text{th}}$ data.
	DMI_L_VALUE (i)	8	If DMI_Q_VALUE_TYPE (i) = 1 *: String size for the $i^{\text{th}}$ value (when it is a string).
	DMI_X_VALUE (i,j)	8	If DMI_Q_VALUE_TYPE (i) = 1 *: $j^{\text{th}}$ character of the $i^{\text{th}}$ value (when it is a string).
	DMI_NID_VALUE (i)	8	If DMI_Q_VALUE_TYPE (i) = 2 *: Value identifier of the $i^{\text{th}}$ value.
	DMI_T_CLOCK (i)	32	If DMI_Q_VALUE_TYPE (i) = 3 *: $i^{\text{th}}$ value (when it is a clock).

\*: if DMI\_Q\_VALUE\_TYPE has another value, this variable is not transmitted.

Packet 16 : EVC connection request (from EVC to DMI)

<b>Description</b>	This packet contains the connection or disconnection request to the DMI. This packet is also used for connection deny.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_Q_CONNECT	4	Qualifier of the connection

Packet 17: Local time (from EVC to DMI)

<b>Description</b>	This packet contains local time information (from EVC to DMI)		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length

## ITEA2 PROJECT

2012-2015

	DMI_T_CLOCK	32	Local clock
--	-------------	----	-------------

Packet 18: Planning area icons info (from EVC to DMI)

Description	This packet contains planning area icons to display on D2/D3/D4 , D6 or D8 location		
Content	Variable	Length	Comment
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_Q_SCALE	2	Scale of DMI_D_TARGET
	DMI_N_ITER	5	Number of i-iterations.
	DMI_NID_EVC_ICON(i)	8	Identifier of the i <sup>th</sup> icon to display
	DMI_NID_AREA(i)	2	Part of the planning area where the i <sup>th</sup> icon shall be displayed
	DMI_D_TARGET(i)	15	Distance at which the i <sup>th</sup> icon shall be displayed

Packet 19: Planning area speed restrictions info (from EVC to DMI)

Description	This packet contains planning area speed profile displayed on D7 area		
Content	Variable	Length	Comment
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_Q_SCALE	2	Scale of DMI_D_TARGET
	DMI_N_ITER	5	Number of i-iterations.
	DMI_Q_WIDTH(i)	7	Width of the i <sup>th</sup> speed restriction
	DMI_D_TARGET(i)	15	Distance at which the i <sup>th</sup> speed restriction shall end (its start is the previous speed restriction end, or 0 if this is the first speed restriction)

Packet 20: data transmission start / stop (from EVC to DMI)

## ITEA2 PROJECT

**2012-2015**

<b>Description</b>	This packet informs the DMI about the start and stop of a transmission process.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_Q_START_STOP	2	Indicates the beginning or the end of the transmission process.

Packet 23: Set speed info (from EVC to DMI)

<b>Description</b>	This packet contains the set speed indication information (from EVC to DMI) to be displayed on CSG by means of a specific icon.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_V_SET_SPEED	10	Set speed value
	DMI_NID_EVC_ICON	8	Icon to display.

Packet 26: Planning area gradient profiles info (from EVC to DMI)

<b>Description</b>	This packet contains gradient profiles information displayed numerically on the D5 area.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_Q_SCALE	2	Scale of DMI_D_TARGET
	DMI_N_ITER	5	Number of i-iterations.
	DMI_Q_GRAD_DIR(i)	1	Qualifier for $i^{\text{th}}$ gradient slope
	DMI_M_GRAD(i)	8	Absolute value of the $i^{\text{th}}$ gradient
	DMI_D_TARGET(i)	15	Distance at which the $i^{\text{th}}$ gradient profile ends (its start is the previous gradient profile end, or 0 if this is the first speed restriction)

Packet 27: Freeze Data Entry (From EVC to DMI)



## ITEA2 PROJECT

**2012-2015**

<b>Description</b>	This packet is used to send Freeze Data Entry to the DMI		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_Q_FREEZE	1	Screen State

Packet 29: Freeze Confirmation Screen (From EVC to DMI)

<b>Description</b>	This packet is used to send Freeze Confirmation Screen to the DMI		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_Q_FREEZE	1	Screen State

Packet 30: Driver language transmission (from DMI to EVC or from EVC to DMI)

<b>Description</b>	Driver language selection.  Each DMI sends this packet on EVC applicative connexion (after packet 16 exchange) and on DMI language modification.  DMI updates its language when EVC sends this message to DMI. If new language is unknown by DMI, this packet is ignored.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_NID_DRV_LANG	16	Driver language selection

Packet 31: Planning area displaying (from EVC to DMI)

<b>Description</b>	This packet contains the planning area status for displaying on D location		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier

## ITEA2 PROJECT

2012-2015

	DMI_L_PACKET	16	Packet length
	DMI_M_PLANNING	1	Displaying status of the planning area

Packet 32: Tunnel stopping area distance information (from EVC to DMI)

<b>Description</b>	This packet contains the tunnel stopping area status for displaying		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_Q_DISPLAY_TUN_STOPPING	1	Display status of the tunnel stopping area.
	DMI_D_TUN_STOPPING	24	Distance of tunnel stopping area

Packet 33: Geographical position information (from EVC to DMI)

<b>Description</b>	This packet contains the Geographical position information for displaying		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_Q_DISPLAY_GEO_POS	1	Display status of the geographical position.
	DMI_D_GEO_POS	24	Value of kilometre point

Packet 37: STM specific test request (from EVC to DMI)

<b>Description</b>	Text message for the DMI indicating request for specific test request from STM. Text is displayed as high priority one and managed as an EVC text Message.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier

## ITEA2 PROJECT

2012-2015

	DMI_L_PACKET	16	Packet length
	DMI_NID_EVC_MESSAGE	8	Message instance identifier
	STM_M_XATTRIBUTE	10	Attribute for text string of the data and its associated value(s)
	DMI_L_TEXT	8	Size of the text string.
	DMI_X_TEXT (i)	8	i <sup>th</sup> text string element.

Packet 41: Menu window request (from EVC to DMI)

Description	This packet is used by EVC to request a menu window.		
Content	Variable	Length	Comment
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_M_MENU_WINDOW	8	Menu window identifier.
	DMI_Q_HOUR_GLASS	1	Hour glass display qualifier.

Packet 43: Speed and distance supervision information (from EVC to DMI)

Description	This packet contains speed bargraph information (from EVC to DMI) to be displayed on the Circular Speed Gauge. Many different coloured segments may be displayed according to information in variables.		
Content	Variable	Length	Comment
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_Q_SCALE	2	Scale of DMI_D_TARGET
	DMI_V_PERMIT	10	Permitted speed
	DMI_V_TARGET	7	Target speed
	DMI_V_RELEASE	10	Release speed
	DMI_V_INTERV	10	Intervention speed
	DMI_D_TARGET	15	Target distance
	DMI_M_COLOUR_SP	3	Colour of speed pointer (needle)

## ITEA2 PROJECT

### 2012-2015

	DMI_M_COLOUR_PS	3	Colour of permitted speed
	DMI_Q_DISPLAY_PS	2	Display of permitted speed
	DMI_M_COLOUR_TS	3	Colour of target speed
	DMI_Q_DISPLAY_TS	2	Display of target speed
	DMI_M_COLOUR_RS	3	Colour of release speed
	DMI_Q_DISPLAY_RS	2	Display of release speed
	DMI_M_COLOUR_IS	3	Colour of intervention speed
	DMI_Q_DISPLAY_IS	2	Display of intervention speed
	DMI_Q_DISPLAY_TD	2	Display of target distance

Packet 44: ETCS Speed and distance display inhibition (from EVC to DMI)

<b>Description</b>	This packet is sent from the EVC to the DMI to inhibit the display of ETCS speed.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_Q_INH_ETCS_SPD_DIST_DISPLAY	1	ETCS Speed and Distance Display inhibition.

Packet 47 : STM accessibility (from EVC to DMI)

<b>Description</b>	This packet contains information on the accessibility to the DMI for a STM (from EVC to DMI). This packet informs the DMI whether to treat the packets sent by STM and how.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	STM_NID_STM	8	STM identity
	DMI_ACCEPTANCE_STATE	2	State of the acceptance for the STM

## ITEA2 PROJECT

### 2012-2015

Packet 48 : STM error on DMI (from DMI to EVC)

<b>Description</b>	This packet contains information on error related to STM packet reception.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	STM_NID_STM	8	STM identity

Packet 50: Acknowledgement reply (from DMI to EVC)

<b>Description</b>	Report from ETCS on driver acknowledgement.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_NID_EVC_MESSAGE	8	Acknowledged message instance identifier

Packet 52: Driver request (from DMI to EVC)

<b>Description</b>	Driver action reported to the EVC.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_NID_BUTTON	10	Identifier of button

Packet 53: Driver data reply (from DMI to EVC)

<b>Description</b>	Driver data sent to the EVC.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length

## ITEA2 PROJECT

2012-2015

	DMI_NID_DATA	10	Identifier of the data
	DMI_Q_VALUE_TYPE	2	Type of the returned value.
	DMI_L_VALUE	8	If DMI_Q_VALUE_TYPE = 1 *: Size of the data value string
	DMI_X_VALUE (i)	8	If DMI_Q_VALUE_TYPE = 1 *: $i^{\text{th}}$ data value text string element
	DMI_NID_VALUE	8	If DMI_Q_VALUE_TYPE = 2 *: Identifier of a value
	DMI_T_CLOCK	32	If DMI_Q_VALUE_TYPE = 3 *: Data value (when it is a clock).

\*: if DMI\_Q\_VALUE\_TYPE has another value, this variable is not transmitted.

Packet 54: Confirmation reply (From DMI to EVC)

Description	Driver reply sent to the EVC		
Content	Variable	Length	Comment
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_M_CONFIRMATION_WINDOW	8	Identifier of the confirmation window
	One bit to 0	1	Value = 0 (not used) This bit is kept to avoid integration problems
	DMI_Q_CONFIRM	1	Driver Confirmation
	DMI_N_ITER	5	Number of i-iterations
	DMI_NID_DATA (i)	10	Identifier of the data
	DMI_Q_VALUE_TYPE (i)	2	Type of the $i^{\text{th}}$ data value
	DMI_L_VALUE (i)	8	If DMI_Q_VALUE_TYPE = 1 *: Size of string for the $i^{\text{th}}$ data value
	DMI_X_VALUE (i,j)	8	If DMI_Q_VALUE_TYPE = 1 *: $j^{\text{th}}$ text string element of the $i^{\text{th}}$ data value

## ITEA2 PROJECT

### 2012-2015

	DMI_NID_VALUE (i)	8	If DMI_Q_VALUE_TYPE = 2 *: Identifier of the i <sup>th</sup> data value
	DMI_T_CLOCK (i)	32	If DMI_Q_VALUE_TYPE = 3 *: i <sup>th</sup> data value (when it is a clock).

\*: if DMI\_Q\_VALUE\_TYPE has another value, this variable is not transmitted.

Packet 56: Text message deleted stack full (from DMI to EVC)

<b>Description</b>	Report from ETCS on deletion of text message when the stack is full.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_NID_EVC_MESSAGE	8	Message instance identifier

Packet 57 : DMI connection confirm (From DMI to EVC)

<b>Description</b>	This packet contains the connection confirmation with the versions of DMI software and configuration data.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_Q_CONNECT	4	Qualifier of the connection
	SW_INTERFACE_EVC_DMI_VERSION	24	SW interface between DMI and EVC
	DP_INTERFACE_EVC_DMI_VERSION	24	DP interface between DMI and EVC

Packet 58 : DMI state (from DMI to EVC)

<b>Description</b>	This packet contains the actual state of the DMI		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length

## ITEA2 PROJECT

### 2012-2015

	DMI_Q_STATE	4	DMI state qualifier
	SCREEN_STATE_MAIN	2	Primary screen status
	SCREEN_STATE_SECONDARY	2	Secondary screen status

Packet 59: Event report (from DMI to EVC)

<b>Description</b>	The DMI reports an internal event to be recorded by the JRU.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_NID_EVENT	8	Event identifier

Packet 66: DMI-controlled window request (from EVC to DMI)

<b>Description</b>	This packet is sent from the EVC to the DMI when a DMI-controlled window has to be displayed.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_M_DMI_CONTROLLED_WINDOW	8	Identifier of the DMI-controlled window to be displayed.

Packet 67: DMI-controlled window exit request (from DMI to EVC)

<b>Description</b>	This packet is sent from DMI to EVC when a (local) condition is fulfilled by the DMI to exit of current DMI-controlled menu window.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length

Packet 68: Acknowledgeable indicator (from EVC to DMI)



## ITEA2 PROJECT

2012-2015

<b>Description</b>	Indicator to be acknowledged by the driver.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_NID_EVC_MESSAGE	8	Message instance identifier. Common use with packet 9 message instance identifiers.
	DMI_NID_EVC_INDICATOR	10	Indicator Identifier
	DMI_NID_EVC_ICON	8	Icon identifier

Packet 69: ACK Retention (from EVC to DMI)

<b>Description</b>	This packet indicates if the ACK requests have to be buffered by the DMI or can be treated immediately.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_Q_ACK_RETENTION	1	ACK retention

Packet 70: On-going Acknowledgement (from DMI to EVC)

<b>Description</b>	Indicates when the DMI begins or ends the process of its acknowledgement FIFO.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_Q_ONGOING_ACK	1	Acknowledgement process beginning / end

Packet 71: Digital train speed info (from EVC to DMI)

<b>Description</b>	This packet contains numeric speed driving information to be displayed with 3 digits in the centre of the needle.		
--------------------	---	--	--

## ITEA2 PROJECT

**2012-2015**

<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_V_TRAIN_NUM	10	Numerical train speed

Packet 72: Question box request (from EVC to DMI)

<b>Description</b>	This packet is used by EVC to request the display of a question box to the DMI.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_Q_DISPLAY_QUESTION_BOX	8	Question box to be displayed.

Packet 73: Question box reply (from DMI to EVC)

<b>Description</b>	This packet is used by DMI to send to the EVC the driver answer to a question box.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_Q_DISPLAY_QUESTION_BOX	8	Question box to be displayed.
	DMI_Q_QUESTION_REPLY	1	Driver answer to the question box.

Packet 76: Fixed text messages (From EVC to DMI)

<b>Description</b>	Text message from track to train transmitted from EVC to DMI This packet is derived from subset 26 packet 76		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_NID_TRACK_MESSAGE	8	Instance identifier of the message

## ITEA2 PROJECT

**2012-2015**

	Q_TEXTCLASS	2	Class of message to be displayed.
	DMI_Q_TEXTACK	2	Qualifier of acknowledgement of the fixed text message.
	Q_TEXT	8	qualifier of predefined text

Packet 77: Track acknowledgement reply (from DMI to EVC)

<b>Description</b>	Report from ETCS on acknowledgement of text message. If text message is deleted before acknowledgement, this packet is not transmitted.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_NID_TRACK_MESSAGE	8	Instance identifier of the ack message

Packet 78: Delete track text message (from EVC to DMI)

<b>Description</b>	EVC commands the deletion of text message.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_NID_TRACK_MESSAGE	8	Instance identifier of the message

Packet 79: Track message deleted stack full (from DMI to EVC)

<b>Description</b>	Report from ETCS on deletion of text message when the stack is full...		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_NID_TRACK_MESSAGE	8	Instance identifier of the message

## ITEA2 PROJECT

### 2012-2015

Packet 82: Manage ATP test (from EVC to DMI)

<b>Description</b>	ATP test state during morning test. EVC sends this message once ATP to test is activated		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	NID_ATP_TEST	9	ATP identity
	ATP_TEST_STATE	8	Current state of the ATP test

Packet 85: iBox\_state (from DMI to EVC)

<b>Description</b>	This packet notifies EVC for iBox status modification. It is sent to EVC on iBox connection and on iBox status modification.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	DMI_IBOX_FAULT_REPORT	16	Bitfield for iBox fault report
	DMI_L_FAULT_STATUS	8	Length of status list
	DMI_X_FAULT_STATUS (i)	8	Fault status array.

Packet 87: ATP test result (from DMI to EVC)

<b>Description</b>	Indicates that the ATP daily test is over and gives the result.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	NID_ATP_TEST	9	ATP identity
	ATP_TEST_RESULT	8	Result of the ATP test

Packet 179: Request for additional data entry (from EVC to DMI)

<b>Description</b>	This packet creates and initialises additional data entry. Transmitted from EVC to DMI to allow the driver to select the value for all parameters.		
--------------------	---	--	--

## ITEA2 PROJECT

2012-2015

<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	STM_NID_STM	8	STM requesting additional data
	DMI_M_STRING_FORMAT	2	String format
	DMI_N_ITER	5	Number of j-iterations Maximum value = 15
	STM_NID_DATA (j)	8	Functional identity of the j <sup>th</sup> STM data to be entered.
	STM_L_DATA_CAPTION (j)	6	Size of the j <sup>th</sup> data caption string maximum value : = 40 if DMI_M_STRING_FORMAT is UTF-8 (20 characters max coded in UTF-8 on 2 bytes) = 20 if DMI_M_STRING_FORMAT is ISO 8859-1
	STM_X_DATA_CAPTION (j,q)	8	q <sup>th</sup> text byte string of the j <sup>th</sup> data caption (ISO 8859-1 or UTF-8 on 1 or 2 bytes).
	STM_L_VALUE (j)	5	String length of the j <sup>th</sup> default data value. Maximum value: = 20 if DMI_M_STRING_FORMAT is UTF-8 (10 characters max coded in UTF-8 on 2 bytes) = 10 if DMI_M_STRING_FORMAT is ISO 8859-1 = 0 if there is no current value
	STM_X_VALUE (j,i)	8	i <sup>th</sup> text byte of the j <sup>th</sup> default data value string (ISO 8859-1 or UTF-8 on 1 or 2 bytes)
	DMI_N_ITER_VALUE (j)	5	Number of i-iterations. Maximum iteration data value = 31

## ITEA2 PROJECT

**2012-2015**

	STM_L_VALUE (j,i)	5	Length of $i^{\text{th}}$ predefined value string for the $j^{\text{th}}$ value.  maximum value :  = 20 if DMI_M_STRING_FORMAT is UTF-8 (10 characters max coded in UTF-8 on 2 bytes)  = 10 if DMI_M_STRING_FORMAT is ISO 8859-1
	STM_X_VALUE (j,i,k)	8	$k^{\text{th}}$ text byte of the $i^{\text{th}}$ predefined value for the $j^{\text{th}}$ data (ISO 8859-1 or UTF-8 on 1 or 2 bytes)

Packet 180: Driver selection for additional data entry (from DMI to EVC)

Description	This packet is the report of the driver selection for each additional data entry parameter		
Content	Variable	Length	Comment
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	STM_NID_STM	8	STM requesting additional data variables.
	DMI_M_STRING_FORMAT	2	String format
	STM_NID_DATA	8	Functional identity of a STM data to be entered.
	STM_L_VALUE	5	Length of data value string.  maximum value :  = 20 if DMI_M_STRING_FORMAT is UTF-8 (10 characters max coded in UTF-8 on 2 bytes)  = 10 if DMI_M_STRING_FORMAT is ISO 8859-1
	STM_X_VALUE(j)	8	$j^{\text{th}}$ byte of the data value string (ISO 8859-1 or UTF-8 on 1 or 2 bytes).

Packet 181: Confirmation for additional data entry (From EVC to DMI)

## ITEA2 PROJECT

2012-2015

<b>Description</b>	This packet is sent by the EVC to the DMI to display to the driver all the parameters to be validated and request him to validate them. The validation is performed by pressing the key "screen confirmed" and the non-validation is performed by pressing the key "screen not confirmed".		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	STM_NID_STM	8	STM requesting additional data
	DMI_M_STRING_FORMAT	2	String format
	DMI_N_ITER	5	Number of j-iterations. Maximum iteration data = 15
	DMI_Q_DATA_STATUS(j)	3	Data status of the j <sup>th</sup> value.
	STM_L_DATA_CAPTION(j)	6	Length of data caption for the j <sup>th</sup> data. maximum value : = 40 if DMI_M_STRING_FORMAT is UTF-8 (20 characters max coded in UTF-8 on 2 bytes) = 20 if DMI_M_STRING_FORMAT is ISO 8859-1
	STM_X_DATA_CAPTION(j,k)	8	k <sup>th</sup> string byte for the j <sup>th</sup> data caption (ISO 8859-1 or UTF-8 on 1 or 2 bytes)
	STM_L_VALUE(j)	5	Length of data value string for the j <sup>th</sup> data. maximum value : = 40 if DMI_M_STRING_FORMAT is UTF-8 (20 characters max coded in UTF-8 on 2 bytes) = 20 if DMI_M_STRING_FORMAT is ISO 8859-1

## ITEA2 PROJECT

2012-2015

	STM_X_VALUE(j,i)	8	$j^{\text{th}}$ data value string byte for the $j^{\text{th}}$ data (ISO 8859-1 or UTF-8 on 1 or 2 bytes)
--	------------------	---	---

Packet 183: Specific STM data view values (from EVC to DMI)

<b>Description</b>	This packet creates and initialises additional view entry. Transmitted from EVC to DMI to allow the driver to show the value for all parameters.		
<b>Content</b>	<b>Variable</b>	<b>LENGTH</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	STM_NID_STM	8	STM requesting additional data
	DMI_M_STRING_FORMAT	2	String format
	N_ITER	5	Number of $j$ -iterations. Maximum value = 15
	STM_L_DATA_CAPTION(j)	6	Length of data caption for the $j^{\text{th}}$ data. Maximum value : = 40 if DMI_M_STRING_FORMAT is UTF-8 (20 characters max coded in UTF-8 on 2 bytes) = 20 if DMI_M_STRING_FORMAT is ISO 8859-1
	STM_X_DATA_CAPTION(j,q)	8	$q^{\text{th}}$ string byte for the $j^{\text{th}}$ data caption (ISO 8859-1 or UTF-8 on 1 or 2 bytes)
	STM_L_VALUE(j)	5	Length of data value string for the $j^{\text{th}}$ data. Maximum value: = 20 if DMI_M_STRING_FORMAT is UTF-8 (10 characters max coded in UTF-8 on 2 bytes) = 10 if DMI_M_STRING_FORMAT is ISO 8859-1 = 0 if there is no current value



## ITEA2 PROJECT

2012-2015

	STM_X_VALUE(j,i)	8	$i^{\text{th}}$ data value string byte for the $j^{\text{th}}$ data (ISO 8859-1 or UTF-8 on 1 or 2 bytes)
--	------------------	---	---

Packet 185: Echo Data for additional data entry (from EVC to DMI)

Description	This packet is used to send Echo Data related to STM data entry to the DMI.		
Content	Variable	Length	Comment
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	STM_NID_STM	8	STM requesting additional data
	DMI_M_STRING_FORMAT	2	String format
	DMI_N_ITER	5	Number of i-iterations Maximum iteration data = 15
	STM_NID_DATA(i)	8	Identifier of the $i^{\text{th}}$ data.
	DMI_Q_DATA_STATUS(i)	3	Data status of the $i^{\text{th}}$ data.
	STM_L_DATA_CAPTION(i)	6	Size of the $i^{\text{th}}$ data caption string maximum value : = 40 if DMI_M_STRING_FORMAT is UTF-8 (20 characters max coded in UTF-8 on 2 bytes) = 20 if DMI_M_STRING_FORMAT is ISO 8859-1
	STM_X_DATA_CAPTION(i,j)	8	$j^{\text{th}}$ text byte string of the $i^{\text{th}}$ data caption (ISO 8859-1 or UTF-8 on 1 or 2 bytes).
	STM_L_VALUE(i)	5	String length of the $i^{\text{th}}$ data value. Maximum value: = 20 if DMI_M_STRING_FORMAT is UTF-8 (10 characters max coded in UTF-8 on 2 bytes) = 10 if DMI_M_STRING_FORMAT is ISO 8859-1 = 0 if there is no current value

## ITEA2 PROJECT

### 2012-2015

	STM_X_VALUE(i,j)	8	j <sup>th</sup> text byte of the i <sup>th</sup> data value string (ISO 8859-1 or UTF-8 on 1 or 2 bytes)
--	------------------	---	---

Packet 189: Driver confirmation for additional data entry (from DMI to EVC)

<b>Description</b>	This packet is the driver selection for the validation of additional data entry parameters.		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	DMI_NID_PACKET	8	Packet identifier
	DMI_L_PACKET	16	Packet length
	STM_Q_CONFIRM	1	Confirmation answer

### 3.4 VARIABLES

All variables start with the DMI\_ prefix.

The following letter enables to determine the nature of a variable:

A	Acceleration
D	Distance
NID	Identifier
L	Length
M	Miscellaneous
N	number of items
Q	Qualifier
V	Speed
X	Text
T	Time related data

The minimum and maximum values are only specified for non-enumerate values (like numbers, distances).  
When applicable, special and reserved enumerate values are described in the corresponding cell of the variable description.

## ITEA2 PROJECT

### 2012-2015

Variable dictionary :

ATP\_TEST\_RESULT

<b>Name</b>	Result of ATP test		
<b>Description</b>	Indicates the ATP daily test status		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			
<b>Special/Reserved Values</b>	0 : ATP test OK 1 : ATP test KO 2..255 : Spare		

ATP\_TEST\_STATE

<b>Name</b>	State of ATP test		
<b>Description</b>	Indicate if DMI shall start or finish STM test sequence		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			
<b>Special/Reserved Values</b>	0 : ATP acceptance OFF 1 : ATP acceptance IN PROGRESS 2 : ATP acceptance ON 3 : ATP test ABORTED 4..255 : Spare		

BUILD\_IMAGE

<b>Name</b>	DMI activity		
<b>Description</b>	This variable is sent by EVC to activate the DMI screen		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0 : DMI CPU shall be inactive. 1 : DMI CPU shall be active.		

CYCLE\_NUMBER

<b>Name</b>	Cycle number
-------------	--------------

## ITEA2 PROJECT

### 2012-2015

<b>Description</b>	Synchronization number for display verification		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits	0	127	
<b>Special/Reserved Values</b>	-1 : this value disables the safety verification. EVC shall use this value at standstill when the screen may be covered by technical menu or data entry. -128..-2 : Spare		

#### DMI\_ACCEPTANCE\_STATE

<b>Name</b>	State of acceptance		
<b>Description</b>	Tell if the STM "y" can have access to the DMI		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	00 : NON_ACCEPTANCE 01 : ACCEPTANCE 10 : PRELIMINARY ACCEPTANCE 11 : Spare		

#### DMI\_DISPLAY\_STATE

<b>Name</b>	State of the DMI terminal display		
<b>Description</b>	Indicate the DRU its terminal used for log display is no more visible		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			
<b>Special/Reserved Values</b>	1 : the DMI terminal is cleaned		

#### DMI\_D\_GEO\_POS

<b>Name</b>	Geographical position		
<b>Description</b>	Provides the kilometre point of the geographical position		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
24 bits	0	16777214 m	1 m
<b>Special/Reserved Values</b>	16777215: value out of range		

## ITEA2 PROJECT

**2012-2015**

DMI\_D\_TARGET

<b>Name</b>	Target Distance		
<b>Description</b>	Next Target Distance (in BTS and BEOA sections) shows the remaining distance to the brake target.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
15 bits	0 m	327,660 km	10 cm, 1m or 10 m depending on DMI_Q_SCALE
<b>Special/Reserved Values</b>	32767: target unknown		

DMI\_D\_TUN\_STOPPING

<b>Name</b>	Distance of tunnel stopping area		
<b>Description</b>	Provides the distance value of the tunnel stopping area		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
24 bits	0	16 777 214 m	1 m
<b>Special/Reserved Values</b>	16 777 215: distance out of range		

DMI\_IBOX\_FAULT\_REPORT

<b>Name</b>	IBOX fault report		
<b>Description</b>	Bitfield for IBOX fault report		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
16 bits			Bitfield

## ITEA2 PROJECT

2012-2015

<b>Special/Reserved Values</b>	Bit 0 : defect in national system selection
	Bit 1 : defect in cabin selection
	Bit 2 : link lost between iBox & (ATB/NG, TBL2/3, LZB/PZB or ATP/BR)
	Bit 3 : voltage loss on national system (ATB/NG,TBL2/3, LZB/PZB ou ATP/BR)
	Bit 4 : defect on the 0..20 mA entry (real speed measurement)
	Bit 5 : defect on frequential entry (V4 or V5)
	Bit 6 : defect on safety display
	Bit 7 : internal iBox defect
	Bit 8 : EVC isolation detected
	Bit 9 : timeout on answer from DMI
	Bit 10-15 : spare
	Bit 0, 1or 7 sets indicates a defect on iBox.
	Bit 6 or bit 9 set indicates a defect on DMI
	Bit 2, 3, 4 or 5 set indicates a defect on a national ATP
	Bit 8 shall never be set on packet 85 reception

### DMI\_L\_FAULT\_STATUS

<b>Name</b>	Fault status length		
<b>Description</b>	Length of iBox status length		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits	0	255	1 byte
<b>Special/Reserved Values</b>			

### DMI\_L\_PACKET

<b>Name</b>	Packet length		
<b>Description</b>	DMI_L_PACKET indicates the length of the packet in bits, including all bits of the packet header		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
16 bits	0	65535	1 bit
<b>Special/Reserved Values</b>			

## ITEA2 PROJECT

2012-2015

### DMI\_L\_TELEGRAM

<b>Name</b>	Telegram length		
<b>Description</b>	Indicates the length of the telegram in bytes, including all packets and all variables defined in the telegrams header and padding bits if any.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
16 bits	0	65535	1 byte
<b>Special/Reserved Values</b>			

### DMI\_L\_TEXT

<b>Name</b>	Length of text string		
<b>Description</b>	DMI_L_TEXT defines the length of a text string (DMI_TEXT * DMI_X_TEXT)		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits	1	255	1 Text String Element
<b>Special/Reserved Values</b>	0 : No string No DMI_X_TEXT in following DMI_L_TEXT		

### DMI\_L\_VALUE

<b>Name</b>	Length of text data bytestring for value		
<b>Description</b>	DMI_L_VALUE defines the length of a text data bytestring for value (DMI_L_VALUE * DMI_X_VALUE)		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits	1	255	1 Text Sting Element
<b>Special/Reserved Values</b>	0 : No String – no DMI_X_VALUE in following DMI_L_VALUE		

### DMI\_M\_BUTTON\_STATUS

<b>Name</b>	Status of a Driver menu tree leaf		
<b>Description</b>	A menu tree leaf (button) may be sensitive or not		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			

## ITEA2 PROJECT

**2012-2015**

<b>Special/Reserved Values</b>	0 : Button is not enabled 1 : Button is enabled
--------------------------------	--

DMI\_M\_COLOUR\_IS

<b>Name</b>	Colour of intervention speed		
<b>Description</b>	Colour of intervention speed indication for speed supervision; the colours are identical to those defined by ERA in /3/.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
3 bits			
<b>Special/Reserved Values</b>	0 : White 1 : Grey 2 : Medium grey 3 : Dark grey 4 : Yellow 5 : Orange 6 : Red 7 : reserved		

DMI\_M\_COLOUR\_PS

<b>Name</b>	Colour of permitted speed		
<b>Description</b>	Colour of permitted speed indication for speed supervision; the colours are identical to those defined by ERA in /3/.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
3 bits			



## ITEA2 PROJECT

**2012-2015**

<b>Special/Reserved Values</b>	0 : White 1 : Grey 2 : Medium grey 3 : Dark grey 4 : Yellow 5 : Orange 6 : Red 7 : reserved
--------------------------------	--

DMI\_M\_COLOUR\_RS

<b>Name</b>	Colour of release speed		
<b>Description</b>	Colour of release speed indication for speed supervision; the colours are identical to those defined by ERA in /3/.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
3 bits			
<b>Special/Reserved Values</b>	0 : White 1 : Grey 2 : Medium grey 3 : Dark grey 4 : Yellow 5 : Orange 6 : Red 7 : reserved		

DMI\_M\_COLOUR\_SP

<b>Name</b>	Colour of speed pointer (needle)		
<b>Description</b>	Colour of analogic speed needle for speed supervision; the colours are identical to those defined by ERA in /3/.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
3 bits			

## ITEA2 PROJECT

**2012-2015**

<b>Special/Reserved Values</b>	0 : White 1 : Grey 2 : Medium grey 3 : Dark grey 4 : Yellow 5 : Orange 6 : Red 7 : reserved
--------------------------------	--

DMI\_M\_COLOUR\_TS

<b>Name</b>	Colour of target speed		
<b>Description</b>	Colour of target speed indication for speed supervision; the colours are identical to those defined by ERA in /3/.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
3 bits			
<b>Special/Reserved Values</b>	0 : White 1 : Grey 2 : Medium grey 3 : Dark grey 4 : Yellow 5 : Orange 6 : Red 7 : reserved		

DMI\_M\_CONFIRMATION\_WINDOW

<b>Name</b>	Confirmation Screen identifier		
<b>Description</b>			
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			
<b>Special/Reserved Values</b>			

## ITEA2 PROJECT

2012-2015

DMI\_M\_DMI\_CONTROLLED\_WINDOW

<b>Name</b>	DMI-controlled window identifier.		
<b>Description</b>	Identification number of the data entry window to be displayed.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			
<b>Special/Reserved Values</b>			

DMI\_M\_ENTRY\_WINDOW

<b>Name</b>	Data entry window identifier.		
<b>Description</b>	Identification number of the data entry window to be displayed.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			
<b>Special/Reserved Values</b>			

DMI\_M\_GRAD

<b>Name</b>	Absolute safe gradient value		
<b>Description</b>	DMI_G_GRAD is the value of the gradient to be displayed on the planning area.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits	0	254	1 ‰
<b>Special/Reserved Values</b>	255 : spare		

DMI\_M\_PLANNING

<b>Name</b>	Status of the planning area displaying		
<b>Description</b>	Inform whether the planning area shall be displayed or hidden		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0 : planning area is disabled 1 : planning area is enabled		

DMI\_M\_MENU\_WINDOW

## ITEA2 PROJECT

2012-2015

<b>Name</b>	Menu window identifier		
<b>Description</b>	Identification number of the menu window to be displayed by the DMI.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			
<b>Special/Reserved Values</b>			

### DMI\_M\_STRING\_FORMAT

<b>Name</b>	Format of exchanged strings.		
<b>Description</b>	Format of the string to be displayed by DMI when receiving STM-related proprietary packets.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	0: ISO 8859-1, also known as Latin Alphabet. 1: UTF-8 with 1 or 2 bytes. 2: reserved 3: reserved		

### DMI\_M\_VIEW\_WINDOW

<b>Name</b>	Data view window identifier		
<b>Description</b>	Identification number of the data view window to be displayed by the DMI.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			
<b>Special/Reserved Values</b>			

### DMI\_M\_XATTRIBUTE

<b>Name</b>	Attributes for text string used by EVC and DRU		
<b>Description</b>	Attributes are either selected explicitly using foreground and background colour etc, or using predefined attributes selected by the DMI. The predefined attributes should be consistent with attributes used in ETCS levels of operation  Colour shall be defined in the configuration data "Colour"		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
10 bits			

## ITEA2 PROJECT

2012-2015

<b>Special/Reserved Values</b>	Xxxxxx000 : Black text
	Xxxxxx001 : White text
	Xxxxxx010 : Red text
	Xxxxxx011 : Blue text
	Xxxxxx100 : Green text
	Xxxxxx101 : Yellow text
	Xxxxxx110 : Light red text
	Xxxxxx111 : Light green text
	Xxxx000xxx : Dark blue background
	Xxxx001xxx : White background
	Xxxx010xxx : Red background
	Xxxx011xxx : Blue background
	Xxxx100xxx : Green background
	Xxxx101xxx : Yellow background
	Xxxx110xxx : Light red background
	Xxxx111xxx : Light green background

DMI\_N\_ITER

<b>Name</b>	Number of iterations of a data set following this variable in a packet		
<b>Description</b>	Two nested levels of iterations can exist.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
5 bits	0	31	integer
<b>Special/Reserved Values</b>			

DMI\_N\_ITER\_DATA\_VIEW

<b>Name</b>	Number of iterations of a data set following this variable in a packet		
<b>Description</b>	Two nested levels of iterations can exist.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits	0	63	integer
<b>Special/Reserved Values</b>			

## ITEA2 PROJECT

2012-2015

DMI\_N\_ITER\_BUTTON

<b>Name</b>	Number of iterations of BUTTON following this variable in a packet		
<b>Description</b>	Number of iterations of BUTTON following this variable in a packet		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits	0	255	integer
<b>Special/Reserved Values</b>			

DMI\_N\_ITER\_INDICATOR

<b>Name</b>	Number of iterations of indicator in a packet		
<b>Description</b>	Number of iterations of indicator in a packet.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8bits	0	255	Integer
<b>Special/Reserved Values</b>			

DMI\_N\_ITER\_READBACK

<b>Description</b>	Number of iterations of readback objects		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits	0	65535	integer
<b>Special/Reserved Values</b>			

DMI\_N\_ITER\_TECH\_INDICATOR

<b>Name</b>	Number of iterations of technical indicator in a packet		
<b>Description</b>	Number of iterations of technical indicator in a packet		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits	0	255	Integer
<b>Special/Reserved Values</b>			

DMI\_N\_ITER\_TEXT

<b>Name</b>	Number of iterations of a TEXT following this variable in a packet		
<b>Description</b>	Number of iterations of a TEXT following this variable in a packet. Two nested levels of iterations can exist.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>

## ITEA2 PROJECT

### 2012-2015

5 bits	0	31	integer
<b>Special/Reserved Values</b>			

#### DMI\_N\_ITER\_VALUE

<b>Name</b>	Number of iterations of a data set following this variable in a packet		
<b>Description</b>	Number of iterations of a data set following this variable in a packet		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
5 bits	0	31	Integer
<b>Special/Reserved Values</b>			

#### DMI\_NID\_ACK

<b>Name</b>	Qualifier of the acknowledgement		
<b>Description</b>	DMI_NID_ACK is a qualifier of the acknowledgement.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	"0 : false : data is not acknowledged, " "1 : true : data is acknowledged." "2..3 : spare"		

#### DMI\_NID\_AREA

<b>Name</b>	Qualifier of the display area of the planning area		
<b>Description</b>	DMI_NID_AREA is a qualifier to select the display area of the planning area.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	0 : area D2/3/4 (track conditions) 1 : area D6 (flags) 2 : area D8 (indication point) 3 : Spare		

#### DMI\_NID\_BUTTON

<b>Name</b>	Button identifier
-------------	-------------------

## ITEA2 PROJECT

### 2012-2015

<b>Description</b>	Functional identifier of requested button. Allows DMI to apply customisation, if defined within the DMI.  Functional identity is dependent of button state.  Each button are defined in the data prep		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
10 bits			
<b>Special/Reserved Values</b>			

#### DMI\_NID\_DATA

<b>Name</b>	DATA identifier		
<b>Description</b>	Identifier of train data		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
10 bits			
<b>Special/Reserved Values</b>			

#### DMI\_NID\_DRU\_MESSAGE

<b>Name</b>	DRU message instance identifier		
<b>Description</b>	Identifier of a DRU message		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			integer
<b>Special/Reserved Values</b>			

#### DMI\_NID\_DRV\_LANG

<b>Description</b>	Driver Language Selection  This table includes a subset of the language identifiers included in the norm.		
<b>Length of variable</b>	<b>Value</b>	<b>Language</b>	
16 bits (2 characters)			
<b>Special/Reserved Values</b>	en	ENGLISH	
	de	GERMAN	
	fr	FRENCH	
	es	SPANISH	



## ITEA2 PROJECT

**2012-2015**

	it	ITALIAN
	nl	DUTCH
	hu	HUNGARIAN
	da	DANISH
	fi	FINNISH
	no	NORWEGIAN
	sv	SWEDISH
	bg	BULGARIAN
	hr	CROATIAN
	cs	CZECH
	et	ESTONIAN
	el	GREEK
	pl	POLISH
	pt	PORTUGUESE
	ro	ROMANIAN
	ru	RUSSIAN
	sr	SERBIAN
	sh	SERBO-CROATIAN
	sk	SLOVAK
	sl	SLOVENIAN
tr	TURKISH	
lv	LATVIAN	
lt	LITHUANIAN	

DMI\_NID\_EVC\_ICON

<b>Name</b>	Icon identifier		
<b>Description</b>	Identifier of icon. Allow DMI to apply customisation, if defined within the DMI. Functional identify is part of button or indication.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			
<b>Special/Reserved Values</b>			

## ITEA2 PROJECT

2012-2015

### DMI\_NID\_EVC\_INDICATOR

<b>Name</b>	Indicator Identifier		
<b>Description</b>	Functional identity of indicator. Allows DMI to apply customisation, if defined within the DMI.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
10 bits			
<b>Special/Reserved Values</b>			

### DMI\_NID\_EVC\_MESSAGE

<b>Name</b>	EVC message instance identifier		
<b>Description</b>	Instance identifier of an EVC message (text message, acknowledgeable indicator).		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			integer
<b>Special/Reserved Values</b>	Each new message has a different instance identifier, allowing the receptor to distinguish it from previous messages.		

### DMI\_NID\_EVC\_SOUND

<b>Name</b>	Identifier of sound		
<b>Description</b>	Identifier of sound		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			
<b>Special/Reserved Values</b>			

### DMI\_NID\_EVENT

<b>Name</b>	DMI internal event identifier.		
<b>Description</b>	Identifier of a DMI internal event to be recorded by the JRU.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			

## ITEA2 PROJECT

2012-2015

<b>Special/Reserved Values</b>	0: spare 1: DR01 icon displayed 2: DR01 icon removed 3: DR02 icon displayed 4: DR02 icon removed 5: DR03 icon displayed 6: DR03 icon removed 7: DR04 icon displayed 8: DR04 icon removed 9: DR05 icon displayed 10: DR05 icon removed 11: Sinfo sound is played – acknowledgement displayed 12: Sinfo sound is played – high priority text message displayed 13..255: reserved for future use.
--------------------------------	---

DMI\_NID\_LANGUAGE

<b>Name</b>	Driver Languages		
<b>Description</b>	This variable contains the driver language choice.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
6 bits			
<b>Special/Reserved Values</b>			

DMI\_NID\_PACKET

<b>Name</b>	Packet identifier		
<b>Description</b>	This is used in the header for each packet, allowing the receiving equipment to identify data which follows.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			Numbers
<b>Special/Reserved Values</b>	Values reserved according to packet identifiers attribution.		

DMI\_NID\_TECH\_ICON

## ITEA2 PROJECT

**2012-2015**

<b>Name</b>	Technical Icon identifier		
<b>Description</b>	Identifier of technical icon.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
10 bits			
<b>Special/Reserved Values</b>	0 : erase the current indicator content		

DMI\_NID\_TECH\_INDICATOR

<b>Name</b>	Technical Indicator Identifier		
<b>Description</b>	Functional identity of technical indicator. Allows DMI to apply customisation, if defined within the DMI.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			
<b>Special/Reserved Values</b>	.		

DMI\_NID\_TELEGRAM

<b>Name</b>	Telegram identifier		
<b>Description</b>	Telegram identifier		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			

## ITEA2 PROJECT

**2012-2015**

<b>Special/Reserved Values</b>	1: Telegram from EVC application SW (ETCS application)
	2: Telegram from EVC basic SW
	3: Telegram to EVC application SW (ETCS application)
	4: Telegram to EVC basic SW
	5: Telegram from EVC diagnostic application
	6: Telegram to EVC diagnostic application
	9: diagnostic Telegram
	10: Telegram from DRU ERTMS application
	11: Telegram to DRU ERTMS application
	12: Telegram from diagnostic application (technical function)
	13: Telegram to diagnostic application (technical function)
	14..21: Spare
	22: Telegram from EVC to Safety module
	23: Telegram from Safety module to EVC
	24..255: Spare

### DMI\_NID\_TRACK\_MESSAGE

<b>Name</b>	Track message instance identifier		
<b>Description</b>	Instance identifier a track message		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			
<b>Special/Reserved Values</b>	Each new text message has a different instance identifier, allowing the receptor to distinguish it from previous messages.		

### DMI\_NID\_VALUE

<b>Name</b>	Identifier of a data value		
<b>Description</b>	Each data value is identified by DMI_NID_VALUE and DMI_NID_DATA.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			
<b>Special/Reserved Values</b>			

## ITEA2 PROJECT

2012-2015

DMI\_OBJECT\_ID

<b>Name</b>	Graphical object identifier		
<b>Description</b>	Each object that can be readback by the DMI have one unique identifier.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			
<b>Special/Reserved Values</b>	This identifier is specified in READBACK SILO application configuration file.		

DMI\_Q\_ACK

<b>Name</b>	Acknowledgement qualifier		
<b>Description</b>	Tell if a text message must be acknowledged or not.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0 : No acknowledgement required 1 : Acknowledgement required		

DMI\_Q\_ACK\_RETENTION

<b>Name</b>	Acknowledgement retention qualifier		
<b>Description</b>	The qualifier for ACK retention allows the EVC to prevent / allow the DMI to process and display its ACK requests.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0: ACK allowed. 1: ACK to be postponed.		

DMI\_Q\_CONFIRM

<b>Name</b>	Confirmation screen qualifier		
<b>Description</b>	The variable is used to identify if the confirmation screen is confirmed or not.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	Value = 0 : screen no confirmed Value = 1 : screen confirmed		

## ITEA2 PROJECT

2012-2015

DMI\_Q\_CONNECT

<b>Name</b>	State of connection		
<b>Description</b>	Reports protocol state of connection or command		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
4 bits			
<b>Special/Reserved Values</b>	0 : connection request 1 : connection confirmation 2 : disconnection request 3 : disconnection confirmation 4 : connection deny 5-15 : spare		

DMI\_Q\_DATA\_STATUS

<b>Name</b>	Status of echo data		
<b>Description</b>	Indicates the echo data status		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
3 bits			
<b>Special/Reserved Values</b>	0: Data not accepted by the driver 1: Data accepted by the driver 2: Technical range check failed 3: Technical resolution check failed 4: Technical cross-check failed 5: Operational range check failed 6: Operational cross-check failed 7: spare		

DMI\_Q\_DISPLAY\_GEO\_POS

<b>Name</b>	Status of the geographical position display		
<b>Description</b>	Inform whether the geographical position shall be displayed or hidden.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			

## ITEA2 PROJECT

2012-2015

<b>Special/Reserved Values</b>	0 : geographical position is not shown 1 : geographical position is shown
--------------------------------	--

DMI\_Q\_DISPLAY\_IS

<b>Name</b>	Display mode for intervention speed		
<b>Description</b>	Display mode for intervention speed		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	00 : no display 01 : display with normal bar width 10 : display with wide bar width 11 : spare		

DMI\_Q\_DISPLAY\_PS

<b>Name</b>	Display mode for permitted speed		
<b>Description</b>	Display mode for permitted speed		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	00 : no display 01 : hook only displayed 10 : speed bar displayed without hook 11 : speed bar displayed with hook		

DMI\_Q\_DISPLAY\_QUESTION\_BOX

<b>Name</b>	Question box to be displayed		
<b>Description</b>	This variable is used to determine the question box to be displayed.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			
<b>Special/Reserved Values</b>	0: no display 1: Track Ahead Free 2..255: reserved for future use		



## ITEA2 PROJECT

**2012-2015**

DMI\_Q\_DISPLAY\_RS

<b>Name</b>	Display mode for release speed		
<b>Description</b>	Display mode for release speed		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	00 : no display 01 : digital indicator only displayed 10 : bar indication only displayed 11 : bar and digital indicator displayed		

DMI\_Q\_DISPLAY\_TD

<b>Name</b>	Display mode for target distance		
<b>Description</b>	Display mode for target distance		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	00 : no display 01 : digital indicator only displayed 10 : bar indication only displayed 11 : bar and digital indicator displayed		

DMI\_Q\_DISPLAY\_TS

<b>Name</b>	Display mode for target speed		
<b>Description</b>	Display mode for target speed		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	00 : no display 01 : hook only displayed 10 : speed bar displayed without hook 11 : speed bar displayed with hook		

## ITEA2 PROJECT

**2012-2015**

DMI\_Q\_DISPLAY\_TUN\_STOPPING

<b>Name</b>	Status of the tunnel stopping area display		
<b>Description</b>	Inform whether the tunnel stopping area distance shall be displayed or hidden		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0 : distance of tunnel stopping area is not shown 1 : distance of tunnel stopping area is shown		

DMI\_Q\_DRU\_CONNECT

<b>Name</b>	State of DRU connection		
<b>Description</b>	Reports protocol state of connection or command		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
4 bits			
<b>Special/Reserved Values</b>	0 : undefined 1 : connect request 2 : connect confirm 3 : connect denied 4 : disconnect request 5 : disconnect confirm 6..15 : spare		

DMI\_Q\_DRU\_TEXT

<b>Name</b>	Fixed message to be displayed.		
<b>Description</b>	DMI_Q_DRU_TEXT is a pointer to select a fixed text message from the defined in the DMI configuration data. The language selected by the driver for the DMI shall be used additionally as a qualifier to choose the appropriate language table.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			
<b>Special/Reserved Values</b>			

DMI\_Q\_FREEZE

## ITEA2 PROJECT

### 2012-2015

<b>Name</b>	Frozen state of the DMI		
<b>Description</b>	DMI_Q_FREEZE is a qualifier indicating if the data entry currently displayed on the DMI shall be frozen or not		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0 : not frozen 1 : frozen		

#### DMI\_Q\_GRAD\_DIR

<b>Name</b>	Qualifier for gradient slope of the planning area		
<b>Description</b>	DMI_Q_GRAD_DIR is a qualifier indicating the direction of the gradient to be displayed on the planning area.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0 : downhill 1 : uphill		

#### DMI\_Q\_HOUR\_GLASS

<b>Name</b>	Qualifier for Hour glass display.		
<b>Description</b>	The qualifier for Hour Glass display allows to display or not the hour glass on the title area of the corresponding menu window.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0: no hour glass displayed. 1: hour glass displayed.		

#### DMI\_Q\_INDICATOR

<b>Name</b>	Status of DMI indicator		
<b>Description</b>	The DMI_Q_INDICATOR variable is a status that controls icon objet.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			

## ITEA2 PROJECT

2012-2015

<b>Special/Reserved Values</b>	0 : The icon is not displayed (the area is cleared) 1 : The icon is displayed with no flashing 2 : The icon is displayed with slow flashing 3 : The icon is displayed with fast flashing
--------------------------------	---

### DMI\_Q\_INH\_ETCS\_SPD\_DIST\_DISPLAY

<b>Name</b>	ETCS speed and distance display inhibition		
<b>Description</b>	The variable is used by the EVC to inhibit the display of ETCS speed and distance.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0 : ETCS Speed and Distance Display enabled. 1 : ETCS Speed and Distance Display inhibited.		

### DMI\_Q\_ONGOING\_ACK

<b>Name</b>	Indicator of on-going ACK process		
<b>Description</b>	The qualifier of on-going ACK allows the DMI to inform the EVC that an ACK request is being treated and displayed.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0: there is no more ACK being treated and displayed by the DMI. 1: there is an ACK being treated and displayed by the DMI.		

### DMI\_Q\_PRIORITY

<b>Name</b>	Message text priority		
<b>Description</b>	This variable defines the priorities of the message.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0 : low priorities 1 : high priorities		

### DMI\_Q\_QUESTION\_REPLY

<b>Name</b>	Reply to the question box
-------------	---------------------------

## ITEA2 PROJECT

2012-2015

<b>Description</b>	This variable informs the EVC about the driver answer to a question box.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0: answer is "No", 1: answer is "yes".		

DMI\_Q\_SCALE

<b>Name</b>	Qualifier for the distance scale.		
<b>Description</b>	Qualifier to indicate the same scale used for describing all distances inside the packet that contains Q_SCALE.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	0 : 10 cm scale 1 : 1 m scale 2 : 10 m scale 3 : spare		

DMI\_Q\_SOUND

<b>Name</b>	sound qualifier		
<b>Description</b>	Indicate to the sound generator if the sound defined by DMI_NID_EVC_SOUND shall be activated or stopped		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits	1	254	
<b>Special/Reserved Values</b>	0 : the sound shall be stopped 1..254 : the sound shall be activated X times (x is the value of DMI_Q_SOUND) 255 : the sound shall be activated infinitely		

DMI\_Q\_START\_STOP

<b>Name</b>	Qualifier of the transmission process beginning and end.		
<b>Description</b>	This variable indicates to the DMI that the beginning of the data transmission process is beginning, or that no more data has to be transmitted.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>

## ITEA2 PROJECT

2012-2015

2 bits			
<b>Special/Reserved Values</b>	0: not used. 1: start of the transmission process 2: stop of the transmission process 3: not used		

DMI\_Q\_STATE

<b>Name</b>	DMI STATE qualifier		
<b>Description</b>	Indicate to the state of the DMI (operational mode)		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
4 bits			
<b>Special/Reserved Values</b>	0 : Self-test mode 1 : Initialisation mode 2 : Awaiting ETCS / TCMS connection mode 3 : Establish connection mode 4 : Partially ETCS mode 5 : Nominal ETCS mode 6 : Failure mode 7..15 : spare		

DMI\_Q\_TEXT

<b>Name</b>	Fixed message to be displayed.		
<b>Description</b>	DMI_Q_TEXT is a pointer to select a fixed text message defined in the DMI configuration data. The language selected by the driver for the DMI shall be used as a qualifier to choose the appropriate language table.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			
<b>Special/Reserved Values</b>			

DMI\_Q\_TEXTACK

<b>Name</b>	Qualifier of acknowledgement of the fixed text message.		
<b>Description</b>	DMI_Q_TEXTACK is a qualifier to determine if the text message has to be acknowledged or not		

## ITEA2 PROJECT

2012-2015

Length of variable	Minimum Value	Maximum Value	Resolution/formula
2 bits			
<b>Special/Reserved Values</b>	0 : No acknowledgement 1 : acknowledgement required 2..3 : Spare		

### DMI\_Q\_TEXT\_CONFIRM

<b>Description</b>	DMI_Q_TEXT_CONFIRM is a pointer to select a fixed text message from the defined table the DMI configuration data. The language selected by the driver for the DMI shall be used additionally as a qualifier to choose the appropriate language table.		
Length of variable	Minimum Value	Maximum Value	Resolution/formula
8 bits			
<b>Special/Reserved Values</b>			

### DMI\_Q\_VALUE\_TYPE

<b>Name</b>	Qualifier of value type.		
<b>Description</b>	DMI_Q_VALUE_TYPE is a qualifier to define the type of data value transmitted in a packet.		
Length of variable	Minimum Value	Maximum Value	Resolution/formula
2 bits			
<b>Special/Reserved Values</b>	0 : No value 1 : Character string 2 : Value identifier 3 : clock (see variable DMI_T_CLOCK)		

### DMI\_Q\_WIDTH

<b>Name</b>	Qualifier of the speed restriction width of the planning area		
<b>Description</b>	DMI_Q_WIDTH is a qualifier to select the speed restriction width of the planning area.		
Length of variable	Minimum Value	Maximum Value	Resolution/formula
7 bits	0	100	1%

## ITEA2 PROJECT

### 2012-2015

<b>Special/Reserved Values</b>	101-127 : Spare
--------------------------------	-----------------

#### DMI\_RB\_VALUE

<b>Name</b>	Displayed value read back by the DMI		
<b>Description</b>	<p>This variable contains the value that has been read back by the DMI. The value is associated to the DMI_OBJECT_ID and depends on the object type.</p> <p>ANALOGICAL SPEED : speed pointed by needle</p> <p>NUMERICAL SPEED : speed displayed by numerical speed object</p> <p>ICON : checksum of a pictogram</p> <p>TARGET DISTANCE : distance displayed on vertical bargraph</p> <p>Note: because 100 pixels can represent 3000 m, target distance readback value cannot be accurate.</p>		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
32 bits	0	4294967295	
<b>Special/Reserved Values</b>			

#### DMI\_T\_CLOCK

<b>Name</b>	Local time		
<b>Description</b>	<p>This variable gives the local time, in order to allow the DMI clock to update its value. This is an absolute time, the original date for time 0 is fixed on the 01/01/2000</p>		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
32 bits	0s	4294967294 s (> 130 years)	1 s
<b>Special/Reserved Values</b>	0xFFFF FFFF: no time		

#### DMI\_V\_INTERV

<b>Name</b>	Intervention speed value		
<b>Description</b>	Intervention speed value for CSG displaying		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
10 bits	0	600 km/h	1 km/h



## ITEA2 PROJECT

### 2012-2015

<b>Special/Reserved Values</b>	601..1022 : Spare (no value displayed) 1023 speed unknown
--------------------------------	--

#### DMI\_V\_PERMIT

<b>Name</b>	Permitted speed value		
<b>Description</b>	Value of the permitted speed from EVC for CSG displaying		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
10 bits	0	600 km/h	1 km/h
<b>Special/Reserved Values</b>	601..1022 : Spare (no value displayed) 1023 speed unknown		

#### DMI\_V\_RELEASE

<b>Name</b>	Release speed value		
<b>Description</b>	Release speed value for numeric release speed indication and CSG displaying		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
10 bits	0	600 km/h	1 km/h
<b>Special/Reserved Values</b>	601:1022 : Spare (no value displayed) 1023 speed unknown		

#### DMI\_V\_SET\_SPEED

<b>Name</b>	Set speed value		
<b>Description</b>	Value of the speed which is set by the driver (on an external cruise control system).		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
10 bits	0	600 km/h	1 km/h
<b>Special/Reserved Values</b>	601..1022 : Spare (no icon displayed) 1023 speed unknown (no icon displayed)		

#### DMI\_V\_TARGET

<b>Name</b>	Target speed value
<b>Description</b>	Target speed value for CSG displaying

## ITEA2 PROJECT

2012-2015

Length of variable	Minimum Value	Maximum Value	Resolution/formula
7 bits	0	600 km/h	5 km/h
<b>Special/Reserved Values</b>	121..126 : Spare (no value displayed) 127 speed unknown		

DMI\_V\_TRAIN\_ANALOG

<b>Name</b>	Current train speed analogic value		
<b>Description</b>	Current train speed analogic value		
Length of variable	Minimum Value	Maximum Value	Resolution/formula
10 bits	0	600 km/h	1 km/h
<b>Special/Reserved Values</b>	601..1022 : Spare (no value displayed) 1023 speed unknown		

DMI\_V\_TRAIN\_NUM

<b>Name</b>	Current train speed numeric value		
<b>Description</b>	Current train speed numeric value		
Length of variable	Minimum Value	Maximum Value	Resolution/formula
10 bits	0	600 km/h	1 km/h
<b>Special/Reserved Values</b>	601..1022 : Spare (no value displayed) 1023 speed unknown		

DMI\_X\_FAULT\_STATUS

<b>Name</b>	Fault status		
<b>Description</b>	iBox status indicating gravity of fault encountered.		
Length of variable	Minimum Value	Maximum Value	Resolution/formula
8 bits			

## ITEA2 PROJECT

2012-2015

<b>Special/Reserved Values</b>	Indicate for each DMI_IBOX_FAULT_REPORT the gravity level.
	The gravity is represented with one byte corresponding to the DMI_IBOX_FAULT_REPORT bit : DMI_X_FAULT_STATUS[0] is linked to DMI_IBOX_FAULT_REPORT(bit 0)
	The value of each byte is :
	0 : none
	1 : minor
	2 : major
	3 : critical
	4 : safety related
	4..255 : Spare

### DMI\_X\_TEXT

<b>Name</b>	Text String Element		
<b>Description</b>	Text strings are used to transmit plain text messages. Each element of a text string contains a single character encoded as ISO 8859-1, also known as Latin Alphabet # or ISO 8859-7, Latin-greek in function fo the driver languages		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			ASCII
<b>Special/Reserved Values</b>			

### DMI\_X\_VALUE

<b>Name</b>	Data Value Text String Element		
<b>Description</b>	Text Bytestring for data value Character set ISO 8859-1 (Latin Alphabet #1) or ISO 8859-7 (Latin-Greek) in function of the driver languages		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			ASCII
<b>Special/Reserved Values</b>			

### DP\_INTERFACE\_EVC\_DMI\_VERSION

## ITEA2 PROJECT

### 2012-2015

<b>Name</b>	Version of the data preparation interface between EVC & DMI		
<b>Description</b>	This version is sent by the DMI and checked by the EVC. It is part of the DMI data preparation		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
24 bits			String of 3 characters
<b>Special/Reserved Values</b>			

#### DP\_INTERFACE\_TRU\_DMI\_VERSION

<b>Name</b>	Version of the data preparation interface between TRU & DMI		
<b>Description</b>	This version is sent by the TRU and checked by the EVC. It is part of the DMI data preparation		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
24 bits			String of 3 characters
<b>Special/Reserved Values</b>			

#### DRU\_L\_PACKET

<b>Name</b>	DRU Packet length		
<b>Description</b>	DRU_L_PACKET indicates the length of the packet in bytes, including all variables.		
<b>Source of definition</b>	TRU definition		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
16 bits	0	65535	1 Byte
<b>Special/Reserved Values</b>			

#### DRU\_M\_DIAG

<b>Name</b>	Diagnostic code		
<b>Description</b>	Identity number of diagnostic code.		
<b>Source of definition</b>	DRU definition		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
12 bits	0	4095	
<b>Special/Reserved Values</b>			

## ITEA2 PROJECT

2012-2015

DRU\_N\_PACKET

<b>Name</b>	Number of packets in a DRU Telegram.		
<b>Description</b>	Number of packets in a DRU Telegram.		
<b>Source of definition</b>	TRU definition		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
4 bits	0	31	
<b>Special/Reserved Values</b>			

DRU\_NID\_CHANNEL

<b>Name</b>	Channel number identification		
<b>Description</b>	Identity number of the channel number – or like - which issue the message		
<b>Source of definition</b>	DRU definition		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
4 bits			
<b>Special/Reserved Values</b>	1 : Cab A 2 : Cab B		

DRU\_NID\_PACKET

<b>Name</b>	Packet identifier		
<b>Description</b>	This is used in the header for each packet, allowing the receiving equipment to identify data which follows.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			
<b>Special/Reserved Values</b>			

DRU\_NID\_SOURCE

<b>Name</b>	Identification of the source
-------------	------------------------------

## ITEA2 PROJECT

2012-2015

<b>Description</b>	<p>Defines the source that is sending the diagnostic code message.</p> <p>This variable is required in order to select the proper documentation for interpreting the diagnostic log.</p>		
<b>Source of definition</b>	DRU definition		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			
<b>Special/Reserved Values</b>	4: DMI		

DRU\_T\_TRAIN

<b>Name</b>	Profibus safety layers profibus local reference time		
<b>Description</b>	Value of the Profibus safety layers local reference time		
<b>Source of definition</b>	DRU definition		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
32 bits	0	42949672.94 s	0.01 s
<b>Special/Reserved Values</b>			

NID\_ATP\_TEST

<b>Name</b>	ATP identity		
<b>Description</b>	The identifier of an ATP connected to DMI		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
9 bits			
<b>Special/Reserved Values</b>	Value 256 is reserved for EVC identification.		

PRIMARY\_DISPLAY\_OTHER

<b>Name</b>	Function allocation of the primary screen		
<b>Description</b>	<p>This variable is sent by EVC to perform the functional repartition of the graphical objects. ALSTOM DMI will treat this data by displaying all the ERTMS data available, including Planning Area.</p>		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			

## ITEA2 PROJECT

### 2012-2015

<b>Special/Reserved Values</b>	0 : DMI shall not display any ERTMS data 1 : DMI shall display ERTMS data
--------------------------------	--

#### PRIMARY\_DISPLAY\_PA

<b>Name</b>	Function allocation of the primary screen		
<b>Description</b>	This variable is sent by EVC to indicate that the DMI shall display the Planning Area on its primary display.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	This variable will not be used by ALSTOM DMI in a first step.		

#### PRIMARY\_DISPLAY\_SPARE

<b>Name</b>	Function allocation of the primary screen		
<b>Description</b>	This variable is currently not used.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit	0	1	Bit
<b>Special/Reserved Values</b>			

#### Q\_TEXTCLASS

<b>Name</b>	Class of message to be displayed.		
<b>Description</b>	Q_TEXTCLASS specifies the class of the text message included in the same packet (either plain or fixed message)		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	0 : Auxiliary Information 1 : Important Information 2..3: spare		

#### PRIMARY\_DISPLAY\_SPEEDO

<b>Name</b>	Function allocation of the primary screen		
<b>Description</b>	This variable is sent by EVC to perform the functional repartition of the graphical objects. ALSTOM DMI will treat this data by displaying only the speedo.		

## ITEA2 PROJECT

2012-2015

Length of variable	Minimum Value	Maximum Value	Resolution/formula
1 bit			
<b>Special/Reserved Values</b>	0 : DMI shall not display the alone speedo 1 : DMI shall display the alone speedo		

SECONDARY\_DISPLAY\_OTHER

<b>Name</b>	Function allocation of the secondary screen		
<b>Description</b>	This variable is sent by EVC to perform the functional repartition of the graphical objects on the secondary screen. ALSTOM DMI will treat this data by displaying all the ERTMS data available, including Planning Area.		
Length of variable	Minimum Value	Maximum Value	Resolution/formula
1 bit			
<b>Special/Reserved Values</b>	0 : DMI shall not display any ERTMS data 1 : DMI shall display ERTMS data		

SECONDARY\_DISPLAY\_PA

<b>Name</b>	Function allocation of the primary screen		
<b>Description</b>	This variable is sent by EVC to indicate that the DMI shall display the Planning Area on its secondary display.		
Length of variable	Minimum Value	Maximum Value	Resolution/formula
1 bit			
<b>Special/Reserved Values</b>	This variable will not be used by ALSTOM DMI in a first step.		

SECONDARY\_DISPLAY\_SPARE

<b>Name</b>	Function allocation of the primary screen		
<b>Description</b>	This variable is currently not used.		
Length of variable	Minimum Value	Maximum Value	Resolution/formula
1 bit			
<b>Special/Reserved Values</b>			

SECONDARY\_DISPLAY\_SPEEDO

<b>Name</b>	Function allocation of the primary screen
-------------	---



## ITEA2 PROJECT

2012-2015

<b>Description</b>	This variable is sent by EVC to perform the functional repartition of the graphical objects. ALSTOM DMI will treat this data by displaying only the speedo.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0 : DMI shall not display the alone speedo 1 : DMI shall display the alone speedo		

SCREEN\_NUMBER

<b>Name</b>	Screen number		
<b>Description</b>	Identifier of the current screen displayed. This identifier is used to determine the screen configuration and define what objects must be verified.  In the way EVC → DMI : indicates the screen requested  In the way DMI → EVC : indicates what screen has been checked  The values of SCREEN_NUMBER shall be configurable.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			
<b>Special/Reserved Values</b>	For PP : screen number shall always be 1		

SCREEN\_STATE\_MAIN

<b>Name</b>	Primary screen state		
<b>Description</b>	This variable is sent by DMI to indicate the status of the primary screen		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	0 : Primary screen state is OK 1 : Primary screen state is KO 2 : Primary screen state is UNKNOWN 3 : Primary screen state is NOT INSTALLED		

SCREEN\_STATE\_SECONDARY

<b>Name</b>	Secondary screen state		
<b>Description</b>	This variable is sent by DMI to indicate the status of the secondary screen		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>

## ITEA2 PROJECT

2012-2015

2 bits			
<b>Special/Reserved Values</b>	0 : Secondary screen state is OK 1 : Secondary screen state is KO 2 : Secondary screen state is UNKNOWN 3 : Secondary screen state is NOT INSTALLED		

### STM\_L\_DATA\_CAPTION

<b>Name</b>	Length of text caption bytestring		
<b>Description</b>	STM_L_DATA_CAPTION defines the length of text caption string in bytes (STM_L_DATA_CAPTION*STM_X_DATA_CAPTION).  Corresponds to the number of bytes transmitted for caption characters coded in UTF-8.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
6 bits	1	40	1 byte
<b>Special/Reserved Values</b>	0 : No string, only icon should be used  No STM_X_DATA_CAPTION following STM_L_DATA_CAPTION  41 to 63 not used since the maximum number of characters (coded in UTF-8 with 1 or 2 bytes) for data caption is limited to 20.		

### STM\_L\_VALUE

<b>Name</b>	Length of text data bytestring for value		
<b>Description</b>	STM_L_VALUE defines the length of a text data string in bytes for value (STM_L_VALUE * STM_X_VALUE) encoded in UTF-8 with 1 or 2 bytes.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
5 bits	0	20	1 byte
<b>Special/Reserved Values</b>	0 : No String  No STM_X_VALUE in following STM_L_VALUE  21 to 31 not used since the maximum number of characters (coded in UTF-8 with 1 or 2 bytes) for value is limited to 10.		

### STM\_M\_XATTRIBUTE

<b>Name</b>	Attributes for text string used by STM
-------------	--

## ITEA2 PROJECT

2012-2015

<b>Description</b>	Attributes are either selected explicitly using foreground and background colour etc, or using predefined attributes selected by the MMI. The predefined attributes should be consistent with attributes used in ETCS levels of operation		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
10 bits			
<b>Special/Reserved Values</b>	<p>0xxxxxxx : Not displayed (Note: this allows to “remove” associated object from display)</p> <p>x0xxxxxxx : Indicator Normal flashing</p> <p>x1xxxxxxx : Indicator Counterphase flashing</p> <p>Xx00xxxxxx : Indicator No flashing</p> <p>Xx01xxxxxx : Indicator Slow flashing</p> <p>Xx10xxxxxx : Indicator Fast flashing</p> <p>Xx11xxxxxx : Reserved</p> <p>xxxx000xxx : Dark blue background (applicable while no icon is referenced)</p> <p>xxxx001xxx : White indicator background (applicable while no icon is referenced)</p> <p>xxxx010xxx : Red indicator background (applicable while no icon is referenced)</p> <p>xxxx011xxx : Blue indicator background (applicable while no icon is referenced)</p> <p>xxxx100xxx : Green indicator background (applicable while no icon is referenced)</p> <p>xxxx101xxx : Yellow indicator background (applicable while no icon is referenced)</p> <p>xxxx110xxx : Light red indicator background (applicable while no icon is referenced)</p> <p>xxxx111xxx : Light green indicator background (applicable while no icon is referenced)</p> <p>xxxxxxx000 : Black text label (applicable while no icon is referenced)</p> <p>xxxxxxx001 : White text label (applicable while no icon is referenced)</p> <p>xxxxxxx010 : Red text label (applicable while no icon is referenced)</p> <p>xxxxxxx011 : Blue text label (applicable while no icon is referenced)</p> <p>xxxxxxx100 : Green text label (applicable while no icon is referenced)</p> <p>xxxxxxx101 : Yellow text label (applicable while no icon is referenced)</p> <p>xxxxxxx110 : Light red text label (applicable while no icon is referenced)</p> <p>xxxxxxx111 : Light green text label (applicable while no icon is referenced)</p>		

STM\_NID\_DATA

## ITEA2 PROJECT

### 2012-2015

See NID\_DATA description in UNISIG Subset 58.

STM\_NID\_STM

<b>Name</b>	STM Identity		
<b>Description</b>	This variable is the identifier of the Specific Transmission Module requesting specific data entry or data view through ETCS EVC		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			
<b>Special/Reserved Values</b>	255 reserved for multicast		

STM\_Q\_CONFIRM

<b>Name</b>	Confirmation screen qualifier		
<b>Description</b>	The variable is used to identify if the additional data entry confirmation screen is confirmed or not.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	Value = 0 : screen no confirmed Value = 1 : screen confirmed		

STM\_X\_DATA\_CAPTION

<b>Name</b>	Caption Text Byte		
<b>Description</b>	First or second (if any) byte of bytestring used for text caption of DMI objects (label of button, indicator and data)  Encoded in UTF-8 with 1 or 2 bytes.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			UTF-8 with 1 or 2 bytes
<b>Special/Reserved Values</b>			

STM\_X\_VALUE

<b>Name</b>	Data Value Text Byte		
<b>Description</b>	First or second (if any) byte of byte string used for data value.  Encoded in UTF-8 with 1 or 2 bytes.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>

## ITEA2 PROJECT

### 2012-2015

8 bits			UTF-8 with 1 or 2 bytes
<b>Special/Reserved Values</b>			

#### SW\_INTERFACE\_EVC\_DMI\_VERSION

<b>Name</b>	Version of the software interface between EVC & DMI		
<b>Description</b>	This version is sent by the DMI and checked by the EVC. It is part of the DMI data preparation		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
24 bits			String of 3 characters
<b>Special/Reserved Values</b>			

#### SW\_INTERFACE\_TRU\_DMI\_VERSION

<b>Name</b>	Version of the software interface between TRU & DMI		
<b>Description</b>	This version is sent by the TRU and checked by the EVC. It is part of the DMI data preparation		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
24 bits			String of 3 characters
<b>Special/Reserved Values</b>			

## 4. OPENETCS APPLICATION - JRU INTERFACE

### 4.1 JRU MESSAGES DEFINITION

The list defines the type of messages with the corresponding Message Identifier ("TRU\_NID\_MESSAGE") and the Message Name.

TRU_NID_MESSAGE	MESSAGE NAME	TYPE OF MESSAGE
0	DATA MESSAGE	DATA MESSAGE
1	TRU STATE	CONTROL MESSAGE
2	TRU STATE REQUEST	CONTROL MESSAGE
3	JRU FAILURE	CONTROL MESSAGE
4	JRU UTC TIME REQUEST	CONTROL MESSAGE
5	JRU UTC TIME	CONTROL MESSAGE

## ITEA2 PROJECT

### 2012-2015

6	JRU LOCAL TIME REQUEST	CONTROL MESSAGE
7	JRU LOCAL TIME	CONTROL MESSAGE

Only the juridical data messages shall be recorded in the juridical protected memory. The control messages are exchanged with the OpenETCS application (EVC CORE board) but not recorded by the JRU.

### 4.2 OPENETCS APPLICATION – JRU CONTROL MESSAGES

Message 1: TRU STATE (JRU → EVC)

Field N°	VARIABLE	Bits	Remarks
1	TRU_NID_MESSAGE	8	Type of message
2	TRU_M_STATUS	8	State of TRU

Message 2: TRU State Request (EVC → JRU)

Field N°	VARIABLE	Bits	Remarks
1	TRU_NID_MESSAGE	8	Type of message

Message 3: JRU Failure (JRU → EVC)

Field N°	VARIABLE	Bits	Remarks
1	TRU_NID_MESSAGE	8	Type of message

Message 4 : UTC Request (EVC → JRU)

Field N°	VARIABLE	Bits	Remarks
1	TRU_NID_MESSAGE	8	Type of message
2	JRU_T_TRAIN	32	EVC Clock

Message 5 : JRU\_UTC Time (JRU → EVC)

Field N°	VARIABLE	Bits	Remarks
1	TRU_NID_MESSAGE	8	Type of message

## ITEA2 PROJECT

### 2012-2015

2	JRU_T.UTC	38	Universal time
3	JRU_T.TRAIN	32	EVC Clock
4	Padding bit	2	Fix value = 2 bits

Message 6 : JRU Local Time request (EVC → JRU)

Field N°	VARIABLE	Bits	Remarks
1	TRU_NID_MESSAGE	8	Type of message
2	JRU_NID_C	10	Identifier of country
3	JRU_T.TRAIN	32	EVC Clock
4	Padding bit	6	Fix value = 6 bits

Message 7: JRU Local Time (JRU → EVC)

Field N°	VARIABLE	Bits	Remarks
1	TRU_NID_MESSAGE	8	Type of message
2	JRU_T.LOCAL_TIME	32	Local time
3	JRU_T.TRAIN	32	EVC Clock

### 4.3 OPENETCS APPLICATION-JRU DATA MESSAGES

The data message generated by the EVC is composed of a common header with potentially a set of predefined packets.

The following section gives the list of packets with the corresponding packet Identifier "JRU\_NID\_PACKET." and the packet name.

This list is based on the list of messages defined in FIS Juridical recording.

	Type of packet	Origin	Remarks
1	GENERAL MESSAGE	EVC	
2	TRAIN DATA	EVC	
3	EMERGENCY BRAKE COMMAND STATE	EVC	
4	SERVICE BRAKE COMMAND STATE	EVC	
5	MESSAGE TO RADIO INFILL UNIT	EVC	

## ITEA2 PROJECT

### 2012-2015

6	MESSAGE FROM BALISE	EVC	
7	MESSAGE FROM EUROLOOP	EVC	
8	MESSAGE FROM RADIO INFILL UNIT	EVC	
9	MESSAGE FROM RBC	EVC	
10	MESSAGE TO RBC	EVC	
11	DRIVER'S ACTIONS	EVC	
12	BALISES GROUP ERROR	EVC	
13	RADIO ERROR	EVC	
14	STM INFORMATION	STM	
15	INFORMATION FROM COLD MOVEMENT DETECTOR	EVC	
16	START DISPLAYING FIXED TEXT MESSAGE	EVC	
17	STOP DISPLAYING FIXED TEXT MESSAGE	EVC	
18	START DISPLAYING PLAIN TEXT MESSAGE	EVC	
19	STOP DISPLAYING PLAIN TEXT MESSAGE	EVC	
20	SPEED AND DISTANCE MONITORING INFORMATION	EVC	
21	DMI SYMBOL STATUS	EVC	
22	DMI SOUND STATUS	EVC	
23	DMI SYSTEM STATUS MESSAGE	EVC	
24	ADDITIONAL DATA	EVC	
25	SR SPEED/DISTANCE ENTERED BY THE DRIVER	EVC	
26	NTC SELECTED	EVC	
27	SAFETY CRITICAL FAULT IN MODE SL, NL OR PS	EVC	
28	VIRTUAL BALISE COVER SET BY THE DRIVER	EVC	
29	VIRTUAL BALISE COVER REMOVED BY THE DRIVER	EVC	
30	SLEEPING INPUT	EVC	
31	PASSIVE SHUNTING INPUT	EVC	
32	NON LEADING INPUT	EVC	
33	REGENERATIVE BRAKE STATUS	EVC	
34	MAGNETIC SHOE BRAKE STATUS	EVC	
35	EDDY CURRENT BRAKE STATUS	EVC	



## ITEA2 PROJECT

### 2012-2015

36	ELECTRO PNEUMATIC BRAKE STATUS	EVC	
37	ADDITIONAL BRAKE STATUS	EVC	
38	CAB STATUS	EVC	
39	DIRECTION CONTROLLER POSITION	EVC	
40	TRACTION STATUS	EVC	
41	TYPE OF TRAIN DATA	EVC	
42	NATIONAL SYSTEM ISOLATION	EVC	
43	TRACTION CUT OFF COMMAND STATE	EVC	
44-254	SPARE		
255	ETCS ON-BOARD PROPRIETARY JURIDICAL DATA	EVC	

Common header:

Field No.	Variable	Bits	Remarks
1	TRU_NID_MESSAGE	8	Type of message (for data message = 0)
2	JRU_L_MESSAGE	16	Total message length (Fields 1 to 19 and packets)
3	JRU_T_TRAIN	32	EVC clock
4	Reserved	8	Fix value = 8 bits reserved for conversion to T_UTC
5	JRU_Q_SCALE	2	Current train position
6	JRU_NID_LRBG	10+14	Current train position
7	JRU_D_LRBG	15	Current train position
8	JRU_Q_DIRLRBG	2	Current train position
9	JRU_Q_DLRBG	2	Current train position
10	JRU_L_DOUBTOVER	15	Current train position
11	JRU_L_DOUBTUNDER	15	Current train position
12	JRU_V_TRAIN	10	Current train speed
13	JRU_DRIVER_ID	128	Driver identifier
14	JRU_NID_ENGINE	24	Train running number
15	JRU_SYSTEM_VERSION	7	Version of ETCS System
16	JRU_M_LEVEL	3	Current level

## ITEA2 PROJECT

### 2012-2015

17	JRU_M_MODE	4	Current mode
18	Padding	1	Fix value = 1 bit
19	JRU_N_PACKET	4	Number of packets in message
N	Packets		0 to N Packets

Note: The total length of a message is always a multiple of bytes.

The JRU\_NID\_PACKET, the JRU\_L\_PACKET and the JRU\_T\_TRAIN are the only fields to be read by the JRU to process the message as necessary from its reception from the EVC up to its transmission to the JDR. The content of the packets as well as the structure of the packets is to be considered by the JRU as 'transparent'.

The table here below defined the value to be given to a data when it is to be considered as 'unknown'.

Field No.	Variable	Value	Definition
5	JRU_Q_SCALE	0	Pre-set
6	JRU_NID_LRBG	16777215	Unknown
7	JRU_D_LRBG	32767	Unknown
8	JRU_Q_DIRLRBG	2	Unknown
9	JRU_Q_DLRBG	2	Unknown
10	JRU_L_DOUBTOVER	32767	Unknown
11	JRU_L_DOUBTUNDER	32767	Unknown
12	JRU_V_TRAIN	1023	Standstill
13	JRU_DRIVER_ID	????????????	Unknown
14	JRU_NID_ENGINE	FFFF FFFF	Pre-set
15	JRU_SYSTEM_VERSION	127	Spare
16	JRU_M_LEVEL	0	Pre-set
17	JRU_M_MODE	0 except 10 when EVC isolation	Pre-set

#### Packet 1: GENERAL MESSAGE

The JRU common header contents all the necessary data to create the 'General Message'. Only, the variable JRU\_T\_TRAIN is to be replaced by the variables DATE and TIME (UTC).

#### Packet 2: TRAIN DATA

This packet is sent by the EVC when the driver enters the data at start of mission and each time the driver changes the data values during the mission.

## ITEA2 PROJECT

**2012-2015**

Field No.	VARIABLE/ PACKET	Length bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_V_MAXTRAIN	7	
4	JRU_NC_CDTRAIN	4	
5	JRU_NC_TRAIN	15	
6	JRU_L_TRAIN	12	
7	JRU_T_TRACTION_CUT_OFF	12	
8	JRU_M_BRAKE_POSITION	2	
9	JRU_M_NOM_ROT_MASS	5	
10	JRU_M_REGENERATIVEBRAKE	2	
11	JRU_M_EDDYCURRENTBRAKE	2	
12	JRU_M_MAGNETICSHOEBRAKE	2	
13	JRU_M_ELECTROPNEUMATICBRAKE	2	
14	JRU_Q_TRACTIONCUTOFFINTERFACE	1	
15	JRU_Q_SERVICEBRAKEINTERFACE	1	
16	JRU_Q_SERVICEBRAKEFEEDBACK	1	
17	JRU_Q_BRAKE_CAPT_TYPE	1	
18	JRU_M_BRAKE_PERCENTAGE	8	Only if Q_BRAKE_CAPT_TYPE = 0
19	JRU_N_BRAKE_CONF	4	Only if Q_BRAKE_CAPT_TYPE = 0
20	JRU_M_BRAKE_LAMBDA_CONF(k)	3	Only if Q_BRAKE_CAPT_TYPE = 0: specific configuration of the special brakes for lambda train
21	JRU_T_BRAKE_SERVICE(k)	12	Only if Q_BRAKE_CAPT_TYPE = 0: service Brake delay time
22	JRU_N_BRAKE_CONF	4	Only if Q_BRAKE_CAPT_TYPE = 1 (gamma type), N_BRAKE_CONF and the

## ITEA2 PROJECT

**2012-2015**

			following variables follow until A_BRAKE_SERVICE_COMP inclusive
23	JRU_M_BRAKE_GAMMA_CONF(k)	4	
24	JRU_T_BRAKE_EMERGENCY(k)	12	
25	JRU_N_BRAKE_SECTIONS(k)	3	
26	JRU_V_BRAKE_EMERGENCY_COMP(k, m)	10	
27	JRU_A_BRAKE_EMERGENCY_COMP(k, m)	8	
28	0) JRU_M_KDRY_RST(A_BRAKE_EMERGENCY_COMP(k, m),	5	
29	1) JRU_M_KDRY_RST(A_BRAKE_EMERGENCY_COMP(k, m),	5	
30	2) JRU_M_KDRY_RST(A_BRAKE_EMERGENCY_COMP(k, m),	5	
31	3) JRU_M_KDRY_RST(A_BRAKE_EMERGENCY_COMP(k, m),	5	
32	4) JRU_M_KDRY_RST(A_BRAKE_EMERGENCY_COMP(k, m),	5	
33	5) JRU_M_KDRY_RST(A_BRAKE_EMERGENCY_COMP(k, m),	5	
34	6) JRU_M_KDRY_RST(A_BRAKE_EMERGENCY_COMP(k, m),	5	
35	7) JRU_M_KDRY_RST(A_BRAKE_EMERGENCY_COMP(k, m),	5	
36	8) JRU_M_KDRY_RST(A_BRAKE_EMERGENCY_COMP(k, m),	5	
37	9) JRU_M_KDRY_RST(A_BRAKE_EMERGENCY_COMP(k, m),	5	
38	m) JRU_M_KWET_RST(A_BRAKE_EMERGENCY_COMP(k,	5	
39	JRU_T_BRAKE_SERVICE(k)	12	
40	JRU_N_BRAKE_SECTIONS(k)	3	
41	JRU_V_BRAKE_SERVICE_COMP(k, m)	10	
42	JRU_A_BRAKE_SERVICE_COMP(k, m)	8	

## ITEA2 PROJECT

### 2012-2015

43	JRU_M_LOADINGGAUGE	8	
44	JRU_N_AXLE	10	
45	JRU_M_AXLELOADCAT	7	
46	JRU_N_ITER	5	
47	JRU_M_VOLTAGE (k)	4	
48	JRU_NID_CTRACTION(k)	10	Only if M_VOLTAGE(k) $\neq$ 0.
49	JRU_N_ITER	5	
50	JRU_NID_NTC(k)	8	
51	JRU_M_AIRTIGHT	2	
52	Padding		

#### Packet 3: EMERGENCY BRAKE COMMAND STATE

This packet is used to record the emergency brake application order. This information will be stored, independently, whether the action has been either performed by the driver or triggered by the system.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_M_BRAKE_COMMAND_STATE	1	
4	Padding bits	7	

#### Packet 4: SERVICE BRAKE COMMAND STATE

This packet shall record the service brake application order. This information will be stored, independently, whether the action has been either performed by the driver or triggered by the system.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_M_BRAKE_COMMAND_STATE	1	
4	Padding bits	7	

## ITEA2 PROJECT

### 2012-2015

#### Packet 5: MESSAGE TO RADIO INFILL UNIT

This packet shall be sent after sending a message to an RIU.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_NID_C	10	
4	JRU_NID_RIU	14	
5	Radio infill bytes		The size of "Radio infill bytes" is variable

#### Packet 6: MESSAGE FROM BALISE

This packet shall be sent to the JRU after receiving a balise. The content of this packet is all message packets defined in Unisig documents.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	Balises bytes		The size of "Balises bytes" is variable

#### Packet 7: MESSAGE FROM EUROLLOOP

This packet shall be sent to the JRU after receiving a packet from an EUROLLOOP unit.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	Euroloop bytes		The size of "euroloop bytes" is variable

#### Packet 8: MESSAGE FROM RADIO INFILL UNIT

This packet shall be sent to the JRU after receiving a message from a radio infill unit. The content of this packet is all message packets defined in Unisig document

## ITEA2 PROJECT

**2012-2015**

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_NID_C	10	
4	JRU_NID_RIU	14	
5	Radio infill bytes		The size of "Radio infill bytes" is variable

### Packet 9: MESSAGE FROM RBC

This packet shall be sent to the JRU after receiving a message from the RBC. The content of this packet is all message packets defined in Unisig document.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_NID_C	10	
4	JRU_NID_RBC	14	
5	RBC bytes		The size of "RBC bytes" is variable

### Packet 10: MESSAGE TO RBC

This packet shall be sent to the JRU after sending a message to the RBC. The content of this packet is all message packets defined in Unisig document.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_NID_C	10	
4	JRU_NID_RBC	14	
5	RBC bytes		The size of "RBC bytes" is variable

## ITEA2 PROJECT

### 2012-2015

#### Packet 11: DRIVER'S ACTIONS

This packet shall be sent to the JRU when the driver acts on the on board system (MMI, TIU).

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_M_DRIVERACTION S	8	

#### Packet 12: BALISES GROUP ERROR

This packet contains the balise identity. The packet contains the variable: JRU\_NID\_LRBG. All kinds of balise group error can be recorded inside the JRU.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_NID_LRBG	10+14	
4	JRU_M_ERROR	8	

#### Packet 13: RADIO ERROR

This packet contains the identifier of the error triggered within a radio transmission. All kinds of radio error can be recorded inside the JRU.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_NID_C	10	
4	JRU_NID_RBC	14	
5	JRU_M_ERROR	8	

#### Packet 14: STM INFORMATION



## ITEA2 PROJECT

### 2012-2015

This packet contains all STM data that have to be recorded by the JRU.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	NID_STMX	8	STM identification from general header STM
4	NID_STMEVENT	2	STM Event type
5	M_DISCENDER	1	If NID_STMEVENT = 0
6	M_DISCTYPE	1	If NID_STMEVENT = 0
7	M_DISCREASON	8	If NID_STMEVENT = 0
8	STM_SYSTEM_STATUS_MESSAGE	3	If NID_STMEVENT = 1
9	NID_STMPACKET	8	If NID_STMEVENT = 2 Packet identifier
10	L_STMPACKET	13	If NID_STMEVENT = 2 Packet length
11	T_JRU	32	Time Stamp
12	N_L_ITER	8	Number of data bytes in message
13	M_DATA (k)	8	Information to JRU

#### Packet 15: INFORMATION FROM COLD MOVEMENT DETECTOR

This packet gives the information from the cold movement detector at the power-up.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_M_COLD_MVT	2	
4	Padding	6	

#### Packet 16: START DISPLAYING FIXED TEXT MESSAGE

## ITEA2 PROJECT

### 2012-2015

This packet shall record a fixed text message from the trackside that is currently being shown to the driver.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_Q_TEXT	8	

#### Packet 17: STOP DISPLAYING FIXED TEXT MESSAGE

This packet shall record fixed text message from the trackside that is not shown to the driver any more.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_Q_TEXT	8	

#### Packet 18: START DISPLAYING PLAIN TEXT MESSAGE

This packet shall record a plain text messages from the trackside that is currently being shown to the driver.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_L_TEXT	8	JRU_L_TEXT defines the number (L) of characters X
4	JRU_X_TEXT	L x 8	

#### Packet 19: STOP DISPLAYING PLAIN TEXT MESSAGE

This packet shall record a plain text messages from the trackside that is not shown to the driver any more.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	

## ITEA2 PROJECT

### 2012-2015

3	JRU_L_TEXT	8	JRU_L_TEXT defines the number (L) of characters X
4	JRU_X_TEXT	L x 8	

#### Packet 20: SPEED AND DISTANCE MONITORING INFORMATION

This packet shall record the Speed and Distance monitoring data displayed to the driver.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_M_SDMTYPE	2	
4	JRU_M_SDMSUPSTAT	3	
5	JRU_V_PERM	10	
6	JRU_V_FLOI	10	
7	JRU_V_TARGET	10	
8	JRU_D_TARGET	15	
9	JRU_V_RELEASE	10	
4	PADDING	4	

#### Packet 21: DMI SYMBOL STATUS

This packet shall record the status of the set of symbols that can be displayed on the DMI.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_DMI_SYMB_STATU S	86	
4	PADDING	2	

#### Packet 22: DMI SOUND STATUS

This packet shall record the status of the sounds that are used to draw the driver's attention from the outside to the display.

## ITEA2 PROJECT

**2012-2015**

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_DMI_SOUND_STAT US	3	
4	PADDING	5	

### Packet 23: DMI SYSTEM STATUS MESSAGE

This packet shall record which system status messages are displayed to the driver.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_SYSTEM_STATUS_MESSA GE	23	
4	PADDING	1	

### Packet 24: ADDITIONAL DATA

This packet shall record the additional data.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_M_ADHESION	1	
4	JRU_NID_MN	24	
5	JRU_Q_RBCENTRY	2	
6	JRU_NID_C	10	Only if JRU_Q_RBCENTRY = 2
7	JRU_NID_RBC	14	Only if JRU_Q_RBCENTRY = 2
8	JRU_NID_RADIO	64	Only if JRU_Q_RBCENTRY = 2
9	JRU_NID_OPERATIONAL	32	

## ITEA2 PROJECT

### 2012-2015

#### Packet 25: SR SPEED/DISTANCE ENTERED BY THE DRIVER

This packet shall record the change of the SR Speed or Distance entered by the driver.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_D_SR	17	
4	JRU_V_SR	10	
5	PADDING	5	

#### Packet 26: NTC SELECTED

This packet shall record the identity of the NTC when the selected level is NTC.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	NID_NTC	8	

#### Packet 27: SAFETY CRITICAL FAULT IN MODE SL, NL OR PS

This packet records the occurrence of a safety critical fault in mode SL, NL or PS.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	

#### Packet 28: VIRTUAL BALISE COVER SET BY THE DRIVER

This packet records the code entered by the driver to set a VBC.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	

## ITEA2 PROJECT

### 2012-2015

3	JRU_NID_VBCMK	6	
4	JRU_NID_C	10	
5	JRU_T_VBC	8	

#### Packet 29: VIRTUAL BALISE COVER REMOVED BY THE DRIVER

This packet records the code entered by the driver to remove a VBC

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_NID_C	10	
4	JRU_NID_VBCMK	6	

#### Packet 30: SLEEPING INPUT

This packet records the state of the sleeping input.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_M_SLEEPING	1	
4	PADDING	7	

#### Packet 31: PASSIVE SHUNTING INPUT

This packet records the state of the passing shunting input.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_M_PASSIVE_SHUNTING	1	
4	PADDING	7	

## ITEA2 PROJECT

### 2012-2015

#### Packet 32: NON LEADING INPUT

This message records the state of the Non leading input.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_M_NON_LEADING	1	
4	PADDING	7	

#### Packet 33: REGENERATIVE BRAKE STATUS

This packet shall record the regenerative brake status.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_M_RB_STATUS	1	
4	PADDING	7	

#### Packet 34: MAGNETIC SHOE BRAKE STATUS

This packet shall record the magnetic shoe brake status .

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_M_MSB_STATUS	1	
4	PADDING	7	

#### Packet 35: EDDY CURRENT BRAKE STATUS

This packet shall record the eddy current brake status .

## ITEA2 PROJECT

### 2012-2015

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_M_ECB_STATUS	1	
4	PADDING	7	

#### Packet 36: ELECTRO PNEUMATIC BRAKE STATUS

This packet shall record the electro pneumatic brake status.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_M_EP_STATUS	1	
4	PADDING	7	

#### Packet 37: ADDITIONAL BRAKE STATUS

This packet shall record the additional brake status .

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_M_AB_STATUS	1	
4	PADDING	7	

#### Packet 38: CAB STATUS

This packet shall record the cab status that the ERTMS/ETCS on-board received from the train interface.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_M_CAB_A_STATUS	1	



## ITEA2 PROJECT

**2012-2015**

4	JRU_Q_CAB_B	1	
5	JRU_M_CAB_B_STATUS	1	Only if JRU_Q_CAB_B = 1
6	JRU_Q_SINGLE_DESK	1	Only if JRU_Q_CAB_B = 0
7	JRU_M_ORIENTATION	1	ONLY if JRU_Q_SINGLE_DESK = 1
8	PADDING		

### Packet 39: DIRECTION CONTROLLER POSITION

This packet shall record the direction controller position.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_M_DIRECTION_CONTROLLER	2	
4	PADDING	6	

### Packet 40: TRACTION STATUS

This packet shall record the traction status.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_M_TRACTION_STATUS	1	
4	PADDING	7	

### Packet 41: TYPE OF TRAIN DATA

This packet shall record the type of train data entry.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	

## ITEA2 PROJECT

### 2012-2015

2	JRU_L_PACKET	16	
3	JRU_M_TRAIN_DATA_ENTRY	2	
4	PADDING	6	

#### Packet 42: NATIONAL SYSTEM ISOLATION

This packet shall record that a National System, which is interfaced to the on-board through an STM, is isolated or not.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	NID_NTC	8	
4	JRU_M_NATIONAL_SYSTEM_ISOLATION	1	
5	PADDING	7	

#### Packet 43: TRACTION CUT OFF COMMAND STATE

This packet shall record the traction cut off command state.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	
3	JRU_M_TCO_COMMAND_STATE	1	
4	PADDING	7	

#### Packet 255: ETCS ON-BOARD PROPRIETARY JURIDICAL DATA

This packet shall record information that is specific to an ETCS on-board equipment.

Field No.	VARIABLE/ PACKET	Length in bits	Remarks
1	JRU_NID_PACKET	8	
2	JRU_L_PACKET	16	

## ITEA2 PROJECT

### 2012-2015

3	Proprietary Data		
---	------------------	--	--

## ITEA2 PROJECT

2012-2015

### 5. OPENETCS APPLICATION - TIU INTERFACE

#### 5.1 COMPONENTS OF LANGUAGE

##### 5.1.1 Introduction

The language is used in transmitting information between the OpenETCS application to the TIU.

The language is based on variables and packets.

##### 5.1.2 Definition of Variables

Variables shall be used to encode single data values. Variables cannot be split in minor units. The whole variable has one type (meaning).

Variables may have special values that are related to the basic meaning of the variable.

Signed values shall be encoded as 2's complement.

One bit variables (Boolean) shall always use 0 for false and 1 for true.

Offsets for numerical values shall be avoided (0 shall be used for 0, 1 for 1, etc.) except where justified.

When transmitting over the transmission media, the most significant bit must be transmitted first.

All Variables have one of the following prefixes:

A_	Acceleration
D_	distance
G_	Gradient
L_	length
M_	Miscellaneous
N_	Number
NC_	class number
NID_	identity number
Q_	Qualifier
T_	time/date
V_	Speed
X_	Text
CCPU_	Data generated by Core CPU board

## ITEA2 PROJECT

2012-2015

TIU\_\_

Data generated by TIU board

### 5.1.3 Definition of Packets

Packets are multiple variables grouped into a single unit, with a defined internal structure.

This structure consists of a packet header with a unique packet number, the length of the packet in bits, optionally the distance scale and an information section containing a defined set of variables. The packet structure is as follows:

Number	NID_PACKET	Packet identifier
Length	L_PACKET	Number of bits in the packet
Scale	Q_SCALE	Specifies which distance scale is used for all distance information within the packet.  There is no Q_SCALE variable in packets that do not contain distance information.
Information	.....	Well-defined set(s) of variables.

The packet definition does not change when transmitted over different transmission media.

All currently not defined packet identifiers are reserved for future use. All future packet definitions shall follow the above defined structure.

N\_ITER specifies the number of iterations of a variable or group of variables that follow.

If N\_ITER is 0 then no variables follow.

Two nested levels of iterations can exist.

Indented variables are optional, depending on the value of the previous qualifier variable in the packet.

## ITEA2 PROJECT

**2012-2015**

### 5.2 PACKETS

#### 5.2.1 List of Packets

##### 5.2.1.1 TIU to OpenETCS application

Packet Number	Packet Name
0	Inputs from train devices
1	Plain text message
2	Fixed text message
3	brake models
4	<i>Not used</i>
5	<i>Not used</i>
6	Test and failure detection
7	STMs specific behaviour
8	Specific from MVB (Specific to Alstom implementation)
12	Diagnostic
13	Inhibition Level (Specific to Alstom implementation)

##### 5.2.1.2 OpenETCS application to TIU

Packet Number	Packet Name
0	Commands
1	Track conditions
2	Odometric data
3	Other information
4	Train type
5	Track condition change of traction power
6	Location reference update
7	Sporadic commands
8	STMs states

## ITEA2 PROJECT

### 2012-2015

Packet Number	Packet Name
9	Train information
10	Doors control section
11	Track description deletion information
14	Gradients

#### 5.2.2 PACKETS: TIU to OpenETCS application

Packet Number 0 : Inputs from train devices

<b>Description</b>	Gives the state of the train devices, received from the I/O board inputs, or from the optional CAN/train bus.		
<b>Sent</b>	Sporadically		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	NID_PACKET	8	
	L_PACKET	13	
	V_TIU_EB_STATE_FILTERED	2	
	V_TIU_SB_STATE_FILTERED	2	
	V_TIU_TRACTION_CUT_OFF_STATE_FILTERED	2	
	V_TIU_ISOLATION_STATE_FILTERED	2	
	V_TIU_SLEEPING_STATE_FILTERED	2	
	V_TIU_TILTING_STATE_FILTERED	2	
	V_TIU_DIRCONT_STATE_FILTERED	3	
	V_TIU_DESKS_STATE_FILTERED	3	
	V_TIU_INTEGRITY_STATE_FILTERED	2	
	V_TIU_DRIVEREM_STATE_FILTERED	2	
	V_TIU_VIGIL_ACTION_STATE_FILTERED	2	
	V_TIU_VIGIL_DISABLE_STATE_FILTERED	2	
	V_TIU_COLD_MOVE_STATE_FILTERED	2	

## ITEA2 PROJECT

2012-2015

V_TIU_EB_STATE	2	
V_TIU_SB_STATE	2	
V_TIU_TRACTION_CUT_OFF_STATE	2	
V_TIU_ISOLATION_STATE	2	
V_TIU_SLEEPING_STATE	2	
V_TIU_TILTING_STATE	2	
V_TIU_DIRCONT_STATE	3	
V_TIU_DESKS_STATE	3	
V_TIU_INTEGRITY_STATE	2	
V_TIU_DRIVEREM_STATE	2	
V_TIU_VIGIL_ACTION_STATE	2	
V_TIU_VIGIL_DISABLE_STATE	2	
V_TIU_COLD_MOVE_STATE	2	
CIRCUIT_BREAKER_COHERENCY	3	
PANTOGRAPH_COHERENCY	3	
V_TIU_COMMANDING_EB	1	
V_TIU_COMMANDING_SB	1	
V_TIU_TRACTION_STATUS	3	

Packet Number 1 : Plain text message

<b>Description</b>	Plain text given by TIU, to be displayed on the MMI by the Core CPU		
<b>Sent</b>	Sporadically (sending triggered by event)		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	NID_PACKET	8	
	L_PACKET	13	
	Q_SCALE	2	
	TIU_Q_TEXTCLASS	2	
	TIU_Q_TEXTDISPLAY	1	
	TIU_L_TEXTDISPLAY	15	End condition



## ITEA2 PROJECT

**2012-2015**

	TIU_T_TEXTDISPLAY	10	End condition
	TIU_Q_TEXTCONFIRM	2	
	TIU_L_TEXT	5	
	TIU_X_TEXT (TIU_L_TEXT)	8	

Packet Number 2 : Fixed text message

<b>Description</b>	Fixed text given by TIU, to be displayed on the MMI by the Core CPU		
<b>Sent</b>	Sporadically (sending triggered by event)		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	NID_PACKET	8	
	L_PACKET	13	
	Q_SCALE	2	
	TIU_Q_TEXTCLASS	2	
	TIU_Q_TEXTDISPLAY	1	
	TIU_L_TEXTDISPLAY	15	End condition
	TIU_T_TEXTDISPLAY	10	End condition
	TIU_Q_TEXTCONFIRM	2	
	TIU_Q_TEXT	8	

Packet Number 3 : Brake models

<b>Description</b>	Model of the emergency brake, traction, and service brake (if present), to be used by the Core CPU		
<b>Sent</b>	Sporadically (sending triggered by event)		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	NID_PACKET	8	
	L_PACKET	13	
	TIU_MODEL_BEGIN_BRAKE	8	Part of EB model
	TIU_MODEL_FULL_BRAKE	11	Part of EB model
	N_ITER	5	Part of EB model In this case range=0..5
	TIU_MODEL_SPEED(k)	8	Part of EB model
	TIU_MODEL_DECELER(k)	8	Part of EB model

## ITEA2 PROJECT

2012-2015

TIU_CUT_TRACT_DELAY	8	Part of traction model
TIU_TRAIN_MAX_ACC	10	Part of traction model
TIU_ACC_COEF_SB_UNUSED	7	Part of traction model
TIU_ACC_COEF_SB_USED	7	Part of traction model
Q_SB_MODEL_PRESENT	1	Part of SB model
TIU_MODEL_BEGIN_BRAKE	8	Part of SB model
TIU_MODEL_FULL_BRAKE	11	Part of SB model
N_ITER	5	Part of SB model In this case range=0..5
TIU_MODEL_SPEED(k)	8	Part of SB model
TIU_MODEL_DECELER(k)	8	Part of SB model
TIU_MIN_ROT_MASS_PERCENT	8	Part of rot mass model
TIU_NOM_ROT_MASS_PERCENT	8	Part of rot mass model
TIU_MAX_ROT_MASS_PERCENT	8	Part of rot mass model
TIU_T_W	13	Part of driver delay
TIU_T_P	13	Part of driver delay
TIU_T_I_P	13	Part of driver delay
TIU_T_RSMA	13	Part of driver delay

Packet Number 6 : Test and failure detection

<b>Description</b>	Result of EB tests on demand and safety failure detection		
<b>Sent</b>	Sporadically (sending triggered by event)		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	NID_PACKET	8	
	L_PACKET	13	
	TIU_EB_TESTS_ON_DEMAND_RESULT	3	
	TIU_SAFETYFAIL_DETECT	2	

Packet Number 7 : STMs specific behavior

## ITEA2 PROJECT

2012-2015

<b>Description</b>	List of STMs identified by the TIU as "having an inappropriate behavior" or "having a specific behavior after an inappropriate behavior"  This packet is related to the management of the TI and BI units for STM interfaces.		
<b>Sent</b>	Sporadically		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	NID_PACKET	8	
	L_PACKET	13	
	N_ITER	5	
	NID_STM	8	
	NID_STMSPECIFICSTATE	3	

Packet Number 8 : Specific\_from\_MVB (Specific to Alstom implementation)

<b>Description</b>	"non discrete" info coming from MVB and to be sent to the Core CPU		
<b>Sent</b>	At each computer cycle		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	NID_PACKET	8	
	L_PACKET	13	
	Q_SET_TARGET_SPEED	1	
	SET_TARGET_SPEED	16	if Q_SET_TARGET_SPEED = 1

Packet Number 12: Diagnostic

<b>Description</b>	The packet gives reason information about diagnostic : emergency and service braking.		
<b>Sent</b>	Sporadically (sending triggered by event)		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	NID_PACKET	8	
	L_PACKET	13	
	N_ITER_EVENT	5	
	TIU_MAINTENANCE_EVENT_ID	8	

Packet Number 13: Inhibition Level (Specific to Alstom implementation)

<b>Description</b>	The packet gives the command of inhibition of level.		
<b>Sent</b>	Sporadically (sending triggered by event)		

## ITEA2 PROJECT

**2012-2015**

<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	NID_PACKET	8	
	L_PACKET	13	
	N_ITER	5	
	CCPU_LEVEL(k)	3	
	NID_NTC(k) (if CCPU_LEVEL = NTC)	8	
	LEVEL_CHANGE_ORIGIN(k)	2	

### 5.2.3 PACKETS: OpenETCS application to TIU

Packet Number 0 : Cyclic Commands

<b>Description</b>	Any command given by the Core CPU		
<b>Sent</b>	At each computer cycle		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	NID_PACKET	8	
	L_PACKET	13	
	CCPU_EB_COMMAND	1	
	CCPU_SB_COMMAND	2	
	CCPU_TRACTION_CUT_OFF	1	
	CCPU_VIGIL_DISABLE_ORDER	1	

Packet Number 1: Track Conditions

<b>Description</b>	The packet gives details concerning the track ahead to support the driver when e.g. lower pantograph		
<b>Sent</b>	Sporadically (sending triggered by event)		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	NID_PACKET	8	
	L_PACKET	13	
	Q_SCALE	2	
	CCPU_NID_C	10	

## ITEA2 PROJECT

2012-2015

CCPU_NID_BG	14	
Q_LINK	1	
Q_TRACKINIT	1	
D_TRACKINIT	16	Only if Q_TRACKINIT = 1
D_TRACKCOND	16	Only if Q_TRACKINIT = 0
L_TRACKCOND	16	Only if Q_TRACKINIT = 0
M_TRACKCOND	4	Only if Q_TRACKINIT = 0
N_ITER	5	Only if Q_TRACKINIT = 0
D_TRACKCOND(k)	15	
L_TRACKCOND(k)	16	
M_TRACKCOND(k)	4	

Packet Number 2 : Odometric data

<b>Description</b>	Periodic transmission of odometric data		
<b>Sent</b>	At each computer cycle		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	NID_PACKET	8	
	L_PACKET	13	
	Q_LOCATION_PRESENT	1	
	Q_SCALE	2	present only if Q_LOCATION_PRESENT = 1
	CCPU_NID_C	10	idem
	CCPU_NID_BG	14	idem
	CCPU_L_MAX_SAFE_FRONT_END	16	idem
	CCPU_L_MIN_SAFE_FRONT_END	16	idem
	CCPU_L_ESTIMATED_FRONT_END	16	idem
	CCPU_L_MIN_SAFE_REAR_END	16	idem
	CCPU_NO_MOTION	2	
	CCPU_TRAIN_MOVEMENT	2	
	CCPU_V_TRAIN_NOMINAL	15	

## ITEA2 PROJECT

### 2012-2015

	CCPU_A_TRAIN_NOMINAL	11	
	CCPU_D_TRAIN_NOMINAL	32	

Packet Number 3 : Other information

<b>Description</b>	Other information required by the TIU from the Core CPU		
<b>Sent</b>	At each computer cycle		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	NID_PACKET	8	
	L_PACKET	13	
	CCPU_MODE	4	
	CCPU_LEVEL	3	
	NID_NTC	8	If CCPU_LEVEL = NTC

Packet Number 4 : Train type

<b>Description</b>	Information used by the TIU smart board, to select appropriate models to be sent to the Core CPU		
<b>Sent</b>	Sporadically (sending triggered by event)		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	NID_PACKET	8	
	L_PACKET	13	
	CCPU_DECELERATION_CLASS_ID	8	
	CCPU_BRAKE_DELAY_CLASS_ID	8	

Packet Number 5: Track Condition Change of traction power

<b>Description</b>	The packet gives information about change of the traction power system.		
<b>Sent</b>	Sporadically (sending triggered by event)		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	NID_PACKET	8	
	L_PACKET	13	

## ITEA2 PROJECT

2012-2015

Q_SCALE	2	
CCPU_NID_C	10	
CCPU_NID_BG	14	
Q_LINK	1	
Q_TRACKINIT	1	
D_TRACKINIT	16	Only if Q_TRACKINIT = 1
D_TRACTION_MAX	16	Only if Q_TRACKINIT = 0 Related to max safe front end
D_TRACTION_MIN	16	Only if Q_TRACKINIT = 0 Related to min safe rear end
M_VOLTAGE	4	Type of traction, only if Q_TRACKINIT = 0.
NID_CTRACTION	10	Only if M_VOLTAGE <> 0

Packet Number 6: Location reference update

<b>Description</b>	The packet gives information about the new reference location balise group to be used by the TIU		
<b>Sent</b>	Sporadically (sending triggered by event)		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	NID_PACKET	8	
	L_PACKET	13	
	Q_SCALE	2	
	CCPU_NID_C_OLD	10	
	CCPU_NID_BG_OLD	14	
	CCPU_NID_C_NEW	10	
	CCPU_NID_BG_NEW	14	
	CCPU_D_OLD_TO_NEW_LINKED_ESTI	16	
	CCPU_D_OLD_TO_NEW_LINKED_MIN	16	
	CCPU_D_OLD_TO_NEW_LINKED_MAX	16	
	CCPU_D_OLD_TO_NEW_NOT_LINKED_ESTI	16	
	CCPU_D_OLD_TO_NEW_NOT_LINKED_MIN	16	

## ITEA2 PROJECT

**2012-2015**

	CCPU_D_OLD_TO_NEW_NOT_LINKED_MAX	16	
--	----------------------------------	----	--

Packet Number 7 : Sporadic commands

<b>Description</b>	Any sporadic command given by the Core CPU		
<b>Sent</b>	Sporadically (sending triggered by event)		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	NID_PACKET	8	
	L_PACKET	13	
	CCPU_START_EB_TESTS_ON_DEMAND	2	
	CCPU_VIGIL_RESET_ORDER	1	
	CCPU_SB_MONITORING_STATE	1	

Packet Number 8 : STMs states

<b>Description</b>	States of STMs given by the Core CPU		
<b>Sent</b>	Sporadically		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	NID_PACKET	8	
	L_PACKET	13	
	N_ITER	5	
	NID_STM	8	
	NID_STMSTATE	4	
	NID_STMSTATEORDER	4	

Packet Number 9 : Train information

<b>Description</b>	Other information required by the TIU from the Core CPU		
<b>Sent</b>	Sporadically		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	NID_PACKET	8	



## ITEA2 PROJECT

**2012-2015**

	L_PACKET	13	
	CCPU_CORE_INHIBITION	1	
	CCPU_NID_OPERATIONAL	32	
	CCPU_RUNNING_DIRECTION_CHANGE_FOR_DATA	1	
	CCPU_TRAIN_LENGTH	12	

Packet Number 10 : Doors control section

<b>Description</b>	Information required by the TIU from the Core CPU to manage a doors control section		
<b>Sent</b>	Sporadically		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	NID_PACKET	8	
	L_PACKET	13	
	Q_SCALE	2	
	CCPU_NID_C	10	
	CCPU_NID_BG	14	
	Q_LINK	1	
	D_DOORS_SECTION_START	16	
	D_DOORS_SECTION_END	16	
	CCPU_M_SIDE_DOOR	2	

Packet Number 11: Track description deletion information

<b>Description</b>	The packet gives deletion information about track description.		
<b>Sent</b>	Sporadically (sending triggered by event)		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	NID_PACKET	8	
	L_PACKET	13	
	Q_SCALE	2	
	CCPU_NID_C	10	

## ITEA2 PROJECT

### 2012-2015

	CCPU_NID_BG	14	
	TRACK_DESC_DELETION_LOCATION_ESTI	16	not used by the TIU
	TRACK_DESC_DELETION_LOCATION_MIN	16	
	TRACK_DESC_DELETION_LOCATION_MAX	16	not used by the TIU

Packet Number 14: Gradients information

<b>Description</b>	The packet gives gradient information about track description.		
<b>Sent</b>	Sporadically (sending triggered by event)		
<b>Content</b>	<b>Variable</b>	<b>Length</b>	<b>Comment</b>
	NID_PACKET	8	
	L_PACKET	13	
	Q_SCALE	2	
	CCPU_NID_C	10	
	CCPU_NID_BG	14	
	N_GRADIENTS	6	
	D_GRADIENT(k)	16	
	G_GRADIENT(k)	9	

## 5.3 VARIABLES

### 5.3.1 List of Variables

- CCPU\_A\_TRAIN\_NOMINAL

<b>Name</b>	Nominal train acceleration		
<b>Description</b>			
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
11 bits	-10.24 [m/s <sup>2</sup> ]	10.23 [m/s <sup>2</sup> ]	0.01
<b>Special/Reserved Values</b>			

- CCPU\_BRAKE\_DELAY\_CLASS\_ID

## ITEA2 PROJECT

2012-2015

<b>Name</b>	brake delay class ID		
<b>Description</b>			
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits	0	255	1
<b>Special/Reserved Values</b>			

### 3. CCPU\_CORE\_INHIBITION

<b>Name</b>	Core signal to inhibit pantograph optimization in powerless section and change of traction power		
<b>Description</b>	/		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0	Do_not_inhibit	
	1	Inhibit	

### 4. CCPU\_D\_OLD\_TO\_NEW\_LINKED\_ESTI

<b>Name</b>	/		
<b>Description</b>	Estimated distance between the old (the previous) reference balise group and the new reference balise group with information linked to the balise		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
16 bits	-327680 m	327 670 m	10cm, 1m or 10m, depending on Q_SCALE

### 5. CCPU\_D\_OLD\_TO\_NEW\_LINKED\_MAX

<b>Name</b>	/		
<b>Description</b>	Maximum distance maximum between the old (the previous) reference balise group and the new reference balise group with information linked to the balise		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
16 bits	-327680 m	327 670 m	10cm, 1m or 10m, depending on Q_SCALE

### 6. CCPU\_D\_OLD\_TO\_NEW\_LINKED\_MIN

<b>Name</b>	/		
<b>Description</b>	Minimum distance between the old (the previous) reference balise group and the new reference balise group with information linked to the balise		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
16 bits	-327680 m	327 670 m	10cm, 1m or 10m, depending on Q_SCALE

### 7. CCPU\_D\_OLD\_TO\_NEW\_NOT\_LINKED\_ESTI

<b>Name</b>	/		
<b>Description</b>	Estimated distance between the old (the previous) reference balise group and the new reference balise group with information not linked to the balise		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
16 bits	-327680 m	327 670 m	10cm, 1m or 10m, depending on Q_SCALE

## ITEA2 PROJECT

2012-2015

16 bits	-327680 m	327 670 m	10cm, 1m or 10m, depending on Q_SCALE
---------	-----------	-----------	---------------------------------------

8. CCPU\_D\_OLD\_TO\_NEW\_NOT\_LINKED\_MAX

<b>Name</b>	/		
<b>Description</b>	Maximum distance between the old (the previous) reference balise group and the new reference balise group with information not linked to the balise		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
16 bits	-327680 m	327 670 m	10cm, 1m or 10m, depending on Q_SCALE

9. CCPU\_D\_OLD\_TO\_NEW\_NOT\_LINKED\_MIN

<b>Name</b>	/		
<b>Description</b>	Minimum distance between the old (the previous) reference balise group and the new reference balise group with information not linked to the balise		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
16 bits	-327680 m	327 670 m	10cm, 1m or 10m, depending on Q_SCALE

10. CCPU\_D\_TRAIN\_NOMINAL

<b>Name</b>	/		
<b>Description</b>	Absolute distance moved		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
32 bits	-15 000 000.00 m	15 000 000.00 m	0.01 m
<b>Special/Reserved Values</b>			

11. CCPU\_DECELERATION\_CLASS\_ID

<b>Name</b>	deceleration class ID		
<b>Description</b>			
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits	0	255	1
<b>Special/Reserved Values</b>			

12. CCPU\_EB\_COMMAND

<b>Name</b>	Emergency brake command		
<b>Description</b>	/		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0	Do_no_apply_EB	
	1	Apply_EB	

## ITEA2 PROJECT

2012-2015

13. CCPU\_L\_ESTIMATED\_FRONT\_END

<b>Name</b>	Absolute location of the estimated front end of the train		
<b>Description</b>	/		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
16 bits	-327680 m	327 670 m	10cm, 1m or 10m, depending on Q_SCALE

14. CCPU\_L\_MAX\_SAFE\_FRONT\_END

<b>Name</b>	Absolute location of the maximum safe front end of the train		
<b>Description</b>	/		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
16 bits	-327680 m	327 670 m	10cm, 1m or 10m, depending on Q_SCALE

15. CCPU\_L\_MIN\_SAFE\_FRONT\_END

<b>Name</b>	Absolute location of the minimum safe front end of the train		
<b>Description</b>	/		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
16 bits	-327680 m	327 670 m	10cm, 1m or 10m, depending on Q_SCALE

16. CCPU\_L\_MIN\_SAFE\_REAR\_END

<b>Name</b>	Absolute location of the minimum safe rear end of the train		
<b>Description</b>	/		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
16 bits	-327680 m	327 670 m	10cm, 1m or 10m, depending on Q_SCALE

17. CCPU\_LEVEL

<b>Name</b>	Current Operating Level		
<b>Description</b>			
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
3 bits			
<b>Special/Reserved Values</b>	0	Level 0	
	1	Level NTC specified by NID_NTC	
	2	Level 1	
	3	Level 2	
	4	Level 3	
	5-7	Spare	

18. CCPU\_M\_SIDE\_DOOR

<b>Name</b>	Side(s) authorized to be opened inside the allowed area
-------------	---

## ITEA2 PROJECT

2012-2015

<b>Description</b>	/		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	0	Door side to open : left	
	1	Door side to open : right	
	2	Door side to open : both	
	3	Spare	

19. CCPU\_M\_TRACTION

<b>Name</b>	Type of traction		
<b>Description</b>	See subset 026, chapter 7, variable M_TRACTION		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits	0	255	1
<b>Special/Reserved Values</b>			

20. CCPU\_MODE

<b>Name</b>	Generic Onboard operating mode		
<b>Description</b>			
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
4 bits			
<b>Special/Reserved Values</b>	0	Full Supervision	
	1	On Sight	
	2	Staff Responsible	
	3	Shunting	
	4	Unfitted	
	5	Sleeping	
	6	Stand By	
	7	Trip	
	8	Post Trip	
	9	System Failure	
	10	Isolation	
	11	Non Leading	
	12	Limited_Supervision	
	13	STM National	
	14	Reversing	
	15	Passive Shunting	

21. CCPU\_NID\_BG

## ITEA2 PROJECT

2012-2015

<b>Name</b>	Identity number of the balise group used as reference for the related distances/locations		
<b>Description</b>	Identity number of a balise group or loop within the country or region defined by NID_C.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
14 bits	0	16382	1
<b>Special/Reserved Values</b>	/	/	

22. CCPU\_NID\_BG\_NEW

<b>Name</b>	Identity number of the new balise group to use as reference for the related distances/locations		
<b>Description</b>	Identity number of a balise group or loop within the country or region defined by NID_C.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
14 bits	0	16382	1
<b>Special/Reserved Values</b>	/	/	

23. CCPU\_NID\_BG\_OLD

<b>Name</b>	Identity number of the current (old) balise group used as reference for the related distances/locations		
<b>Description</b>	Identity number of a balise group or loop within the country or region defined by NID_C.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
14 bits	0	16382	1
<b>Special/Reserved Values</b>	/	/	

24. CCPU\_NID\_C

<b>Name</b>	Identity number of the country or region where is located the reference balise group		
<b>Description</b>	Code used to identify the country or region in which the balise group is situated. These need not necessarily follow administrative or political boundaries.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
10 bits	0	1023	1
<b>Special/Reserved Values</b>			

25. CCPU\_NID\_C\_NEW

<b>Name</b>	Identity number of the country or region where is located the new reference balise group		
<b>Description</b>	Code used to identify the country or region in which the balise group is situated. These need not necessarily follow administrative or political boundaries.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
10 bits	0	1023	1
<b>Special/Reserved Values</b>			

26. CCPU\_NID\_C\_OLD

<b>Name</b>	Identity number of the country or region where is located the current (old) reference balise group		
<b>Description</b>	Code used to identify the country or region in which the balise group is situated. These need not necessarily follow administrative or political boundaries.		

## ITEA2 PROJECT

2012-2015

<i>Length of variable</i>	<i>Minimum Value</i>	<i>Maximum Value</i>	<i>Resolution/formula</i>
10 bits	0	1023	1
<i>Special/Reserved Values</i>			

27. CCPU\_NID\_OPERATIONAL

<b>Name</b>	Train Running Number		
<b>Description</b>	See subset 026, chapter 7, variable NID_OPERATIONAL		
<i>Length of variable</i>	<i>Minimum Value</i>	<i>Maximum Value</i>	<i>Resolution/formula</i>
32 bits	0	9999 9999	Binary Coded Decimal

28. CCPU\_NO\_MOTION

<b>Name</b>	Movement state of train		
<b>Description</b>	Indicates if a movement of the train is detected or if a no motion state can be considered.		
<i>Length of variable</i>	<i>Minimum Value</i>	<i>Maximum Value</i>	<i>Resolution/formula</i>
2 bits			
<b>Special/Reserved Values</b>	0	Motion	
	1	No Motion	
	2	Unknown	
	3	Spare	

29. CCPU\_RUNNING\_DIRECTION\_CHANGE\_FOR\_DATA

<b>Name</b>	Running direction change for data		
<b>Description</b>	That flag indicates if a modification of orientation has to be taken into account for the data supervision.		
<i>Length of variable</i>	<i>Minimum Value</i>	<i>Maximum Value</i>	<i>Resolution/formula</i>
1 bit			
<b>Special/Reserved Values</b>	0	no running direction change for data supervision	
	1	a running direction change occurred at this cycle for data supervision	

30. CCPU\_SB\_COMMAND

<b>Name</b>	Service brake command		
<b>Description</b>	/		
<i>Length of variable</i>	<i>Minimum Value</i>	<i>Maximum Value</i>	<i>Resolution/formula</i>
2 bits			
<b>Special/Reserved Values</b>	0	Do_no_apply_SB	
	1	Apply_SB	
	2	Apply_SB_not_protected	
	3	spare	

31. CCPU\_SB\_MONITORING\_STATE



## ITEA2 PROJECT

2012-2015

<b>Name</b>	State of SB monitoring by CORE		
<b>Description</b>	Result of SB monitoring by CORE		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0	NOT_RELEVANT (no monitoring running or running in order)	
	1	FAILED (monitoring running and failed)	

32. CCPU\_START\_EB\_TESTS\_ON\_DEMAND

<b>Name</b>	EB tests on demand start		
<b>Description</b>	Triggers the EB tests on demand		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	0	NO_TEST : do not start brake tests (but do not stop them if already started)	
	1	start EB tests	
	2	start SB tests	
	3	spare	

33. CCPU\_TRACTION\_CUT\_OFF

<b>Name</b>	Cut off traction command		
<b>Description</b>	/		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0	False (=Release traction cut off command)	
	1	True (=Cut off traction)	

34. CCPU\_TRAIN\_LENGTH

<b>Name</b>	Train length deduced from validated train data. The train length takes the value "Unknown" if the train data are not validated or not correct.		
<b>Description</b>			
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
12 bits	0	4094 [m]	1
<b>Special/Reserved Values</b>	4095	Unknown	

35. CCPU\_TRAIN\_MOVEMENT

<b>Name</b>	Direction of train movement in relation to the LRBG orientation		
<b>Description</b>	Indicates the running direction of the train, with respect to the active cab		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			

## ITEA2 PROJECT

2012-2015

<b>Special/Reserved Values</b>	0	Backward
	1	Forward
	2	Unknown
	3	Spare

36. CCPU\_V\_TRAIN\_NOMINAL

<b>Name</b>	Nominal train speed		
<b>Description</b>			
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
15 bits	0	327.67 [m/s]	0.01
<b>Special/Reserved Values</b>			

37. CCPU\_VIGIL\_DISABLE\_ORDER

<b>Name</b>	Order to disable the external driver vigilance device		
<b>Description</b>	/		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0	False (do not disable the device)	
	1	True (disable the device)	

38. CCPU\_VIGIL\_RESET\_ORDER

<b>Name</b>	Order to reset the external driver vigilance device		
<b>Description</b>	When the driver touches the MMI, this can be considered as a vigilance action by the external driver vigilance device		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0	False (do not reset)	
	1	True (reset)	

39. CIRCUIT\_BREAKER\_COHERENCY

<b>Name</b>	State of the circuit breaker device		
<b>Description</b>	Information from the sensor of the circuit breaker state		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
3 bits			
<b>Special/Reserved Values</b>	0	CIRCUIT_BREAKER_CLOSED_OK	
	1	CIRCUIT_BREAKER_CLOSED_NOT_OK	
	2	CIRCUIT_BREAKER_OPEN_OK	
	3	CIRCUIT_BREAKER_OPEN_NOT_OK	
	4	FAIL_STATE	

## ITEA2 PROJECT

2012-2015

	5	INFORMATION_NOT_AVAILABLE
--	---	---------------------------

40. D\_DOORS\_SECTION\_END

<b>Name</b>	Distance to the end location of the doors control section		
<b>Description</b>			
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
16 bits	-327.680 km	327.670 km	10 cm, 1m or 10 m depending on Q_SCALE

41. D\_DOORS\_SECTION\_START

<b>Name</b>	Distance to the start location of the doors control section		
<b>Description</b>			
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
16 bits	-327.680 km	327.670 km	10 cm, 1m or 10 m depending on Q_SCALE

42. D\_GRADIENTS

<b>Name</b>	Distance to the start location of next gradient		
<b>Description</b>			
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
16 bits	-327.680 km	327.670 km	10 cm, 1m or 10 m depending on Q_SCALE

43. D\_TRACKCOND

<b>Name</b>	Track condition distance		
<b>Description</b>	The incremental distance to where the track conditions change.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
16 bits	-327.680 km	327.670 km	10 cm, 1m or 10 m depending on Q_SCALE

44. D\_TRACKINIT

<b>Name</b>	Distance to start of empty profile		
<b>Description</b>	Distance to where initial states of the related track description in the packet shall be resumed		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
16 bits	-327.680 km	327.670 km	10 cm, 1m or 10 m depending on Q_SCALE

45. G\_GRADIENTS

<b>Name</b>	Value of gradient of the given gradient segment		
<b>Description</b>			
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
9 bits	-254	254	0.1 %

46. TRACK\_DESC\_DELETION\_LOCATION\_ESTI

## ITEA2 PROJECT

2012-2015

<b>Name</b>	Estimated distance to whom every track descriptions shall be truncated		
<b>Description</b>			
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
16 bits	-327.680 km	327.670 km	10 cm, 1m or 10 m depending on Q_SCALE

47. TRACK\_DESC\_DELETION\_LOCATION\_MAX

<b>Name</b>	Maximum distance to whom every track descriptions shall be truncated		
<b>Description</b>			
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
16 bits	-327.680 km	327.670 km	10 cm, 1m or 10 m depending on Q_SCALE

48. TRACK\_DESC\_DELETION\_LOCATION\_MIN

<b>Name</b>	Minimum distance to whom every track descriptions shall be truncated		
<b>Description</b>			
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
16 bits	-327.680 km	327.670 km	10 cm, 1m or 10 m depending on Q_SCALE

49. D\_TRACTION\_MAX

<b>Name</b>	Distance to the start location of the track condition change of traction power		
<b>Description</b>			
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
16 bits	-327.680 km	327.670 km	10 cm, 1m or 10 m depending on Q_SCALE

50. D\_TRACTION\_MIN

<b>Name</b>	Distance to the end location of the track condition change of traction power		
<b>Description</b>			
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
16 bits	-327.680 km	327.670 km	10 cm, 1m or 10 m depending on Q_SCALE

51. LEVEL\_CHANGE\_ORIGIN

<b>Name</b>	Level change origin		
<b>Description</b>	Indicate the origin to which the level is inhibited for		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits	0	2	0 = FOR_DRIVER 1 = FOR_TRACKSIDE 2 = FOR_DRIVER_AND_TRACKSIDE 3 = SPARE

52. L\_PACKET

## ITEA2 PROJECT

2012-2015

<b>Name</b>	Packet <b>length</b>		
<b>Description</b>	L_PACKET indicates the <b>length</b> of the packet in bits, including all bits of the packet header		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
13	0	8191	1 bit
<b>Special/Reserved Values</b>			

53. L\_TRACKCOND

<b>Name</b>	<b>Length</b> for which the defined track condition is valid		
<b>Description</b>			
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
16 bits	-327.680 km	327.670 km	10 cm, 1m or 10 m depending on Q_SCALE

54. M\_TRACKCOND

<b>Name</b>	Type of track condition		
<b>Description</b>			
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
4 bits			
<b>Special/Reserved Values</b>	0000	Non stopping area. Initial state: stopping permitted	
	0001	Tunnel stopping area. Initial state: no tunnel stopping area	
	0010	Sound horn. Initial state: no request for sound horn	
	0011	Powerless section – lower pantograph. Initial state: not powerless section	
	0100	Radio hole (stop supervising T_NVCONTACT). Initial state: supervise T_NVCONTACT	
	0101	Air tightness. Initial state: no request for air tightness	
	0110	Switch off regenerative brake. Initial state: regenerative brake on	
	0111	Switch off eddy current brake for service brake. Initial state: eddy current brake for service brake on	
	1000	Switch off magnetic shoe brake. Initial state: magnetic shoe brake on	
	1001	Powerless section – switch off the main power switch. Initial state: not powerless section	
	1010	Switch off eddy current brake for emergency brake. Initial state: eddy current brake for emergency brake on	
	1011 – 1111	Spare	

55. M\_TRACTION

<b>Name</b>	Traction System Type		
<b>Description</b>	It defines the traction system to be used on a specific line (diesel/electric/kind of power pickup etc.)		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			

56. N\_GRADIENTS

## ITEA2 PROJECT

2012-2015

<b>Name</b>	Number of iterations of a data set following this variable in a packet		
<b>Description</b>	If N_GRADIENTS is 0 then no data set is following.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
6 bits	0	50	integers

57. N\_ITER

<b>Name</b>	Number of iterations of a data set following this variable in a packet		
<b>Description</b>	If N_ITER is 0 then no data set is following. Two nested levels of iterations can exist.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
5 bits	0	31	integers

58. N\_ITER\_EVENT

<b>Name</b>	Number of iterations of a data set following this variable in a packet		
<b>Description</b>	If N_ITER_EVENT is 0 then no data set is following. Two nested levels of iterations can exist.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
5 bits	0	31	integers

59. NID\_NTC

<b>Name</b>	STM identity		
<b>Description</b>	One value of this variable represents the identity of an NTC reflecting each composition of national infrastructure.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits	0	255	Numbers

60. NID\_PACKET

<b>Name</b>	Packet identifier		
<b>Description</b>	This is used in the header for each packet, allowing the receiving equipment to identify the data that follows.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits	0	255	Numbers

61. NID\_STM

<b>Name</b>	STM identity		
<b>Description</b>	One value of this variable represents the identity of an STM equipment designed for operation on national infrastructures.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits	0	255	Numbers

62. NID\_STMSPECIFICSTATE

<b>Name</b>	Current specific behavior of a given STM.		
<b>Description</b>	Indicates a specific state of a STM (disconnected, temporary disconnected, again connected after temporary		

## ITEA2 PROJECT

2012-2015

	disconnection, STM not in correct mode)		
<i>Length of variable</i>	<i>Minimum Value</i>	<i>Maximum Value</i>	<i>Resolution/formula</i>
3 bits			
<b><i>Special/Reserved Values</i></b>	0	CONNECTED (after versions validation)	
	1	DISCONNECTED (at TIU request if no validation of the versions included in STM packet 1 or at STM request)	
	2	TEMPORARY_DISCONNECTED	
	3	CONNECTED_AGAIN (end of temporary disconnection)	
	4	FAILURE_REQUESTED (STM not in correct state, packet 15 lack,...)	
	5-7	Spare	

63.NID\_STMSTATE

<b><i>Name</i></b>	Actual STM state		
<b><i>Description</i></b>	Tell the STM state		
<i>Length of variable</i>	<i>Minimum Value</i>	<i>Maximum Value</i>	<i>Resolution/formula</i>
4 bits			
<b><i>Special/Reserved Values</i></b>	0	NO_ORDER	
	1	Reserved (mapped to PO for consistency)	
	2	Configuration (CO)	
	3	Data Entry (DE)	
	4	Unconditional Cold Standby (U-CS)	
	5	Conditional Cold Standby (C-CS)	
	6	Hot Standby (HS)	
	7	Data Available (DA)	
	8	Failure (FA)	
	9	Data Available_For_Test (DA_FOR_TEST)	
	10	Spare value	
	11	Spare value	
	12	Spare value	
	13	Spare value	
	14	Spare value	
	15	Spare value	

64. NID\_STMSTATEORDER

<b><i>Name</i></b>	STM state order		
<b><i>Description</i></b>	Tell the STM state ordered by the ERTMS/ETCS on-board		
<i>Length of variable</i>	<i>Minimum Value</i>	<i>Maximum Value</i>	<i>Resolution/formula</i>
4 bits			

## ITEA2 PROJECT

2012-2015

<b>Special/Reserved Values</b>	0	NO_ORDER
	1	Reserved (mapped to PO for consistency)
	2	Configuration (CO)
	3	Data Entry (DE)
	4	Unconditional Cold Standby (U-CS)
	5	Conditional Cold Standby (C-CS)
	6	Hot Standby (HS)
	7	Data Available (DA)
	8	Failure (FA)
	9	Data Available_For_Test (DA_FOR_TEST)
	10	<i>Spare value</i>
	11	<i>Spare value</i>
	12	<i>Spare value</i>
	13	<i>Spare value</i>
	14	<i>Spare value</i>
	15	<i>Spare value</i>

65. PANTOGRAPH\_COHERENCY

<b>Name</b>	Coherency of the pantograph state according to currently expected state		
<b>Description</b>	Information computed only when pantograph is inside the track condition.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
3 bits			
<b>Special/Reserved Values</b>	0	PANTO_UP_OK	
	1	PANTO_UP_NOT_OK	
	2	PANTO_DOWN_OK	
	3	PANTO_DOWN_NOT_OK	
	4	INFO_NOT_AVAILABLE	

66. Q\_LINK

<b>Name</b>	/		
<b>Description</b>	Qualifier indicating if the track conditions defined in the packet 1 or 5 are linked to the balise or not		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0	not linked	
	1	linked	

67. Q\_LOCATION\_PRESENT

<b>Name</b>	/		
-------------	---	--	--



## ITEA2 PROJECT

2012-2015

<b>Description</b>	Qualifier indicating if train location information is present in the packet or not		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0	not present	
	1	present	

68. Q\_SB\_MODEL\_PRESENT

<b>Name</b>	/		
<b>Description</b>	Qualifier for indicate if a SB model has been found or not		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0	Model is not found	
	1	Model is found	

69. Q\_SCALE

<b>Name</b>	Qualifier for the distance scale.		
<b>Description</b>	Qualifier to indicate the scale used for describing all distances inside the packet that contains Q_SCALE. Exception is made for variable CCPU_LRBG_ABSOLUTE_LOC that is always in [m]		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	0	10 cm scale	
	1	1 m scale	
	2	10 m scale	
	3	Spare	

70. Q\_SET\_TARGET\_SPEED

<b>Name</b>	Qualifier for presence of set target speed		
<b>Description</b>	Qualifier to tell if the packet contains the variable SET_TARGET_SPEED or not		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0	variable SET_TARGET_SPEED is NOT present in the packet	
	1	variable SET_TARGET_SPEED is present in the packet	

71. Q\_TRACKINIT

<b>Name</b>	Qualifier for resuming the initial states of the related track description of the packet.		
<b>Description</b>			
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			

## ITEA2 PROJECT

2012-2015

<b>Special/Reserved Values</b>	0	No initial states to be resumed, profile to follow
	1	Empty profile, initial states to be resumed

### 72. SET\_TARGET\_SPEED

<b>Name</b>	set target speed		
<b>Description</b>	speed which is set by the driver (on an external cruise control system)		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
16 bits	0 km/h	600 km/h	1 km/h
<b>Special/Reserved Values</b>	601 - $2^{16} - 1$	spare	

### 73. TIU\_ACC\_COEF\_SB\_UNUSED

<b>Name</b>	Acceleration coefficient when the service brake is not present or not available.		
<b>Description</b>	Ponderation coefficient to be applied on maximum train acceleration when the service brake is not available.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
7 bits	0	1,00	0,01
<b>Special/Reserved Values</b>	1,01 to 1,27	Spare values, non significant.	

### 74. TIU\_ACC\_COEF\_SB\_USED

<b>Name</b>	Acceleration coefficient when the service brake is available.		
<b>Description</b>	Ponderation coefficient to be applied on maximum train acceleration acceleration when the service brake is available..		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
7 bits	0	1,00	0,01
<b>Special/Reserved Values</b>	1,01 to 1,27	Spare values, non significant.	

### 75. TIU\_CUT\_TRACT\_DELAY

<b>Name</b>	Delay to cut off traction		
<b>Description</b>	Delay between the ordering of traction cut off and the effective cut off of the traction		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits	0 s	25,5 s	0,1 s
<b>Special/Reserved Values</b>			

### 76. TIU\_EB\_TESTS\_ON\_DEMAND\_RESULT

<b>Name</b>	EB tests on demand result		
<b>Description</b>	/		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
3 bits			
<b>Special/Reserved Values</b>	0	EB tests on demand not OK on both EV (fatal error(s) has been detected during EB tests on demand)	
	1	EB tests on demand not OK on EV1 (fatal error(s) has been detected during EB tests on	

## ITEA2 PROJECT

2012-2015

		demand)
2		EB tests on demand not OK on EV2 (fatal error(s) has been detected during EB tests on demand)
3		EB tests on demand OK
4		EB tests on demand aborted
5		Irrelevant
6		Reserved
7		Reserved

77. TIU\_L\_TEXT

<b>Name</b>	<b>Length</b> of text string		
<b>Description</b>	L_TEXT defines the <b>length</b> of a text string (L_TEXT * X_TEXT)		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
5 bits	0	31	1 Text String Element

78. TIU\_L\_TEXTDISPLAY

<b>Name</b>	<b>Length</b> on which a text shall be displayed		
<b>Description</b>			
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
15 bits	0 cm	327.660 km	10 cm, 1m or 10 m depends on Q_SCALE
<b>Special/Reserved Values</b>	32767	The display of the text shall not be distance limited.	

79. TIU\_MAINTENANCE\_EVENT\_ID

<b>Name</b>	Current specific reason of an emergency or service braking.		
<b>Description</b>	Indicates a list of specific reason of a present braking		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits	0	255	
<b>Special/Reserved Values</b>	0	Bowl EB Request	
	1	Reception_from_STM_Command_SB_Request	
	2	Reception_from_STM_Command_EB_Request	
	3	Bad Pneumatic Insertion_EB_Request	
	4	Protect_SB_by_EB_Request	
	5	EB_Failure_EB_Request	
	6	Use of Failed Port_SB_Request	
	7	Use of Failed Port_EB_Request (reserved)	
	8	Error Hamming on port_SB_Request	
	9	Error Hamming on port_EB_Request (reserved)	
	10	Monitoring result needs_SB_Request	

## ITEA2 PROJECT

2012-2015

11	Monitoring result needs_EB_Request
12 – 255	Spare

### 80. TIU\_MAX\_ROT\_MASS\_PERCENT

<b>Name</b>	maximum rotating mass percentage		
<b>Description</b>	maximum rotating mass of the train, expressed as a percentage of the total weight of the train		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits	0 %	25,5 %	0,1 %
<b>Special/Reserved Values</b>	/	/	

### 81. TIU\_MIN\_ROT\_MASS\_PERCENT

<b>Name</b>	minimum rotating mass percentage		
<b>Description</b>	minimum rotating mass of the train, expressed as a percentage of the total weight of the train		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits	0 %	25,5 %	0,1 %
<b>Special/Reserved Values</b>	/	/	

### 82. TIU\_MODEL\_BEGIN\_BRAKE

<b>Name</b>	Delay for beginning of application of brake		
<b>Description</b>	Delay between ordering a brake application, and when brake begins to be applied (more than 0%)		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits	0 s	25,5 s	0,1 s
<b>Special/Reserved Values</b>	/	/	

### 83. TIU\_MODEL\_DECELER

<b>Name</b>	Brake model deceleration point		
<b>Description</b>	Coordinate on the Y axis (=train deceleration) of a point of the deceleration model		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits	0 m/s <sup>2</sup>	2,55 m/s <sup>2</sup>	0,01 m/s <sup>2</sup>
<b>Special/Reserved Values</b>			

### 84. TIU\_MODEL\_FULL\_BRAKE

<b>Name</b>	Delay for full application of brake		
<b>Description</b>	Delay between when the braking effort begins (>0%) and when the full braking effort is reached (100%)		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
11 bits	0 s	120,0 s	0,1 s
<b>Special/Reserved Values</b>	/	/	

### 85. TIU\_MODEL\_SPEED

## ITEA2 PROJECT

2012-2015

<b>Name</b>	Brake model speed point		
<b>Description</b>	Coordinate on the X axis (=train speed) of a point of the deceleration model		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits	0 km/h	600 km/h	5 km/h
<b>Special/Reserved Values</b>	121-255	spare	

86. TIU\_NOM\_ROT\_MASS\_PERCENT

<b>Name</b>	nominal rotating mass percentage		
<b>Description</b>	nominal rotating mass of the train, expressed as a percentage of the total weight of the train		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits	0 %	25,5 %	0,1 %
<b>Special/Reserved Values</b>	/	/	

87. TIU\_Q\_TEXT

<b>Name</b>	Fixed message to be displayed.		
<b>Description</b>	TIU_Q_TEXT is a pointer to select a fixed text message from the defined table. The language selected by the driver for the MMI shall be used additionally as a qualifier to choose the appropriate language table.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits	0	255	
<b>Special/Reserved Values</b>	1	Emergency brake command error	
	3	Pneumatic insertion error	
	4	Service brake command error	
	5	Service brake release error	
	6	Traction cut off error	
	105 ... 135	IO1_MONITORING_ERROR ... IO31_MONITORING_ERROR	
	139	PANTO_ACTION_NOT_OK_FOR_TRACK_CONDITION	
	140	CIRCUIT_BREAKER_ACTION_NOT_OK_FOR_TRACK_CONDITION	
	141	TRACTION_CUT_OFF_ACTION_NOT_OK_FOR_TRACK_CONDITION	

88. TIU\_Q\_TEXTCLASS

<b>Name</b>	Class of message to be displayed.		
<b>Description</b>	Q_TEXTCLASS specifies the class of the text message included in the same packet (either plain or fixed message)		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	00	Auxiliary Information	
	01	Important Information	
	10	Spare	
	11	Spare	

89. TIU\_Q\_TEXTCONFIRM

## ITEA2 PROJECT

2012-2015

<b>Name</b>	Qualifies the need / reaction of text confirmation		
<b>Description</b>			
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	00	No confirmation required	
	01	Continue display until confirmed	
	10	Apply service brake if not confirmed when end conditions reached	
	11	Spare	

90. TIU\_Q\_TEXTDISPLAY

<b>Name</b>	Qualifier for the combination of text message conditions		
<b>Description</b>	Q_TEXTDISPLAY defines whether the start/end conditions for text message are to be combined or not		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0	No, display as soon as / until one of the conditions is fulfilled	
	1	Yes, display as soon as / until all conditions are fulfilled	

91. TIU\_SAFETYFAIL\_DETECT

<b>Name</b>	Safety failure detected		
<b>Description</b>	/		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0	False : no safety failure is detected	
	1	True : a safety failure(s) is(are) detected	
	2	Irrelevant : no diagnostic to be expected (diagnostic function is inhibited)	
	3	Spare	

92. TIU\_T\_I\_P

<b>Name</b>	T_i_p		
<b>Description</b>	parameter used by the Core in the braking curve calculation		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
13 bits	0	600 s	0,1 s
<b>Special/Reserved Values</b>	/		

93. TIU\_T\_P

<b>Name</b>	T_p		
<b>Description</b>	parameter used by the Core in the braking curve calculation		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>

## ITEA2 PROJECT

2012-2015

13 bits	0	600 s	0,1 s
<b>Special/Reserved Values</b>	/		

94. TIU\_T\_RSMA

<b>Name</b>	T_rsma		
<b>Description</b>	parameter used by the Core in the braking curve calculation		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
13 bits	0	600 s	0,1 s
<b>Special/Reserved Values</b>	/		

95. TIU\_T\_TEXTDISPLAY

<b>Name</b>	Time until when a text shall be displayed		
<b>Description</b>			
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
10 bits	0	1022 s	1 s
<b>Special/Reserved Values</b>	1023	Display of text not limited by time.	

96. TIU\_T\_W

<b>Name</b>	T_w		
<b>Description</b>	parameter used by the Core for the braking curve calculation		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
13 bits	0	600 s	0,1 s
<b>Special/Reserved Values</b>	/	/	

97. TIU\_TRAIN\_MAX\_ACC

<b>Name</b>	Maximum train acceleration		
<b>Description</b>	Maximum acceleration that the train is able to reach		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
10 bits	0 m/s <sup>2</sup>	10,23 m/s <sup>2</sup>	0,01 m/s <sup>2</sup>
<b>Special/Reserved Values</b>	/	/	

98. TIU\_X\_TEXT

<b>Name</b>	Text String Element		
<b>Description</b>	Text strings are used to transmit plain text messages. Each element of a text string contains a single character encoded as ISO 8859-1, also known as Latin Alphabet #1.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
8 bits			
<b>Special/Reserved Values</b>			

99. V\_TIU\_COLD\_MOVE\_STATE

## ITEA2 PROJECT

2012-2015

<b>Name</b>	State of the cold movement		
<b>Description</b>	Information from the sensor of train movement used when the onboard is powered off		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	0	No movement	
	1	Detected movement	
	2	Fail_state (of the sensor)	
	3	Information_not_available	

100. V\_TIU\_COLD\_MOVE\_STATE\_FILTERED

<b>Name</b>	Filtered state of the cold movement		
<b>Description</b>	Information from the sensor of train movement used when the onboard is powered off		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	0	No movement	
	1	Detected movement	
	2	Fail_state (of the sensor)	
	3	Information_not_available	

101. V\_TIU\_COMMANDING\_EB

<b>Name</b>	.		
<b>Description</b>	TIU informs the Core that TIU is commanding EB		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0	Do_no_apply_EB	
	1	Apply_EB	

102. V\_TIU\_COMMANDING\_SB

<b>Name</b>			
<b>Description</b>	TIU informs the Core that TIU is commanding SB.		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
1 bit			
<b>Special/Reserved Values</b>	0	Do_no_apply_SB	
	1	Apply_SB	

103. V\_TIU\_DESKS\_STATE

<b>Name</b>	Desks state		
<b>Description</b>	Information from the sensor of the desk(s) state		



## ITEA2 PROJECT

2012-2015

<i>Length of variable</i>	<i>Minimum Value</i>	<i>Maximum Value</i>	<i>Resolution/formula</i>
3 bits			
<b>Special/Reserved Values</b>	0	Desk_A_open_only	
	1	Desk_B_open_only	
	2	Desk_A_and_desk_B_open	
	3	No_desk_open	
	4-5	Spare values	
	6	Fail_state (of the sensor)	
	7	Information_not_available	

104. V\_TIU\_DESKS\_STATE\_FILTERED

<b>Name</b>	Filtered desks state		
<b>Description</b>	Information from the sensor of the desk(s) state		
<i>Length of variable</i>	<i>Minimum Value</i>	<i>Maximum Value</i>	<i>Resolution/formula</i>
3 bits			
<b>Special/Reserved Values</b>	0	Desk_A_open_only	
	1	Desk_B_open_only	
	2	Desk_A_and_desk_B_open	
	3	No_desk_open	
	4-5	Spare values	
	6	Fail_state (of the sensor)	
	7	Information_not_available	

105. V\_TIU\_DIRCONT\_STATE

<b>Name</b>	Direction controller state		
<b>Description</b>	Information from the sensor of the direction controller state of the active cab		
<i>Length of variable</i>	<i>Minimum Value</i>	<i>Maximum Value</i>	<i>Resolution/formula</i>
3 bits			
<b>Special/Reserved Values</b>	0	Neutral	
	1	Forward	
	2	Backward	
	3-5	Spare values	
	6	Fail_state (of the sensor)	
	7	Information_not available	

106. V\_TIU\_DIRCONT\_STATE\_FILTERED

<b>Name</b>	Filtered direction controller state		
<b>Description</b>	Information from the sensor of the direction controller state of the active cab		

## ITEA2 PROJECT

2012-2015

<i>Length of variable</i>	<i>Minimum Value</i>	<i>Maximum Value</i>	<i>Resolution/formula</i>
3 bits			
<b>Special/Reserved Values</b>	0	Neutral	
	1	Forward	
	2	Backward	
	3-5	Spare values	
	6	Fail_state (of the sensor)	
	7	Information_not available	

107. V\_TIU\_DRIVEREM\_STATE

<b>Name</b>	State of the driver emergency		
<b>Description</b>	Information from the sensor of the driver emergency (=emergency button)		
<i>Length of variable</i>	<i>Minimum Value</i>	<i>Maximum Value</i>	<i>Resolution/formula</i>
2 bits			
<b>Special/Reserved Values</b>	00	Emergency_button_pushed	
	01	Emergency_button_released	
	10	Fail_state (of the emergency button)	
	11	Information_not_available	

108. V\_TIU\_DRIVEREM\_STATE\_FILTERED

<b>Name</b>	Filtered state of the driver emergency		
<b>Description</b>	Information from the sensor of the driver emergency (=emergency button)		
<i>Length of variable</i>	<i>Minimum Value</i>	<i>Maximum Value</i>	<i>Resolution/formula</i>
2 bits			
<b>Special/Reserved Values</b>	00	Emergency_button_pushed	
	01	Emergency_button_released	
	10	Fail_state (of the emergency button)	
	11	Information_not_available	

109. V\_TIU\_EB\_STATE

<b>Name</b>	State of the emergency brake		
<b>Description</b>	Information from the sensor of the emergency brake state		
<i>Length of variable</i>	<i>Minimum Value</i>	<i>Maximum Value</i>	<i>Resolution/formula</i>
2 bits			
<b>Special/Reserved Values</b>	0	EB_not_applied	
	1	EB_applied	
	2	Fail_state (of the sensor)	
	3	Information_not_available	

## ITEA2 PROJECT

2012-2015

110. V\_TIU\_EB\_STATE\_FILTERED

<b>Name</b>	Filtered state of the emergency brake		
<b>Description</b>	Information from the sensor of the emergency brake state		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	0	EB_not_applied	
	1	EB_applied	
	2	Fail_state (of the sensor)	
	3	Information_not_available	

111. V\_TIU\_INTEGRITY\_STATE

<b>Name</b>	State of the train integrity		
<b>Description</b>	Information from the sensor of the train integrity state		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	0	Train_integrity_not_OK	
	1	Train_integrity_OK	
	2	Fail_state (of the sensor)	
	3	Information_not_available	

112. V\_TIU\_INTEGRITY\_STATE\_FILTERED

<b>Name</b>	Filtered state of the train integrity		
<b>Description</b>	Information from the sensor of the train integrity state		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	0	Train_integrity_not_OK	
	1	Train_integrity_OK	
	2	Fail_state (of the sensor)	
	3	Information_not_available	

113. V\_TIU\_ISOLATION\_STATE

<b>Name</b>	State of isolation switch		
<b>Description</b>	Information from the sensor of the isolation switch state		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	0	Isolated	
	1	Not_Isolated	

## ITEA2 PROJECT

2012-2015

	2	Fail_state (of the sensor)
	3	Information_not_available

114. V\_TIU\_ISOLATION\_STATE\_FILTERED

<b>Name</b>	Filtered state of isolation switch		
<b>Description</b>	Information from the sensor of the isolation switch state		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	0	Isolated	
	1	Not_Isolated	
	2	Fail_state (of the sensor)	
	3	Information_not_available	

115. V\_TIU\_SB\_STATE

<b>Name</b>	State of the service brake		
<b>Description</b>	Information from the sensor of the service brake state		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	0	SB_not_applied	
	1	SB_applied	
	2	Fail_state (of the sensor)	
	3	Information_not_available	

116. V\_TIU\_SB\_STATE\_FILTERED

<b>Name</b>	Filtered state of the service brake		
<b>Description</b>	Information from the sensor of the service brake state		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	0	SB_not_applied	
	1	SB_applied	
	2	Fail_state (of the sensor)	
	3	Information_not_available	

117. V\_TIU\_SLEEPING\_STATE

<b>Name</b>	State of the remote control connection		
<b>Description</b>	Information from the sensor of the remote control connection		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			

## ITEA2 PROJECT

2012-2015

<b>Special/Reserved Values</b>	0	Go_to_sleeping
	1	Do_not_go_to_sleeping
	2	Fail_state (of the sensor)
	3	Information_not_available

118. V\_TIU\_SLEEPING\_STATE\_FILTERED

<b>Name</b>	Filtered state of the remote control connection		
<b>Description</b>	Information from the sensor of the remote control connection		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	0	Go_to_sleeping	
	1	Do_not_go_to_sleeping	
	2	Fail_state (of the sensor)	
	3	Information_not_available	

119. V\_TIU\_TILTING\_STATE

<b>Name</b>	State of the tilting device		
<b>Description</b>	Information from the sensor of the tilting device state		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	0	Tilting_system_is_active	
	1	Tilting_system_is_passive	
	2	Fail_state (of the sensor)	
	3	Information_not_available	

120. V\_TIU\_TILTING\_STATE\_FILTERED

<b>Name</b>	Filtered state of the tilting device		
<b>Description</b>	Information from the sensor of the tilting device state		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	0	Tilting_system_is_acitve	
	1	Tilting_system_is_passive	
	2	Fail_state (of the sensor)	
	3	Information_not_available	

121. V\_TIU\_TRACTION\_CUT\_OFF\_STATE

<b>Name</b>	State of the traction cut off		
<b>Description</b>	Information from the sensor of the traction cut off state		

## ITEA2 PROJECT

2012-2015

<i>Length of variable</i>	<i>Minimum Value</i>	<i>Maximum Value</i>	<i>Resolution/formula</i>
2 bits			
<b>Special/Reserved Values</b>	0	Traction cut off is disabled	
	1	Traction cut off is enabled	
	2	Fail_state (of the sensor)	
	3	Information_not_available	

122. V\_TIU\_TRACTION\_CUT\_OFF\_STATE\_FILTERED

<b>Name</b>	Filtered state of the traction cut off		
<b>Description</b>	Information from the sensor of the traction cut off state		
<i>Length of variable</i>	<i>Minimum Value</i>	<i>Maximum Value</i>	<i>Resolution/formula</i>
2 bits			
<b>Special/Reserved Values</b>	0	Traction cut off is disabled	
	1	Traction cut off is enabled	
	2	Fail_state (of the sensor)	
	3	Information_not_available	

123. V\_TIU\_TRACTION\_STATUS

<b>Name</b>	Traction status calculated by TIU ASW		
<b>Description</b>	Information deduced from traction and/or braking type		
<i>Length of variable</i>	<i>Minimum Value</i>	<i>Maximum Value</i>	<i>Resolution/formula</i>
3 bits			
<b>Special/Reserved Values</b>	0	null	
	1	positive	
	2	negative	
	3	not_null	
	4	Fail_state	
	5	Information_not_available	
	6-7	Spare	

124. V\_TIU\_VIGIL\_ACTION\_STATE

<b>Name</b>	State of the driver vigilance		
<b>Description</b>	Information from the sensor of the driver vigilance		
<i>Length of variable</i>	<i>Minimum Value</i>	<i>Maximum Value</i>	<i>Resolution/formula</i>
2 bits			
<b>Special/Reserved Values</b>	0	Driver_reaction	
	1	No_driver_reaction	
	2	Fail_state (of the sensor)	

## ITEA2 PROJECT

2012-2015

	3	Information_not_available
--	---	---------------------------

125. V\_TIU\_VIGIL\_ACTION\_STATE\_FILTERED

<b>Name</b>	Filtered state of the driver vigilance		
<b>Description</b>	Information from the sensor of the driver vigilance		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	0	Driver_reaction	
	1	No_driver_reaction	
	2	Fail_state (of the sensor)	
	3	Information_not_available	

126. V\_TIU\_VIGIL\_DISABLE\_STATE

<b>Name</b>	State of the external vigilance system		
<b>Description</b>	Information from the sensor of the driver vigilance		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	0	External vigilance system active	
	1	External vigilance system not active	
	2	Fail_state (of the sensor)	
	3	Information_not_available	

127. V\_TIU\_VIGIL\_DISABLE\_STATE\_FILTERED

<b>Name</b>	Filtered state of the external vigilance system		
<b>Description</b>	Information from the sensor of the driver vigilance		
<b>Length of variable</b>	<b>Minimum Value</b>	<b>Maximum Value</b>	<b>Resolution/formula</b>
2 bits			
<b>Special/Reserved Values</b>	0	External vigilance system active	
	1	External vigilance system not active	
	2	Fail_state (of the sensor)	
	3	Information_not_available	