

## ITEA2 PROJECT

**2012-2015**

Frame to be used to indicate a customer reference number.


Client :	C/Ref. :
----------	----------

Work-Package 2 : “Requirements”

API Requirements for OpenETCS – appendix - Functional Data Dictionary v1.0

N. Boverie

February 2014

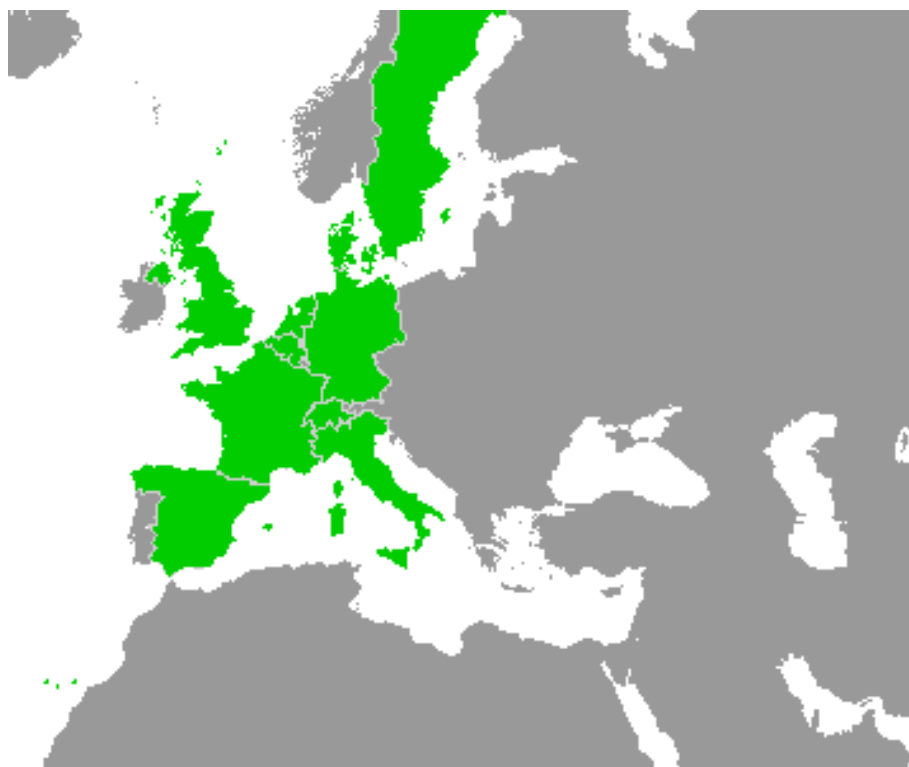

## ITEA2 PROJECT

**2012-2015**

Amendment record

Rev. <sup>1</sup>	Author	Version	Date	§	Modifications
	N. Boverie	1.0	06/02/2014	All	creation of the document

---

<sup>1</sup> M : meeting review, R : read-back process

# ITEA2 PROJECT

**2012-2015**

## Table of Content

<b>1. INTRODUCTION .....</b>	<b>4</b>
1.1 SUBJECT .....	4
1.2 FIELD OF APPLICATION .....	4
1.3 DOCUMENT DESCRIPTION .....	4
<b>2. DOCUMENTS &amp; TERMINOLOGY .....</b>	<b>5</b>
2.1 REFERENCE DOCUMENTS .....	5
2.2 APPLICABLE DOCUMENTS .....	5
2.3 DEFINITIONS .....	5
2.4 ABBREVIATIONS .....	5
<b>3. FUNCTIONAL DATA DICTIONARY .....</b>	<b>6</b>
3.1.1 <i>OpenETCS Inputs</i> .....	6
3.1.2 <i>OpenETCS outputs</i> .....	39

## **ITEA2 PROJECT**

**2012-2015**

### **1. INTRODUCTION**

#### **1.1 SUBJECT**

This appendix document provides the OpenETCS API functional data dictionary.

This document is an appendix document of the ALSTOM proposal for the Application Programming Interface (API) Specification of the OpenETCS Onboard Application Software (applicable document /1/).

This specification shall be directly based on the Application Programming Interface (API) Specification of the ALSTOM ERTMS Onboard CORE Application Software.

#### **1.2 FIELD OF APPLICATION**

This document is to be considered in the frame of the OpenETCS program.

This specification is compliant to Unisig Baseline 3 of the ETCS Onboard unless explicitly mentioned in the document.

As the ALSTOM development for the ETCS Baseline 3 is still in progress, this document could be modified in the future.

This document is an appendix of the applicable document /1/.

#### **1.3 DOCUMENT DESCRIPTION**

This document provides the list of functional data of the OpenETCS API and definition.

## ITEA2 PROJECT

2012-2015

## 2. DOCUMENTS & TERMINOLOGY

### 2.1 REFERENCE DOCUMENTS

/1/ System Requirements Specification, ref. SUBSET-026, v3.3.0

/2/ Glossary of terms and abbreviations, ref. SUBSET-023, v3.0.0

/3/

### 2.2 APPLICABLE DOCUMENTS

/1/ API Requirements for OpenETCS

### 2.3 DEFINITIONS

	Refer to /1/
--	--------------

Refer also to /2/

### 2.4 ABBREVIATIONS

	Refer to /1/
--	--------------

Refer also to /2/

## ITEA2 PROJECT

2012-2015

### 3. FUNCTIONAL DATA DICTIONARY

#### 3.1.1 OpenETCS Inputs

```
456.      basic_to_generic_app_info (data flow) =
logical_voted_time
+TIU_input_info
+MMU_input_info
+EUROBALISE_input_info
+EUROCAB_input_info
+EURORADIO_input_info
+EUROLOOP_input_info
+LLRU_status_input_msg_info
+coded_config_data
+coded_data_restored_at_power_up
+power_up_tests_info
+maintenance_data_from_basic
+specific_config_data
+key_mgt_input_info
+language_info_from_basic
+events_from_basic.
```

```
-----
rate      : N/A
range     : N/A
resolution : N/A
units     : N/A
value names : N/A
description : information from basic software to generic application
```

```
1818.      logical_voted_time (data flow, cel) =
**.
-----
full_name  : N/A;
rate      : N/A;
range     : 0..2**31 - 1;
resolution : 0.01
units     : s;
value_names : N/A;
description : voted time input.
```

```
3558.      TIU_input_info (data flow) =
TIU_input_msgs_info.
```

```
-----
rate      : at each cycle
range     : N/A
resolution : N/A
units     : N/A
value names : N/A
description : TIU input information
```

## ITEA2 PROJECT

### 2012-2015

3565. TIU\_input\_msgs\_info (data flow) =  
max\_n\_of\_TIU\_input\_msgs{TIU\_input\_msg\_info  
}max\_n\_of\_TIU\_input\_msgs.

-----

rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : TIU input messages information

1945. max\_n\_of\_TIU\_input\_msgs (data flow, pel) =  
\*\*.

-----

rate : N/A;  
range : 24..24;  
resolution : N/A;  
units : N/A;  
value names : N/A;  
description : maximum number of messages from the TIU. This number is equal to 24;

3564. TIU\_input\_msg\_info (data flow) =  
is\_present  
+coded\_TIU\_input\_msg.

-----

rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : TIU input message information

1514. is\_present (data flow, del) =  
["FALSE"]["TRUE"].

-----

rate : N/A;  
range : N/A;  
resolution : N/A;  
units : N/A;  
value names : N/A  
description : indicates if the considered data is or is not present;

644. coded\_TIU\_input\_msg (data flow) =  
n\_of\_bits\_in\_TIU\_i\_msg{bit}n\_of\_bits\_in\_TIU\_i\_msg

-----

full\_name : N/A;  
rate : N/A;  
range : N/A;  
resolution : N/A;

## ITEA2 PROJECT

### 2012-2015

units : N/A;  
value\_names : N/A;  
description : coded TIU input message;

2140. n\_of\_bits\_in\_TIU\_i\_msg (data flow, cel) =  
\*\*.

-----  
full\_name : N/A;  
rate : N/A;  
range : 0..2000;  
resolution : 1;  
units : N/A;  
value\_names : N/A;  
description : number of bits in current TIU input message

507. bit (data flow, pel) =  
\*\*.

-----  
full\_name : N/A;  
rate : N/A;  
range : 0..1;  
resolution : 1;  
units : N/A;  
value\_names : N/A;  
description : bit;

1979. MMU\_input\_info (data flow) =  
current\_MMU\_data  
+tachymeter\_out\_of\_scale.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : MMU input information.

775. current\_MMU\_data (data flow) =  
MMU\_data\_time\_stamp  
+ covered\_dist\_nominal\_value  
+ covered\_dist\_upper\_bound  
+ covered\_dist\_lower\_bound  
+ train\_speed\_nominal\_value  
+ train\_speed\_upper\_bound  
+ train\_speed\_lower\_bound  
+ train\_acceleration\_nominal\_value  
+ train\_acceleration\_upper\_bound  
+ train\_acceleration\_lower\_bound  
+ MMU\_motion\_direction  
+ train\_motion\_state

-----  
rate : at each cycle  
range : N/A



## ITEA2 PROJECT

### 2012-2015

resolution : N/A  
units : N/A  
value names : N/A  
description : train movement data from the MMU

1976. MMU\_data\_time\_stamp (data flow, cel) =  
\*\*.

-----  
rate : N/A  
range : 0..2\*\*31 - 1  
resolution : 0.01  
units : s (in logical\_voted\_time reference)  
value\_names : N/A  
description : time stamp of the data from the MMU

753. covered\_dist\_nominal\_value (data flow, cel) =  
\*\*.  
-----  
rate : N/A  
range : -20\_000\_000.0 .. 20\_000\_000.0  
resolution : 0.01  
units : m  
value\_names : N/A  
description : nominal value of the distance covered by the train since the last MMU reference.

754. covered\_dist\_upper\_bound (data flow, cel) =  
\*\*.  
-----  
rate : N/A  
range : -20\_000\_000.0 .. 20\_000\_000.0  
resolution : 0.01  
units : m  
value\_names : N/A  
description : upper bound of the covered distance since the last MMU reference.  
This is an absolute value, not a delta to the nominal value of the covered distance.

752. covered\_dist\_lower\_bound (data flow, cel) =  
\*\*.  
-----  
rate : N/A  
range : -20\_000\_000.0 .. 20\_000\_000.0  
resolution : 0.01  
units : m  
value\_names : N/A  
description : lower bound of the covered distance since the last MMU reference.  
This is an absolute value, not a delta to the nominal value of the covered distance.

3805. train\_speed\_nominal\_value (data flow, cel) =  
\*\*.  
-----  
rate : N/A  
range : 0.0 .. 167  
resolution : 0.01

## ITEA2 PROJECT

### 2012-2015

units : m/s  
value\_names : N/A  
description : nominal value of the train speed.

3807. train\_speed\_upper\_bound (data flow, cel) =  
\*\*.  
-----  
rate : N/A  
range : 0.0 .. 167  
resolution : 0.01  
units : m/s  
value\_names : N/A  
description : upper bound of the train speed. This is an absolute value, not a delta to the nominal value of the train speed.

3804. train\_speed\_lower\_bound (data flow, cel) =  
\*\*.  
-----  
rate : N/A  
range : 0.0 .. 167  
resolution : 0.01  
units : m/s  
value\_names : N/A  
description : lower bound of the train speed. This is an absolute value, not a delta to the nominal value of the train speed.

3715. train\_acceleration\_nominal\_value (data flow, cel) =  
\*\*.  
-----  
rate : N/A  
range : -6.35 .. 6.35  
resolution : 0.01  
units : m/s\*\*2  
value\_names : N/A  
description : nominal value of the train acceleration.

3716. train\_acceleration\_upper\_bound (data flow, cel) =  
\*\*.  
-----  
rate : N/A  
range : -6.35 .. 6.35  
resolution : 0.01  
units : m/s\*\*2  
value\_names : N/A  
description : upper bound value of the train acceleration.

3717. train\_acceleration\_lower\_bound (data flow, cel) =  
\*\*.  
-----  
rate : N/A  
range : -6.35 .. 6.35  
resolution : 0.01  
units : m/s\*\*2  
value\_names : N/A  
description : lower bound value of the train acceleration.

## ITEA2 PROJECT

### 2012-2015

1980. MMU\_motion\_direction (data flow, del) =  
["CAB\_A\_FIRST"|"CAB\_B\_FIRST"|"UNKNOWN"]

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value\_names : "CAB\_A\_FIRST" = train is running from cab B to cab A.  
"CAB\_B\_FIRST" = train is running from cab A to cab B.  
"UNKNOWN" = train motion direction is unknown.  
description : train motion direction in relation to the driving cabs.

3785. train\_motion\_state (data flow, del) =  
["MOTION"|"NO\_MOTION"].

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : train motion state

3454. tachymeter\_out\_of\_scale (data flow, del) =  
["FALSE"|"TRUE"].

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : Set to "TRUE" during the "out of scale" mode of the  
tachymeter;

1296. EUROBALISE\_input\_info (data flow) =  
active\_antenna  
+EUROBALISE\_input\_telegrams\_info.

-----  
rate : at each cycle  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : EUROBALISE input information

50. active\_antenna (data flow, del) =  
["NONE"|"ANTENNA\_1"|"ANTENNA\_2"].

-----  
rate : N/A  
range : N/A  
resolution : N/A

## ITEA2 PROJECT

### 2012-2015

units : N/A

value names : N/A

description : Indicates which is the current reception antenna.  
If set to "NONE", both reception antennae are failed.

1300. EUROBALISE\_input\_telegrams\_info (data flow) =  
max\_n\_of\_EUROBALISE\_input\_tgs{EUROBALISE\_input\_telegram\_info  
}max\_n\_of\_EUROBALISE\_input\_tgs.

-----

rate : N/A

range : N/A

resolution : N/A

units : N/A

value names : N/A

description : coded EUROBALISE input telegrams information

1921. max\_n\_of\_EUROBALISE\_input\_tgs (data flow, pel) =  
\*\*.

-----

rate : N/A

range : N/A

resolution : N/A

units : N/A

value names : N/A

description : maximum number of EUROBALISE input telegrams. This number is equal to 16.

1298. EUROBALISE\_input\_telegram\_info (data flow) =  
is\_present  
+EUROBALISE\_reception\_time\_stamp  
+dist\_nominal\_value\_at\_EUROBALISE\_detection  
+dist\_upper\_bound\_at\_EUROBALISE\_detection  
+dist\_lower\_bound\_at\_EUROBALISE\_detection  
+EUROBALISE\_centre\_detection\_accuracy  
+EUROBALISE\_antenna\_origin  
+coded\_EUROBALISE\_input\_telegram.

-----

rate : N/A

range : N/A

resolution : N/A

units : N/A

value names : N/A

description : EUROBALISE input telegram information

1304. EUROBALISE\_reception\_time\_stamp (data flow, cel) =  
\*\*.

-----

rate : N/A

range : 0..2\*\*31 - 1 (in logical\_voted\_time reference);

resolution : 0.01

units : s;

value names : N/A

## ITEA2 PROJECT

### 2012-2015

description : time of reception of the EUROBALISE telegram

923. dist\_nominal\_value\_at\_EUROBALISE\_detection (data flow, cel) =  
 \*\*,  
 -----  
 rate : N/A  
 range : -15\_000\_000.0 .. 15\_000\_000.0;  
 resolution : 0.01;  
 units : m;  
 value\_names : N/A;  
 description : nominal value of the distance measurement delivered by the MMU at  
 balise detection.

928. dist\_upper\_bound\_at\_EUROBALISE\_detection (data flow, del) =  
 \*\*,  
 -----  
 rate : At each balise detection.  
 range : -15\_000\_000.0 .. 15\_000\_000.0;  
 resolution : 0.01;  
 units : m;  
 value\_names : N/A;  
 description : upper bound of the covered distance at balise detection. This is an  
 absolute value, not a delta to the nominal value of the covered distance.

920. dist\_lower\_bound\_at\_EUROBALISE\_detection (data flow, cel) =  
 \*\*,  
 -----  
 rate : N/A;  
 range : -15\_000\_000.0 .. 15\_000\_000.0;  
 resolution : 0.01;  
 units : m;  
 value\_names : N/A;  
 description : lower bound of the covered distance at balise detection. This is an  
 absolute value, not a delta to the nominal value of the covered distance.

1295. EUROBALISE\_centre\_detection\_accuracy (data flow, cel) =  
 \*\*,  
 -----  
 rate : N/A;  
 range : 0 .. 2\*\*16 - 1;  
 resolution : 0.001;  
 units : m;  
 value\_names : N/A;  
 description : accuracy of the detection of the EUROBALISE centre.

1289. EUROBALISE\_antenna\_origin (data flow, del) =  
 ["ANTENNA\_1"|"ANTENNA\_2"].

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A

## ITEA2 PROJECT

### 2012-2015

description : Indicates from which antenna of the active cabin  
the balise telegram is received;

632. coded\_EUROBALISE\_input\_telegram (data flow) =  
n\_of\_bits\_in\_EUROBALISE\_telegram{bit}n\_of\_bits\_in\_EUROBALISE\_telegram

-----  
full\_name : N/A;  
rate : N/A;  
range : N/A;  
resolution : N/A;  
units : N/A;  
value\_names : N/A;  
description : coded EUROBALISE telegram;

2129. n\_of\_bits\_in\_EUROBALISE\_telegram (data flow, cel) =  
\*\*.

-----  
full\_name : N/A;  
rate : N/A;  
range : 1..830;  
resolution : 1;  
units : N/A;  
value\_names : N/A;  
description : number of bits in current EUROBALISE telegram;

1305. EUROCAB\_input\_info (data flow) =  
DMI\_input\_info  
+STM\_input\_info  
+JRU\_input\_info  
+DRU\_input\_info

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : EUROCAB input information

950. DMI\_input\_info (data flow) =  
DMI\_input\_msgs\_info.

-----  
rate : at each cycle  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : DMI input information

953. DMI\_input\_msgs\_info (data flow) =  
max\_n\_of\_DMI\_input\_msgs{DMI\_input\_msg\_info  
}max\_n\_of\_DMI\_input\_msgs.

-----  
rate : N/A

## ITEA2 PROJECT

### 2012-2015

range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : DMI input messages information

1918. max\_n\_of\_DMI\_input\_msgs (data flow, pel) =  
 \*\*.

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : maximum number of input DMI messages.  
 Equal to 8.

952. DMI\_input\_msg\_info (data flow) =  
 is\_present  
 +kind  
 +coded\_DMI\_input\_msg.

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : MMI input message information

1692. kind (data flow, del) =  
 ["DATA"] "CONNECTED" ["DISCONNECTED"] "TEMPORARY\_DISCONNECTED"].

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : Indicates the type of profibus data or the type of  
 profibus disconnection to request;

629. coded\_DMI\_input\_msg (data flow) =  
 n\_of\_bits\_in\_DMI\_i\_msg{bit}n\_of\_bits\_in\_DMI\_i\_msg  
 -----  
 full\_name : N/A;  
 rate : N/A;  
 range : N/A;  
 resolution : N/A;  
 units : N/A;  
 value\_names : N/A;  
 description : coded MMI input message;

## ITEA2 PROJECT

### 2012-2015

2126. n\_of\_bits\_in\_DMI\_i\_msg (data flow, cel) =  
\*\*.

-----

full\_name : N/A;  
rate : N/A;  
range : 1..2296;  
resolution : 1;  
units : N/A;  
value\_names : N/A;  
description : number of bits in a DMI input message

3186. STM\_input\_info (data flow) =  
STM\_input\_msgs\_info  
+STM\_specific\_input\_msgs\_info.

-----

rate : at each cycle  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : STM input information

3190. STM\_input\_msgs\_info (data flow) =  
max\_n\_of\_STM\_input\_msgs{STM\_input\_msg\_info  
}max\_n\_of\_STM\_input\_msgs.

-----

rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : STM input messages information

1939. max\_n\_of\_STM\_input\_msgs (data flow, pel) =  
\*\*.

-----

rate : N/A  
range : 80..80  
resolution : N/A  
units : N/A  
value names : N/A  
description : maximum number of messages from the STMs.

3189. STM\_input\_msg\_info (data flow) =  
is\_present  
+kind  
+nid\_STM  
+coded\_STM\_input\_msg.

-----



## ITEA2 PROJECT

### 2012-2015

rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : STM input message information

2447. nid\_STM (data flow, pel) =  
\*\*.

-----  
rate : N/A;  
range : 0..255;  
resolution : 1;  
units : N/A;  
value names : N/A;  
description : NID\_STM variable. Refer to Subset 058 for further information;

641. coded\_STM\_input\_msg (data flow) =  
n\_of\_bits\_in\_STM\_i\_msg{bit}n\_of\_bits\_in\_STM\_i\_msg

-----  
full\_name : N/A;  
rate : N/A;  
range : N/A;  
resolution : N/A;  
units : N/A;  
value\_names : N/A;  
description : coded STM input message;

2137. n\_of\_bits\_in\_STM\_i\_msg (data flow, cel) =  
\*\*.

-----  
rate : N/A  
range : 0..1856  
resolution : 1  
units : N/A  
value names : N/A  
description : number of bits in the STM input message.

3249. STM\_specific\_input\_msgs\_info (data flow) =  
max\_n\_of\_STM\_specific\_input\_msgs{STM\_specific\_input\_msg\_info  
}max\_n\_of\_STM\_specific\_input\_msgs.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : STM input messages information

## ITEA2 PROJECT

### 2012-2015

1942. max\_n\_of\_STM\_specific\_input\_msgs (data flow, pel) =  
\*\*.

-----  
rate : N/A  
range : 12..12  
resolution : N/A  
units : N/A  
value names : N/A  
description : maximum number of specific messages from the STMs.

3248. STM\_specific\_input\_msg\_info (data flow) =  
is\_present  
+kind  
+nid\_STM  
+coded\_STM\_specific\_input\_msg.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : STM input message information

643. coded\_STM\_specific\_input\_msg (data flow) =  
n\_of\_bits\_in\_STM\_specific\_i\_msg{bit}n\_of\_bits\_in\_STM\_specific\_i\_msg  
-----  
full\_name : N/A;  
rate : N/A;  
range : N/A;  
resolution : N/A;  
units : N/A;  
value\_names : N/A;  
description : coded STM input message;

2139. n\_of\_bits\_in\_STM\_specific\_i\_msg (data flow, cel) =  
\*\*.

-----  
rate : N/A  
range : 0..160  
resolution : 1  
units : N/A  
value names : N/A  
description : number of bits in the STM specific input message.

1541. JRU\_input\_info (data flow) =  
JRU\_input\_msgs\_info.

-----  
rate : at each cycle  
range : N/A  
resolution : N/A

## ITEA2 PROJECT

### 2012-2015

units : N/A  
value names : N/A  
description : JRU input information

1544. JRU\_input\_msgs\_info (data flow) =  
max\_n\_of\_JRU\_input\_msgs{JRU\_input\_msg\_info  
}max\_n\_of\_JRU\_input\_msgs.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : JRU input messages information

1926. max\_n\_of\_JRU\_input\_msgs (data flow, pel) =  
\*\*.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : maximum number of JRU input messages.  
This number is equal to 6.

1543. JRU\_input\_msg\_info (data flow) =  
is\_present  
+kind  
+coded\_JRU\_input\_msg.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : JRU input message information

637. coded\_JRU\_input\_msg (data flow) =  
n\_of\_bits\_in\_JRU\_i\_msg{bit}n\_of\_bits\_in\_JRU\_i\_msg

-----  
full\_name : N/A;  
rate : N/A;  
range : N/A;  
resolution : N/A;  
units : N/A;  
value\_names : N/A;  
description : coded JRU input message;

## ITEA2 PROJECT

### 2012-2015

2134. n\_of\_bits\_in\_JRU\_i\_msg (data flow, cel) =  
\*\*.

-----

full\_name : N/A;  
rate : N/A;  
range : 1..240;  
resolution : 1;  
units : N/A;  
value\_names : N/A;  
description : number of bits in a JRU input message

1130. DRU\_input\_info (data flow) =  
DRU\_input\_msgs\_info.

-----

rate : at each cycle  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : DRU input information

1132. DRU\_input\_msgs\_info (data flow) =  
max\_n\_of\_DRU\_input\_msgs{DRU\_input\_msg\_info  
}max\_n\_of\_DRU\_input\_msgs.

-----

rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : DRU input messages information

1920. max\_n\_of\_DRU\_input\_msgs (data flow, pel) =  
\*\*.

-----

rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : maximum number of DRU input messages.  
This number is equal to 1.

1131. DRU\_input\_msg\_info (data flow) =  
is\_present  
+kind.

-----

rate : N/A  
range : N/A

## ITEA2 PROJECT

### 2012-2015

resolution : N/A  
units : N/A  
value names : N/A  
description : DRU input message information

1333. EURORADIO\_input\_info (data flow) =  
n\_of\_handable\_EURORADIO\_physical\_connections\_info  
+EURORADIO\_safe\_connection\_confirmation\_info  
+EURORADIO\_safe\_connection\_failure\_info  
+EURORADIO\_safe\_connection\_loss\_info  
+EURORADIO\_safe\_connection\_not\_re\_established\_info  
+EURORADIO\_input\_msgs\_info  
+EURORADIO\_input\_emergency\_msgs\_info  
+2{mobile\_status}2  
+2{mobile\_network}2.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : EURORADIO input information

2224. n\_of\_handable\_EURORADIO\_physical\_connections\_info (data flow) =  
is\_present  
+ n\_of\_handable\_EURORADIO\_physical\_connections.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : information about the number of EURORADIO physical connections that the  
on board equipment can handle simultaneously.

1348. EURORADIO\_safe\_connection\_confirmation\_info (data flow) =  
is\_present  
+nid\_trackside\_radio\_device.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : EURORADIO safe connection confirmation information

2454. nid\_trackside\_radio\_device (data flow, pel) =  
\*\*.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A

## ITEA2 PROJECT

### 2012-2015

value names : N/A

description : ETCS identifier of trackside radio device

(refer to NID\_C, NID\_RBC or NID\_RIU variables for definition)

1349. EURORADIO\_safe\_connection\_failure\_info (data flow) =

is\_present

+nid\_trackside\_radio\_device

+disconnection\_indication.

-----

rate : N/A

range : N/A

resolution : N/A

units : N/A

value names : N/A

description : EURORADIO safe connection definitive failure information

896. disconnection\_indication (data flow, del) =

["UNKNOWN"|"UNDETERMINED"|"TRAINBORNE"|"TRACKSIDE"|"AUTHENTICATION\_FAILURE"].

-----

rate : N/A

range : N/A

resolution : N/A

units : N/A

value names :

"UNKNOWN" = the reason of the disconnection is unknown,

"UNDETERMINED" = the reason of the disconnection could be due to a trainborne or trackside problem,

"TRAINBORNE" = the reason of the disconnection is due to a trainborne problem,

"TRACKSIDE" = the reason of the disconnection is due to a trackside problem,

"AUTHENTICATION\_FAILURE" = the reason of the disconnection is due to a KMAC problem.

description : Indicates the reason of a connection failure;

1350. EURORADIO\_safe\_connection\_loss\_info (data flow) =

is\_present

+nid\_trackside\_radio\_device.

-----

rate : N/A

range : N/A

resolution : N/A

units : N/A

value names : N/A

description : EURORADIO safe connection loss information

1351. EURORADIO\_safe\_connection\_not\_re\_established\_info (data flow) =

is\_present

+nid\_trackside\_radio\_device

+disconnection\_indication.

-----

rate : N/A

range : N/A

resolution : N/A

units : N/A

value names : N/A

description : EURORADIO safe connection not re-established information

## ITEA2 PROJECT

### 2012-2015

1339. EURORADIO\_input\_msgs\_info (data flow) =  
max\_n\_of\_EURORADIO\_input\_msgs{EURORADIO\_input\_msg\_info}max\_n\_of\_EURORADIO\_input\_msgs.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : EURORADIO input messages information

1924. max\_n\_of\_EURORADIO\_input\_msgs (data flow, pel) =  
\*\*.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : maximum number of input EURORADIO messages.  
This number is equal to 5.

1337. EURORADIO\_input\_msg\_info (data flow) =  
is\_present  
+nid\_trackside\_radio\_device  
+coded\_EURORADIO\_input\_msg.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : EURORADIO input message information

635. coded\_EURORADIO\_input\_msg (data flow) =  
n\_of\_bits\_in\_EURORADIO\_i\_msg{bit}n\_of\_bits\_in\_EURORADIO\_i\_msg

-----  
full\_name : N/A;  
rate : N/A;  
range : N/A;  
resolution : N/A;  
units : N/A;  
value\_names : N/A;  
description : coded EURORADIO input message

2132. n\_of\_bits\_in\_EURORADIO\_i\_msg (data flow, cel) =  
\*\*.

-----  
full\_name : N/A;  
rate : N/A;  
range : 1..4000  
resolution : 1;

## ITEA2 PROJECT

### 2012-2015

units : N/A;  
value\_names : N/A;  
description : number of bits in current EURORADIO input message

1332. EURORADIO\_input\_emergency\_msgs\_info (data flow) =  
max\_n\_of\_EURORADIO\_input\_emergency\_msgs{EURORADIO\_input\_emergency\_msg\_info  
}max\_n\_of\_EURORADIO\_input\_emergency\_msgs.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : EURORADIO input emergency messages information

1923. max\_n\_of\_EURORADIO\_input\_emergency\_msgs (data flow, pel) =  
\*\*.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : maximum number of input EURORADIO emergency messages.  
This number is equal to 3.

1331. EURORADIO\_input\_emergency\_msg\_info (data flow) =  
is\_present  
+nid\_tracksides\_radio\_device  
+coded\_EURORADIO\_input\_emergency\_msg.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : EURORADIO input emergency message information

634. coded\_EURORADIO\_input\_emergency\_msg (data flow) =  
n\_of\_bits\_in\_EURORADIO\_emergency\_i\_msg{bit}n\_of\_bits\_in\_EURORADIO\_emergency\_i\_msg

-----  
full\_name : N/A;  
rate : N/A;  
range : N/A;  
resolution : N/A;  
units : N/A;  
value\_names : N/A;  
description : coded EURORADIO input emergency message

2131. n\_of\_bits\_in\_EURORADIO\_emergency\_i\_msg (data flow, cel) =



## ITEA2 PROJECT

### 2012-2015

**\*\*.**  
 -----  
 full\_name : N/A;  
 rate : N/A;  
 range : 1..200  
 resolution : 1;  
 units : N/A;  
 value\_names : N/A;  
 description : number of bits in current EURORADIO input emergency  
 message

1987. mobile\_status (data flow, del) =  
 ["REGISTER\_REQUEST"]["REGISTER\_CONFIRM"]["BUSY"]["FAILED"].

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : "REGISTER\_REQUEST" = the mobile is under registration  
                   "REGISTER\_CONFIRM" = the mobile is registered to a network but not yet used  
                   "BUSY" = the mobile is used for a connection  
                   "FAILED" = the mobile is in failure  
 description : status of radio mobile

1986. mobile\_network (data flow, cel) =  
**\*\*.**

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : indicates the network for which the mobile is registered.

1307. EUROLOOP\_input\_info (data flow) =  
 EUROLOOP\_input\_msgs\_info  
 +EUROLOOP\_receiver\_failure\_info.

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : EUROLOOP input information

1310. EUROLOOP\_input\_msgs\_info (data flow) =  
 max\_n\_of\_EUROLOOP\_input\_msgs{  
 EUROLOOP\_input\_msg\_info  
 +EUROLOOP\_reception\_time\_stamp  
 }max\_n\_of\_EUROLOOP\_input\_msgs.

-----  
 rate : N/A

## ITEA2 PROJECT

### 2012-2015

range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : EUROLOOP input messages information

1922. max\_n\_of\_\_EUROLOOP\_\_input\_msgs (data flow, pel) =  
 \*\*,

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : maximum number of input EUROLOOP messages.  
 This number is equal to 1(only the last received message is considered).

1309. EUROLOOP\_input\_msg\_info (data flow) =  
 loop\_message\_received  
 +coded\_EUROLOOP\_input\_msg.

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : EUROLOOP input message information

1823. loop\_message\_received (data flow, del) =  
 ["NONE"]["NEW"]["SAME"].

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : "NONE"=the message is not present  
                   "NEW" =a new loop message (different from  
   the previous one) is received  
                   "SAME"=the same loop message than the  
   previous one is received again  
 description : Indicates the type of the received euroloop  
                   message

633. coded\_EUROLOOP\_input\_msg (data flow) =  
 n\_of\_bits\_in\_EUROLOOP\_i\_msg{bit}n\_of\_bits\_in\_EUROLOOP\_i\_msg

-----  
 full\_name : N/A;  
 rate : N/A;  
 range : N/A;  
 resolution : N/A;  
 units : N/A;  
 value\_names : N/A;



## ITEA2 PROJECT

### 2012-2015

resolution : N/A;  
units : N/A;  
value\_names : N/A;  
description : coded LLRU status input message  
(received from basic software);

2136. n\_of\_bits\_in\_LLRL\_status\_i\_msg (data flow, cel) =  
\*\*.

-----  
rate : N/A;  
range : 480..480;  
resolution : 1;  
units : N/A  
value names : N/A  
description : number of bits in a LLRU status input message

626. coded\_config\_data (data flow) =  
is\_present  
+config\_data\_binary.

-----  
full\_name : ;  
rate : N/A;  
range : N/A;  
resolution : N/A;  
units : N/A;  
value\_names : N/A;  
component\_of : N/A;  
description : ;

663. config\_data\_binary (data flow) =  
config\_data\_binary\_length  
+config\_data\_binary\_length{bit}config\_data\_binary\_length.

-----  
full\_name : ;  
rate : N/A;  
range : N/A;  
resolution : N/A;  
units : N/A;  
value\_names : N/A;  
component\_of : N/A;  
description : ;

664. config\_data\_binary\_length (data flow, del) =  
\*\*.

-----  
full\_name : ;  
rate : N/A;  
range : 1..240000;  
resolution : 1;  
units : bit;  
value\_names : N/A;

## ITEA2 PROJECT

### 2012-2015

component\_of : N/A;  
description : ;

627. coded\_data\_restored\_at\_power\_up (data flow) =  
is\_present  
+data\_restored\_at\_po\_binary.

-----  
full\_name : ;  
rate : N/A;  
range : N/A;  
resolution : N/A;  
units : N/A;  
value\_names : N/A;  
component\_of : N/A;  
description : ;

851. data\_restored\_at\_po\_binary (data flow) =  
data\_restored\_at\_po\_binary\_length  
+data\_restored\_at\_po\_binary\_length{bit}data\_restored\_at\_po\_binary\_length

-----  
full\_name : ;  
rate : N/A;  
range : N/A;  
resolution : N/A;  
units : N/A;  
value\_names : N/A;  
component\_of : N/A;  
description : ;

852. data\_restored\_at\_po\_binary\_length (data flow, cel) =  
\*\*.

-----  
full\_name : ;  
rate : N/A;  
range : 1..8000;  
resolution : 1;  
units : bit;  
value\_names : N/A;  
component\_of : N/A;  
description : ;

2594. power\_up\_tests\_info (data flow, del) =  
["NOT\_RELEVANT" | "ON\_GOING" | "SUCCESSFUL" | "SUCCESSFUL\_WITH\_LOW\_AVAILABILTY" | "FAILED"].

-----  
rate : N/A  
range : N/A

## ITEA2 PROJECT

### 2012-2015

resolution : N/A

units : N/A

value names :

"NOT\_RELEVANT" = No power-up tests results available

"ON\_GOING" = Power-up tests are on going

"SUCCESSFUL" = Power-up tests are successful

"SUCCESSFUL\_WITH\_LOW\_AVAILABILITY" = Power-up tests are partially successful, implying low availability

"FAILED" = Power-up tests have failed

description : Gives the result of the power-up tests.

1882. maintenance\_data\_from\_basic (data flow) =

is\_present

+ wheel\_diameter\_A

+ wheel\_diameter\_B

+ inter\_coefficient\_A

+ inter\_coefficient\_B

+ doppler\_coefficient\_A

+ doppler\_coefficient\_B

+ sdmu\_coefficient\_A

+ sdmu\_coefficient\_B

-----

rate : N/A

range : N/A

resolution : N/A

units : N/A

value names : N/A

description : maintenance data information provided  
by basic

3951. wheel\_diameter\_A (data flow) =

wheel\_diameter\_value

+ maintenance\_data\_state

+ last\_modification\_date

+ value\_has\_been\_entered

-----

rate : N/A

range : N/A

resolution : N/A

units : N/A

value names : N/A

description : contains the information concerning the wheel diameter A entered by the driver

3959. wheel\_diameter\_value (data flow, cel) =

\*\*.

-----

rate : N/A

range : 0..2047

resolution : 1

units : N/A

value names : N/A

initialisation : Empty

description : wheel diameter value entered by the driver

## ITEA2 PROJECT

### 2012-2015

1884. maintenance\_data\_state (data flow, del) =  
["NOT\_RELEVANT" | "RANGE\_ERROR" | "CONSISTENCY\_ERROR" | "VALID"]

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : "NOT\_RELEVANT" = the data is either undefined or is not available  
"RANGE\_ERROR" = the data entered is out of the authorised range  
"CONSISTENCY\_ERROR" = at power-up: the vote of the data fails /  
after data entry by driver: the data entered is not coherent  
"VALID" = the data has been checked and is the correct one  
description : Indicates the state of the data.

1731. last\_modification\_date (data flow, cel) =  
\*\*.

-----  
rate : N/A  
range : 0..4294967296  
resolution : 1  
units : N/A  
value names : N/A  
description : gives the date of the last modification of the parameter entered by the driver

3937. value\_has\_been\_entered (data flow, del) =  
["FALSE" | "TRUE"].

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : Indicates if the related parameter value  
has already been entered;

3954. wheel\_diameter\_B (data flow) =  
wheel\_diameter\_value  
+ maintenance\_data\_state  
+ last\_modification\_date  
+ value\_has\_been\_entered

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : contains the information concerning the wheel diameter B entered by the driver

1481. inter\_coefficient\_A (data flow) =

## ITEA2 PROJECT

### 2012-2015

inter\_\_coefficient\_\_value  
+ maintenance\_data\_state  
+ last\_modification\_date  
+ value\_has\_been\_entered

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : contains the information concerning the inter coefficient A entered by the driver

1487. inter\_\_coefficient\_\_value (data flow, cel) =  
\*\*.

-----  
rate : N/A  
range : -256..256  
resolution : 1  
units : N/A  
value names : N/A  
initialisation : Empty  
description : inter coefficient value entered by the driver

1484. inter\_\_coefficient\_\_B (data flow) =  
inter\_\_coefficient\_\_value  
+ maintenance\_data\_state  
+ last\_modification\_date  
+ value\_has\_been\_entered

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : contains the information concerning the inter coefficient B entered by the driver

1087. doppler\_\_coefficient\_\_A (data flow) =  
doppler\_\_coefficient\_\_value  
+ maintenance\_data\_state  
+ last\_modification\_date  
+ value\_has\_been\_entered

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : contains the information concerning the doppler coefficient A entered by the driver

1093. doppler\_\_coefficient\_\_value (data flow, cel) =  
\*\*.



## ITEA2 PROJECT

### 2012-2015

-----  
 rate : N/A  
 range : -256..256  
 resolution : 1  
 units : N/A  
 value names : N/A  
 initialisation : Empty  
 description : Doppler coefficient value entered by the driver

1090. doppler\_coefficient\_B (data flow) =  
 doppler\_coefficient\_value  
 + maintenance\_data\_state  
 + last\_modification\_date  
 + value\_has\_been\_entered

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : contains the information concerning the doppler coefficient B entered by the driver

2995. sdmu\_coefficient\_A (data flow) =  
 sdmu\_coefficient\_value  
 + maintenance\_data\_state  
 + last\_modification\_date  
 + value\_has\_been\_entered

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : contains the information concerning the sdmu coefficient B entered by the driver

3003. sdmu\_coefficient\_value (data flow, cel) =  
 \*\*.

-----  
 rate : N/A  
 range : 0..100000  
 resolution : 1  
 units : N/A  
 value names : N/A  
 initialisation : Empty  
 description : sdmu coefficient value entered by the driver

2998. sdmu\_coefficient\_B (data flow) =  
 sdmu\_coefficient\_value  
 + maintenance\_data\_state  
 + last\_modification\_date

## ITEA2 PROJECT

### 2012-2015

+ value\_has\_been\_entered

-----

rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : contains the information concerning the sdmu coefficient B entered by the driver

3097. specific\_config\_data (data flow) =

is\_present  
+ nid\_engine.

-----

rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : specific configuration data received from the BSW at the first EVC cycle.

2437. nid\_engine (data flow, pel) =

\*\*.

-----

rate : N/A;  
range : 0..16777215;  
resolution : 1;  
units : N/A;  
value names : N/A;  
description : European Train Control Syssem equipment ID;

1686. key\_mgt\_input\_info (data flow) =

dialogue\_with\_KMC\_not\_possible  
+ dialogue\_with\_KMC\_possible  
+ dialogue\_with\_KMC\_on\_going  
+ dialogue\_with\_KMC\_failure  
+ key\_mgt\_info\_updated  
+ key\_db\_updated.

-----

rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : information coming from the basic software associated to the key management.

885. dialogue\_with\_KMC\_not\_possible (data flow, del) =

["FALSE"] ["TRUE"].

-----

rate : N/A  
range : N/A



## ITEA2 PROJECT

### 2012-2015

units : N/A  
value names : N/A  
description : indicates that the key database has just been updated.

1716. language\_info\_from\_basic (data flow) =  
2{driver\_language}2

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : driver language information for both cabins.

1107. driver\_language (data flow, pel) =  
\*\*.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : DMI\_NID\_DRV\_LANG variable;

1366. events\_from\_basic (data flow) =  
external\_small\_availability\_detected  
+ btm\_is\_not\_blind  
+ btm\_is\_probably\_blind  
+ btm\_is\_blind  
+ btm\_unvoted\_balise\_detected  
+ BTM\_antenna\_raw\_tests\_in\_failure  
+ BTM\_antenna\_valid  
+ max\_n\_of\_maintenance\_events\_from\_basic{  
    maintenance\_event\_i  
}max\_n\_of\_maintenance\_events\_from\_basic

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : events from basic.

1370. external\_small\_availability\_detected (data flow, del) =  
["FALSE"] ["TRUE"].

-----  
rate : event (set to "TRUE" during one cycle)  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : Indicates that the basic has detected an EVC external  
low availability (e.g. loss of a profibus node).

## ITEA2 PROJECT

### 2012-2015

559. btm\_is\_not\_blind (data flow, del) =  
["FALSE"] ["TRUE"].

-----  
rate : event (set to "TRUE" during one cycle)  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : Indicates that there is no "blind" BTM failure anymore.

560. btm\_is\_probably\_blind (data flow, del) =  
["FALSE"] ["TRUE"].

-----  
rate : event (set to "TRUE" during one cycle)  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : Indicates that the basic has detected a possible "blind" BTM failure.

558. btm\_is\_blind (data flow, del) =  
["FALSE"] ["TRUE"].

-----  
rate : event (set to "TRUE" during one cycle)  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : Indicates that the basic has detected a "blind" BTM failure.

562. btm\_unvoted\_balise\_detected (data flow, del) =  
["FALSE"] ["TRUE"].

-----  
rate : event (set to "TRUE" during one cycle)  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : Indicates that the basic has detected an unvoted balise BTM failure.

546. BTM\_antenna\_raw\_tests\_in\_failure (data flow, del) =  
["FALSE"] ["TRUE"].

-----  
rate : event (set to "TRUE" during one cycle)  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : Indicates that the EUROBALISE antenna tests have failed.  
This flag is set even within Big Metal Masses.

## ITEA2 PROJECT

### 2012-2015

547. BTM\_antenna\_valid (data flow, del) =  
["FALSE"] ["TRUE"].

-----  
rate : event (set to "TRUE" during one cycle)  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : Indicates that the EUROBALISE antenna tests have recovered.

1932. max\_n\_of\_maintenance\_events\_from\_basic (data flow, cel) =  
\*\*.

-----  
rate : N/A  
range : 16..16  
resolution : N/A  
units : N/A  
value names : N/A  
description ;;

1887. maintenance\_event\_i (data flow, del) =  
["FALSE"] ["TRUE"].

-----  
rate : event (set to "TRUE" during one cycle)  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : Indicates that the basic has detected the i\_th maintenance event (i = 1 to 16).

## ITEA2 PROJECT

2012-2015

### 3.1.2 OpenETCS outputs

1402. generic\_app\_to\_basic\_info (data flow) =  
 TIU\_output\_msgs\_info  
 +EUROBALISE\_output\_info  
 +EUROCAB\_output\_info  
 +EURORADIO\_output\_info  
 +EUROLOOP\_output\_info  
 +isolation\_from\_other\_equipment\_is\_required  
 +channels\_extinction\_is\_required  
 +coded\_data\_to\_be\_restored\_at\_power\_up  
 +cab\_status\_for\_basic  
 +antenna\_to\_be\_activated\_for\_basic  
 +maintenance\_data\_to\_basic  
 +LLRU\_status\_screen\_reset\_is\_required  
 +MMU\_output\_info  
 +BTM\_configuration\_data\_to\_basic  
 +packet\_44\_info\_to\_basic  
 +STMs\_state\_info\_to\_basic  
 +key\_mgt\_request\_info  
 +generic\_context\_info\_to\_basic  
 +SIL2\_display\_function\_info\_to\_basic  
 +EB\_intervention\_requested.

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : information from generic application to basic software

3582. TIU\_output\_msgs\_info (data flow) =  
 max\_n\_of\_TIU\_output\_msgs{TIU\_output\_msg\_info  
 }max\_n\_of\_TIU\_output\_msgs.

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : TIU output messages information

1946. max\_n\_of\_TIU\_output\_msgs (data flow, pel) =  
 \*\*.

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A

## ITEA2 PROJECT

### 2012-2015

units : N/A  
value names : N/A  
description : maximum number of output TIU messages.  
This number is equal to 1.

3581. TIU\_output\_msg\_info (data flow) =  
is\_present  
+coded\_TIU\_output\_msg.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : TIU output message information

645. coded\_TIU\_output\_msg (data flow) =  
n\_of\_bits\_in\_TIU\_o\_msg{bit}n\_of\_bits\_in\_TIU\_o\_msg

-----  
full\_name : N/A;  
rate : N/A;  
range : N/A;  
resolution : N/A;  
units : N/A;  
value\_names : N/A;  
description : coded TIU output message;

2141. n\_of\_bits\_in\_TIU\_o\_msg (data flow, cel) =  
\*\*.

-----  
rate : N/A  
range : 0..2000;  
resolution : N/A  
units : N/A  
value names : N/A  
description : number of bits in a TIU output message

1303. EUROBALISE\_output\_info (data flow) =  
EUROBALISE\_antenna\_test\_failure\_has\_to\_be\_ignored\_d\_metal\_sup  
+ EUROBALISE\_antenna\_test\_failure\_d\_metal\_value\_info  
+ EUROBALISE\_antenna\_test\_failure\_has\_to\_be\_ignored\_track\_cond\_sup.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : EUROBALISE output information



## ITEA2 PROJECT

### 2012-2015

1291. EUROBALISE\_antenna\_test\_failure\_has\_to\_be\_ignored\_d\_metal\_sup (data flow, del) = ["TRUE"]["FALSE"].

-----

rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : indicates whether the EUROBALISE antenna test failure has to be ignored due to the d\_metal supervision (in level 0, STM).

1290. EUROBALISE\_antenna\_test\_failure\_d\_metal\_value\_info (data flow) = is\_finite  
+ d\_metal\_value.

-----

rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : D\_METAL value information. The distance D\_METAL is used by the BSW. It indicates during which distance the failure of the EUROBALISE antenna test can be ignored.

1508. is\_finite (data flow, del) = ["TRUE"]["FALSE"].

-----

rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : indicates if the value of the variable is finite or not

808. d\_metal\_value (data flow, cel) = \*\*.

-----

rate : N/A  
range : 0..1023  
resolution : 1  
units : m  
value names : 1023 means no value  
description : D\_METAL value.

1292. EUROBALISE\_antenna\_test\_failure\_has\_to\_be\_ignored\_track\_cond\_sup (data flow, del) = ["TRUE"]["FALSE"].

-----

rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : indicates whether the EUROBALISE antenna test failure has to be ignored due

## ITEA2 PROJECT

### 2012-2015

to the a BMM track condition.

1306. EUROCAB\_output\_info (data flow) =  
DMI\_output\_msgs\_info  
+STM\_output\_msgs\_info  
+JRU\_output\_msgs\_info  
+DRU\_output\_msgs\_info

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : EUROCAB output information

996. DMI\_output\_msgs\_info (data flow) =  
max\_n\_of\_DMI\_output\_msgs{DMI\_output\_msg\_info  
}max\_n\_of\_DMI\_output\_msgs.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : DMI output messages information

1919. max\_n\_of\_DMI\_output\_msgs (data flow, pel) =  
\*\*.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : maximum number of messages to send to the DMI in a cycle.  
Equal to 5.

995. DMI\_output\_msg\_info (data flow) =  
is\_present  
+DMI\_msg\_destination\_cabin  
+coded\_DMI\_output\_msg.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : DMI output message information

## ITEA2 PROJECT

### 2012-2015

969. DMI\_msg\_destination\_cabin (data flow, del) =  
["CAB\_A"|"CAB\_B"|"NO\_CAB"].

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : "CAB\_A" = the DMI message shall be sent to the cab named by convention CAB\_A  
"CAB\_B" = the DMI message shall be sent to the cab named by convention CAB\_B  
"NO\_CAB" = no DMI message shall be sent.  
description : Indicates the destination of the DMI message to send.

630. coded\_DMI\_output\_msg (data flow) =  
n\_of\_bits\_in\_DMI\_o\_msg{bit}n\_of\_bits\_in\_DMI\_o\_msg

-----  
full\_name : N/A;  
rate : N/A;  
range : N/A;  
resolution : N/A;  
units : N/A;  
value\_names : N/A;  
description : coded DMI output message;

2127. n\_of\_bits\_in\_DMI\_o\_msg (data flow, cel) =  
\*\*.

-----  
full\_name : N/A;  
rate : N/A;  
range : 1..12000;  
resolution : 1;  
units : N/A;  
value\_names : N/A;  
description : number of bits in a DMI output message

3215. STM\_output\_msgs\_info (data flow) =  
max\_n\_of\_STM\_output\_msgs{STM\_output\_msg\_info  
}max\_n\_of\_STM\_output\_msgs.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : STM output messages information

1940. max\_n\_of\_STM\_output\_msgs (data flow, pel) =  
\*\*.

-----  
rate : N/A

## ITEA2 PROJECT

### 2012-2015

range : 24..24  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : maximum number of output STM messages.

3213. STM\_output\_msg\_info (data flow) =  
 is\_present  
 +nid\_STM  
 +coded\_STM\_output\_msg.

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : STM output message information.

642. coded\_STM\_output\_msg (data flow) =  
 n\_of\_bits\_in\_STM\_o\_msg{bit}n\_of\_bits\_in\_STM\_o\_msg  
 -----  
 full\_name : N/A;  
 rate : N/A;  
 range : N/A;  
 resolution : N/A;  
 units : N/A;  
 value\_names : N/A;  
 description : coded STM output message;

2138. n\_of\_bits\_in\_STM\_o\_msg (data flow, cel) =  
 \*\*,  
 -----  
 rate : N/A  
 range : 0..1856  
 resolution : 1  
 units : N/A  
 value names : N/A  
 description : number of bits in the STM output message.

1606. JRU\_output\_msgs\_info (data flow) =  
 max\_n\_of\_JRU\_output\_msgs{JRU\_output\_msg\_info  
 }max\_n\_of\_JRU\_output\_msgs.  
 -----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : JRU output messages information

## ITEA2 PROJECT

### 2012-2015

1927. max\_n\_of\_JRU\_output\_msgs (data flow, pel) =  
\*\*.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : maximum number of JRU output messages.  
This number is equal to 11.

1605. JRU\_output\_msg\_info (data flow) =  
is\_present  
+coded\_JRU\_output\_msg.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : JRU output message information

638. coded\_JRU\_output\_msg (data flow) =  
n\_of\_bits\_in\_JRU\_o\_msg{bit}n\_of\_bits\_in\_JRU\_o\_msg

-----  
full\_name : N/A;  
rate : N/A;  
range : N/A;  
resolution : N/A;  
units : N/A;  
value\_names : N/A;  
description : coded JRU output message;

2135. n\_of\_bits\_in\_JRU\_o\_msg (data flow, cel) =  
\*\*.

-----  
full\_name : N/A;  
rate : N/A;  
range : 1..16000;  
resolution : 1;  
units : N/A;  
value\_names : N/A;  
description : number of bits in a JRU output message

1149. DRU\_output\_msg\_info (data flow) =  
is\_present  
+coded\_DRU\_output\_msg.

-----  
rate : N/A  
range : N/A

## ITEA2 PROJECT

### 2012-2015

resolution : N/A  
units : N/A  
value names : N/A  
description : DRU output message information

631. coded\_DRU\_output\_msg (data flow) =  
n\_of\_bits\_in\_DRU\_o\_msg{bit}n\_of\_bits\_in\_DRU\_o\_msg

-----  
full\_name : N/A;  
rate : N/A;  
range : N/A;  
resolution : N/A;  
units : N/A;  
value\_names : N/A;  
description : coded DRU output message;

2128. n\_of\_bits\_in\_DRU\_o\_msg (data flow, cel) =

\*\*,  
-----  
rate : N/A  
range : 0..2232  
resolution : N/A  
units : N/A  
value names : N/A  
description : number of bits in the DRU output message.

1344. EURORADIO\_output\_info (data flow) =  
EURORADIO\_connection\_request\_info  
+EURORADIO\_connection\_retries\_number\_is\_infinite  
+EURORADIO\_disconnection\_request\_info  
+EURORADIO\_connection\_reset\_request\_info  
+network\_registration\_request\_info  
+train\_is\_in\_a\_radio\_hole\_with\_front\_end  
+EURORADIO\_output\_msgs\_info.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : EURORADIO output information

1326. EURORADIO\_connection\_request\_info (data flow) =  
is\_present  
+nid\_trackside\_radio\_device  
+nid\_radio.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : EURORADIO connection request information

## ITEA2 PROJECT

### 2012-2015

2441.       nid\_radio (store) =  
number\_of\_nid\_radio\_digits  
+number\_of\_nid\_radio\_digits{digit}number\_of\_nid\_radio\_digits.

-----  
rate       : N/A;  
range       : N/A;  
resolution : N/A;  
units       : N/A;  
value names : N/A;  
description : NID\_RADIO variable (refer to NID\_RADIO variable definition in SRS chapter 7);

2490.       number\_of\_nid\_radio\_digits (data flow, pel) =  
\*\*.

-----  
rate       : N/A;  
range       : 0..16;  
resolution : 1;  
units       : N/A;  
value names : N/A;  
description : number of decimal digit in the radio number;

891.       digit (data flow, pel) =  
\*\*.

-----  
rate       : N/A;  
range       : 0..9;  
resolution : 1;  
units       : N/A;  
value names : N/A;  
description ;

1328.       EURORADIO\_connection\_retries\_number\_is\_infinite (data flow) =  
is\_present  
+nid\_trackside\_radio\_device.

-----  
rate       : N/A  
range       : N/A  
resolution : N/A  
units       : N/A  
value names : N/A  
description : indication to the basic software, about the connection retries number,  
                  in case of connection loss.

1329.       EURORADIO\_disconnection\_request\_info (data flow) =  
is\_present  
+nid\_trackside\_radio\_device.

-----  
rate       : N/A  
range       : N/A  
resolution : N/A  
units       : N/A

## ITEA2 PROJECT

### 2012-2015

value names : N/A

description : EURORADIO disconnection request information

1327. EURORADIO\_connection\_reset\_request\_info (data flow) =  
is\_present  
+nid\_tracksid\_radio\_device.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : EURORADIO connection reset request information  
(used in case of T\_NVCONTACT expiration);

2410. network\_registration\_request\_info (data flow) =  
is\_present  
+ radio\_network\_id\_value.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : radio network registration request info.

2805. radio\_network\_id\_value (data flow, cel) =  
\*\*.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : radio network id value.

3767. train\_is\_in\_a\_radio\_hole\_with\_front\_end (data flow, del) =  
["TRUE"]|"FALSE"].

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : indicates whether the train max safe front end is or is not in a radio hole.

1347. EURORADIO\_output\_msgs\_info (data flow) =  
max\_n\_of\_EURORADIO\_output\_msgs{EURORADIO\_output\_msg\_info  
}max\_n\_of\_EURORADIO\_output\_msgs.

-----  
rate : N/A



## ITEA2 PROJECT

### 2012-2015

range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : EURORADIO output messages information

1925. max\_n\_of\_EURORADIO\_output\_msgs (data flow, pel) =  
 \*\*, .

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : maximum number of output EURORADIO messages.  
 This number is equal to 15.

1346. EURORADIO\_output\_msg\_info (data flow) =  
 is\_present  
 +nid\_tracksid\_radio\_device  
 +coded\_EURORADIO\_output\_msg .

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : EURORADIO output message information

636. coded\_EURORADIO\_output\_msg (data flow) =  
 n\_of\_bits\_in\_EURORADIO\_o\_msg{bit}n\_of\_bits\_in\_EURORADIO\_o\_msg

-----  
 full\_name : N/A;  
 rate : N/A;  
 range : N/A;  
 resolution : N/A;  
 units : N/A;  
 value\_names : N/A;  
 description : coded EURORADIO output message;

2133. n\_of\_bits\_in\_EURORADIO\_o\_msg (data flow, cel) =  
 \*\*, .

-----  
 full\_name : N/A;  
 rate : N/A;  
 range : 1..4000;  
 resolution : 1;  
 units : N/A;  
 value\_names : N/A;  
 description : number of bits in current EURORADIO output message

## ITEA2 PROJECT

### 2012-2015

1317. EUROLOOP\_output\_info (data flow) =  
q\_sscode.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : EUROLOOP output information

2774. q\_sscode (data flow, pel) =  
\*\*.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : Q\_SSCode variable (see UNISIG SRS);

1520. isolation\_from\_other\_equipment\_is\_required (data flow, del) =  
["TRUE"] ["FALSE"].

-----  
rate : N/A  
value names : "TRUE" = the ERTMS ETCS trainborne equipment  
that it is in mode IS to the basic  
and the basic has to take the properly actions  
"FALSE" = the ERTMS ETCS trainborne equipment  
that it is not in mode IS to the basic  
and the basic has not to take the properly actions  
description : indicates to the basic whether the ERTMS ETCS trainborne equipment is or is not  
in isolation mode and the basic, on this information, has or has not to take actions

624. channels\_extinction\_is\_required (data flow, del) =  
["FALSE"] ["TRUE"].

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : indicates if the application software requires  
the channel extinctions to the basic software  
(when in SF mode).

628. coded\_data\_to\_be\_restored\_at\_power\_up (data flow) =  
is\_present  
+data\_to\_be\_restored\_at\_po\_binary.

## ITEA2 PROJECT

### 2012-2015

```
-----
full_name   :   ;
rate        :   N/A;
range       :   N/A;
resolution  :   N/A;
units       :   N/A;
value_names :   N/A;
component_of :   N/A;
description  :   ;
```

856. data\_to\_be\_restored\_at\_po\_binary (data flow) =  
data\_restored\_at\_po\_binary\_length  
+data\_restored\_at\_po\_binary\_length{bit}data\_restored\_at\_po\_binary\_length

```
-----
full_name   :   ;
rate        :   N/A;
range       :   N/A;
resolution  :   N/A;
units       :   N/A;
value_names :   N/A;
component_of :   N/A;
description  :   ;
```

579. cab\_status\_for\_basic (data flow, del) =  
["CAB\_A"|"CAB\_B"|"NO\_CAB"].

```
-----
rate        : N/A
range       : N/A
resolution  : N/A
units       : N/A
value names : "CAB_A" = the activated driver's cab is the cab named by convention CAB_A
              "CAB_B" = the activated driver's cab is the cab named by convention CAB_B
              "NO_CAB" = no cab is activated
description : cab status information from generic application to basic software
```

421. antenna\_to\_be\_activated\_for\_basic (data flow, del) =  
["NONE"|"ANTENNA\_1"|"ANTENNA\_2"].

```
-----
rate        : N/A
range       : N/A
resolution  : N/A
units       : N/A
value names : N/A
description  : antenna to be activated according to the selected cabin, from applicatif software to basic software.
```

1885. maintenance\_data\_to\_basic (data flow) =  
wheel\_diameters\_to\_be\_recorded

## ITEA2 PROJECT

### 2012-2015

+wheel\_diameter\_to\_be\_checked  
+wheel\_diameter\_A  
+wheel\_diameter\_B  
+radar\_coefficient\_to\_be\_recorded  
+radar\_coefficient\_to\_be\_checked  
+inter\_coefficient\_A  
+inter\_coefficient\_B  
+doppler\_coefficient\_A  
+doppler\_coefficient\_B  
+sdmu\_coefficient\_to\_be\_recorded  
+sdmu\_coefficient\_to\_be\_checked  
+sdmu\_coefficient\_A  
+sdmu\_coefficient\_B  
+accelerometer\_bias\_to\_be\_recorded  
+accelerometer\_bias\_to\_be\_checked  
+accelerometer\_bias.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : maintenance to transmit to basic

3960. wheel\_diameters\_to\_be\_recorded (data flow, del) =  
["TRUE"]["FALSE"].

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : indicates if the wheel diameters have to  
be recorded by basic

3958. wheel\_diameter\_to\_be\_checked (data flow, del) =  
["TRUE"]["FALSE"].

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : indicates if the wheel diameters have to  
be checked by basic

2787. radar\_coefficient\_to\_be\_recorded (data flow, del) =  
["TRUE"]["FALSE"].

-----  
rate : N/A  
range : N/A  
resolution : N/A

## ITEA2 PROJECT

### 2012-2015

units : N/A  
value names : N/A  
description : indicates if the radar coefficient have to be recorded by basic

2786. radar\_coefficient\_to\_be\_checked (data flow, del) = ["TRUE"|"FALSE"].

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : indicates if the radar coefficient have to be checked by basic

3002. sdmu\_coefficient\_to\_be\_recorded (data flow, del) = ["TRUE"|"FALSE"].

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : indicates if the sdmu coefficient have to be recorded by basic

3001. sdmu\_coefficient\_to\_be\_checked (data flow, del) = ["TRUE"|"FALSE"].

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : indicates if the sdmu coefficient have to be checked by basic

36. accelerometer\_bias\_to\_be\_recorded (data flow, del) = ["FALSE"|"TRUE"].

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : indicates if the accelerometer bias has to be recorded by basic

35. accelerometer\_bias\_to\_be\_checked (data flow, del) = ["FALSE"|"TRUE"].

## ITEA2 PROJECT

### 2012-2015

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : indicates if the accelerometer bias has to be checked by basic.

1800. LLRU\_status\_screen\_reset\_is\_required (data flow, del) =  
 ["TRUE"]["FALSE"].

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : indicates to the basic software that the reset of the LLRU status is required.

1981. MMU\_output\_info (data flow) =  
 line\_speed\_value  
 + MMU\_gradient\_data  
 + MMU\_sb\_data  
 + MMU\_eb\_data  
 + MMU\_traction\_data  
 + slippery\_track.

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : Information to the Movement Measuring Unit;

1776. line\_speed\_value (data flow, pel) =  
 \*\*.

-----  
 rate : N/A  
 range : 0..600  
 resolution : 5  
 units : kph  
 value names :  
 "UNKNOWN" (coded 127) = The line speed profile known onboard is not  
 sufficient to compute the current line speed;  
 description : Value of the line speed applicable to the current engine location;

1978. MMU\_gradient\_data (data flow) =  
 engine\_gradient\_value  
 + train\_gradient\_value  
 + gradient\_is\_available.

-----  
 rate : N/A  
 range : N/A

## ITEA2 PROJECT

### 2012-2015

resolution : N/A

units : N/A

value names : N/A

description : information about gradient transmitted to the MMU.

1226. engine\_gradient\_value (data flow, cel) =

\*\*.

-----

rate : N/A

range : -0.254..0.254

resolution : 0.001

units : N/A

value names : note: -0.254 is called the "safe gradient value"

description : Value of the minimum gradient found within  
the train engine area.;

3755. train\_gradient\_value (data flow, cel) =

\*\*.

-----

rate : N/A

range : -0.254..0.254

resolution : 0.001

units : N/A

value names : note: -0.254 is called the "safe gradient value"

description : Value of the minimum gradient found within  
the train area.

1419. gradient\_is\_available (data flow, del) =

["TRUE"]|"FALSE"].

-----

rate : N/A

range : N/A

resolution : N/A

units : N/A

value names : N/A

description : indicates to the MMU if the gradient information is available  
according to the current level.

1982. MMU\_sb\_data (data flow) =

sb\_intervention\_requested

+ sb\_applied\_not\_filtered

+ sb\_braking\_capacity

+ sb\_application\_delay.

-----

rate : N/A

range : N/A

resolution : N/A

units : N/A

value names : N/A

description : information linked to the service brake, transmitted to the MMU.

## ITEA2 PROJECT

### 2012-2015

2979. sb\_intervention\_requested (data flow, del) =  
["TRUE"] ["FALSE"].

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : indicates to the MMU if the Core requests service brake application.

2971. sb\_applied\_not\_filtered (data flow, del) =  
["FALSE"] ["TRUE"].

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : non-filtered status of the service brake

2972. sb\_braking\_capacity (data flow, cel) =  
\*\*.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : indicates to the MMU the service deceleration model, used to carry out speed supervision.

2970. sb\_application\_delay (data flow, cel) =  
\*\*.

-----  
rate : N/A  
range : 0..25.5  
resolution : 0.1  
units : s  
value names : N/A  
description : indicates to the MMU the service application time, used to carry out speed supervision.

1977. MMU\_eb\_data (data flow) =  
EB\_intervention\_requested  
+ eb\_applied\_not\_filtered.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : information linked to the emergency brake, transmitted to the MMU.



## ITEA2 PROJECT

### 2012-2015

1191. EB\_intervention\_requested (data flow, del) =  
["FALSE"] ["TRUE"].

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : information to basic.

1183. eb\_applied\_not\_filtered (data flow, del) =  
["FALSE"] ["TRUE"].

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : non-filtered status of the emergency brake

1983. MMU\_traction\_data (data flow) =  
traction\_cut\_off\_not\_filtered  
+ traction\_status.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : information linked to the traction, transmitted to the MMU.

3710. traction\_cut\_off\_not\_filtered (data flow, del) =  
["FALSE"] ["TRUE"].

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : non-filtered status of the traction cut-off

3711. traction\_status (data flow, del) =  
["NULL"] ["POSITIVE"] ["NEGATIVE"] ["NOT\_NULL"] ["FAIL\_STATE"] ["INFORMATION\_NOT\_AVAILABLE"].

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A

## ITEA2 PROJECT

### 2012-2015

description : traction status computed by the TIU, transmitted to the MMU.

3059. slippery\_track (data flow, del) =  
["TRUE"]["FALSE"].

-----

rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : indicates to the MMU if the rail adhesion is set to "SLIPPERY".

551. BTM\_configuration\_data\_to\_basic (data flow) =  
is\_present  
+ BTM\_configuration.

-----

rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : BTM configuration data to transmit to basic

2545. packet\_44\_info\_to\_basic (data flow) =  
n\_of\_packet\_44\_to\_be\_sent\_on\_serial\_link  
+n\_of\_packet\_44\_to\_be\_sent\_on\_serial\_link{packet\_44\_to\_be\_sent\_on\_serial\_link}n\_of\_packet\_44\_to\_be\_sent\_on\_serial\_link.

-----

rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : packets 44 sent to basic.

2296. n\_of\_packet\_44\_to\_be\_sent\_on\_serial\_link (data flow, cel) =  
\*\*.

-----

rate : N/A  
range : 0..5  
resolution : 1  
units : N/A  
value names : N/A  
description : number of packets 44 sent to basic software.

2547. packet\_44\_to\_be\_sent\_on\_serial\_link (data flow) =  
bg\_id  
+nid\_xuser  
+xuser\_data.

-----

rate : N/A  
range : N/A

## ITEA2 PROJECT

### 2012-2015

resolution : N/A  
units : N/A  
value names : N/A  
description : packet 44 information sent to basic software.

474. bg\_id (data flow) =  
nid\_c  
+nid\_bg.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : "UNKNOWN" = the ETCS identifier of the balise group is unknown  
description : balise group ETCS identifier

2418. nid\_c (data flow, pel) =  
\*\*.

-----  
rate : N/A;  
range : N/A;  
resolution : N/A;  
units : N/A;  
value names : N/A;  
description : NID\_C variable;

2416. nid\_bg (data flow, pel) =  
\*\*.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : NID\_BG variable;

2455. nid\_xuser (data flow, del) =  
\*\*.

-----  
rate : N/A  
range : 0..511  
resolution : 1  
units : N/A  
value names : N/A  
description : NID\_XUSER variable (see subset 26).

3972. xuser\_data (data flow, pel) =  
\*\*.

-----  
rate : N/A

## ITEA2 PROJECT

### 2012-2015

range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : XUSER\_DATA variable (see subset 26).

3297. STMs\_state\_info\_to\_basic (data flow) =  
 n\_of\_STMs\_state\_info  
 + n\_of\_STMs\_state\_info{nid\_STM  
 + nid\_stmstate}n\_of\_STMs\_state\_info.

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : STMs state info transmitted to BSW.

2346. n\_of\_STMs\_state\_info (data flow, cel) =  
 \*\*,.

-----  
 rate : N/A  
 range : 0..12  
 resolution : 1  
 units : N/A  
 value names : N/A  
 description : number of STM state info transmitted to the BSW.

2450. nid\_stmstate (data flow, pel) =  
 \*\*,.

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : NID\_STMSTATE variable  
 exception : for internal use only, use of state DA\_FOR\_TEST.

1689. key\_mgt\_request\_info (data flow) =  
 is\_present  
 + key\_mgt\_request\_type.

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : key management request info to basic software.

1690. key\_mgt\_request\_type (data flow, del) =  
 ["UPDATE"] ["INSTALLATION"].

## ITEA2 PROJECT

### 2012-2015

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : key management request type.

1403. generic\_context\_info\_to\_basic (data flow) =  
 is\_present  
 + DRU\_nid\_lrbg  
 + DRU\_d\_lrbg  
 + DRU\_q\_dirlrbg  
 + DRU\_q\_dlrbg  
 + DRU\_l\_doubtlover  
 + DRU\_l\_doubtunder  
 + DRU\_q\_dirtrain  
 + DRU\_v\_train  
 + DRU\_m\_level  
 + DRU\_nid\_NTC  
 + DRU\_m\_mode  
 + DRU\_active\_cab  
 + DRU\_active\_antenna  
 + DRU\_EVC\_equipment\_id

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description :

1144. DRU\_nid\_lrbg (data flow, pel) =  
 \*\*,

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : See [Applic 5]

1126. DRU\_d\_lrbg (data flow, pel) =  
 \*\*,

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : See [Applic 5]

## ITEA2 PROJECT

### 2012-2015

1153. DRU\_q\_dirlrbg (data flow, pel) =  
\*\*.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : See [Applic 5]

1155. DRU\_q\_dlrbg (data flow, pel) =  
\*\*.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : See [Applic 5]

1134. DRU\_l\_doubtover (data flow, pel) =  
\*\*.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : See [Applic 5]

1135. DRU\_l\_doubtunder (data flow, pel) =  
\*\*.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : See [Applic 5]

1154. DRU\_q\_dirtrain (data flow, pel) =  
\*\*.

-----  
rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : See [Applic 5]

1157. DRU\_v\_train (data flow, pel) =

## ITEA2 PROJECT

### 2012-2015

\*\*.

-----

rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : See [Applic 5]

1138. DRU\_m\_level (data flow, pel) =

\*\*.

-----

rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : See [Applic 5]

1145. DRU\_nid\_NTC (data flow, pel) =

\*\*.

-----

rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : See [Applic 5]

1139. DRU\_m\_mode (data flow, pel) =

\*\*.

-----

rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : See [Applic 5]

1122. DRU\_active\_cab (data flow, pel) =

\*\*.

-----

rate : N/A  
range : N/A  
resolution : N/A  
units : N/A  
value names : N/A  
description : See [Applic 5]

1121. DRU\_active\_antenna (data flow, pel) =

\*\*.

## ITEA2 PROJECT

### 2012-2015

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : See [Applic 5]

1128. DRU\_EVC\_equipment\_id (data flow, pel) =  
 \*\*,.

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : See [Applic 5]

3056. SIL2\_display\_function\_info\_to\_basic (data flow) =  
 train\_speed\_for\_SIL2  
 + SIL2\_display\_function\_is\_active

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : SIL2 display function information transmitted to the BSW.

3803. train\_speed\_for\_SIL2 (data flow, cel) =  
 \*\*,.

-----  
 rate : N/A  
 range : 0..600/3.6  
 resolution : N/A  
 units : m/s  
 value names : N/A  
 description : train speed value transmitted to BSW, for SIL2 display function.

3057. SIL2\_display\_function\_is\_active (data flow, del) =  
 ["FALSE"] ["TRUE"].

-----  
 rate : N/A  
 range : N/A  
 resolution : N/A  
 units : N/A  
 value names : N/A  
 description : indicates if the SIL2 display function is active or not.