



# u-blox ZED-F9P

## Interface Description

### Abstract

The Interface Description describes the UBX (version 27.00), NMEA and RTCM protocols and serves as a reference manual for the u-blox ZED-F9P high precision positioning receiver

Document Information	
Title	u-blox ZED-F9P Interface Description
Subtitle	
Document type	Manual
Document number	UBX-18010854
Revision and date	R04 (916ede5) 18 September 2018
Document status	Advance Information
Document status explanation	
Objective Specification	Document contains target values. Revised and supplementary data will be published later.
Advance Information	Document contains data based on early testing. Revised and supplementary data will be published later.
Early Production Information	Document contains data from product verification. Revised and supplementary data may be published later.
Production Information	Document contains the final product specification.

u-blox reserves all rights to this document and the information contained herein. Products, names, logos and designs described herein may in whole or in part be subject to intellectual property rights. Reproduction, use, modification or disclosure to third parties of this document or any part thereof without the express permission of u-blox is strictly prohibited.

The information contained herein is provided "as is" and u-blox assumes no liability for the use of the information. No warranty, either express or implied, is given, including but not limited to, with respect to the accuracy, correctness, reliability and fitness for a particular purpose of the information. This document may be revised by u-blox at any time. For most recent documents, please visit [www.u-blox.com](http://www.u-blox.com).

Copyright © 2018, u-blox AG.

u-blox is a registered trademark of u-blox Holding AG in the EU and other countries.

# Table of Contents

<b>Preface .....</b>	<b>1</b>
<b>1 Document Overview .....</b>	<b>1</b>
<b>2 Firmware and Protocol Versions .....</b>	<b>1</b>
2.1 How to Determine the Version and the Location of the Firmware .....	1
2.1.1 Decoding the Boot Screen (for Protocol Version 24 and Above) .....	1
2.1.2 Decoding the output of UBX-MON-VER (for Protocol Version 24 and above) .....	2
2.2 How to Determine the Supported Protocol Version of the u-blox Receiver .....	3
2.2.1 u-blox 9 Firmware and Supported Protocol Versions .....	3
<b>3 Receiver Configuration .....</b>	<b>3</b>
<b>Interface Description .....</b>	<b>6</b>
<b>4 NMEA Protocol .....</b>	<b>6</b>
4.1 Protocol Overview .....	6
4.1.1 Message Format .....	6
4.1.2 Talker ID .....	6
4.1.3 Protocol Configuration .....	7
4.1.4 Satellite Numbering .....	8
4.1.5 Latitude and Longitude Format .....	8
4.1.6 Position Fix Flags .....	9
4.1.7 Multi-GNSS Considerations .....	10
4.1.8 Output of Invalid/Unknown Data .....	10
4.1.9 Messages Overview .....	10
4.2 Standard Messages .....	12
4.2.1 DTM .....	12
4.2.2 GBQ .....	13
4.2.3 GBS .....	13
4.2.4 GGA .....	14
4.2.5 GLL .....	16
4.2.6 GLQ .....	17
4.2.7 GNQ .....	17
4.2.8 GNS .....	18
4.2.9 GPQ .....	19
4.2.10 GRS .....	19
4.2.11 GSA .....	20
4.2.12 GST .....	21
4.2.13 GSV .....	22
4.2.14 RMC .....	23
4.2.15 TXT .....	24
4.2.16 VLW .....	25
4.2.17 VTG .....	26

4.2.18	ZDA .....	27
<b>5</b>	<b>UBX Protocol.....</b>	<b>27</b>
5.1	UBX Protocol Key Features .....	27
5.2	UBX Frame Structure .....	27
5.3	UBX Payload Definition Rules .....	28
5.3.1	Structure Packing .....	28
5.3.2	Reserved Elements .....	28
5.3.3	Undefined Values .....	28
5.3.4	Message Naming .....	29
5.3.5	Number Formats .....	29
5.4	UBX Checksum .....	29
5.5	UBX Message Flow .....	30
5.5.1	Acknowledgement .....	30
5.5.2	Polling Mechanism .....	30
5.6	UBX Class IDs .....	31
5.7	UBX Messages Overview .....	32
5.8	UBX-ACK (0x05) .....	37
5.8.1	UBX-ACK-ACK (0x05 0x01) .....	37
5.8.2	UBX-ACK-NAK (0x05 0x00) .....	37
5.9	UBX-CFG (0x06) .....	38
5.9.1	UBX-CFG-ANT (0x06 0x13) .....	38
5.9.2	UBX-CFG-CFG (0x06 0x09) .....	39
5.9.3	UBX-CFG-DAT (0x06 0x06) .....	41
5.9.4	UBX-CFG-DGNSS (0x06 0x70) .....	43
5.9.5	UBX-CFG-DYNSEED (0x06 0x85) .....	44
5.9.6	UBX-CFG-FIXSEED (0x06 0x84) .....	44
5.9.7	UBX-CFG-GEOFENCE (0x06 0x69) .....	45
5.9.8	UBX-CFG-GNSS (0x06 0x3E) .....	46
5.9.9	UBX-CFG-INF (0x06 0x02) .....	48
5.9.10	UBX-CFG-ITFM (0x06 0x39) .....	50
5.9.11	UBX-CFG-LOGFILTER (0x06 0x47) .....	51
5.9.12	UBX-CFG-MSG (0x06 0x01) .....	53
5.9.13	UBX-CFG-NAV5 (0x06 0x24) .....	54
5.9.14	UBX-CFG-NAVX5 (0x06 0x23) .....	56
5.9.15	UBX-CFG-NMEA (0x06 0x17) .....	59
5.9.16	UBX-CFG-ODO (0x06 0x1E) .....	62
5.9.17	UBX-CFG-PRT (0x06 0x00) .....	63
5.9.18	UBX-CFG-PWR (0x06 0x57) .....	74
5.9.19	UBX-CFG-RATE (0x06 0x08) .....	74
5.9.20	UBX-CFG-RINV (0x06 0x34) .....	75
5.9.21	UBX-CFG-RST (0x06 0x04) .....	76
5.9.22	UBX-CFG-TMODE3 (0x06 0x71) .....	77
5.9.23	UBX-CFG-TP5 (0x06 0x31) .....	79

5.9.24	UBX-CFG-USB (0x06 0x1B).....	81
5.9.25	UBX-CFG-VALDEL (0x06 0x8C) .....	82
5.9.26	UBX-CFG-VALGET (0x06 0x8B).....	85
5.9.27	UBX-CFG-VALSET (0x06 0x8A) .....	86
5.10	UBX-INF (0x04).....	90
5.10.1	UBX-INF-DEBUG (0x04 0x04).....	90
5.10.2	UBX-INF-ERROR (0x04 0x00) .....	90
5.10.3	UBX-INF-NOTICE (0x04 0x02) .....	91
5.10.4	UBX-INF-TEST (0x04 0x03).....	91
5.10.5	UBX-INF-WARNING (0x04 0x01) .....	92
5.11	UBX-LOG (0x21).....	93
5.11.1	UBX-LOG-CREATE (0x21 0x07).....	93
5.11.2	UBX-LOG-ERASE (0x21 0x03) .....	94
5.11.3	UBX-LOG-FINDTIME (0x21 0x0E) .....	94
5.11.4	UBX-LOG-INFO (0x21 0x08).....	95
5.11.5	UBX-LOG-RETRIEVEPOSEXTRA (0x21 0x0f).....	97
5.11.6	UBX-LOG-RETRIEVEPOS (0x21 0x0b) .....	98
5.11.7	UBX-LOG-RETRIEVESTRING (0x21 0x0d).....	99
5.11.8	UBX-LOG-RETRIEVE (0x21 0x09).....	99
5.11.9	UBX-LOG-STRING (0x21 0x04).....	100
5.12	UBX-MGA (0x13) .....	101
5.12.1	UBX-MGA-ACK (0x13 0x60) .....	101
5.12.2	UBX-MGA-BDS (0x13 0x03).....	102
5.12.3	UBX-MGA-DBD (0x13 0x80) .....	106
5.12.4	UBX-MGA-GAL (0x13 0x02) .....	107
5.12.5	UBX-MGA-GLO (0x13 0x06) .....	110
5.12.6	UBX-MGA-GPS (0x13 0x00).....	113
5.12.7	UBX-MGA-INI (0x13 0x40).....	118
5.12.8	UBX-MGA-QZSS (0x13 0x05).....	123
5.13	UBX-MON (0x0A).....	127
5.13.1	UBX-MON-COMMS (0x0A 0x36) .....	127
5.13.2	UBX-MON-GNSS (0x0A 0x28).....	128
5.13.3	UBX-MON-HW2 (0x0A 0x0B) .....	130
5.13.4	UBX-MON-HW3 (0x0A 0x37) .....	131
5.13.5	UBX-MON-HW (0x0A 0x09) .....	132
5.13.6	UBX-MON-IO (0x0A 0x02).....	134
5.13.7	UBX-MON-MSGPP (0x0A 0x06).....	134
5.13.8	UBX-MON-PATCH (0x0A 0x27) .....	135
5.13.9	UBX-MON-RF (0x0A 0x38).....	136
5.13.10	UBX-MON-RXBUF (0x0A 0x07) .....	137
5.13.11	UBX-MON-RXR (0x0A 0x21).....	138
5.13.12	UBX-MON-TXBUF (0x0A 0x08).....	138
5.13.13	UBX-MON-VER (0x0A 0x04) .....	139

5.14	UBX-NAV (0x01)	141
5.14.1	UBX-NAV-CLOCK (0x01 0x22)	141
5.14.2	UBX-NAV-DOP (0x01 0x04)	141
5.14.3	UBX-NAV-EOE (0x01 0x61)	142
5.14.4	UBX-NAV-GEOFENCE (0x01 0x39)	142
5.14.5	UBX-NAV-HPPOSECEF (0x01 0x13)	143
5.14.6	UBX-NAV-HPPOSLLH (0x01 0x14)	144
5.14.7	UBX-NAV-ODO (0x01 0x09)	145
5.14.8	UBX-NAV-ORB (0x01 0x34)	146
5.14.9	UBX-NAV-POSECEF (0x01 0x01)	149
5.14.10	UBX-NAV-POSLLH (0x01 0x02)	149
5.14.11	UBX-NAV-PVT (0x01 0x07)	150
5.14.12	UBX-NAV-RELPOSNED (0x01 0x3C)	153
5.14.13	UBX-NAV-RESETODO (0x01 0x10)	154
5.14.14	UBX-NAV-SAT (0x01 0x35)	155
5.14.15	UBX-NAV-SIG (0x01 0x43)	157
5.14.16	UBX-NAV-STATUS (0x01 0x03)	159
5.14.17	UBX-NAV-SVIN (0x01 0x3B)	161
5.14.18	UBX-NAV-TIMEBDS (0x01 0x24)	162
5.14.19	UBX-NAV-TIMEGAL (0x01 0x25)	163
5.14.20	UBX-NAV-TIMEGLO (0x01 0x23)	164
5.14.21	UBX-NAV-TIMEGPS (0x01 0x20)	165
5.14.22	UBX-NAV-TIMELS (0x01 0x26)	166
5.14.23	UBX-NAV-TIMEUTC (0x01 0x21)	168
5.14.24	UBX-NAV-VELECEF (0x01 0x11)	169
5.14.25	UBX-NAV-VELNED (0x01 0x12)	170
5.15	UBX-RXM (0x02)	171
5.15.1	UBX-RXM-MEASX (0x02 0x14)	171
5.15.2	UBX-RXM-PMREQ (0x02 0x41)	173
5.15.3	UBX-RXM-RAWX (0x02 0x15)	175
5.15.4	UBX-RXM-RLM (0x02 0x59)	178
5.15.5	UBX-RXM-RTCM (0x02 0x32)	179
5.15.6	UBX-RXM-SFRBX (0x02 0x13)	180
5.16	UBX-SEC (0x27)	181
5.16.1	UBX-SEC-SIGN (0x27 0x01)	181
5.16.2	UBX-SEC-UNIQID (0x27 0x03)	181
5.17	UBX-TIM (0x0D)	182
5.17.1	UBX-TIM-TM2 (0x0D 0x03)	182
5.17.2	UBX-TIM-TP (0x0D 0x01)	183
5.17.3	UBX-TIM-VRFY (0x0D 0x06)	185
5.18	UBX-UPD (0x09)	186
5.18.1	UBX-UPD-SOS (0x09 0x14)	186
6	CFG Interface	189

6.1	Configuration Database .....	189
6.2	Configuration Items .....	189
6.3	Configuration Layers .....	190
6.4	Configuration Interface Access .....	191
6.4.1	UBX Protocol Interface .....	191
6.5	Configuration Data .....	191
6.6	Reset Behaviour .....	191
6.7	Configuration Reference .....	191
6.7.1	CFG-GEOFENCE: Geofencing Configuration .....	191
6.7.2	CFG-HW: Hardware Configuration .....	193
6.7.3	CFG-I2C: Configuration of the I2C Interface .....	193
6.7.4	CFG-I2CINPROT: Input Protocol Configuration of the I2C Interface .....	193
6.7.5	CFG-I2COUTPROT: Output Protocol Configuration of the I2C Interface .....	194
6.7.6	CFG-INFMSG: Inf Message Configuration .....	194
6.7.7	CFG-ITFM: Jamming/Interference Monitor configuration .....	197
6.7.8	CFG-LOGFILTER: Data Logger Configuration .....	197
6.7.9	CFG-MOT: Motion Detector Configuration .....	198
6.7.10	CFG-MSGOUT: Message Output Configuration .....	198
6.7.11	CFG-NAVHPG: High Precision Navigation Configuration .....	214
6.7.12	CFG-NAVSPG: Standard Precision Navigation Configuration .....	215
6.7.13	CFG-NMEA: NMEA Protocol Configuration .....	217
6.7.14	CFG-ODO: Odometer and Low-Speed Course Over Ground Filter Configuration .....	219
6.7.15	CFG-RATE: Navigation and Measurement Rate Configuration .....	220
6.7.16	CFG-RINV: Remote Inventory .....	221
6.7.17	CFG-SIGNAL: Satellite Systems (GNSS) Signal Configuration .....	221
6.7.18	CFG-SPI: Configuration of the SPI Interface .....	222
6.7.19	CFG-SPIINPROT: Input Protocol Configuration of the SPI Interface .....	222
6.7.20	CFG-SPIOUTPROT: Output Protocol Configuration of the SPI Interface .....	223
6.7.21	CFG-TMODE: Time Mode Configuration .....	223
6.7.22	CFG-TP: Timepulse Configuration .....	224
6.7.23	CFG-TXREADY: Tx-Ready Configuration .....	226
6.7.24	CFG-UART1: Configuration of the UART1 Interface .....	227
6.7.25	CFG-UART1INPROT: Input Protocol Configuration of the UART1 Interface .....	228
6.7.26	CFG-UART1OUTPROT: Output Protocol Configuration of the UART1 Interface .....	228
6.7.27	CFG-UART2: Configuration of the UART2 Interface .....	228
6.7.28	CFG-UART2INPROT: Input Protocol Configuration of the UART2 Interface .....	229
6.7.29	CFG-UART2OUTPROT: Output Protocol Configuration of the UART2 Interface .....	229
6.7.30	CFG-USB: Configuration of the USB Interface .....	230
6.7.31	CFG-USBINPROT: Input Protocol Configuration of the USB Interface .....	230
6.7.32	CFG-USBOUTPROT: Output Protocol Configuration of the USB Interface .....	230
6.8	Legacy UBX Message Fields Reference .....	231
<b>7</b>	<b>RTCM Protocol .....</b>	<b>237</b>
7.1	RTCM3 .....	237

7.1.1 Supported Messages .....	237
7.1.2 Configuration .....	238
7.1.3 Reference .....	238
<b>Appendix .....</b>	<b>239</b>
<b>A Satellite Numbering .....</b>	<b>239</b>
<b>B UBX and NMEA Signal Identifiers .....</b>	<b>239</b>
<b>C Configuration Defaults .....</b>	<b>240</b>
C.1 u-blox 9 ZED-F9P (version 1.00 HPG 1.00) .....	240
<b>Related Documents .....</b>	<b>257</b>
<b>Overview .....</b>	<b>257</b>
<b>Related Documents for ZED-F9P .....</b>	<b>257</b>
<b>Revision History .....</b>	<b>258</b>
<b>Contact .....</b>	<b>259</b>
<b>u-blox Offices .....</b>	<b>259</b>



# Preface

## 1 Document Overview

The *Interface Description* is a reference describing the messages used by the u-blox receiver and is organized by the specific NMEA, UBX, and RTCM messages.

## 2 Firmware and Protocol Versions

The protocol version defines a set of messages that are applicable across various u-blox products. Each firmware used by a u-blox receiver supports a specific protocol version, which is not configurable.

The following sections will explain how to decode the shown information to get the firmware and the protocol version.

### 2.1 How to Determine the Version and the Location of the Firmware

The u-blox receiver can run a firmware from two different locations:

- Internal ROM
- External Flash memory


The location and the version of the currently running firmware can be found in the boot screen or in the UBX-MON-VER message.

For firmware supporting [Protocol Version 24 and above](#):

- [Boot screen, Protocol Version 24 and above](#)
- [UBX-MON-VER, Protocol Version 24 and above](#)

#### 2.1.1 Decoding the Boot Screen (for Protocol Version 24 and Above)

Boot screen for a u-blox receiver running from Flash:

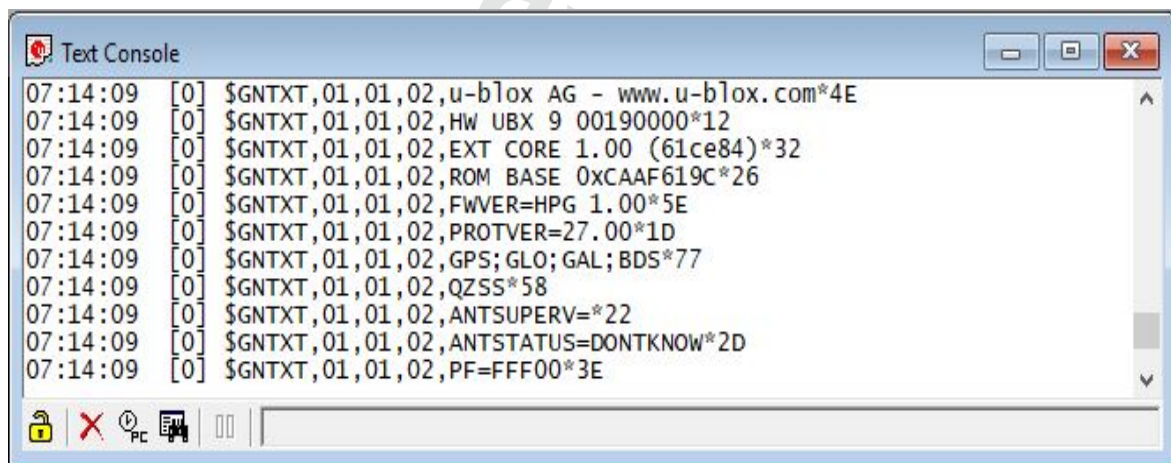

Possible lines in the boot screen and their meanings:

Entry	Description
u-blox AG - www.u-blox.com	Start of the boot screen
HW UBX 9 00190000	Hardware version of the u-blox receiver (u-blox 9 receiver)
EXT CORE 1.00 (61ce84)	Firmware version 1.00 running from <b>Flash</b> (revision number)
ROM BASE	Underlying firmware version in <b>ROM</b> (revision number)

Possible lines in the boot screen and their meanings: continued

Entry	Description
FWVER=HPG 1.00	Firmware of product category and version where SPG: Firmware of Standard Precision GNSS product HPG: Firmware of High Precision GNSS product ADR: Firmware of ADR product UDR: Firmware of UDR product TIM: Firmware of Time Sync product FTS: Firmware of Time & Frequency Sync product
PROTVER=27.00	Supported protocol version
GPS;GLO;GAL;BDS	Supported <a href="#">Major GNSS</a> .
SBAS;IMES;QZSS	Supported <a href="#">Augmentation systems</a> .
ANTSUPERV=AC SD PDoS SR	Configuration of the Antenna supervisor where AC: Active Antenna Control enabled SD: Short Circuit Detection enabled OD: Open Circuit Detection enabled PDoS: Short Circuit Power Down Logic enabled SR: Automatic Recovery from Short state
PF=FFF00	Product configuration.




The line containing the FWVER indicates which version of the firmware is currently running and is called **firmware version** in the rest of the document.



The numbers in parentheses (revision numbers) should only be used to identify a known firmware version and are not guaranteed to increase over time.

### 2.1.2 Decoding the output of UBX-MON-VER (for Protocol Version 24 and above)

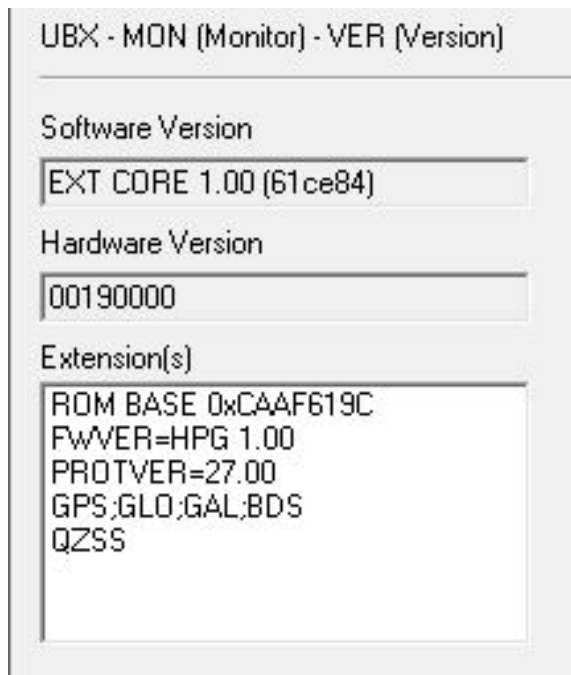

#### Possible fields in UBX-MON-VER and their meanings:

Entry	Description
-------	-------------

Possible fields in UBX-MON-VER and their meanings: continued

Entry	Description
Software Version EXT CORE 1.00 (61ce84)	Currently running firmware version. If ROM CORE, then the u-blox receiver runs from <b>ROM</b> . If EXT CORE, then the u-blox receiver runs from <b>Flash</b> .
Hardware Version	The hardware version of the u-blox receiver.
Extension(s)	Extended information about the u-blox receiver firmware. See table below for the entries.



Not every entry is output by every u-blox receiver in the UBX-MON-VER extensions. This depends on the product, the firmware location and the firmware version.

#### Possible entries in UBX-MON-VER Extension(s):

Entry	Description
ROM BASE	Underlying firmware version in ROM. If such an entry is present, then the u-blox receiver runs from <b>Flash</b> .
FWVER=HPG 1.00	Firmware of product category and version where SPG: Firmware of Standard Precision GNSS product HPG: Firmware of High Precision GNSS product ADR: Firmware of ADR product UDR: Firmware of UDR product TIM: Firmware of Time Sync product FTS: Firmware of Time & Frequency Sync product
PROTVER=27.00	Supported protocol version.
MOD=ZED-F9P	Module identification. Set in production.
GPS;GLO;GAL;BDS	Supported <a href="#">Major GNSS</a> .
SBAS;IMES;QZSS	Supported <a href="#">Augmentation systems</a> .

## 2.2 How to Determine the Supported Protocol Version of the u-blox Receiver

Each u-blox receiver reports its supported protocol version in the following ways:

- On start-up in the [boot screen](#)
- In the [UBX-MON-VER message](#)

with the line containing PROTVER (example: PROTVER=27.00).

Additionally, the *firmware string*, together with the *firmware version*, can be used to look up the corresponding protocol version. The tables below give an overview of the released firmware and their corresponding protocol versions.

### 2.2.1 u-blox 9 Firmware and Supported Protocol Versions

#### Firmware for High Precision GNSS Products

Firmware version	Firmware string	Protocol Version
HPG 1.00	EXT CORE 1.00 (61ce84)	27.00

## 3 Receiver Configuration

u-blox positioning receivers are fully configurable with UBX protocol messages. The configuration used by the receiver during normal operation is called the "current configuration". The current configuration can be changed during normal operation by sending [UBX-CFG-VALSET](#) messages over any I/O port. The receiver can

change its current configuration immediately after receiving a configuration message. The receiver will always use the current configuration only.

The current configuration is loaded from permanent configuration hard-coded in the receiver firmware (the defaults) and from non-volatile memory (user configuration) on startup of the receiver. Changes made to the current configuration at run-time will be lost when there is a power cycle, a hardware reset or a (complete) controlled software reset (see chapter Forcing a Receiver Reset in the [Integration Manual](#)).

See the [Configuration Interface](#) section for a detailed description of the receiver configuration system, the explanation of the configuration concept and its principles and interfaces.



*The configuration interface has changed from earlier u-blox positioning receivers. There is some backwards compatibility. Users are strongly advised to only use the [Configuration Interface](#) referred to in the following sections. See also [Legacy Configuration Interface Compatibility](#).*



*See the [Integration Manual](#) for a basic receiver configuration most commonly used.*

Advance Information


# Interface Description

## 4 NMEA Protocol

### 4.1 Protocol Overview

#### 4.1.1 Message Format

NMEA messages sent by the GNSS receiver are based on NMEA 0183 Version 4.1. The following picture shows the structure of a NMEA protocol message.

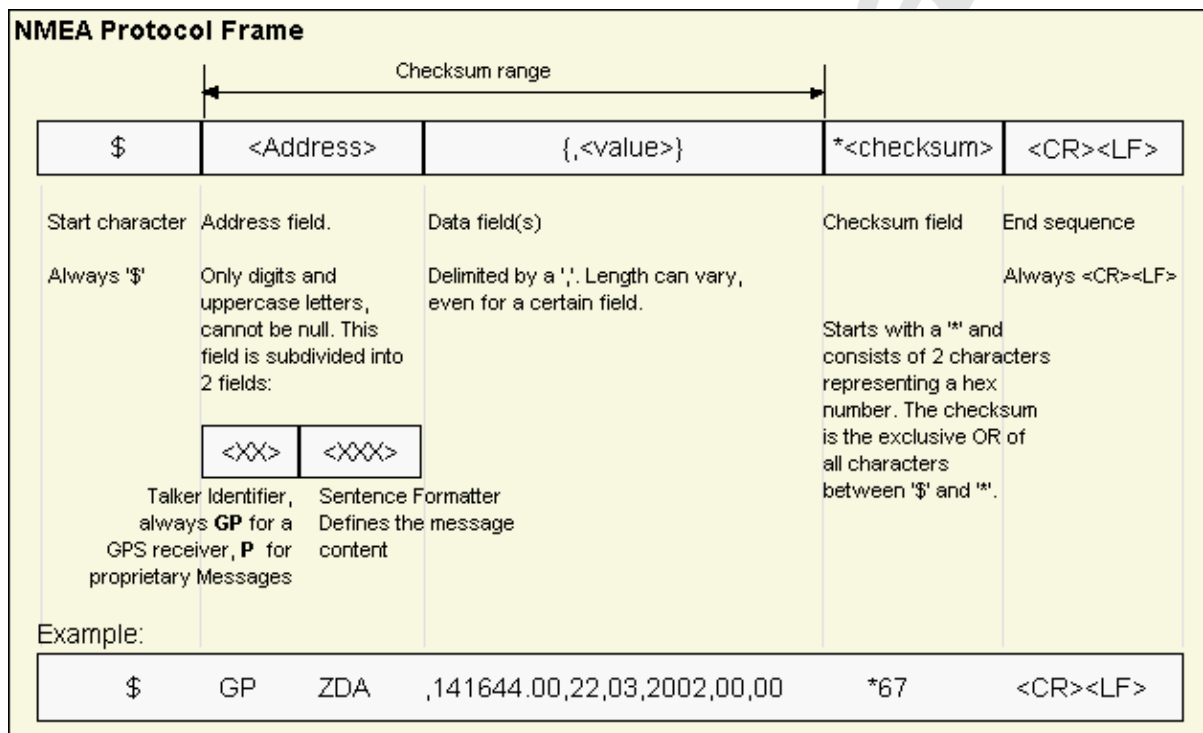

For further information on the NMEA Standard, refer to *NMEA 0183 Standard For Interfacing Marine Electronic Devices*, Version 4.10, June, 2012. See <http://www.nmea.org/> for ordering instructions.

The NMEA standard allows for proprietary, manufacturer-specific messages to be added. These shall be marked with a manufacturer mnemonic. The mnemonic assigned to u-blox is UBX and is used for all non-standard messages. These proprietary NMEA messages therefore have the address field set to PUBX. The first data field in a PUBX message identifies the message number with two digits.

#### 4.1.2 Talker ID

One of the ways the NMEA standard differentiates between GNSS is by using a two-letter message identifier, the 'Talker ID'. The specific Talker ID used by a u-blox receiver will depend on the device model and system configuration. The table below shows the Talker ID that will be used for various GNSS configurations.

#### NMEA Talker IDs

Configured GNSS	Talker ID
GPS, SBAS, QZSS	GP
GLONASS	GL
Galileo	GA

NMEA Talker IDs continued

Configured GNSS	Talker ID
BeiDou	GB
Any combination of GNSS	GN

### 4.1.3 Protocol Configuration

The [NMEA protocol](#) on u-blox receivers can be configured to the need of customer applications using configuration items [CFG-NMEA-\\*](#).

There are four NMEA standards supported. The default NMEA version is 4.10. Alternatively versions 4.00, 2.3, and 2.1 can be enabled (for details on how this affects the output refer to section [Position Fix Flags in NMEA Mode](#)).

NMEA defines satellite numbering systems for some, but not all GNSS (this is partly dependent on the NMEA version). Satellite numbers for unsupported GNSS can be configured using configuration items [CFG-NMEA-\\*](#). Unknown satellite numbers are always reported as a null NMEA field (i.e. an empty string)

The NMEA specification indicates that the GGA message is GPS specific. However, u-blox receivers support the output of a GGA message for each of the Talker IDs.

#### NMEA filtering flags

Parameter	Description
Position filtering	Enable to permit positions from failed or invalid fixes to be reported (with the "V" status flag to indicate that the data is not valid).
Valid position filtering	Enable to permit positions from invalid fixes to be reported (with the "V" status flag to indicate that the data is not valid).
Time filtering	Enable to permit the receiver's best knowledge of time to be output, even though it might be wrong.
Date filtering	Enable to permit the receiver's best knowledge of date to be output, even though it might be wrong.
GPS-only filtering	Enable to restrict output to only report GPS satellites.
Track filtering	Enable to permit course over ground (COG) to be reported even when it would otherwise be frozen.

#### NMEA flags

Parameter	Description
Compatibility Mode	Some older NMEA applications expect the NMEA output to be formatted in a specific way, for example, they will only work if the latitude and longitude have exactly four digits behind the decimal point. u-blox receivers offer a compatibility mode to support these legacy applications.
Consideration Mode	u-blox receivers use a sophisticated signal quality detection scheme, in order to produce the best possible position output. This algorithm considers all SV measurements, and may eventually decide to only use a subset thereof, if it improves the overall position accuracy. If Consideration mode is enabled, all satellites, which were considered for navigation, are communicated as being used for the position determination. If Consideration Mode is disabled, only those satellites which after the consideration step remained in the position output are marked as being used.
Limit82 Mode	Enabling this mode will limit the NMEA sentence length to a maximum of 82 characters.

NMEA flags continued

Parameter	Description
High Precision Mode	Enabling this mode increases precision of the position output. Latitude and longitude then have seven digits after the decimal point, and altitude has three digits after the decimal point. Note: The High Precision Mode cannot be set in conjunction with either Compatibility Mode or Limit82 Mode.

### Extended configuration

Option	Description
GNSS to filter	Filters satellites based on their GNSS
Satellite numbering	This field configures the display of satellites that do not have an NMEA-defined value. Note: this does not apply to satellites with an unknown ID.
Main Talker ID	By default the main Talker ID (i.e. the Talker ID used for all messages other than GSV) is determined by the GNSS assignment of the receiver's channels (see <a href="#">UBX-CFG-GNSS</a> ). This field enables the main Talker ID to be overridden.
GSV Talker ID	By default the Talker ID for GSV messages is GNSS specific (as defined by NMEA). This field enables the GSV Talker ID to be overridden.
BDS Talker ID	By default the Talker ID for BeiDou is 'GB'. This field enables the BeiDou Talker ID to be overridden.

### Extra fields in NMEA 4.1 and above

Message	Extra fields
<a href="#">GBS</a>	systemId, signalId
<a href="#">GNS</a>	navStatus
<a href="#">GRS</a>	systemId, signalId
<a href="#">GSA</a>	systemId
<a href="#">GSV</a>	signalId
<a href="#">RMC</a>	navStatus

#### 4.1.4 Satellite Numbering

The NMEA protocol (V4.1) identifies GNSS satellites with a one digit system ID and a two digit satellite number. u-blox receivers support this method in their NMEA output when "strict" SV numbering is selected. In most cases this is the default setting, but can be checked or set using configuration items [CFG-NMEA-\\*](#).

In order to support QZSS within current receivers and prepare for support of other systems (e.g. Galileo) in future receivers, an "extended" SV numbering scheme can be enabled (using configuration items [CFG-NMEA-\\*](#)). This uses the NMEA-defined numbers where possible, but adds other number ranges to support other GNSS. Note however that these non-standard extensions require 3 digit numbers, which may not be supported by some NMEA parsing software. For example QZSS satellites are reported using numbers in the range 193 to 197.

See [Satellite Numbering](#) for a complete list of satellite numbers.



GLONASS satellites can be tracked before they have been identified. In NMEA output, such unknown satellite numbers are always reported as a null field (i.e. an empty string).

#### 4.1.5 Latitude and Longitude Format

According to the NMEA Standard, Latitude and Longitude are output in the format Degrees, Minutes and (Decimal) Fractions of Minutes. To convert to Degrees and Fractions of Degrees, or Degrees, Minutes, Seconds and Fractions of seconds, the 'Minutes' and 'Fractional Minutes' parts need to be converted. In other words: If



the GPS Receiver reports a Latitude of 4717.112671 North and Longitude of 00833.914843 East, this is  
Latitude 47 Degrees, 17.112671 Minutes  
Longitude 8 Degrees, 33.914843 Minutes

**or**

Latitude 47 Degrees, 17 Minutes, 6.76026 Seconds  
Longitude 8 Degrees, 33 Minutes, 54.89058 Seconds

**or**

Latitude 47.28521118 Degrees  
Longitude 8.56524738 Degrees

#### 4.1.6 Position Fix Flags

This section shows how u-blox implements the NMEA protocol and the conditions determining how flags are set.

##### Flags in NMEA 4.1 and above

NMEA Message Field	GLL, RMC status	GGA quality	GLL, VTG posMode	RMC, GNS posMode
No position fix (at power-up, after losing satellite lock)	V	0	N	N
GNSS fix, but user limits exceeded	V	0	N	N
Dead reckoning fix, but user limits exceeded	V	6	E	E
Dead reckoning fix	A	6	E	E
RTK float	A	5	D	F
RTK fixed	A	4	D	R
2D GNSS fix	A	1 / 2	A / D	A / D
3D GNSS fix	A	1 / 2	A / D	A / D
Combined GNSS/dead reckoning fix	A	1 / 2	A / D	A / D
	See below (1)	See below (2)	See below (3)	See below (3)

(1) Possible values for *status*: V = Data invalid, A = Data valid

(2) Possible values for *quality*: 0 = No fix, 1 = Autonomous GNSS fix, 2 = Differential GNSS fix, 4 = RTK fixed, 5 = RTK float, 6 = Estimated/Dead reckoning fix

(3) Possible values for *posMode*: N = No fix, E = Estimated/Dead reckoning fix, A = Autonomous GNSS fix, D = Differential GNSS fix, F = RTK float, R = RTK fixed

##### Flags in NMEA 2.3 and above

NMEA Message Field	GLL, RMC status	GGA quality	GSA navMode	GLL, VTG, RMC, GNS posMode
No position fix (at power-up, after losing satellite lock)	V	0	1	N
GNSS fix, but user limits exceeded	V	0	1	N
Dead reckoning fix, but user limits exceeded	V	6	2	E
Dead reckoning fix	A	6	2	E
2D GNSS fix	A	1 / 2	2	A / D
3D GNSS fix	A	1 / 2	3	A / D
Combined GNSS/dead reckoning fix	A	1 / 2	3	A / D
	See below (1)	See below (2)	See below (3)	See below (4)

(1) Possible values for *status*: V = Data invalid, A = Data valid

(2) Possible values for *quality*: 0 = No fix, 1 = Autonomous GNSS fix, 2 = Differential GNSS fix, 4 = RTK fixed, 5 = RTK float, 6 = Estimated/Dead reckoning fix

(3) Possible values for *navMode*: 1 = No fix, 2 = 2D fix, 3 = 3D fix

(4) Possible values for *posMode*: N = No fix, E = Estimated/Dead reckoning fix, A = Autonomous GNSS fix, D = Differential GNSS fix, F = RTK float, R = RTK fixed

### Flags in NMEA 2.1 and below

The flags in NMEA 2.1 and below are the same as NMEA 2.3 and above but with the following differences:

- The *posMode* field is not output for GLL, RMC and VTG messages (each message has one field less).
- The GGA *quality* field is set to 1 (instead of 6) for both types of dead reckoning fix.

### 4.1.7 Multi-GNSS Considerations

Many applications which process NMEA messages assume that only a single GNSS is active. However, when multiple GNSS are configured, the NMEA specification requires the output to change in the following ways:

#### NMEA output for Multi-GNSS

Change	Description
Main Talker ID	The main Talker ID will be 'GN' (e.g. instead of 'GP' for a GPS receiver)
GSV Talker IDs	The GSV message reports the signal strength of the visible satellites. However, the Talker ID it uses is specific to the GNSS it is reporting information for, so for a multi-GNSS receiver it will not be the same as the main Talker ID. (e.g. other messages will be using the 'GN' Talker ID but the GSV message will use GNSS-specific Talker IDs)
Multiple GSA and GRS Messages	Multiple GSA and GRS messages are output for each fix, one for each GNSS. This may confuse applications which assume they are output only once per position fix (as is the case for a single GNSS receiver).

### 4.1.8 Output of Invalid/Unknown Data

By default the receiver will not output invalid data. In such cases, it will output empty fields.

A valid position fix is reported as follows:

```
$GPGLL,4717.11634,N,00833.91297,E,124923.00,A,A*6E
```

An invalid position fix (but time valid) is reported as follows:

```
$GPGLL,,,,,124924.00,V,N*42
```

If Time is unknown (e.g. during a cold-start):

```
$GPGLL,,,,,V,N*64
```

Note:



Output of invalid data marked with the 'Invalid/Valid' Flags can be enabled using the configuration items [CFG-NMEA-\\*](#).

### 4.1.9 Messages Overview

When configuring NMEA messages using the UBX protocol message [UBX-CFG-MSG](#), the Class/Ids shown in the table shall be used.

Page	Mnemonic	Cls/ID	Description
	<b>NMEA Standard Messages</b>		<b>Standard Messages</b>

## NMEA Messages Overview continued

Page	Mnemonic	Cls/ID	Description
12	<b>DTM</b>	0xF0 0x0A	Datum Reference
13	<b>GBQ</b>	0xF0 0x44	Poll a standard message (if the current Talker ID is GB)
13	<b>GBS</b>	0xF0 0x09	GNSS Satellite Fault Detection
14	<b>GGA</b>	0xF0 0x00	Global positioning system fix data
16	<b>GLL</b>	0xF0 0x01	Latitude and longitude, with time of position fix and status
17	<b>GLQ</b>	0xF0 0x43	Poll a standard message (if the current Talker ID is GL)
17	<b>GNQ</b>	0xF0 0x42	Poll a standard message (if the current Talker ID is GN)
18	<b>GNS</b>	0xF0 0x0D	GNSS fix data
19	<b>GPQ</b>	0xF0 0x40	Poll a standard message (if the current Talker ID is GP)
19	<b>GRS</b>	0xF0 0x06	GNSS Range Residuals
20	<b>GSA</b>	0xF0 0x02	GNSS DOP and Active Satellites
21	<b>GST</b>	0xF0 0x07	GNSS Pseudo Range Error Statistics
22	<b>GSV</b>	0xF0 0x03	GNSS Satellites in View
23	<b>RMC</b>	0xF0 0x04	Recommended Minimum data
24	<b>TXT</b>	0xF0 0x41	Text Transmission
25	<b>VLW</b>	0xF0 0x0F	Dual ground/water distance
26	<b>VTG</b>	0xF0 0x05	Course over ground and Ground speed
27	<b>ZDA</b>	0xF0 0x08	Time and Date

## 4.2 Standard Messages

Standard Messages: i.e. Messages as defined in the NMEA Standard.

### 4.2.1 DTM

#### 4.2.1.1 Datum Reference

Message	<b>DTM</b>		
Description	<b>Datum Reference</b>		
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>		
Type	Output Message		
Comment	This message gives the difference between the current datum and the reference datum. The current datum defaults to WGS84. The reference datum cannot be changed and is always set to WGS84.		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x0A	11	

Message Structure:

```
$xxDTM,datum,subDatum,lat,NS,lon,EW,alt,refDatum*cs<CR><LF>
```

Example:

```
$GPDTM,W84,,0.0,N,0.0,E,0.0,W84*6F
```

```
$GPDTM,999,,0.08,N,0.07,E,-47.7,W84*1C
```

Field No.	Name	Unit	Format	Example	Description
0	xxDTM	-	string	\$GPDTM	DTM Message ID (xx = current Talker ID)
1	datum	-	string	W84	Local datum code: W84 = WGS84, 999 = user defined
2	subDatum	-	string	-	A null field
3	lat	min	numeric	0.08	Offset in Latitude
4	NS	-	character	S	North/South indicator
5	lon	min	numeric	0.07	Offset in Longitude
6	EW	-	character	E	East/West indicator
7	alt	m	numeric	-2.8	Offset in altitude
8	refDatum	-	string	W84	Reference datum code (always W84 = WGS 84)
9	cs	-	hexadecimal	*67	Checksum
10	<CR><LF>	-	character	-	Carriage return and line feed

## 4.2.2 GBQ

### 4.2.2.1 Poll a standard message (if the current Talker ID is GB)

Message	<b>GBQ</b>		
Description	<b>Poll a standard message (if the current Talker ID is GB)</b>		
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>		
Type	Input Message		
Comment	Polls a standard NMEA message if the current Talker ID is GB		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x44	4	

Message Structure:

```
$xxGBQ,msgId*cs<CR><LF>
```

Example:

```
$EIGBQ,RMC*28
```

Field No.	Name	Unit	Format	Example	Description
0	xxGBQ	-	string	\$EIGBQ	GBQ Message ID (xx = Talker ID of the device requesting the poll)
1	msgId	-	string	RMC	Message ID of the message to be polled
2	cs	-	hexadecimal	*28	Checksum
3	<CR><LF>	-	character	-	Carriage return and line feed

## 4.2.3 GBS

### 4.2.3.1 GNSS Satellite Fault Detection

Message	<b>GBS</b>		
Description	<b>GNSS Satellite Fault Detection</b>		
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>		
Type	Output Message		
Comment	<p>This message outputs the results of the Receiver Autonomous Integrity Monitoring Algorithm (RAIM).</p> <ul style="list-style-type: none"> <li>The fields <b>errLat</b>, <b>errLon</b> and <b>errAlt</b> output the standard deviation of the position calculation, using all satellites which pass the RAIM test successfully.</li> <li>The fields <b>errLat</b>, <b>errLon</b> and <b>errAlt</b> are only output if the RAIM process passed successfully (i.e. no or successful edits happened). These fields are never output if 4 or fewer satellites are used for the navigation calculation (because, in such cases, integrity can not be determined by the receiver autonomously).</li> <li>The fields <b>prob</b>, <b>bias</b> and <b>stddev</b> are only output if at least one satellite failed in the RAIM test. If more than one satellites fail the RAIM test, only the information for the worst satellite is output in this message.</li> </ul>		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x09	13	

Message Structure:

```
$xxGBS,time,errLat,errLon,errAlt,svid,prob,bias,stddev,systemId,signalId*cs<CR><LF>
```

Example:

```
$GPGBS,235503.00,1.6,1.4,3.2,,,,,*40
$GPGBS,235458.00,1.4,1.3,3.1,03,-21.4,3.8,1,0*5B
```

Field No.	Name	Unit	Format	Example	Description
0	xxGBS	-	string	\$GPGBS	GBS Message ID (xx = current Talker ID)
1	time	-	hhmmss.ss	235503.00	UTC time to which this RAIM sentence belongs, see <a href="#">note on UTC representation</a>
2	errLat	m	numeric	1.6	Expected error in latitude
3	errLon	m	numeric	1.4	Expected error in longitude
4	errAlt	m	numeric	3.2	Expected error in altitude
5	svid	-	numeric	03	Satellite ID of most likely failed satellite
6	prob	-	numeric	-	Probability of missed detection, not supported (empty)
7	bias	m	numeric	-21.4	Estimate on most likely failed satellite (a priori residual)
8	stddev	m	numeric	3.8	Standard deviation of estimated bias
9	systemId	-	numeric	1	NMEA defined GNSS System ID <b>NMEA v4.1 and above only</b>
10	signalId	-	numeric	0	NMEA defined GNSS Signal ID (0 = All signals, see <a href="#">Signal Identifiers table</a> for other values) <b>NMEA v4.1 and above only</b>
11	cs	-	hexadecimal	*5B	Checksum
12	<CR><LF>	-	character	-	Carriage return and line feed

## 4.2.4 GGA

### 4.2.4.1 Global positioning system fix data

Message	<b>GGA</b>		
Description	<b>Global positioning system fix data</b>		
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>		
Type	Output Message		
Comment	<p><b>The output of this message is dependent on the currently selected datum (default: WGS84). The NMEA specification indicates that the GGA message is GPS specific. However, when the receiver is configured for multi-GNSS, the GGA message contents will be generated from the multi-GNSS solution. For multi-GNSS use, it is recommended that the <a href="#">NMEA-GNS</a> message is used instead.</b></p> <p>Time and position, together with GPS fixing related data (number of satellites in use, and the resulting HDOP, age of differential data if in use, etc.).</p>		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x00	17	

Message Structure:

```
$xxGGA,time,lat,NS,long,EW,quality,numSV,HDOP,alt,M,sep,M,diffAge,diffStation*cs<CR><LF>
```

Example:

```
$GPGGA,092725.00,4717.11399,N,00833.91590,E,1,08,1.01,499.6,M,48.0,M,,*5B
```

## GGA continued

Field No.	Name	Unit	Format	Example	Description
0	xxGGA	-	string	\$GPGGA	GGA Message ID (xx = current Talker ID)
1	time	-	hhmmss.ss	092725.00	UTC time, see <a href="#">note on UTC representation</a>
2	lat	-	ddmm. mmmm	4717.11399	Latitude (degrees & minutes), see <a href="#">format description</a>
3	NS	-	character	N	North/South indicator
4	long	-	dddmm. mmmm	00833.91590	Longitude (degrees & minutes), see <a href="#">format description</a>
5	EW	-	character	E	East/West indicator
6	quality	-	digit	1	Quality indicator for position fix, see table below and <a href="#">position fix flags description</a>
7	numSV	-	numeric	08	Number of satellites used (range: 0-12)
8	HDOP	-	numeric	1.01	Horizontal Dilution of Precision
9	alt	m	numeric	499.6	Altitude above mean sea level
10	uAlt	-	character	M	Altitude units: meters (fixed field)
11	sep	m	numeric	48.0	Geoid separation: difference between ellipsoid and mean sea level
12	uSep	-	character	M	Separation units: meters (fixed field)
13	diffAge	s	numeric	-	Age of differential corrections (blank when DGPS is not used)
14	diffStation	-	numeric	-	ID of station providing differential corrections (blank when DGPS is not used)
15	cs	-	hexadecimal	*5B	Checksum
16	<CR><LF>	-	character	-	Carriage return and line feed

## Table Quality Indicator

Quality Indicator	Description, see also <a href="#">position fix flags description</a>
0	No Fix / Invalid
1	Standard GPS (2D/3D)
2	Differential GPS
4	RTK fixed solution
5	RTK float solution
6	Estimated (DR) Fix

## 4.2.5 GLL

### 4.2.5.1 Latitude and longitude, with time of position fix and status

Message	<b>GLL</b>		
Description	<b>Latitude and longitude, with time of position fix and status</b>		
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>		
Type	Output Message		
Comment	<b>The output of this message is dependent on the currently selected datum (default: WGS84)</b> -		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x01	10	

Message Structure:

```
$xxGLL,lat,NS,long,EW,time,status,posMode*cs<CR><LF>
```

Example:

```
$GPGLL,4717.11364,N,00833.91565,E,092321.00,A,A*60
```

Field No.	Name	Unit	Format	Example	Description
0	xxGLL	-	string	\$GPGLL	GLL Message ID (xx = current Talker ID)
1	lat	-	ddmm. mmmm	4717.11364	Latitude (degrees & minutes), see <a href="#">format description</a>
2	NS	-	character	N	North/South indicator
3	long	-	dddmm. mmmm	00833.91565	Longitude (degrees & minutes), see <a href="#">format description</a>
4	EW	-	character	E	East/West indicator
5	time	-	hhmmss.ss	092321.00	UTC time, see <a href="#">note on UTC representation</a>
6	status	-	character	A	V = Data invalid or receiver warning, A = Data valid. See <a href="#">position fix flags description</a> .
7	posMode	-	character	A	Positioning mode, see <a href="#">position fix flags description</a> . NMEA v2.3 and above only
8	cs	-	hexadecimal	*60	Checksum
9	<CR><LF>	-	character	-	Carriage return and line feed



## 4.2.6 GLQ

### 4.2.6.1 Poll a standard message (if the current Talker ID is GL)

Message	<b>GLQ</b>		
Description	<b>Poll a standard message (if the current Talker ID is GL)</b>		
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>		
Type	Input Message		
Comment	Polls a standard NMEA message if the current Talker ID is GL		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x43	4	

Message Structure:

```
$xxGLQ,msgId*cs<CR><LF>
```

Example:

```
$EIGLQ,RMC*3A
```

Field No.	Name	Unit	Format	Example	Description
0	xxGLQ	-	string	\$EIGLQ	GLQ Message ID (xx = Talker ID of the device requesting the poll)
1	msgId	-	string	RMC	Message ID of the message to be polled
2	cs	-	hexadecimal	*3A	Checksum
3	<CR><LF>	-	character	-	Carriage return and line feed

## 4.2.7 GNQ

### 4.2.7.1 Poll a standard message (if the current Talker ID is GN)

Message	<b>GNQ</b>		
Description	<b>Poll a standard message (if the current Talker ID is GN)</b>		
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>		
Type	Input Message		
Comment	Polls a standard NMEA message if the current Talker ID is GN		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x42	4	

Message Structure:

```
$xxGNQ,msgId*cs<CR><LF>
```

Example:

```
$EIGNQ,RMC*3A
```

Field No.	Name	Unit	Format	Example	Description
0	xxGNQ	-	string	\$EIGNQ	GNQ Message ID (xx = Talker ID of the device requesting the poll)
1	msgId	-	string	RMC	Message ID of the message to be polled
2	cs	-	hexadecimal	*3A	Checksum
3	<CR><LF>	-	character	-	Carriage return and line feed

## 4.2.8 GNS

### 4.2.8.1 GNSS fix data

Message	<b>GNS</b>		
Description	<b>GNSS fix data</b>		
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>		
Type	Output Message		
Comment	<b>The output of this message is dependent on the currently selected datum (default: WGS84)</b> Time and position, together with GNSS fixing related data (number of satellites in use, and the resulting HDOP, age of differential data if in use, etc.).		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x0D	16	

Message Structure:

```
$xxGNS,time,lat,NS,long,EW,posMode,numSV,HDOP,alt,altRef,diffAge,diffStation,navStatus*cs<CR><LF>
```

Example:

```
$GPGNS,091547.00,5114.50897,N,00012.28663,W,AA,10,0.83,111.1,45.6,,,V*71
```

Field No.	Name	Unit	Format	Example	Description
0	xxGNS	-	string	\$GPGNS	GNS Message ID (xx = current Talker ID)
1	time	-	hhmmss.ss	091547.00	UTC time, see <a href="#">note on UTC representation</a>
2	lat	-	ddmm. mmmm	5114.50897	Latitude (degrees & minutes), see <a href="#">format description</a>
3	NS	-	character	N	North/South indicator
4	long	-	dddmm. mmmm	00012.28663	Longitude (degrees & minutes), see <a href="#">format description</a>
5	EW	-	character	E	East/West indicator
6	posMode	-	character	AA	Positioning mode, see <a href="#">position fix flags description</a> . First character for GPS, second character for GLONASS
7	numSV	-	numeric	10	Number of satellites used (range: 0-99)
8	HDOP	-	numeric	0.83	Horizontal Dilution of Precision
9	alt	m	numeric	111.1	Altitude above mean sea level
10	sep	m	numeric	45.6	Geoid separation: difference between ellipsoid and mean sea level
11	diffAge	s	numeric	-	Age of differential corrections (blank when DGPS is not used)
12	diffStation	-	numeric	-	ID of station providing differential corrections (blank when DGPS is not used)
13	navStatus	-	character	V	Navigational status indicator (V = Equipment is not providing navigational status information) <b>NMEA v4.1 and above only</b>
14	cs	-	hexadecimal	*71	Checksum
15	<CR><LF>	-	character	-	Carriage return and line feed

## 4.2.9 GPQ

### 4.2.9.1 Poll a standard message (if the current Talker ID is GP)

Message	<b>GPQ</b>		
Description	<b>Poll a standard message (if the current Talker ID is GP)</b>		
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>		
Type	Input Message		
Comment	Polls a standard NMEA message if the current Talker ID is GP		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x40	4	

Message Structure:

```
$xxGPQ,msgId*cs<CR><LF>
```

Example:

```
$EIGPQ,RMC*3A
```

Field No.	Name	Unit	Format	Example	Description
0	xxGPQ	-	string	\$EIGPQ	GPQ Message ID (xx = Talker ID of the device requesting the poll)
1	msgId	-	string	RMC	Message ID of the message to be polled
2	cs	-	hexadecimal	*3A	Checksum
3	<CR><LF>	-	character	-	Carriage return and line feed

## 4.2.10 GRS

### 4.2.10.1 GNSS Range Residuals

Message	<b>GRS</b>		
Description	<b>GNSS Range Residuals</b>		
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>		
Type	Output Message		
Comment	<b>This messages relates to associated <a href="#">GGA</a> and <a href="#">GSA</a> messages.</b> If less than 12 SVs are available, the remaining fields are output empty. If more than 12 SVs are used, only the residuals of the first 12 SVs are output, in order to remain consistent with the NMEA standard. <b>In a multi-GNSS system this message will be output multiple times, once for each GNSS.</b>		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x06	19	

Message Structure:

```
$xxGRS,time, mode {,residual},systemId,signalId*cs<CR><LF>
```

Example:

```
$GPGRS,082632.00,1,0.54,0.83,1.00,1.02,-2.12,2.64,-0.71,-1.18,0.25,,1,0*70
```

Field No.	Name	Unit	Format	Example	Description
0	xxGRS	-	string	\$GPGRS	GRS Message ID (xx = current Talker ID)

GRS continued

Field No.	Name	Unit	Format	Example	Description
1	time	-	hhmmss.ss	082632.00	UTC time of associated position fix, see <a href="#">note on UTC representation</a>
2	mode	-	digit	1	Mode (see table below), u-blox receivers will always output Mode 1 residuals
Start of repeated block (12 times)					
3 + 1*N	residual	m	numeric	0.54	Range residuals for SVs used in navigation. The SV order matches the order from the <a href="#">GSA</a> sentence.
End of repeated block					
15	systemId	-	numeric	1	NMEA defined GNSS System ID <b>NMEA v4.1 and above only</b>
16	signalId	-	numeric	0	NMEA defined GNSS Signal ID (0 = All signals, see <a href="#">Signal Identifiers table</a> for other values) <b>NMEA v4.1 and above only</b>
17	cs	-	hexadecimal	*70	Checksum
18	<CR><LF>	-	character	-	Carriage return and line feed

## Table Mode

Mode	Description
0	Residuals were used to calculate the position given in the matching <a href="#">GGA</a> sentence.
1	Residuals were recomputed after the <a href="#">GGA</a> position was computed.

## 4.2.11 GSA

### 4.2.11.1 GNSS DOP and Active Satellites

Message	<b>GSA</b>		
Description	<b>GNSS DOP and Active Satellites</b>		
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>		
Type	Output Message		
Comment	The GNSS receiver operating mode, satellites used for navigation, and DOP values. <ul style="list-style-type: none"> <li>If less than 12 SVs are used for navigation, the remaining fields are left empty. If more than 12 SVs are used for navigation, only the IDs of the first 12 are output.</li> <li>The SV numbers (fields 'sv') are in the range of 1 to 32 for GPS satellites, and 33 to 64 for SBAS satellites (33 = SBAS PRN 120, 34 = SBAS PRN 121, and so on)</li> </ul> <b>In a multi-GNSS system this message will be output multiple times, once for each GNSS.</b>		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x02	21	

Message Structure:

```
$xxGSA,opMode,navMode{,sv},PDOP,HDOP,VDOP,systemId*cs<CR><LF>
```

Example:

```
$GPGSA,A,3,23,29,07,08,09,18,26,28,,,,,1.94,1.18,1.54,1*0D
```

Field No.	Name	Unit	Format	Example	Description
-----------	------	------	--------	---------	-------------

GSA continued

Field No.	Name	Unit	Format	Example	Description
0	xxGSA	-	string	\$GPGSA	GSA Message ID (xx = current Talker ID)
1	opMode	-	character	A	Operation mode, see first table below
2	navMode	-	digit	3	Navigation mode, see second table below and <a href="#">position fix flags description</a>
Start of repeated block (12 times)					
3 + 1*N	sv	-	numeric	29	Satellite number
End of repeated block					
15	PDOP	-	numeric	1.94	Position dilution of precision
16	HDOP	-	numeric	1.18	Horizontal dilution of precision
17	VDOP	-	numeric	1.54	Vertical dilution of precision
18	systemId	-	numeric	1	NMEA defined GNSS System ID <b>NMEA v4.1 and above only</b>
19	cs	-	hexadecimal	*0D	Checksum
20	<CR><LF>	-	character	-	Carriage return and line feed

## Table Operation Mode

Operation Mode	Description
M	Manually set to operate in 2D or 3D mode
A	Automatically switching between 2D or 3D mode

## Table Navigation Mode

Navigation Mode	Description, see also <a href="#">position fix flags description</a>
1	Fix not available
2	2D Fix
3	3D Fix

### 4.2.12 GST

#### 4.2.12.1 GNSS Pseudo Range Error Statistics

Message	<b>GST</b>		
Description	<b>GNSS Pseudo Range Error Statistics</b>		
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>		
Type	Output Message		
Comment	This message reports statistical information on the quality of the position solution.		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x07	11	

Message Structure:

```
$xxGST,time,rangeRms,stdMajor,stdMinor,orient,stdLat,stdLong,stdAlt*cs<CR><LF>
```

Example:

```
$GPGST,082356.00,1.8,,,,1.7,1.3,2.2*7E
```

Field No.	Name	Unit	Format	Example	Description
-----------	------	------	--------	---------	-------------

GST continued

Field No.	Name	Unit	Format	Example	Description
0	xxGST	-	string	\$GPGST	GST Message ID (xx = current Talker ID)
1	time	-	hhmmss.ss	082356.00	UTC time of associated position fix, see <a href="#">note on UTC representation</a>
2	rangeRms	m	numeric	1.8	RMS value of the standard deviation of the ranges
3	stdMajor	m	numeric	-	Standard deviation of semi-major axis (only supported in ADR 4.10 and above)
4	stdMinor	m	numeric	-	Standard deviation of semi-minor axis (only supported in ADR 4.10 and above)
5	orient	deg	numeric	-	Orientation of semi-major axis (only supported in ADR 4.10 and above)
6	stdLat	m	numeric	1.7	Standard deviation of latitude error
7	stdLong	m	numeric	1.3	Standard deviation of longitude error
8	stdAlt	m	numeric	2.2	Standard deviation of altitude error
9	cs	-	hexadecimal	*7E	Checksum
10	<CR><LF>	-	character	-	Carriage return and line feed

## 4.2.13 GSV

### 4.2.13.1 GNSS Satellites in View

Message	<b>GSV</b>		
Description	<b>GNSS Satellites in View</b>		
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>		
Type	Output Message		
Comment	The number of satellites in view, together with each SV ID, elevation azimuth, and signal strength (C/No) value. Only four satellite details are transmitted in one message. <b>In a multi-GNSS system sets of GSV messages will be output multiple times, one set for each GNSS.</b>		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x03	8..16	

Message Structure:

```
$xxGSV,numMsg,msgNum,numSV,{,sv,elv,az,cno},signalId*cs<CR><LF>
```

Example:

```
$GPGSV,3,1,10,23,38,230,44,29,71,156,47,07,29,116,41,08,09,081,36,0*7F
```

```
$GPGSV,3,2,10,10,07,189,,05,05,220,,09,34,274,42,18,25,309,44,0*72
```

```
$GPGSV,3,3,10,26,82,187,47,28,43,056,46,0*77
```

Field No.	Name	Unit	Format	Example	Description
0	xxGSV	-	string	\$GPGSV	GSV Message ID (xx = GSV Talker ID)
1	numMsg	-	digit	3	Number of messages, total number of GSV messages being output
2	msgNum	-	digit	1	Number of this message
3	numSV	-	numeric	10	Number of satellites in view

GSV continued

Field No.	Name	Unit	Format	Example	Description
Start of repeated block (1..4 times)					
4 + 4*N	sv	-	numeric	23	Satellite ID
5 + 4*N	elv	deg	numeric	38	Elevation (range 0-90)
6 + 4*N	az	deg	numeric	230	Azimuth, (range 0-359)
7 + 4*N	cno	dBH z	numeric	44	Signal strength (C/N0, range 0-99), blank when not tracking
End of repeated block					
5.. 16	signalId	-	numeric	0	NMEA defined GNSS Signal ID (0 = All signals, see <a href="#">Signal Identifiers table</a> for other values) <b>NMEA v4.1 and above only</b>
6.. 16	cs	-	hexadecimal	*7F	Checksum
7.. 16	<CR><LF>	-	character	-	Carriage return and line feed

## 4.2.14 RMC

### 4.2.14.1 Recommended Minimum data

Message	<b>RMC</b>		
Description	<b>Recommended Minimum data</b>		
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>		
Type	Output Message		
Comment	<b>The output of this message is dependent on the currently selected datum (default: WGS84)</b> The recommended minimum sentence defined by NMEA for GNSS system data.		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x04	16	

Message Structure:

```
$xxRMC,time,status,lat,NS,long,EW,spd,cog,date,mv,mvEW,posMode,navStatus*cs<CR><LF>
```

Example:

```
$GPRMC,083559.00,A,4717.11437,N,00833.91522,E,0.004,77.52,091202,,A,V*57
```

Field No.	Name	Unit	Format	Example	Description
0	xxRMC	-	string	\$GPRMC	RMC Message ID (xx = current Talker ID)
1	time	-	hhmmss.ss	083559.00	UTC time, see <a href="#">note on UTC representation</a>
2	status	-	character	A	Status, V = Navigation receiver warning, A = Data valid, see <a href="#">position fix flags description</a>
3	lat	-	ddmm. mmmm	4717.11437	Latitude (degrees & minutes), see <a href="#">format description</a>

RMC continued

Field No.	Name	Unit	Format	Example	Description
4	NS	-	character	N	North/South indicator
5	long	-	dddm. mmmm	00833.91522	Longitude (degrees & minutes), see <a href="#">format description</a>
6	EW	-	character	E	East/West indicator
7	spd	knot s	numeric	0.004	Speed over ground
8	cog	degr ees	numeric	77.52	Course over ground
9	date	-	ddmmyy	091202	Date in day, month, year format, see <a href="#">note on UTC representation</a>
10	mv	degr ees	numeric	-	Magnetic variation value. Only supported in ADR 4.10 and above.
11	mvEW	-	character	-	Magnetic variation E/W indicator. Only supported in ADR 4.10 and above.
12	posMode	-	character	A	Mode Indicator, see <a href="#">position fix flags description</a> <b>NMEA v2.3 and above only</b>
13	navStatu s	-	character	V	Navigational status indicator (V = Equipment is not providing navigational status information) <b>NMEA v4.1 and above only</b>
14	cs	-	hexadecimal	*57	Checksum
15	<CR><LF>	-	character	-	Carriage return and line feed

## 4.2.15 TXT

### 4.2.15.1 Text Transmission

Message	<b>TXT</b>		
Description	<b>Text Transmission</b>		
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>		
Type	Output Message		
Comment	<b>This message is not configured through UBX-CFG-MSG, but instead through <a href="#">UBX-CFG-INF</a>.</b> This message outputs various information on the receiver, such as power-up screen, software version etc. This message can be configured using UBX Protocol message <a href="#">UBX-CFG-INF</a> .		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x41	7	

Message Structure:

```
$xxTXT,numMsg,msgNum,msgType,text*cs<CR><LF>
```

Example:

```
$GPTXT,01,01,02,u-blox ag - www.u-blox.com*50
```

```
$GPTXT,01,01,02,ANTARIS ATR0620 HW 00000040*67
```



TXT continued

Field No.	Name	Unit	Format	Example	Description
0	xxTXT	-	string	\$GPTXT	TXT Message ID (xx = current Talker ID)
1	numMsg	-	numeric	01	Total number of messages in this transmission, 01..99
2	msgNum	-	numeric	01	Message number in this transmission, range 01..xx
3	msgType	-	numeric	02	Text identifier, u-blox receivers specify the type of the message with this number. 00: Error 01: Warning 02: Notice 07: User
4	text	-	string	www.u-blox.com	Any ASCII text
5	cs	-	hexadecimal	*67	Checksum
6	<CR><LF>	-	character	-	Carriage return and line feed

## 4.2.16 VLW

### 4.2.16.1 Dual ground/water distance

Message	<b>VLW</b>		
Description	<b>Dual ground/water distance</b>		
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>		
Type	Output Message		
Comment	The distance traveled, relative to the water and over the ground. This message relates to the <a href="#">Odometer</a> functionality.		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x0F	11	

Message Structure:

```
$xxVLW,twd,twdUnit,wd,wdUnit,tgd,tgdUnit,gd,gdUnit*cs<CR><LF>
```

Example:

```
$GPVLW,,N,,N,15.8,N,1.2,N*06
```

Field No.	Name	Unit	Format	Example	Description
0	xxVLW	-	string	\$GPVLW	VLW Message ID (xx = current Talker ID)
1	twd	nm	numeric	-	Total cumulative water distance, not output
2	twdUnit	-	character	N	Fixed field: nautical miles
3	wd	nm	numeric	-	Water distance since reset, not output
4	wdUnit	-	character	N	Fixed field: nautical miles
5	tgd	nm	numeric	15.8	Total cumulative ground distance
6	tgdUnit	-	character	N	Fixed field: nautical miles
7	gd	nm	numeric	1.2	Ground distance since reset
8	gdUnit	-	character	N	Fixed field: nautical miles

VLW continued

Field No.	Name	Unit	Format	Example	Description
9	cs	-	hexadecimal	*06	Checksum
10	<CR><LF>	-	character	-	Carriage return and line feed

## 4.2.17 VTG

### 4.2.17.1 Course over ground and Ground speed

Message	<b>VTG</b>		
Description	<b>Course over ground and Ground speed</b>		
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>		
Type	Output Message		
Comment	Velocity is given as Course over Ground (COG) and Speed over Ground (SOG).		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x05	12	

Message Structure:

```
$xxVTG,cogt,T,cogm,M,knots,N,kph,K,posMode*cs<CR><LF>
```

Example:

```
$GPVTG,77.52,T,,M,0.004,N,0.008,K,A*06
```

Field No.	Name	Unit	Format	Example	Description
0	xxVTG	-	string	\$GPVTG	VTG Message ID (xx = current Talker ID)
1	cogt	degrees	numeric	77.52	Course over ground (true)
2	T	-	character	T	Fixed field: true
3	cogm	degrees	numeric	-	Course over ground (magnetic). Only supported in ADR 4.10 and above.
4	M	-	character	M	Fixed field: magnetic
5	knots	knots	numeric	0.004	Speed over ground
6	N	-	character	N	Fixed field: knots
7	kph	km/h	numeric	0.008	Speed over ground
8	K	-	character	K	Fixed field: kilometers per hour
9	posMode	-	character	A	Mode Indicator, see <a href="#">position fix flags description</a> <b>NMEA v2.3 and above only</b>
10	cs	-	hexadecimal	*06	Checksum
11	<CR><LF>	-	character	-	Carriage return and line feed

## 4.2.18 ZDA

### 4.2.18.1 Time and Date

Message	<b>ZDA</b>		
Description	<b>Time and Date</b>		
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>		
Type	Output Message		
Comment	-		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x08	9	

Message Structure:

```
$xxZDA,hhmmss.ss,day,month,year,ltzh,ltzn*cs<CR><LF>
```

Example:

```
$GPZDA,082710.00,16,09,2002,00,00*64
```

Field No.	Name	Unit	Format	Example	Description
0	xxZDA	-	string	\$GPZDA	ZDA Message ID (xx = current Talker ID)
1	time	-	hhmmss.ss	082710.00	UTC Time, see <a href="#">note on UTC representation</a>
2	day	day	dd	16	UTC day (range: 1-31)
3	month	month	mm	09	UTC month (range: 1-12)
4	year	year	yyyy	2002	UTC year
5	ltzh	-	-xx	00	Local time zone hours (fixed to 00)
6	ltzn	-	zz	00	Local time zone minutes (fixed to 00)
7	cs	-	hexadecimal	*64	Checksum
8	<CR><LF>	-	character	-	Carriage return and line feed

## 5 UBX Protocol


### 5.1 UBX Protocol Key Features

u-blox receivers support a u-blox proprietary protocol to communicate with a host computer. This protocol has the following key features:

- Compact - uses 8-bit Binary Data.
- Checksum Protected - uses a low-overhead checksum algorithm
- Modular - uses a 2-stage message identifier (Class and Message ID)

### 5.2 UBX Frame Structure

The structure of a basic UBX Frame is shown in the following diagram.

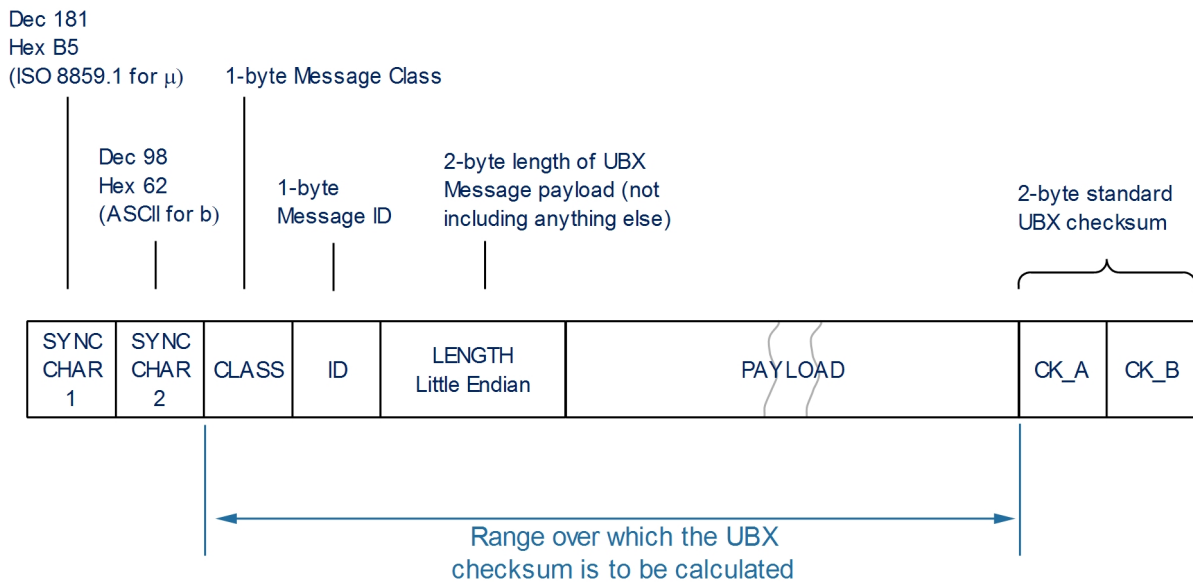

- Every **Frame** starts with a 2-byte Preamble consisting of two synchronization characters: 0xB5 0x62.
- A 1-byte **Message Class** field follows. A Class is a group of messages that are related to each other.
- A 1-byte **Message ID** field defines the message that is to follow.
- A 2-byte **Length** field follows. The length is defined as being that of the payload only. It does not include the Preamble, Message Class, Message ID, Length, or CRC fields. The number format of the length field is a Little-Endian unsigned 16-bit integer.
- The **Payload** field contains a variable number of bytes.
- The two 1-byte **CK\_A** and **CK\_B** fields hold a 16-bit checksum whose calculation is defined below. This concludes the Frame.

## 5.3 UBX Payload Definition Rules

### 5.3.1 Structure Packing

Values are placed in an order that structure packing is not a problem. This means that 2-byte values shall start on offsets which are a multiple of 2; 4-byte values shall start at a multiple of 4; and so on.

### 5.3.2 Reserved Elements

Some messages contain reserved fields or bits to allow for future expansion. The contents of these elements should be ignored in output messages and must be set to zero in input messages. Where a message is output and subsequently returned to the receiver as input message, reserved elements can either be explicitly set to zero or left with whatever value they were output with.

### 5.3.3 Undefined Values

The description of some fields provide specific meanings for specific values. For example, the field `gnssId` appears in many UBX messages and uses 0 to indicate GPS, 1 for SBAS and so on (see [Satellite Numbering](#) for details); however it is usually stored in a byte with far more possible values than the handful currently defined. All such undefined values are reserved for future expansion and therefore should not be used.

### 5.3.4 Message Naming

Referring to messages is done by adding the class name and a dash in front of the message name. For example, the version information message is referred to as `UBX-MON-VER`. Referring to message fields or their values is done by adding a dot and the name, e.g. `UBX-MON-VER.swVersion`.

### 5.3.5 Number Formats

All multi-byte values are ordered in Little Endian format, unless otherwise indicated.


All floating point values are transmitted in IEEE754 single or double precision.

#### Variable Type Definitions

Short	Type	Size (Bytes)	Comment	Min/Max	Resolution
U1	Unsigned Char	1		0..255	1
RU1_3	Unsigned Char	1	binary floating point with 3 bit exponent, eeeb bbbb, (Value & 0x1F) << (Value >> 5)	0..(31*2 <sup>7</sup> ) non-continuous	~ 2 <sup>^(Value &gt;&gt; 5)</sup>
I1	Signed Char	1	2's complement	-128 .. 127	1
X1	Bitfield	1		n/a	n/a
U2	Unsigned Short	2		0 .. 65535	1
I2	Signed Short	2	2's complement	-32768 .. 32767	1
X2	Bitfield	2		n/a	n/a
U4	Unsigned Long	4		0 .. 4'294'967'295	1
I4	Signed Long	4	2's complement	-2'147'483'648 .. 2'147'483'647	1
X4	Bitfield	4		n/a	n/a
R4	IEEE 754 Single Precision	4		-1*2 <sup>+127</sup> .. 2 <sup>+127</sup>	~ Value * 2 <sup>-24</sup>
R8	IEEE 754 Double Precision	8		-1*2 <sup>+1023</sup> .. 2 <sup>+1023</sup>	~ Value * 2 <sup>-53</sup>
CH	ASCII / ISO 8859.1 Encoding	1			

### 5.4 UBX Checksum

The checksum is calculated over the Message, starting and including the CLASS field, up until, but excluding, the Checksum Field:

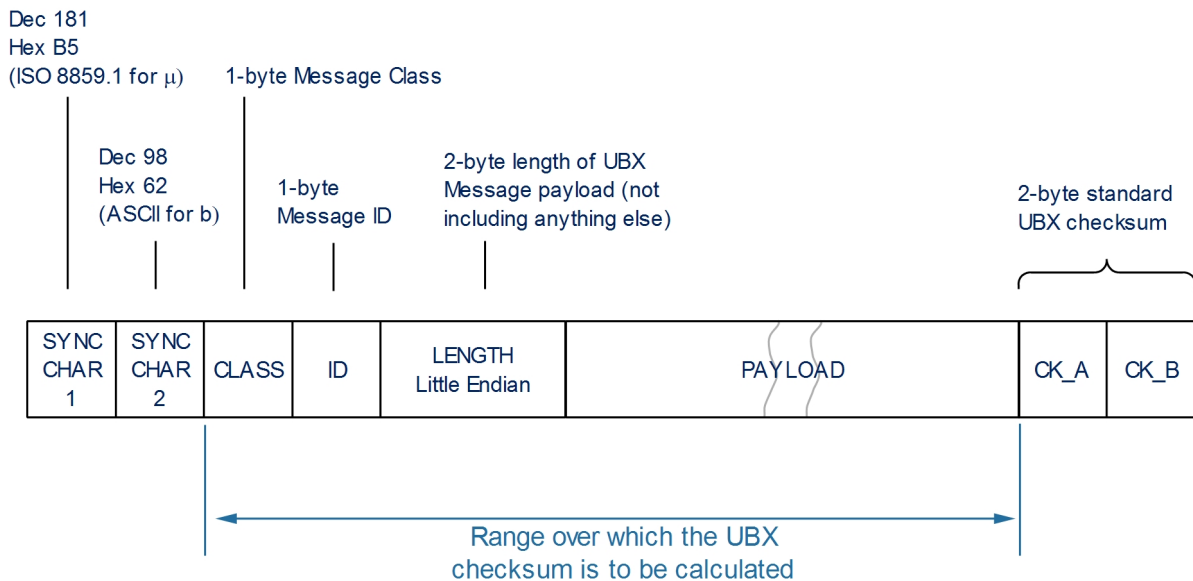

The checksum algorithm used is the 8-Bit Fletcher Algorithm, which is used in the TCP standard (RFC 1145). This algorithm works as follows:

- Buffer[N] contains the data over which the checksum is to be calculated.
- The two CK\_ values are 8-Bit unsigned integers, only! If implementing with larger-sized integer values, make sure to mask both CK\_A and CK\_B with 0xFF after both operations in the loop.

```
CK_A = 0, CK_B = 0
For (I=0; I<N; I++)
{
    CK_A = CK_A + Buffer[I]
    CK_B = CK_B + CK_A
}
```

- After the loop, the two U1 values contain the checksum, transmitted after the Message, which conclude the Frame.

## 5.5 UBX Message Flow

There are certain features associated with the messages being sent back and forth:

### 5.5.1 Acknowledgement

When messages from the class CFG are sent to the receiver, the receiver will send an "acknowledge" ([UBX-ACK-ACK](#)) or a "not acknowledge" ([UBX-ACK-NAK](#)) message back to the sender, depending on whether or not the message was processed correctly.

Some messages from other classes (e.g. LOG) also use the same acknowledgement mechanism.

### 5.5.2 Polling Mechanism

All messages that are output by the receiver in a periodic manner (i.e. messages in classes MON, NAV and RXM) and Get/Set type messages, such as the configuration messages in the CFG class, can also be polled.

The UBX protocol is designed so that messages can be polled by sending the message required to the receiver but without a payload (or with just a single parameter that identifies the poll request). The receiver then

responds with the same message with the payload populated.

## 5.6 UBX Class IDs

A class is a grouping of messages which are related to each other. The following table lists all the current message classes.

Name	Class	Description
NAV	0x01	Navigation Results Messages: Position, Speed, Time, Acceleration, Heading, DOP, SVs used
RXM	0x02	Receiver Manager Messages: Satellite Status, RTC Status
INF	0x04	Information Messages: Printf-Style Messages, with IDs such as Error, Warning, Notice
ACK	0x05	Ack/Nak Messages: Acknowledge or Reject messages to UBX-CFG input messages
CFG	0x06	Configuration Input Messages: Set Dynamic Model, Set DOP Mask, Set Baud Rate, etc.
UPD	0x09	Firmware Update Messages: Memory/Flash erase/write, Reboot, Flash identification, etc.
MON	0x0A	Monitoring Messages: Communication Status, CPU Load, Stack Usage, Task Status
TIM	0x0D	Timing Messages: Time Pulse Output, Time Mark Results
MGA	0x13	Multiple GNSS Assistance Messages: Assistance data for various GNSS
LOG	0x21	Logging Messages: Log creation, deletion, info and retrieval
SEC	0x27	Security Feature Messages

**All remaining class IDs are reserved.**

## 5.7 UBX Messages Overview

Page	Mnemonic	Cls/ID	Length	Type	Description
<b>UBX Class ACK</b>				<b>Ack/Nak Messages</b>	
37	<b>ACK-ACK</b>	0x05 0x01	2	Output	Message Acknowledged
37	<b>ACK-NAK</b>	0x05 0x00	2	Output	Message Not-Acknowledged
<b>UBX Class CFG</b>				<b>Configuration Input Messages</b>	
38	<b>CFG-ANT</b>	0x06 0x13	4	Get/Set	Antenna Control Settings
39	<b>CFG-CFG</b>	0x06 0x09	(12) or (13)	Command	Clear, Save and Load configurations
41	<b>CFG-DAT</b>	0x06 0x06	44	Set	Set User-defined Datum.
42	<b>CFG-DAT</b>	0x06 0x06	52	Get	The currently defined Datum
43	<b>CFG-DGNSS</b>	0x06 0x70	4	Get/Set	DGNSS configuration
44	<b>CFG-DYNSEED</b>	0x06 0x85	12	Set	Programming the dynamic seed for the host...
44	<b>CFG-FIXSEED</b>	0x06 0x84	12 + 2*length	Set	Programming the fixed seed for host...
45	<b>CFG-GEOFENCE</b>	0x06 0x69	8 + 12*numFe...	Get/Set	Geofencing configuration
46	<b>CFG-GNSS</b>	0x06 0x3E	4 + 8*numCo...	Get/Set	GNSS system configuration
48	<b>CFG-INF</b>	0x06 0x02	1	Poll Request	Poll configuration for one protocol
49	<b>CFG-INF</b>	0x06 0x02	0 + 10*N	Get/Set	Information message configuration
50	<b>CFG-ITFM</b>	0x06 0x39	8	Get/Set	Jamming/Interference Monitor configuration
51	<b>CFG-LOGFILTER</b>	0x06 0x47	12	Get/Set	Data Logger Configuration
53	<b>CFG-MSG</b>	0x06 0x01	2	Poll Request	Poll a message configuration
53	<b>CFG-MSG</b>	0x06 0x01	8	Get/Set	Set Message Rate(s)
54	<b>CFG-MSG</b>	0x06 0x01	3	Get/Set	Set Message Rate
54	<b>CFG-NAV5</b>	0x06 0x24	36	Get/Set	Navigation Engine Settings
56	<b>CFG-NAVX5</b>	0x06 0x23	40	Get/Set	Navigation Engine Expert Settings
59	<b>CFG-NMEA</b>	0x06 0x17	20	Get/Set	Extended NMEA protocol configuration V1
62	<b>CFG-ODO</b>	0x06 0x1E	20	Get/Set	Odometer, Low-speed COG Engine Settings
63	<b>CFG-PRT</b>	0x06 0x00	1	Poll Request	Polls the configuration for one I/O Port
64	<b>CFG-PRT</b>	0x06 0x00	20	Get/Set	Port Configuration for UART
67	<b>CFG-PRT</b>	0x06 0x00	20	Get/Set	Port Configuration for USB Port
69	<b>CFG-PRT</b>	0x06 0x00	20	Get/Set	Port Configuration for SPI Port
71	<b>CFG-PRT</b>	0x06 0x00	20	Get/Set	Port Configuration for DDC Port
74	<b>CFG-PWR</b>	0x06 0x57	8	Set	Put receiver in a defined power state.
74	<b>CFG-RATE</b>	0x06 0x08	6	Get/Set	Navigation/Masurement Rate Settings
75	<b>CFG-RINV</b>	0x06 0x34	1 + 1*N	Get/Set	Contents of Remote Inventory
76	<b>CFG-RST</b>	0x06 0x04	4	Command	Reset Receiver / Clear Backup Data Structures
77	<b>CFG-TMODE3</b>	0x06 0x71	40	Get/Set	Time Mode Settings 3
79	<b>CFG-TP5</b>	0x06 0x31	32	Get/Set	Time Pulse Parameters
81	<b>CFG-USB</b>	0x06 0x1B	108	Get/Set	USB Configuration
82	<b>CFG-VALDEL</b>	0x06 0x8C	4 + 4*N	Set	Deletes values corresponding to provided keys



## UBX Messages Overview continued

Page	Mnemonic	Cls/ID	Length	Type	Description
83	<b>CFG-VALDEL</b>	0x06 0x8C	4 + 4*N	Set	Deletes values corresponding to provided...
85	<b>CFG-VALGET</b>	0x06 0x8B	4 + 4*N	Poll Request	Get Configuration Items
86	<b>CFG-VALGET</b>	0x06 0x8B	4 + 1*N	polled	Configuration Items
86	<b>CFG-VALSET</b>	0x06 0x8A	4 + 1*N	Set	Sets values corresponding to provided...
87	<b>CFG-VALSET</b>	0x06 0x8A	4 + 1*N	Set	Sets values corresponding to provided...
<b>UBX Class INF</b>				<b>Information Messages</b>	
90	<b>INF-DEBUG</b>	0x04 0x04	0 + 1*N	Output	ASCII output with debug contents
90	<b>INF-ERROR</b>	0x04 0x00	0 + 1*N	Output	ASCII output with error contents
91	<b>INF-NOTICE</b>	0x04 0x02	0 + 1*N	Output	ASCII output with informational contents
91	<b>INF-TEST</b>	0x04 0x03	0 + 1*N	Output	ASCII output with test contents
92	<b>INF-WARNING</b>	0x04 0x01	0 + 1*N	Output	ASCII output with warning contents
<b>UBX Class LOG</b>				<b>Logging Messages</b>	
93	<b>LOG-CREATE</b>	0x21 0x07	8	Command	Create Log File
94	<b>LOG-ERASE</b>	0x21 0x03	0	Command	Erase Logged Data
94	<b>LOG-FINDTIME</b>	0x21 0x0E	12	Input	Find index of a log entry based on a given time
95	<b>LOG-FINDTIME</b>	0x21 0x0E	8	Output	Response to FINDTIME request
95	<b>LOG-INFO</b>	0x21 0x08	0	Poll Request	Poll for log information
96	<b>LOG-INFO</b>	0x21 0x08	48	Output	Log information
97	<b>LOG-RETRIEVEPOSE...</b>	0x21 0x0f	32	Output	Odometer log entry
98	<b>LOG-RETRIEVEPOS</b>	0x21 0x0b	40	Output	Position fix log entry
99	<b>LOG-RETRIEVESTRING</b>	0x21 0x0d	16 + 1*byteC...	Output	Byte string log entry
99	<b>LOG-RETRIEVE</b>	0x21 0x09	12	Command	Request log data
100	<b>LOG-STRING</b>	0x21 0x04	0 + 1*N	Command	Store arbitrary string in on-board flash
<b>UBX Class MGA</b>				<b>Multiple GNSS Assistance Messages</b>	
101	<b>MGA-ACK-DATA0</b>	0x13 0x60	8	Output	Multiple GNSS Acknowledge message
102	<b>MGA-BDS-EPH</b>	0x13 0x03	88	Input	BDS Ephemeris Assistance
103	<b>MGA-BDS-ALM</b>	0x13 0x03	40	Input	BDS Almanac Assistance
104	<b>MGA-BDS-HEALTH</b>	0x13 0x03	68	Input	BDS Health Assistance
104	<b>MGA-BDS-UTC</b>	0x13 0x03	20	Input	BDS UTC Assistance
105	<b>MGA-BDS-IONO</b>	0x13 0x03	16	Input	BDS Ionospheric Assistance
106	<b>MGA-DBD</b>	0x13 0x80	0	Poll Request	Poll the Navigation Database
106	<b>MGA-DBD</b>	0x13 0x80	12 + 1*N	Input/Output	Navigation Database Dump Entry
107	<b>MGA-GAL-EPH</b>	0x13 0x02	76	Input	Galileo Ephemeris Assistance
108	<b>MGA-GAL-ALM</b>	0x13 0x02	32	Input	Galileo Almanac Assistance
109	<b>MGA-GAL-TIMEOFF...</b>	0x13 0x02	12	Input	Galileo GPS time offset assistance
110	<b>MGA-GAL-UTC</b>	0x13 0x02	20	Input	Galileo UTC Assistance
110	<b>MGA-GLO-EPH</b>	0x13 0x06	48	Input	GLONASS Ephemeris Assistance
112	<b>MGA-GLO-ALM</b>	0x13 0x06	36	Input	GLONASS Almanac Assistance

## UBX Messages Overview continued

Page	Mnemonic	Cls/ID	Length	Type	Description
113	<b>MGA-GLO-TIMEOFF...</b>	0x13 0x06	20	Input	GLONASS Auxiliary Time Offset Assistance
113	<b>MGA-GPS-EPH</b>	0x13 0x00	68	Input	GPS Ephemeris Assistance
115	<b>MGA-GPS-ALM</b>	0x13 0x00	36	Input	GPS Almanac Assistance
116	<b>MGA-GPS-HEALTH</b>	0x13 0x00	40	Input	GPS Health Assistance
116	<b>MGA-GPS-UTC</b>	0x13 0x00	20	Input	GPS UTC Assistance
117	<b>MGA-GPS-IONO</b>	0x13 0x00	16	Input	GPS Ionosphere Assistance
118	<b>MGA-INI-POS_XYZ</b>	0x13 0x40	20	Input	Initial Position Assistance
118	<b>MGA-INI-POS_LLH</b>	0x13 0x40	20	Input	Initial Position Assistance
119	<b>MGA-INI-TIME_UTC</b>	0x13 0x40	24	Input	Initial Time Assistance
120	<b>MGA-INI-TIME_GNSS</b>	0x13 0x40	24	Input	Initial Time Assistance
121	<b>MGA-INI-CLKD</b>	0x13 0x40	12	Input	Initial Clock Drift Assistance
122	<b>MGA-INI-FREQ</b>	0x13 0x40	12	Input	Initial Frequency Assistance
123	<b>MGA-INI-EOP</b>	0x13 0x40	72	Input	Earth Orientation Parameters Assistance
123	<b>MGA-QZSS-EPH</b>	0x13 0x05	68	Input	QZSS Ephemeris Assistance
125	<b>MGA-QZSS-ALM</b>	0x13 0x05	36	Input	QZSS Almanac Assistance
126	<b>MGA-QZSS-HEALTH</b>	0x13 0x05	12	Input	QZSS Health Assistance
<b>UBX Class MON</b>				<b>Monitoring Messages</b>	
127	<b>MON-COMMS</b>	0x0A 0x36	8 + 40*nPorts	Periodic/Polled	Comm port information
128	<b>MON-GNSS</b>	0x0A 0x28	8	Polled	Information message major GNSS selection
130	<b>MON-HW2</b>	0x0A 0x0B	28	Periodic/Polled	Extended Hardware Status
131	<b>MON-HW3</b>	0x0A 0x37	22 + 6*nPins	Periodic/Polled	HW I/O pin information
132	<b>MON-HW</b>	0x0A 0x09	60	Periodic/Polled	Hardware Status
134	<b>MON-IO</b>	0x0A 0x02	0 + 20*N	Periodic/Polled	I/O Subsystem Status
134	<b>MON-MSGPP</b>	0x0A 0x06	120	Periodic/Polled	Message Parse and Process Status
135	<b>MON-PATCH</b>	0x0A 0x27	4 + 16*nEntries	Polled	Output information about installed patches.
136	<b>MON-RF</b>	0x0A 0x38	4 + 24*nBlocks	Periodic/Polled	RF information
137	<b>MON-RXBUF</b>	0x0A 0x07	24	Periodic/Polled	Receiver Buffer Status
138	<b>MON-RXR</b>	0x0A 0x21	1	Output	Receiver Status Information
138	<b>MON-TXBUF</b>	0x0A 0x08	28	Periodic/Polled	Transmitter Buffer Status
139	<b>MON-VER</b>	0x0A 0x04	40 + 30*N	Polled	Receiver/Software Version
<b>UBX Class NAV</b>				<b>Navigation Results Messages</b>	
141	<b>NAV-CLOCK</b>	0x01 0x22	20	Periodic/Polled	Clock Solution
141	<b>NAV-DOP</b>	0x01 0x04	18	Periodic/Polled	Dilution of precision
142	<b>NAV-EOE</b>	0x01 0x61	4	Periodic	End Of Epoch
142	<b>NAV-GEOFENCE</b>	0x01 0x39	8 + 2*numFen...	Periodic/Polled	Geofencing status
143	<b>NAV-HPPOSECEF</b>	0x01 0x13	28	Periodic/Polled	High Precision Position Solution in ECEF
144	<b>NAV-HPPOSLLH</b>	0x01 0x14	36	Periodic/Polled	High Precision Geodetic Position Solution
145	<b>NAV-ODO</b>	0x01 0x09	20	Periodic/Polled	Odometer Solution

## UBX Messages Overview continued

Page	Mnemonic	Cls/ID	Length	Type	Description
146	<b>NAV-ORB</b>	0x01 0x34	8 + 6*numSv	Periodic/Polled	GNSS Orbit Database Info
149	<b>NAV-POSECEF</b>	0x01 0x01	20	Periodic/Polled	Position Solution in ECEF
149	<b>NAV-POSLLH</b>	0x01 0x02	28	Periodic/Polled	Geodetic Position Solution
150	<b>NAV-PVT</b>	0x01 0x07	92	Periodic/Polled	Navigation Position Velocity Time Solution
153	<b>NAV-RELPOSNED</b>	0x01 0x3C	40	Periodic/Polled	Relative Positioning Information in NED frame
154	<b>NAV-RESETODO</b>	0x01 0x10	0	Command	Reset odometer
155	<b>NAV-SAT</b>	0x01 0x35	8 + 12*numSvs	Periodic/Polled	Satellite Information
157	<b>NAV-SIG</b>	0x01 0x43	8 + 16*numSigs	Periodic/Polled	Signal Information
159	<b>NAV-STATUS</b>	0x01 0x03	16	Periodic/Polled	Receiver Navigation Status
161	<b>NAV-SVIN</b>	0x01 0x3B	40	Periodic/Polled	Survey-in data
162	<b>NAV-TIMEBDS</b>	0x01 0x24	20	Periodic/Polled	BDS Time Solution
163	<b>NAV-TIMEGAL</b>	0x01 0x25	20	Periodic/Polled	Galileo Time Solution
164	<b>NAV-TIMEGLO</b>	0x01 0x23	20	Periodic/Polled	GLO Time Solution
165	<b>NAV-TIMEGPS</b>	0x01 0x20	16	Periodic/Polled	GPS Time Solution
166	<b>NAV-TIMELS</b>	0x01 0x26	24	Periodic/Polled	Leap second event information
168	<b>NAV-TIMEUTC</b>	0x01 0x21	20	Periodic/Polled	UTC Time Solution
169	<b>NAV-VELECEF</b>	0x01 0x11	20	Periodic/Polled	Velocity Solution in ECEF
170	<b>NAV-VELNED</b>	0x01 0x12	36	Periodic/Polled	Velocity Solution in NED
<b>UBX Class RXM</b>			<b>Receiver Manager Messages</b>		
171	<b>RXM-MEASX</b>	0x02 0x14	44 + 24*numSV	Periodic	Satellite Measurements for RRLP
173	<b>RXM-PMREQ</b>	0x02 0x41	8	Command	Requests a Power Management task
173	<b>RXM-PMREQ</b>	0x02 0x41	16	Command	Requests a Power Management task
175	<b>RXM-RAWX</b>	0x02 0x15	16 + 32*num...	Periodic/Polled	Multi-GNSS Raw Measurement Data
178	<b>RXM-RLM</b>	0x02 0x59	16	Output	Galileo SAR Short-RLM report
179	<b>RXM-RLM</b>	0x02 0x59	28	Output	Galileo SAR Long-RLM report
179	<b>RXM-RTCM</b>	0x02 0x32	8	Output	RTCM input status
180	<b>RXM-SFRBX</b>	0x02 0x13	8 + 4*numWo...	Output	Broadcast Navigation Data Subframe
<b>UBX Class SEC</b>			<b>Security Feature Messages</b>		
181	<b>SEC-SIGN</b>	0x27 0x01	40	Output	Signature of a previous message
181	<b>SEC-UNIQID</b>	0x27 0x03	9	Output	Unique Chip ID
<b>UBX Class TIM</b>			<b>Timing Messages</b>		
182	<b>TIM-TM2</b>	0x0D 0x03	28	Periodic/Polled	Time mark data
183	<b>TIM-TP</b>	0x0D 0x01	16	Periodic/Polled	Time Pulse Timedata
185	<b>TIM-VRFY</b>	0x0D 0x06	20	Periodic/Polled	Sourced Time Verification
<b>UBX Class UPD</b>			<b>Firmware Update Messages</b>		
186	<b>UPD-SOS</b>	0x09 0x14	0	Poll Request	Poll Backup File Restore Status
186	<b>UPD-SOS</b>	0x09 0x14	4	Command	Create Backup File in Flash
187	<b>UPD-SOS</b>	0x09 0x14	4	Command	Clear Backup in Flash

*UBX Messages Overview continued*

Page	Mnemonic	Cls/ID	Length	Type	Description
187	<b>UPD-SOS</b>	0x09 0x14	8	Output	Backup File Creation Acknowledge
188	<b>UPD-SOS</b>	0x09 0x14	8	Output	System Restored from Backup

## 5.8 UBX-ACK (0x05)

Ack/Nak Messages: i.e. Acknowledge or Reject messages to UBX-CFG input messages.

Messages in the UBX-ACK class output the processing results to UBX-CFG and some other messages.

### 5.8.1 UBX-ACK-ACK (0x05 0x01)

#### 5.8.1.1 Message Acknowledged

Message	<b>UBX-ACK-ACK</b>					
Description	<b>Message Acknowledged</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Output					
Comment	Output upon processing of an input message. ACK Message is sent as soon as possible but at least within one second.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x05	0x01	2	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	clsID	-	Class ID of the Acknowledged Message	
1	U1	-	msgID	-	Message ID of the Acknowledged Message	

### 5.8.2 UBX-ACK-NAK (0x05 0x00)

#### 5.8.2.1 Message Not-Acknowledged

Message	<b>UBX-ACK-NAK</b>					
Description	<b>Message Not-Acknowledged</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Output					
Comment	Output upon processing of an input message. NAK Message is sent as soon as possible but at least within one second.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x05	0x00	2	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	clsID	-	Class ID of the Not-Acknowledged Message	
1	U1	-	msgID	-	Message ID of the Not-Acknowledged Message	

## 5.9 UBX-CFG (0x06)

Configuration Input Messages: i.e. Set Dynamic Model, Set DOP Mask, Set Baud Rate, etc..

Messages in the CFG class are used to configure the receiver and read out current configuration values. Any messages in the CFG class sent to the receiver are either acknowledged (with message [UBX-ACK-ACK](#)) if processed successfully or rejected (with message [UBX-ACK-NAK](#)) if processing unsuccessfully.


### 5.9.1 UBX-CFG-ANT (0x06 0x13)

#### 5.9.1.1 Antenna Control Settings

Message	<b>UBX-CFG-ANT</b>					
Description	<b>Antenna Control Settings</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li><a href="#">u-blox 9 with protocol version 27</a></li> </ul>					
Type	Get/Set					
Comment	<p><b>This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</b></p> <p>See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.</p> <p>This message allows the user to configure the antenna supervisor.</p> <p>The antenna supervisor can be used to detect the status of an active antenna and control it. It can be used to turn off the supply to the antenna in the event of a short (for example) or to manage power consumption in Power Save Mode.</p> <p>Refer to Antenna Supervisor Configuration and the relevant Hardware Integration Manual (HIM) for more information regarding the behavior of the antenna supervisor.</p> <p>Refer to <a href="#">UBX-MON-HW</a> for a description of the fields in the message used to obtain the status of the antenna.</p> <p>Note that not all pins can be used for antenna supervisor operation, it is recommended that you use the default pins, consult the Integration Manual if you need to use other pins.</p>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x13	4	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	X2	-	flags	-	Antenna Flag Mask (see <a href="#">graphic below</a> )	
2	X2	-	pins	-	Antenna Pin Configuration (see <a href="#">graphic below</a> )	

### Bitfield flags


This graphic explains the bits of flags

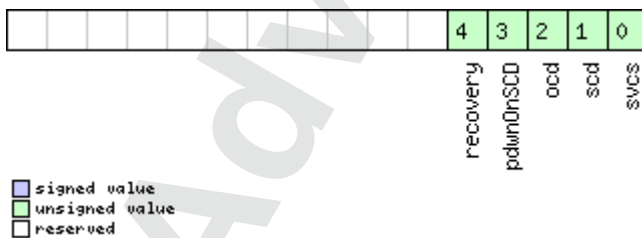

Name	Description
svcs	Enable Antenna Supply Voltage Control Signal
scd	Enable Short Circuit Detection
ocd	Enable Open Circuit Detection
pdwnOnSCD	Power Down Antenna supply if Short Circuit is detected. (only in combination with Bit 1)
recovery	Enable automatic recovery from short state

## Bitfield pins

This graphic explains the bits of `pins`

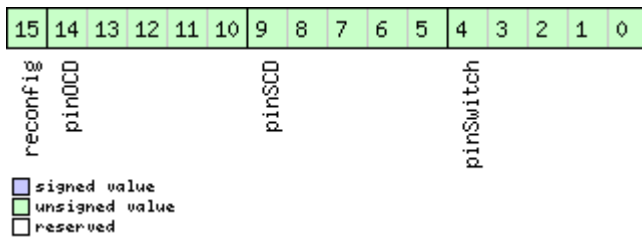

Name	Description
pinSwitch	PIO-Pin used for switching antenna supply
pinSCD	PIO-Pin used for detecting a short in the antenna supply
pinOCD	PIO-Pin used for detecting open/not connected antenna
reconfig	if set to one, and this command is sent to the receiver, the receiver will reconfigure the pins as specified.

## 5.9.2 UBX-CFG-CFG (0x06 0x09)

### 5.9.2.1 Clear, Save and Load configurations

Message	<b>UBX-CFG-CFG</b>					
Description	<b>Clear, Save and Load configurations</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Command					
Comment	<p><b>This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</b></p> <p>See <a href="#">Receiver Configuration</a> for a detailed description on how Receiver Configuration should be used. The behaviour of this message has changed. The three masks which were used to clear, save and load a subsection of configuration lost their meaning. It is no longer possible to save or clear a subsection of the configuration using this message. The behaviour of the masks is described as follows :</p> <ul style="list-style-type: none"> <li>if any bit is set in the clearMask: all configuration in the selected non-volatile memory is deleted</li> <li>if any bit is set in the saveMask: all current configuration is stored (copied) to the selected layers</li> <li>if any bit is set in the loadMask: The current configuration is discarded and rebuilt from all the lower layers</li> </ul> <p>Note that commands can be combined. The sequence of execution is clear, save, then load. Also note that this message is considered deprecated. Use <a href="#">UBX-CFG-VALSET</a> and <a href="#">UBX-CFG-VALDEL</a> with the appropriate layers instead. These new messages support selective saving and clearing to retain the behaviour removed from this message.</p>					
	Header	Class	ID	Length (Bytes)	Payload	Checksum

Message Structure	0xB5 0x62	0x06	0x09	(12) or (13)	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	X4	-	clearMask	-	Mask for configuration to clear (see <a href="#">graphic below</a> )	
4	X4	-	saveMask	-	Mask for configuration to save (see <a href="#">graphic below</a> )	
8	X4	-	loadMask	-	Mask for configuration to load (see <a href="#">graphic below</a> )	
Start of optional block						
12	X1	-	deviceMask	-	Mask which selects the memory devices for saving and/or clearing operation Note that if a deviceMask is not provided, the receiver defaults the operation requested to Battery Backed RAM (BBR) and Flash (if available) (see <a href="#">graphic below</a> )	
End of optional block						

## Bitfield clearMask

This graphic explains the bits of clearMask

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
clearAll																															
<div> <div>signed value</div> <div>unsigned value</div> <div>reserved</div> </div>																															

Name	Description
clearAll	Clear all saved configuration from the selected non-volatile memory if any bit is set

## Bitfield saveMask

This graphic explains the bits of saveMask

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
saveAll																															
<div> <div>signed value</div> <div>unsigned value</div> <div>reserved</div> </div>																															



Name	Description
saveAll	Save all current configuration to the selected non-volatile memory if any bit is set

## Bitfield loadMask

This graphic explains the bits of loadMask

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	---	---	---	---	---	---	---	---	---	---

loadAll

☐ signed value  
☒ unsigned value  
☐ reserved

Name	Description
loadAll	Discard current configuration and rebuilt it from lower non-volatile memory layers if any bit is set

## Bitfield deviceMask

This graphic explains the bits of deviceMask

			4		2	1	0
--	--	--	---	--	---	---	---

devSpiFlash

devEEPROM

devFlash

devBBR

☐ signed value  
☒ unsigned value  
☐ reserved

Name	Description
devBBR	Battery Backed RAM
devFlash	Flash
devEEPROM	EEPROM
devSpiFlash	SPI Flash

### 5.9.3 UBX-CFG-DAT (0x06 0x06)

#### 5.9.3.1 Set User-defined Datum.

Message	UBX-CFG-DAT					
Description	Set User-defined Datum.					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Set					
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x06	44	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	

CFG-DAT continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	R8	-	ma jA	m	Semi-major Axis ( accepted range = 6,300,000.0 to 6,500,000.0 meters ).
8	R8	-	flat	-	1.0 / Flattening ( accepted range is 0.0 to 500.0 ).
16	R4	-	dX	m	X Axis shift at the origin ( accepted range is +/- 5000.0 meters ).
20	R4	-	dY	m	Y Axis shift at the origin ( accepted range is +/- 5000.0 meters ).
24	R4	-	dZ	m	Z Axis shift at the origin ( accepted range is +/- 5000.0 meters ).
28	R4	-	rotX	s	Rotation about the X Axis ( accepted range is +/- 20.0 milli-arc seconds ).
32	R4	-	rotY	s	Rotation about the Y Axis ( accepted range is +/- 20.0 milli-arc seconds ).
36	R4	-	rotZ	s	Rotation about the Z Axis ( accepted range is +/- 20.0 milli-arc seconds ).
40	R4	-	scale	ppm	Scale change ( accepted range is 0.0 to 50.0 parts per million ).

### 5.9.3.2 The currently defined Datum

Message	<b>UBX-CFG-DAT</b>					
Description	<b>The currently defined Datum</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Get					
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item. Returns the parameters of the currently defined datum. If no user-defined datum has been set, this will default to WGS84.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x06	52	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U2	-	datumNum	-	Datum Number: 0 = WGS84, 0xFFFF = user-defined	
2	CH[6]	-	datumName	-	ASCII String: WGS84 or USER	
8	R8	-	ma jA	m	Semi-major Axis ( accepted range = 6,300,000.0 to 6,500,000.0 meters ).	
16	R8	-	flat	-	1.0 / Flattening ( accepted range is 0.0 to 500.0 ).	

CFG-DAT continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
24	R4	-	dX	m	X Axis shift at the origin ( accepted range is +/- 5000.0 meters ).
28	R4	-	dY	m	Y Axis shift at the origin ( accepted range is +/- 5000.0 meters ).
32	R4	-	dZ	m	Z Axis shift at the origin ( accepted range is +/- 5000.0 meters ).
36	R4	-	rotX	s	Rotation about the X Axis ( accepted range is +/- 20.0 milli-arc seconds ).
40	R4	-	rotY	s	Rotation about the Y Axis ( accepted range is +/- 20.0 milli-arc seconds ).
44	R4	-	rotZ	s	Rotation about the Z Axis ( accepted range is +/- 20.0 milli-arc seconds ).
48	R4	-	scale	ppm	Scale change ( accepted range is 0.0 to 50.0 parts per million ).

## 5.9.4 UBX-CFG-DGNSS (0x06 0x70)

### 5.9.4.1 DGNSS configuration

Message	<b>UBX-CFG-DGNSS</b>					
Description	<b>DGNSS configuration</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27 (only with High Precision GNSS products)</li> </ul>					
Type	Get/Set					
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item. This message allows the user to configure the DGNSS configuration of the receiver.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x70	4	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	dgnssMode	-	Specifies differential mode: 2: RTK float: No attempts are made to fix ambiguities. 3: RTK fixed: Ambiguities are fixed whenever possible.	
1	U1[3]	-	reserved1	-	<a href="#">Reserved</a>	

## 5.9.5 UBX-CFG-DYNSEED (0x06 0x85)

### 5.9.5.1 Programming the dynamic seed for the host interface signature

Message	<b>UBX-CFG-DYNSEED</b>					
Description	<b>Programming the dynamic seed for the host interface signature</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Set					
Comment	The message can be used to program the dynamic seed for the host interface signature. If successfully configured, the message will answer with ACK, otherwise with NAK. Before the first programming, it is assumed that the dynamic seed is all '0'.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x85	12	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0x01 for this version)	
1	U1[3]	-	reserved1	-	<a href="#">Reserved</a>	
4	U4	-	seedHi	-	high word of dynamic seed	
8	U4	-	seedLo	-	low word of dynamic seed	

## 5.9.6 UBX-CFG-FIXSEED (0x06 0x84)

### 5.9.6.1 Programming the fixed seed for host interface signature

Message	UBX-CFG-FIXSEED					
Description	Programming the fixed seed for host interface signature					
Firmware	Supported on: <ul style="list-style-type: none"><li>u-blox 9 with protocol version 27</li></ul>					
Type	Set					
Comment	The message can be used to program the fixed seed for the host interface signature. Moreover it will configure the set of messages that will be signed (min. 1, max. 10). If the class ID of the message is 0 the configuration is ignored for that message. If successfully configured, the message will answer with ACK, otherwise with NAK.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x84	12 + 2*length	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0x02 for this version)	
1	U1	-	length	-	Number of registered messages (min. 1, max. 10)	
2	U1[2]	-	reserved1	-	Reserved	
4	U4	-	seedHi	-	high word of fixed seed	
8	U4	-	seedLo	-	low word of fixed seed	
Start of repeated block (length times)						
12 + 2*N	U1	-	classId	-	Class ID on the message	
13 + 2*N	U1	-	msgId	-	Message ID on the message	

CFG-FIXSEED continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
End of repeated block					

## 5.9.7 UBX-CFG-GEOFENCE (0x06 0x69)

### 5.9.7.1 Geofencing configuration

Message	UBX-CFG-GEOFENCE					
Description	Geofencing configuration					
Firmware	Supported on: <ul style="list-style-type: none"><li>u-blox 9 with protocol version 27</li></ul>					
Type	Get/Set					
Comment	<p><b>This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</b></p> <p>See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.</p> <p>Gets or sets the geofencing configuration</p> <p>If the receiver is sent a valid new configuration, it will respond with a <a href="#">UBX-ACK-ACK</a> message and immediately change to the new configuration. Otherwise the receiver will reject the request, by issuing a <a href="#">UBX-ACK-NAK</a> and continuing operation with the previous configuration.</p> <p>Note that the acknowledge message does not indicate whether the PIO configuration has been successfully applied (pin assigned), it only indicates the successful configuration of the feature. The configured PIO must be previously unoccupied for successful assignment.</p>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x69	8 + 12*numFences	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (=0x00 for this version)	
1	U1	-	numFences	-	Number of geofences contained in this message. Note that the receiver can only store a limited number of geofences (currently 4).	
2	U1	-	confLvl	-	Required confidence level for state evaluation. This value times the position's standard deviation (sigma) defines the confidence band. 0 = no confidence required 1 = 68% 2 = 95% 3 = 99.7% 4 = 99.99%	
3	U1[1]	-	reserved1	-	<a href="#">Reserved</a>	
4	U1	-	pioEnabled	-	1 = Enable PIO combined fence state output, 0 = disable	
5	U1	-	pinPolarity	-	PIO pin polarity. 0 = Low means inside, 1 = Low means outside. Unknown state is always high.	
6	U1	-	pin	-	PIO pin number	

## CFG-GEOFENCE continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
7	U1[1]	-	reserved2	-	Reserved
Start of repeated block (numFences times)					
8 + 12*N	I4	1e-7	lat	deg	Latitude of the geofence circle center
12 + 12*N	I4	1e-7	lon	deg	Longitude of the geofence circle center
16 + 12*N	U4	1e-2	radius	m	Radius of the geofence circle
End of repeated block					

## 5.9.8 UBX-CFG-GNSS (0x06 0x3E)

### 5.9.8.1 GNSS system configuration


Message	UBX-CFG-GNSS					
Description	GNSS system configuration					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Get/Set					
Comment	<p><b>This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</b></p> <p>See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.</p> <p>Gets or sets the GNSS system channel sharing configuration.</p> <p>If the receiver is sent a valid new configuration, it will respond with a <a href="#">UBX-ACK-ACK</a> message and immediately change to the new configuration. Otherwise the receiver will reject the request, by issuing a <a href="#">UBX-ACK-NAK</a> and continuing operation with the previous configuration.</p> <p>Configuration requirements:</p> <ul style="list-style-type: none"> <li>It is necessary for at least one major GNSS to be enabled, after applying the new configuration to the current one.</li> <li>It is also required that at least 4 tracking channels are available to each enabled major GNSS, i.e. <code>maxTrkCh</code> must have a minimum value of 4 for each enabled major GNSS.</li> <li>The number of tracking channels in use must not exceed the number of tracking channels available in hardware, and the sum of all reserved tracking channels needs to be less than or equal to the number of tracking channels in use.</li> </ul> <p>Notes:</p> <ul style="list-style-type: none"> <li>To avoid cross-correlation issues, it is recommended that GPS and QZSS are always both enabled or both disabled.</li> <li>Polling this message returns the configuration of all supported GNSS, whether enabled or not; it may also include GNSS unsupported by the particular product, but in such cases the enable flag will always be unset.</li> <li>See section <a href="#">Satellite Numbering</a> for a description of the GNSS IDs available.</li> <li>Configuration specific to the GNSS system can be done via other messages (e.g. <a href="#">UBX-CFG-SBAS</a>).</li> </ul>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x3E	4 + 8*numConfigBlocks	see below	CK_A CK_B
Payload Contents:						

## CFG-GNSS continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	msgVer	-	Message version (=0 for this version)
1	U1	-	numTrkChHw	-	Number of tracking channels available in hardware (read only)
2	U1	-	numTrkChUse	-	(Read only in <a href="#">protocol versions greater than 23</a> ) Number of tracking channels to use. Must be > 0, <= numTrkChHw. If 0xFF, then number of tracking channels to use will be set to numTrkChHw.
3	U1	-	numConfigBlocks	-	Number of configuration blocks following
Start of repeated block (numConfigBlocks times)					
4 + 8*N	U1	-	gnssId	-	System identifier (see <a href="#">Satellite Numbering</a> )
5 + 8*N	U1	-	resTrkCh	-	(Read only in <a href="#">protocol versions greater than 23</a> ) Number of reserved (minimum) tracking channels for this system.
6 + 8*N	U1	-	maxTrkCh	-	(Read only in <a href="#">protocol versions greater than 23</a> ) Maximum number of tracking channels used for this system. Must be > 0, >= resTrkChn, <= numTrkChUse and <= maximum number of tracking channels supported for this system.
7 + 8*N	U1	-	reserved1	-	<a href="#">Reserved</a>
8 + 8*N	X4	-	flags	-	bitfield of flags. At least one signal must be configured in every enabled system. (see <a href="#">graphic below</a> )
End of repeated block					

## Bitfield flags

This graphic explains the bits of flags

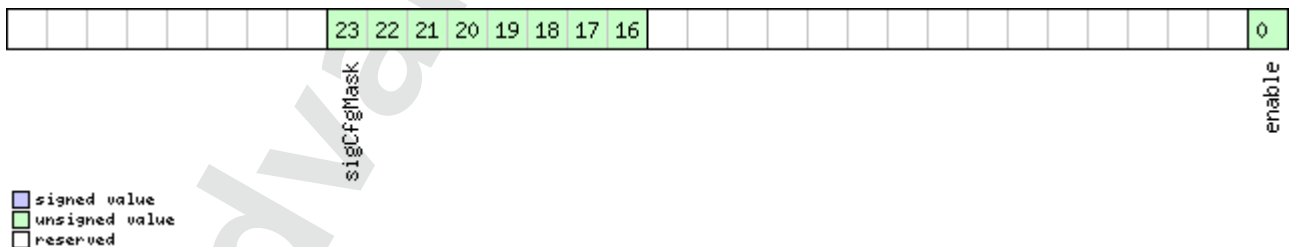

Name	Description
enable	Enable this system
sigCfgMask	Signal configuration mask When gnssId is 0 (GPS) * 0x01 = GPS L1C/A * 0x10 = GPS L2C When gnssId is 1 (SBAS) * 0x01 = SBAS L1C/A When gnssId is 2 (Galileo) * 0x01 = Galileo E1 * 0x20 = Galileo E5b When gnssId is 3 (BeiDou) * 0x01 = BeiDou B1I * 0x10 = BeiDou B2I When gnssId is 4 (IMES) * 0x01 = IMES L1 When gnssId is 5 (QZSS) * 0x01 = QZSS L1C/A * 0x04 = QZSS L1S * 0x10 = QZSS L2C When gnssId is 6 (GLONASS) * 0x01 = GLONASS L1 * 0x10 = GLONASS L2

### 5.9.9 UBX-CFG-INF (0x06 0x02)

#### 5.9.9.1 Poll configuration for one protocol

Message	<b>UBX-CFG-INF</b>					
Description	<b>Poll configuration for one protocol</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Poll Request					
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x02	1	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	protocolID	-	Protocol Identifier, identifying the output protocol for this Poll Request. The following are valid Protocol Identifiers: 0: UBX Protocol 1: NMEA Protocol 2-255: Reserved	




### 5.9.9.2 Information message configuration

Message	UBX-CFG-INF					
Description	Information message configuration					
Firmware	Supported on: <ul style="list-style-type: none"><li>u-blox 9 with protocol version 27</li></ul>					
Type	Get/Set					
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</b> The value of infMsgMask[x] below are that each bit represents one of the INF class messages (Bit 0 for ERROR, Bit 1 for WARNING and so on.). For a complete list, see the <a href="#">Message Class INF</a> . Several configurations can be concatenated to one input message. In this case the payload length can be a multiple of the normal length. Output messages from the module contain only one configuration unit. Note that I/O Ports 1 and 2 correspond to serial ports 1 and 2. I/O port 0 is DDC. I/O port 3 is USB. I/O port 4 is SPI. I/O port 5 is reserved for future use.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x02	0 + 10*N	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
Start of repeated block (N times)						
N*10	U1	-	protocolID	-	Protocol Identifier, identifying for which protocol the configuration is set/get. The following are valid Protocol Identifiers: 0: UBX Protocol 1: NMEA Protocol 2-255: Reserved	
1 + 10*N	U1[3]	-	reserved1	-	Reserved	
4 + 10*N	X1[6]	-	infMsgMask	-	A bit mask, saying which information messages are enabled on each I/O port (see <a href="#">graphic below</a> )	
End of repeated block						

#### Bitfield infMsgMask

This graphic explains the bits of infMsgMask

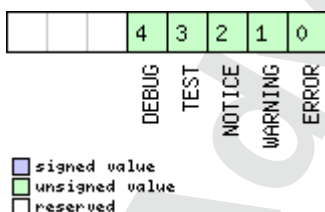

Name	Description
ERROR	enable ERROR
WARNING	enable WARNING
NOTICE	enable NOTICE
TEST	enable TEST
DEBUG	enable DEBUG


### 5.9.10 UBX-CFG-ITFM (0x06 0x39)

#### 5.9.10.1 Jamming/Interference Monitor configuration

Message	<b>UBX-CFG-ITFM</b>					
Description	<b>Jamming/Interference Monitor configuration</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Get/Set					
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item. Configuration of Jamming/Interference monitor.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x39	8	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	X4	-	config	-	interference config word. (see <a href="#">graphic below</a> )	
4	X4	-	config2	-	extra settings for jamming/interference monitor (see <a href="#">graphic below</a> )	

### Bitfield config


This graphic explains the bits of config

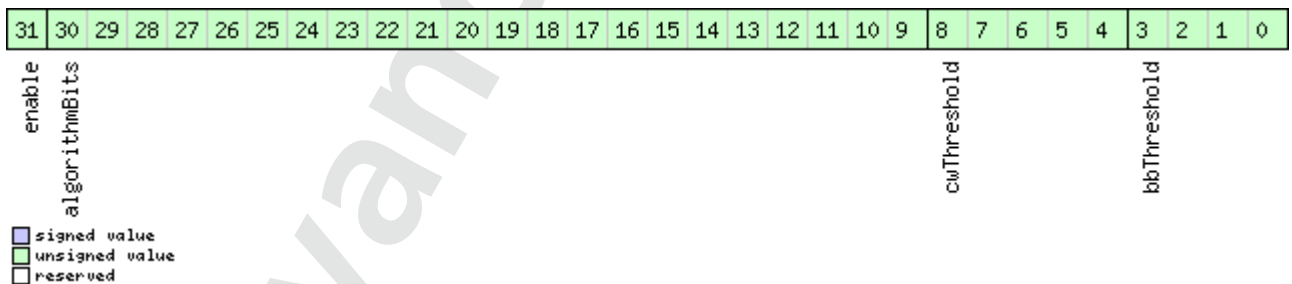

Name	Description
bbThreshold	Broadband jamming detection threshold (unit = dB)
cwThreshold	CW jamming detection threshold (unit = dB)
algorithmBits	reserved algorithm settings - should be set to 0x16B156 in hex for correct settings
enable	enable interference detection

## Bitfield config2

This graphic explains the bits of config2

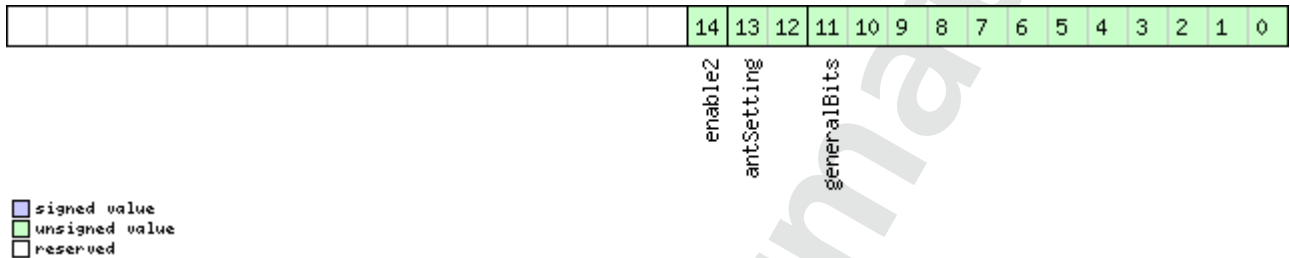

Name	Description
generalBits	general settings - should be set to 0x31E in hex for correct setting
antSetting	antennaSetting, 0=unknown, 1=passive, 2=active
enable2	Set to 1 to scan auxiliary bands (u-blox 8 / u-blox M8 only, otherwise ignored)

### 5.9.11 UBX-CFG-LOGFILTER (0x06 0x47)

#### 5.9.11.1 Data Logger Configuration


Message	<b>UBX-CFG-LOGFILTER</b>					
Description	<b>Data Logger Configuration</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Get/Set					
Comment	<p><b>This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</b></p> <p>See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.</p> <p>This message can be used to configure the data logger, i.e. to enable/disable the log recording and to get/set the position entry filter settings.</p> <p>Position entries can be filtered based on time difference, position difference or current speed thresholds. Position and speed filtering also have a minimum time interval. A position is logged if any of the thresholds are exceeded. If a threshold is set to zero it is ignored. The maximum rate of position logging is 1Hz.</p> <p>The filter settings will be configured to the provided values only if the 'applyAllFilterSettings' flag is set. This allows the recording to be enabled/disabled independently of configuring the filter settings.</p> <p>It is supported to configure the data logger in the absence of a logging file. By doing so, once the logging file is created, the data logger configuration will take effect immediately and logging recording and filtering will activate according to the configuration.</p>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x47	12	see below	CK_A CK_B
Payload Contents:						

## CFG-LOGFILTER continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	version	-	The version of this message. Set to 1
1	X1	-	flags	-	Flags (see <a href="#">graphic below</a> )
2	U2	-	minInterval	s	Minimum time interval between logged positions (0 = not set). <b>This is only applied in combination with the speed and/or position thresholds.</b> If both minInterval and timeThreshold are set, minInterval must be less than or equal to timeThreshold.
4	U2	-	timeThreshold	s	If the time difference is greater than the threshold then the position is logged (0 = not set).
6	U2	-	speedThreshold	m/s	If the current speed is greater than the threshold then the position is logged (0 = not set). minInterval also applies
8	U4	-	positionThreshold	m	If the 3D position difference is greater than the threshold then the position is logged (0 = not set). minInterval also applies

## Bitfield flags

This graphic explains the bits of flags



applyAllFilterSettings  
psmOncePerWakeupEnabled  
recordEnabled

■ signed value  
■ unsigned value  
■ reserved

Name	Description
recordEnabled	1 = enable recording, 0 = disable recording
psmOncePerWakeUpEnabled	1 = enable recording only one single position per PSM on/off mode wake-up period, 0 = disable once per wake-up
applyAllFilterSettings	1 = apply all filter settings, 0 = only apply recordEnabled

## 5.9.12 UBX-CFG-MSG (0x06 0x01)

### 5.9.12.1 Poll a message configuration

Message	<b>UBX-CFG-MSG</b>					
Description	<b>Poll a message configuration</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Poll Request					
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x01	2	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	msgClass	-	Message Class	
1	U1	-	msgID	-	Message Identifier	

### 5.9.12.2 Set Message Rate(s)

Message	<b>UBX-CFG-MSG</b>					
Description	<b>Set Message Rate(s)</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Get/Set					
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item. Set/Get message rate configuration (s) to/from the receiver. <ul style="list-style-type: none"> <li>Send rate is relative to the event a message is registered on. For example, if the rate of a navigation message is set to 2, the message is sent every second navigation solution. For configuring NMEA messages, the section <a href="#">NMEA Messages Overview</a> describes Class and Identifier numbers used.</li> </ul>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x01	8	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	msgClass	-	Message Class	

CFG-MSG continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
1	U1	-	msgID	-	Message Identifier
2	U1[6]	-	rate	-	Send rate on I/O Port (6 Ports)

### 5.9.12.3 Set Message Rate

Message	<b>UBX-CFG-MSG</b>					
Description	<b>Set Message Rate</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Get/Set					
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item. Set message rate configuration for the current port.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x01	3	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	msgClass	-	Message Class	
1	U1	-	msgID	-	Message Identifier	
2	U1	-	rate	-	Send rate on current Port	

### 5.9.13 UBX-CFG-NAV5 (0x06 0x24)

#### 5.9.13.1 Navigation Engine Settings


Message	<b>UBX-CFG-NAV5</b>					
Description	<b>Navigation Engine Settings</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Get/Set					
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x24	36	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	X2	-	mask	-	Parameters Bitmask. Only the masked parameters will be applied. (see <a href="#">graphic below</a> )	

## CFG-NAV5 continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
2	U1	-	dynModel	-	Dynamic platform model: 0: portable 2: stationary 3: pedestrian 4: automotive 5: sea 6: airborne with <1g acceleration 7: airborne with <2g acceleration 8: airborne with <4g acceleration 9: wrist worn watch 10: bike
3	U1	-	fixMode	-	Position Fixing Mode: 1: 2D only 2: 3D only 3: auto 2D/3D
4	I4	0.01	fixedAlt	m	Fixed altitude (mean sea level) for 2D fix mode.
8	U4	0.0001	fixedAltVar	m^2	Fixed altitude variance for 2D mode.
12	I1	-	minElev	deg	Minimum Elevation for a GNSS satellite to be used in NAV
13	U1	-	drLimit	s	Reserved
14	U2	0.1	pDop	-	Position DOP Mask to use
16	U2	0.1	tDop	-	Time DOP Mask to use
18	U2	-	pAcc	m	Position Accuracy Mask
20	U2	-	tAcc	m	Time Accuracy Mask
22	U1	-	staticHoldThresh	cm/s	Static hold threshold
23	U1	-	dgnssTimeout	s	DGNSS timeout
24	U1	-	cnoThreshNumSvs	-	Number of satellites required to have C/N0 above cnoThresh for a fix to be attempted
25	U1	-	cnoThresh	dBHz	C/N0 threshold for deciding whether to attempt a fix
26	U1[2]	-	reserved1	-	Reserved
28	U2	-	staticHoldMaxDist	m	Static hold distance threshold (before quitting static hold)
30	U1	-	utcStandard	-	UTC standard to be used: 0: Automatic; receiver selects based on GNSS configuration (see <a href="#">GNSS time bases</a> ). 3: UTC as operated by the U.S. Naval Observatory (USNO); derived from GPS time 6: UTC as operated by the former Soviet Union; derived from GLONASS time 7: UTC as operated by the National Time Service Center, China; derived from BeiDou time
31	U1[5]	-	reserved2	-	Reserved

## Bitfield mask

This graphic explains the bits of mask

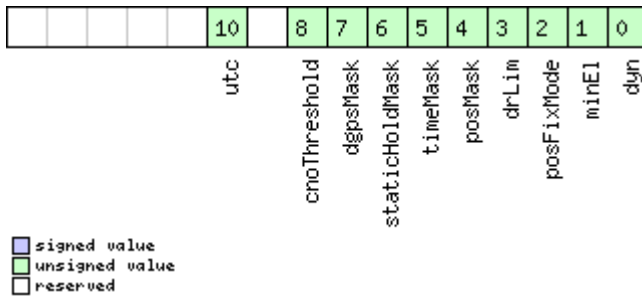

Name	Description
dyn	Apply dynamic model settings
minEl	Apply minimum elevation settings
posFixMode	Apply fix mode settings
drLim	Reserved
posMask	Apply position mask settings
timeMask	Apply time mask settings
staticHoldMask	Apply static hold settings
dgpsMask	Apply DGPS settings.
cnoThreshold	Apply CNO threshold settings (cnoThresh, cnoThreshNumSVs).
utc	Apply UTC settings.

### 5.9.14 UBX-CFG-NAVX5 (0x06 0x23)

#### 5.9.14.1 Navigation Engine Expert Settings

Message	<b>UBX-CFG-NAVX5</b>					
Description	<b>Navigation Engine Expert Settings</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Get/Set					
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x23	40	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U2	-	version	-	Message version (2 for this version)	
2	X2	-	mask1	-	First parameters bitmask. Only the flagged parameters will be applied, unused bits must be set to 0. (see <a href="#">graphic below</a> )	
4	X4	-	mask2	-	Second parameters bitmask. Only the flagged parameters will be applied, unused bits must be set to 0. (see <a href="#">graphic below</a> )	
8	U1[2]	-	reserved1	-	<a href="#">Reserved</a>	
10	U1	-	minSVs	#SVs	Minimum number of satellites for navigation	




## CFG-NAVX5 continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
11	U1	-	maxSVs	#SVs	Maximum number of satellites for navigation
12	U1	-	minCNO	dBHz	Minimum satellite signal level for navigation
13	U1	-	reserved2	-	Reserved
14	U1	-	iniFix3D	-	1 = initial fix must be 3D
15	U1[2]	-	reserved3	-	Reserved
17	U1	-	ackAiding	-	1 = issue acknowledgements for assistance message input
18	U2	-	wknRollover	-	GPS week rollover number; GPS week numbers will be set correctly from this week up to 1024 weeks after this week. Setting this to 0 reverts to firmware default.
20	U1	-	sigAttenCompMode	dBHz	Only supported on certain products
21	U1	-	reserved4	-	Reserved
22	U1[2]	-	reserved5	-	Reserved
24	U1[2]	-	reserved6	-	Reserved
26	U1	-	usePPP	-	1 = use Precise Point Positioning (only available with the PPP product variant)
27	U1	-	aopCfg	-	AssistNow Autonomous configuration (see <a href="#">graphic below</a> )
28	U1[2]	-	reserved7	-	Reserved
30	U2	-	aopOrbMaxErr	m	Maximum acceptable (modeled) AssistNow Autonomous orbit error (valid range = 5..1000, or 0 = reset to firmware default)
32	U1[4]	-	reserved8	-	Reserved
36	U1[3]	-	reserved9	-	Reserved
39	U1	-	useAdr	-	Only supported on certain products

## Bitfield mask1


This graphic explains the bits of mask1

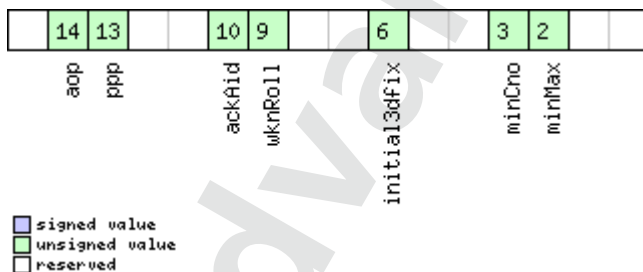

Name	Description
minMax	1 = apply min/max SVs settings
minCno	1 = apply minimum C/N0 setting
initial3dfix	1 = apply initial 3D fix settings
wknRoll	1 = apply GPS weeknumber rollover settings
ackAid	1 = apply assistance acknowledgement settings
ppp	1 = apply usePPP flag
aop	1 = apply aopCfg (useAOP flag) and aopOrbMaxErr settings (AssistNow Autonomous)

## Bitfield mask2

This graphic explains the bits of mask2

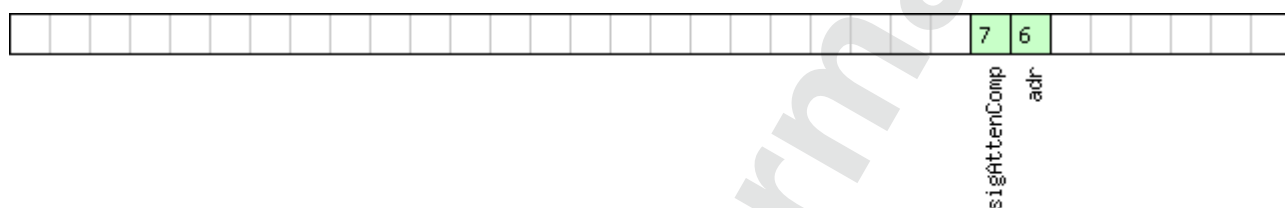


☐ signed value  
☒ unsigned value  
☐ reserved

Name	Description
adr	Apply ADR/UDR sensor fusion on/off setting (useAdr flag)
sigAttenComp	Only supported on certain products

## Bitfield aopCfg

This graphic explains the bits of aopCfg

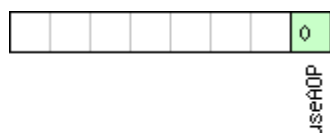

☐ signed value  
☒ unsigned value  
☐ reserved

Name	Description
useAOP	1 = enable AssistNow Autonomous

### 5.9.15 UBX-CFG-NMEA (0x06 0x17)

#### 5.9.15.1 Extended NMEA protocol configuration V1


Message	<b>UBX-CFG-NMEA</b>					
Description	<b>Extended NMEA protocol configuration V1</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Get/Set					
Comment	<p><b>This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</b></p> <p>Set/Get the <a href="#">NMEA protocol</a> configuration. See section <a href="#">NMEA Protocol Configuration</a> for a detailed description of the configuration effects on NMEA output.</p> <p>See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.</p>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x17	20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	X1	-	filter	-	filter flags (see <a href="#">graphic below</a> )	
1	U1	-	nmeaVersion	-	0x41: NMEA version 4.1 0x40: NMEA version 4.0 0x23: NMEA version 2.3 0x21: NMEA version 2.1	
2	U1	-	numSV	-	Maximum Number of SVs to report per TalkerId. 0: unlimited 8: 8 SVs 12: 12 SVs 16: 16 SVs	
3	X1	-	flags	-	flags (see <a href="#">graphic below</a> )	
4	X4	-	gnssToFilter	-	Filters out satellites based on their GNSS. If a bitfield is enabled, the corresponding satellites will be not output. (see <a href="#">graphic below</a> )	
8	U1	-	svNumbering	-	Configures the display of satellites that do not have an NMEA-defined value. Note: this does not apply to satellites with an unknown ID. 0: Strict - Satellites are not output 1: Extended - Use proprietary numbering (see <a href="#">Satellite Numbering</a> )	

#### CFG-NMEA continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
9	U1	-	mainTalkerId	-	By default the main Talker ID (i.e. the Talker ID used for all messages other than GSV) is determined by the GNSS assignment of the receiver's channels (see <a href="#">UBX-CFG-GNSS</a> ). This field enables the main Talker ID to be overridden. 0: Main Talker ID is not overridden 1: Set main Talker ID to 'GP' 2: Set main Talker ID to 'GL' 3: Set main Talker ID to 'GN' 4: Set main Talker ID to 'GA' 5: Set main Talker ID to 'GB'
10	U1	-	gsvTalkerId	-	By default the Talker ID for GSV messages is GNSS specific (as defined by NMEA). This field enables the GSV Talker ID to be overridden. 0: Use GNSS specific Talker ID (as defined by NMEA) 1: Use the main Talker ID
11	U1	-	version	-	Message version (set to 1 for this version)
12	CH[2]	-	bdsTalkerId	-	Sets the two characters that should be used for the BeiDou Talker ID If these are set to zero, the default BeiDou TalkerId will be used
14	U1[6]	-	reserved1	-	<a href="#">Reserved</a>

#### Bitfield filter


This graphic explains the bits of filter

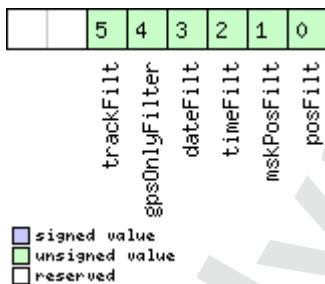

Name	Description
posFilt	Enable position output for failed or invalid fixes
mskPosFilt	Enable position output for invalid fixes
timeFilt	Enable time output for invalid times
dateFilt	Enable date output for invalid dates
gpsOnlyFilter	Restrict output to GPS satellites only
trackFilt	Enable COG output even if COG is frozen

## Bitfield flags


This graphic explains the bits of flags

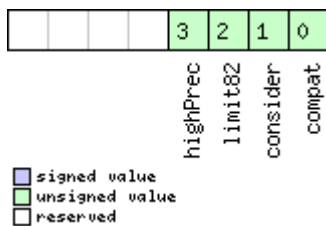

Name	Description
compat	enable compatibility mode. This might be needed for certain applications when customer's NMEA parser expects a fixed number of digits in position coordinates
consider	enable considering mode.
limit82	enable strict limit to 82 characters maximum.
highPrec	enable high precision mode. This flag cannot be set in conjunction with either Compatibility Mode or Limit82 Mode.

## Bitfield gnssToFilter

This graphic explains the bits of gnssToFilter

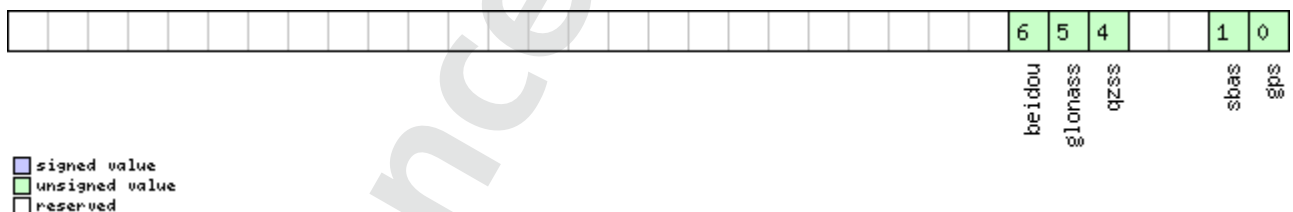

Name	Description
gps	Disable reporting of GPS satellites
sbas	Disable reporting of SBAS satellites
qzss	Disable reporting of QZSS satellites
glonass	Disable reporting of GLONASS satellites
beidou	Disable reporting of BeiDou satellites


## 5.9.16 UBX-CFG-ODO (0x06 0x1E)

### 5.9.16.1 Odometer, Low-speed COG Engine Settings

Message	<b>UBX-CFG-ODO</b>					
Description	<b>Odometer, Low-speed COG Engine Settings</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Get/Set					
Comment	<b>This feature is not supported for the FTS product variant.</b> <b>This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x1E	20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0 for this version)	
1	U1[3]	-	reserved1	-	<a href="#">Reserved</a>	
4	U1	-	flags	-	<a href="#">Odometer/Low-speed COG filter flags</a> (see <a href="#">graphic below</a> )	
5	X1	-	odoCfg	-	<a href="#">Odometer filter settings</a> (see <a href="#">graphic below</a> )	
6	U1[6]	-	reserved2	-	<a href="#">Reserved</a>	
12	U1	1e-1	cogMaxSpeed	m/s	Speed below which course-over-ground (COG) is computed with the low-speed COG filter	
13	U1	-	cogMaxPosAcc	m	Maximum acceptable position accuracy for computing COG with the low-speed COG filter	
14	U1[2]	-	reserved3	-	<a href="#">Reserved</a>	
16	U1	-	velLpGain	-	Velocity low-pass filter level, range 0..255	
17	U1	-	cogLpGain	-	COG low-pass filter level (at speed < 8 m/s), range 0..255	
18	U1[2]	-	reserved4	-	<a href="#">Reserved</a>	

### Bitfield flags


This graphic explains the bits of flags

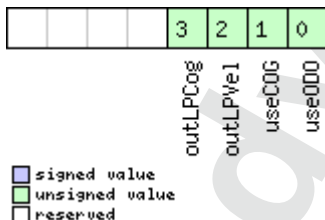

Name	Description
useODO	Odometer enabled flag
useCOG	Low-speed COG filter enabled flag
outLPVcl	Output low-pass filtered velocity flag
outLPCog	Output low-pass filtered heading (COG) flag

## Bitfield odoCfg

This graphic explains the bits of odoCfg



profile

- signed value
- unsigned value
- reserved

Name	Description
profile	Profile type (0=running, 1=cycling, 2=swimming, 3=car, 4=custom)

## 5.9.17 UBX-CFG-PRT (0x06 0x00)

### 5.9.17.1 Polls the configuration for one I/O Port

Message	<b>UBX-CFG-PRT</b>					
Description	<b>Polls the configuration for one I/O Port</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Poll Request					
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item. Sending this message with a port ID as payload results in having the receiver return the configuration for the specified port.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x00	1	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	PortID	-	Port Identifier Number (see the other versions of CFG-PRT for valid values)	


### 5.9.17.2 Port Configuration for UART

Message	<b>UBX-CFG-PRT</b>					
Description	<b>Port Configuration for UART</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Get/Set					
Comment	<p><b>This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</b></p> <p>See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.</p> <p>Several configurations can be concatenated to one input message. In this case the payload length can be a multiple of the normal length (see the other versions of CFG-PRT). Output messages from the module contain only one configuration unit.</p> <p>Note that this message can affect baud rate and other transmission parameters. Because there may be messages queued for transmission there may be uncertainty about which protocol applies to such messages. In addition a message currently in transmission may be corrupted by a protocol change. Host data reception parameters may have to be changed to be able to receive future messages, including the acknowledge message resulting from the CFG-PRT message.</p>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x00	20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	portID	-	Port Identifier Number (see Integration Manual for valid UART port IDs)	
1	U1	-	reserved1	-	<a href="#">Reserved</a>	
2	X2	-	txReady	-	TX ready PIN configuration (see <a href="#">graphic below</a> )	
4	X4	-	mode	-	A bit mask describing the UART mode (see <a href="#">graphic below</a> )	
8	U4	-	baudRate	Bits/s	Baud rate in bits/second	
12	X2	-	inProtoMask	-	A mask describing which input protocols are active. Each bit of this mask is used for a protocol. Through that, multiple protocols can be defined on a single port. (see <a href="#">graphic below</a> )	
14	X2	-	outProtoMask	-	A mask describing which output protocols are active. Each bit of this mask is used for a protocol. Through that, multiple protocols can be defined on a single port. (see <a href="#">graphic below</a> )	
16	X2	-	flags	-	Flags bit mask (see <a href="#">graphic below</a> )	
18	U1[2]	-	reserved2	-	<a href="#">Reserved</a>	



## Bitfield txReady


This graphic explains the bits of txReady

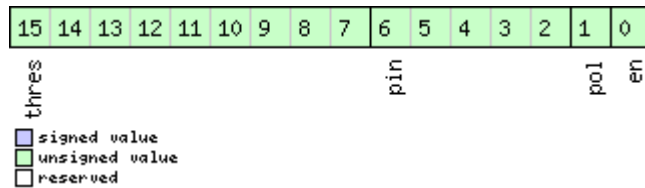

Name	Description
en	Enable TX ready feature for this port
pol	Polarity 0 High-active 1 Low-active
pin	PIO to be used (must not be in use already by another function)
thres	Threshold The given threshold is multiplied by 8 bytes. The TX ready PIN goes active after $\geq \text{thres} \times 8$ bytes are pending for the port and going inactive after the last pending bytes have been written to hardware (0-4 bytes before end of stream). 0x000 no threshold 0x001 8byte 0x002 16byte ... 0x1FE 4080byte 0x1FF 4088byte

## Bitfield mode

This graphic explains the bits of mode

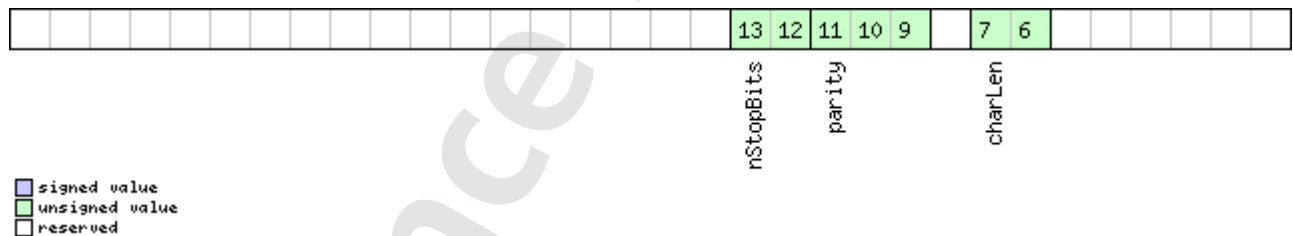


Name	Description
charLen	Character Length 00 5bit (not supported) 01 6bit (not supported) 10 7bit (supported only with parity) 11 8bit
parity	000 Even Parity 001 Odd Parity 10X No Parity X1X Reserved

### Bitfield mode Description continued

Name	Description
nStopBits	Number of Stop Bits 00 1 Stop Bit 01 1.5 Stop Bit 10 2 Stop Bit 11 0.5 Stop Bit

### Bitfield inProtoMask


This graphic explains the bits of inProtoMask

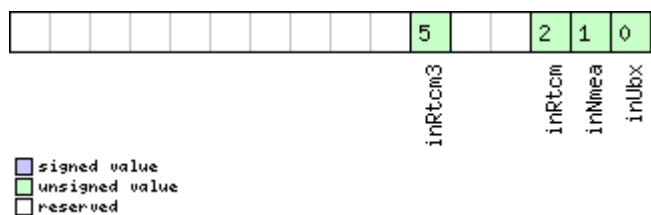

Name	Description
inUbx	UBX protocol
inNmea	NMEA protocol
inRtcm	RTCM2 protocol
inRtcm3	RTCM3 protocol

### Bitfield outProtoMask


This graphic explains the bits of outProtoMask

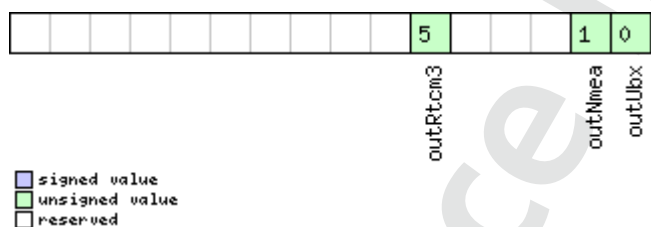

Name	Description
outUbx	UBX protocol
outNmea	NMEA protocol
outRtcm3	RTCM3 protocol

## Bitfield flags

This graphic explains the bits of flags

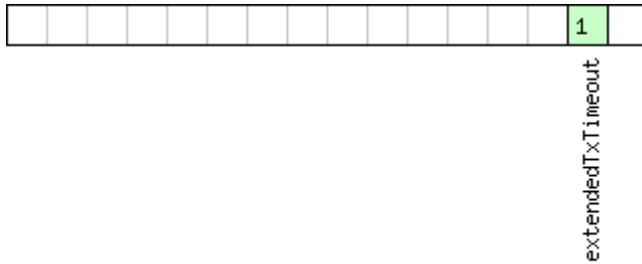

☐ signed value  
☒ unsigned value  
☐ reserved

Name	Description
extendedTxTimeout	Extended TX timeout: if set, the port will timeout if allocated TX memory $\geq 4$ kB and no activity for 1.5s. If not set the port will timeout if no activity for 1.5s regardless on the amount of allocated TX memory.

### 5.9.17.3 Port Configuration for USB Port


Message	<b>UBX-CFG-PRT</b>					
Description	<b>Port Configuration for USB Port</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Get/Set					
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item. Several configurations can be concatenated to one input message. In this case the payload length can be a multiple of the normal length (see the other versions of CFG-PRT). Output messages from the module contain only one configuration unit.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x00	20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	portID	-	Port Identifier Number (= 3 for USB port)	
1	U1	-	reserved1	-	<a href="#">Reserved</a>	
2	X2	-	txReady	-	TX ready PIN configuration (see <a href="#">graphic below</a> )	
4	U1[8]	-	reserved2	-	<a href="#">Reserved</a>	
12	X2	-	inProtoMask	-	A mask describing which input protocols are active. Each bit of this mask is used for a protocol. Through that, multiple protocols can be defined on a single port. (see <a href="#">graphic below</a> )	
14	X2	-	outProtoMask	-	A mask describing which output protocols are active. Each bit of this mask is used for a protocol. Through that, multiple protocols can be defined on a single port. (see <a href="#">graphic below</a> )	
16	U1[2]	-	reserved3	-	<a href="#">Reserved</a>	

CFG-PRT continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
18	U1[2]	-	reserved4	-	<a href="#">Reserved</a>

## Bitfield txReady

This graphic explains the bits of txReady




■ signed value  
■ unsigned value  
■ reserved

Name	Description
en	Enable TX ready feature for this port
pol	Polarity 0 High-active 1 Low-active
pin	PIO to be used (must not be in use already by another function)
thres	Threshold The given threshold is multiplied by 8 bytes. The TX ready PIN goes active after $\geq \text{thres} \times 8$ bytes are pending for the port and going inactive after the last pending bytes have been written to hardware (0-4 bytes before end of stream). 0x000 no threshold 0x001 8byte 0x002 16byte ... 0x1FE 4080byte 0x1FF 4088byte

## Bitfield inProtoMask

This graphic explains the bits of inProtoMask




■ signed value  
■ unsigned value  
■ reserved

Name	Description
inUbx	UBX protocol
inNmea	NMEA protocol
inRtcm	RTCM2 protocol
inRtcm3	RTCM3 protocol

## Bitfield outProtoMask

This graphic explains the bits of outProtoMask

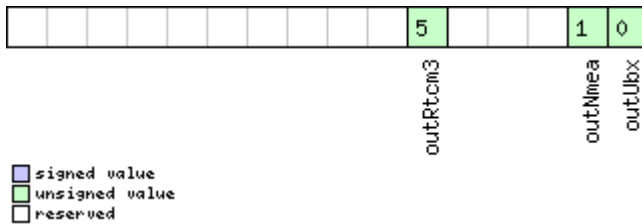


Name	Description
outUbx	UBX protocol
outNmea	NMEA protocol
outRtcm3	RTCM3 protocol

### 5.9.17.4 Port Configuration for SPI Port

Message	<b>UBX-CFG-PRT</b>					
Description	<b>Port Configuration for SPI Port</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Get/Set					
Comment	<p><b>This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</b></p> <p>See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.</p> <p>Several configurations can be concatenated to one input message. In this case the payload length can be a multiple of the normal length (see the other versions of CFG-PRT). Output messages from the module contain only one configuration unit.</p>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x00	20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	portID	-	Port Identifier Number (= 4 for SPI port)	
1	U1	-	reserved1	-	<a href="#">Reserved</a>	
2	X2	-	txReady	-	TX ready PIN configuration (see <a href="#">graphic below</a> )	
4	X4	-	mode	-	SPI Mode Flags (see <a href="#">graphic below</a> )	
8	U1[4]	-	reserved2	-	<a href="#">Reserved</a>	
12	X2	-	inProtoMask	-	A mask describing which input protocols are active. Each bit of this mask is used for a protocol. Through that, multiple protocols can be defined on a single port. (see <a href="#">graphic below</a> )	
14	X2	-	outProtoMask	-	A mask describing which output protocols are active. Each bit of this mask is used for a protocol. Through that, multiple protocols can be defined on a single port. (see <a href="#">graphic below</a> )	
16	X2	-	flags	-	Flags bit mask (see <a href="#">graphic below</a> )	
18	U1[2]	-	reserved3	-	<a href="#">Reserved</a>	

## Bitfield txReady


This graphic explains the bits of txReady

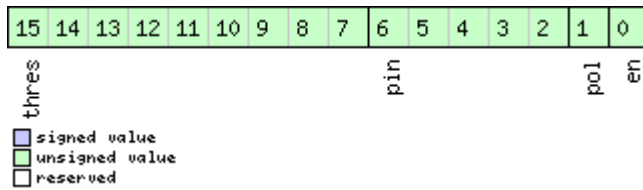

Name	Description
en	Enable TX ready feature for this port
pol	Polarity 0 High-active 1 Low-active
pin	PIO to be used (must not be in use already by another function)
thres	Threshold The given threshold is multiplied by 8 bytes. The TX ready PIN goes active after $\geq \text{thres} \times 8$ bytes are pending for the port and going inactive after the last pending bytes have been written to hardware (0-4 bytes before end of stream). 0x000 no threshold 0x001 8byte 0x002 16byte ... 0x1FE 4080byte 0x1FF 4088byte

## Bitfield mode


This graphic explains the bits of mode

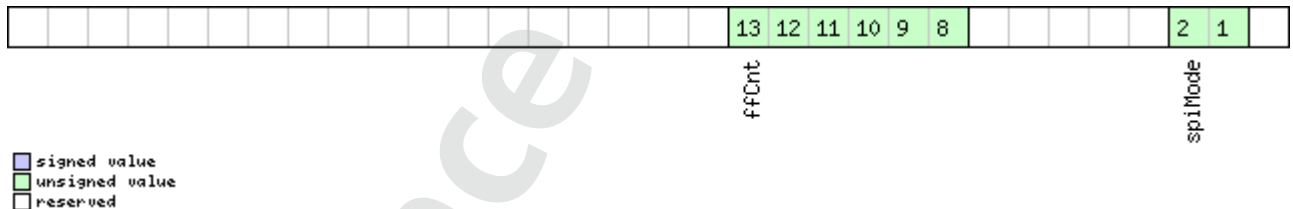

Name	Description
spiMode	00 SPI Mode 0: CPOL = 0, CPHA = 0 01 SPI Mode 1: CPOL = 0, CPHA = 1 10 SPI Mode 2: CPOL = 1, CPHA = 0 11 SPI Mode 3: CPOL = 1, CPHA = 1
ffCnt	Number of bytes containing 0xFF to receive before switching off reception. Range: 0(mechanism off)-63


## Bitfield inProtoMask

This graphic explains the bits of inProtoMask

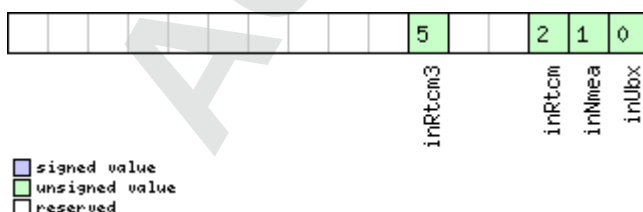


### Bitfield outProtoMask

This graphic explains the bits of outProtoMask

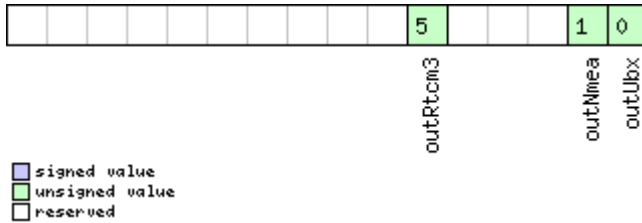

### Bitfield flags

This graphic explains the bits of flags

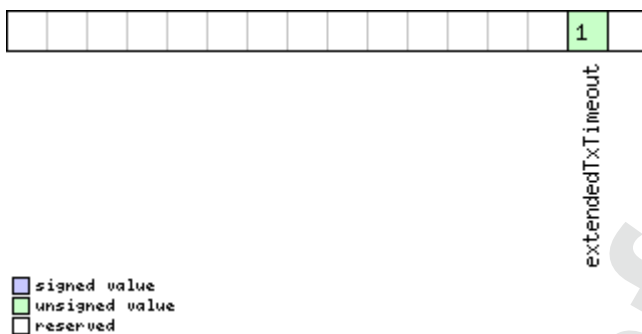

Name	Description
extendedTxTimeout	Extended TX timeout: if set, the port will timeout if allocated TX memory >=4 kB and no activity for 1.5s.

#### 5.9.17.5 Port Configuration for DDC Port


Message	<b>UBX-CFG-PRT</b>					
Description	<b>Port Configuration for DDC Port</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Get/Set					
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item. Several configurations can be concatenated to one input message. In this case the payload length can be a multiple of the normal length (see the other versions of CFG-PRT). Output messages from the module contain only one configuration unit.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x00	20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	portID	-	Port Identifier Number (= 0 for DDC port)	
1	U1	-	reserved1	-	<a href="#">Reserved</a>	
2	X2	-	txReady	-	TX ready PIN configuration (see <a href="#">graphic below</a> )	

## CFG-PRT continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
4	X4	-	mode	-	DDC Mode Flags (see <a href="#">graphic below</a> )
8	U1[4]	-	reserved2	-	<a href="#">Reserved</a>
12	X2	-	inProtoMask	-	A mask describing which input protocols are active. Each bit of this mask is used for a protocol. Through that, multiple protocols can be defined on a single port. (see <a href="#">graphic below</a> )
14	X2	-	outProtoMask	-	A mask describing which output protocols are active. Each bit of this mask is used for a protocol. Through that, multiple protocols can be defined on a single port. (see <a href="#">graphic below</a> )
16	X2	-	flags	-	Flags bit mask (see <a href="#">graphic below</a> )
18	U1[2]	-	reserved3	-	<a href="#">Reserved</a>

## Bitfield txReady

This graphic explains the bits of txReady

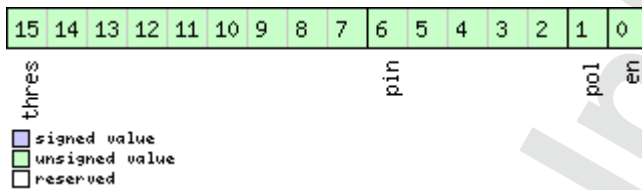


Name	Description
en	Enable TX ready feature for this port
pol	Polarity 0 High-active 1 Low-active
pin	PIO to be used (must not be in use already by another function)
thres	Threshold The given threshold is multiplied by 8 bytes. The TX ready PIN goes active after $\geq \text{thres} \times 8$ bytes are pending for the port and going inactive after the last pending bytes have been written to hardware (0-4 bytes before end of stream). 0x000 no threshold 0x001 8byte 0x002 16byte ... 0x1FE 4080byte 0x1FF 4088byte




Bitfield mode

This graphic explains the bits of mode

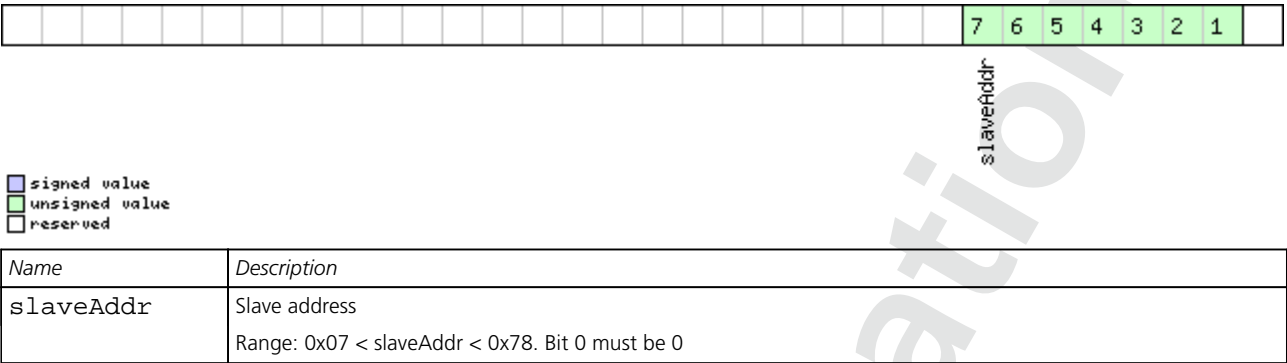


Bitfield inProtoMask

This graphic explains the bits of inProtoMask

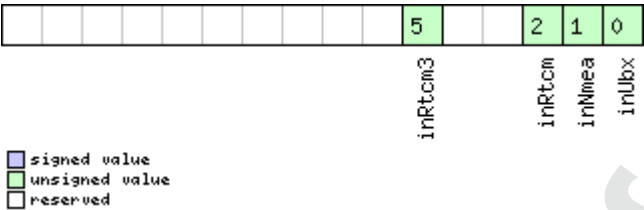


Bitfield outProtoMask

This graphic explains the bits of outProtoMask

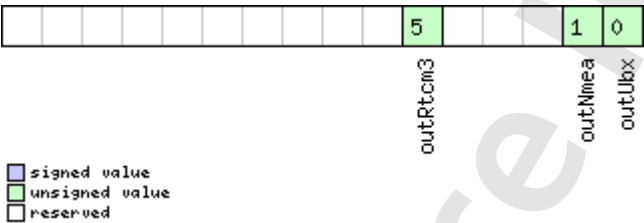

Bitfield flags

This graphic explains the bits of flags

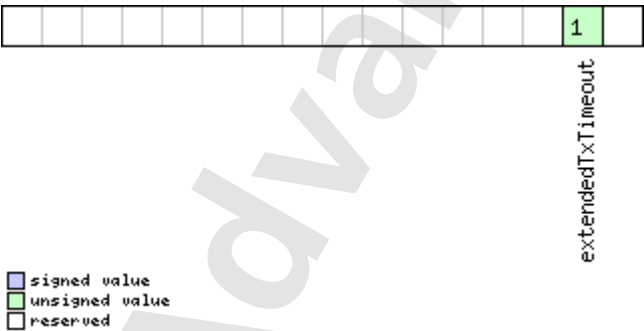

Name	Description
extendedTxTimeout	Extended TX timeout: if set, the port will timeout if allocated TX memory $\geq 4$ kB and no activity for 1.5s.

### 5.9.18 UBX-CFG-PWR (0x06 0x57)

#### 5.9.18.1 Put receiver in a defined power state.

Message	<b>UBX-CFG-PWR</b>					
Description	<b>Put receiver in a defined power state.</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Set					
Comment	<b>This message is deprecated in protocol versions greater than 17. Use <a href="#">UBX-CFG-RST</a> for GNSS start/stop and <a href="#">UBX-RXM-PMREQ</a> for software backup.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x57	8	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (1 for this version)	
1	U1[3]	-	reserved1	-	<a href="#">Reserved</a>	
4	U4	-	state	-	Enter system state 0x52554E20: GNSS running 0x53544F50: GNSS stopped 0x42434B50: Software Backup. USB interface will be disabled, other wakeup source is needed.	

### 5.9.19 UBX-CFG-RATE (0x06 0x08)

#### 5.9.19.1 Navigation/Measurement Rate Settings

Message	<b>UBX-CFG-RATE</b>					
Description	<b>Navigation/Measurement Rate Settings</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Get/Set					
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item. This message allows the user to alter the rate at which navigation solutions (and the measurements that they depend on) are generated by the receiver. The calculation of the navigation solution will always be aligned to the top of a second zero (first second of the week) of the configured reference time system. (Navigation period is an integer multiple of the measurement period in <a href="#">protocol versions greater than 17</a> ) • Each measurement triggers the measurements generation and <a href="#">raw data output</a> . • The navRate value defines that every nth measurement triggers a navigation epoch.					

		<ul style="list-style-type: none"> <li>The update rate has a direct influence on the power consumption. The more fixes that are required, the more CPU power and communication resources are required.</li> <li>For most applications a 1 Hz update rate would be sufficient.</li> <li>When using Power Save Mode, measurement and navigation rate can differ from the values configured here.</li> </ul>				
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x08	6	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U2	-	measRate	ms	The elapsed time between GNSS measurements, which defines the rate, e.g. 100ms => 10Hz, 1000ms => 1Hz, 10000ms => 0.1Hz. Measurement rate should be greater than or equal to 25 ms.	
2	U2	-	navRate	cycles	The ratio between the number of measurements and the number of navigation solutions, e.g. 5 means five measurements for every navigation solution. Maximum value is 127.	
4	U2	-	timeRef	-	The time system to which measurements are aligned: 0: UTC time 1: GPS time 2: GLONASS time 3: BeiDou time 4: Galileo time	

## 5.9.20 UBX-CFG-RINV (0x06 0x34)

### 5.9.20.1 Contents of Remote Inventory


Message	UBX-CFG-RINV					
Description	Contents of Remote Inventory					
Firmware	Supported on: <ul style="list-style-type: none"><li>u-blox 9 with protocol version 27</li></ul>					
Type	Get/Set					
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</b> If <i>N</i> is greater than 30, the excess bytes are discarded. See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x34	1 + 1*N	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	X1	-	flags	-	Flags (see <a href="#">graphic below</a> )	
Start of repeated block ( <i>N</i> times)						

CFG-RINV continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
1 + 1*N	U1	-	data	-	Data to store/stored in Remote Inventory.
End of repeated block					

## Bitfield flags

This graphic explains the bits of flags

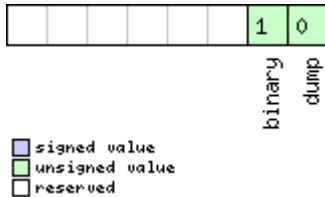

Name	Description
dump	Dump data at startup. Does not work if flag binary is set.
binary	Data is binary.

### 5.9.21 UBX-CFG-RST (0x06 0x04)

#### 5.9.21.1 Reset Receiver / Clear Backup Data Structures


Message	<b>UBX-CFG-RST</b>					
Description	<b>Reset Receiver / Clear Backup Data Structures</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Command					
Comment	Don't expect this message to be acknowledged by the receiver. <ul style="list-style-type: none"> <li>Newer FW version won't acknowledge this message at all.</li> <li>Older FW version will acknowledge this message but the acknowledge may not be sent completely before the receiver is reset.</li> </ul>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x04	4	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	X2	-	navBbrMask	-	BBR Sections to clear. The following Special Sets apply: 0x0000 Hot start 0x0001 Warm start 0xFFFF Cold start (see <a href="#">graphic below</a> )	

#### CFG-RST continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
2	U1	-	resetMode	-	Reset Type 0x00 - Hardware reset (Watchdog) immediately 0x01 - Controlled Software reset 0x02 - Controlled Software reset (GNSS only) 0x04 - Hardware reset (Watchdog) after shutdown 0x08 - Controlled GNSS stop 0x09 - Controlled GNSS start
3	U1	-	reserved1	-	<a href="#">Reserved</a>

### Bitfield navBbrMask

This graphic explains the bits of navBbrMask

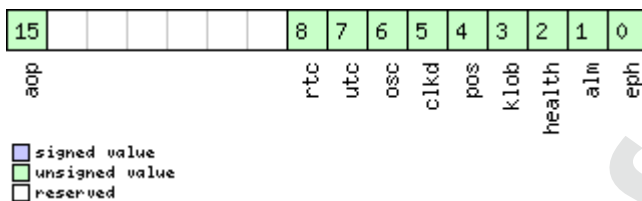

Name	Description
eph	Ephemeris
alm	Almanac
health	Health
klob	Klobuchar parameters
pos	Position
clkd	Clock Drift
osc	Oscillator Parameter
utc	UTC Correction + GPS Leap Seconds Parameters
rtc	RTC
aop	Autonomous Orbit Parameters

## 5.9.22 UBX-CFG-TMODE3 (0x06 0x71)


### 5.9.22.1 Time Mode Settings 3

Message	<b>UBX-CFG-TMODE3</b>			
Description	<b>Time Mode Settings 3</b>			
Firmware	Supported on: <ul style="list-style-type: none"> <li><a href="#">u-blox 9 with protocol version 27</a> (only with High Precision GNSS products)</li> </ul>			
Type	Get/Set			
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item. Configures the receiver to be in Time Mode. The position referred to in this message is that of the Antenna Reference Point (ARP).			
	Header	Class	ID	Length (Bytes)
				Payload
				Checksum

Message Structure	0xB5 0x62	0x06	0x71	40	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0x00 for this version)	
1	U1	-	reserved1	-	Reserved	
2	X2	-	flags	-	Receiver mode flags (see <a href="#">graphic below</a> )	
4	I4	-	ecefXOrLat	cm_or_deg*1e-7	WGS84 ECEF X coordinate (or latitude) of the ARP position, depending on flags above	
8	I4	-	ecefYOrLon	cm_or_deg*1e-7	WGS84 ECEF Y coordinate (or longitude) of the ARP position, depending on flags above	
12	I4	-	ecefZOrAlt	cm	WGS84 ECEF Z coordinate (or altitude) of the ARP position, depending on flags above	
16	I1	-	ecefXOrLatHP	0.1_mm_or_deg*1e-9	High-precision WGS84 ECEF X coordinate (or latitude) of the ARP position, depending on flags above. Must be in the range -99..+99. The precise WGS84 ECEF X coordinate in units of cm, or the precise WGS84 ECEF latitude in units of 1e-7 degrees, is given by ecefXOrLat + (ecefXOrLatHP * 1e-2)	
17	I1	-	ecefYOrLonHP	0.1_mm_or_deg*1e-9	High-precision WGS84 ECEF Y coordinate (or longitude) of the ARP position, depending on flags above. Must be in the range -99..+99. The precise WGS84 ECEF Y coordinate in units of cm, or the precise WGS84 ECEF longitude in units of 1e-7 degrees, is given by ecefYOrLon + (ecefYOrLonHP * 1e-2)	
18	I1	-	ecefZOrAltHP	0.1_mm	High-precision WGS84 ECEF Z coordinate (or altitude) of the ARP position, depending on flags above. Must be in the range -99..+99. The precise WGS84 ECEF Z coordinate, or altitude coordinate, in units of cm is given by ecefZOrAlt + (ecefZOrAltHP * 1e-2)	
19	U1	-	reserved2	-	Reserved	
20	U4	-	fixedPosAcc	0.1_mm	Fixed position 3D accuracy	
24	U4	-	svinMinDur	s	Survey-in minimum duration	
28	U4	-	svinAccLimit	0.1_mm	Survey-in position accuracy limit	
32	U1[8]	-	reserved3	-	Reserved	

## Bitfield flags

This graphic explains the bits of flags



☐ signed value  
☒ unsigned value  
☐ reserved

Name	Description
mode	Receiver Mode: 0 Disabled 1 Survey In 2 Fixed Mode (true ARP position information required) 3-255 Reserved
11a	Position is given in LAT/LON/ALT (default is ECEF)


### 5.9.23 UBX-CFG-TP5 (0x06 0x31)

#### 5.9.23.1 Time Pulse Parameters

Message	<b>UBX-CFG-TP5</b>					
Description	<b>Time Pulse Parameters</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Get/Set					
Comment	<b>This message is deprecated in protocol versions greater than 27. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x31	32	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	tpIdx	-	Time pulse selection (0 = TIMEPULSE, 1 = TIMEPULSE2)	
1	U1	-	version	-	Message version (0x01 for this version)	
2	U1[2]	-	reserved1	-	<a href="#">Reserved</a>	
4	I2	-	antCableDelay	ns	Antenna cable delay	
6	I2	-	rfGroupDelay	ns	RF group delay	
8	U4	-	freqPeriod	Hz_or_us	Frequency or period time, depending on setting of bit 'isFreq'	
12	U4	-	freqPeriodLock	Hz_or_us	Frequency or period time when locked to GNSS time, only used if 'lockedOtherSet' is set	
16	U4	-	pulseLenRatio	us_or_2 <sup>-32</sup>	Pulse length or duty cycle, depending on 'isLength'	
20	U4	-	pulseLenRatioLock	us_or_2 <sup>-32</sup>	Pulse length or duty cycle when locked to GNSS time, only used if 'lockedOtherSet' is set	
24	I4	-	userConfigDelay	ns	User configurable time pulse delay	
28	X4	-	flags	-	Configuration flags (see <a href="#">graphic below</a> )	

## Bitfield flags

This graphic explains the bits of flags

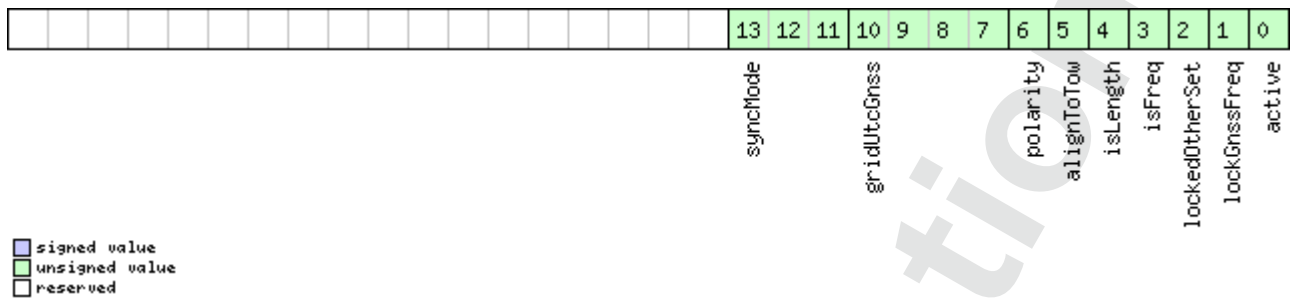

Name	Description
active	If set enable time pulse; if pin assigned to another function, other function takes precedence. Must be set for FTS variant.
lockGnssFreq	If set synchronize time pulse to GNSS as soon as GNSS time is valid. If not set, or before GNSS time is valid use local clock.  This flag is ignored by the FTS product variant; in this case the receiver always locks to the best available time/frequency reference (which is not necessarily GNSS).
lockedOtherSet	If set the receiver switches between the timepulse settings given by 'freqPeriodLocked' & 'pulseLenLocked' and those given by 'freqPeriod' & 'pulseLen'. The 'Locked' settings are used where the receiver has an accurate sense of time. For non-FTS products, this occurs when GNSS solution with a reliable time is available, but for FTS products the setting syncMode field governs behavior. In all cases, the receiver only uses 'freqPeriod' & 'pulseLen' when the flag is unset.
isFreq	If set 'freqPeriodLock' and 'freqPeriod' are interpreted as frequency, otherwise interpreted as period.
isLength	If set 'pulseLenRatioLock' and 'pulseLenRatio' interpreted as pulse length, otherwise interpreted as duty cycle.
alignToTow	Align pulse to top of second (period time must be integer fraction of 1s).  Also set 'lockGnssFreq' to use this feature.  This flag is ignored by the FTS product variant; it is assumed to be always set (as is lockGnssFreq). Set maxSlewRate and maxPhaseCorrRate fields of <b>UBX-CFG-SMGR</b> to 0 to disable alignment.
polarity	Pulse polarity: 0: falling edge at top of second 1: rising edge at top of second
gridUtcGnss	Timegrid to use: 0: UTC 1: GPS 2: GLONASS 3: BeiDou 4: Galileo  This flag is only relevant if 'lockGnssFreq' and 'alignToTow' are set.  Note that configured GNSS time is estimated by the receiver if locked to any GNSS system. If the receiver has a valid GNSS fix it will attempt to steer the TP to the specified time grid even if the specified time is not based on information from the constellation's satellites. To ensure timing based purely on a given GNSS, restrict the supported constellations in <b>UBX-CFG-GNSS</b> .



## Bitfield flags Description continued

Name	Description
syncMode	<p>Sync Manager lock mode to use:</p> <p>0: switch to 'freqPeriodLock' and 'pulseLenRatioLock' as soon as Sync Manager has an accurate time, never switch back to 'freqPeriod' and 'pulseLenRatio'</p> <p>1: switch to 'freqPeriodLock' and 'pulseLenRatioLock' as soon as Sync Manager has an accurate time, and switch back to 'freqPeriod' and 'pulseLenRatio' as soon as time gets inaccurate</p> <p>This field is only relevant for the FTS product variant.</p> <p>This field is only relevant if the flag 'lockedOtherSet' is set.</p>


## 5.9.24 UBX-CFG-USB (0x06 0x1B)

### 5.9.24.1 USB Configuration

Message	<b>UBX-CFG-USB</b>					
Description	<b>USB Configuration</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Get/Set					
Comment	<p><b>This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</b></p> <p>See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.</p>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x1B	108	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U2	-	vendorID	-	Vendor ID. This field shall only be set to registered Vendor IDs. Changing this field requires special Host drivers.	
2	U2	-	productID	-	Product ID. Changing this field requires special Host drivers.	
4	U1[2]	-	reserved1	-	<a href="#">Reserved</a>	
6	U1[2]	-	reserved2	-	<a href="#">Reserved</a>	
8	U2	-	powerConsumption	mA	Power consumed by the device	
10	X2	-	flags	-	various configuration flags (see <a href="#">graphic below</a> )	
12	CH[32]	-	vendorString	-	String containing the vendor name. 32 ASCII bytes including 0-termination.	
44	CH[32]	-	productString	-	String containing the product name. 32 ASCII bytes including 0-termination.	
76	CH[32]	-	serialNumber	-	String containing the serial number. 32 ASCII bytes including 0-termination. Changing the String fields requires special Host drivers.	

## Bitfield flags

This graphic explains the bits of flags

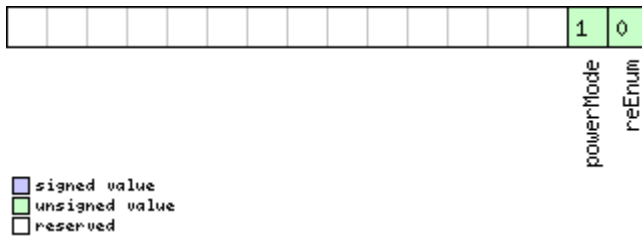

Name	Description
reEnum	force re-enumeration
powerMode	self-powered (1), bus-powered (0)

### 5.9.25 UBX-CFG-VALDEL (0x06 0x8C)

#### 5.9.25.1 Deletes values corresponding to provided keys


Message	UBX-CFG-VALDEL					
Description	Deletes values corresponding to provided keys					
Firmware	Supported on: <ul style="list-style-type: none"><li>u-blox 9 with protocol version 27</li></ul>					
Type	Set					
Comment	<p>Overview:</p> <ul style="list-style-type: none"><li>This message can be used to delete saved configuration to effectively revert them to defaults.</li><li>This message can delete saved configuration from the Flash configuration layer and the BBR configuration layer. The changes won't be effective until these layers are loaded into the RAM layer.</li><li>This message is limited to containing a maximum of 64 keys up for deletion; i.e. N is a maximum of 64.</li><li>This message can be used multiple times and every time the result will be applied immediately. To send this message multiple times with the result being applied at the end, see version 1 of <a href="#">UBX-CFG-VALDEL</a> that supports transactions.</li><li>This message does not check if the resulting configuration is valid.</li><li>See <a href="#">Receiver Configuration</a> for details.</li></ul> <p>This message returns a UBX-ACK-NAK and no configuration is applied:</p> <ul style="list-style-type: none"><li>if any key is unknown to the receiver FW</li><li>if the layers bitfield does not specify a layer to delete a value from</li></ul> <p>Notes:</p> <ul style="list-style-type: none"><li>If a key is sent multiple times within the same message, then the value is effectively deleted only once.</li><li>Attempting to delete items that have not been set before, or that have already been deleted, is considered a valid request</li></ul>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x8C	4 + 4*N	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version, set to 0	

CFG-VALDEL continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
1	X1	-	layers	-	The layers where the configuration should be deleted from (see <a href="#">graphic below</a> )
2	U1[2]	-	reserved1	-	<a href="#">Reserved</a>
Start of repeated block (N times)					
4 + 4*N	U4	-	keys	-	<a href="#">Configuration Item IDs</a> of the Configuration Items to be deleted
End of repeated block					

## Bitfield layers

This graphic explains the bits of layers



☐ signed value  
☒ unsigned value  
☐ reserved

Name	Description
bbr	Delete configuration from the BBR layer
flash	Delete configuration from the Flash layer

### 5.9.25.2 Deletes values corresponding to provided keys within a transaction

Message	<b>UBX-CFG-VALDEL</b>
Description	<b>Deletes values corresponding to provided keys within a transaction</b>
Firmware	Supported on: <ul style="list-style-type: none"> <li><a href="#">u-blox 9 with protocol version 27</a></li> </ul>
Type	Set
Comment	Overview: <ul style="list-style-type: none"> <li>This message can be used to delete saved configuration to effectively revert them to defaults.</li> <li>This message can delete saved configuration from the Flash configuration layer and the BBR configuration layer. The changes won't be effective until these layers are loaded into the RAM layer.</li> <li>This message is limited to containing a maximum of 64 keys up for deletion; i.e. N is a maximum of 64.</li> <li>This message can be used multiple times with the result being managed within a transaction.</li> <li>This message does not check if the resulting configuration is valid.</li> <li>See <a href="#">Receiver Configuration</a> for details.</li> <li>See version 0 of <a href="#">UBX-CFG-VALDEL</a> for simplified version of this message.</li> </ul> This message returns a UBX-ACK-NAK, cancels any started transaction, and no configuration is applied: <ul style="list-style-type: none"> <li>if any key within a transaction is unknown to the receiver FW</li> <li>if an invalid transaction state transition is requested</li> <li>if the layers bitfield changes within a transaction</li> </ul>

- if the layers bitfield does not specify a layer to delete a value from

Notes:

- Any request for another UBX-CFG- message type (including UBX-CFG-VALSET and UBX-CFG-VALGET) will cancel any started transaction, and no configuration is applied.
- This message can be sent with no keys to delete for the purposes of managing the transaction state transition.
- If a key is sent multiple times within the same message or within the same transaction, then the value is effectively deleted only once.
- Attempting to delete items that have not been set before, or that have already been deleted, is considered a valid request

Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x8C	4 + 4*N	see below	CK_A CK_B

Payload Contents:

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	version	-	Message version, set to 1
1	X1	-	layers	-	The layers where the configuration should be deleted from (see <a href="#">graphic below</a> )
2	X1	-	transaction	-	Transaction action to be applied: (see <a href="#">graphic below</a> )
3	U1	-	reserved1	-	<a href="#">Reserved</a>


Start of repeated block (N times)

4 + 4*N	U4	-	keys	-	<a href="#">Configuration Item IDs</a> of the Configuration Items to be deleted
---------	----	---	------	---	---

End of repeated block

## Bitfield layers


This graphic explains the bits of layers

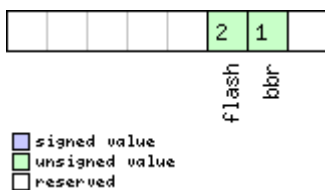

Name	Description
bbr	Delete configuration from the BBR layer
flash	Delete configuration from the Flash layer

## Bitfield transaction

This graphic explains the bits of transaction

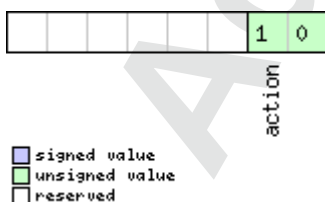

Name	Description
action	<p>Transaction action to be applied:</p> <p>0: Transactionless UBX-CFG-VALDEL: In the next UBX-CFG-VALDEL, it can be either 0 or 1. If a transaction has not yet been started, the incoming configuration is applied. If a transaction has already been started, cancels any started transaction and the incoming configuration is applied.</p> <p>1: (Re)Start deletion transaction: In the next UBX-CFG-VALDEL, it can be either 0, 1, 2 or 3. If a transaction has not yet been started, a transaction will be started. If a transaction has already been started, restarts the transaction, effectively removing all previous non-applied UBX-CFG-VALDEL messages.</p> <p>2: Deletion transaction ongoing: In the next UBX-CFG-VALDEL, it can be either 0, 1, 2 or 3.</p> <p>3: Apply and end a deletion transaction: In the next UBX-CFG-VALDEL, it can be either 0 or 1.</p>

## 5.9.26 UBX-CFG-VALGET (0x06 0x8B)

### 5.9.26.1 Get Configuration Items

Message	UBX-CFG-VALGET					
Description	Get Configuration Items					
Firmware	Supported on: <ul style="list-style-type: none"><li>u-blox 9 with protocol version 27</li></ul>					
Type	Poll Request					
Comment	<p>This message is used to read configuration items from the receiver. It returns the configuration data for the specified items and layer.</p> <p>A UBX-CFG-NAK message is returned in case one or more items are unknown to the receiver or when the number of requested items is greater than 64. Otherwise a UBX-CFG-ACK message is returned.</p> <p>The configuration items are identified by their configuration key IDs.</p> <p>See <a href="#">Receiver Configuration</a> for details.</p>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x8B	4 + 4*N	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	message version, set to 0	
1	U1	-	layer	-	The layers from which the configuration items should be retrieved: 0 - RAM layer 1 - BBR layer 2 - Flash layer 7 - Default layer	
2	U1[2]	-	reserved1	-	<a href="#">Reserved</a>	
Start of repeated block (N times)						
4 + 4*N	U4	-	keys	-	configuration key ID selected for retrieval	
End of repeated block						

### 5.9.26.2 Configuration Items

Message	<b>UBX-CFG-VALGET</b>				
Description	<b>Configuration Items</b>				
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>				
Type	polled				
Comment	This message is output by the receiver to return requested configuration data (key and value pairs). See <a href="#">Receiver Configuration</a> for details.				
Message Structure	Header	Class	ID	Length (Bytes)	Payload
	0xB5 0x62	0x06	0x8B	4 + 1*N	see below
Checksum					
CK_A CK_B					
Payload Contents:					
Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	version	-	message version, set to 1
1	U1	-	layer	-	The layers from which the configuration items originate: 0 - RAM layer 1 - BBR 2 - Flash 7 - Default
2	U1[2]	-	reserved1	-	<a href="#">Reserved</a>
Start of repeated block (N times)					
4 + 1*N	U1	-	cfgData	-	<a href="#">configuration data</a> (key and value pairs)
End of repeated block					

### 5.9.27 UBX-CFG-VALSET (0x06 0x8A)

#### 5.9.27.1 Sets values corresponding to provided key-value pairs

Message	<b>UBX-CFG-VALSET</b>				
Description	<b>Sets values corresponding to provided key-value pairs</b>				
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>				
Type	Set				
Comment	<p>Overview:</p> <ul style="list-style-type: none"> <li>This message is used to set a configuration by providing configuration data (a list of key and value pairs), which identify the configuration parameters to change, and their new values.</li> <li>This message is limited to containing a maximum of 64 key-value pairs.</li> <li>This message can be used multiple times and every time the result will be applied immediately. To send this message multiple times with the result being applied at the end, see version 1 of <a href="#">UBX-CFG-VALSET</a> that supports transactions.</li> <li>See <a href="#">Receiver Configuration</a> for details.</li> </ul> <p>This message returns a UBX-ACK-NAK and no configuration is applied:</p> <ul style="list-style-type: none"> <li>if any key is unknown to the receiver FW</li> <li>if the layers bitfield does not specify a layer to save a value to</li> </ul>				

- if the requested configuration is not valid. The validity of a configuration is checked only if the message requests to apply the configuration to the RAM configuration layer.

Notes:

- If a key is sent multiple times within the same message, then the value eventually being applied is the last sent.

Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x8A	4 + 1*N	see below	CK_A CK_B

Payload Contents:

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	version	-	Message version, set to 0
1	X1	-	layers	-	The layers where the configuration should be applied (see <a href="#">graphic below</a> )
2	U1[2]	-	reserved1	-	<a href="#">Reserved</a>


Start of repeated block (N times)

4 + 1*N	U1	-	cfgData	-	<a href="#">configuration data</a> (key and value pairs)
---------	----	---	---------	---	--

End of repeated block

## Bitfield layers

This graphic explains the bits of layers

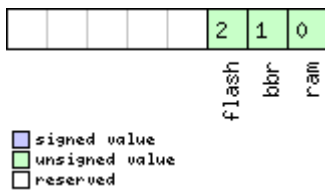

Name	Description
ram	Update configuration in the RAM layer
bbr	Update configuration in the BBR layer
flash	Update configuration in the Flash layer

### 5.9.27.2 Sets values corresponding to provided key-value pairs within a transaction

Message	<b>UBX-CFG-VALSET</b>
Description	<b>Sets values corresponding to provided key-value pairs within a transaction</b>
Firmware	Supported on: <ul style="list-style-type: none"> <li><a href="#">u-blox 9 with protocol version 27</a></li> </ul>
Type	Set
Comment	<p>Overview:</p> <ul style="list-style-type: none"> <li>This message is used to set a configuration by providing configuration data (a list of key and value pairs), which identify the configuration parameters to change, and their new values.</li> <li>This message is limited to containing a maximum of 64 key-value pairs.</li> <li>This message can be used multiple times with the result being managed within a transaction. Within a transaction there is no limit on the number key-value pairs; a transaction is effectively limited to the number of known keys.</li> <li>See <a href="#">Receiver Configuration</a> for details.</li> </ul>

- See version 0 of [UBX-CFG-VALSET](#) for simplified version of this message.

This message returns a UBX-ACK-NAK, cancels any started transaction, and no configuration is applied:

- if any key within a transaction is unknown to the receiver FW
- if an invalid transaction state transition is requested
- if the layers bitfield changes within a transaction
- if the layers bitfield does not specify a layer to save a value to

This message returns a UBX-ACK-NAK, and no configuration is applied:

- if the requested configuration is not valid. While in a transaction context, only the last message that requests to apply the transaction returns a NAK. The validity of a configuration is checked only if the message requests to apply the configuration to the RAM configuration layer. This also applies to a transaction-less request.

Notes:

- Any request for another UBX-CFG-message type (including UBX-CFG-VALDEL and UBX-CFG-VALGET) will cancel any started transaction, and no configuration is applied.
- This message can be sent with no key/values to set for the purposes of managing the transaction state transition.
- If a key is sent multiple times within the same message or within the same transaction, then the value eventually being applied is the last sent.

Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x8A	4 + 1*N	see below	CK_A CK_B

Payload Contents:

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	version	-	Message version, set to 1
1	X1	-	layers	-	The layers where the configuration should be applied (see <a href="#">graphic below</a> )
2	U1	-	transaction	-	Transaction action to be applied (see <a href="#">graphic below</a> )
3	U1	-	reserved1	-	<a href="#">Reserved</a>


Start of repeated block (N times)

4 + 1*N	U1	-	cfgData	-	<a href="#">configuration data</a> (key and value pairs)
---------	----	---	---------	---	--

End of repeated block

## Bitfield layers

This graphic explains the bits of layers

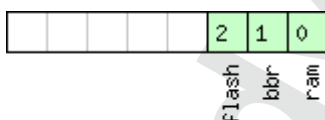


☐ signed value  
☒ unsigned value  
☐ reserved



Name	Description
ram	Update configuration in the RAM layer
bbr	Update configuration in the BBR layer
flash	Update configuration in the Flash layer

## Bitfield transaction

This graphic explains the bits of transaction



action

- signed value
- unsigned value
- reserved

Name	Description
action	<p>Transaction action to be applied:</p> <p>0: Transactionless UBX-CFG-VALSET: In the next UBX-CFG-VALSET, it can be either 0 or 1. If a transaction has not yet been started, the incoming configuration is applied (if valid). If a transaction has already been started, cancels any started transaction and the incoming configuration is applied (if valid).</p> <p>1: (Re)Start set transaction: In the next UBX-CFG-VALSET, it can be either 0, 1, 2 or 3. If a transaction has not yet been started, a transaction will be started. If a transaction has already been started, restarts the transaction, effectively removing all previous non-applied UBX-CFG-VALSET messages.</p> <p>2: Set transaction ongoing: In the next UBX-CFG-VALSET, it can be either 0, 1, 2 or 3.</p> <p>3: Apply and end a set transaction: In the next UBX-CFG-VALSET, it can be either 0 or 1.</p>

## 5.10 UBX-INF (0x04)

Information Messages: i.e. Printf-Style Messages, with IDs such as Error, Warning, Notice.

Messages in the INF class are used to output strings in a printf style from the firmware or application code. All INF messages have an associated type to indicate the kind of message.

### 5.10.1 UBX-INF-DEBUG (0x04 0x04)

#### 5.10.1.1 ASCII output with debug contents

Message	UBX-INF-DEBUG					
Description	ASCII output with debug contents					
Firmware	Supported on: <ul style="list-style-type: none"><li>• <a href="#">u-blox 9 with protocol version 27</a></li></ul>					
Type	Output					
Comment	This message has a variable length payload, representing an ASCII string.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x04	0x04	0 + 1 *N	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
Start of repeated block (N times)						
N*1	CH	-	str	-	ASCII Character	
End of repeated block						

### 5.10.2 UBX-INF-ERROR (0x04 0x00)

#### 5.10.2.1 ASCII output with error contents

Message	UBX-INF-ERROR					
Description	ASCII output with error contents					
Firmware	Supported on: <ul style="list-style-type: none"><li>u-blox 9 with protocol version 27</li></ul>					
Type	Output					
Comment	This message has a variable length payload, representing an ASCII string.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x04	0x00	0 + 1*N	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
Start of repeated block (N times)						
N*1	CH	-	str	-	ASCII Character	
End of repeated block						

### 5.10.3 UBX-INF-NOTICE (0x04 0x02)

#### 5.10.3.1 ASCII output with informational contents

Message	UBX-INF-NOTICE					
Description	ASCII output with informational contents					
Firmware	Supported on: <ul style="list-style-type: none"><li>• <a href="#">u-blox 9 with protocol version 27</a></li></ul>					
Type	Output					
Comment	This message has a variable length payload, representing an ASCII string.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x04	0x02	0 + 1*N	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
Start of repeated block (N times)						
N*1	CH	-	str	-	ASCII Character	
End of repeated block						

### 5.10.4 UBX-INF-TEST (0x04 0x03)

#### 5.10.4.1 ASCII output with test contents

Message	UBX-INF-TEST					
Description	ASCII output with test contents					
Firmware	Supported on: <ul style="list-style-type: none"><li>u-blox 9 with protocol version 27</li></ul>					
Type	Output					
Comment	This message has a variable length payload, representing an ASCII string.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x04	0x03	0 + 1*N	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
Start of repeated block (N times)						
N*1	CH	-	str	-	ASCII Character	
End of repeated block						

### 5.10.5 UBX-INF-WARNING (0x04 0x01)

#### 5.10.5.1 ASCII output with warning contents

Message	UBX-INF-WARNING					
Description	ASCII output with warning contents					
Firmware	Supported on: <ul style="list-style-type: none"><li>u-blox 9 with protocol version 27</li></ul>					
Type	Output					
Comment	This message has a variable length payload, representing an ASCII string.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x04	0x01	0 + 1*N	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
Start of repeated block (N times)						
N*1	CH	-	str	-	ASCII Character	
End of repeated block						

## 5.11 UBX-LOG (0x21)

Logging Messages: i.e. Log creation, deletion, info and retrieval.

Messages in the LOG class are used to configure and report status information of the logging and batching features.


### 5.11.1 UBX-LOG-CREATE (0x21 0x07)

#### 5.11.1.1 Create Log File

Message	<b>UBX-LOG-CREATE</b>					
Description	<b>Create Log File</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Command					
Comment	This message is used to create an initial logging file and activate the logging subsystem. <a href="#">UBX-ACK-ACK</a> or <a href="#">UBX-ACK-NAK</a> are returned to indicate success or failure. This message does not handle activation of recording or filtering of log entries (see <a href="#">UBX-CFG-LOGFILTER</a> ).					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x21	0x07	8	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	The version of this message. Set to 0	
1	X1	-	logCfg	-	Config flags (see <a href="#">graphic below</a> )	
2	U1	-	reserved1	-	<a href="#">Reserved</a>	
3	U1	-	logSize	-	Indicates the size of the log: 0 (maximum safe size): Ensures that logging will not be interrupted and enough space will be left available for all other uses of the filestore 1 (minimum size): 2 (user defined): See 'userDefinedSize' below	
4	U4	-	userDefinedSize	bytes	Sets the maximum amount of space in the filestore that can be used by the logging task. This field is only applicable if logSize is set to user defined.	

### Bitfield logCfg

This graphic explains the bits of logCfg



☐ signed value  
☒ unsigned value  
☐ reserved

Name	Description
circular	Log is circular (new entries overwrite old ones in a full log) if this bit set

### 5.11.2 UBX-LOG-ERASE (0x21 0x03)

#### 5.11.2.1 Erase Logged Data

Message	<b>UBX-LOG-ERASE</b>					
Description	<b>Erase Logged Data</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Command					
Comment	This message deactivates the logging system and erases all logged data. <a href="#">UBX-ACK-ACK</a> or <a href="#">UBX-ACK-NAK</a> are returned to indicate success or failure.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x21	0x03	0	see below	CK_A CK_B
No payload						

### 5.11.3 UBX-LOG-FINDTIME (0x21 0x0E)

#### 5.11.3.1 Find index of a log entry based on a given time

Message	<b>UBX-LOG-FINDTIME</b>					
Description	<b>Find index of a log entry based on a given time</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Input					
Comment	This message can be used for a time-based search of a log. It can find the index of the first log entry with time equal to the given time, otherwise the index of the most recent entry with time less than the given time. This index can then be used with the <a href="#">UBX-LOG-RETRIEVE</a> message to provide time-based retrieval of log entries. Searching a log is effective for a given time later than the base date (January 1st, 2004). Searching a log for a given time earlier than the base date will result in an 'entry not found' response. Searching a log for a given time greater than the last recorded entry's time will return the index of the last recorded entry.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x21	0x0E	12	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (=0 for this version)	
1	U1	-	type	-	Message type, 0 for request	
2	U1[2]	-	reserved1	-	<a href="#">Reserved</a>	
4	U2	-	year	-	Year (1-65635) of UTC time	
6	U1	-	month	-	Month (1-12) of UTC time	
7	U1	-	day	-	Day (1-31) of UTC time	
8	U1	-	hour	-	Hour (0-23) of UTC time	
9	U1	-	minute	-	Minute (0-59) of UTC time	

## LOG-FINDTIME continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
10	U1	-	second	-	Second (0-60) of UTC time
11	U1	-	reserved2	-	Reserved

### 5.11.3.2 Response to FINDTIME request

Message	<b>UBX-LOG-FINDTIME</b>					
Description	<b>Response to FINDTIME request</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Output					
Comment	-					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x21	0x0E	8	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (=1 for this version)	
1	U1	-	type	-	Message type, 1 for response	
2	U1[2]	-	reserved1	-	Reserved	
4	U4	-	entryNumber	-	Index of the first log entry with time = given time, otherwise index of the most recent entry with time < given time. If 0xFFFFFFFF, no log entry found with time <= given time. The indexing of log entries is zero based.	

### 5.11.4 UBX-LOG-INFO (0x21 0x08)

#### 5.11.4.1 Poll for log information

Message	<b>UBX-LOG-INFO</b>					
Description	<b>Poll for log information</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Poll Request					
Comment	Upon sending of this message, the receiver returns UBX-LOG-INFO as defined below.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x21	0x08	0	see below	CK_A CK_B
No payload						

### 5.11.4.2 Log information

Message	<b>UBX-LOG-INFO</b>					
Description	<b>Log information</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Output					
Comment	<p>This message is used to report information about the logging subsystem.</p> <p>Note:</p> <ul style="list-style-type: none"> <li>The reported maximum log size will be smaller than that originally specified in LOG-CREATE due to logging and filestore implementation overheads.</li> <li>Log entries are compressed in a variable length fashion, so it may be difficult to predict log space usage with any precision.</li> <li>There may be times when the receiver does not have an accurate time (e.g. if the week number is not yet known), in which case some entries will not have a timestamp. This may result in the oldest/newest entry time values not taking account of these entries.</li> </ul>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x21	0x08	48	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	The version of this message. Set to 1	
1	U1[3]	-	reserved1	-	Reserved	
4	U4	-	filestoreCapacity	bytes	The capacity of the filestore	
8	U1[8]	-	reserved2	-	Reserved	
16	U4	-	currentMaxLogSize	bytes	The maximum size the current log is allowed to grow to	
20	U4	-	currentLogSize	bytes	Approximate amount of space in log currently occupied	
24	U4	-	entryCount	-	<p>Number of entries in the log.</p> <p>Note: for circular logs this value will decrease when a group of entries is deleted to make space for new ones.</p>	
28	U2	-	oldestYear	-	Oldest entry UTC year (1-65635) or zero if there are no entries with known time	
30	U1	-	oldestMonth	-	Oldest month (1-12)	
31	U1	-	oldestDay	-	Oldest day (1-31)	
32	U1	-	oldestHour	-	Oldest hour (0-23)	
33	U1	-	oldestMinute	-	Oldest minute (0-59)	
34	U1	-	oldestSecond	-	Oldest second (0-60)	
35	U1	-	reserved3	-	Reserved	
36	U2	-	newestYear	-	Newest year (1-65635) or zero if there are no entries with known time	
38	U1	-	newestMonth	-	Newest month (1-12)	
39	U1	-	newestDay	-	Newest day (1-31)	
40	U1	-	newestHour	-	Newest hour (0-23)	




## LOG-INFO continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
41	U1	-	newestMinute	-	Newest minute (0-59)
42	U1	-	newestSecond	-	Newest second (0-60)
43	U1	-	reserved4	-	Reserved
44	X1	-	status	-	Log status flags (see <a href="#">graphic below</a> )
45	U1[3]	-	reserved5	-	Reserved

## Bitfield status

This graphic explains the bits of status

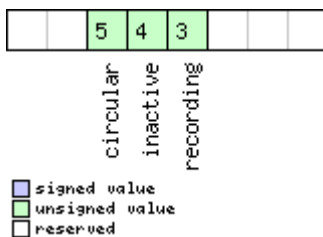

Name	Description
recording	Log entry recording is currently turned on
inactive	Logging system not active - no log present
circular	The current log is circular

### 5.11.5 UBX-LOG-RETRIEVEPOSEXTRA (0x21 0x0f)

#### 5.11.5.1 Odometer log entry

Message	UBX-LOG-RETRIEVEPOSEXTRA					
Description	Odometer log entry					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Output					
Comment	This message is used to report an odometer log entry					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x21	0x0f	32	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	entryIndex	-	The index of this log entry	
4	U1	-	version	-	The version of this message. Set to 0	
5	U1	-	reserved1	-	Reserved	
6	U2	-	year	-	Year (1-65635) of UTC time. Will be zero if time not known	
8	U1	-	month	-	Month (1-12) of UTC time	
9	U1	-	day	-	Day (1-31) of UTC time	
10	U1	-	hour	-	Hour (0-23) of UTC time	
11	U1	-	minute	-	Minute (0-59) of UTC time	
12	U1	-	second	-	Second (0-60) of UTC time	

## LOG-RETRIEVEPOSEXTRA continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
13	U1[3]	-	reserved2	-	Reserved
16	U4	-	distance	-	Odometer distance traveled since the last time the odometer was reset by a <a href="#">UBX-NAV-RESETODO</a>
20	U1[12]	-	reserved3	-	Reserved

### 5.11.6 UBX-LOG-RETRIEVEPOS (0x21 0x0b)

#### 5.11.6.1 Position fix log entry

Message	<b>UBX-LOG-RETRIEVEPOS</b>					
Description	<b>Position fix log entry</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Output					
Comment	This message is used to report a position fix log entry					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x21	0x0b	40	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	entryIndex	-	The index of this log entry	
4	I4	1e-7	lon	deg	Longitude	
8	I4	1e-7	lat	deg	Latitude	
12	I4	-	hMSL	mm	Height above mean sea level	
16	U4	-	hAcc	mm	Horizontal accuracy estimate	
20	U4	-	gSpeed	mm/s	Ground speed (2-D)	
24	U4	1e-5	heading	deg	Heading	
28	U1	-	version	-	The version of this message. Set to 0	
29	U1	-	fixType	-	Fix type: 0x01: Dead Reckoning only 0x02: 2D-Fix 0x03: 3D-Fix 0x04: GNSS + Dead Reckoning combined	
30	U2	-	year	-	Year (1-65635) of UTC time	
32	U1	-	month	-	Month (1-12) of UTC time	
33	U1	-	day	-	Day (1-31) of UTC time	
34	U1	-	hour	-	Hour (0-23) of UTC time	
35	U1	-	minute	-	Minute (0-59) of UTC time	
36	U1	-	second	-	Second (0-60) of UTC time	
37	U1	-	reserved1	-	Reserved	
38	U1	-	numSV	-	Number of satellites used in the position fix	
39	U1	-	reserved2	-	Reserved	

### 5.11.7 UBX-LOG-RETRIEVESTRING (0x21 0x0d)

#### 5.11.7.1 Byte string log entry

Message	UBX-LOG-RETRIEVESTSTRING					
Description	Byte string log entry					
Firmware	Supported on: <ul style="list-style-type: none"><li>u-blox 9 with protocol version 27</li></ul>					
Type	Output					
Comment	This message is used to report a byte string log entry					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x21	0x0d	16 + 1*byteCount	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	entryIndex	-	The index of this log entry	
4	U1	-	version	-	The version of this message. Set to 0	
5	U1	-	reserved1	-	Reserved	
6	U2	-	year	-	Year (1-65635) of UTC time. Will be zero if time not known	
8	U1	-	month	-	Month (1-12) of UTC time	
9	U1	-	day	-	Day (1-31) of UTC time	
10	U1	-	hour	-	Hour (0-23) of UTC time	
11	U1	-	minute	-	Minute (0-59) of UTC time	
12	U1	-	second	-	Second (0-60) of UTC time	
13	U1	-	reserved2	-	Reserved	
14	U2	-	byteCount	-	Size of string in bytes	
Start of repeated block (byteCount times)						
16 + 1*N	U1	-	bytes	-	The bytes of the string	
End of repeated block						

### 5.11.8 UBX-LOG-RETRIEVE (0x21 0x09)

#### 5.11.8.1 Request log data

Message	<b>UBX-LOG-RETRIEVE</b>
Description	<b>Request log data</b>
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>
Type	Command
Comment	<p>This message is used to request logged data (log recording must first be disabled, see <a href="#">UBX-CFG-LOGFILTER</a>).</p> <p>Log entries are returned in chronological order, using the messages <a href="#">UBX-LOG-RETRIEVEPOS</a> and <a href="#">UBX-LOG-RETRIEVESTRING</a>. If the odometer was enabled at the time a position was logged, then message <a href="#">UBX-LOG-RETRIEVEPOSEXTRA</a> will also be used. The maximum number of entries that can be returned in response to a single UBX-LOG-RETRIEVE message is 256. If more entries than this are required the message will need to be sent multiple times with different startNumbers. The retrieve will be stopped if any UBX-LOG message is received. The speed of transfer can be maximized by using a high</p>

		data rate and temporarily stopping the GPS processing (see <a href="#">UBX-CFG-RST</a> ).				
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x21	0x09	12	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	startNumber	-	Index of first log entry to be transferred. If it is larger than the index of the last available log entry, then the first log entry to be transferred is the last available log entry. The indexing of log entries is zero based.	
4	U4	-	entryCount	-	Number of log entries to transfer in total including the first entry to be transferred. If it is larger than the log entries available starting from the first entry to be transferred, then only the available log entries are transferred followed by a <a href="#">UBX-ACK-NAK</a> . The maximum is 256.	
8	U1	-	version	-	The version of this message. Set to 0.	
9	U1[3]	-	reserved1	-	<a href="#">Reserved</a>	

### 5.11.9 UBX-LOG-STRING (0x21 0x04)

#### 5.11.9.1 Store arbitrary string in on-board flash

Message	UBX-LOG-STRING					
Description	Store arbitrary string in on-board flash					
Firmware	Supported on: <ul style="list-style-type: none"><li>u-blox 9 with protocol version 27</li></ul>					
Type	Command					
Comment	This message can be used to store an arbitrary byte string in the on-board flash memory. The maximum length that can be stored is 256 bytes.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x21	0x04	0 + 1*N	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
Start of repeated block (N times)						
N*1	U1	-	bytes	-	The string of bytes to be logged (maximum 256)	
End of repeated block						

## 5.12 UBX-MGA (0x13)

Multiple GNSS Assistance Messages: i.e. Assistance data for various GNSS.

Messages in the MGA class are used for GNSS aiding information from and to the receiver.

### 5.12.1 UBX-MGA-ACK (0x13 0x60)

#### 5.12.1.1 UBX-MGA-ACK-DATA0

Message	<b>UBX-MGA-ACK-DATA0</b>					
Description	<b>Multiple GNSS Acknowledge message</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Output					
Comment	This message is sent by a u-blox receiver to acknowledge the receipt of an assistance message. Acknowledgments are enabled by setting the ackAiding parameter in the <a href="#">UBX-CFG-NAVX5</a> message. See the description of <a href="#">flow control</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x60	8	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Type of acknowledgment: 0: The message was not used by the receiver (see infoCode field for an indication of why) 1: The message was accepted for use by the receiver (the infoCode field will be 0)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1	-	infoCode	-	Provides greater information on what the receiver chose to do with the message contents: 0: The receiver accepted the data 1: The receiver doesn't know the time so can't use the data (To resolve this a <a href="#">UBX-MGA-INITIME-UTC</a> message should be supplied first) 2: The message version is not supported by the receiver 3: The message size does not match the message version 4: The message data could not be stored to the database 5: The receiver is not ready to use the message data 6: The message type is unknown	
3	U1	-	msgId	-	UBX message ID of the ack'ed message	
4	U1[4]	-	msgPayloadStart	-	The first 4 bytes of the ack'ed message's payload	

## 5.12.2 UBX-MGA-BDS (0x13 0x03)

### 5.12.2.1 UBX-MGA-BDS-EPH

Message	<b>UBX-MGA-BDS-EPH</b>					
Description	<b>BDS Ephemeris Assistance</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Input					
Comment	This message allows the delivery of BeiDou ephemeris assistance to a receiver. See the description of <a href="#">AssistNow Online</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x03	88	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x01 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1	-	svId	-	BDS satellite identifier (see <a href="#">Satellite Numbering</a> )	
3	U1	-	reserved1	-	<a href="#">Reserved</a>	
4	U1	-	SatH1	-	Autonomous satellite Health flag	
5	U1	-	IODC	-	Issue of Data, Clock	
6	I2	2 <sup>-66</sup>	a2	s/s <sup>2</sup>	Time polynomial coefficient 2	
8	I4	2 <sup>-50</sup>	a1	s/s	Time polynomial coefficient 1	
12	I4	2 <sup>-33</sup>	a0	s	Time polynomial coefficient 0	
16	U4	2 <sup>3</sup>	toc	s	Clock data reference time	
20	I2	0.1	TGD1	ns	Equipment Group Delay Differential	
22	U1	-	URAI	-	User Range Accuracy Index	
23	U1	-	IODE	-	Issue of Data, Ephemeris	
24	U4	2 <sup>3</sup>	toe	s	Ephemeris reference time	
28	U4	2 <sup>-19</sup>	sqrta	m <sup>0.5</sup>	Square root of semi-major axis	
32	U4	2 <sup>-33</sup>	e	-	Eccentricity	
36	I4	2 <sup>-31</sup>	omega	semi-circles	Argument of perigee	
40	I2	2 <sup>-43</sup>	Deltan	semi-circles/s	Mean motion difference from computed value	
42	I2	2 <sup>-43</sup>	IDOT	semi-circles/s	Rate of inclination angle	
44	I4	2 <sup>-31</sup>	M0	semi-circles	Mean anomaly at reference time	
48	I4	2 <sup>-31</sup>	Omega0	semi-circles	Longitude of ascending node of orbital of plane computed according to reference time	
52	I4	2 <sup>-43</sup>	OmegaDot	semi-circles/s	Rate of right ascension	
56	I4	2 <sup>-31</sup>	i0	semi-circles	Inclination angle at reference time	
60	I4	2 <sup>-31</sup>	Cuc	semi-circles	Amplitude of cosine harmonic correction term to the argument of latitude	

## MGA-BDS continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
64	I4	2 <sup>-31</sup>	Cus	semi-circles	Amplitude of sine harmonic correction term to the argument of latitude
68	I4	2 <sup>-6</sup>	Crc	m	Amplitude of cosine harmonic correction term to the orbit radius
72	I4	2 <sup>-6</sup>	Crs	m	Amplitude of sine harmonic correction term to the orbit radius
76	I4	2 <sup>-31</sup>	Cic	semi-circles	Amplitude of cosine harmonic correction term to the angle of inclination
80	I4	2 <sup>-31</sup>	Cis	semi-circles	Amplitude of sine harmonic correction term to the angle of inclination
84	U1[4]	-	reserved2	-	Reserved

## 5.12.2.2 UBX-MGA-BDS-ALM

Message	<b>UBX-MGA-BDS-ALM</b>					
Description	<b>BDS Almanac Assistance</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Input					
Comment	This message allows the delivery of BeiDou almanac assistance to a receiver. See the description of <a href="#">AssistNow Online</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x03	40	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x02 for this version)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1	-	svId	-	BeiDou satellite identifier (see <a href="#">Satellite Numbering</a> )	
3	U1	-	reserved1	-	Reserved	
4	U1	-	wna	week	Almanac Week Number	
5	U1	2 <sup>-12</sup>	toa	s	Almanac reference time	
6	I2	2 <sup>-19</sup>	deltaI	semi-circles	Almanac correction of orbit reference inclination at reference time	
8	U4	2 <sup>-11</sup>	sqrtA	m <sup>0.5</sup>	Almanac square root of semi-major axis	
12	U4	2 <sup>-21</sup>	e	-	Almanac eccentricity	
16	I4	2 <sup>-23</sup>	omega	semi-circles	Almanac argument of perigee	
20	I4	2 <sup>-23</sup>	M0	semi-circles	Almanac mean anomaly at reference time	
24	I4	2 <sup>-23</sup>	Omega0	semi-circles	Almanac longitude of ascending node of orbit plane at computed according to reference time	

## MGA-BDS continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
28	I4	2 <sup>-38</sup>	omegaDot	semi-circles/s	Almanac rate of right ascension
32	I2	2 <sup>-20</sup>	a0	s	Almanac satellite clock bias
34	I2	2 <sup>-38</sup>	a1	s/s	Almanac satellite clock rate
36	U1[4]	-	reserved2	-	Reserved

### 5.12.2.3 UBX-MGA-BDS-HEALTH

Message	<b>UBX-MGA-BDS-HEALTH</b>					
Description	<b>BDS Health Assistance</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Input					
Comment	This message allows the delivery of BeiDou health assistance to a receiver. See the description of <a href="#">AssistNow Online</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x03	68	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x04 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1[2]	-	reserved1	-	Reserved	
4	U2[30]	-	healthCode	-	Each two-byte value represents a BDS SV (1-30). The 9 LSBs of each byte contain the 9 bit health code from subframe 5 pages 7,8 of the D1 message, and from subframe 5 pages 35,36 of the D1 message.	
64	U1[4]	-	reserved2	-	Reserved	

### 5.12.2.4 UBX-MGA-BDS-UTC

Message	<b>UBX-MGA-BDS-UTC</b>					
Description	<b>BDS UTC Assistance</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Input					
Comment	This message allows the delivery of BeiDou UTC assistance to a receiver. See the description of <a href="#">AssistNow Online</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x03	20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x05 for this type)	



## MGA-BDS continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
1	U1	-	version	-	Message version (0x00 for this version)
2	U1[2]	-	reserved1	-	<a href="#">Reserved</a>
4	I4	$2^{-30}$	a0UTC	s	BDT clock bias relative to UTC
8	I4	$2^{-50}$	a1UTC	s/s	BDT clock rate relative to UTC
12	I1	-	dtLS	s	Delta time due to leap seconds before the new leap second effective
13	U1[1]	-	reserved2	-	<a href="#">Reserved</a>
14	U1	-	wnRec	week	BeiDou week number of reception of this UTC parameter set (8 bit truncated)
15	U1	-	wnLSF	week	Week number of the new leap second
16	U1	-	dN	day	Day number of the new leap second
17	I1	-	dtLSF	s	Delta time due to leap seconds after the new leap second effective
18	U1[2]	-	reserved3	-	<a href="#">Reserved</a>

## 5.12.2.5 UBX-MGA-BDS-IONO

Message	<b>UBX-MGA-BDS-IONO</b>					
Description	<b>BDS Ionospheric Assistance</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li><a href="#">u-blox 9 with protocol version 27</a></li> </ul>					
Type	Input					
Comment	This message allows the delivery of BeiDou ionospheric assistance to a receiver. See the description of <a href="#">AssistNow Online</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x03	16	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x06 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1[2]	-	reserved1	-	<a href="#">Reserved</a>	
4	I1	$2^{-30}$	alpha0	s	Ionospheric parameter alpha0	
5	I1	$2^{-27}$	alpha1	s/pi	Ionospheric parameter alpha1	
6	I1	$2^{-24}$	alpha2	s/pi <sup>2</sup>	Ionospheric parameter alpha2	
7	I1	$2^{-24}$	alpha3	s/pi <sup>3</sup>	Ionospheric parameter alpha3	
8	I1	$2^{-11}$	beta0	s	Ionospheric parameter beta0	
9	I1	$2^{-14}$	beta1	s/pi	Ionospheric parameter beta1	
10	I1	$2^{-16}$	beta2	s/pi <sup>2</sup>	Ionospheric parameter beta2	
11	I1	$2^{-16}$	beta3	s/pi <sup>3</sup>	Ionospheric parameter beta3	
12	U1[4]	-	reserved2	-	<a href="#">Reserved</a>	

### 5.12.3 UBX-MGA-DBD (0x13 0x80)

#### 5.12.3.1 Poll the Navigation Database

Message	<b>UBX-MGA-DBD</b>					
Description	<b>Poll the Navigation Database</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Poll Request					
Comment	Poll the whole navigation data base. The receiver will send all available data from its internal database. The receiver will indicate the finish of the transmission with a <a href="#">UBX-MGA-ACK</a> . The msgPayloadStart field of the UBX-MGA-ACK message will contain a U4 representing the number of UBX-MGA-DBD-DATA* messages sent.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x80	0	see below	CK_A CK_B
No payload						

#### 5.12.3.2 Navigation Database Dump Entry

Message	UBX-MGA-DBD					
Description	Navigation Database Dump Entry					
Firmware	Supported on: <ul style="list-style-type: none"><li>• <a href="#">u-blox 9 with protocol version 27</a></li></ul>					
Type	Input/Output					
Comment	<b>UBX-MGA-DBD messages are only intended to be sent back to the same receiver that generated them.</b> Navigation database entry. The data fields are firmware specific. Transmission of this type of message will be acknowledged by <a href="#">UBX-MGA-ACK</a> messages, if acknowledgment has been enabled (see the description of <a href="#">flow control</a> for details). The maximum payload size for firmware 2.01 onwards is 164 bytes (which makes the maximum message size 172 bytes).					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x80	12 + 1*N	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1[12]	-	reserved1	-	<a href="#">Reserved</a>	
Start of repeated block (N times)						
12 + 1*N	U1	-	data	-	fw specific data	
End of repeated block						

## 5.12.4 UBX-MGA-GAL (0x13 0x02)

### 5.12.4.1 UBX-MGA-GAL-EPH

Message	<b>UBX-MGA-GAL-EPH</b>					
Description	<b>Galileo Ephemeris Assistance</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Input					
Comment	This message allows the delivery of Galileo ephemeris assistance to a receiver. See the description of <a href="#">AssistNow Online</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x02	76	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x01 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1	-	svId	-	Galileo Satellite identifier (see <a href="#">Satellite Numbering</a> )	
3	U1	-	reserved1	-	<a href="#">Reserved</a>	
4	U2	-	iodNav	-	Ephemeris and clock correction Issue of Data	
6	I2	2 <sup>-43</sup>	deltaN	semi-circles/s	Mean motion difference from computed value	
8	I4	2 <sup>-31</sup>	m0	semi-circles	Mean anomaly at reference time	
12	U4	2 <sup>-33</sup>	e	-	Eccentricity	
16	U4	2 <sup>-19</sup>	sqrta	m <sup>0.5</sup>	Square root of the semi-major axis	
20	I4	2 <sup>-31</sup>	omega0	semi-circles	Longitude of ascending node of orbital plane at weekly epoch	
24	I4	2 <sup>-31</sup>	i0	semi-circles	Inclination angle at reference time	
28	I4	2 <sup>-31</sup>	omega	semi-circles	Argument of perigee	
32	I4	2 <sup>-43</sup>	omegaDot	semi-circles/s	Rate of change of right ascension	
36	I2	2 <sup>-43</sup>	iDot	semi-circles/s	Rate of change of inclination angle	
38	I2	2 <sup>-29</sup>	cuc	radians	Amplitude of the cosine harmonic correction term to the argument of latitude	
40	I2	2 <sup>-29</sup>	cus	radians	Amplitude of the sine harmonic correction term to the argument of latitude	
42	I2	2 <sup>-5</sup>	crc	radians	Amplitude of the cosine harmonic correction term to the orbit radius	
44	I2	2 <sup>-5</sup>	crs	radians	Amplitude of the sine harmonic correction term to the orbit radius	
46	I2	2 <sup>-29</sup>	cic	radians	Amplitude of the cosine harmonic correction term to the angle of inclination	

## MGA-GAL continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
48	I2	2 <sup>-29</sup>	cis	radians	Amplitude of the sine harmonic correction term to the angle of inclination
50	U2	60	toe	s	Ephemeris reference time
52	I4	2 <sup>-34</sup>	af0	s	SV clock bias correction coefficient
56	I4	2 <sup>-46</sup>	af1	s/s	SV clock drift correction coefficient
60	I1	2 <sup>-59</sup>	af2	s/s squared	SV clock drift rate correction coefficient
61	U1	-	sisIndexE1E5b	-	Signal-In-Space Accuracy index for dual frequency E1-E5b
62	U2	60	toc	s	Clock correction data reference Time of Week
64	I2	-	bgdE1E5b	-	E1-E5b Broadcast Group Delay
66	U1[2]	-	reserved2	-	Reserved
68	U1	-	healthE1B	-	E1-B Signal Health Status
69	U1	-	dataValidityE1B	-	E1-B Data Validity Status
70	U1	-	healthE5b	-	E5b Signal Health Status
71	U1	-	dataValidityE5b	-	E5b Data Validity Status
72	U1[4]	-	reserved3	-	Reserved

## 5.12.4.2 UBX-MGA-GAL-ALM

Message	<b>UBX-MGA-GAL-ALM</b>					
Description	<b>Galileo Almanac Assistance</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Input					
Comment	This message allows the delivery of Galileo almanac assistance to a receiver. See the description of <a href="#">AssistNow Online</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x02	32	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x02 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1	-	svId	-	Galileo Satellite identifier (see <a href="#">Satellite Numbering</a> )	
3	U1	-	reserved1	-	Reserved	
4	U1	-	ioda	-	Almanac Issue of Data	
5	U1	-	almWNa	week	Almanac reference week number	
6	U2	600	toa	s	Almanac reference time	
8	I2	2 <sup>-9</sup>	deltaSqrtA	m <sup>0.5</sup>	Difference with respect to the square root of the nominal semi-major axis (29 600 km)	

## MGA-GAL continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
10	U2	2 <sup>-16</sup>	e	-	Eccentricity
12	I2	2 <sup>-14</sup>	deltaI	semi-circles	Inclination at reference time relative to i0 = 56 degree
14	I2	2 <sup>-15</sup>	omega0	semi-circles	Longitude of ascending node of orbital plane at weekly epoch
16	I2	2 <sup>-33</sup>	omegaDot	semi-circles/s	Rate of change of right ascension
18	I2	2 <sup>-15</sup>	omega	semi-circles	Argument of perigee
20	I2	2 <sup>-15</sup>	m0	semi-circles	Satellite mean anomaly at reference time
22	I2	2 <sup>-19</sup>	af0	s	Satellite clock correction bias 'truncated'
24	I2	2 <sup>-38</sup>	af1	s/s	Satellite clock correction linear 'truncated'
26	U1	-	healthE1B	-	Satellite E1-B signal health status
27	U1	-	healthE5b	-	Satellite E5b signal health status
28	U1[4]	-	reserved2	-	Reserved

## 5.12.4.3 UBX-MGA-GAL-TIMEOFFSET

Message	<b>UBX-MGA-GAL-TIMEOFFSET</b>					
Description	<b>Galileo GPS time offset assistance</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Input					
Comment	This message allows the delivery of Galileo time to GPS time offset. See the description of <a href="#">AssistNow Online</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x02	12	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x03 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1[2]	-	reserved1	-	Reserved	
4	I2	2 <sup>-35</sup>	a0G	s	Constant term of the polynomial describing the offset	
6	I2	2 <sup>-51</sup>	a1G	s/s	Rate of change of the offset	
8	U1	3600	t0G	s	DReference time for GGTO data	
9	U1	-	wn0G	weeks	Week Number of GGTO reference	
10	U1[2]	-	reserved2	-	Reserved	

#### 5.12.4.4 UBX-MGA-GAL-UTC

Message	<b>UBX-MGA-GAL-UTC</b>					
Description	<b>Galileo UTC Assistance</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Input					
Comment	This message allows the delivery of Galileo UTC assistance to a receiver. See the description of <a href="#">AssistNow Online</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x02	20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x05 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1[2]	-	reserved1	-	<a href="#">Reserved</a>	
4	I4	2 <sup>-30</sup>	a0	s	First parameter of UTC polynomial	
8	I4	2 <sup>-50</sup>	a1	s/s	Second parameter of UTC polynomial	
12	I1	-	dtLS	s	Delta time due to current leap seconds	
13	U1	3600	tot	s	UTC parameters reference time of week (Galileo time)	
14	U1	-	wnt	weeks	UTC parameters reference week number (the 8 bit WNT field)	
15	U1	-	wnLSF	weeks	Week number at the end of which the future leap second becomes effective (the 8 bit WNLSF field)	
16	U1	-	dN	days	Day number at the end of which the future leap second becomes effective	
17	I1	-	dTLSF	s	Delta time due to future leap seconds	
18	U1[2]	-	reserved2	-	<a href="#">Reserved</a>	

#### 5.12.5 UBX-MGA-GLO (0x13 0x06)

##### 5.12.5.1 UBX-MGA-GLO-EPH

Message	<b>UBX-MGA-GLO-EPH</b>					
Description	<b>GLONASS Ephemeris Assistance</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Input					
Comment	This message allows the delivery of GLONASS ephemeris assistance to a receiver. See the description of <a href="#">AssistNow Online</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x06	48	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	

## MGA-GLO continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	type	-	Message type (0x01 for this type)
1	U1	-	version	-	Message version (0x00 for this version)
2	U1	-	svId	-	GLONASS Satellite identifier (see <a href="#">Satellite Numbering</a> )
3	U1	-	reserved1	-	<a href="#">Reserved</a>
4	U1	-	FT	-	User range accuracy
5	U1	-	B	-	Health flag from string 2
6	U1	-	M	-	Type of GLONASS satellite (1 indicates GLONASS-M)
7	I1	-	H	-	Carrier frequency number of navigation RF signal, Range=(-7 .. 6), -128 for unknown
8	I4	2 <sup>-11</sup>	x	km	X component of the SV position in PZ-90.02 coordinate System
12	I4	2 <sup>-11</sup>	y	km	Y component of the SV position in PZ-90.02 coordinate System
16	I4	2 <sup>-11</sup>	z	km	Z component of the SV position in PZ-90.02 coordinate System
20	I4	2 <sup>-20</sup>	dx	km/s	X component of the SV velocity in PZ-90.02 coordinate System
24	I4	2 <sup>-20</sup>	dy	km/s	Y component of the SV velocity in PZ-90.02 coordinate System
28	I4	2 <sup>-20</sup>	dz	km/s	Z component of the SV velocity in PZ-90.02 coordinate System
32	I1	2 <sup>-30</sup>	ddx	km/s <sup>2</sup>	X component of the SV acceleration in PZ-90.02 coordinate System
33	I1	2 <sup>-30</sup>	ddy	km/s <sup>2</sup>	Y component of the SV acceleration in PZ-90.02 coordinate System
34	I1	2 <sup>-30</sup>	ddz	km/s <sup>2</sup>	Z component of the SV acceleration in PZ-90.02 coordinate System
35	U1	15	tb	minutes	Index of a time interval within current day according to UTC(SU)
36	I2	2 <sup>-40</sup>	gamma	-	Relative carrier frequency deviation
38	U1	-	E	days	Ephemeris data age indicator
39	I1	2 <sup>-30</sup>	deltaTau	s	Time difference between L2 and L1 band
40	I4	2 <sup>-30</sup>	tau	s	SV clock bias
44	U1[4]	-	reserved2	-	<a href="#">Reserved</a>

### 5.12.5.2 UBX-MGA-GLO-ALM

Message	<b>UBX-MGA-GLO-ALM</b>					
Description	<b>GLONASS Almanac Assistance</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Input					
Comment	This message allows the delivery of GLONASS almanac assistance to a receiver. See the description of <a href="#">AssistNow Online</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x06	36	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x02 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1	-	svId	-	GLONASS Satellite identifier (see <a href="#">Satellite Numbering</a> )	
3	U1	-	reserved1	-	<a href="#">Reserved</a>	
4	U2	-	N	days	Reference calendar day number of almanac within the four-year period (from string 5)	
6	U1	-	M	-	Type of GLONASS satellite (1 indicates GLONASS-M)	
7	U1	-	C	-	Unhealthy flag at instant of almanac upload (1 indicates operability of satellite)	
8	I2	2 <sup>-18</sup>	tau	s	Coarse time correction to GLONASS time	
10	U2	2 <sup>-20</sup>	epsilon	-	Eccentricity	
12	I4	2 <sup>-20</sup>	lambda	semi-circles	Longitude of the first (within the N-day) ascending node of satellite orbit in PC-90.02 coordinate system	
16	I4	2 <sup>-20</sup>	deltaI	semi-circles	Correction to the mean value of inclination	
20	U4	2 <sup>-5</sup>	tLambda	s	Time of the first ascending node passage	
24	I4	2 <sup>-9</sup>	deltaT	s/orbital-period	Correction to the mean value of Draconian period	
28	I1	2 <sup>-14</sup>	deltaDT	s/orbital-period <sup>2</sup>	Rate of change of Draconian period	
29	I1	-	H	-	Carrier frequency number of navigation RF signal, Range=(-7 .. 6)	
30	I2	-	omega	-	Argument of perigee	
32	U1[4]	-	reserved2	-	<a href="#">Reserved</a>	



### 5.12.5.3 UBX-MGA-GLO-TIMEOFFSET

Message	<b>UBX-MGA-GLO-TIMEOFFSET</b>					
Description	<b>GLONASS Auxiliary Time Offset Assistance</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Input					
Comment	This message allows the delivery of auxiliary GLONASS assistance (including the GLONASS time offsets to other GNSS systems) to a receiver. See the description of <a href="#">AssistNow Online</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x06	20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x03 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U2	-	N	days	Reference calendar day number within the four-year period of almanac (from string 5)	
4	I4	2 <sup>-27</sup>	tauC	s	Time scale correction to UTC(SU) time	
8	I4	2 <sup>-31</sup>	tauGps	s	Correction to GPS time relative to GLONASS time	
12	I2	2 <sup>-10</sup>	B1	s	Coefficient to determine delta UT1	
14	I2	2 <sup>-16</sup>	B2	s/msd	Rate of change of delta UT1	
16	U1[4]	-	reserved1	-	<a href="#">Reserved</a>	

### 5.12.6 UBX-MGA-GPS (0x13 0x00)

#### 5.12.6.1 UBX-MGA-GPS-EPH

Message	<b>UBX-MGA-GPS-EPH</b>					
Description	<b>GPS Ephemeris Assistance</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Input					
Comment	This message allows the delivery of GPS ephemeris assistance to a receiver. See the description of <a href="#">AssistNow Online</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x00	68	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x01 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1	-	svId	-	GPS Satellite identifier (see <a href="#">Satellite Numbering</a> )	
3	U1	-	reserved1	-	<a href="#">Reserved</a>	
4	U1	-	fitInterval	-	Fit interval flag	
5	U1	-	uraIndex	-	URA index	

## MGA-GPS continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
6	U1	-	svHealth	-	SV health
7	I1	2 <sup>-31</sup>	tgdl	s	Group delay differential
8	U2	-	iodc	-	IODC
10	U2	2 <sup>4</sup>	toc	s	Clock data reference time
12	U1	-	reserved2	-	Reserved
13	I1	2 <sup>-55</sup>	af2	s/s squared	Time polynomial coefficient 2
14	I2	2 <sup>-43</sup>	af1	s/s	Time polynomial coefficient 1
16	I4	2 <sup>-31</sup>	af0	s	Time polynomial coefficient 0
20	I2	2 <sup>-5</sup>	crs	m	Crs
22	I2	2 <sup>-43</sup>	deltan	semi-circles/s	Mean motion difference from computed value
24	I4	2 <sup>-31</sup>	m0	semi-circles	Mean anomaly at reference time
28	I2	2 <sup>-29</sup>	cuc	radians	Amplitude of cosine harmonic correction term to argument of latitude
30	I2	2 <sup>-29</sup>	cus	radians	Amplitude of sine harmonic correction term to argument of latitude
32	U4	2 <sup>-33</sup>	e	-	Eccentricity
36	U4	2 <sup>-19</sup>	sqrtA	m <sup>0.5</sup>	Square root of the semi-major axis
40	U2	2 <sup>4</sup>	toe	s	Reference time of ephemeris
42	I2	2 <sup>-29</sup>	cic	radians	Amplitude of cos harmonic correction term to angle of inclination
44	I4	2 <sup>-31</sup>	omega0	semi-circles	Longitude of ascending node of orbit plane at weekly epoch
48	I2	2 <sup>-29</sup>	cis	radians	Amplitude of sine harmonic correction term to angle of inclination
50	I2	2 <sup>-5</sup>	crc	m	Amplitude of cosine harmonic correction term to orbit radius
52	I4	2 <sup>-31</sup>	i0	semi-circles	Inclination angle at reference time
56	I4	2 <sup>-31</sup>	omega	semi-circles	Argument of perigee
60	I4	2 <sup>-43</sup>	omegaDot	semi-circles/s	Rate of right ascension
64	I2	2 <sup>-43</sup>	idot	semi-circles/s	Rate of inclination angle
66	U1[2]	-	reserved3	-	Reserved

### 5.12.6.2 UBX-MGA-GPS-ALM

Message	<b>UBX-MGA-GPS-ALM</b>					
Description	<b>GPS Almanac Assistance</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Input					
Comment	This message allows the delivery of GPS almanac assistance to a receiver. See the description of <a href="#">AssistNow Online</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x00	36	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x02 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1	-	svId	-	GPS Satellite identifier (see <a href="#">Satellite Numbering</a> )	
3	U1	-	svHealth	-	SV health information	
4	U2	2 <sup>-21</sup>	e	-	Eccentricity	
6	U1	-	almWNa	week	Reference week number of almanac (the 8 bit WNa field)	
7	U1	2 <sup>-12</sup>	toa	s	Reference time of almanac	
8	I2	2 <sup>-19</sup>	deltaI	semi-circles	Delta inclination angle at reference time	
10	I2	2 <sup>-38</sup>	omegaDot	semi-circles/s	Rate of right ascension	
12	U4	2 <sup>-11</sup>	sqrtA	m <sup>0.5</sup>	Square root of the semi-major axis	
16	I4	2 <sup>-23</sup>	omega0	semi-circles	Longitude of ascending node of orbit plane	
20	I4	2 <sup>-23</sup>	omega	semi-circles	Argument of perigee	
24	I4	2 <sup>-23</sup>	m0	semi-circles	Mean anomaly at reference time	
28	I2	2 <sup>-20</sup>	af0	s	Time polynomial coefficient 0 (8 MSBs)	
30	I2	2 <sup>-38</sup>	af1	s/s	Time polynomial coefficient 1	
32	U1[4]	-	reserved1	-	<a href="#">Reserved</a>	

### 5.12.6.3 UBX-MGA-GPS-HEALTH

Message	<b>UBX-MGA-GPS-HEALTH</b>					
Description	<b>GPS Health Assistance</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Input					
Comment	This message allows the delivery of GPS health assistance to a receiver. See the description of <a href="#">AssistNow Online</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x00	40	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x04 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1[2]	-	reserved1	-	<a href="#">Reserved</a>	
4	U1[32]	-	healthCode	-	Each byte represents a GPS SV (1-32). The 6 LSBs of each byte contains the 6 bit health code from subframes 4/5 page 25.	
36	U1[4]	-	reserved2	-	<a href="#">Reserved</a>	

### 5.12.6.4 UBX-MGA-GPS-UTC

Message	<b>UBX-MGA-GPS-UTC</b>					
Description	<b>GPS UTC Assistance</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Input					
Comment	This message allows the delivery of GPS UTC assistance to a receiver. See the description of <a href="#">AssistNow Online</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x00	20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x05 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1[2]	-	reserved1	-	<a href="#">Reserved</a>	
4	I4	2 <sup>-30</sup>	utcA0	s	First parameter of UTC polynomial	
8	I4	2 <sup>-50</sup>	utcA1	s/s	Second parameter of UTC polynomial	
12	I1	-	utcDtLS	s	Delta time due to current leap seconds	
13	U1	2 <sup>12</sup>	utcTot	s	UTC parameters reference time of week (GPS time)	
14	U1	-	utcWNt	weeks	UTC parameters reference week number (the 8 bit WNt field)	

## MGA-GPS continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
15	U1	-	utcWNlsf	weeks	Week number at the end of which the future leap second becomes effective (the 8 bit WNLSF field)
16	U1	-	utcDn	days	Day number at the end of which the future leap second becomes effective
17	I1	-	utcDtLSF	s	Delta time due to future leap seconds
18	U1[2]	-	reserved2	-	Reserved

## 5.12.6.5 UBX-MGA-GPS-IONO

Message	UBX-MGA-GPS-IONO					
Description	GPS Ionosphere Assistance					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Input					
Comment	This message allows the delivery of GPS ionospheric assistance to a receiver. See the description of <a href="#">AssistNow Online</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x00	16	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x06 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1[2]	-	reserved1	-	Reserved	
4	I1	2 <sup>-30</sup>	ionoAlpha0	s	Ionospheric parameter alpha0 [s]	
5	I1	2 <sup>-27</sup>	ionoAlpha1	s/semi-circle	Ionospheric parameter alpha1 [s/semi-circle]	
6	I1	2 <sup>-24</sup>	ionoAlpha2	s/(semi-circle <sup>2</sup> )	Ionospheric parameter alpha2 [s/semi-circle <sup>2</sup> ]	
7	I1	2 <sup>-24</sup>	ionoAlpha3	s/(semi-circle <sup>3</sup> )	Ionospheric parameter alpha3 [s/semi-circle <sup>3</sup> ]	
8	I1	2 <sup>-11</sup>	ionoBeta0	s	Ionospheric parameter beta0 [s]	
9	I1	2 <sup>-14</sup>	ionoBeta1	s/semi-circle	Ionospheric parameter beta1 [s/semi-circle]	
10	I1	2 <sup>-16</sup>	ionoBeta2	s/(semi-circle <sup>2</sup> )	Ionospheric parameter beta2 [s/semi-circle <sup>2</sup> ]	
11	I1	2 <sup>-16</sup>	ionoBeta3	s/(semi-circle <sup>3</sup> )	Ionospheric parameter beta3 [s/semi-circle <sup>3</sup> ]	
12	U1[4]	-	reserved2	-	Reserved	

## 5.12.7 UBX-MGA-INI (0x13 0x40)

### 5.12.7.1 UBX-MGA-INI-POS\_XYZ

Message	UBX-MGA-INI-POS_XYZ					
Description	Initial Position Assistance					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Input					
Comment	<b>Supplying position assistance that is inaccurate by more than the specified position accuracy, may lead to substantially degraded receiver performance.</b> This message allows the delivery of initial position assistance to a receiver in cartesian ECEF coordinates. This message is equivalent to the <a href="#">UBX-MGA-INI-POS_LLH</a> message, except for the coordinate system. See the description of <a href="#">AssistNow Online</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x40	20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x00 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1[2]	-	reserved1	-	<a href="#">Reserved</a>	
4	I4	-	ecefX	cm	WGS84 ECEF X coordinate	
8	I4	-	ecefY	cm	WGS84 ECEF Y coordinate	
12	I4	-	ecefZ	cm	WGS84 ECEF Z coordinate	
16	U4	-	posAcc	cm	Position accuracy (stddev)	

### 5.12.7.2 UBX-MGA-INI-POS\_LLH

Message	UBX-MGA-INI-POS_LLH					
Description	Initial Position Assistance					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Input					
Comment	<b>Supplying position assistance that is inaccurate by more than the specified position accuracy, may lead to substantially degraded receiver performance.</b> This message allows the delivery of initial position assistance to a receiver in WGS84 lat/long/alt coordinates. This message is equivalent to the <a href="#">UBX-MGA-INI-POS_XYZ</a> message, except for the coordinate system. See the description of <a href="#">AssistNow Online</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x40	20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x01 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1[2]	-	reserved1	-	<a href="#">Reserved</a>	

## MGA-INI continued


Byte Offset	Number Format	Scaling	Name	Unit	Description
4	I4	1e-7	lat	deg	WGS84 Latitude
8	I4	1e-7	lon	deg	WGS84 Longitude
12	I4	-	alt	cm	WGS84 Altitude
16	U4	-	posAcc	cm	Position accuracy (stddev)

## 5.12.7.3 UBX-MGA-INITIME\_UTC

Message	UBX-MGA-INITIME_UTC					
Description	Initial Time Assistance					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Input					
Comment	<b>Supplying time assistance that is inaccurate by more than the specified time accuracy, may lead to substantially degraded receiver performance.</b> This message allows the delivery of UTC time assistance to a receiver. This message is equivalent to the <a href="#">UBX-MGA-INITIME_GNSS</a> message, except for the time base. See the description of <a href="#">AssistNow Online</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x40	24	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x10 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	X1	-	ref	-	Reference to be used to set time (see <a href="#">graphic below</a> )	
3	I1	-	leapSecs	s	Number of leap seconds since 1980 (or 0x80 = -128 if unknown)	
4	U2	-	year	-	Year	
6	U1	-	month	-	Month, starting at 1	
7	U1	-	day	-	Day, starting at 1	
8	U1	-	hour	-	Hour, from 0 to 23	
9	U1	-	minute	-	Minute, from 0 to 59	
10	U1	-	second	s	Seconds, from 0 to 59	
11	U1	-	reserved1	-	<a href="#">Reserved</a>	
12	U4	-	ns	ns	Nanoseconds, from 0 to 999,999,999	
16	U2	-	tAccS	s	Seconds part of time accuracy	
18	U1[2]	-	reserved2	-	<a href="#">Reserved</a>	
20	U4	-	tAccNs	ns	Nanoseconds part of time accuracy, from 0 to 999,999,999	

## Bitfield ref

This graphic explains the bits of `ref`

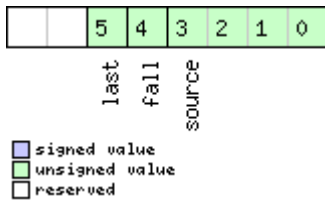

Name	Description
source	0: none, i.e. on receipt of message (will be inaccurate!) 1: relative to pulse sent to EXTINT0 2: relative to pulse sent to EXTINT1 3-15: reserved
fall	use falling edge of EXTINT pulse (default rising) - only if source is EXTINT
last	use last EXTINT pulse (default next pulse) - only if source is EXTINT

### 5.12.7.4 UBX-MGA-INI-TIME\_GNSS

Message	UBX-MGA-INI-TIME_GNSS					
Description	Initial Time Assistance					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Input					
Comment	<b>Supplying time assistance that is inaccurate by more than the specified time accuracy, may lead to substantially degraded receiver performance.</b> This message allows the delivery of time assistance to a receiver in a chosen GNSS timebase. This message is equivalent to the <a href="#">UBX-MGA-INI-TIME_UTC</a> message, except for the time base. See the description of <a href="#">AssistNow Online</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x40	24	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x11 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	X1	-	ref	-	Reference to be used to set time (see <a href="#">graphic below</a> )	
3	U1	-	gnssId	-	Source of time information. Currently supported: 0: GPS time 2: Galileo time 3: BeiDou time 6: GLONASS time: $week = 834 + ((N4-1)*1461 + Nt)/7$ , $tow = (((N4-1)*1461 + Nt) \% 7) * 86400 + tod$	
4	U1[2]	-	reserved1	-	<a href="#">Reserved</a>	
6	U2	-	week	-	GNSS week number	
8	U4	-	tow	s	GNSS time of week	




## MGA-INI continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
12	U4	-	ns	ns	GNSS time of week, nanosecond part from 0 to 999,999,999
16	U2	-	tAccS	s	Seconds part of time accuracy
18	U1[2]	-	reserved2	-	Reserved
20	U4	-	tAccNs	ns	Nanoseconds part of time accuracy, from 0 to 999,999,999

## Bitfield ref

This graphic explains the bits of `ref`



last  
fall  
source

■ signed value  
■ unsigned value  
■ reserved

Name	Description
source	0: none, i.e. on receipt of message (will be inaccurate!) 1: relative to pulse sent to EXTINT0 2: relative to pulse sent to EXTINT1 3-15: reserved
fall	use falling edge of EXTINT pulse (default rising) - only if source is EXTINT
last	use last EXTINT pulse (default next pulse) - only if source is EXTINT

### 5.12.7.5 UBX-MGA-INI-CLKD


Message	<b>UBX-MGA-INI-CLKD</b>					
Description	<b>Initial Clock Drift Assistance</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Input					
Comment	<b>Supplying clock drift assistance that is inaccurate by more than the specified accuracy, may lead to substantially degraded receiver performance.</b> This message allows the delivery of clock drift assistance to a receiver. See the description of <a href="#">AssistNow Online</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x40	12	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x20 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1[2]	-	reserved1	-	Reserved	
4	I4	-	clkD	ns/s	Clock drift	
8	U4	-	clkDAcc	ns/s	Clock drift accuracy	

### 5.12.7.6 UBX-MGA-INI-FREQ

Message	<b>UBX-MGA-INI-FREQ</b>					
Description	<b>Initial Frequency Assistance</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Input					
Comment	<b>Supplying external frequency assistance that is inaccurate by more than the specified accuracy, may lead to substantially degraded receiver performance.</b> This message allows the delivery of external frequency assistance to a receiver. See the description of <a href="#">AssistNow Online</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x40	12	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x21 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1	-	reserved1	-	<a href="#">Reserved</a>	
3	X1	-	flags	-	Frequency reference (see <a href="#">graphic below</a> )	
4	I4	1e-2	freq	Hz	Frequency	
8	U4	-	freqAcc	ppb	Frequency accuracy	

### Bitfield flags

This graphic explains the bits of flags

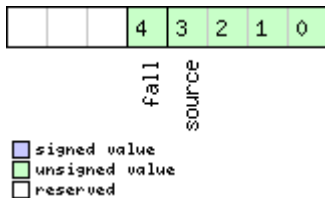

Name	Description
source	0: frequency available on EXTINT0 1: frequency available on EXTINT1 2-15: reserved
fall	use falling edge of EXTINT pulse (default rising)

### 5.12.7.7 UBX-MGA-INI-EOP

Message	<b>UBX-MGA-INI-EOP</b>					
Description	<b>Earth Orientation Parameters Assistance</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Input					
Comment	This message allows the delivery of new Earth Orientation Parameters (EOP) to a receiver to improve AssistNow Autonomous operation.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x40	72	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x30 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1[2]	-	reserved1	-	<a href="#">Reserved</a>	
4	U2	-	d2kRef	d	reference time (days since 1.1.2000 12.00h UTC)	
6	U2	-	d2kMax	d	expiration time (days since 1.1.2000 12.00h UTC)	
8	I4	2 <sup>-30</sup>	xpP0	arcsec	x <sub>p</sub> t <sup>0</sup> polynomial term (offset)	
12	I4	2 <sup>-30</sup>	xpP1	arcsec/d	x <sub>p</sub> t <sup>1</sup> polynomial term (drift)	
16	I4	2 <sup>-30</sup>	ypP0	arcsec	y <sub>p</sub> t <sup>0</sup> polynomial term (offset)	
20	I4	2 <sup>-30</sup>	ypP1	arcsec/d	y <sub>p</sub> t <sup>1</sup> polynomial term (drift)	
24	I4	2 <sup>-25</sup>	dUT1	s	dUT1 t <sup>0</sup> polynomial term (offset)	
28	I4	2 <sup>-30</sup>	ddUT1	s/d	dUT1 t <sup>1</sup> polynomial term (drift)	
32	U1[40]	-	reserved2	-	<a href="#">Reserved</a>	

### 5.12.8 UBX-MGA-QZSS (0x13 0x05)

#### 5.12.8.1 UBX-MGA-QZSS-EPH

Message	<b>UBX-MGA-QZSS-EPH</b>					
Description	<b>QZSS Ephemeris Assistance</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Input					
Comment	This message allows the delivery of QZSS ephemeris assistance to a receiver. See the description of <a href="#">AssistNow Online</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x05	68	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x01 for this type)	

## MGA-QZSS continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
1	U1	-	version	-	Message version (0x00 for this version)
2	U1	-	svId	-	QZSS Satellite identifier (see <a href="#">Satellite Numbering</a> ), Range 1-5
3	U1	-	reserved1	-	<a href="#">Reserved</a>
4	U1	-	fitInterval	-	Fit interval flag
5	U1	-	uraIndex	-	URA index
6	U1	-	svHealth	-	SV health
7	I1	2 <sup>-31</sup>	tgdc	s	Group delay differential
8	U2	-	iodc	-	IODC
10	U2	2 <sup>4</sup>	toc	s	Clock data reference time
12	U1	-	reserved2	-	<a href="#">Reserved</a>
13	I1	2 <sup>-55</sup>	af2	s/s squared	Time polynomial coefficient 2
14	I2	2 <sup>-43</sup>	af1	s/s	Time polynomial coefficient 1
16	I4	2 <sup>-31</sup>	af0	s	Time polynomial coefficient 0
20	I2	2 <sup>-5</sup>	crs	m	Crs
22	I2	2 <sup>-43</sup>	deltaN	semi-circles/s	Mean motion difference from computed value
24	I4	2 <sup>-31</sup>	m0	semi-circles	Mean anomaly at reference time
28	I2	2 <sup>-29</sup>	cuc	radians	Amp of cosine harmonic corr term to arg of lat
30	I2	2 <sup>-29</sup>	cus	radians	Amp of sine harmonic corr term to arg of lat
32	U4	2 <sup>-33</sup>	e	-	eccentricity
36	U4	2 <sup>-19</sup>	sqrta	m <sup>0.5</sup>	Square root of the semi-major axis A
40	U2	2 <sup>4</sup>	toe	s	Reference time of ephemeris
42	I2	2 <sup>-29</sup>	cic	radians	Amp of cos harmonic corr term to angle of inclination
44	I4	2 <sup>-31</sup>	omega0	semi-circles	Long of asc node of orbit plane at weekly epoch
48	I2	2 <sup>-29</sup>	cis	radians	Amp of sine harmonic corr term to angle of inclination
50	I2	2 <sup>-5</sup>	crc	m	Amp of cosine harmonic corr term to orbit radius
52	I4	2 <sup>-31</sup>	i0	semi-circles	Inclination angle at reference time
56	I4	2 <sup>-31</sup>	omega	semi-circles	Argument of perigee
60	I4	2 <sup>-43</sup>	omegaDot	semi-circles/s	Rate of right ascension
64	I2	2 <sup>-43</sup>	idot	semi-circles/s	Rate of inclination angle
66	U1[2]	-	reserved3	-	<a href="#">Reserved</a>

### 5.12.8.2 UBX-MGA-QZSS-ALM

Message	<b>UBX-MGA-QZSS-ALM</b>					
Description	<b>QZSS Almanac Assistance</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Input					
Comment	This message allows the delivery of QZSS almanac assistance to a receiver. See the description of <a href="#">AssistNow Online</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x05	36	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x02 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1	-	svId	-	QZSS Satellite identifier (see <a href="#">Satellite Numbering</a> ), Range 1-5	
3	U1	-	svHealth	-	Almanac SV health information	
4	U2	2 <sup>-21</sup>	e	-	Almanac eccentricity	
6	U1	-	almWNa	week	Reference week number of almanac (the 8 bit WNa field)	
7	U1	2 <sup>12</sup>	toa	s	Reference time of almanac	
8	I2	2 <sup>-19</sup>	deltaI	semi-circles	Delta inclination angle at reference time	
10	I2	2 <sup>-38</sup>	omegaDot	semi-circles/s	Almanac rate of right ascension	
12	U4	2 <sup>-11</sup>	sqrtA	m <sup>0.5</sup>	Almanac square root of the semi-major axis A	
16	I4	2 <sup>-23</sup>	omega0	semi-circles	Almanac long of asc node of orbit plane at weekly	
20	I4	2 <sup>-23</sup>	omega	semi-circles	Almanac argument of perigee	
24	I4	2 <sup>-23</sup>	m0	semi-circles	Almanac mean anomaly at reference time	
28	I2	2 <sup>-20</sup>	af0	s	Almanac time polynomial coefficient 0 (8 MSBs)	
30	I2	2 <sup>-38</sup>	af1	s/s	Almanac time polynomial coefficient 1	
32	U1[4]	-	reserved1	-	<a href="#">Reserved</a>	

### 5.12.8.3 UBX-MGA-QZSS-HEALTH

Message	<b>UBX-MGA-QZSS-HEALTH</b>					
Description	<b>QZSS Health Assistance</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>• <a href="#">u-blox 9 with protocol version 27</a></li> </ul>					
Type	Input					
Comment	This message allows the delivery of QZSS health assistance to a receiver. See the description of <a href="#">AssistNow Online</a> for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x13	0x05	12	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x04 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1[2]	-	reserved1	-	<a href="#">Reserved</a>	
4	U1[5]	-	healthCode	-	Each byte represents a QZSS SV (1-5). The 6 LSBs of each byte contains the 6 bit health code from subframes 4/5, data ID = 3, SV ID = 51	
9	U1[3]	-	reserved2	-	<a href="#">Reserved</a>	

### 5.13 UBX-MON (0x0A)

Monitoring Messages: i.e. Communication Status, CPU Load, Stack Usage, Task Status.

Messages in the MON class are used to report the receiver status, such as CPU load, stack usage, I/O subsystem statistics etc.

#### 5.13.1 UBX-MON-COMMS (0x0A 0x36)

##### 5.13.1.1 Comm port information


Message	UBX-MON-COMMS					
Description	Comm port information					
Firmware	Supported on: <ul style="list-style-type: none"><li>u-blox 9 with protocol version 27</li></ul>					
Type	Periodic/Polled					
Comment	Consolidated communications information for all ports. The size of the message is determined by the number of ports that are in use on the receiver. A port is only included if communication, either send or receive, has been initiated on that port.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x0A	0x36	8 + 40*nPorts	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0x00 for this version)	
1	U1	-	nPorts	-	Number of ports included	
2	X1	-	txErrors	-	tx error bitmask (see <a href="#">graphic below</a> )	
3	U1[1]	-	reserved1	-	<a href="#">Reserved</a>	
4	U1[4]	-	protIds		The identifiers of the protocols reported in the msgs array. 0: UBX, 1: NMEA, 2: RTCM2, 5: RTCM3, 256: No protocol reported.	
Start of repeated block (nPorts times)						
8 + 40*N	U2	-	portId	-	Unique identifier for the port. See <a href="#">Serial Communications Port Description</a> for details.	
10 + 40*N	U2	-	txPending	bytes	Number of bytes pending in transmitter buffer	
12 + 40*N	U4	-	txBytes	bytes	Number of bytes ever sent	
16 + 40*N	U1	-	txUsage	%	Maximum usage transmitter buffer during the last sysmon period	
17 + 40*N	U1	-	txPeakUsage	%	Maximum usage transmitter buffer	
18 + 40*N	U2	-	rxPending	bytes	Number of bytes in receiver buffer	
20 + 40*N	U4	-	rxBytes	bytes	Number of bytes ever received	
24 + 40*N	U1	-	rxUsage	%	Maximum usage receiver buffer during the last sysmon period	
25 + 40*N	U1	-	rxPeakUsage	%	Maximum usage receiver buffer	
26 + 40*N	U2	-	overrunErrs	-	Number of 100ms timeslots with overrun errors	
28 + 40*N	U2[4]	-	msgs	msg	Number of successfully parsed messages for each protocol. The reported protocols are identified through the protIds field.	
36 + 40*N	U1[8]	-	reserved2	-	<a href="#">Reserved</a>	
44 + 40*N	U4	-	skipped	bytes	Number of skipped bytes	

MON-COMMS continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
End of repeated block					

## Bitfield txErrors

This graphic explains the bits of txErrors

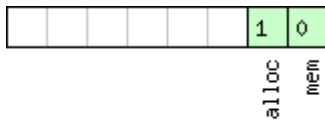

☐ signed value  
☒ unsigned value  
☐ reserved

Name	Description
mem	Memory Allocation error
alloc	Allocation error (TX buffer full)

### 5.13.2 UBX-MON-GNSS (0x0A 0x28)

#### 5.13.2.1 Information message major GNSS selection

Message	UBX-MON-GNSS					
Description	Information message major GNSS selection					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Polled					
Comment	This message reports major GNSS selection. It does this by means of bit masks in U1 fields. Each bit in a bit mask corresponds to one major GNSS. Augmentation systems are not reported.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x0A	0x28	8	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0x01 for this version)	
1	X1	-	supported	-	A bit mask showing the major GNSS that can be supported by this receiver (see <a href="#">graphic below</a> )	
2	X1	-	defaultGnss	-	A bit mask showing the default major GNSS selection. If the default major GNSS selection is currently configured in the efuse for this receiver, it takes precedence over the default major GNSS selection configured in the executing firmware of this receiver. (see <a href="#">graphic below</a> )	
3	X1	-	enabled	-	A bit mask showing the current major GNSS selection enabled for this receiver (see <a href="#">graphic below</a> )	




#### MON-GNSS continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
4	U1	-	simultaneous	-	Maximum number of concurrent major GNSS that can be supported by this receiver
5	U1[3]	-	reserved1	-	<a href="#">Reserved</a>

### Bitfield supported


This graphic explains the bits of supported

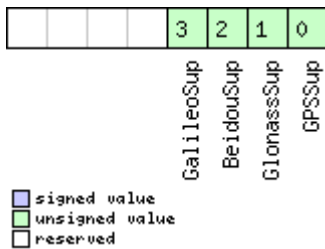

Name	Description
GPSSup	GPS is supported
GlonassSup	GLONASS is supported
BeidouSup	BeiDou is supported
GalileoSup	Galileo is supported

### Bitfield defaultGnss


This graphic explains the bits of defaultGnss

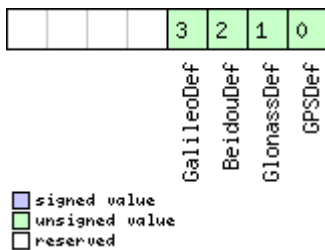

Name	Description
GPSDef	GPS is default-enabled
GlonassDef	GLONASS is default-enabled
BeidouDef	BeiDou is default-enabled
GalileoDef	Galileo is default-enabled

### Bitfield enabled

This graphic explains the bits of enabled

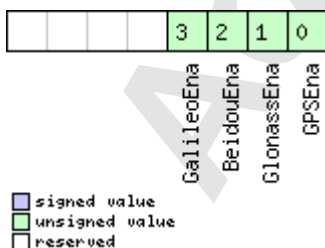

Name	Description
GPSEna	GPS is enabled
GlonassEna	GLONASS is enabled
BeidouEna	BeiDou is enabled
GalileoEna	Galileo is enabled

### 5.13.3 UBX-MON-HW2 (0x0A 0x0B)

#### 5.13.3.1 Extended Hardware Status

Message	<b>UBX-MON-HW2</b>					
Description	<b>Extended Hardware Status</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Periodic/Polled					
Comment	<p><b>This message is deprecated in this protocol version. Use <a href="#">UBX-MON-HW3</a> and <a href="#">UBX-MON-RF</a> instead.</b></p> <p>Status of different aspects of the hardware such as Imbalance, Low-Level Configuration and POST Results.</p> <p>The first four parameters of this message represent the complex signal from the RF front end. The following rules of thumb apply:</p> <ul style="list-style-type: none"> <li>The smaller the absolute value of the variable <code>ofsI</code> and <code>ofsQ</code>, the better.</li> <li>Ideally, the magnitude of the I-part (<code>magI</code>) and the Q-part (<code>magQ</code>) of the complex signal should be the same.</li> </ul>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x0A	0x0B	28	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	I1	-	<code>ofsI</code>	-	Imbalance of I-part of complex signal, scaled (-128 = max. negative imbalance, 127 = max. positive imbalance)	
1	U1	-	<code>magI</code>	-	Magnitude of I-part of complex signal, scaled (0 = no signal, 255 = max. magnitude)	
2	I1	-	<code>ofsQ</code>	-	Imbalance of Q-part of complex signal, scaled (-128 = max. negative imbalance, 127 = max. positive imbalance)	
3	U1	-	<code>magQ</code>	-	Magnitude of Q-part of complex signal, scaled (0 = no signal, 255 = max. magnitude)	
4	U1	-	<code>cfgSource</code>	-	Source of low-level configuration (114 = ROM, 111 = OTP, 112 = config pins, 102 = flash image)	
5	U1[3]	-	<code>reserved1</code>	-	<a href="#">Reserved</a>	
8	U4	-	<code>lowLevCfg</code>	-	Low-level configuration (obsolete in <a href="#">protocol versions greater than 15</a> )	
12	U1[8]	-	<code>reserved2</code>	-	<a href="#">Reserved</a>	
20	U4	-	<code>postStatus</code>	-	POST status word	
24	U1[4]	-	<code>reserved3</code>	-	<a href="#">Reserved</a>	


### 5.13.4 UBX-MON-HW3 (0x0A 0x37)

#### 5.13.4.1 HW I/O pin information

Message	UBX-MON-HW3					
Description	HW I/O pin information					
Firmware	Supported on: <ul style="list-style-type: none"><li>u-blox 9 with protocol version 27</li></ul>					
Type	Periodic/Polled					
Comment	This message contains information specific to each HW I/O pin, for example whether the pin is set as Input or Output. For the antenna supervisor status and other RF status information, see the UBX-MON-RF message.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x0A	0x37	22 + 6*nPins	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0x00 for this version)	
1	U1	-	nPins	-	The number of I/O pins included	
2	X1	-	flags	-	Flags (see graphic below)	
3	CH[10]	-	hwVersion	-	Zero-terminated Hardware Version String (same as that returned in the UBX-MON-VER message)	
13	U1[9]	-	reserved1	-	Reserved	
Start of repeated block (nPins times)						
22 + 6*N	U2	-	pinId	-	Identifier for the pin, including both external and internal pins.	
24 + 6*N	X2	-	pinMask	-	Pin mask (see graphic below)	
26 + 6*N	U1	-	VP	-	Virtual pin mapping	
27 + 6*N	U1	-	reserved2	-	Reserved	
End of repeated block						

### Bitfield flags

This graphic explains the bits of flags




  signed value  
  unsigned value  
  reserved

Name	Description
rtcCalib	RTC is calibrated
safeBoot	safeBoot mode (0 = inactive, 1 = active)
xtalAbsent	RTC xtal has been determined to be absent

## Bitfield pinMask

This graphic explains the bits of pinMask

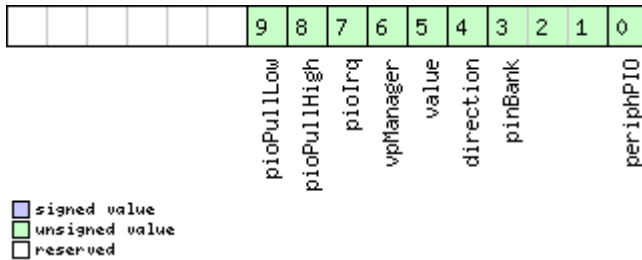

Name	Description
periphPIO	Pin is set to peripheral or PIO? 0=Peripheral 1=PIO
pinBank	Bank the pin belongs to, where 0=A 1=B 2=C 3=D 4=E 5=F 6=G 7=H
direction	Pin direction? 0=Input 1=Output
value	Pin value? 0=Low 1=High
vpManager	Used by Virtual Pin Manager? 0=No 1=Yes
pioIrq	Interrupt enabled? 0=No 1=Yes
pioPullHigh	Using Pull High Resistor? 0=No 1=Yes
pioPullLow	Using Pull Low Resistor 0=No 1=Yes

### 5.13.5 UBX-MON-HW (0x0A 0x09)

#### 5.13.5.1 Hardware Status


Message	<b>UBX-MON-HW</b>					
Description	<b>Hardware Status</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Periodic/Polled					
Comment	<b>This message is deprecated in this protocol version. Use <a href="#">UBX-MON-HW3</a> and <a href="#">UBX-MON-RF</a> instead.</b> Status of different aspect of the hardware, such as Antenna, PIO/Peripheral Pins, Noise Level, Automatic Gain Control (AGC)					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x0A	0x09	60	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	X4	-	pinSel	-	Mask of Pins Set as Peripheral/PIO	
4	X4	-	pinBank	-	Mask of Pins Set as Bank A/B	
8	X4	-	pinDir	-	Mask of Pins Set as Input/Output	
12	X4	-	pinVal	-	Mask of Pins Value Low/High	
16	U2	-	noisePerMS	-	Noise Level as measured by the GPS Core	

## MON-HW continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
18	U2	-	agcCnt	-	AGC Monitor (counts SIGHI xor SIGLO, range 0 to 8191)
20	U1	-	aStatus	-	Status of the Antenna Supervisor State Machine (0=INIT, 1=DONTKNOW, 2=OK, 3=SHORT, 4=OPEN)
21	U1	-	aPower	-	Current PowerStatus of Antenna (0=OFF, 1=ON, 2=DONTKNOW)
22	X1	-	flags	-	Flags (see <a href="#">graphic below</a> )
23	U1	-	reserved1	-	<a href="#">Reserved</a>
24	X4	-	usedMask	-	Mask of Pins that are used by the Virtual Pin Manager
28	U1[17]	-	VP	-	Array of Pin Mappings for each of the 17 Physical Pins
45	U1	-	jamInd	-	CW Jamming indicator, scaled (0 = no CW jamming, 255 = strong CW jamming)
46	U1[2]	-	reserved2	-	<a href="#">Reserved</a>
48	X4	-	pinIrq	-	Mask of Pins Value using the PIO Irq
52	X4	-	pullH	-	Mask of Pins Value using the PIO Pull High Resistor
56	X4	-	pullL	-	Mask of Pins Value using the PIO Pull Low Resistor

## Bitfield flags

This graphic explains the bits of flags

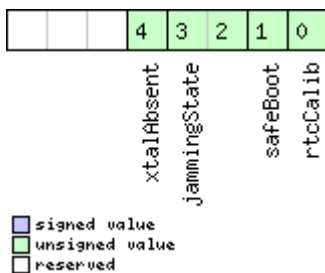

Name	Description
rtcCalib	RTC is calibrated
safeBoot	safeBoot mode (0 = inactive, 1 = active)
jammingState	output from Jamming/Interference Monitor (0 = unknown or feature disabled, 1 = ok - no significant jamming, 2 = warning - interference visible but fix OK, 3 = critical - interference visible and no fix)
xtalAbsent	RTC xtal has been determined to be absent.

### 5.13.6 UBX-MON-IO (0x0A 0x02)

#### 5.13.6.1 I/O Subsystem Status

Message	UBX-MON-IO					
Description	I/O Subsystem Status					
Firmware	Supported on: <ul style="list-style-type: none"><li>u-blox 9 with protocol version 27</li></ul>					
Type	Periodic/Polled					
Comment	<b>This message is deprecated in this protocol version. Use <a href="#">UBX-MON-COMMS</a> instead.</b> The size of the message is determined by the number of ports 'N' the receiver supports, i.e. on u-blox 5 the number of ports is 6.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x0A	0x02	0 + 20*N	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
Start of repeated block (N times)						
N*20	U4	-	rxBytes	bytes	Number of bytes ever received	
4 + 20*N	U4	-	txBytes	bytes	Number of bytes ever sent	
8 + 20*N	U2	-	parityErrs	-	Number of 100ms timeslots with parity errors	
10 + 20*N	U2	-	framingErrs	-	Number of 100ms timeslots with framing errors	
12 + 20*N	U2	-	overrunErrs	-	Number of 100ms timeslots with overrun errors	
14 + 20*N	U2	-	breakCond	-	Number of 100ms timeslots with break conditions	
16 + 20*N	U1[4]	-	reserved1	-	Reserved	
End of repeated block						

### 5.13.7 UBX-MON-MSGPP (0x0A 0x06)

#### 5.13.7.1 Message Parse and Process Status

Message	<b>UBX-MON-MSGPP</b>					
Description	<b>Message Parse and Process Status</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Periodic/Polled					
Comment	<b>This message is deprecated in this protocol version. Use <a href="#">UBX-MON-COMMS</a> instead.</b>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x0A	0x06	120	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U2[8]	-	msg1	msgs	Number of successfully parsed messages for each protocol on port0	
16	U2[8]	-	msg2	msgs	Number of successfully parsed messages for each protocol on port1	

## MON-MSGPP continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
32	U2[8]	-	msg3	msgs	Number of successfully parsed messages for each protocol on port2
48	U2[8]	-	msg4	msgs	Number of successfully parsed messages for each protocol on port3
64	U2[8]	-	msg5	msgs	Number of successfully parsed messages for each protocol on port4
80	U2[8]	-	msg6	msgs	Number of successfully parsed messages for each protocol on port5
96	U4[6]	-	skipped	bytes	Number skipped bytes for each port


### 5.13.8 UBX-MON-PATCH (0x0A 0x27)

#### 5.13.8.1 Output information about installed patches.

Message	UBX-MON-PATCH					
Description	Output information about installed patches.					
Firmware	Supported on: <ul style="list-style-type: none"><li>u-blox 9 with protocol version 27</li></ul>					
Type	Polled					
Comment	-					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x0A	0x27	4 + 16*nEntries	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U2	-	version	-	Type of the message. 0x1 for this one.	
2	U2	-	nEntries	-	The number of patches that is output.	
Start of repeated block (nEntries times)						
4 + 16*N	X4	-	patchInfo	-	Additional information about the patch not stated in the patch header. (see graphic below)	
8 + 16*N	U4	-	comparatorNumber	-	The number of the comparator.	
12 + 16*N	U4	-	patchAddress	-	The address that the targeted by the patch.	
16 + 16*N	U4	-	patchData	-	The data that will be inserted at the patchAddress.	
End of repeated block						

## Bitfield patchInfo

This graphic explains the bits of `patchInfo`

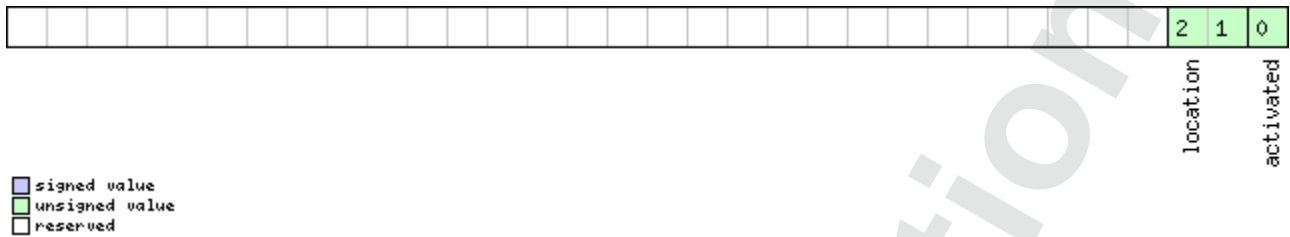

Name	Description
activated	1: the patch is active. 0: otherwise.
location	Indicates where the patch is stored. 0: eFuse, 1: ROM, 2: BBR, 3: file system.

### 5.13.9 UBX-MON-RF (0x0A 0x38)

#### 5.13.9.1 RF information

Message	<b>UBX-MON-RF</b>				
Description	<b>RF information</b>				
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>				
Type	Periodic/Polled				
Comment	Information for each RF block.				
Message Structure	Header	Class	ID	Length (Bytes)	Payload
	0xB5 0x62	0x0A	0x38	4 + 24*nBlocks	see below
Payload Contents:					
Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	version	-	Message version (0x00 for this version)
1	U1	-	nBlocks	-	The number of RF blocks included
2	U1[2]	-	reserved1	-	Reserved
Start of repeated block (nBlocks times)					
4 + 24*N	U1	-	blockId	-	RF block id
5 + 24*N	X1	-	flags	-	Flags (see <a href="#">graphic below</a> )
6 + 24*N	U1	-	antStatus	-	Status of the antenna supervisor state machine (0x00=INIT,0x01=DONTKNOW,0x02=OK, 0x03=SHORT,0x04=OPEN)
7 + 24*N	U1	-	antPower	-	Current power status of antenna (0x00=OFF, 0x01=ON,0x02=DONTKNOW)
8 + 24*N	U4	-	postStatus	-	POST status word
12 + 24*N	U1[4]	-	reserved2	-	Reserved
16 + 24*N	U2	-	noisePerMS	-	Noise level as measured by the GPS core
18 + 24*N	U2	-	agcCnt	-	AGC Monitor (counts SIGHI xor SIGLO, range 0 to 8191)
20 + 24*N	U1	-	jamInd	-	CW jamming indicator, scaled (0=no CW jamming, 255 = strong CW jamming)
21 + 24*N	I1	-	ofsI	-	Imbalance of I-part of complex signal, scaled (-128 = max. negative imbalance, 127 = max. positive imbalance)




MON-RF continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
22 + 24*N	U1	-	magI	-	Magnitude of I-part of complex signal, scaled (0= no signal, 255 = max.magnitude)
23 + 24*N	I1	-	ofsQ	-	Imbalance of Q-part of complex signal, scaled (-128 = max. negative imbalance, 127 = max. positive imbalance)
24 + 24*N	U1	-	magQ	-	Magnitude of Q-part of complex signal, scaled (0= no signal, 255 = max.magnitude)
25 + 24*N	U1[3]	-	reserved3	-	<a href="#">Reserved</a>
End of repeated block					

## Bitfield flags

This graphic explains the bits of flags

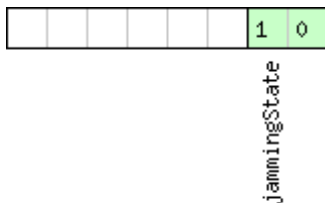

- signed value
- unsigned value
- reserved

Name	Description
jammingState	output from Jamming/Interference Monitor (0 = unknown or feature disabled, 1 = ok - no significant jamming, 2 = warning - interference visible but fix OK, 3 = critical - interference visible and no fix)

### 5.13.10 UBX-MON-RXBUF (0x0A 0x07)

#### 5.13.10.1 Receiver Buffer Status

Message	<b>UBX-MON-RXBUF</b>					
Description	<b>Receiver Buffer Status</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li><a href="#">u-blox 9 with protocol version 27</a></li> </ul>					
Type	Periodic/Polled					
Comment	<b>This message is deprecated in this protocol version. Use <a href="#">UBX-MON-COMMS</a> instead.</b>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x0A	0x07	24	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U2[6]	-	pending	bytes	Number of bytes pending in receiver buffer for each target	
12	U1[6]	-	usage	%	Maximum usage receiver buffer during the last sysmon period for each target	
18	U1[6]	-	peakUsage	%	Maximum usage receiver buffer for each target	


### 5.13.11 UBX-MON-RXR (0x0A 0x21)

#### 5.13.11.1 Receiver Status Information

Message	UBX-MON-RXR					
Description	Receiver Status Information					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Output					
Comment	The receiver ready message is sent when the receiver changes from or to backup mode.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x0A	0x21	1	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	X1	-	flags	-	Receiver status flags (see <a href="#">graphic below</a> )	

#### Bitfield flags

This graphic explains the bits of flags



- signed value
- unsigned value
- reserved

Name	Description
awake	not in Backup mode

### 5.13.12 UBX-MON-TXBUF (0x0A 0x08)

#### 5.13.12.1 Transmitter Buffer Status

Message	UBX-MON-TXBUF					
Description	Transmitter Buffer Status					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Periodic/Polled					
Comment	<b>This message is deprecated in this protocol version. Use <a href="#">UBX-MON-COMMS</a> instead.</b>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x0A	0x08	28	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U2[6]	-	pending	bytes	Number of bytes pending in transmitter buffer for each target	
12	U1[6]	-	usage	%	Maximum usage transmitter buffer during the last sysmon period for each target	
18	U1[6]	-	peakUsage	%	Maximum usage transmitter buffer for each target	

## MON-TXBUF continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
24	U1	-	tUsage	%	Maximum usage of transmitter buffer during the last sysmon period for all targets
25	U1	-	tPeakusage	%	Maximum usage of transmitter buffer for all targets
26	X1	-	errors	-	Error bitmask (see <a href="#">graphic below</a> )
27	U1	-	reserved1	-	<a href="#">Reserved</a>

## Bitfield errors

This graphic explains the bits of errors

7	6	5	4	3	2	1	0
---	---	---	---	---	---	---	---

alloc	mem	limit
<input type="checkbox"/> signed value	<input type="checkbox"/> unsigned value	<input type="checkbox"/> reserved

Name	Description
limit	Buffer limit of corresponding target reached
mem	Memory Allocation error
alloc	Allocation error (TX buffer full)

### 5.13.13 UBX-MON-VER (0x0A 0x04)

#### 5.13.13.1 Receiver/Software Version

Message	UBX-MON-VER					
Description	Receiver/Software Version					
Firmware	Supported on: <ul style="list-style-type: none"><li>u-blox 9 with protocol version 27</li></ul>					
Type	Polled					
Comment	-					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x0A	0x04	40 + 30*N	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	CH[30]	-	swVersion	-	Zero-terminated Software Version String.	
30	CH[10]	-	hwVersion	-	Zero-terminated Hardware Version String	
Start of repeated block (N times)						

## MON-VER continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
40 + 30*N	CH[30]	-	extension	-	<p>Extended software information strings. A series of zero-terminated strings. Each extension field is 30 characters long and contains varying software information. Not all extension fields may appear.</p> <p>Example reported information can be: the software version string of the underlying ROM (when the receiver's firmware is running from flash), the firmware version, the supported <a href="#">protocol version</a>, the module identifier, the Flash Information Structure (FIS) file information, the supported major GNSS, the supported augmentation systems.</p>
End of repeated block					

## 5.14 UBX-NAV (0x01)

Navigation Results Messages: i.e. Position, Speed, Time, Acceleration, Heading, DOP, SVs used.

Messages in the NAV class are used to output navigation data such as position, altitude and velocity in a number of formats. Additionally, status flags and accuracy figures are output. The messages are generated with the configured navigation/measurement rate.

### 5.14.1 UBX-NAV-CLOCK (0x01 0x22)

#### 5.14.1.1 Clock Solution

Message	<b>UBX-NAV-CLOCK</b>					
Description	<b>Clock Solution</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Periodic/Polled					
Comment	-					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x22	20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the <a href="#">navigation epoch</a> . See the <a href="#">description of iTOW</a> for details.	
4	I4	-	c1kB	ns	<a href="#">Clock bias</a>	
8	I4	-	c1kD	ns/s	<a href="#">Clock drift</a>	
12	U4	-	tAcc	ns	Time accuracy estimate	
16	U4	-	fAcc	ps/s	Frequency accuracy estimate	

### 5.14.2 UBX-NAV-DOP (0x01 0x04)

#### 5.14.2.1 Dilution of precision

Message	<b>UBX-NAV-DOP</b>					
Description	<b>Dilution of precision</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Periodic/Polled					
Comment	<ul style="list-style-type: none"> <li>DOP values are dimensionless.</li> <li>All DOP values are scaled by a factor of 100. If the unit transmits a value of e.g. 156, the DOP value is 1.56.</li> </ul>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x04	18	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the <a href="#">navigation epoch</a> . See the <a href="#">description of iTOW</a> for details.	
4	U2	0.01	gDOP	-	Geometric DOP	
6	U2	0.01	pDOP	-	Position DOP	

## NAV-DOP continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
8	U2	0.01	tDOP	-	Time DOP
10	U2	0.01	vDOP	-	Vertical DOP
12	U2	0.01	hDOP	-	Horizontal DOP
14	U2	0.01	nDOP	-	Northing DOP
16	U2	0.01	eDOP	-	Easting DOP

### 5.14.3 UBX-NAV-EOE (0x01 0x61)

#### 5.14.3.1 End Of Epoch

Message	<b>UBX-NAV-EOE</b>					
Description	<b>End Of Epoch</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Periodic					
Comment	This message is intended to be used as a marker to collect all navigation messages of an epoch. It is output after all enabled NAV class messages (except UBX-NAV-HNR) and after all enabled NMEA messages.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x61	4	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the <a href="#">navigation epoch</a> . See the <a href="#">description of iTOW</a> for details.	

### 5.14.4 UBX-NAV-GEOFENCE (0x01 0x39)

#### 5.14.4.1 Geofencing status

Message	<b>UBX-NAV-GEOFENCE</b>					
Description	<b>Geofencing status</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Periodic/Polled					
Comment	This message outputs the evaluated states of all configured geofences for the current epoch's position. See the <a href="#">Geofencing description</a> for feature details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x39	8 + 2*numFences	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the <a href="#">navigation epoch</a> . See the <a href="#">description of iTOW</a> for details.	
4	U1	-	version	-	Message version (0x00 for this version)	

## NAV-GEOFENCE continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
5	U1	-	status	-	Geofencing status 0 - Geofencing not available or not reliable 1 - Geofencing active
6	U1	-	numFences	-	Number of geofences
7	U1	-	combState	-	Combined (logical OR) state of all geofences 0 - Unknown 1 - Inside 2 - Outside
Start of repeated block (numFences times)					
8 + 2*N	U1	-	state	-	Geofence state 0 - Unknown 1 - Inside 2 - Outside
9 + 2*N	U1[1]	-	reserved1	-	Reserved
End of repeated block					

## 5.14.5 UBX-NAV-HPPOSECEF (0x01 0x13)

## 5.14.5.1 High Precision Position Solution in ECEF

Message	UBX-NAV-HPPOSECEF					
Description	High Precision Position Solution in ECEF					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Periodic/Polled					
Comment	See important comments concerning validity of position given in section <a href="#">Navigation Output Filters</a> . -					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x13	28	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0 for this version)	
1	U1[3]	-	reserved1	-	Reserved	
4	U4	-	iTOW	ms	GPS time of week of the <a href="#">navigation epoch</a> . See the <a href="#">description of iTOW</a> for details.	
8	I4	-	ecefX	cm	ECEF X coordinate	
12	I4	-	ecefY	cm	ECEF Y coordinate	
16	I4	-	ecefZ	cm	ECEF Z coordinate	
20	I1	0.1	ecefXHp	mm	High precision component of ECEF X coordinate. Must be in the range of -99..+99. Precise coordinate in cm = ecefX + (ecefXHp * 1e-2).	

## NAV-HPPOSECEF continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
21	I1	0.1	ecefYHp	mm	High precision component of ECEF Y coordinate. Must be in the range of -99..+99. Precise coordinate in cm = ecefY + (ecefYHp * 1e-2).
22	I1	0.1	ecefZHp	mm	High precision component of ECEF Z coordinate. Must be in the range of -99..+99. Precise coordinate in cm = ecefZ + (ecefZHp * 1e-2).
23	U1	-	reserved2	-	<a href="#">Reserved</a>
24	U4	0.1	pAcc	mm	Position Accuracy Estimate

### 5.14.6 UBX-NAV-HPPOSLLH (0x01 0x14)

#### 5.14.6.1 High Precision Geodetic Position Solution

Message	<b>UBX-NAV-HPPOSLLH</b>					
Description	<b>High Precision Geodetic Position Solution</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>• <a href="#">u-blox 9 with protocol version 27</a></li> </ul>					
Type	Periodic/Polled					
Comment	<b>See important comments concerning validity of position given in section <a href="#">Navigation Output Filters</a>.</b> This message outputs the Geodetic position with high precision in the currently selected ellipsoid. The default is the WGS84 Ellipsoid, but can be changed with the message <a href="#">UBX-CFG-DAT</a> .					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x14	36	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0 for this version)	
1	U1[3]	-	reserved1	-	<a href="#">Reserved</a>	
4	U4	-	iTOW	ms	GPS time of week of the <a href="#">navigation epoch</a> . See the <a href="#">description of iTOW</a> for details.	
8	I4	1e-7	lon	deg	Longitude	
12	I4	1e-7	lat	deg	Latitude	
16	I4	-	height	mm	Height above ellipsoid.	
20	I4	-	hMSL	mm	Height above mean sea level	
24	I1	1e-9	lonHp	deg	High precision component of longitude. Must be in the range -99..+99. Precise longitude in deg * 1e-7 = lon + (lonHp * 1e-2).	
25	I1	1e-9	latHp	deg	High precision component of latitude. Must be in the range -99..+99. Precise latitude in deg * 1e-7 = lat + (latHp * 1e-2).	



## NAV-HPPOSLLH continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
26	I1	0.1	heightHp	mm	High precision component of height above ellipsoid. Must be in the range -9..+9. Precise height in mm = height + (heightHp * 0.1).
27	I1	0.1	hMSLHp	mm	High precision component of height above mean sea level. Must be in range -9..+9. Precise height in mm = hMSL + (hMSLHp * 0.1)
28	U4	0.1	hAcc	mm	Horizontal accuracy estimate
32	U4	0.1	vAcc	mm	Vertical accuracy estimate

### 5.14.7 UBX-NAV-ODO (0x01 0x09)

#### 5.14.7.1 Odometer Solution

Message	<b>UBX-NAV-ODO</b>					
Description	<b>Odometer Solution</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Periodic/Polled					
Comment	This message outputs the traveled distance since last reset (see <a href="#">UBX-NAV-RESETODO</a> ) together with an associated estimated accuracy and the total cumulated ground distance (can only be reset by a cold start of the receiver).					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x09	20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0 for this version)	
1	U1[3]	-	reserved1	-	<a href="#">Reserved</a>	
4	U4	-	iTOW	ms	GPS time of week of the <a href="#">navigation epoch</a> . See the <a href="#">description of iTOW</a> for details.	
8	U4	-	distance	m	Ground distance since last reset	
12	U4	-	totalDistance	m	Total cumulative ground distance	
16	U4	-	distanceStd	m	Ground distance accuracy (1-sigma)	


### 5.14.8 UBX-NAV-ORB (0x01 0x34)

#### 5.14.8.1 GNSS Orbit Database Info

Message	UBX-NAV-ORB					
Description	GNSS Orbit Database Info					
Firmware	Supported on: <ul style="list-style-type: none"><li>• <a href="#">u-blox 9 with protocol version 27</a></li></ul>					
Type	Periodic/Polled					
Comment	Status of the GNSS orbit database knowledge.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x34	8 + 6*numSv	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the <a href="#">navigation epoch</a> . See the <a href="#">description of iTOW</a> for details.	
4	U1	-	version	-	Message version (1, for this version)	
5	U1	-	numSv	-	Number of SVs in the database	
6	U1[2]	-	reserved1	-	<a href="#">Reserved</a>	
Start of repeated block (numSv times)						
8 + 6*N	U1	-	gnssId	-	GNSS ID	
9 + 6*N	U1	-	svId	-	Satellite ID	
10 + 6*N	X1	-	svFlag	-	Information Flags (see <a href="#">graphic below</a> )	
11 + 6*N	X1	-	eph	-	Ephemeris data (see <a href="#">graphic below</a> )	
12 + 6*N	X1	-	alm	-	Almanac data (see <a href="#">graphic below</a> )	
13 + 6*N	X1	-	otherOrb	-	Other orbit data available (see <a href="#">graphic below</a> )	
End of repeated block						

#### Bitfield svFlag


This graphic explains the bits of svFlag

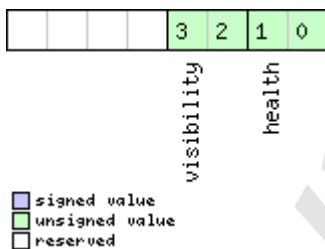

Name	Description
health	SV health: 0: unknown 1: healthy 2: not healthy
visibility	SV health: 0: unknown 1: below horizon 2: above horizon 3: above elevation mask

## Bitfield eph


This graphic explains the bits of eph

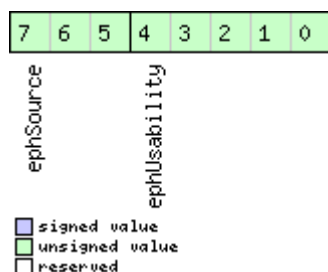

Name	Description
ephUsability	How long the receiver will be able to use the stored ephemeris data from now on: 31: The usability period is unknown 30: The usability period is more than 450 minutes 30 > n > 0: The usability period is between (n-1)*15 and n*15 minutes 0: Ephemeris can no longer be used
ephSource	0: not available 1: GNSS transmission 2: external aiding 3-7: other

## Bitfield alm

This graphic explains the bits of alm

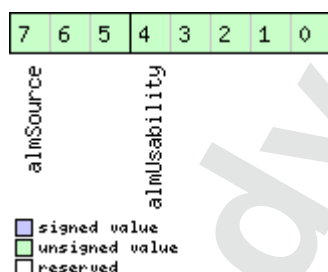


Name	Description
almUsability	How long the receiver will be able to use the stored almanac data from now on: 31: The usability period is unknown 30: The usability period is more than 30 days 30 > n > 0: The usability period is between n-1 and n days 0: Almanac can no longer be used
almSource	0: not available 1: GNSS transmission 2: external aiding 3-7: other

## Bitfield otherOrb

This graphic explains the bits of otherOrb

7	6	5	4	3	2	1	0
---	---	---	---	---	---	---	---

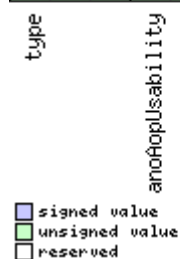

Name	Description
anoAopUsability	How long the receiver will be able to use the orbit data from now on: 31: The usability period is unknown 30: The usability period is more than 30 days 30 > n > 0: The usability period is between n-1 and n days 0: Data can no longer be used
type	Type of orbit data: 0: No orbit data available 1: Assist now offline data 2: Assist now autonomous data 3-7: Other orbit data

### 5.14.9 UBX-NAV-POSECEF (0x01 0x01)

#### 5.14.9.1 Position Solution in ECEF

Message	<b>UBX-NAV-POSECEF</b>					
Description	<b>Position Solution in ECEF</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Periodic/Polled					
Comment	<b>See important comments concerning validity of position given in section <a href="#">Navigation Output Filters</a>.</b> -					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x01	20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the <a href="#">navigation epoch</a> . See the <a href="#">description of iTOW</a> for details.	
4	I4	-	ecefX	cm	ECEF X coordinate	
8	I4	-	ecefY	cm	ECEF Y coordinate	
12	I4	-	ecefZ	cm	ECEF Z coordinate	
16	U4	-	pAcc	cm	Position Accuracy Estimate	

### 5.14.10 UBX-NAV-POSLLH (0x01 0x02)

#### 5.14.10.1 Geodetic Position Solution

Message	<b>UBX-NAV-POSLLH</b>					
Description	<b>Geodetic Position Solution</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Periodic/Polled					
Comment	<b>See important comments concerning validity of position given in section <a href="#">Navigation Output Filters</a>.</b> This message outputs the Geodetic position in the currently selected ellipsoid. The default is the WGS84 Ellipsoid, but can be changed with the message <a href="#">UBX-CFG-DAT</a> .					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x02	28	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the <a href="#">navigation epoch</a> . See the <a href="#">description of iTOW</a> for details.	
4	I4	1e-7	lon	deg	Longitude	
8	I4	1e-7	lat	deg	Latitude	
12	I4	-	height	mm	Height above ellipsoid	
16	I4	-	hMSL	mm	Height above mean sea level	
20	U4	-	hAcc	mm	Horizontal accuracy estimate	

NAV-POSLLH continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
24	U4	-	vAcc	mm	Vertical accuracy estimate

### 5.14.11 UBX-NAV-PVT (0x01 0x07)

#### 5.14.11.1 Navigation Position Velocity Time Solution


Message	UBX-NAV-PVT					
Description	Navigation Position Velocity Time Solution					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Periodic/Polled					
Comment	<b>Note that during a leap second there may be more (or less) than 60 seconds in a minute; see the <a href="#">description of leap seconds</a> for details.</b> This message combines position, velocity and time solution, including accuracy figures					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x07	92	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the <a href="#">navigation epoch</a> . See the <a href="#">description of iTOW</a> for details.	
4	U2	-	year	y	Year (UTC)	
6	U1	-	month	month	Month, range 1..12 (UTC)	
7	U1	-	day	d	Day of month, range 1..31 (UTC)	
8	U1	-	hour	h	Hour of day, range 0..23 (UTC)	
9	U1	-	min	min	Minute of hour, range 0..59 (UTC)	
10	U1	-	sec	s	Seconds of minute, range 0..60 (UTC)	
11	X1	-	valid	-	Validity flags (see <a href="#">graphic below</a> )	
12	U4	-	tAcc	ns	Time accuracy estimate (UTC)	
16	I4	-	nano	ns	Fraction of second, range -1e9 .. 1e9 (UTC)	
20	U1	-	fixType	-	GNSSfix Type: 0: no fix 1: dead reckoning only 2: 2D-fix 3: 3D-fix 4: GNSS + dead reckoning combined 5: time only fix	
21	X1	-	flags	-	Fix status flags (see <a href="#">graphic below</a> )	
22	X1	-	flags2	-	Additional flags (see <a href="#">graphic below</a> )	
23	U1	-	numSV	-	Number of satellites used in Nav Solution	
24	I4	1e-7	lon	deg	Longitude	
28	I4	1e-7	lat	deg	Latitude	
32	I4	-	height	mm	Height above ellipsoid	
36	I4	-	hMSL	mm	Height above mean sea level	
40	U4	-	hAcc	mm	Horizontal accuracy estimate	

## NAV-PVT continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
44	U4	-	vAcc	mm	Vertical accuracy estimate
48	I4	-	velN	mm/s	NED north velocity
52	I4	-	velE	mm/s	NED east velocity
56	I4	-	velD	mm/s	NED down velocity
60	I4	-	gSpeed	mm/s	Ground Speed (2-D)
64	I4	1e-5	headMot	deg	Heading of motion (2-D)
68	U4	-	sAcc	mm/s	Speed accuracy estimate
72	U4	1e-5	headAcc	deg	Heading accuracy estimate (both motion and vehicle)
76	U2	0.01	pDOP	-	Position DOP
78	U1[6]	-	reserved1	-	Reserved
84	I4	1e-5	headVeh	deg	Heading of vehicle (2-D)
88	I2	1e-2	magDec	deg	Magnetic declination
90	U2	1e-2	magAcc	deg	Magnetic declination accuracy

## Bitfield valid

This graphic explains the bits of `valid`

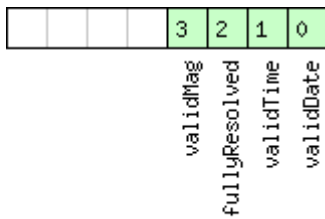


☐ signed value  
☒ unsigned value  
☐ reserved

Name	Description
<code>validDate</code>	1 = valid UTC Date (see <a href="#">Time Validity</a> section for details)
<code>validTime</code>	1 = valid UTC Time of Day (see <a href="#">Time Validity</a> section for details)
<code>fullyResolved</code>	1 = UTC Time of Day has been fully resolved (no seconds uncertainty). Cannot be used to check if time is completely solved.
<code>validMag</code>	1 = valid Magnetic declination

## Bitfield flags

This graphic explains the bits of `flags`

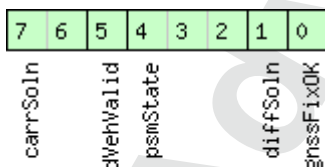


☐ signed value  
☒ unsigned value  
☐ reserved

Name	Description
gnssFixOK	1 = valid fix (i.e within DOP & accuracy masks)
diffSoln	1 = differential corrections were applied
psmState	Power Save Mode state (see <a href="#">Power Management</a> ): 0: PSM is not active 1: Enabled (an intermediate state before Acquisition state) 2: Acquisition 3: Tracking 4: Power Optimized Tracking 5: Inactive
headVehValid	1 = heading of vehicle is valid
carrSoln	Carrier phase range solution status: 0: no carrier phase range solution 1: float solution (no fixed integer carrier phase measurements have been used to calculate the solution) 2: fixed solution (one or more fixed integer carrier phase range measurements have been used to calculate the solution)

## Bitfield flags2

This graphic explains the bits of flags2

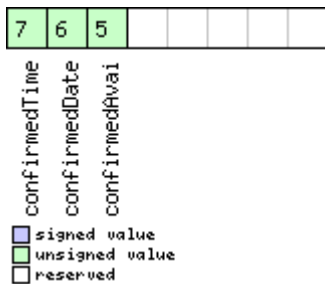

Name	Description
confirmedAvai	1 = information about UTC Date and Time of Day validity confirmation is available (see <a href="#">Time Validity</a> section for details). This flag is only supported in <a href="#">Protocol Versions 19.00, 19.10, 20.10, 20.20, 20.30, 22.00, 23.00, 23.01, 27 and 28</a> .
confirmedDate	1 = UTC Date validity could be confirmed (see <a href="#">Time Validity</a> section for details)
confirmedTime	1 = UTC Time of Day could be confirmed (see <a href="#">Time Validity</a> section for details)



### 5.14.12 UBX-NAV-RELPOSNED (0x01 0x3C)

#### 5.14.12.1 Relative Positioning Information in NED frame


Message	UBX-NAV-RELPOSNED					
Description	Relative Positioning Information in NED frame					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a> (only with High Precision GNSS products)					
Type	Periodic/Polled					
Comment	<p><b>The NED frame is defined as the local topological system at the reference station. The relative position vector components in this message, along with their associated accuracies, are given in that local topological system</b></p> <p>This message contains the relative position vector from the Reference Station to the Rover, including accuracy figures, in the local topological system defined at the reference station</p>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x3C	40	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0x00 for this version)	
1	U1	-	reserved1	-	<a href="#">Reserved</a>	
2	U2	-	refStationId	-	Reference Station ID. Must be in the range 0..4095	
4	U4	-	iTOW	ms	GPS time of week of the <a href="#">navigation epoch</a> . See the <a href="#">description of iTOW</a> for details.	
8	I4	-	relPosN	cm	North component of relative position vector	
12	I4	-	relPosE	cm	East component of relative position vector	
16	I4	-	relPosD	cm	Down component of relative position vector	
20	I1	0.1	relPosHPN	mm	<p>High-precision North component of relative position vector.</p> <p>Must be in the range -99 to +99.</p> <p>The full North component of the relative position vector, in units of cm, is given by <math>\text{relPosN} + (\text{relPosHPN} * 1\text{e-}2)</math></p>	
21	I1	0.1	relPosHPE	mm	<p>High-precision East component of relative position vector.</p> <p>Must be in the range -99 to +99.</p> <p>The full East component of the relative position vector, in units of cm, is given by <math>\text{relPosE} + (\text{relPosHPE} * 1\text{e-}2)</math></p>	
22	I1	0.1	relPosHPD	mm	<p>High-precision Down component of relative position vector.</p> <p>Must be in the range -99 to +99.</p> <p>The full Down component of the relative position vector, in units of cm, is given by <math>\text{relPosD} + (\text{relPosHPD} * 1\text{e-}2)</math></p>	
23	U1	-	reserved2	-	<a href="#">Reserved</a>	
24	U4	0.1	accN	mm	Accuracy of relative position North component	

NAV-RELPOSNED continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
28	U4	0.1	accE	mm	Accuracy of relative position East component
32	U4	0.1	accD	mm	Accuracy of relative position Down component
36	X4	-	flags	-	Flags (see <a href="#">graphic below</a> )

## Bitfield flags

This graphic explains the bits of flags

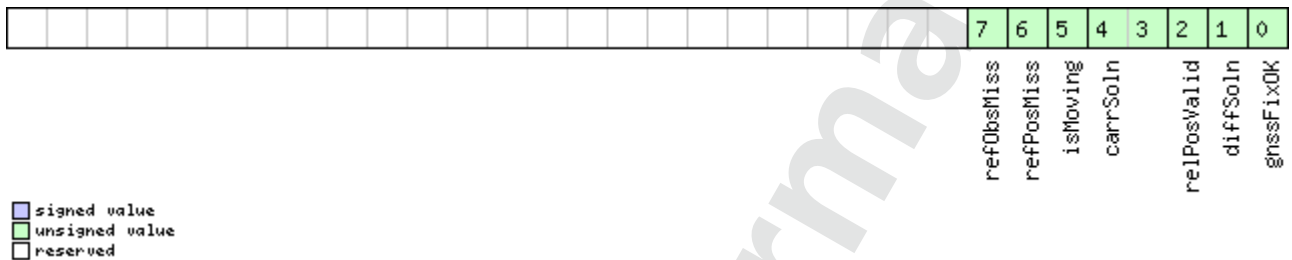

Name	Description
gnssFixOK	A valid fix (i.e within DOP & accuracy masks)
diffSoln	1 if differential corrections were applied
relPosValid	1 if relative position components and accuracies are valid
carrSoln	Carrier phase range solution status: 0 = No carrier phase range solution 1 = Float solution. No fixed integer carrier phase measurements have been used to calculate the solution 2 = Fixed solution. One or more fixed integer carrier phase range measurements have been used to calculate the solution
isMoving	1 if the receiver is operating in moving baseline mode
refPosMiss	1 if extrapolated reference position was used to compute moving baseline solution this epoch
refObsMiss	1 if extrapolated reference observations were used to compute moving baseline solution this epoch

### 5.14.13 UBX-NAV-RESETODO (0x01 0x10)

#### 5.14.13.1 Reset odometer

Message	<b>UBX-NAV-RESETODO</b>					
Description	<b>Reset odometer</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Command					
Comment	This message resets the traveled distance computed by the odometer (see <a href="#">UBX-NAV-ODO</a> ). <a href="#">UBX-ACK-ACK</a> or <a href="#">UBX-ACK-NAK</a> are returned to indicate success or failure.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x10	0	see below	CK_A CK_B
No payload						


### 5.14.14 UBX-NAV-SAT (0x01 0x35)

#### 5.14.14.1 Satellite Information

Message	UBX-NAV-SAT					
Description	Satellite Information					
Firmware	Supported on: <ul style="list-style-type: none"><li>u-blox 9 with protocol version 27</li></ul>					
Type	Periodic/Polled					
Comment	This message displays information about SVs which are either known to be visible or currently tracked by the receiver. All signal related information corresponds to the subset of signals specified in <a href="#">Signal Identifiers</a> .					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x35	8 + 12*numSvs	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the <a href="#">navigation epoch</a> . See the <a href="#">description of iTOW</a> for details.	
4	U1	-	version	-	Message version (1 for this version)	
5	U1	-	numSvs	-	Number of satellites	
6	U1[2]	-	reserved1	-	<a href="#">Reserved</a>	
Start of repeated block (numSvs times)						
8 + 12*N	U1	-	gnssId	-	GNSS identifier (see <a href="#">Satellite Numbering</a> ) for assignment	
9 + 12*N	U1	-	svId	-	Satellite identifier (see <a href="#">Satellite Numbering</a> ) for assignment	
10 + 12*N	U1	-	cno	dBHz	Carrier to noise ratio (signal strength)	
11 + 12*N	I1	-	elev	deg	Elevation (range: +/-90), unknown if out of range	
12 + 12*N	I2	-	azim	deg	Azimuth (range 0-360), unknown if elevation is out of range	
14 + 12*N	I2	0.1	prRes	m	Pseudorange residual	
16 + 12*N	X4	-	flags	-	<a href="#">Bitmask</a> (see <a href="#">graphic below</a> )	
End of repeated block						

### Bitfield flags

This graphic explains the bits of flags

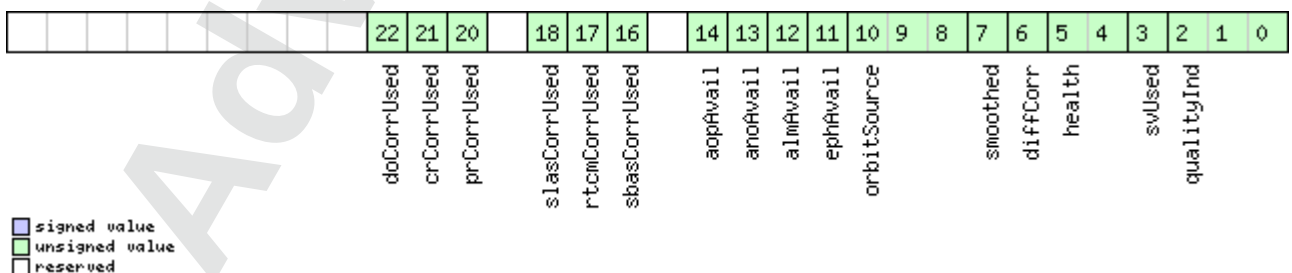

Name	Description
qualityInd	Signal quality indicator: 0: no signal 1: searching signal 2: signal acquired 3: signal detected but unusable 4: code locked and time synchronized 5, 6, 7: code and carrier locked and time synchronized Note: Since IMES signals are not time synchronized, a channel tracking an IMES signal can never reach a quality indicator value of higher than 3.
svUsed	1 = Signal in the subset specified in <a href="#">Signal Identifiers</a> is currently being used for navigation
health	Signal health flag: 0: unknown 1: healthy 2: unhealthy
diffCorr	1 = differential correction data is available for this SV
smoothed	1 = carrier smoothed pseudorange used
orbitSource	Orbit source: 0: no orbit information is available for this SV 1: ephemeris is used 2: almanac is used 3: AssistNow Offline orbit is used 4: AssistNow Autonomous orbit is used 5, 6, 7: other orbit information is used
ephAvail	1 = ephemeris is available for this SV
almAvail	1 = almanac is available for this SV
anoAvail	1 = AssistNow Offline data is available for this SV
aopAvail	1 = AssistNow Autonomous data is available for this SV
sbasCorrUsed	1 = SBAS corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
rtcmCorrUsed	1 = RTCM corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
slasCorrUsed	1 = QZSS SLAS corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
prCorrUsed	1 = Pseudorange corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
crCorrUsed	1 = Carrier range corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
doCorrUsed	1 = Range rate (Doppler) corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>

### 5.14.15 UBX-NAV-SIG (0x01 0x43)

#### 5.14.15.1 Signal Information


Message	UBX-NAV-SIG					
Description	Signal Information					
Firmware	Supported on: <ul style="list-style-type: none"><li>u-blox 9 with protocol version 27</li></ul>					
Type	Periodic/Polled					
Comment	This message displays information about signals currently tracked by the receiver. On the F9 platform the maximum number of signals is 120.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x43	8 + 16*numSigs	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the navigation epoch. See the description of iTOW for details.	
4	U1	-	version	-	Message version (0x00 for this version)	
5	U1	-	numSigs	-	Number of signals	
6	U1[2]	-	reserved1	-	Reserved	
Start of repeated block (numSigs times)						
8 + 16*N	U1	-	gnssId	-	GNSS identifier (see Satellite Numbering) for assignment	
9 + 16*N	U1	-	svId	-	Satellite identifier (see Satellite Numbering) for assignment	
10 + 16*N	U1	-	sigId	-	New style signal identifier (see Signal Identifiers)	
11 + 16*N	U1	-	freqId	-	Only used for GLONASS: This is the frequency slot + 7 (range from 0 to 13)	
12 + 16*N	I2	0.1	prRes	m	Pseudorange residual	
14 + 16*N	U1	-	cno	dBHz	Carrier-to-noise density ratio (signal strength)	
15 + 16*N	U1	-	qualityInd	-	Signal quality indicator: 0: no signal 1: searching signal 2: signal acquired 3: signal detected but unusable 4: code locked and time synchronized 5, 6, 7: code and carrier locked and time synchronized Note: Since IMES signals are not time synchronized, a channel tracking an IMES signal can never reach a quality indicator value of higher than 3.	

## NAV-SIG continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
16 + 16*N	U1	-	corrSource	-	Correction source: 0: no corrections 1: SBAS corrections 2: BeiDou corrections 3: RTCM2 corrections 4: RTCM3 OSR corrections 5: RTCM3 SSR corrections 6: QZSS SLAS corrections
17 + 16*N	U1	-	ionoModel	-	Ionospheric model used: 0: no model 1: Klobuchar model transmitted by GPS 2: SBAS model 3: Klobuchar model transmitted by BeiDou
18 + 16*N	X2	-	sigFlags	-	Signal related flags (see <a href="#">graphic below</a> )
20 + 16*N	U1[4]	-	reserved2	-	<a href="#">Reserved</a>
End of repeated block					

## Bitfield sigFlags

This graphic explains the bits of sigFlags

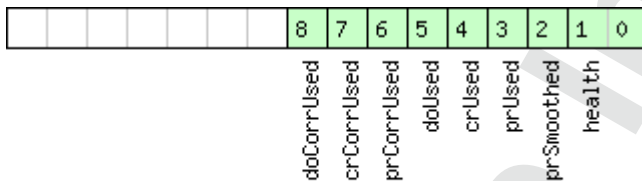

☐ signed value  
☒ unsigned value  
☐ reserved

Name	Description
health	Signal health flag: 0: unknown 1: healthy 2: unhealthy
prSmoothed	1 = Pseudorange has been smoothed
prUsed	1 = Pseudorange has been used for this signal
crUsed	1 = Carrier range has been used for this signal
doUsed	1 = Range rate (Doppler) has been used for this signal
prCorrUsed	1 = Pseudorange corrections have been used for this signal
crCorrUsed	1 = Carrier range corrections have been used for this signal
doCorrUsed	1 = Range rate (Doppler) corrections have been used for this signal


### 5.14.16 UBX-NAV-STATUS (0x01 0x03)

#### 5.14.16.1 Receiver Navigation Status

Message	UBX-NAV-STATUS					
Description	Receiver Navigation Status					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Periodic/Polled					
Comment	See important comments concerning validity of position and velocity given in section <a href="#">Navigation Output Filters</a> . -					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x03	16	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the <a href="#">navigation epoch</a> . See the <a href="#">description of iTOW</a> for details.	
4	U1	-	gpsFix	-	GPSfix Type, this value does <b>not</b> qualify a fix as valid and within the limits. See note on flag gpsFixOk below. 0x00 = no fix 0x01 = dead reckoning only 0x02 = 2D-fix 0x03 = 3D-fix 0x04 = GPS + dead reckoning combined 0x05 = Time only fix 0x06..0xff = reserved	
5	X1	-	flags	-	Navigation Status Flags (see <a href="#">graphic below</a> )	
6	X1	-	fixStat	-	Fix Status Information (see <a href="#">graphic below</a> )	
7	X1	-	flags2	-	further information about navigation output (see <a href="#">graphic below</a> )	
8	U4	-	ttff	ms	Time to first fix (millisecond time tag)	
12	U4	-	msss	ms	Milliseconds since Startup / Reset	

#### Bitfield flags


This graphic explains the bits of flags

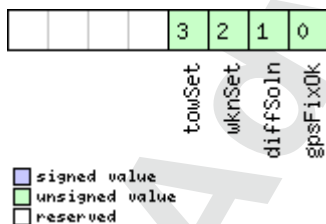

Name	Description
gpsFixOk	1 = position and velocity valid and within DOP and ACC Masks, see also important comments in section <a href="#">Navigation Output Filters</a> .
diffSoln	1 = differential corrections were applied
wknSet	1 = Week Number valid (see <a href="#">Time Validity</a> section for details)
towSet	1 = Time of Week valid (see <a href="#">Time Validity</a> section for details)

## Bitfield fixStat


This graphic explains the bits of `fixStat`

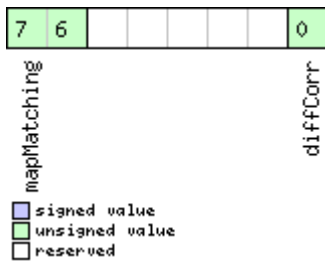

Name	Description
diffCorr	1 = differential corrections available
mapMatching	map matching status: 00: none 01: valid but not used, i.e. map matching data was received, but was too old 10: valid and used, map matching data was applied 11: valid and used, map matching data was applied. In case of sensor unavailability map matching data enables dead reckoning. This requires map matched latitude/longitude or heading data.

## Bitfield flags2

This graphic explains the bits of `flags2`

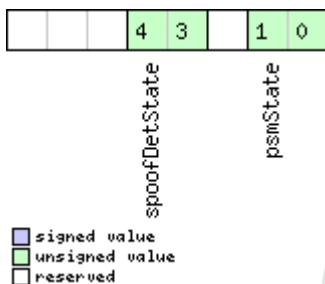

Name	Description
psmState	power save mode state 0: ACQUISITION [or when psm disabled] 1: TRACKING 2: POWER OPTIMIZED TRACKING 3: INACTIVE



### Bitfield flags2 Description continued

Name	Description
spoofDetState	<p>Spoofing detection state</p> <p>0: Unknown or deactivated</p> <p>1: No spoofing indicated</p> <p>2: Spoofing indicated</p> <p>3: Multiple spoofing indications</p> <p>Note that the spoofing state value only reflects the detector state for the current navigation epoch. As spoofing can be detected most easily at the transition from real signal to spoofing signal, this is also where the detector is triggered the most. I.e. a value of 1 - <i>No spoofing indicated</i> does not mean that the receiver is not spoofed, it simply states that the detector was not triggered in this epoch.</p>

## 5.14.17 UBX-NAV-SVIN (0x01 0x3B)

### 5.14.17.1 Survey-in data

Message	<b>UBX-NAV-SVIN</b>					
Description	<b>Survey-in data</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27 (only with High Precision GNSS products)</li> </ul>					
Type	Periodic/Polled					
Comment	This message contains information about survey-in parameters.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x3B	40	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0x00 for this version)	
1	U1[3]	-	reserved1	-	Reserved	
4	U4	-	iTOW	ms	GPS time of week of the <a href="#">navigation epoch</a> . See the <a href="#">description of iTOW</a> for details.	
8	U4	-	dur	s	Passed survey-in observation time	
12	I4	-	meanX	cm	Current survey-in mean position ECEF X coordinate	
16	I4	-	meanY	cm	Current survey-in mean position ECEF Y coordinate	
20	I4	-	meanZ	cm	Current survey-in mean position ECEF Z coordinate	
24	I1	-	meanXHP	0.1 mm	<p>Current high-precision survey-in mean position ECEF X coordinate. Must be in the range -99..+99.</p> <p>The current survey-in mean position ECEF X coordinate, in units of cm, is given by <math>\text{meanX} + (0.01 * \text{meanXHP})</math></p>	

## NAV-SVIN continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
25	I1	-	meanYHP	0.1_ mm	Current high-precision survey-in mean position ECEF Y coordinate. Must be in the range -99..+99. The current survey-in mean position ECEF Y coordinate, in units of cm, is given by $\text{meanY} + (0.01 * \text{meanYHP})$
26	I1	-	meanZHP	0.1_ mm	Current high-precision survey-in mean position ECEF Z coordinate. Must be in the range -99..+99. The current survey-in mean position ECEF Z coordinate, in units of cm, is given by $\text{meanZ} + (0.01 * \text{meanZHP})$
27	U1	-	reserved2	-	Reserved
28	U4	-	meanAcc	0.1_ mm	Current survey-in mean position accuracy
32	U4	-	obs	-	Number of position observations used during survey-in
36	U1	-	valid	-	Survey-in position validity flag, 1 = valid, otherwise 0
37	U1	-	active	-	Survey-in in progress flag, 1 = in-progress, otherwise 0
38	U1[2]	-	reserved3	-	Reserved

### 5.14.18 UBX-NAV-TIMEBDS (0x01 0x24)

#### 5.14.18.1 BDS Time Solution


Message	<b>UBX-NAV-TIMEBDS</b>					
Description	<b>BDS Time Solution</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Periodic/Polled					
Comment	This message reports the precise BDS time of the most recent navigation solution including validity flags and an accuracy estimate.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x24	20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the <a href="#">navigation epoch</a> . See the <a href="#">description of iTOW</a> for details.	
4	U4	-	SOW	s	BDS time of week (rounded to seconds)	
8	I4	-	fSOW	ns	Fractional part of SOW (range: +/-500000000). The precise BDS time of week in seconds is: $\text{SOW} + \text{fSOW} * 1\text{e-}9$	

## NAV-TIMEBDS continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
12	I2	-	week	-	BDS week number of the <a href="#">navigation epoch</a>
14	I1	-	leapS	s	BDS leap seconds (BDS-UTC)
15	X1	-	valid	-	Validity Flags (see <a href="#">graphic below</a> )
16	U4	-	tAcc	ns	Time Accuracy Estimate

## Bitfield valid

This graphic explains the bits of `valid`

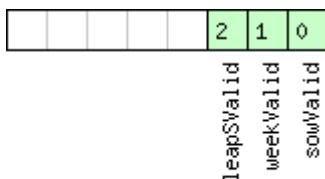

☐ signed value  
☐ unsigned value  
☐ reserved

Name	Description
<code>sowValid</code>	1 = Valid SOW and fSOW (see <a href="#">Time Validity</a> section for details)
<code>weekValid</code>	1 = Valid week (see <a href="#">Time Validity</a> section for details)
<code>leapSValid</code>	1 = Valid leapS


## 5.14.19 UBX-NAV-TIMEGAL (0x01 0x25)

### 5.14.19.1 Galileo Time Solution

Message	UBX-NAV-TIMEGAL					
Description	Galileo Time Solution					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Periodic/Polled					
Comment	This message reports the precise Galileo time of the most recent navigation solution including validity flags and an accuracy estimate.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x25	20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the <a href="#">navigation epoch</a> . See the <a href="#">description of iTOW</a> for details.	
4	U4	-	galTow	s	Galileo time of week (rounded to seconds)	
8	I4	-	fGalTow	ns	Fractional part of SOW (range: +/-500000000). The precise Galileo time of week in seconds is: $galTow + fGalTow * 1e-9$	
12	I2	-	galWno	-	Galileo week number	
14	I1	-	leapS	s	Galileo leap seconds (Galileo-UTC)	
15	X1	-	valid	-	Validity Flags (see <a href="#">graphic below</a> )	
16	U4	-	tAcc	ns	Time Accuracy Estimate	

## Bitfield valid

This graphic explains the bits of `valid`

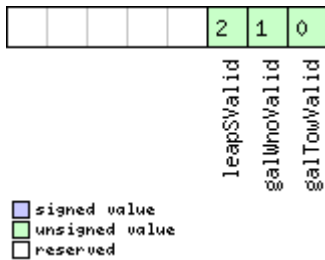

Name	Description
<code>galTowValid</code>	1 = Valid <code>galTow</code> and <code>fGalTow</code> (see <a href="#">Time Validity</a> section for details)
<code>galWnoValid</code>	1 = Valid <code>galWno</code> (see <a href="#">Time Validity</a> section for details)
<code>leapSValid</code>	1 = Valid <code>leapS</code>


### 5.14.20 UBX-NAV-TIMEGLO (0x01 0x23)

#### 5.14.20.1 GLO Time Solution

Message	<b>UBX-NAV-TIMEGLO</b>					
Description	<b>GLO Time Solution</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li><a href="#">u-blox 9 with protocol version 27</a></li> </ul>					
Type	Periodic/Polled					
Comment	This message reports the precise GLO time of the most recent navigation solution including validity flags and an accuracy estimate.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x23	20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	<code>iTOW</code>	ms	GPS time of week of the <a href="#">navigation epoch</a> . See the <a href="#">description of iTOW</a> for details.	
4	U4	-	<code>TOD</code>	s	GLONASS time of day (rounded to integer seconds)	
8	I4	-	<code>fTOD</code>	ns	Fractional part of TOD (range: +/-500000000). The precise GLONASS time of day in seconds is: $TOD + fTOD * 1e-9$	
12	U2	-	<code>Nt</code>	days	Current date (range: 1-1461), starting at 1 from the 1st Jan of the year indicated by <code>N4</code> and ending at 1461 at the 31st Dec of the third year after that indicated by <code>N4</code>	
14	U1	-	<code>N4</code>	-	Four-year interval number starting from 1996 (1=1996, 2=2000, 3=2004...)	
15	X1	-	<code>valid</code>	-	Validity flags (see <a href="#">graphic below</a> )	
16	U4	-	<code>tAcc</code>	ns	Time Accuracy Estimate	

## Bitfield valid

This graphic explains the bits of `valid`

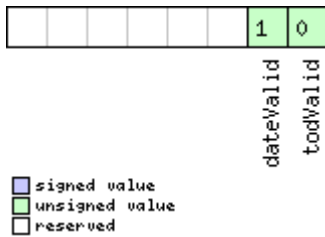

Name	Description
<code>todValid</code>	1 = Valid TOD and fTOD (see <a href="#">Time Validity</a> section for details)
<code>dateValid</code>	1 = Valid N4 and Nt (see <a href="#">Time Validity</a> section for details)


### 5.14.21 UBX-NAV-TIMEGPS (0x01 0x20)

#### 5.14.21.1 GPS Time Solution

Message	<b>UBX-NAV-TIMEGPS</b>					
Description	<b>GPS Time Solution</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Periodic/Polled					
Comment	This message reports the precise GPS time of the most recent navigation solution including validity flags and an accuracy estimate.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x20	16	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the <a href="#">navigation epoch</a> . See the <a href="#">description of iTOW</a> for details.	
4	I4	-	fTOW	ns	Fractional part of iTOW (range: +/-500000). The precise GPS time of week in seconds is: $(iTOW * 1e-3) + (fTOW * 1e-9)$	
8	I2	-	week	-	GPS week number of the <a href="#">navigation epoch</a>	
10	I1	-	leapS	s	GPS leap seconds (GPS-UTC)	
11	X1	-	valid	-	Validity Flags (see <a href="#">graphic below</a> )	
12	U4	-	tAcc	ns	Time Accuracy Estimate	

## Bitfield valid

This graphic explains the bits of `valid`

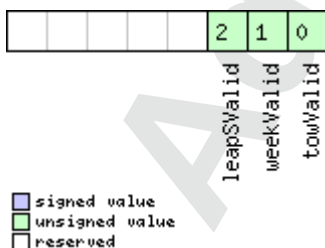

Name	Description
towValid	1 = Valid GPS time of week (iTOW & fTOW, see <a href="#">Time Validity</a> section for details)
weekValid	1 = Valid GPS week number (see <a href="#">Time Validity</a> section for details)
leapSValid	1 = Valid GPS leap seconds

### 5.14.22 UBX-NAV-TIMELS (0x01 0x26)

#### 5.14.22.1 Leap second event information


Message	<b>UBX-NAV-TIMELS</b>					
Description	<b>Leap second event information</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Periodic/Polled					
Comment	Information about the upcoming leap second event if one is scheduled.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x26	24	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the <a href="#">navigation epoch</a> . See the <a href="#">description of iTOW</a> for details.	
4	U1	-	version	-	Message version (0x00 for this version).	
5	U1[3]	-	reserved1	-	<a href="#">Reserved</a>	
8	U1	-	srcOfCurrLs	-	Information source for the current number of leap seconds. 0: Default (hardcoded in the firmware, can be outdated) 1: Derived from time difference between GPS and GLONASS time 2: GPS 3: SBAS 4: BeiDou 5: Galileo 6: Aided data 7: Configured 255: Unknown	
9	I1	-	currLs	s	Current number of leap seconds since start of GPS time (Jan 6, 1980). It reflects how much GPS time is ahead of UTC time. Galileo number of leap seconds is the same as GPS. BeiDou number of leap seconds is 14 less than GPS. GLONASS follows UTC time, so no leap seconds.	

## NAV-TIMEELS continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
10	U1	-	srcOfLsChange	-	Information source for the future leap second event. 0: No source 2: GPS 3: SBAS 4: BeiDou 5: Galileo 6: GLONASS
11	I1	-	lsChange	s	Future leap second change if one is scheduled. +1 = positive leap second, -1 = negative leap second, 0 = no future leap second event scheduled or no information available.
12	I4	-	timeToLsEvent	s	Number of seconds until the next leap second event, or from the last leap second event if no future event scheduled. If > 0 event is in the future, = 0 event is now, < 0 event is in the past. Valid only if validTimeToLsEvent = 1.
16	U2	-	dateOfLsGpsWn	-	GPS week number (WN) of the next leap second event or the last one if no future event scheduled. Valid only if validTimeToLsEvent = 1.
18	U2	-	dateOfLsGpsDn	-	GPS day of week number (DN) for the next leap second event or the last one if no future event scheduled. Valid only if validTimeToLsEvent = 1. (GPS and Galileo DN: from 1 = Sun to 7 = Sat. BeiDou DN: from 0 = Sun to 6 = Sat.)
20	U1[3]	-	reserved2	-	Reserved
23	X1	-	valid	-	Validity flags (see <a href="#">graphic below</a> )

### Bitfield valid

This graphic explains the bits of valid



☐ signed value  
☐ unsigned value  
☐ reserved

Name	Description
validCurrLs	1 = Valid current number of leap seconds value.
validTimeToLs Event	1 = Valid time to next leap second event or from the last leap second event if no future event scheduled.


### 5.14.23 UBX-NAV-TIMEUTC (0x01 0x21)

#### 5.14.23.1 UTC Time Solution

Message	UBX-NAV-TIMEUTC					
Description	UTC Time Solution					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Periodic/Polled					
Comment	<b>Note that during a leap second there may be more or less than 60 seconds in a minute; see the <a href="#">description of leap seconds</a> for details.</b> -					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x21	20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the <a href="#">navigation epoch</a> . See the <a href="#">description of iTOW</a> for details.	
4	U4	-	tAcc	ns	Time accuracy estimate (UTC)	
8	I4	-	nano	ns	Fraction of second, range -1e9 .. 1e9 (UTC)	
12	U2	-	year	y	Year, range 1999..2099 (UTC)	
14	U1	-	month	month	Month, range 1..12 (UTC)	
15	U1	-	day	d	Day of month, range 1..31 (UTC)	
16	U1	-	hour	h	Hour of day, range 0..23 (UTC)	
17	U1	-	min	min	Minute of hour, range 0..59 (UTC)	
18	U1	-	sec	s	Seconds of minute, range 0..60 (UTC)	
19	X1	-	valid	-	Validity Flags (see <a href="#">graphic below</a> )	

#### Bitfield valid

This graphic explains the bits of valid

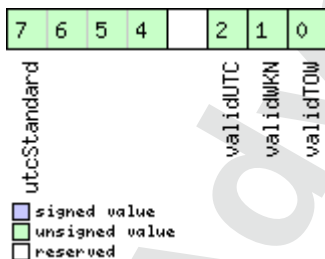



Name	Description
validTOW	1 = Valid Time of Week (see <a href="#">Time Validity</a> section for details)
validWKN	1 = Valid Week Number (see <a href="#">Time Validity</a> section for details)
validUTC	1 = Valid UTC Time
utcStandard	UTC standard identifier. 0: Information not available 1: Communications Research Laboratory (CRL) 2: National Institute of Standards and Technology (NIST) 3: U.S. Naval Observatory (USNO) 4: International Bureau of Weights and Measures (BIPM) 5: European Laboratory (tbd) 6: Former Soviet Union (SU) 7: National Time Service Center, China (NTSC) 15: Unknown

#### 5.14.24 UBX-NAV-VELECEF (0x01 0x11)

##### 5.14.24.1 Velocity Solution in ECEF

Message	<b>UBX-NAV-VELECEF</b>					
Description	<b>Velocity Solution in ECEF</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Periodic/Polled					
Comment	<b>See important comments concerning validity of velocity given in section <a href="#">Navigation Output Filters</a>.</b> -					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x11	20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the <a href="#">navigation epoch</a> . See the <a href="#">description of iTOW</a> for details.	
4	I4	-	ecefVX	cm/s	ECEF X velocity	
8	I4	-	ecefVY	cm/s	ECEF Y velocity	
12	I4	-	ecefVZ	cm/s	ECEF Z velocity	
16	U4	-	sAcc	cm/s	Speed accuracy estimate	

### 5.14.25 UBX-NAV-VELNED (0x01 0x12)

#### 5.14.25.1 Velocity Solution in NED

Message	UBX-NAV-VELNED					
Description	Velocity Solution in NED					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Periodic/Polled					
Comment	<b>See important comments concerning validity of velocity given in section <a href="#">Navigation Output Filters</a>.</b> -					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x12	36	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the <a href="#">navigation epoch</a> . See the <a href="#">description of iTOW</a> for details.	
4	I4	-	velN	cm/s	North velocity component	
8	I4	-	velE	cm/s	East velocity component	
12	I4	-	velD	cm/s	Down velocity component	
16	U4	-	speed	cm/s	Speed (3-D)	
20	U4	-	gSpeed	cm/s	Ground speed (2-D)	
24	I4	1e-5	heading	deg	Heading of motion 2-D	
28	U4	-	sAcc	cm/s	Speed accuracy Estimate	
32	U4	1e-5	cAcc	deg	Course / Heading accuracy estimate	

## 5.15 UBX-RXM (0x02)

Receiver Manager Messages: i.e. Satellite Status, RTC Status.

Messages in the RXM class are used to output status and result data from the Receiver Manager.

### 5.15.1 UBX-RXM-MEASX (0x02 0x14)

#### 5.15.1.1 Satellite Measurements for RRLP


Message	<b>UBX-RXM-MEASX</b>					
Description	<b>Satellite Measurements for RRLP</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Periodic					
Comment	<p>The message payload data is, where possible and appropriate, according to the Radio Resource LCS (Location Services) Protocol (RRLP) [1]. One exception is the satellite and GNSS ids, which here are given according to the <a href="#">Satellite Numbering</a> scheme. The correct satellites have to be selected and their satellite ID translated accordingly [1, tab. A.10.14] for use in a RRLP Measure Position Response Component. Similarly, the measurement reference time of week has to be forwarded correctly (modulo 14400000 for the 24 LSB GPS measurements variant, modulo 3600000 for the 22 LSB Galileo and Additional Navigation Satellite Systems (GANSS) measurements variant) of the RRLP measure position response to the SMLC.</p> <p>Reference: [1] ETSI TS 144 031 V11.0.0 (2012-10), Digital cellular telecommunications system (Phase 2+), Location Services (LCS), Mobile Station (MS) - Serving Mobile Location Centre (SMLC), Radio Resource LCS Protocol (RRLP), (3GPP TS 44.031 version 11.0.0 Release 11).</p>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x02	0x14	44 + 24*numSV	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version, currently 0x01	
1	U1[3]	-	reserved1	-	<a href="#">Reserved</a>	
4	U4	-	gpsTOW	ms	GPS measurement reference time	
8	U4	-	gloTOW	ms	GLONASS measurement reference time	
12	U4	-	bdsTOW	ms	BeiDou measurement reference time	
16	U1[4]	-	reserved2	-	<a href="#">Reserved</a>	
20	U4	-	qzssTOW	ms	QZSS measurement reference time	
24	U2	2 <sup>-4</sup>	gpsTOWacc	ms	GPS measurement reference time accuracy (0xffff = > 4s)	
26	U2	2 <sup>-4</sup>	gloTOWacc	ms	GLONASS measurement reference time accuracy (0xffff = > 4s)	
28	U2	2 <sup>-4</sup>	bdsTOWacc	ms	BeiDou measurement reference time accuracy (0xffff = > 4s)	
30	U1[2]	-	reserved3	-	<a href="#">Reserved</a>	
32	U2	2 <sup>-4</sup>	qzssTOWacc	ms	QZSS measurement reference time accuracy (0xffff = > 4s)	
34	U1	-	numSV	-	Number of satellites in repeated block	

## RXM-MEASX continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
35	U1	-	flags	-	Flags (see <a href="#">graphic below</a> )
36	U1[8]	-	reserved4	-	<a href="#">Reserved</a>
Start of repeated block (numSV times)					
44 + 24*N	U1	-	gnssId	-	GNSS ID (see <a href="#">Satellite Numbering</a> )
45 + 24*N	U1	-	svId	-	Satellite ID (see <a href="#">Satellite Numbering</a> )
46 + 24*N	U1	-	cNo	-	carrier noise ratio (0..63)
47 + 24*N	U1	-	mpathIndic	-	multipath index (according to [1]) (0 = not measured, 1 = low, 2 = medium, 3 = high)
48 + 24*N	I4	0.04	dopplerMS	m/s	Doppler measurement
52 + 24*N	I4	0.2	dopplerHz	Hz	Doppler measurement
56 + 24*N	U2	-	wholeChips	-	whole value of the code phase measurement (0..1022 for GPS)
58 + 24*N	U2	-	fracChips	-	fractional value of the code phase measurement (0..1023)
60 + 24*N	U4	2 <sup>-21</sup>	codePhase	ms	Code phase
64 + 24*N	U1	-	intCodePhase	ms	Integer (part of the) code phase
65 + 24*N	U1	-	pseuRangeRMSErr	-	pseudorange RMS error index (according to [1]) (0..63)
66 + 24*N	U1[2]	-	reserved5	-	<a href="#">Reserved</a>
End of repeated block					

## Bitfield flags

This graphic explains the bits of flags

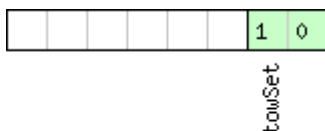

- signed value
- unsigned value
- reserved

Name	Description
towSet	TOW set (0 = no, 1 or 2 = yes)


### 5.15.2 UBX-RXM-PMREQ (0x02 0x41)

#### 5.15.2.1 Requests a Power Management task

Message	<b>UBX-RXM-PMREQ</b>					
Description	<b>Requests a Power Management task</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Command					
Comment	Request of a Power Management related task of the receiver.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x02	0x41	8	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	duration	ms	Duration of the requested task, set to zero for infinite duration. The maximum supported time is 12 days.	
4	X4	-	flags	-	task flags (see <a href="#">graphic below</a> )	

#### Bitfield flags

This graphic explains the bits of flags

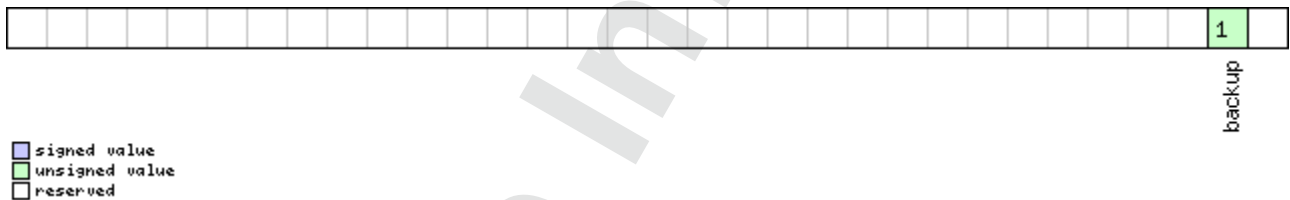

Name	Description
backup	The receiver goes into backup mode for a time period defined by duration. Provided that it is not connected to USB

#### 5.15.2.2 Requests a Power Management task


Message	<b>UBX-RXM-PMREQ</b>					
Description	<b>Requests a Power Management task</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Command					
Comment	Request of a Power Management related task of the receiver.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x02	0x41	16	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0x00 for this version)	
1	U1[3]	-	reserved1	-	<a href="#">Reserved</a>	

#### RXM-PMREQ continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
4	U4	-	duration	ms	Duration of the requested task, set to zero for infinite duration. The maximum supported time is 12 days.
8	X4	-	flags	-	task flags (see <a href="#">graphic below</a> )
12	X4	-	wakeupSources	-	Configure pins to wakeup the receiver. The receiver wakes up if there is either a falling or a rising edge on one of the configured pins (see <a href="#">graphic below</a> )

### Bitfield flags


This graphic explains the bits of flags

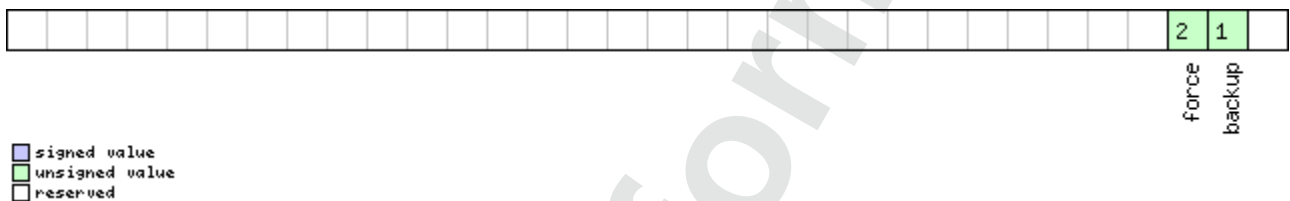

Name	Description
backup	The receiver goes into backup mode for a time period defined by duration. Provided that it is not connected to USB
force	Force receiver backup while USB is connected. USB interface will be disabled.

### Bitfield wakeupSources

This graphic explains the bits of wakeupSources

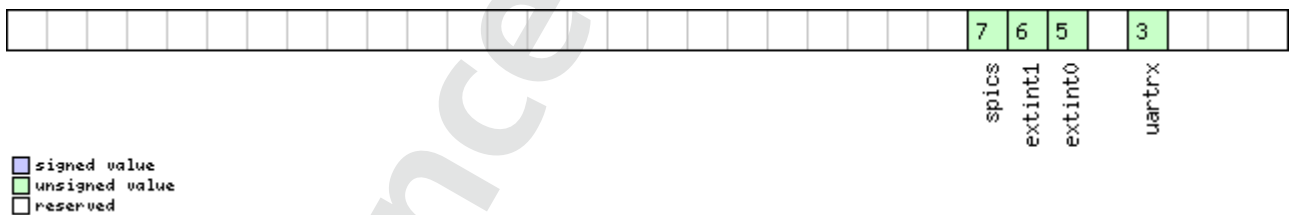

Name	Description
uartrx	Wakeup the receiver if there is an edge on the UART RX pin.
extint0	Wakeup the receiver if there is an edge on the EXTINT0 pin.
extint1	Wakeup the receiver if there is an edge on the EXTINT1 pin.
spics	Wakeup the receiver if there is an edge on the SPI CS pin.

### 5.15.3 UBX-RXM-RAWX (0x02 0x15)

#### 5.15.3.1 Multi-GNSS Raw Measurement Data


Message	UBX-RXM-RAWX					
Description	Multi-GNSS Raw Measurement Data					
Firmware	Supported on: <ul style="list-style-type: none"><li>u-blox 9 with protocol version 27 (only with High Precision GNSS products)</li></ul>					
Type	Periodic/Polled					
Comment	<p>This message contains the information needed to be able to generate a RINEX 3 multi-GNSS observation file.</p> <p>This message contains pseudorange, Doppler, carrier phase, phase lock and signal quality information for GNSS satellites once signals have been synchronized. This message supports all active GNSS.</p> <p>The only difference between this version of the message and the previous version (UBX-RXM-RAWX-DATA0) is the addition of the version field.</p>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x02	0x15	16 + 32*numMeas	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	R8	-	rcvTow	s	Measurement time of week in receiver local time approximately aligned to the GPS time system. The receiver local time of week, week number and leap second information can be used to translate the time to other time systems. More information about the difference in time systems can be found in RINEX 3 documentation. For a receiver operating in GLONASS only mode, UTC time can be determined by subtracting the leapS field from GPS time regardless of whether the GPS leap seconds are valid.	
8	U2	-	week	weeks	GPS week number in receiver local time.	
10	I1	-	leapS	s	GPS leap seconds (GPS-UTC). This field represents the receiver's best knowledge of the leap seconds offset. A flag is given in the recStat bitfield to indicate if the leap seconds are known.	
11	U1	-	numMeas	-	Number of measurements to follow	
12	X1	-	recStat	-	Receiver tracking status bitfield (see graphic below)	
13	U1	-	version	-	Message version (0x01 for this version).	
14	U1[2]	-	reserved1	-	Reserved	
Start of repeated block (numMeas times)						
16 + 32*N	R8	-	prMes	m	Pseudorange measurement [m]. GLONASS inter frequency channel delays are compensated with an internal calibration table.	

RXM-RAWX continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
24 + 32*N	R8	-	cpMes	cycles	Carrier phase measurement [cycles]. The carrier phase initial ambiguity is initialized using an approximate value to make the magnitude of the phase close to the pseudorange measurement. Clock resets are applied to both phase and code measurements in accordance with the RINEX specification.
32 + 32*N	R4	-	doMes	Hz	Doppler measurement (positive sign for approaching satellites) [Hz]
36 + 32*N	U1	-	gnssId	-	GNSS identifier (see <a href="#">Satellite Numbering</a> for a list of identifiers)
37 + 32*N	U1	-	svId	-	Satellite identifier (see <a href="#">Satellite Numbering</a> )
38 + 32*N	U1	-	sigId	-	New style signal identifier (see <a href="#">Signal Identifiers</a> ).
39 + 32*N	U1	-	freqId	-	Only used for GLONASS: This is the frequency slot + 7 (range from 0 to 13)
40 + 32*N	U2	-	locktime	ms	Carrier phase locktime counter (maximum 64500ms)
42 + 32*N	U1	-	cno	dBHz	Carrier-to-noise density ratio (signal strength) [dB-Hz]
43 + 32*N	X1	0.01*2^n	prStdev	m	Estimated pseudorange measurement standard deviation (see <a href="#">graphic below</a> )
44 + 32*N	X1	0.004	cpStdev	cycles	Estimated carrier phase measurement standard deviation (note a raw value of 0x0F indicates the value is invalid) (see <a href="#">graphic below</a> )
45 + 32*N	X1	0.002*2^n	doStdev	Hz	Estimated Doppler measurement standard deviation. (see <a href="#">graphic below</a> )
46 + 32*N	X1	-	trkStat	-	Tracking status bitfield (see <a href="#">graphic below</a> )
47 + 32*N	U1	-	reserved2	-	<a href="#">Reserved</a>
End of repeated block					

## Bitfield recStat

This graphic explains the bits of recStat




- signed value
- unsigned value
- reserved



Name	Description
leapSec	Leap seconds have been determined
clkReset	Clock reset applied. Typically the receiver clock is changed in increments of integer milliseconds.

### Bitfield prStddev

This graphic explains the bits of prStddev




prStd

- ☒ signed value
- ☒ unsigned value
- ☐ reserved

Name	Description
prStd	Estimated pseudorange standard deviation

### Bitfield cpStddev

This graphic explains the bits of cpStddev




cpStd

- ☒ signed value
- ☒ unsigned value
- ☐ reserved

Name	Description
cpStd	Estimated carrier phase standard deviation

### Bitfield doStddev

This graphic explains the bits of doStddev




doStd

- ☒ signed value
- ☒ unsigned value
- ☐ reserved

Name	Description
doStd	Estimated Doppler standard deviation

### Bitfield trkStat

This graphic explains the bits of trkStat



subHalfCyc

halfCyc

cpValid

prValid

- ☒ signed value
- ☒ unsigned value
- ☐ reserved

Name	Description
prValid	Pseudorange valid
cpValid	Carrier phase valid
halfCyc	Half cycle valid
subHalfCyc	Half cycle subtracted from phase

#### 5.15.4 UBX-RXM-RLM (0x02 0x59)

##### 5.15.4.1 Galileo SAR Short-RLM report

Message	<b>UBX-RXM-RLM</b>					
Description	<b>Galileo SAR Short-RLM report</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Output					
Comment	This message contains the contents of any Galileo Search and Rescue (SAR) Short Return Link Message detected by the receiver.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x02	0x59	16	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0x00 for this version)	
1	U1	-	type	-	Message type (0x01 for Short-RLM)	
2	U1	-	svId	-	Identifier of transmitting satellite (see <a href="#">Satellite Numbering</a> )	
3	U1	-	reserved1	-	<a href="#">Reserved</a>	
4	U1[8]	-	beacon	-	Beacon identifier (60 bits), with bytes ordered by earliest transmitted (most significant) first. Top four bits of first byte are zero.	
12	U1	-	message	-	Message code (4 bits)	
13	U1[2]	-	params	-	Parameters (16 bits), with bytes ordered by earliest transmitted (most significant) first.	
15	U1	-	reserved2	-	<a href="#">Reserved</a>	

### 5.15.4.2 Galileo SAR Long-RLM report

Message	<b>UBX-RXM-RLM</b>					
Description	<b>Galileo SAR Long-RLM report</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>					
Type	Output					
Comment	This message contains the contents of any Galileo Search and Rescue (SAR) Long Return Link Message detected by the receiver.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x02	0x59	28	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0x00 for this version)	
1	U1	-	type	-	Message type (0x02 for Long-RLM)	
2	U1	-	svId	-	Identifier of transmitting satellite (see <a href="#">Satellite Numbering</a> )	
3	U1	-	reserved1	-	<a href="#">Reserved</a>	
4	U1[8]	-	beacon	-	Beacon identifier (60 bits), with bytes ordered by earliest transmitted (most significant) first. Top four bits of first byte are zero.	
12	U1	-	message	-	Message code (4 bits)	
13	U1[12]	-	params	-	Parameters (96 bits), with bytes ordered by earliest transmitted (most significant) first.	
25	U1[3]	-	reserved2	-	<a href="#">Reserved</a>	


### 5.15.5 UBX-RXM-RTCM (0x02 0x32)

#### 5.15.5.1 RTCM input status

Message	<b>UBX-RXM-RTCM</b>					
Description	<b>RTCM input status</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27 (only with High Precision GNSS products)</li> </ul>					
Type	Output					
Comment	Output upon processing of an RTCM input message					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x02	0x32	8	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0x02 for this version)	
1	X1	-	flags	-	RTCM input status flags (see <a href="#">graphic below</a> )	
2	U1[2]	-	reserved1	-	<a href="#">Reserved</a>	
4	U2	-	refStation	-	Reference station ID	
6	U2	-	msgType	-	Message type	

## Bitfield flags

This graphic explains the bits of flags

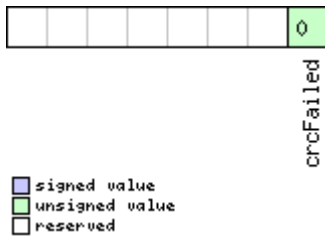

Name	Description
crcFailed	0 when RTCM message received and passed CRC check, 1 when failed in which case refStation and msgType might be corrupted and misleading

### 5.15.6 UBX-RXM-SFRBX (0x02 0x13)

#### 5.15.6.1 Broadcast Navigation Data Subframe

Message	UBX-RXM-SFRBX					
Description	Broadcast Navigation Data Subframe					
Firmware	Supported on: <ul style="list-style-type: none"><li>u-blox 9 with protocol version 27</li></ul>					
Type	Output					
Comment	This message reports a complete subframe of broadcast navigation data decoded from a single signal. The number of data words reported in each message depends on the nature of the signal.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x02	0x13	8 + 4*numWords	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	gnssId	-	GNSS identifier (see <a href="#">Satellite Numbering</a> )	
1	U1	-	svId	-	Satellite identifier (see <a href="#">Satellite Numbering</a> )	
2	U1	-	reserved1	-	<a href="#">Reserved</a>	
3	U1	-	freqId	-	Only used for GLONASS: This is the frequency slot + 7 (range from 0 to 13)	
4	U1	-	numWords	-	The number of data words contained in this message (up to 10, for currently supported signals)	
5	U1	-	chn	-	The tracking channel number the message was received on	
6	U1	-	version	-	Message version, (0x02 for this version)	
7	U1	-	reserved2	-	<a href="#">Reserved</a>	
Start of repeated block (numWords times)						
8 + 4*N	U4	-	dwrdr	-	The data words	
End of repeated block						

## 5.16 UBX-SEC (0x27)

### Security Feature Messages

Messages in the SEC class are used for security features of the receiver.

#### 5.16.1 UBX-SEC-SIGN (0x27 0x01)

##### 5.16.1.1 Signature of a previous message

Message	<b>UBX-SEC-SIGN</b>					
Description	<b>Signature of a previous message</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Output					
Comment	The message is the signature of a previously sent message. The signature is generated with a hash using the SHA-256 algorithm with the programmed seeds.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x27	0x01	40	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0x01 for this version)	
1	U1[3]	-	reserved1	-	<a href="#">Reserved</a>	
4	U1	-	classID	-	Class ID of the referring message	
5	U1	-	messageID	-	Message ID of the referring message	
6	U2	-	checksum	-	UBX Checksum of the referring message	
8	U1[32]	-	hash	-	SHA-256 hash of the referring message	

#### 5.16.2 UBX-SEC-UNIQID (0x27 0x03)

##### 5.16.2.1 Unique Chip ID

Message	<b>UBX-SEC-UNIQID</b>					
Description	<b>Unique Chip ID</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Output					
Comment	This message is used to retrieve a unique chip identifier (40 bits, 5 bytes).					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x27	0x03	9	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0x01 for this version)	
1	U1[3]	-	reserved1	-	<a href="#">Reserved</a>	
4	U1[5]	-	uniqueId	-	Unique chip ID	

## 5.17 UBX-TIM (0x0D)

Timing Messages: i.e. Time Pulse Output, Time Mark Results.

Messages in the TIM class are used to output timing information from the receiver, like Time Pulse and Time Mark measurements.


### 5.17.1 UBX-TIM-TM2 (0x0D 0x03)

#### 5.17.1.1 Time mark data

Message	<b>UBX-TIM-TM2</b>					
Description	<b>Time mark data</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Periodic/Polled					
Comment	This message contains information for high precision time stamping / pulse counting. The delay figures and timebase given in <a href="#">UBX-CFG-TP5</a> are also applied to the time results output in this message.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x0D	0x03	28	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	ch	-	Channel (i.e. EXTINT) upon which the pulse was measured	
1	X1	-	flags	-	Bitmask (see <a href="#">graphic below</a> )	
2	U2	-	count	-	rising edge counter.	
4	U2	-	wnR	-	week number of last rising edge	
6	U2	-	wnF	-	week number of last falling edge	
8	U4	-	towMsR	ms	tow of rising edge	
12	U4	-	towSubMsR	ns	millisecond fraction of tow of rising edge in nanoseconds	
16	U4	-	towMsF	ms	tow of falling edge	
20	U4	-	towSubMsF	ns	millisecond fraction of tow of falling edge in nanoseconds	
24	U4	-	accEst	ns	Accuracy estimate	

### Bitfield flags

This graphic explains the bits of flags

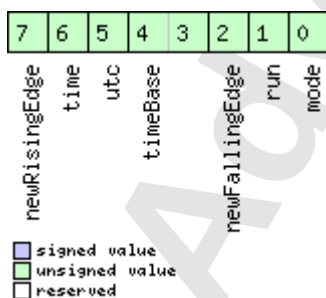

Name	Description
mode	0=single 1=running
run	0=armed 1=stopped
newFallingEdge	new falling edge detected
timeBase	0=Time base is Receiver Time 1=Time base is GNSS Time (the system according to the configuration in <a href="#">UBX-CFG-TP5</a> for tpldx=0) 2=Time base is UTC (the variant according to the configuration in <a href="#">UBX-CFG-NAV5</a> )
utc	0=UTC not available 1=UTC available
time	0=Time is not valid 1=Time is valid (Valid GNSS fix)
newRisingEdge	new rising edge detected


### 5.17.2 UBX-TIM-TP (0x0D 0x01)

#### 5.17.2.1 Time Pulse Timedata

Message	<b>UBX-TIM-TP</b>					
Description	<b>Time Pulse Timedata</b>					
Firmware	Supported on: <ul style="list-style-type: none"> <li><a href="#">u-blox 9 with protocol version 27</a></li> </ul>					
Type	Periodic/Polled					
Comment	This message contains information on the timing of the next pulse at the TIMEPULSE0 output. The recommended configuration when using this message is to set both the measurement rate ( <a href="#">UBX-CFG-RATE</a> ) and the timepulse frequency ( <a href="#">UBX-CFG-TP5</a> ) to 1Hz. TIMEPULSE0 and this message are not available from DR products using the dedicated I2C sensor interface, including NEO-M8L and NEO-M8U modules					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x0D	0x01	16	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	towMS	ms	Time pulse time of week according to time base	
4	U4	2 <sup>-32</sup>	towSubMS	ms	Submillisecond part of TOWMS	
8	I4	-	qErr	ps	Quantization error of time pulse (not supported for the FTS product variant).	
12	U2	-	week	weeks	Time pulse week number according to time base	
14	X1	-	flags	-	bitmask (see <a href="#">graphic below</a> )	
15	X1	-	refInfo	-	Time reference information (see <a href="#">graphic below</a> )	

## Bitfield flags


This graphic explains the bits of `flags`

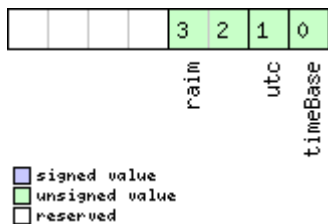

Name	Description
timeBase	0=Time base is GNSS 1=Time base is UTC
utc	0=UTC not available 1=UTC available
raim	(T)RAIM information 0=information not available 1=not active 2=active

## Bitfield refInfo

This graphic explains the bits of `refInfo`

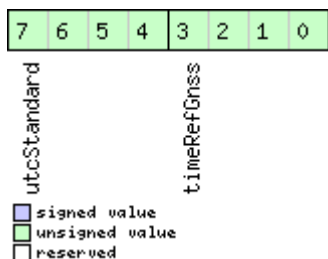

Name	Description
timeRefGnss	GNSS reference information (only active if time base is GNSS -> timeBase=0) 0: GPS 1: GLONASS 2: BeiDou 15: Unknown
utcStandard	UTC standard identifier (only active if time base is UTC -> timeBase=1) 0: Information not available 1: Communications Research Laboratory (CRL) 2: National Institute of Standards and Technology (NIST) 3: U.S. Naval Observatory (USNO) 4: International Bureau of Weights and Measures (BIPM) 5: European Laboratory (tbd) 6: Former Soviet Union (SU) 15: Unknown




### 5.17.3 UBX-TIM-VRFY (0x0D 0x06)

#### 5.17.3.1 Sourced Time Verification

Message	<b>UBX-TIM-VRFY</b>					
Description	<b>Sourced Time Verification</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Periodic/Polled					
Comment	This message contains verification information about previous time received via AID-INI or from RTC					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x0D	0x06	20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	I4	-	itow	ms	integer millisecond tow received by source	
4	I4	-	frac	ns	sub-millisecond part of tow	
8	I4	-	deltaMs	ms	integer milliseconds of delta time (current time minus sourced time)	
12	I4	-	deltaNs	ns	sub-millisecond part of delta time	
16	U2	-	wno	week	week number	
18	X1	-	flags	-	information flags (see <a href="#">graphic below</a> )	
19	U1	-	reserved1	-	<a href="#">Reserved</a>	

#### Bitfield flags

This graphic explains the bits of flags



☐ signed value  
☒ unsigned value  
☐ reserved

Name	Description
src	aiding time source 0: no time aiding done 2: source was RTC 3: source was AID-INI

## 5.18 UBX-UPD (0x09)

Firmware Update Messages: i.e. Memory/Flash erase/write, Reboot, Flash identification, etc..

Messages in the UPD class are used to update the firmware and identify any attached flash device.

### 5.18.1 UBX-UPD-SOS (0x09 0x14)

#### 5.18.1.1 Poll Backup File Restore Status

Message	<b>UBX-UPD-SOS</b>					
Description	<b>Poll Backup File Restore Status</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Poll Request					
Comment	Sending this (empty / no-payload) message to the receiver results in the receiver returning a <i>System Restored from Backup</i> message as defined below.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x09	0x14	0	see below	CK_A CK_B
No payload						

#### 5.18.1.2 Create Backup File in Flash

Message	<b>UBX-UPD-SOS</b>					
Description	<b>Create Backup File in Flash</b>					
Firmware	Supported on: • <a href="#">u-blox 9 with protocol version 27</a>					
Type	Command					
Comment	The host can send this message in order to save part of the BBR memory in a file in flash file system. The feature is designed in order to emulate the presence of the backup battery even if it is not present; the host can issue the save on shutdown command before switching off the device supply. It is recommended to issue a GNSS stop command before, in order to keep the BBR memory content consistent.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x09	0x14	4	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	cmd	-	Command (must be 0)	
1	U1[3]	-	reserved1	-	<a href="#">Reserved</a>	

### 5.18.1.3 Clear Backup in Flash

Message	<b>UBX-UPD-SOS</b>				
Description	<b>Clear Backup in Flash</b>				
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>				
Type	Command				
Comment	The host can send this message in order to erase the backup file present in flash. It is recommended that the clear operation is issued after the host has received the notification that the memory has been restored after a reset. Alternatively the host can parse the startup string 'Restored data saved on shutdown' or poll the UBX-UPD-SOS message for getting the status.				
Message Structure	Header	Class	ID	Length (Bytes)	Payload
	0xB5 0x62	0x09	0x14	4	see below
Payload Contents:					
Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	cmd	-	Command (must be 1)
1	U1[3]	-	reserved1	-	Reserved

### 5.18.1.4 Backup File Creation Acknowledge

Message	<b>UBX-UPD-SOS</b>				
Description	<b>Backup File Creation Acknowledge</b>				
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>				
Type	Output				
Comment	The message is sent from the device as confirmation of creation of a backup file in flash. The host can safely shut down the device after received this message.				
Message Structure	Header	Class	ID	Length (Bytes)	Payload
	0xB5 0x62	0x09	0x14	8	see below
Payload Contents:					
Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	cmd	-	Command (must be 2)
1	U1[3]	-	reserved1	-	Reserved
4	U1	-	response	-	0: Not acknowledged 1: Acknowledged
5	U1[3]	-	reserved2	-	Reserved

### 5.18.1.5 System Restored from Backup

Message	<b>UBX-UPD-SOS</b>				
Description	<b>System Restored from Backup</b>				
Firmware	Supported on: <ul style="list-style-type: none"> <li>u-blox 9 with protocol version 27</li> </ul>				
Type	Output				
Comment	The message is sent from the device to notify the host the BBR has been restored from a backup file in flash. The host should clear the backup file after receiving this message. If the UBX-UPD-SOS message is polled, this message will be resent.				
Message Structure	Header	Class	ID	Length (Bytes)	Payload
	0xB5 0x62	0x09	0x14	8	see below
Payload Contents:					
Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	cmd	-	Command (must be 3)
1	U1[3]	-	reserved1	-	Reserved
4	U1	-	response	-	0: Unknown 1: Failed restoring from backup file 2: Restored from backup file 3: Not restored (no backup)
5	U1[3]	-	reserved2	-	Reserved

## 6 CFG Interface


This chapter describes the [Receiver Configuration Database](#) accessible thorough the [Configuration Interface](#).

### 6.1 Configuration Database

The configuration database in the receiver's RAM holds the current configuration, which is used by the receiver at run-time. It is constructed on startup of the receiver from several sources of configuration. These sources are called *Configuration Layers*. The current configuration is called the *RAM Layer*. Any configuration in any layer is organised as *Configuration Items*, which are referenced by a unique *Configuration Key ID* and hold a single *Configuration Value*.

### 6.2 Configuration Items

The following figure shows the structure of a *Configuration Item*, which consists of a (*Configuration*) *Key ID* and its (*Configuration*) *Value*:

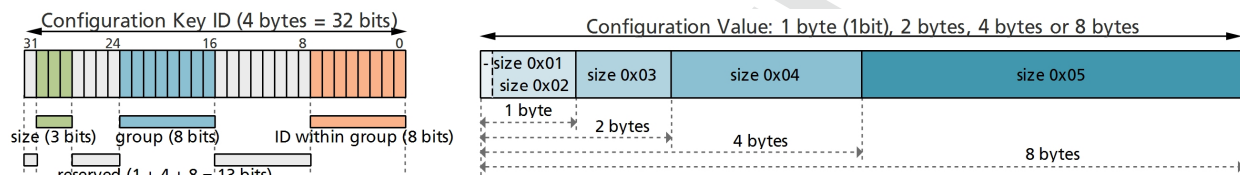

A Configuration Key ID is a 32 bits integer value, which is split into three parts (Note that bits 31, 27..24 and 15..8 are reserved for future use and are currently unused.):

- bits 30..28: 3 bits that indicate the storage size of a Configuration Value (range 0x01-0x05, see below)
- bits 23..16: 8 bits that define a unique group ID (range 0x01-0xfe)
- bits 7..0: 8 bits that define a unique item ID within a group (range 0x01-0xfe)

The entire 32 bits value is the unique Key ID, which uniquely identifies a particular item. The numeric representation of the ID uses the lower-case hexadecimal format, such as 0x20c400a1. An easier, more readable text representation uses the form CFG-GROUP-ITEM. This is also referred to as the (*Configuration*) *Key Name*.

The storage size identifiers (bits 30..28 of the Key ID) are:

- 0x01: one bit (the actual storage used is one byte, but only the least significant bit is used)
- 0x02: one byte
- 0x03: two bytes
- 0x04: four bytes
- 0x05: eight bytes

Each Configuration Item is of a certain type, which defines the interpretation of the raw binary data (see also [number formats](#)):

- U1, U2, U4, U8: unsigned little-endian integers of 8-, 16-, 32- and 64-bit widths
- I1, I2, I4, I8: signed little-endian, two's complement integers of 8-, 16-, 32- and 64-bit widths
- R4, R8: IEEE754 single (32-bit) and double (64-bit) precision floats
- E1, E2, E4: unsigned little-endian enumeration of 8-, 16-, and 32-bit widths (like U1, U2 and U4)
- X1, X2, X4, X8: unsigned little-endian integers of 8-, 16-, 32- and 64-bit widths for bitfields and other binary data, such as strings

- L: single-bit boolean (true = 1, false = 0), stored as U1


### 6.3 Configuration Layers

Several *Configuration Layers* exist. They are separate sources of Configuration Items. Some of the layers are read-only and others are modifiable. Layers are organised in terms of priority. Values in a high priority layer will replace values stored in low priority layer. On startup of the receiver all configuration layers are read and the items within each layer are stacked up in order to create the *Current Configuration*, which is used by the receiver at run-time.

The following configuration layers are available (in order of priority, highest priority first):

- **RAM:** This layer contains items stored in volatile RAM. This is the Current Configuration. The value of any item can be set by the user at run-time (see [UBX Protocol Interface](#) below) and it will become effective immediately.
- **BBR:** This layer contains items stored in the battery-backed RAM. The contents in this layer are preserved as long as a battery backup supply is provided during off periods. The value of any item can be set by the user at run-time (see [UBX Protocol Interface](#) below) and it will become effective upon a restart of the receiver.
- **Flash:** This layer contains items stored permanently in the external flash memory. This layer is only available if there is a usable external flash memory. The value of any item can be set by the user at run-time (see [UBX Protocol Interface](#) below) it will become effective upon a restart of the receiver.
- **Default:** This layer contains all items known to the running receiver software and their hard-coded default values. Data in this layer is not writable.

The stacking of the Configuration items from the different layers (sources) in order to construct the Current Configuration in the RAM Layer is depicted in the following figure. For each defined item, i.e. for each item in the Default Layer, the receiver software goes through the layers above and stacks found items on top. Some items may or may not be present in some layers. The result is the RAM Layer filled with all defined items and values coming from the highest priority layer the corresponding item was present. In the example figure below bold text indicates the source of the value in the Current Configuration (the RAM Layer). Empty boxes mean that the layer can hold the item but that it is not currently stored there. Boxes with text mean that an item is currently stored in the layer.

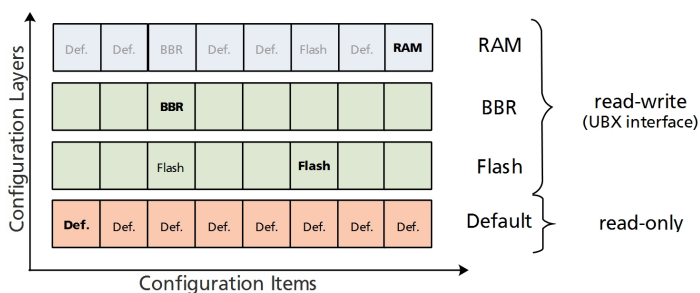

In the example figure above several items (e.g. the first item) are only set in the Default Layer and hence the default value ends up in Current Configuration in the RAM Layer. The third item is present in the Default, Flash and BBR Layers. The value from the BBR Layer has the highest priority and therefore it ends up in the RAM Layer. On the other hand, the default value of the sixth item is changed by the value in the Flash Layer. The value of the last item is changed in the RAM Layer only, i.e. upon startup the value in the RAM Layer was the value from the Default Layer, but the user has changed the value in the RAM Layer at run-time.

## 6.4 Configuration Interface Access

The following sections describe the existing interfaces to access the Configuration Database.

### 6.4.1 UBX Protocol Interface


The following UBX protocol messages are available to access the Configuration Database:

- [UBX-CFG-VALGET](#) to read Configuration Items from the database
- [UBX-CFG-VALSET](#) to set Configuration Items in the database
- [UBX-CFG-VALDEL](#) to delete Configuration Items from the database

## 6.5 Configuration Data

Configuration data is the binary representation of a list of Key ID and Value pairs. It is formed by concatenating keys (U4 values) and values (variable type) without any padding. This format is used in the [UBX-CFG-VALSET](#) and [UBX-CFG-VALGET](#) messages.

The figure below shows an example. The four Items (Key ID - Value pairs) on the left use the four fundamental storage sizes: one byte (L, U1, I1, E1 and X1 types), 2 bytes (U2, I2, E2 and X2 types), four byte (U4, I4, E4, X4 and R4 types) and eight bytes (U8, I8, X8 and R8 types). When concatenated (right) the Key IDs and Values are not aligned and there is no padding.

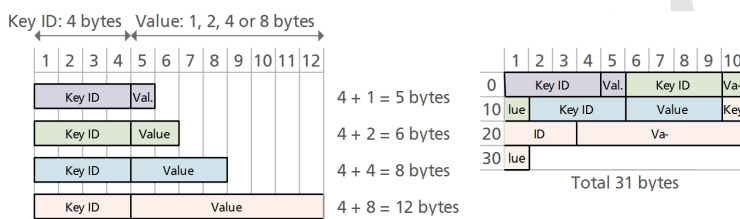

Note that this is an arbitrary example and any number of items of any value storage size can be concatenated the same way.

## 6.6 Reset Behaviour

The RAM layer is always rebuilt from the layers below when the chip's processor comes out from reset. When using [UBX-CFG-RST](#) the processor goes through a reset cycle with these reset types (*resetMode* field):

- 0x00 hardware reset (watchdog) immediately
- 0x01 controlled software reset
- 0x04 hardware reset (watchdog) after shutdown

## 6.7 Configuration Reference

See [Configuration Defaults](#) for the default values.

### 6.7.1 CFG-GEOFENCE: Geofencing Configuration

See the [Geofencing description](#) for feature details.

If the receiver is sent a valid new configuration, it will respond with a [UBX-ACK-ACK](#) message and immediately change to the new configuration. Otherwise the receiver will reject the request, by issuing a [UBX-ACK-NAK](#) and continuing operation with the previous configuration.

Note that the acknowledge message does not indicate whether the PIO configuration has been successfully applied (pin assigned), it only indicates the successful configuration of the feature. The configured PIO must be previously unoccupied for successful assignment.

### CFG-GEOFENCE-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-GEOFENCE-CONFLVL	0x20240011	E1	-	-	Required confidence level for state evaluation
This value times the position's standard deviation (sigma) defines the confidence band. See <a href="#">Constants for CFG-GEOFENCE-CONFLVL</a> below for a list of possible constants for this item.					
CFG-GEOFENCE-USE_PIO	0x10240012	L	-	-	Use PIO combined fence state output
CFG-GEOFENCE-PINPOL	0x20240013	E1	-	-	PIO pin polarity
See <a href="#">Constants for CFG-GEOFENCE-PINPOL</a> below for a list of possible constants for this item.					
CFG-GEOFENCE-PIN	0x20240014	U1	-	-	PIO pin number
CFG-GEOFENCE-USE_FENCE1	0x10240020	L	-	-	Use first geofence
CFG-GEOFENCE-FENCE1_LAT	0x40240021	I4	1e-7	deg	Latitude of the first geofence circle center
CFG-GEOFENCE-FENCE1_LON	0x40240022	I4	1e-7	deg	Longitude of the first geofence circle center
CFG-GEOFENCE-FENCE1_RAD	0x40240023	U4	0.01	m	Radius of the first geofence circle
CFG-GEOFENCE-USE_FENCE2	0x10240030	L	-	-	Use second geofence
CFG-GEOFENCE-FENCE2_LAT	0x40240031	I4	1e-7	deg	Latitude of the second geofence circle center
CFG-GEOFENCE-FENCE2_LON	0x40240032	I4	1e-7	deg	Longitude of the second geofence circle center
CFG-GEOFENCE-FENCE2_RAD	0x40240033	U4	0.01	m	Radius of the second geofence circle
CFG-GEOFENCE-USE_FENCE3	0x10240040	L	-	-	Use third geofence
CFG-GEOFENCE-FENCE3_LAT	0x40240041	I4	1e-7	deg	Latitude of the third geofence circle center
CFG-GEOFENCE-FENCE3_LON	0x40240042	I4	1e-7	deg	Longitude of the third geofence circle center
CFG-GEOFENCE-FENCE3_RAD	0x40240043	U4	0.01	m	Radius of the third geofence circle
CFG-GEOFENCE-USE_FENCE4	0x10240050	L	-	-	Use fourth geofence
CFG-GEOFENCE-FENCE4_LAT	0x40240051	I4	1e-7	deg	Latitude of the fourth geofence circle center
CFG-GEOFENCE-FENCE4_LON	0x40240052	I4	1e-7	deg	Longitude of the fourth geofence circle center
CFG-GEOFENCE-FENCE4_RAD	0x40240053	U4	0.01	m	Radius of the fourth geofence circle

### Constants for CFG-GEOFENCE-CONFLVL

Constant	Value	Description
L000	0	No confidence
L680	1	68%
L950	2	95%
L997	3	99.7%
L9999	4	99.99%
L999999	5	99.9999%

### Constants for CFG-GEOFENCE-PINPOL

Constant	Value	Description
LOW_IN	0	PIO low means inside geofence



Constants for CFG-GEOFENCE-PINPOL continued

Constant	Value	Description
LOW_OUT	1	PIO low means outside geofence

### 6.7.2 CFG-HW: Hardware Configuration

Hardware configuration settings.

#### CFG-HW-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-HW-ANT_CFG_VOLTCTRL	0x10a3002e	L	-	-	Active antenna voltage control flag
Enable active antenna voltage control flag.					
CFG-HW-ANT_CFG_SHORTDET	0x10a3002f	L	-	-	Short antenna detection flag
Enable short antenna detection flag.					
CFG-HW-ANT_CFG_OPENDET	0x10a30031	L	-	-	Open antenna detection flag
Enable open antenna detection flag.					
CFG-HW-ANT_CFG_PWRDOWN	0x10a30033	L	-	-	Power down antenna flag
Enable power down antenna logic in the event of antenna short circuit. CFG-HW-ANT_CFG_SHORTDET must be enabled to use this feature.					
CFG-HW-ANT_CFG_RECOVER	0x10a30035	L	-	-	Automatic recovery from short state flag
Enable automatic recovery from short state.					
CFG-HW-ANT_SUP_SWITCH_PIN	0x20a30036	U1	-	-	ANT1 PIO number
Antenna Switch (ANT1) PIO number.					
CFG-HW-ANT_SUP_SHORT_PIN	0x20a30037	U1	-	-	ANT0 PIO number
Antenna Short (ANT0) PIO number.					
CFG-HW-ANT_SUP_OPEN_PIN	0x20a30038	U1	-	-	ANT2 PIO number
Antenna Switch (ANT2) PIO number.					
CFG-HW-RFDC_TIMEOUT	0x20a30050	U1	-	s	RF DC Failure Timeout Setting
If the RF DC power fails, the system reset behavior is dictated by this value: 0: system shall reset immediately after a power failure is detected (default) 1 - 254: system shall reset after this many seconds, unless the RF DC power returns 255: system shall never reset after the RF DC power fails					

### 6.7.3 CFG-I2C: Configuration of the I2C Interface

Settings needed to configure the I2C communication interface.

#### CFG-I2C-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-I2C-ADDRESS	0x20510001	U1	-	-	I2C slave address of the receiver
CFG-I2C-EXTENDEDTIMEOUT	0x10510002	L	-	-	Flag to disable timeouting the interface after 1.5 s
CFG-I2C-ENABLED	0x10510003	L	-	-	Flag to indicate if the I2C interface should be enabled

### 6.7.4 CFG-I2CINPROT: Input Protocol Configuration of the I2C Interface

Input protocol enable flags of the I2C interface.

### CFG-I2CINPROT-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-I2CINPROT-UBX	0x10710001	L	-	-	Flag to indicate if UBX should be an input protocol on I2C
CFG-I2CINPROT-NMEA	0x10710002	L	-	-	Flag to indicate if NMEA should be an input protocol on I2C
CFG-I2CINPROT-RTCM3X	0x10710004	L	-	-	Flag to indicate if RTCM3X should be an input protocol on I2C

### 6.7.5 CFG-I2COUTPROT: Output Protocol Configuration of the I2C Interface

Output protocol enable flags of the I2C interface.

#### CFG-I2COUTPROT-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-I2COUTPROT-UBX	0x10720001	L	-	-	Flag to indicate if UBX should be an output protocol on I2C
CFG-I2COUTPROT-NMEA	0x10720002	L	-	-	Flag to indicate if NMEA should be an output protocol on I2C
CFG-I2COUTPROT-RTCM3X	0x10720004	L	-	-	Flag to indicate if RTCM3X should be an output protocol on I2C

### 6.7.6 CFG-INFMSG: Inf Message Configuration

Information message configuration for the NMEA and UBX protocols.

#### CFG-INFMSG-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-INFMSG-UBX_I2C	0x20920001	X1	-	-	Information message enable flags for the UBX protocol on the I2C interface
See <a href="#">Constants for CFG-INFMSG-UBX_I2C</a> below for a list of possible constants for this item.					
CFG-INFMSG-UBX_UART1	0x20920002	X1	-	-	Information message enable flags for the UBX protocol on the UART1 interface
See <a href="#">Constants for CFG-INFMSG-UBX_UART1</a> below for a list of possible constants for this item.					
CFG-INFMSG-UBX_UART2	0x20920003	X1	-	-	Information message enable flags for the UBX protocol on the UART2 interface
See <a href="#">Constants for CFG-INFMSG-UBX_UART2</a> below for a list of possible constants for this item.					
CFG-INFMSG-UBX_USB	0x20920004	X1	-	-	Information message enable flags for the UBX protocol on the USB interface
See <a href="#">Constants for CFG-INFMSG-UBX_USB</a> below for a list of possible constants for this item.					
CFG-INFMSG-UBX_SPI	0x20920005	X1	-	-	Information message enable flags for the UBX protocol on the SPI interface
See <a href="#">Constants for CFG-INFMSG-UBX_SPI</a> below for a list of possible constants for this item.					
CFG-INFMSG-NMEA_I2C	0x20920006	X1	-	-	Information message enable flags for the NMEA protocol on the I2C interface
See <a href="#">Constants for CFG-INFMSG-NMEA_I2C</a> below for a list of possible constants for this item.					

#### CFG-INFMSG-\* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-INFMSG-NMEA_UART1	0x20920007	X1	-	-	Information message enable flags for the NMEA protocol on the UART1 interface
See <a href="#">Constants for CFG-INFMSG-NMEA_UART1</a> below for a list of possible constants for this item.					
CFG-INFMSG-NMEA_UART2	0x20920008	X1	-	-	Information message enable flags for the NMEA protocol on the UART2 interface
See <a href="#">Constants for CFG-INFMSG-NMEA_UART2</a> below for a list of possible constants for this item.					
CFG-INFMSG-NMEA_USB	0x20920009	X1	-	-	Information message enable flags for the NMEA protocol on the USB interface
See <a href="#">Constants for CFG-INFMSG-NMEA_USB</a> below for a list of possible constants for this item.					
CFG-INFMSG-NMEA_SPI	0x2092000a	X1	-	-	Information message enable flags for the NMEA protocol on the SPI interface
See <a href="#">Constants for CFG-INFMSG-NMEA_SPI</a> below for a list of possible constants for this item.					

#### Constants for CFG-INFMSG-UBX\_I2C

Constant	Value	Description
ERROR	0x01	Enable ERROR information messages
WARNING	0x02	Enable WARNING information messages
NOTICE	0x04	Enable NOTICE information messages
TEST	0x08	Enable TEST information messages
DEBUG	0x10	Enable DEBUG information messages

#### Constants for CFG-INFMSG-UBX\_UART1

Constant	Value	Description
ERROR	0x01	Enable ERROR information messages
WARNING	0x02	Enable WARNING information messages
NOTICE	0x04	Enable NOTICE information messages
TEST	0x08	Enable TEST information messages
DEBUG	0x10	Enable DEBUG information messages

#### Constants for CFG-INFMSG-UBX\_UART2

Constant	Value	Description
ERROR	0x01	Enable ERROR information messages
WARNING	0x02	Enable WARNING information messages
NOTICE	0x04	Enable NOTICE information messages
TEST	0x08	Enable TEST information messages
DEBUG	0x10	Enable DEBUG information messages

#### Constants for CFG-INFMSG-UBX\_USB

Constant	Value	Description
ERROR	0x01	Enable ERROR information messages
WARNING	0x02	Enable WARNING information messages
NOTICE	0x04	Enable NOTICE information messages

#### Constants for CFG-INFMSG-UBX\_USB continued

Constant	Value	Description
TEST	0x08	Enable TEST information messages
DEBUG	0x10	Enable DEBUG information messages

#### Constants for CFG-INFMSG-UBX\_SPI

Constant	Value	Description
ERROR	0x01	Enable ERROR information messages
WARNING	0x02	Enable WARNING information messages
NOTICE	0x04	Enable NOTICE information messages
TEST	0x08	Enable TEST information messages
DEBUG	0x10	Enable DEBUG information messages

#### Constants for CFG-INFMSG-NMEA\_I2C

Constant	Value	Description
ERROR	0x01	Enable ERROR information messages
WARNING	0x02	Enable WARNING information messages
NOTICE	0x04	Enable NOTICE information messages
TEST	0x08	Enable TEST information messages
DEBUG	0x10	Enable DEBUG information messages

#### Constants for CFG-INFMSG-NMEA\_UART1

Constant	Value	Description
ERROR	0x01	Enable ERROR information messages
WARNING	0x02	Enable WARNING information messages
NOTICE	0x04	Enable NOTICE information messages
TEST	0x08	Enable TEST information messages
DEBUG	0x10	Enable DEBUG information messages

#### Constants for CFG-INFMSG-NMEA\_UART2

Constant	Value	Description
ERROR	0x01	Enable ERROR information messages
WARNING	0x02	Enable WARNING information messages
NOTICE	0x04	Enable NOTICE information messages
TEST	0x08	Enable TEST information messages
DEBUG	0x10	Enable DEBUG information messages

#### Constants for CFG-INFMSG-NMEA\_USB

Constant	Value	Description
ERROR	0x01	Enable ERROR information messages
WARNING	0x02	Enable WARNING information messages
NOTICE	0x04	Enable NOTICE information messages
TEST	0x08	Enable TEST information messages
DEBUG	0x10	Enable DEBUG information messages

#### Constants for CFG-INFMSG-NMEA\_SPI

Constant	Value	Description
ERROR	0x01	Enable ERROR information messages

Constants for CFG-INFMSG-NMEA\_SPI continued

Constant	Value	Description
WARNING	0x02	Enable WARNING information messages
NOTICE	0x04	Enable NOTICE information messages
TEST	0x08	Enable TEST information messages
DEBUG	0x10	Enable DEBUG information messages

### 6.7.7 CFG-ITFM: Jamming/Interference Monitor configuration

Configuration of Jamming/Interference monitor.

#### CFG-ITFM-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-ITFM-BBTHRESHOLD	0x20410001	U1	-	-	Broadband jamming detection threshold
CFG-ITFM-CWTHRESHOLD	0x20410002	U1	-	-	CW jamming detection threshold
CFG-ITFM-ENABLE	0x1041000d	L	-	-	Enable interference detection
CFG-ITFM-ANTSETTING	0x20410010	E1	-	-	Antenna setting
See <a href="#">Constants for CFG-ITFM-ANTSETTING</a> below for a list of possible constants for this item.					
CFG-ITFM-ENABLE_AUX	0x10410013	L	-	-	Set to true to scan auxiliary bands
Supported on u-blox 8 / u-blox M8 only, otherwise ignored.					

#### Constants for CFG-ITFM-ANTSETTING

Constant	Value	Description
UNKNOWN	0	Unknown
PASSIVE	1	Passive
ACTIVE	2	Active

### 6.7.8 CFG-LOGFILTER: Data Logger Configuration

This group can be used to configure the data logger, i.e. to enable/disable the log recording and to get/set the position entry filter settings.

Position entries can be filtered based on time difference, position difference or current speed thresholds.

Position and speed filtering also have a minimum time interval. A position is logged if any of the thresholds are exceeded. If a threshold is set to zero it is ignored. The maximum rate of position logging is 1Hz.

The filter settings will be configured to the provided values only if the 'applyAllFilterSettings' flag is set. This allows the recording to be enabled/disabled independently of configuring the filter settings.

It is possible to configure the data logger in the absence of a logging file. By doing so, once the logging file is created, the data logger configuration will take effect immediately and logging recording and filtering will activate according to the configuration.

#### CFG-LOGFILTER-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-LOGFILTER-RECORD_ENA	0x10de0002	L	-	-	Recording enabled
Set to true when recording enabled.					
CFG-LOGFILTER-ONCE_PER_WAKE_UP_ENA	0x10de0003	L	-	-	Once per wakeup
Set to true recording only one single position per PSM on/off mode wake-up period is enabled.					
Note: the value set here does not take effect unless CFG-LOGFILTER-APPLY_ALL_FILTERS is enabled.					

#### CFG-LOGFILTER-\* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-LOGFILTER-APPLY_ALL_FILTERS	0x10de0004	L	-	-	Apply all filter settings
Set to true when all filter settings are to be applied, not just recording enabling/disabling.					
CFG-LOGFILTER-MIN_INTERVAL	0x30de0005	U2	-	s	Minimum time interval between logged positions
Minimum time interval between logged positions (0 = not set). <b>This is only applied in combination with the speed and/or position thresholds.</b> If both MIN_INTERVAL and TIME_THRS are set, MIN_INTERVAL must be less than or equal to TIME_THRS. Note: the value set here does not take effect unless CFG-LOGFILTER-APPLY_ALL_FILTERS is enabled.					
CFG-LOGFILTER-TIME_THRS	0x30de0006	U2	-	s	Time threshold
If the time difference is greater than the threshold then the position is logged (0 = not set). Note: the value set here does not take effect unless CFG-LOGFILTER-APPLY_ALL_FILTERS is enabled.					
CFG-LOGFILTER-SPEED_THRS	0x30de0007	U2	-	m/s	Speed threshold
If the current speed is greater than the threshold then the position is logged (0 = not set). MIN_INTERVAL also applies. Note: value set here does not take effect unless CFG-LOGFILTER-APPLY_ALL_FILTERS is enabled.					
CFG-LOGFILTER-POSITION_THRS	0x40de0008	U4	-	m	Position threshold
If the 3D position difference is greater than the threshold then the position is logged (0 = not set). MIN_INTERVAL also applies. Note: the value set here does not take effect unless CFG-LOGFILTER-APPLY_ALL_FILTERS is enabled.					

### 6.7.9 CFG-MOT: Motion Detector Configuration

The items in this group specify the parameters used for the internal receiver motion detector. The platform motion is assessed by combining the detected motion of different detectors looking at specific data types (i.e. GNSS, gyroscopes, accelerometers, wheel-ticks). The decision thresholds of the internal detectors can be specified using the configuration items in this group.

#### CFG-MOT-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MOT-GNSSSPEED_THRS	0x20250038	U1	0.01	m/s	GNSS speed threshold below which platform is considered as stationary (a.k.a. static hold threshold)
Set this paramter to 0 for a firmware default value or bahaviour.					
CFG-MOT-GNSSDIST_THRS	0x3025003b	U2	-	-	Distance above which GNSS-based stationary motion is exit (a.k.a. static hold distance threshold)
Set this paramter to 0 for a firmware default value or bahaviour.					

### 6.7.10 CFG-MSGOUT: Message Output Configuration

For each message and port a separate output rate (per second, per epoch) can be configured.

#### CFG-MSGOUT-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-NMEA_ID_DTM_I2C	0x209100a6	U1	-	-	Output rate of the NMEA-GX-DTM message on port I2C



CFG-MSGOUT-\* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-NMEA_ID_DTM_SPI	0x209100aa	U1	-	-	Output rate of the NMEA-GX-DTM message on port SPI
CFG-MSGOUT-NMEA_ID_DTM_UART1	0x209100a7	U1	-	-	Output rate of the NMEA-GX-DTM message on port UART1
CFG-MSGOUT-NMEA_ID_DTM_UART2	0x209100a8	U1	-	-	Output rate of the NMEA-GX-DTM message on port UART2
CFG-MSGOUT-NMEA_ID_DTM_USB	0x209100a9	U1	-	-	Output rate of the NMEA-GX-DTM message on port USB
CFG-MSGOUT-NMEA_ID_GBS_I2C	0x209100dd	U1	-	-	Output rate of the NMEA-GX-GBS message on port I2C
CFG-MSGOUT-NMEA_ID_GBS_SPI	0x209100e1	U1	-	-	Output rate of the NMEA-GX-GBS message on port SPI
CFG-MSGOUT-NMEA_ID_GBS_UART1	0x209100de	U1	-	-	Output rate of the NMEA-GX-GBS message on port UART1
CFG-MSGOUT-NMEA_ID_GBS_UART2	0x209100df	U1	-	-	Output rate of the NMEA-GX-GBS message on port UART2
CFG-MSGOUT-NMEA_ID_GBS_USB	0x209100e0	U1	-	-	Output rate of the NMEA-GX-GBS message on port USB
CFG-MSGOUT-NMEA_ID_GGA_I2C	0x209100ba	U1	-	-	Output rate of the NMEA-GX-GGA message on port I2C
CFG-MSGOUT-NMEA_ID_GGA_SPI	0x209100be	U1	-	-	Output rate of the NMEA-GX-GGA message on port SPI
CFG-MSGOUT-NMEA_ID_GGA_UART1	0x209100bb	U1	-	-	Output rate of the NMEA-GX-GGA message on port UART1
CFG-MSGOUT-NMEA_ID_GGA_UART2	0x209100bc	U1	-	-	Output rate of the NMEA-GX-GGA message on port UART2
CFG-MSGOUT-NMEA_ID_GGA_USB	0x209100bd	U1	-	-	Output rate of the NMEA-GX-GGA message on port USB
CFG-MSGOUT-NMEA_ID_GLL_I2C	0x209100c9	U1	-	-	Output rate of the NMEA-GX-GLL message on port I2C
CFG-MSGOUT-NMEA_ID_GLL_SPI	0x209100cd	U1	-	-	Output rate of the NMEA-GX-GLL message on port SPI
CFG-MSGOUT-NMEA_ID_GLL_UART1	0x209100ca	U1	-	-	Output rate of the NMEA-GX-GLL message on port UART1
CFG-MSGOUT-NMEA_ID_GLL_UART2	0x209100cb	U1	-	-	Output rate of the NMEA-GX-GLL message on port UART2
CFG-MSGOUT-NMEA_ID_GLL_USB	0x209100cc	U1	-	-	Output rate of the NMEA-GX-GLL message on port USB
CFG-MSGOUT-NMEA_ID_GNS_I2C	0x209100b5	U1	-	-	Output rate of the NMEA-GX-GNS message on port I2C
CFG-MSGOUT-NMEA_ID_GNS_SPI	0x209100b9	U1	-	-	Output rate of the NMEA-GX-GNS message on port SPI
CFG-MSGOUT-NMEA_ID_GNS_UART1	0x209100b6	U1	-	-	Output rate of the NMEA-GX-GNS message on port UART1

CFG-MSGOUT-\* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-NMEA_ID_GNS_UART2	0x209100b7	U1	-	-	Output rate of the NMEA-GX-GNS message on port UART2
CFG-MSGOUT-NMEA_ID_GNS_USB	0x209100b8	U1	-	-	Output rate of the NMEA-GX-GNS message on port USB
CFG-MSGOUT-NMEA_ID_GRS_I2C	0x209100ce	U1	-	-	Output rate of the NMEA-GX-GRS message on port I2C
CFG-MSGOUT-NMEA_ID_GRS_SPI	0x209100d2	U1	-	-	Output rate of the NMEA-GX-GRS message on port SPI
CFG-MSGOUT-NMEA_ID_GRS_UART1	0x209100cf	U1	-	-	Output rate of the NMEA-GX-GRS message on port UART1
CFG-MSGOUT-NMEA_ID_GRS_UART2	0x209100d0	U1	-	-	Output rate of the NMEA-GX-GRS message on port UART2
CFG-MSGOUT-NMEA_ID_GRS_USB	0x209100d1	U1	-	-	Output rate of the NMEA-GX-GRS message on port USB
CFG-MSGOUT-NMEA_ID_GSA_I2C	0x209100bf	U1	-	-	Output rate of the NMEA-GX-GSA message on port I2C
CFG-MSGOUT-NMEA_ID_GSA_SPI	0x209100c3	U1	-	-	Output rate of the NMEA-GX-GSA message on port SPI
CFG-MSGOUT-NMEA_ID_GSA_UART1	0x209100c0	U1	-	-	Output rate of the NMEA-GX-GSA message on port UART1
CFG-MSGOUT-NMEA_ID_GSA_UART2	0x209100c1	U1	-	-	Output rate of the NMEA-GX-GSA message on port UART2
CFG-MSGOUT-NMEA_ID_GSA_USB	0x209100c2	U1	-	-	Output rate of the NMEA-GX-GSA message on port USB
CFG-MSGOUT-NMEA_ID_GST_I2C	0x209100d3	U1	-	-	Output rate of the NMEA-GX-GST message on port I2C
CFG-MSGOUT-NMEA_ID_GST_SPI	0x209100d7	U1	-	-	Output rate of the NMEA-GX-GST message on port SPI
CFG-MSGOUT-NMEA_ID_GST_UART1	0x209100d4	U1	-	-	Output rate of the NMEA-GX-GST message on port UART1
CFG-MSGOUT-NMEA_ID_GST_UART2	0x209100d5	U1	-	-	Output rate of the NMEA-GX-GST message on port UART2
CFG-MSGOUT-NMEA_ID_GST_USB	0x209100d6	U1	-	-	Output rate of the NMEA-GX-GST message on port USB
CFG-MSGOUT-NMEA_ID_GSV_I2C	0x209100c4	U1	-	-	Output rate of the NMEA-GX-GSV message on port I2C
CFG-MSGOUT-NMEA_ID_GSV_SPI	0x209100c8	U1	-	-	Output rate of the NMEA-GX-GSV message on port SPI
CFG-MSGOUT-NMEA_ID_GSV_UART1	0x209100c5	U1	-	-	Output rate of the NMEA-GX-GSV message on port UART1
CFG-MSGOUT-NMEA_ID_GSV_UART2	0x209100c6	U1	-	-	Output rate of the NMEA-GX-GSV message on port UART2
CFG-MSGOUT-NMEA_ID_GSV_USB	0x209100c7	U1	-	-	Output rate of the NMEA-GX-GSV message on port USB



CFG-MSGOUT-\* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-NMEA_ID_RMC_I2C	0x209100ab	U1	-	-	Output rate of the NMEA-GX-RMC message on port I2C
CFG-MSGOUT-NMEA_ID_RMC_SPI	0x209100af	U1	-	-	Output rate of the NMEA-GX-RMC message on port SPI
CFG-MSGOUT-NMEA_ID_RMC_UART1	0x209100ac	U1	-	-	Output rate of the NMEA-GX-RMC message on port UART1
CFG-MSGOUT-NMEA_ID_RMC_UART2	0x209100ad	U1	-	-	Output rate of the NMEA-GX-RMC message on port UART2
CFG-MSGOUT-NMEA_ID_RMC_USB	0x209100ae	U1	-	-	Output rate of the NMEA-GX-RMC message on port USB
CFG-MSGOUT-NMEA_ID_VLW_I2C	0x209100e7	U1	-	-	Output rate of the NMEA-GX-VLW message on port I2C
CFG-MSGOUT-NMEA_ID_VLW_SPI	0x209100eb	U1	-	-	Output rate of the NMEA-GX-VLW message on port SPI
CFG-MSGOUT-NMEA_ID_VLW_UART1	0x209100e8	U1	-	-	Output rate of the NMEA-GX-VLW message on port UART1
CFG-MSGOUT-NMEA_ID_VLW_UART2	0x209100e9	U1	-	-	Output rate of the NMEA-GX-VLW message on port UART2
CFG-MSGOUT-NMEA_ID_VLW_USB	0x209100ea	U1	-	-	Output rate of the NMEA-GX-VLW message on port USB
CFG-MSGOUT-NMEA_ID_VTG_I2C	0x209100b0	U1	-	-	Output rate of the NMEA-GX-VTG message on port I2C
CFG-MSGOUT-NMEA_ID_VTG_SPI	0x209100b4	U1	-	-	Output rate of the NMEA-GX-VTG message on port SPI
CFG-MSGOUT-NMEA_ID_VTG_UART1	0x209100b1	U1	-	-	Output rate of the NMEA-GX-VTG message on port UART1
CFG-MSGOUT-NMEA_ID_VTG_UART2	0x209100b2	U1	-	-	Output rate of the NMEA-GX-VTG message on port UART2
CFG-MSGOUT-NMEA_ID_VTG_USB	0x209100b3	U1	-	-	Output rate of the NMEA-GX-VTG message on port USB
CFG-MSGOUT-NMEA_ID_ZDA_I2C	0x209100d8	U1	-	-	Output rate of the NMEA-GX-ZDA message on port I2C
CFG-MSGOUT-NMEA_ID_ZDA_SPI	0x209100dc	U1	-	-	Output rate of the NMEA-GX-ZDA message on port SPI
CFG-MSGOUT-NMEA_ID_ZDA_UART1	0x209100d9	U1	-	-	Output rate of the NMEA-GX-ZDA message on port UART1
CFG-MSGOUT-NMEA_ID_ZDA_UART2	0x209100da	U1	-	-	Output rate of the NMEA-GX-ZDA message on port UART2
CFG-MSGOUT-NMEA_ID_ZDA_USB	0x209100db	U1	-	-	Output rate of the NMEA-GX-ZDA message on port USB
CFG-MSGOUT-PUBX_ID_POLYP_I2C	0x209100ec	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port I2C
CFG-MSGOUT-PUBX_ID_POLYP_SPI	0x209100f0	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port SPI

CFG-MSGOUT-\* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-PUBX_ID_POLYP_UART1	0x209100ed	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port UART1
CFG-MSGOUT-PUBX_ID_POLYP_UART2	0x209100ee	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port UART2
CFG-MSGOUT-PUBX_ID_POLYP_USB	0x209100ef	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port USB
CFG-MSGOUT-PUBX_ID_POLYS_I2C	0x209100f1	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port I2C
CFG-MSGOUT-PUBX_ID_POLYS_SPI	0x209100f5	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port SPI
CFG-MSGOUT-PUBX_ID_POLYS_UART1	0x209100f2	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port UART1
CFG-MSGOUT-PUBX_ID_POLYS_UART2	0x209100f3	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port UART2
CFG-MSGOUT-PUBX_ID_POLYS_USB	0x209100f4	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port USB
CFG-MSGOUT-PUBX_ID_POLYT_I2C	0x209100f6	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port I2C
CFG-MSGOUT-PUBX_ID_POLYT_SPI	0x209100fa	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port SPI
CFG-MSGOUT-PUBX_ID_POLYT_UART1	0x209100f7	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port UART1
CFG-MSGOUT-PUBX_ID_POLYT_UART2	0x209100f8	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port UART2
CFG-MSGOUT-PUBX_ID_POLYT_USB	0x209100f9	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port USB
CFG-MSGOUT-RTCM_3X_TYPE1005_I2C	0x209102bd	U1	-	-	Output rate of the RTCM-3X-TYPE1005 message on port I2C
CFG-MSGOUT-RTCM_3X_TYPE1005_SPI	0x209102c1	U1	-	-	Output rate of the RTCM-3X-TYPE1005 message on port SPI
CFG-MSGOUT-RTCM_3X_TYPE1005_UART1	0x209102be	U1	-	-	Output rate of the RTCM-3X-TYPE1005 message on port UART1
CFG-MSGOUT-RTCM_3X_TYPE1005_UART2	0x209102bf	U1	-	-	Output rate of the RTCM-3X-TYPE1005 message on port UART2
CFG-MSGOUT-RTCM_3X_TYPE1005_USB	0x209102c0	U1	-	-	Output rate of the RTCM-3X-TYPE1005 message on port USB
CFG-MSGOUT-RTCM_3X_TYPE1074_I2C	0x2091035e	U1	-	-	Output rate of the RTCM-3X-TYPE1074 message on port I2C
CFG-MSGOUT-RTCM_3X_TYPE1074_SPI	0x20910362	U1	-	-	Output rate of the RTCM-3X-TYPE1074 message on port SPI
CFG-MSGOUT-RTCM_3X_TYPE1074_UART1	0x2091035f	U1	-	-	Output rate of the RTCM-3X-TYPE1074 message on port UART1
CFG-MSGOUT-RTCM_3X_TYPE1074_UART2	0x20910360	U1	-	-	Output rate of the RTCM-3X-TYPE1074 message on port UART2

CFG-MSGOUT-\* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-RTCM_3X_ TYPE1074_USB	0x20910361	U1	-	-	Output rate of the RTCM-3X- TYPE1074 message on port USB
CFG-MSGOUT-RTCM_3X_ TYPE1077_I2C	0x209102cc	U1	-	-	Output rate of the RTCM-3X- TYPE1077 message on port I2C
CFG-MSGOUT-RTCM_3X_ TYPE1077_SPI	0x209102d0	U1	-	-	Output rate of the RTCM-3X- TYPE1077 message on port SPI
CFG-MSGOUT-RTCM_3X_ TYPE1077_UART1	0x209102cd	U1	-	-	Output rate of the RTCM-3X- TYPE1077 message on port UART1
CFG-MSGOUT-RTCM_3X_ TYPE1077_UART2	0x209102ce	U1	-	-	Output rate of the RTCM-3X- TYPE1077 message on port UART2
CFG-MSGOUT-RTCM_3X_ TYPE1077_USB	0x209102cf	U1	-	-	Output rate of the RTCM-3X- TYPE1077 message on port USB
CFG-MSGOUT-RTCM_3X_ TYPE1084_I2C	0x20910363	U1	-	-	Output rate of the RTCM-3X- TYPE1084 message on port I2C
CFG-MSGOUT-RTCM_3X_ TYPE1084_SPI	0x20910367	U1	-	-	Output rate of the RTCM-3X- TYPE1084 message on port SPI
CFG-MSGOUT-RTCM_3X_ TYPE1084_UART1	0x20910364	U1	-	-	Output rate of the RTCM-3X- TYPE1084 message on port UART1
CFG-MSGOUT-RTCM_3X_ TYPE1084_UART2	0x20910365	U1	-	-	Output rate of the RTCM-3X- TYPE1084 message on port UART2
CFG-MSGOUT-RTCM_3X_ TYPE1084_USB	0x20910366	U1	-	-	Output rate of the RTCM-3X- TYPE1084 message on port USB
CFG-MSGOUT-RTCM_3X_ TYPE1087_I2C	0x209102d1	U1	-	-	Output rate of the RTCM-3X- TYPE1087 message on port I2C
CFG-MSGOUT-RTCM_3X_ TYPE1087_SPI	0x209102d5	U1	-	-	Output rate of the RTCM-3X- TYPE1087 message on port SPI
CFG-MSGOUT-RTCM_3X_ TYPE1087_UART1	0x209102d2	U1	-	-	Output rate of the RTCM-3X- TYPE1087 message on port UART1
CFG-MSGOUT-RTCM_3X_ TYPE1087_UART2	0x209102d3	U1	-	-	Output rate of the RTCM-3X- TYPE1087 message on port UART2
CFG-MSGOUT-RTCM_3X_ TYPE1087_USB	0x209102d4	U1	-	-	Output rate of the RTCM-3X- TYPE1087 message on port USB
CFG-MSGOUT-RTCM_3X_ TYPE1094_I2C	0x20910368	U1	-	-	Output rate of the RTCM-3X- TYPE1094 message on port I2C
CFG-MSGOUT-RTCM_3X_ TYPE1094_SPI	0x2091036c	U1	-	-	Output rate of the RTCM-3X- TYPE1094 message on port SPI
CFG-MSGOUT-RTCM_3X_ TYPE1094_UART1	0x20910369	U1	-	-	Output rate of the RTCM-3X- TYPE1094 message on port UART1
CFG-MSGOUT-RTCM_3X_ TYPE1094_UART2	0x2091036a	U1	-	-	Output rate of the RTCM-3X- TYPE1094 message on port UART2
CFG-MSGOUT-RTCM_3X_ TYPE1094_USB	0x2091036b	U1	-	-	Output rate of the RTCM-3X- TYPE1094 message on port USB
CFG-MSGOUT-RTCM_3X_ TYPE1097_I2C	0x20910318	U1	-	-	Output rate of the RTCM-3X- TYPE1097 message on port I2C

CFG-MSGOUT-\* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-RTCM_3X_ TYPE1097_SPI	0x2091031c	U1	-	-	Output rate of the RTCM-3X- TYPE1097 message on port SPI
CFG-MSGOUT-RTCM_3X_ TYPE1097_UART1	0x20910319	U1	-	-	Output rate of the RTCM-3X- TYPE1097 message on port UART1
CFG-MSGOUT-RTCM_3X_ TYPE1097_UART2	0x2091031a	U1	-	-	Output rate of the RTCM-3X- TYPE1097 message on port UART2
CFG-MSGOUT-RTCM_3X_ TYPE1097_USB	0x2091031b	U1	-	-	Output rate of the RTCM-3X- TYPE1097 message on port USB
CFG-MSGOUT-RTCM_3X_ TYPE1124_I2C	0x2091036d	U1	-	-	Output rate of the RTCM-3X- TYPE1124 message on port I2C
CFG-MSGOUT-RTCM_3X_ TYPE1124_SPI	0x20910371	U1	-	-	Output rate of the RTCM-3X- TYPE1124 message on port SPI
CFG-MSGOUT-RTCM_3X_ TYPE1124_UART1	0x2091036e	U1	-	-	Output rate of the RTCM-3X- TYPE1124 message on port UART1
CFG-MSGOUT-RTCM_3X_ TYPE1124_UART2	0x2091036f	U1	-	-	Output rate of the RTCM-3X- TYPE1124 message on port UART2
CFG-MSGOUT-RTCM_3X_ TYPE1124_USB	0x20910370	U1	-	-	Output rate of the RTCM-3X- TYPE1124 message on port USB
CFG-MSGOUT-RTCM_3X_ TYPE1127_I2C	0x209102d6	U1	-	-	Output rate of the RTCM-3X- TYPE1127 message on port I2C
CFG-MSGOUT-RTCM_3X_ TYPE1127_SPI	0x209102da	U1	-	-	Output rate of the RTCM-3X- TYPE1127 message on port SPI
CFG-MSGOUT-RTCM_3X_ TYPE1127_UART1	0x209102d7	U1	-	-	Output rate of the RTCM-3X- TYPE1127 message on port UART1
CFG-MSGOUT-RTCM_3X_ TYPE1127_UART2	0x209102d8	U1	-	-	Output rate of the RTCM-3X- TYPE1127 message on port UART2
CFG-MSGOUT-RTCM_3X_ TYPE1127_USB	0x209102d9	U1	-	-	Output rate of the RTCM-3X- TYPE1127 message on port USB
CFG-MSGOUT-RTCM_3X_ TYPE1230_I2C	0x20910303	U1	-	-	Output rate of the RTCM-3X- TYPE1230 message on port I2C
CFG-MSGOUT-RTCM_3X_ TYPE1230_SPI	0x20910307	U1	-	-	Output rate of the RTCM-3X- TYPE1230 message on port SPI
CFG-MSGOUT-RTCM_3X_ TYPE1230_UART1	0x20910304	U1	-	-	Output rate of the RTCM-3X- TYPE1230 message on port UART1
CFG-MSGOUT-RTCM_3X_ TYPE1230_UART2	0x20910305	U1	-	-	Output rate of the RTCM-3X- TYPE1230 message on port UART2
CFG-MSGOUT-RTCM_3X_ TYPE1230_USB	0x20910306	U1	-	-	Output rate of the RTCM-3X- TYPE1230 message on port USB
CFG-MSGOUT-UBX_LOG_INFO_ I2C	0x20910259	U1	-	-	Output rate of the UBX-LOG-INFO message on port I2C
CFG-MSGOUT-UBX_LOG_INFO_SPI	0x2091025d	U1	-	-	Output rate of the UBX-LOG-INFO message on port SPI
CFG-MSGOUT-UBX_LOG_INFO_ UART1	0x2091025a	U1	-	-	Output rate of the UBX-LOG-INFO message on port UART1

CFG-MSGOUT-\* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_LOG_INFO_UART2	0x2091025b	U1	-	-	Output rate of the UBX-LOG-INFO message on port UART2
CFG-MSGOUT-UBX_LOG_INFO_USB	0x2091025c	U1	-	-	Output rate of the UBX-LOG-INFO message on port USB
CFG-MSGOUT-UBX_MON_COMMS_I2C	0x2091034f	U1	-	-	Output rate of the UBX-MON-COMMS message on port I2C
CFG-MSGOUT-UBX_MON_COMMS_SPI	0x20910353	U1	-	-	Output rate of the UBX-MON-COMMS message on port SPI
CFG-MSGOUT-UBX_MON_COMMS_UART1	0x20910350	U1	-	-	Output rate of the UBX-MON-COMMS message on port UART1
CFG-MSGOUT-UBX_MON_COMMS_UART2	0x20910351	U1	-	-	Output rate of the UBX-MON-COMMS message on port UART2
CFG-MSGOUT-UBX_MON_COMMS_USB	0x20910352	U1	-	-	Output rate of the UBX-MON-COMMS message on port USB
CFG-MSGOUT-UBX_MON_HW2_I2C	0x209101b9	U1	-	-	Output rate of the UBX-MON-HW2 message on port I2C
CFG-MSGOUT-UBX_MON_HW2_SPI	0x209101bd	U1	-	-	Output rate of the UBX-MON-HW2 message on port SPI
CFG-MSGOUT-UBX_MON_HW2_UART1	0x209101ba	U1	-	-	Output rate of the UBX-MON-HW2 message on port UART1
CFG-MSGOUT-UBX_MON_HW2_UART2	0x209101bb	U1	-	-	Output rate of the UBX-MON-HW2 message on port UART2
CFG-MSGOUT-UBX_MON_HW2_USB	0x209101bc	U1	-	-	Output rate of the UBX-MON-HW2 message on port USB
CFG-MSGOUT-UBX_MON_HW3_I2C	0x20910354	U1	-	-	Output rate of the UBX-MON-HW3 message on port I2C
CFG-MSGOUT-UBX_MON_HW3_SPI	0x20910358	U1	-	-	Output rate of the UBX-MON-HW3 message on port SPI
CFG-MSGOUT-UBX_MON_HW3_UART1	0x20910355	U1	-	-	Output rate of the UBX-MON-HW3 message on port UART1
CFG-MSGOUT-UBX_MON_HW3_UART2	0x20910356	U1	-	-	Output rate of the UBX-MON-HW3 message on port UART2
CFG-MSGOUT-UBX_MON_HW3_USB	0x20910357	U1	-	-	Output rate of the UBX-MON-HW3 message on port USB
CFG-MSGOUT-UBX_MON_HW_I2C	0x209101b4	U1	-	-	Output rate of the UBX-MON-HW message on port I2C
CFG-MSGOUT-UBX_MON_HW_SPI	0x209101b8	U1	-	-	Output rate of the UBX-MON-HW message on port SPI
CFG-MSGOUT-UBX_MON_HW_UART1	0x209101b5	U1	-	-	Output rate of the UBX-MON-HW message on port UART1
CFG-MSGOUT-UBX_MON_HW_UART2	0x209101b6	U1	-	-	Output rate of the UBX-MON-HW message on port UART2
CFG-MSGOUT-UBX_MON_HW_USB	0x209101b7	U1	-	-	Output rate of the UBX-MON-HW message on port USB



CFG-MSGOUT-\* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_MON_IO_I2C	0x209101a5	U1	-	-	Output rate of the UBX-MON-IO message on port I2C
CFG-MSGOUT-UBX_MON_IO_SPI	0x209101a9	U1	-	-	Output rate of the UBX-MON-IO message on port SPI
CFG-MSGOUT-UBX_MON_IO_UART1	0x209101a6	U1	-	-	Output rate of the UBX-MON-IO message on port UART1
CFG-MSGOUT-UBX_MON_IO_UART2	0x209101a7	U1	-	-	Output rate of the UBX-MON-IO message on port UART2
CFG-MSGOUT-UBX_MON_IO_USB	0x209101a8	U1	-	-	Output rate of the UBX-MON-IO message on port USB
CFG-MSGOUT-UBX_MON_MSGPP_I2C	0x20910196	U1	-	-	Output rate of the UBX-MON-MSGPP message on port I2C
CFG-MSGOUT-UBX_MON_MSGPP_SPI	0x2091019a	U1	-	-	Output rate of the UBX-MON-MSGPP message on port SPI
CFG-MSGOUT-UBX_MON_MSGPP_UART1	0x20910197	U1	-	-	Output rate of the UBX-MON-MSGPP message on port UART1
CFG-MSGOUT-UBX_MON_MSGPP_UART2	0x20910198	U1	-	-	Output rate of the UBX-MON-MSGPP message on port UART2
CFG-MSGOUT-UBX_MON_MSGPP_USB	0x20910199	U1	-	-	Output rate of the UBX-MON-MSGPP message on port USB
CFG-MSGOUT-UBX_MON_RF_I2C	0x20910359	U1	-	-	Output rate of the UBX-MON-RF message on port I2C
CFG-MSGOUT-UBX_MON_RF_SPI	0x2091035d	U1	-	-	Output rate of the UBX-MON-RF message on port SPI
CFG-MSGOUT-UBX_MON_RF_UART1	0x2091035a	U1	-	-	Output rate of the UBX-MON-RF message on port UART1
CFG-MSGOUT-UBX_MON_RF_UART2	0x2091035b	U1	-	-	Output rate of the UBX-MON-RF message on port UART2
CFG-MSGOUT-UBX_MON_RF_USB	0x2091035c	U1	-	-	Output rate of the UBX-MON-RF message on port USB
CFG-MSGOUT-UBX_MON_RXBUF_I2C	0x209101a0	U1	-	-	Output rate of the UBX-MON-RXBUF message on port I2C
CFG-MSGOUT-UBX_MON_RXBUF_SPI	0x209101a4	U1	-	-	Output rate of the UBX-MON-RXBUF message on port SPI
CFG-MSGOUT-UBX_MON_RXBUF_UART1	0x209101a1	U1	-	-	Output rate of the UBX-MON-RXBUF message on port UART1
CFG-MSGOUT-UBX_MON_RXBUF_UART2	0x209101a2	U1	-	-	Output rate of the UBX-MON-RXBUF message on port UART2
CFG-MSGOUT-UBX_MON_RXBUF_USB	0x209101a3	U1	-	-	Output rate of the UBX-MON-RXBUF message on port USB
CFG-MSGOUT-UBX_MON_RXR_I2C	0x20910187	U1	-	-	Output rate of the UBX-MON-RXR message on port I2C
CFG-MSGOUT-UBX_MON_RXR_SPI	0x2091018b	U1	-	-	Output rate of the UBX-MON-RXR message on port SPI

CFG-MSGOUT-\* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_MON_RXR_UART1	0x20910188	U1	-	-	Output rate of the UBX-MON-RXR message on port UART1
CFG-MSGOUT-UBX_MON_RXR_UART2	0x20910189	U1	-	-	Output rate of the UBX-MON-RXR message on port UART2
CFG-MSGOUT-UBX_MON_RXR_USB	0x2091018a	U1	-	-	Output rate of the UBX-MON-RXR message on port USB
CFG-MSGOUT-UBX_MON_TXBUF_I2C	0x2091019b	U1	-	-	Output rate of the UBX-MON-TXBUF message on port I2C
CFG-MSGOUT-UBX_MON_TXBUF_SPI	0x2091019f	U1	-	-	Output rate of the UBX-MON-TXBUF message on port SPI
CFG-MSGOUT-UBX_MON_TXBUF_UART1	0x2091019c	U1	-	-	Output rate of the UBX-MON-TXBUF message on port UART1
CFG-MSGOUT-UBX_MON_TXBUF_UART2	0x2091019d	U1	-	-	Output rate of the UBX-MON-TXBUF message on port UART2
CFG-MSGOUT-UBX_MON_TXBUF_USB	0x2091019e	U1	-	-	Output rate of the UBX-MON-TXBUF message on port USB
CFG-MSGOUT-UBX_NAV_CLOCK_I2C	0x20910065	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port I2C
CFG-MSGOUT-UBX_NAV_CLOCK_SPI	0x20910069	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port SPI
CFG-MSGOUT-UBX_NAV_CLOCK_UART1	0x20910066	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port UART1
CFG-MSGOUT-UBX_NAV_CLOCK_UART2	0x20910067	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port UART2
CFG-MSGOUT-UBX_NAV_CLOCK_USB	0x20910068	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port USB
CFG-MSGOUT-UBX_NAV_DOP_I2C	0x20910038	U1	-	-	Output rate of the UBX-NAV-DOP message on port I2C
CFG-MSGOUT-UBX_NAV_DOP_SPI	0x2091003c	U1	-	-	Output rate of the UBX-NAV-DOP message on port SPI
CFG-MSGOUT-UBX_NAV_DOP_UART1	0x20910039	U1	-	-	Output rate of the UBX-NAV-DOP message on port UART1
CFG-MSGOUT-UBX_NAV_DOP_UART2	0x2091003a	U1	-	-	Output rate of the UBX-NAV-DOP message on port UART2
CFG-MSGOUT-UBX_NAV_DOP_USB	0x2091003b	U1	-	-	Output rate of the UBX-NAV-DOP message on port USB
CFG-MSGOUT-UBX_NAV_EOE_I2C	0x2091015f	U1	-	-	Output rate of the UBX-NAV-EOE message on port I2C
CFG-MSGOUT-UBX_NAV_EOE_SPI	0x20910163	U1	-	-	Output rate of the UBX-NAV-EOE message on port SPI
CFG-MSGOUT-UBX_NAV_EOE_UART1	0x20910160	U1	-	-	Output rate of the UBX-NAV-EOE message on port UART1
CFG-MSGOUT-UBX_NAV_EOE_UART2	0x20910161	U1	-	-	Output rate of the UBX-NAV-EOE message on port UART2

CFG-MSGOUT-\* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_NAV_EOE_USB	0x20910162	U1	-	-	Output rate of the UBX-NAV-EOE message on port USB
CFG-MSGOUT-UBX_NAV_GEOFENCE_I2C	0x209100a1	U1	-	-	Output rate of the UBX-NAV-GEOFENCE message on port I2C
CFG-MSGOUT-UBX_NAV_GEOFENCE_SPI	0x209100a5	U1	-	-	Output rate of the UBX-NAV-GEOFENCE message on port SPI
CFG-MSGOUT-UBX_NAV_GEOFENCE_UART1	0x209100a2	U1	-	-	Output rate of the UBX-NAV-GEOFENCE message on port UART1
CFG-MSGOUT-UBX_NAV_GEOFENCE_UART2	0x209100a3	U1	-	-	Output rate of the UBX-NAV-GEOFENCE message on port UART2
CFG-MSGOUT-UBX_NAV_GEOFENCE_USB	0x209100a4	U1	-	-	Output rate of the UBX-NAV-GEOFENCE message on port USB
CFG-MSGOUT-UBX_NAV_HPPOSECEF_I2C	0x2091002e	U1	-	-	Output rate of the UBX-NAV-HPPOSECEF message on port I2C
CFG-MSGOUT-UBX_NAV_HPPOSECEF_SPI	0x20910032	U1	-	-	Output rate of the UBX-NAV-HPPOSECEF message on port SPI
CFG-MSGOUT-UBX_NAV_HPPOSECEF_UART1	0x2091002f	U1	-	-	Output rate of the UBX-NAV-HPPOSECEF message on port UART1
CFG-MSGOUT-UBX_NAV_HPPOSECEF_UART2	0x20910030	U1	-	-	Output rate of the UBX-NAV-HPPOSECEF message on port UART2
CFG-MSGOUT-UBX_NAV_HPPOSECEF_USB	0x20910031	U1	-	-	Output rate of the UBX-NAV-HPPOSECEF message on port USB
CFG-MSGOUT-UBX_NAV_HPPOSLLH_I2C	0x20910033	U1	-	-	Output rate of the UBX-NAV-HPPOSLLH message on port I2C
CFG-MSGOUT-UBX_NAV_HPPOSLLH_SPI	0x20910037	U1	-	-	Output rate of the UBX-NAV-HPPOSLLH message on port SPI
CFG-MSGOUT-UBX_NAV_HPPOSLLH_UART1	0x20910034	U1	-	-	Output rate of the UBX-NAV-HPPOSLLH message on port UART1
CFG-MSGOUT-UBX_NAV_HPPOSLLH_UART2	0x20910035	U1	-	-	Output rate of the UBX-NAV-HPPOSLLH message on port UART2
CFG-MSGOUT-UBX_NAV_HPPOSLLH_USB	0x20910036	U1	-	-	Output rate of the UBX-NAV-HPPOSLLH message on port USB
CFG-MSGOUT-UBX_NAV_ODO_I2C	0x2091007e	U1	-	-	Output rate of the UBX-NAV-ODO message on port I2C
CFG-MSGOUT-UBX_NAV_ODO_SPI	0x20910082	U1	-	-	Output rate of the UBX-NAV-ODO message on port SPI
CFG-MSGOUT-UBX_NAV_ODO_UART1	0x2091007f	U1	-	-	Output rate of the UBX-NAV-ODO message on port UART1
CFG-MSGOUT-UBX_NAV_ODO_UART2	0x20910080	U1	-	-	Output rate of the UBX-NAV-ODO message on port UART2
CFG-MSGOUT-UBX_NAV_ODO_USB	0x20910081	U1	-	-	Output rate of the UBX-NAV-ODO message on port USB
CFG-MSGOUT-UBX_NAV_ORB_I2C	0x20910010	U1	-	-	Output rate of the UBX-NAV-ORB message on port I2C



CFG-MSGOUT-\* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_NAV_ORB_SPI	0x20910014	U1	-	-	Output rate of the UBX-NAV-ORB message on port SPI
CFG-MSGOUT-UBX_NAV_ORB_UART1	0x20910011	U1	-	-	Output rate of the UBX-NAV-ORB message on port UART1
CFG-MSGOUT-UBX_NAV_ORB_UART2	0x20910012	U1	-	-	Output rate of the UBX-NAV-ORB message on port UART2
CFG-MSGOUT-UBX_NAV_ORB_USB	0x20910013	U1	-	-	Output rate of the UBX-NAV-ORB message on port USB
CFG-MSGOUT-UBX_NAV_POSECEF_I2C	0x20910024	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port I2C
CFG-MSGOUT-UBX_NAV_POSECEF_SPI	0x20910028	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port SPI
CFG-MSGOUT-UBX_NAV_POSECEF_UART1	0x20910025	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port UART1
CFG-MSGOUT-UBX_NAV_POSECEF_UART2	0x20910026	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port UART2
CFG-MSGOUT-UBX_NAV_POSECEF_USB	0x20910027	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port USB
CFG-MSGOUT-UBX_NAV_POSLLH_I2C	0x20910029	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port I2C
CFG-MSGOUT-UBX_NAV_POSLLH_SPI	0x2091002d	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port SPI
CFG-MSGOUT-UBX_NAV_POSLLH_UART1	0x2091002a	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port UART1
CFG-MSGOUT-UBX_NAV_POSLLH_UART2	0x2091002b	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port UART2
CFG-MSGOUT-UBX_NAV_POSLLH_USB	0x2091002c	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port USB
CFG-MSGOUT-UBX_NAV_PVT_I2C	0x20910006	U1	-	-	Output rate of the UBX-NAV-PVT message on port I2C
CFG-MSGOUT-UBX_NAV_PVT_SPI	0x2091000a	U1	-	-	Output rate of the UBX-NAV-PVT message on port SPI
CFG-MSGOUT-UBX_NAV_PVT_UART1	0x20910007	U1	-	-	Output rate of the UBX-NAV-PVT message on port UART1
CFG-MSGOUT-UBX_NAV_PVT_UART2	0x20910008	U1	-	-	Output rate of the UBX-NAV-PVT message on port UART2
CFG-MSGOUT-UBX_NAV_PVT_USB	0x20910009	U1	-	-	Output rate of the UBX-NAV-PVT message on port USB
CFG-MSGOUT-UBX_NAV_RELPOSNED_I2C	0x2091008d	U1	-	-	Output rate of the UBX-NAV-RELPOSNED message on port I2C
CFG-MSGOUT-UBX_NAV_RELPOSNED_SPI	0x20910091	U1	-	-	Output rate of the UBX-NAV-RELPOSNED message on port SPI
CFG-MSGOUT-UBX_NAV_RELPOSNED_UART1	0x2091008e	U1	-	-	Output rate of the UBX-NAV-RELPOSNED message on port UART1

CFG-MSGOUT-\* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_NAV_RELPOSSED_UART2	0x2091008f	U1	-	-	Output rate of the UBX-NAV-RELPOSSED message on port UART2
CFG-MSGOUT-UBX_NAV_RELPOSSED_USB	0x20910090	U1	-	-	Output rate of the UBX-NAV-RELPOSSED message on port USB
CFG-MSGOUT-UBX_NAV_SAT_I2C	0x20910015	U1	-	-	Output rate of the UBX-NAV-SAT message on port I2C
CFG-MSGOUT-UBX_NAV_SAT_SPI	0x20910019	U1	-	-	Output rate of the UBX-NAV-SAT message on port SPI
CFG-MSGOUT-UBX_NAV_SAT_UART1	0x20910016	U1	-	-	Output rate of the UBX-NAV-SAT message on port UART1
CFG-MSGOUT-UBX_NAV_SAT_UART2	0x20910017	U1	-	-	Output rate of the UBX-NAV-SAT message on port UART2
CFG-MSGOUT-UBX_NAV_SAT_USB	0x20910018	U1	-	-	Output rate of the UBX-NAV-SAT message on port USB
CFG-MSGOUT-UBX_NAV_SIG_I2C	0x20910345	U1	-	-	Output rate of the UBX-NAV-SIG message on port I2C
CFG-MSGOUT-UBX_NAV_SIG_SPI	0x20910349	U1	-	-	Output rate of the UBX-NAV-SIG message on port SPI
CFG-MSGOUT-UBX_NAV_SIG_UART1	0x20910346	U1	-	-	Output rate of the UBX-NAV-SIG message on port UART1
CFG-MSGOUT-UBX_NAV_SIG_UART2	0x20910347	U1	-	-	Output rate of the UBX-NAV-SIG message on port UART2
CFG-MSGOUT-UBX_NAV_SIG_USB	0x20910348	U1	-	-	Output rate of the UBX-NAV-SIG message on port USB
CFG-MSGOUT-UBX_NAV_STATUS_I2C	0x2091001a	U1	-	-	Output rate of the UBX-NAV-STATUS message on port I2C
CFG-MSGOUT-UBX_NAV_STATUS_SPI	0x2091001e	U1	-	-	Output rate of the UBX-NAV-STATUS message on port SPI
CFG-MSGOUT-UBX_NAV_STATUS_UART1	0x2091001b	U1	-	-	Output rate of the UBX-NAV-STATUS message on port UART1
CFG-MSGOUT-UBX_NAV_STATUS_UART2	0x2091001c	U1	-	-	Output rate of the UBX-NAV-STATUS message on port UART2
CFG-MSGOUT-UBX_NAV_STATUS_USB	0x2091001d	U1	-	-	Output rate of the UBX-NAV-STATUS message on port USB
CFG-MSGOUT-UBX_NAV_SVIN_I2C	0x20910088	U1	-	-	Output rate of the UBX-NAV-SVIN message on port I2C
CFG-MSGOUT-UBX_NAV_SVIN_SPI	0x2091008c	U1	-	-	Output rate of the UBX-NAV-SVIN message on port SPI
CFG-MSGOUT-UBX_NAV_SVIN_UART1	0x20910089	U1	-	-	Output rate of the UBX-NAV-SVIN message on port UART1
CFG-MSGOUT-UBX_NAV_SVIN_UART2	0x2091008a	U1	-	-	Output rate of the UBX-NAV-SVIN message on port UART2
CFG-MSGOUT-UBX_NAV_SVIN_USB	0x2091008b	U1	-	-	Output rate of the UBX-NAV-SVIN message on port USB

CFG-MSGOUT-\* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_NAV_TIMEBDS_I2C	0x20910051	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port I2C
CFG-MSGOUT-UBX_NAV_TIMEBDS_SPI	0x20910055	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port SPI
CFG-MSGOUT-UBX_NAV_TIMEBDS_UART1	0x20910052	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port UART1
CFG-MSGOUT-UBX_NAV_TIMEBDS_UART2	0x20910053	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port UART2
CFG-MSGOUT-UBX_NAV_TIMEBDS_USB	0x20910054	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port USB
CFG-MSGOUT-UBX_NAV_TIMEGAL_I2C	0x20910056	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port I2C
CFG-MSGOUT-UBX_NAV_TIMEGAL_SPI	0x2091005a	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port SPI
CFG-MSGOUT-UBX_NAV_TIMEGAL_UART1	0x20910057	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port UART1
CFG-MSGOUT-UBX_NAV_TIMEGAL_UART2	0x20910058	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port UART2
CFG-MSGOUT-UBX_NAV_TIMEGAL_USB	0x20910059	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port USB
CFG-MSGOUT-UBX_NAV_TIMEGLO_I2C	0x2091004c	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port I2C
CFG-MSGOUT-UBX_NAV_TIMEGLO_SPI	0x20910050	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port SPI
CFG-MSGOUT-UBX_NAV_TIMEGLO_UART1	0x2091004d	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port UART1
CFG-MSGOUT-UBX_NAV_TIMEGLO_UART2	0x2091004e	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port UART2
CFG-MSGOUT-UBX_NAV_TIMEGLO_USB	0x2091004f	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port USB
CFG-MSGOUT-UBX_NAV_TIMEGPS_I2C	0x20910047	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port I2C
CFG-MSGOUT-UBX_NAV_TIMEGPS_SPI	0x2091004b	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port SPI
CFG-MSGOUT-UBX_NAV_TIMEGPS_UART1	0x20910048	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port UART1
CFG-MSGOUT-UBX_NAV_TIMEGPS_UART2	0x20910049	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port UART2
CFG-MSGOUT-UBX_NAV_TIMEGPS_USB	0x2091004a	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port USB
CFG-MSGOUT-UBX_NAV_TIMELS_I2C	0x20910060	U1	-	-	Output rate of the UBX-NAV-TIMELS message on port I2C
CFG-MSGOUT-UBX_NAV_TIMELS_SPI	0x20910064	U1	-	-	Output rate of the UBX-NAV-TIMELS message on port SPI

CFG-MSGOUT-\* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_NAV_TIMELS_UART1	0x20910061	U1	-	-	Output rate of the UBX-NAV-TIMELS message on port UART1
CFG-MSGOUT-UBX_NAV_TIMELS_UART2	0x20910062	U1	-	-	Output rate of the UBX-NAV-TIMELS message on port UART2
CFG-MSGOUT-UBX_NAV_TIMELS_USB	0x20910063	U1	-	-	Output rate of the UBX-NAV-TIMELS message on port USB
CFG-MSGOUT-UBX_NAV_TIMEUTC_I2C	0x2091005b	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port I2C
CFG-MSGOUT-UBX_NAV_TIMEUTC_SPI	0x2091005f	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port SPI
CFG-MSGOUT-UBX_NAV_TIMEUTC_UART1	0x2091005c	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port UART1
CFG-MSGOUT-UBX_NAV_TIMEUTC_UART2	0x2091005d	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port UART2
CFG-MSGOUT-UBX_NAV_TIMEUTC_USB	0x2091005e	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port USB
CFG-MSGOUT-UBX_NAV_VELECEF_I2C	0x2091003d	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port I2C
CFG-MSGOUT-UBX_NAV_VELECEF_SPI	0x20910041	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port SPI
CFG-MSGOUT-UBX_NAV_VELECEF_UART1	0x2091003e	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port UART1
CFG-MSGOUT-UBX_NAV_VELECEF_UART2	0x2091003f	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port UART2
CFG-MSGOUT-UBX_NAV_VELECEF_USB	0x20910040	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port USB
CFG-MSGOUT-UBX_NAV_VELNED_I2C	0x20910042	U1	-	-	Output rate of the UBX-NAV-VELNED message on port I2C
CFG-MSGOUT-UBX_NAV_VELNED_SPI	0x20910046	U1	-	-	Output rate of the UBX-NAV-VELNED message on port SPI
CFG-MSGOUT-UBX_NAV_VELNED_UART1	0x20910043	U1	-	-	Output rate of the UBX-NAV-VELNED message on port UART1
CFG-MSGOUT-UBX_NAV_VELNED_UART2	0x20910044	U1	-	-	Output rate of the UBX-NAV-VELNED message on port UART2
CFG-MSGOUT-UBX_NAV_VELNED_USB	0x20910045	U1	-	-	Output rate of the UBX-NAV-VELNED message on port USB
CFG-MSGOUT-UBX_RXM_MEASX_I2C	0x20910204	U1	-	-	Output rate of the UBX-RXM-MEASX message on port I2C
CFG-MSGOUT-UBX_RXM_MEASX_SPI	0x20910208	U1	-	-	Output rate of the UBX-RXM-MEASX message on port SPI
CFG-MSGOUT-UBX_RXM_MEASX_UART1	0x20910205	U1	-	-	Output rate of the UBX-RXM-MEASX message on port UART1
CFG-MSGOUT-UBX_RXM_MEASX_UART2	0x20910206	U1	-	-	Output rate of the UBX-RXM-MEASX message on port UART2

CFG-MSGOUT-\* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_RXM_MEASX_USB	0x20910207	U1	-	-	Output rate of the UBX-RXM-MEASX message on port USB
CFG-MSGOUT-UBX_RXM_RAWX_I2C	0x209102a4	U1	-	-	Output rate of the UBX-RXM-RAWX message on port I2C
CFG-MSGOUT-UBX_RXM_RAWX_SPI	0x209102a8	U1	-	-	Output rate of the UBX-RXM-RAWX message on port SPI
CFG-MSGOUT-UBX_RXM_RAWX_UART1	0x209102a5	U1	-	-	Output rate of the UBX-RXM-RAWX message on port UART1
CFG-MSGOUT-UBX_RXM_RAWX_UART2	0x209102a6	U1	-	-	Output rate of the UBX-RXM-RAWX message on port UART2
CFG-MSGOUT-UBX_RXM_RAWX_USB	0x209102a7	U1	-	-	Output rate of the UBX-RXM-RAWX message on port USB
CFG-MSGOUT-UBX_RXM_RLM_I2C	0x2091025e	U1	-	-	Output rate of the UBX-RXM-RLM message on port I2C
CFG-MSGOUT-UBX_RXM_RLM_SPI	0x20910262	U1	-	-	Output rate of the UBX-RXM-RLM message on port SPI
CFG-MSGOUT-UBX_RXM_RLM_UART1	0x2091025f	U1	-	-	Output rate of the UBX-RXM-RLM message on port UART1
CFG-MSGOUT-UBX_RXM_RLM_UART2	0x20910260	U1	-	-	Output rate of the UBX-RXM-RLM message on port UART2
CFG-MSGOUT-UBX_RXM_RLM_USB	0x20910261	U1	-	-	Output rate of the UBX-RXM-RLM message on port USB
CFG-MSGOUT-UBX_RXM_RTCM_I2C	0x20910268	U1	-	-	Output rate of the UBX-RXM-RTCM message on port I2C
CFG-MSGOUT-UBX_RXM_RTCM_SPI	0x2091026c	U1	-	-	Output rate of the UBX-RXM-RTCM message on port SPI
CFG-MSGOUT-UBX_RXM_RTCM_UART1	0x20910269	U1	-	-	Output rate of the UBX-RXM-RTCM message on port UART1
CFG-MSGOUT-UBX_RXM_RTCM_UART2	0x2091026a	U1	-	-	Output rate of the UBX-RXM-RTCM message on port UART2
CFG-MSGOUT-UBX_RXM_RTCM_USB	0x2091026b	U1	-	-	Output rate of the UBX-RXM-RTCM message on port USB
CFG-MSGOUT-UBX_RXM_SFRBX_I2C	0x20910231	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port I2C
CFG-MSGOUT-UBX_RXM_SFRBX_SPI	0x20910235	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port SPI
CFG-MSGOUT-UBX_RXM_SFRBX_UART1	0x20910232	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port UART1
CFG-MSGOUT-UBX_RXM_SFRBX_UART2	0x20910233	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port UART2
CFG-MSGOUT-UBX_RXM_SFRBX_USB	0x20910234	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port USB
CFG-MSGOUT-UBX_TIM_TM2_I2C	0x20910178	U1	-	-	Output rate of the UBX-TIM-TM2 message on port I2C



#### CFG-MSGOUT-\* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_TIM_TM2_SPI	0x2091017c	U1	-	-	Output rate of the UBX-TIM-TM2 message on port SPI
CFG-MSGOUT-UBX_TIM_TM2_UART1	0x20910179	U1	-	-	Output rate of the UBX-TIM-TM2 message on port UART1
CFG-MSGOUT-UBX_TIM_TM2_UART2	0x2091017a	U1	-	-	Output rate of the UBX-TIM-TM2 message on port UART2
CFG-MSGOUT-UBX_TIM_TM2_USB	0x2091017b	U1	-	-	Output rate of the UBX-TIM-TM2 message on port USB
CFG-MSGOUT-UBX_TIM_TP_I2C	0x2091017d	U1	-	-	Output rate of the UBX-TIM-TP message on port I2C
CFG-MSGOUT-UBX_TIM_TP_SPI	0x20910181	U1	-	-	Output rate of the UBX-TIM-TP message on port SPI
CFG-MSGOUT-UBX_TIM_TP_UART1	0x2091017e	U1	-	-	Output rate of the UBX-TIM-TP message on port UART1
CFG-MSGOUT-UBX_TIM_TP_UART2	0x2091017f	U1	-	-	Output rate of the UBX-TIM-TP message on port UART2
CFG-MSGOUT-UBX_TIM_TP_USB	0x20910180	U1	-	-	Output rate of the UBX-TIM-TP message on port USB
CFG-MSGOUT-UBX_TIM_VRFY_I2C	0x20910092	U1	-	-	Output rate of the UBX-TIM-VRFY message on port I2C
CFG-MSGOUT-UBX_TIM_VRFY_SPI	0x20910096	U1	-	-	Output rate of the UBX-TIM-VRFY message on port SPI
CFG-MSGOUT-UBX_TIM_VRFY_UART1	0x20910093	U1	-	-	Output rate of the UBX-TIM-VRFY message on port UART1
CFG-MSGOUT-UBX_TIM_VRFY_UART2	0x20910094	U1	-	-	Output rate of the UBX-TIM-VRFY message on port UART2
CFG-MSGOUT-UBX_TIM_VRFY_USB	0x20910095	U1	-	-	Output rate of the UBX-TIM-VRFY message on port USB

### 6.7.11 CFG-NAVHPG: High Precision Navigation Configuration

This group configures items related to the operation of the receiver in high precision, for example Differential correction and other related features.

#### CFG-NAVHPG-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-NAVHPG-DGNSSMODE	0x20140011	E1	-	-	Differential corrections mode

See [Constants for CFG-NAVHPG-DGNSSMODE](#) below for a list of possible constants for this item.

#### Constants for CFG-NAVHPG-DGNSSMODE

Constant	Value	Description
RTK_FLOAT	2	No attempts made to fix ambiguities
RTK_FIXED	3	Ambiguities are fixed whenever possible

### 6.7.12 CFG-NAVSPG: Standard Precision Navigation Configuration

This group contains configuration items related to the operation of the receiver at standard precision, including configuring position fix mode, ionospheric model selection and other related items.

#### CFG-NAVSPG-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-NAVSPG-FIXMODE	0x20110011	E1	-	-	Position fix mode
See <a href="#">Constants for CFG-NAVSPG-FIXMODE</a> below for a list of possible constants for this item.					
CFG-NAVSPG-INIFIX3D	0x10110013	L	-	-	Initial fix must be a 3d fix
CFG-NAVSPG-WKNROLLOVER	0x30110017	U2	-	-	GPS week rollover number
GPS week numbers will be set correctly from this week up to 1024 weeks after this week. Range is from 1 to 4096.					
CFG-NAVSPG-USE_PPP	0x10110019	L	-	-	Use Precise Point Positioning
Only available with the PPP product variant.					
CFG-NAVSPG-UTCSTANDARD	0x2011001c	E1	-	-	UTC standard to be used
See also <a href="#">GNSS time bases</a> .					
See <a href="#">Constants for CFG-NAVSPG-UTCSTANDARD</a> below for a list of possible constants for this item.					
CFG-NAVSPG-DYNMODEL	0x20110021	E1	-	-	Dynamic platform model
See <a href="#">Constants for CFG-NAVSPG-DYNMODEL</a> below for a list of possible constants for this item.					
CFG-NAVSPG-ACKAIDING	0x10110025	L	-	-	Acknowledge assistance input messages
CFG-NAVSPG-USE_USRDAT	0x10110061	L	-	-	Use user geodetic datum parameters
This must be set together with all CFG-NAVSPG-USERDAT_* parameters.					
CFG-NAVSPG-USRDAT_MAJA	0x50110062	R8	-	m	Geodetic datum semi-major axis
Accepted range is from 6,300,000.0 to 6,500,000.0 meters This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_* parameters.					
CFG-NAVSPG-USRDAT_FLAT	0x50110063	R8	-	-	Geodetic datum 1.0 / flattening
Accepted range is 0.0 to 500.0. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_* parameters.					
CFG-NAVSPG-USRDAT_DX	0x40110064	R4	-	m	Geodetic datum X axis shift at the origin
Accepted range is +/- 5000.0 meters. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_* parameters.					
CFG-NAVSPG-USRDAT_DY	0x40110065	R4	-	m	Geodetic datum Y axis shift at the origin
Accepted range is +/- 5000.0 meters. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_* parameters.					
CFG-NAVSPG-USRDAT_DZ	0x40110066	R4	-	m	Geodetic datum Z axis shift at the origin
Accepted range is +/- 5000.0 meters. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_* parameters.					

# CFG-NAVSPG-\* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-NAVSPG-USRDAT_ROT_X	0x40110067	R4	-	arcsec	Geodetic datum rotation about the X axis
Accepted range is +/- 20.0 milli arc seconds. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USRDAT_* parameters.					
CFG-NAVSPG-USRDAT_ROT_Y	0x40110068	R4	-	arcsec	Geodetic datum rotation about the Y axis ( )
Accepted range is +/- 20.0 milli-arc seconds. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USRDAT_* parameters.					
CFG-NAVSPG-USRDAT_ROT_Z	0x40110069	R4	-	arcsec	Geodetic datum rotation about the Z axis
Accepted range is +/- 20.0 milli-arc seconds. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USRDAT_* parameters.					
CFG-NAVSPG-USRDAT_SCALE	0x4011006a	R4	-	ppm	Geodetic datum scale factor
Accepted range is 0.0 to 50.0 parts per million. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USRDAT_* parameters.					
CFG-NAVSPG-INFIL_MINSVS	0x201100a1	U1	-	-	Minimum number of satellites for navigation
CFG-NAVSPG-INFIL_MAXSVS	0x201100a2	U1	-	-	Maximum number of satellites for navigation
CFG-NAVSPG-INFIL_MINCNO	0x201100a3	U1	-	dBHz	Minimum satellite signal level for navigation
CFG-NAVSPG-INFIL_MINELEV	0x201100a4	I1	-	deg	Minimum elevation for a GNSS satellite to be used in navigation
CFG-NAVSPG-INFIL_NCNOTHRS	0x201100aa	U1	-	-	Number of satellites required to have C/N0 above CFG-NAVSPG-INFIL_NCNOTHRS for a fix to be attempted
.					
CFG-NAVSPG-INFIL_CNOTHRS	0x201100ab	U1	-	-	C/N0 threshold for deciding whether to attempt a fix
.					
CFG-NAVSPG-OUTFIL_PDOP	0x301100b1	U2	0.1	-	Output filter position DOP mask (threshold)
CFG-NAVSPG-OUTFIL_TDOP	0x301100b2	U2	0.1	-	Output filter time DOP mask (threshold)
CFG-NAVSPG-OUTFIL_PACC	0x301100b3	U2	-	m	Output filter position accuracy mask (threshold)
CFG-NAVSPG-OUTFIL_TACC	0x301100b4	U2	-	m	Output filter time accuracy mask (threshold)
CFG-NAVSPG-OUTFIL_FACC	0x301100b5	U2	0.01	m/s	Output filter frequency accuracy mask (threshold)



#### CFG-NAVSPG-\* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-NAVSPG-CONSTR_ALT	0x401100c1	I4	0.01	m	Fixed altitude (mean sea level) for 2D fix mode
CFG-NAVSPG-CONSTR_ALTVAR	0x401100c2	U4	0.0001	m <sup>2</sup>	Fixed altitude variance for 2D mode
CFG-NAVSPG-CONSTR_DGNSSSTO	0x201100c4	U1	-	s	DGNSS timeout

#### Constants for CFG-NAVSPG-FIXMODE

Constant	Value	Description
2DONLY	1	2d only
3DONLY	2	3d only
AUTO	3	Auto 2d/3d

#### Constants for CFG-NAVSPG-UTCSTANDARD

Constant	Value	Description
AUTO	0	Automatic; receiver selects based on GNSS configuration
USNO	3	UTC as operated by the U.S. Naval Observatory (USNO); derived from GPS time
SU	6	UTC as operated by the former Soviet Union; derived from GLONASS time
NTSC	7	UTC as operated by the National Time Service Center, China; derived from BeiDou time

#### Constants for CFG-NAVSPG-DYNMODEL

Constant	Value	Description
PORT	0	Portable
STAT	2	Stationary
PED	3	Pedestrian
AUTOMOT	4	Automotive
SEA	5	Sea
AIR1	6	Airborne with <1g acceleration
AIR2	7	Airborne with <2g acceleration
AIR4	8	Airborne with <4g acceleration
WRIST	9	Wrist worn watch
.		

### 6.7.13 CFG-NMEA: NMEA Protocol Configuration

Configures the [NMEA protocol](#). See section [NMEA Protocol Configuration](#) for a detailed description of the configuration effects on NMEA output.

#### CFG-NMEA-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-NMEA-PROTVER	0x20930001	E1	-	-	NMEA protocol version
See <a href="#">Constants for CFG-NMEA-PROTVER</a> below for a list of possible constants for this item.					
CFG-NMEA-MAXSVS	0x20930002	E1	-	-	Maximum number of SVs to report per Talker ID
See <a href="#">Constants for CFG-NMEA-MAXSVS</a> below for a list of possible constants for this item.					

# CFG-NMEA-\* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-NMEA-COMPAT	0x10930003	L	-	-	Enable compatibility mode
This might be needed for certain applications, e.g. for an NMEA parser that expects a fixed number of digits in position coordinates.					
CFG-NMEA-CONSIDER	0x10930004	L	-	-	Enable considering mode
This will affect NMEA output used satellite count. If set, also considered satellites (e.g. RAIMED) are counted as used satellites as well.					
CFG-NMEA-LIMIT82	0x10930005	L	-	-	Enable strict limit to 82 characters maximum NMEA message length
CFG-NMEA-HIGHPREC	0x10930006	L	-	-	Enable high precision mode
This flag cannot be set in conjunction with either CFG-NMEA-COMPAT or CFG-NMEA-LIMIT82 Mode.					
CFG-NMEA-SVNUMBERING	0x20930007	E1	-	-	Display configuration for SVs that do not have value defined in NMEA
Configures the display of satellites that do not have an NMEA-defined value. Note: this does not apply to satellites with an unknown ID. See also <a href="#">Satellite Numbering</a> . See <a href="#">Constants for CFG-NMEA-SVNUMBERING</a> below for a list of possible constants for this item.					
CFG-NMEA-FILT_GPS	0x10930011	L	-	-	Disable reporting of GPS satellites
CFG-NMEA-FILT_SBAS	0x10930012	L	-	-	Disable reporting of SBAS satellites
CFG-NMEA-FILT_QZSS	0x10930015	L	-	-	Disable reporting of QZSS satellites
CFG-NMEA-FILT_GLO	0x10930016	L	-	-	Disable reporting of GLONASS satellites
CFG-NMEA-FILT_BDS	0x10930017	L	-	-	Disable reporting of BeiDou satellites
CFG-NMEA-OUT_INVFIX	0x10930021	L	-	-	Enable position output for failed or invalid fixes
CFG-NMEA-OUT_MSKFIX	0x10930022	L	-	-	Enable position output for invalid fixes
CFG-NMEA-OUT_INVTIME	0x10930023	L	-	-	Enable time output for invalid times
CFG-NMEA-OUT_INVDATE	0x10930024	L	-	-	Enable date output for invalid dates
CFG-NMEA-OUT_ONLYGPS	0x10930025	L	-	-	Restrict output to GPS satellites only
CFG-NMEA-OUT_FROZENCOG	0x10930026	L	-	-	Enable course over ground output even if it is frozen
CFG-NMEA-MAINTALKERID	0x20930031	E1	-	-	Main Talker ID
By default the main Talker ID (i.e. the Talker ID used for all messages other than GSV) is determined by the GNSS assignment of the receiver's channels (see <a href="#">UBX-CFG-GNSS</a> ). This field enables the main Talker ID to be overridden. See <a href="#">Constants for CFG-NMEA-MAINTALKERID</a> below for a list of possible constants for this item.					
CFG-NMEA-GSVTALKERID	0x20930032	E1	-	-	Talker ID for GSV NMEA messages
By default the Talker ID for GSV messages is GNSS specific (as defined by NMEA). This field enables the GSV Talker ID to be overridden. See <a href="#">Constants for CFG-NMEA-GSVTALKERID</a> below for a list of possible constants for this item.					
CFG-NMEA-BDSTALKERID	0x30930033	U2	-	-	BeiDou Talker ID
Sets the two ASCII characters that should be used for the BeiDou Talker ID. If these are set to zero, the default BeiDou TalkerID will be used.					

### Constants for CFG-NMEA-PROTVER

Constant	Value	Description
V21	21	NMEA protocol version 2.1
V23	23	NMEA protocol version 2.3
V40	40	NMEA protocol version 4.0
.		
V41	41	NMEA protocol version 4.1
.		

### Constants for CFG-NMEA-MAXSVS

Constant	Value	Description
UNLIM	0	Unlimited
8SVS	8	8 SVs
12SVS	12	12 SVs
16SVS	16	16 SVs

### Constants for CFG-NMEA-SVNUMBERING

Constant	Value	Description
STRICT	0	Strict - satellites are not output
EXTENDED	1	Extended - use proprietary numbering

### Constants for CFG-NMEA-MAINTALKERID

Constant	Value	Description
AUTO	0	Main Talker ID is not overridden
GP	1	Set main Talker ID to 'GP'
GL	2	Set main Talker ID to 'GL'
GN	3	Set main Talker ID to 'GN'
GA	4	Set main Talker ID to 'GA'
.		
GB	5	Set main Talker ID to 'GB'
.		

### Constants for CFG-NMEA-GSVTALKERID

Constant	Value	Description
GNSS	0	Use GNSS specific Talker ID (as defined by NMEA)
MAIN	1	Use the main Talker ID

## 6.7.14 CFG-ODO: Odometer and Low-Speed Course Over Ground Filter Configuration

The items in this group allow the user to configure the Odometer feature and Low-Speed Course Over Ground Filter.

### CFG-ODO-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-ODO-USE_ODO	0x10220001	L	-	-	Use odometer
CFG-ODO-USE_COG	0x10220002	L	-	-	Use low-speed course over ground filter
CFG-ODO-OUTLPVEL	0x10220003	L	-	-	Output low-pass filtered velocity

#### CFG-ODO-\* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-ODO-OUTLPCOG	0x10220004	L	-	-	Output low-pass filtered course over ground (heading)
CFG-ODO-PROFILE	0x20220005	E1	-	-	Odometer profile configuration
See <a href="#">Constants for CFG-ODO-PROFILE</a> below for a list of possible constants for this item.					
CFG-ODO-COGMAXSPEED	0x20220021	U1	-	m/s	Upper speed limit for low-speed course over ground filter
CFG-ODO-COGMAXPOSACC	0x20220022	U1	-	-	Maximum acceptable position accuracy for computing low-speed filtered course over ground
CFG-ODO-VELLPGAIN	0x20220031	U1	-	-	Velocity low-pass filter level
Range is from 0 to 255.					
CFG-ODO-COGLPGAIN	0x20220032	U1	-	-	Course over ground low-pass filter level (at speed < 8 m/s)
Range is from 0 to 255.					

#### Constants for CFG-ODO-PROFILE

Constant	Value	Description
RUN	0	Running
CYCL	1	Cycling
SWIM	2	Swimming
CAR	3	Car
CUSTOM	4	Custom

### 6.7.15 CFG-RATE: Navigation and Measurement Rate Configuration

The configuration items in this group allow the user to alter the rate at which navigation solutions (and the measurements that they depend on) are generated by the receiver. The calculation of the navigation solution will always be aligned to the top of a second zero (first second of the week) of the configured reference time system.

For protocol version 18 and later the navigation period is an integer multiple of the measurement period.

#### CFG-RATE-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-RATE-MEAS	0x30210001	U2	0.001	s	Nominal time between GNSS measurements (e.g. 100ms results in 10Hz measurement rate, 1000ms = 1Hz measurement rate)
CFG-RATE-NAV	0x30210002	U2	-	-	Ratio of number of measurements to number of navigation solutions
E.g. 5 means five measurements for every navigation solution. The maximum value is 127.					
CFG-RATE-TIMEREF	0x20210003	E1	-	-	Time system to which measurements are aligned
See <a href="#">Constants for CFG-RATE-TIMEREF</a> below for a list of possible constants for this item.					

### Constants for CFG-RATE-TIMEREF

Constant	Value	Description
UTC	0	Align measurements to UTC time
GPS	1	Align measurements to GPS time
GLO	2	Align measurements to GLONASS time
.		
BDS	3	Align measurements to BeiDou time
.		
GAL	4	Align measurements to Galileo time
.		

### 6.7.16 CFG-RINV: Remote Inventory

The Remote Inventory enables storing user-defined data in the non-volatile memory of the receiver. The data can be either binary or a string of ASCII characters. In the latter case, it can optionally be output at startup after the boot screen.

#### CFG-RINV-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-RINV-DUMP	0x10c70001	L	-	-	Dump data at startup
When true, data will be dumped to the interface on startup, unless CFG-RINV-BINARY is set.					
CFG-RINV-BINARY	0x10c70002	L	-	-	Data is binary
When true, the data is treated as binary data.					
CFG-RINV-DATA_SIZE	0x20c70003	U1	-	-	Size of data
Size of data to store/be stored in the Remote Inventory (maximum 30 bytes).					
CFG-RINV-CHUNK0	0x50c70004	X8	-	-	Data bytes 1-8 (LSB)
Data to store/be stored in Remote Inventory - max 8 bytes, left-most in LSB, e.g. string ABCD will appear as 0x44434241.					
CFG-RINV-CHUNK1	0x50c70005	X8	-	-	Data bytes 9-16
Data to store/be stored in Remote Inventory - max 8 bytes, left-most in LSB, e.g. string ABCD will appear as 0x44434241.					
CFG-RINV-CHUNK2	0x50c70006	X8	-	-	Data bytes 17-24
Data to store/be stored in Remote Inventory - max 8 bytes, left-most in LSB, e.g. string ABCD will appear as 0x44434241.					
CFG-RINV-CHUNK3	0x50c70007	X8	-	-	Data bytes 25-30 (MSB)
Data to store/be stored in Remote Inventory - max 6 bytes, left-most in LSB, e.g. string ABCD will appear as 0x44434241.					

### 6.7.17 CFG-SIGNAL: Satellite Systems (GNSS) Signal Configuration

It is necessary for at least one signal and constellation from a [major GNSS](#) to be enabled, after applying the new configuration to the current one.

The individual signals enable keys are governed by their corresponding constellation enable key. See GNSS Signal Configuration for more details.

Configuration specific to a GNSS system can be done via other groups (e.g. **CFG-SBAS-\***).

Note that changes to any items within this group will trigger a reset to the GNSS subsystem.

### CFG-SIGNAL-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-SIGNAL-GPS_ENA	0x1031001f	L	-	-	GPS enable
CFG-SIGNAL-GPS_L1CA_ENA	0x10310001	L	-	-	GPS L1C/A
CFG-SIGNAL-GPS_L2C_ENA	0x10310003	L	-	-	GPS L2C (only on u-blox 9 F platform products)
CFG-SIGNAL-GAL_ENA	0x10310021	L	-	-	Galileo enable
CFG-SIGNAL-GAL_E1_ENA	0x10310007	L	-	-	Galileo E1
CFG-SIGNAL-GAL_E5B_ENA	0x1031000a	L	-	-	Galileo E5b (only on u-blox 9 F platform products)
CFG-SIGNAL-BDS_ENA	0x10310022	L	-	-	BeiDou Enable
CFG-SIGNAL-BDS_B1_ENA	0x1031000d	L	-	-	BeiDou B1I
CFG-SIGNAL-BDS_B2_ENA	0x1031000e	L	-	-	BeiDou B2I (only on u-blox 9 F platform products)
CFG-SIGNAL-QZSS_ENA	0x10310024	L	-	-	QZSS enable
CFG-SIGNAL-QZSS_L1CA_ENA	0x10310012	L	-	-	QZSS L1C/A
CFG-SIGNAL-QZSS_L2C_ENA	0x10310015	L	-	-	QZSS L2C (only on u-blox 9 F platform products)
CFG-SIGNAL-GLO_ENA	0x10310025	L	-	-	GLONASS enable
CFG-SIGNAL-GLO_L1_ENA	0x10310018	L	-	-	GLONASS L1
CFG-SIGNAL-GLO_L2_ENA	0x1031001a	L	-	-	GLONASS L2 (only on u-blox 9 F platform products)

### 6.7.18 CFG-SPI: Configuration of the SPI Interface

Settings needed to configure the SPI communication interface.

#### CFG-SPI-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-SPI-MAXFF	0x20640001	U1	-	-	Number of bytes containing 0xFF to receive before switching off reception. Range: 0(mechanism off)-63
CFG-SPI-CPOLARITY	0x10640002	L	-	-	Clock polarity select: 0: Active Hight Clock, SCLK idles low, 1: Active Low Clock, SCLK idles high
CFG-SPI-CPHASE	0x10640003	L	-	-	Clock phase select: 0: Data captured on first edge of SCLK, 1: Data captured on second edge of SCLK
CFG-SPI-EXTENDEDTIMEOUT	0x10640005	L	-	-	Flag to disable timeouting the interface after 1.5s
CFG-SPI-ENABLED	0x10640006	L	-	-	Flag to indicate if the SPI interface should be enabled

### 6.7.19 CFG-SPIINPROT: Input Protocol Configuration of the SPI Interface

Input protocol enable flags of the SPI interface.

### CFG-SPIINPROT-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-SPIINPROT-UBX	0x10790001	L	-	-	Flag to indicate if UBX should be an input protocol on SPI
CFG-SPIINPROT-NMEA	0x10790002	L	-	-	Flag to indicate if NMEA should be an input protocol on SPI
CFG-SPIINPROT-RTCM3X	0x10790004	L	-	-	Flag to indicate if RTCM3X should be an input protocol on SPI

### 6.7.20 CFG-SPIOUTPROT: Output Protocol Configuration of the SPI Interface

Output protocol enable flags of the SPI interface.

#### CFG-SPIOUTPROT-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-SPIOUTPROT-UBX	0x107a0001	L	-	-	Flag to indicate if UBX should be an output protocol on SPI
CFG-SPIOUTPROT-NMEA	0x107a0002	L	-	-	Flag to indicate if NMEA should be an output protocol on SPI
CFG-SPIOUTPROT-RTCM3X	0x107a0004	L	-	-	Flag to indicate if RTCM3X should be an output protocol on SPI

### 6.7.21 CFG-TMODE: Time Mode Configuration

Configuration for operation of the receiver in [Time Mode](#). The position referred to in the configuration items is that of the Antenna Reference Point (ARP).

#### CFG-TMODE-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-TMODE-MODE	0x20030001	E1	-	-	Receiver mode
See <a href="#">Constants for CFG-TMODE-MODE</a> below for a list of possible constants for this item.					
CFG-TMODE-POS_TYPE	0x20030002	E1	-	-	Determines whether the ARP position is given in ECEF or LAT/LON/HEIGHT?
See <a href="#">Constants for CFG-TMODE-POS_TYPE</a> below for a list of possible constants for this item.					
CFG-TMODE-ECEF_X	0x40030003	I4	-	cm	ECEF X coordinate of the ARP position.
This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=ECEF.					
CFG-TMODE-ECEF_Y	0x40030004	I4	-	cm	ECEF Y coordinate of the ARP position.
This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=ECEF.					
CFG-TMODE-ECEF_Z	0x40030005	I4	-	cm	ECEF Z coordinate of the ARP position.
This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=ECEF.					
CFG-TMODE-ECEF_X_HP	0x20030006	I1	0.1	mm	High-precision ECEF X coordinate of the ARP position.
Accepted range is -99 to +99.					
This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=ECEF.					
CFG-TMODE-ECEF_Y_HP	0x20030007	I1	0.1	mm	High-precision ECEF Y coordinate of the ARP position.



#### CFG-TMODE-\* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
Accepted range is -99 to +99. This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=ECEF.					
CFG-TMODE-ECEF_Z_HP	0x20030008	I1	0.1	mm	High-precision ECEF Z coordinate of the ARP position.
Accepted range is -99 to +99. This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=ECEF.					
CFG-TMODE-LAT	0x40030009	I4	1e-7	deg	Latitude of the ARP position.
This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=LLH.					
CFG-TMODE-LON	0x4003000a	I4	1e-7	deg	Longitude of the ARP position.
This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=LLH.					
CFG-TMODE-HEIGHT	0x4003000b	I4	-	cm	Height of the ARP position.
This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=LLH.					
CFG-TMODE-LAT_HP	0x2003000c	I1	1e-9	deg	High-precision latitude of the ARP position
Accepted range is -99 to +99. This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=LLH.					
CFG-TMODE-LON_HP	0x2003000d	I1	1e-9	deg	High-precision longitude of the ARP position.
Accepted range is -99 to +99. This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=LLH.					
CFG-TMODE-HEIGHT_HP	0x2003000e	I1	0.1	mm	High-precision height of the ARP position.
Accepted range is -99 to +99. This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=LLH.					
CFG-TMODE-FIXED_POS_ACC	0x4003000f	U4	0.1	mm	Fixed position 3D accuracy
CFG-TMODE-SVIN_MIN_DUR	0x40030010	U4	-	s	Survey-in minimum duration
This will only be used if CFG-TMODE-MODE=SURVEY_IN.					
CFG-TMODE-SVIN_ACC_LIMIT	0x40030011	U4	0.1	mm	Survey-in position accuracy limit
This will only be used if CFG-TMODE-MODE=SURVEY_IN.					

#### Constants for CFG-TMODE-MODE

Constant	Value	Description
DISABLED	0	Disabled
SURVEY_IN	1	Survey In
FIXED	2	Fixed Mode (true ARP position information required)

#### Constants for CFG-TMODE-POS\_TYPE

Constant	Value	Description
ECEF	0	Position is ECEF
LLH	1	Position is Lat/Lon/Height

### 6.7.22 CFG-TP: Timepulse Configuration

Use this group to configure the generation of timepulses.



### CFG-TP-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-TP-PULSE_DEF	0x20050023	E1	-	-	Determines whether the time pulse is interpreted as frequency or period?
See <a href="#">Constants for CFG-TP-PULSE_DEF</a> below for a list of possible constants for this item.					
CFG-TP-PULSE_LENGTH_DEF	0x20050030	E1	-	-	Determines whether the time pulse length is interpreted as length[us] or pulse ratio[%]?
See <a href="#">Constants for CFG-TP-PULSE_LENGTH_DEF</a> below for a list of possible constants for this item.					
CFG-TP-ANT_CABLEDELAY	0x30050001	I2	0. 00000 0001	s	Antenna cable delay
CFG-TP-PERIOD_TP1	0x40050002	U4	0. 00000 1	s	Time pulse period (TP1)
CFG-TP-PERIOD_LOCK_TP1	0x40050003	U4	0. 00000 1	s	Time pulse period when locked to GNSS time (TP1)
Only used if CFG-TP-USE_LOCKED_TP1 is set.					
CFG-TP-FREQ_TP1	0x40050024	U4	-	Hz	Time pulse frequency (TP1)
This will only be used if CFG-PULSE_DEF=FREQ.					
CFG-TP-FREQ_LOCK_TP1	0x40050025	U4	-	Hz	Time pulse frequency when locked to GNSS time (TP1)
Only used if CFG-TP-USE_LOCKED_TP1 is set and .					
CFG-TP-LEN_TP1	0x40050004	U4	0. 00000 1	s	Time pulse length (TP1)
CFG-TP-LEN_LOCK_TP1	0x40050005	U4	0. 00000 1	s	Time pulse length when locked to GNSS time (TP1)
Only used if CFG-TP-USE_LOCKED_TP1 is set.					
CFG-TP-DUTY_TP1	0x5005002a	R8	-	%	Time pulse duty cycle (TP1)
Only used if RATIO is set.					
CFG-TP-DUTY_LOCK_TP1	0x5005002b	R8	-	%	Time pulse duty cycle when locked to GNSS time (TP1)
Only used if RATIO and CFG-TP-USE_LOCKED_TP1 are set.					
CFG-TP-USER_DELAY_TP1	0x40050006	I4	0. 00000 0001	s	User configurable time pulse delay (TP1)
CFG-TP-TP1_ENA	0x10050007	L	-	-	Enable the first timepulse
if pin associated with time pulse is assigned for another function, the other function takes precedence. Must be set for frequency-time products.					
CFG-TP-SYNC_GNSS_TP1	0x10050008	L	-	-	Sync time pulse to GNSS time or local clock (TP1)
If set, sync to GNSS if GNSS time is valid otherwise, if not set or not available, use local clock. Ignored by time-frequency product variants, which will attempt to use the best available time/frequency reference (not necessarily GNSS).					

#### CFG-TP-\* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-TP-USE_LOCKED_TP1	0x10050009	L	-	-	Use locked parameters when possible (TP1)
If set, uses CFG-TP-PERIOD_LOCK_TP1 and CFG-TP-LEN_LOCK_TP1 as soon as GNSS time is valid, otherwise if not valid or not set, use CFG-TP-PERIOD_TP1 and CFG-TP-LEN_TP1.					
CFG-TP-ALIGN_TO_TOW_TP1	0x1005000a	L	-	-	Align time pulse to top of second (TP1)
To use this feature, CFG-TP-USE_LOCKED_TP1 must be set. Time pulse period must be an integer fraction of 1 second. Ignored in time-frequency product variants, where it is assumed always enabled. Set maxSlewRate and maxPhaseCorrRate fields of UBX-CFG-SMGR to 0 to disable alignment.					
CFG-TP-POL_TP1	0x1005000b	L	-	-	Set time pulse polarity (TP1)
false (0) : falling edge at top of second. true (1) : rising edge at top of second.					
CFG-TP-TIMEGRID_TP1	0x2005000c	E1	-	-	Time grid to use (TP1)
Only relevant if CFG-TP-USE_LOCKED_TP1 and ALIGN_TO_TOW_TP1 are set. Note that configured GNSS time is estimated by the receiver if locked to any GNSS system. If the receiver has a valid GNSS fix it will attempt to steer the TP to the specified time grid even if the specified time is not based on information from the constellation's satellites. To ensure timing based purely on a given GNSS, restrict the supported constellations in UBX-CFG-GNSS. See <a href="#">Constants for CFG-TP-TIMEGRID_TP1</a> below for a list of possible constants for this item.					

#### Constants for CFG-TP-PULSE\_DEF

Constant	Value	Description
PERIOD	0	Time pulse period [us]
FREQ	1	Time pulse frequency [Hz]

#### Constants for CFG-TP-PULSE\_LENGTH\_DEF

Constant	Value	Description
RATIO	0	Time pulse ratio
LENGTH	1	Time pulse length

#### Constants for CFG-TP-TIMEGRID\_TP1

Constant	Value	Description
UTC	0	UTC time reference
GPS	1	GPS time reference
GLO	2	GLONASS time reference
BDS	3	BeiDuo time reference
GAL	4	Galileo time reference

### 6.7.23 CFG-TXREADY: Tx-Ready Configuration

Configuration of the tx ready pin.

#### CFG-TXREADY-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-TXREADY-ENABLED	0x10a20001	L	-	-	Flag to indicate if tx ready pin mechanism should be enabled

#### CFG-TXREADY-\* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-TXREADY-POLARITY	0x10a20002	L	-	-	The polarity of the tx ready pin: false: high-active, true:low-active
CFG-TXREADY-PIN	0x20a20003	U1	-	-	Pin number to use for the tx ready functionality
CFG-TXREADY-THRESHOLD	0x30a20004	U2	-	-	Amount of data that should be ready on the interface before triggering the tx ready pin
CFG-TXREADY-INTERFACE	0x20a20005	E1	-	-	Interface where the tx ready feature should be linked to

See [Constants for CFG-TXREADY-INTERFACE](#) below for a list of possible constants for this item.

#### Constants for CFG-TXREADY-INTERFACE

Constant	Value	Description
I2C	0	I2C interface
SPI	1	SPI interface

### 6.7.24 CFG-UART1: Configuration of the UART1 Interface

Settings needed to configure the UART1 communication interface.

#### CFG-UART1-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-UART1-BAUDRATE	0x40520001	U4	-	-	The baud rate that should be configured on the UART1
CFG-UART1-STOPBITS	0x20520002	E1	-	-	Number of stopbits that should be used on UART1

See [Constants for CFG-UART1-STOPBITS](#) below for a list of possible constants for this item.

CFG-UART1-DATABITS	0x20520003	E1	-	-	Number of databits that should be used on UART1
--------------------	------------	----	---	---	---

See [Constants for CFG-UART1-DATABITS](#) below for a list of possible constants for this item.

CFG-UART1-PARITY	0x20520004	E1	-	-	Parity mode that should be used on UART1
------------------	------------	----	---	---	--

See [Constants for CFG-UART1-PARITY](#) below for a list of possible constants for this item.

CFG-UART1-ENABLED	0x10520005	L	-	-	Flag to indicate if the UART1 should be enabled
-------------------	------------	---	---	---	---

#### Constants for CFG-UART1-STOPBITS

Constant	Value	Description
HALF	0	0.5 stopbits
ONE	1	1.0 stopbits
ONEHALF	2	1.5 stopbits
TWO	3	2.0 stopbits

#### Constants for CFG-UART1-DATABITS

Constant	Value	Description
EIGHT	0	8 databits
SEVEN	1	7 databits

### Constants for CFG-UART1-PARITY

Constant	Value	Description
NONE	0	No parity bit
ODD	1	Add an odd parity bit
EVEN	2	Add an even parity bit

### 6.7.25 CFG-UART1INPROT: Input Protocol Configuration of the UART1 Interface

Input protocol enable flags of the UART1 interface.

#### CFG-UART1INPROT-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-UART1INPROT-UBX	0x10730001	L	-	-	Flag to indicate if UBX should be an input protocol on UART1
CFG-UART1INPROT-NMEA	0x10730002	L	-	-	Flag to indicate if NMEA should be an input protocol on UART1
CFG-UART1INPROT-RTCM3X	0x10730004	L	-	-	Flag to indicate if RTCM3X should be an input protocol on UART1

### 6.7.26 CFG-UART1OUTPROT: Output Protocol Configuration of the UART1 Interface

Output protocol enable flags of the UART1 interface.

#### CFG-UART1OUTPROT-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-UART1OUTPROT-UBX	0x10740001	L	-	-	Flag to indicate if UBX should be an output protocol on UART1
CFG-UART1OUTPROT-NMEA	0x10740002	L	-	-	Flag to indicate if NMEA should be an output protocol on UART1
CFG-UART1OUTPROT-RTCM3X	0x10740004	L	-	-	Flag to indicate if RTCM3X should be an output protocol on UART1

### 6.7.27 CFG-UART2: Configuration of the UART2 Interface

Settings needed to configure the UART2 communication interface.

#### CFG-UART2-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-UART2-BAUDRATE	0x40530001	U4	-	-	The baud rate that should be configured on the UART2
CFG-UART2-STOPBITS	0x20530002	E1	-	-	Number of stopbits that should be used on UART2
See <a href="#">Constants for CFG-UART2-STOPBITS</a> below for a list of possible constants for this item.					
CFG-UART2-DATABITS	0x20530003	E1	-	-	Number of databits that should be used on UART2
See <a href="#">Constants for CFG-UART2-DATABITS</a> below for a list of possible constants for this item.					
CFG-UART2-PARITY	0x20530004	E1	-	-	Parity mode that should be used on UART2
See <a href="#">Constants for CFG-UART2-PARITY</a> below for a list of possible constants for this item.					
CFG-UART2-ENABLED	0x10530005	L	-	-	Flag to indicate if the UART2 should be enabled

#### CFG-UART2-\* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-UART2-REMAP	0x10530006	L	-	-	UART2 Remapping

#### Constants for CFG-UART2-STOPBITS

Constant	Value	Description
HALF	0	0.5 stopbits
ONE	1	1.0 stopbits
ONEHALF	2	1.5 stopbits
TWO	3	2.0 stopbits

#### Constants for CFG-UART2-DATABITS

Constant	Value	Description
EIGHT	0	8 databits
SEVEN	1	7 databits

#### Constants for CFG-UART2-PARITY

Constant	Value	Description
NONE	0	No parity bit
ODD	1	Add an odd parity bit
EVEN	2	Add an even parity bit

### 6.7.28 CFG-UART2INPROT: Input Protocol Configuration of the UART2 Interface

Input protocol enable flags of the UART2 interface.

#### CFG-UART2INPROT-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-UART2INPROT-UBX	0x10750001	L	-	-	Flag to indicate if UBX should be an input protocol on UART2
CFG-UART2INPROT-NMEA	0x10750002	L	-	-	Flag to indicate if NMEA should be an input protocol on UART2
CFG-UART2INPROT-RTCM3X	0x10750004	L	-	-	Flag to indicate if RTCM3X should be an input protocol on UART2

### 6.7.29 CFG-UART2OUTPROT: Output Protocol Configuration of the UART2 Interface

Output protocol enable flags of the UART2 interface.

#### CFG-UART2OUTPROT-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-UART2OUTPROT-UBX	0x10760001	L	-	-	Flag to indicate if UBX should be an output protocol on UART2
CFG-UART2OUTPROT-NMEA	0x10760002	L	-	-	Flag to indicate if NMEA should be an output protocol on UART2
CFG-UART2OUTPROT-RTCM3X	0x10760004	L	-	-	Flag to indicate if RTCM3X should be an output protocol on UART2

### 6.7.30 CFG-USB: Configuration of the USB Interface

Settings needed to configure the USB communication interface.

#### CFG-USB-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-USB-ENABLED	0x10650001	L	-	-	Flag to indicate if the USB interface should be enabled
CFG-USB-SELFPOW	0x10650002	L	-	-	Self-Powered device
CFG-USB-VENDOR_ID	0x3065000a	U2	-	-	Vendor ID
CFG-USB-PRODUCT_ID	0x3065000b	U2	-	-	Vendor ID
CFG-USB-POWER	0x3065000c	U2	-	mA	Power consumption
CFG-USB-VENDOR_STR0	0x5065000d	X8	-	-	Vendor string characters 0-7
CFG-USB-VENDOR_STR1	0x5065000e	X8	-	-	Vendor string characters 8-15
CFG-USB-VENDOR_STR2	0x5065000f	X8	-	-	Vendor string characters 16-23
CFG-USB-VENDOR_STR3	0x50650010	X8	-	-	Vendor string characters 24-31
CFG-USB-PRODUCT_STR0	0x50650011	X8	-	-	Product string characters 0-7
CFG-USB-PRODUCT_STR1	0x50650012	X8	-	-	Product string characters 8-15
CFG-USB-PRODUCT_STR2	0x50650013	X8	-	-	Product string characters 16-23
CFG-USB-PRODUCT_STR3	0x50650014	X8	-	-	Product string characters 24-31
CFG-USB-SERIAL_NO_STR0	0x50650015	X8	-	-	Serial number string characters 0-7
CFG-USB-SERIAL_NO_STR1	0x50650016	X8	-	-	Serial number string characters 8-15
CFG-USB-SERIAL_NO_STR2	0x50650017	X8	-	-	Serial number string characters 16-23
CFG-USB-SERIAL_NO_STR3	0x50650018	X8	-	-	Serial number string characters 24-31

### 6.7.31 CFG-USBINPROT: Input Protocol Configuration of the USB Interface

Input protocol enable flags of the USB interface.

#### CFG-USBINPROT-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-USBINPROT-UBX	0x10770001	L	-	-	Flag to indicate if UBX should be an input protocol on USB
CFG-USBINPROT-NMEA	0x10770002	L	-	-	Flag to indicate if NMEA should be an input protocol on USB
CFG-USBINPROT-RTCM3X	0x10770004	L	-	-	Flag to indicate if RTCM3X should be an input protocol on USB

### 6.7.32 CFG-USBOUTPROT: Output Protocol Configuration of the USB Interface

Output protocol enable flags of the USB interface.

#### CFG-USBOUTPROT-\* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-USBOUTPROT-UBX	0x10780001	L	-	-	Flag to indicate if UBX should be an output protocol on USB
CFG-USBOUTPROT-NMEA	0x10780002	L	-	-	Flag to indicate if NMEA should be an output protocol on USB
CFG-USBOUTPROT-RTCM3X	0x10780004	L	-	-	Flag to indicate if RTCM3X should be an output protocol on USB

## 6.8 Legacy UBX Message Fields Reference

The following table lists the legacy UBX message fields and the corresponding Configuration Item. Note that the mapping from [UBX-CFG](#) message fields to Configuration Items is not necessarily 1:1.

### UBX Messages Fields and the Corresponding Configuration Items

UBX Message and Field Name	Configuration Item
<a href="#">UBX-CFG-ANT.ocd</a>	<a href="#">CFG-HW-ANT_CFG_OPENDET</a>
<a href="#">UBX-CFG-ANT.pdwnOnSCD</a>	<a href="#">CFG-HW-ANT_CFG_PWRDOWN</a>
<a href="#">UBX-CFG-ANT.pinOCD</a>	<a href="#">CFG-HW-ANT_SUP_OPEN_PIN</a>
<a href="#">UBX-CFG-ANT.pinSCD</a>	<a href="#">CFG-HW-ANT_SUP_SHORT_PIN</a>
<a href="#">UBX-CFG-ANT.pinSwitch</a>	<a href="#">CFG-HW-ANT_SUP_SWITCH_PIN</a>
<a href="#">UBX-CFG-ANT.recovery</a>	<a href="#">CFG-HW-ANT_CFG_RECOVER</a>
<a href="#">UBX-CFG-ANT.scd</a>	<a href="#">CFG-HW-ANT_CFG_SHORTDET</a>
<a href="#">UBX-CFG-ANT.svcs</a>	<a href="#">CFG-HW-ANT_CFG_VOLTCTRL</a>
<a href="#">UBX-CFG-DAT.dX</a>	<a href="#">CFG-NAVSPG-USRDAT_DX</a>
<a href="#">UBX-CFG-DAT.dY</a>	<a href="#">CFG-NAVSPG-USRDAT_DY</a>
<a href="#">UBX-CFG-DAT.dZ</a>	<a href="#">CFG-NAVSPG-USRDAT_DZ</a>
<a href="#">UBX-CFG-DAT.flat</a>	<a href="#">CFG-NAVSPG-USRDAT_FLAT</a>
<a href="#">UBX-CFG-DAT.maJA</a>	<a href="#">CFG-NAVSPG-USE_USRDAT</a>
<a href="#">UBX-CFG-DAT.maJA</a>	<a href="#">CFG-NAVSPG-USRDAT_MAJA</a>
<a href="#">UBX-CFG-DAT.rotX</a>	<a href="#">CFG-NAVSPG-USRDAT_ROT_X</a>
<a href="#">UBX-CFG-DAT.rotY</a>	<a href="#">CFG-NAVSPG-USRDAT_ROT_Y</a>
<a href="#">UBX-CFG-DAT.rotZ</a>	<a href="#">CFG-NAVSPG-USRDAT_ROT_Z</a>
<a href="#">UBX-CFG-DAT.scale</a>	<a href="#">CFG-NAVSPG-USRDAT_SCALE</a>
<a href="#">UBX-CFG-DGNSS.dgnssMode</a>	<a href="#">CFG-NAVHPG-DGNSSMODE</a>
<a href="#">UBX-CFG-GEOFENCE.confLvl</a>	<a href="#">CFG-GEOFENCE-CONFLVL</a>
<a href="#">UBX-CFG-GEOFENCE.lat</a>	<a href="#">CFG-GEOFENCE-FENCE1_LAT</a>
<a href="#">UBX-CFG-GEOFENCE.lat</a>	<a href="#">CFG-GEOFENCE-FENCE2_LAT</a>
<a href="#">UBX-CFG-GEOFENCE.lat</a>	<a href="#">CFG-GEOFENCE-FENCE3_LAT</a>
<a href="#">UBX-CFG-GEOFENCE.lat</a>	<a href="#">CFG-GEOFENCE-FENCE4_LAT</a>
<a href="#">UBX-CFG-GEOFENCE.lon</a>	<a href="#">CFG-GEOFENCE-FENCE1_LON</a>
<a href="#">UBX-CFG-GEOFENCE.lon</a>	<a href="#">CFG-GEOFENCE-FENCE2_LON</a>
<a href="#">UBX-CFG-GEOFENCE.lon</a>	<a href="#">CFG-GEOFENCE-FENCE3_LON</a>
<a href="#">UBX-CFG-GEOFENCE.lon</a>	<a href="#">CFG-GEOFENCE-FENCE4_LON</a>
<a href="#">UBX-CFG-GEOFENCE.numFences</a>	<a href="#">CFG-GEOFENCE-USE_FENCE1</a>
<a href="#">UBX-CFG-GEOFENCE.numFences</a>	<a href="#">CFG-GEOFENCE-USE_FENCE2</a>
<a href="#">UBX-CFG-GEOFENCE.numFences</a>	<a href="#">CFG-GEOFENCE-USE_FENCE3</a>
<a href="#">UBX-CFG-GEOFENCE.numFences</a>	<a href="#">CFG-GEOFENCE-USE_FENCE4</a>
<a href="#">UBX-CFG-GEOFENCE.pin</a>	<a href="#">CFG-GEOFENCE-PIN</a>
<a href="#">UBX-CFG-GEOFENCE.pinPolarity</a>	<a href="#">CFG-GEOFENCE-PINPOL</a>
<a href="#">UBX-CFG-GEOFENCE.pioEnabled</a>	<a href="#">CFG-GEOFENCE-USE_PIO</a>
<a href="#">UBX-CFG-GEOFENCE.radius</a>	<a href="#">CFG-GEOFENCE-FENCE1_RAD</a>
<a href="#">UBX-CFG-GEOFENCE.radius</a>	<a href="#">CFG-GEOFENCE-FENCE2_RAD</a>
<a href="#">UBX-CFG-GEOFENCE.radius</a>	<a href="#">CFG-GEOFENCE-FENCE3_RAD</a>
<a href="#">UBX-CFG-GEOFENCE.radius</a>	<a href="#">CFG-GEOFENCE-FENCE4_RAD</a>
<a href="#">UBX-CFG-GNSS.gnssId</a>	<a href="#">CFG-SIGNAL-BDS_ENA</a>
<a href="#">UBX-CFG-GNSS.gnssId</a>	<a href="#">CFG-SIGNAL-GLO_ENA</a>



## UBX Messages Fields and the Corresponding Configuration Items continued

UBX Message and Field Name	Configuration Item
UBX-CFG-GNSS.gnssId	CFG-SIGNAL-GPS_ENA
UBX-CFG-GNSS.gnssId	CFG-SIGNAL-QZSS_ENA
UBX-CFG-INF.infMsgMask	CFG-INFMSG-NMEA_I2C
UBX-CFG-INF.infMsgMask	CFG-INFMSG-NMEA_SPI
UBX-CFG-INF.infMsgMask	CFG-INFMSG-NMEA_UART1
UBX-CFG-INF.infMsgMask	CFG-INFMSG-NMEA_UART2
UBX-CFG-INF.infMsgMask	CFG-INFMSG-NMEA_USB
UBX-CFG-INF.infMsgMask	CFG-INFMSG-UBX_I2C
UBX-CFG-INF.infMsgMask	CFG-INFMSG-UBX_SPI
UBX-CFG-INF.infMsgMask	CFG-INFMSG-UBX_UART1
UBX-CFG-INF.infMsgMask	CFG-INFMSG-UBX_UART2
UBX-CFG-INF.infMsgMask	CFG-INFMSG-UBX_USB
UBX-CFG-INF.protocolID	CFG-INFMSG-NMEA_I2C
UBX-CFG-INF.protocolID	CFG-INFMSG-NMEA_SPI
UBX-CFG-INF.protocolID	CFG-INFMSG-NMEA_UART1
UBX-CFG-INF.protocolID	CFG-INFMSG-NMEA_UART2
UBX-CFG-INF.protocolID	CFG-INFMSG-NMEA_USB
UBX-CFG-INF.protocolID	CFG-INFMSG-UBX_SPI
UBX-CFG-INF.protocolID	CFG-INFMSG-UBX_UART1
UBX-CFG-INF.protocolID	CFG-INFMSG-UBX_UART2
UBX-CFG-INF.protocolID	CFG-INFMSG-UBX_USB
UBX-CFG-ITFM.antSetting	CFG-ITFM-ANTSETTING
UBX-CFG-ITFM.bbThreshold	CFG-ITFM-BBTHRESHOLD
UBX-CFG-ITFM.cwThreshold	CFG-ITFM-CWTHRESHOLD
UBX-CFG-ITFM.enable	CFG-ITFM-ENABLE
UBX-CFG-ITFM.enable2	CFG-ITFM-ENABLE_AUX
UBX-CFG-LOGFILTER.applyAllFilterSettings	CFG-LOGFILTER-APPLY_ALL_FILTERS
UBX-CFG-LOGFILTER.minInterval	CFG-LOGFILTER-MIN_INTERVAL
UBX-CFG-LOGFILTER.positionThreshold	CFG-LOGFILTER-POSITION_THRS
UBX-CFG-LOGFILTER.psmOncePerWakeupEnabled	CFG-LOGFILTER-ONCE_PER_WAKE_UP_ENA
UBX-CFG-LOGFILTER.recordEnabled	CFG-LOGFILTER-RECORD_ENA
UBX-CFG-LOGFILTER.speedThreshold	CFG-LOGFILTER-SPEED_THRS
UBX-CFG-LOGFILTER.timeThreshold	CFG-LOGFILTER-TIME_THRS
UBX-CFG-NAV5.cnoThresh	CFG-NAVSPG-INFIL_CNOTHRS
UBX-CFG-NAV5.cnoThreshNumSVs	CFG-NAVSPG-INFIL_NCNOTHRS
UBX-CFG-NAV5.dgnssTimeout	CFG-NAVSPG-CONSTR_DGNSSTO
UBX-CFG-NAV5.dynModel	CFG-NAVSPG-DYNMODEL
UBX-CFG-NAV5.fixMode	CFG-NAVSPG-FIXMODE
UBX-CFG-NAV5.fixedAlt	CFG-NAVSPG-CONSTR_ALT
UBX-CFG-NAV5.fixedAltVar	CFG-NAVSPG-CONSTR_ALTVAR
UBX-CFG-NAV5.minElev	CFG-NAVSPG-INFIL_MINELEV
UBX-CFG-NAV5.pAcc	CFG-NAVSPG-OUTFIL_PACC
UBX-CFG-NAV5.pDop	CFG-NAVSPG-OUTFIL_PDOP



*UBX Messages Fields and the Corresponding Configuration Items continued*

UBX Message and Field Name	Configuration Item
UBX-CFG-NAV5.staticHoldMaxDist	CFG-MOT-GNSSDIST_THRS
UBX-CFG-NAV5.staticHoldThresh	CFG-MOT-GNSSSPEED_THRS
UBX-CFG-NAV5.tAcc	CFG-NAVSPG-OUTFIL_FACC
UBX-CFG-NAV5.tAcc	CFG-NAVSPG-OUTFIL_TACC
UBX-CFG-NAV5.tDop	CFG-NAVSPG-OUTFIL_TDOP
UBX-CFG-NAV5.utcStandard	CFG-NAVSPG-UTCSTANDARD
UBX-CFG-NAVX5.ackAiding	CFG-NAVSPG-ACKAIDING
UBX-CFG-NAVX5.iniFix3D	CFG-NAVSPG-INIFIX3D
UBX-CFG-NAVX5.maxSVs	CFG-NAVSPG-INFIL_MAXSVS
UBX-CFG-NAVX5.minCNO	CFG-NAVSPG-INFIL_MINCNO
UBX-CFG-NAVX5.minSVs	CFG-NAVSPG-INFIL_MINSVS
UBX-CFG-NAVX5.usePPP	CFG-NAVSPG-USE_PPP
UBX-CFG-NAVX5.wknRollover	CFG-NAVSPG-WKNROLLOVER
UBX-CFG-NMEA.bdsTalkerId	CFG-NMEA-BDSTALKERID
UBX-CFG-NMEA.beidou	CFG-NMEA-FILT_BDS
UBX-CFG-NMEA.compat	CFG-NMEA-COMPAT
UBX-CFG-NMEA.consider	CFG-NMEA-CONSIDER
UBX-CFG-NMEA.dateFilt	CFG-NMEA-OUT_INVDATE
UBX-CFG-NMEA.glonass	CFG-NMEA-FILT_GLO
UBX-CFG-NMEA.gps	CFG-NMEA-FILT_GPS
UBX-CFG-NMEA.gpsOnlyFilter	CFG-NMEA-OUT_ONLYGPS
UBX-CFG-NMEA.gsvTalkerId	CFG-NMEA-GSVTALKERID
UBX-CFG-NMEA.highPrec	CFG-NMEA-HIGHPREC
UBX-CFG-NMEA.limit82	CFG-NMEA-LIMIT82
UBX-CFG-NMEA.mainTalkerId	CFG-NMEA-MAINTALKERID
UBX-CFG-NMEA.mskPosFilt	CFG-NMEA-OUT_MSKFIX
UBX-CFG-NMEA.nmeaVersion	CFG-NMEA-PROTVER
UBX-CFG-NMEA.numSV	CFG-NMEA-MAXSVS
UBX-CFG-NMEA.posFilt	CFG-NMEA-OUT_INVFIX
UBX-CFG-NMEA.qzss	CFG-NMEA-FILT_QZSS
UBX-CFG-NMEA.sbas	CFG-NMEA-FILT_SBAS
UBX-CFG-NMEA.svNumbering	CFG-NMEA-SVNUMBERING
UBX-CFG-NMEA.timeFilt	CFG-NMEA-OUT_INVTIME
UBX-CFG-NMEA.trackFilt	CFG-NMEA-OUT_FROZENCOD
UBX-CFG-ODO.cogLpGain	CFG-ODO-COGLPGAIN
UBX-CFG-ODO.cogMaxPosAcc	CFG-ODO-COGMAXPOSACC
UBX-CFG-ODO.cogMaxSpeed	CFG-ODO-COGMAXSPEED
UBX-CFG-ODO.outLPCog	CFG-ODO-OUTLPCOG
UBX-CFG-ODO.outLPVel	CFG-ODO-OUTLPVEL
UBX-CFG-ODO.profile	CFG-ODO-PROFILE
UBX-CFG-ODO.useCOG	CFG-ODO-USE_COG
UBX-CFG-ODO.useODO	CFG-ODO-USE_ODO
UBX-CFG-ODO.vellLpGain	CFG-ODO-VELLPGAIN
UBX-CFG-PRT.en	CFG-TXREADY-ENABLED
UBX-CFG-PRT.extendedTxTimeout	CFG-I2C-EXTENDEDTIMEOUT

*UBX Messages Fields and the Corresponding Configuration Items continued*

UBX Message and Field Name	Configuration Item
UBX-CFG-PRT.inNmea	CFG-I2CINPROT-NMEA
UBX-CFG-PRT.inProtoMask	CFG-I2C-ENABLED
UBX-CFG-PRT.inRtcm3	CFG-I2CINPROT-RTCM3X
UBX-CFG-PRT.inUbx	CFG-I2CINPROT-UBX
UBX-CFG-PRT.outNmea	CFG-I2COUTPROT-NMEA
UBX-CFG-PRT.outProtoMask	CFG-I2C-ENABLED
UBX-CFG-PRT.outRtcm3	CFG-I2COUTPROT-RTCM3X
UBX-CFG-PRT.outUbx	CFG-I2COUTPROT-UBX
UBX-CFG-PRT.pin	CFG-TXREADY-PIN
UBX-CFG-PRT.pol	CFG-TXREADY-POLARITY
UBX-CFG-PRT.slaveAddr	CFG-I2C-ADDRESS
UBX-CFG-PRT.thres	CFG-TXREADY-THRESHOLD
UBX-CFG-PRT.en	CFG-TXREADY-ENABLED
UBX-CFG-PRT.extendedTxTimeout	CFG-SPI-EXTENDEDTIMEOUT
UBX-CFG-PRT.ffCnt	CFG-SPI-MAXFF
UBX-CFG-PRT.inNmea	CFG-SPIINPROT-NMEA
UBX-CFG-PRT.inProtoMask	CFG-SPI-ENABLED
UBX-CFG-PRT.inRtcm3	CFG-SPIINPROT-RTCM3X
UBX-CFG-PRT.inUbx	CFG-SPIINPROT-UBX
UBX-CFG-PRT.outNmea	CFG-SPIOUTPROT-NMEA
UBX-CFG-PRT.outProtoMask	CFG-SPI-ENABLED
UBX-CFG-PRT.outRtcm3	CFG-SPIOUTPROT-RTCM3X
UBX-CFG-PRT.outUbx	CFG-SPIOUTPROT-UBX
UBX-CFG-PRT.pin	CFG-TXREADY-PIN
UBX-CFG-PRT.pol	CFG-TXREADY-POLARITY
UBX-CFG-PRT.spiMode	CFG-SPI-CPHASE
UBX-CFG-PRT.spiMode	CFG-SPI-CPOLARITY
UBX-CFG-PRT.thres	CFG-TXREADY-THRESHOLD
UBX-CFG-PRT.baudRate	CFG-UART1-BAUDRATE
UBX-CFG-PRT.baudRate	CFG-UART2-BAUDRATE
UBX-CFG-PRT.charLen	CFG-UART1-DATABITS
UBX-CFG-PRT.charLen	CFG-UART2-DATABITS
UBX-CFG-PRT.inNmea	CFG-UART1INPROT-NMEA
UBX-CFG-PRT.inNmea	CFG-UART2INPROT-NMEA
UBX-CFG-PRT.inProtoMask	CFG-UART1-ENABLED
UBX-CFG-PRT.inProtoMask	CFG-UART2-ENABLED
UBX-CFG-PRT.inRtcm3	CFG-UART1INPROT-RTCM3X
UBX-CFG-PRT.inRtcm3	CFG-UART2INPROT-RTCM3X
UBX-CFG-PRT.inUbx	CFG-UART1INPROT-UBX
UBX-CFG-PRT.inUbx	CFG-UART2INPROT-UBX
UBX-CFG-PRT.nStopBits	CFG-UART1-STOPBITS
UBX-CFG-PRT.nStopBits	CFG-UART2-STOPBITS
UBX-CFG-PRT.outNmea	CFG-UART1OUTPROT-NMEA
UBX-CFG-PRT.outNmea	CFG-UART2OUTPROT-NMEA
UBX-CFG-PRT.outProtoMask	CFG-UART1-ENABLED

*UBX Messages Fields and the Corresponding Configuration Items continued*

UBX Message and Field Name	Configuration Item
UBX-CFG-PRT.outProtoMask	CFG-UART2-ENABLED
UBX-CFG-PRT.outRtcm3	CFG-UART1OUTPROT-RTCM3X
UBX-CFG-PRT.outRtcm3	CFG-UART2OUTPROT-RTCM3X
UBX-CFG-PRT.outUbx	CFG-UART1OUTPROT-UBX
UBX-CFG-PRT.outUbx	CFG-UART2OUTPROT-UBX
UBX-CFG-PRT.parity	CFG-UART1-PARITY
UBX-CFG-PRT.parity	CFG-UART2-PARITY
UBX-CFG-PRT.inNmea	CFG-USBINPROT-NMEA
UBX-CFG-PRT.inProtoMask	CFG-USB-ENABLED
UBX-CFG-PRT.inRtcm3	CFG-USBINPROT-RTCM3X
UBX-CFG-PRT.inUbx	CFG-USBINPROT-UBX
UBX-CFG-PRT.outNmea	CFG-USBOUTPROT-NMEA
UBX-CFG-PRT.outProtoMask	CFG-USB-ENABLED
UBX-CFG-PRT.outRtcm3	CFG-USBOUTPROT-RTCM3X
UBX-CFG-PRT.outUbx	CFG-USBOUTPROT-UBX
UBX-CFG-RATE.measRate	CFG-RATE-MEAS
UBX-CFG-RATE.navRate	CFG-RATE-NAV
UBX-CFG-RATE.timeRef	CFG-RATE-TIMEREf
UBX-CFG-RINV.data	CFG-RINV-CHUNK0
UBX-CFG-RINV.data	CFG-RINV-CHUNK1
UBX-CFG-RINV.data	CFG-RINV-CHUNK2
UBX-CFG-RINV.data	CFG-RINV-CHUNK3
UBX-CFG-RINV.data	CFG-RINV-DATA_SIZE
UBX-CFG-RINV.flags	CFG-RINV-BINARY
UBX-CFG-RINV.flags	CFG-RINV-DUMP
UBX-CFG-TMODE3.ecefXOrLat	CFG-TMODE-ECEF_X
UBX-CFG-TMODE3.ecefXOrLat	CFG-TMODE-LAT
UBX-CFG-TMODE3.ecefXOrLatHP	CFG-TMODE-ECEF_X_HP
UBX-CFG-TMODE3.ecefXOrLatHP	CFG-TMODE-LAT_HP
UBX-CFG-TMODE3.ecefYOrLon	CFG-TMODE-ECEF_Y
UBX-CFG-TMODE3.ecefYOrLon	CFG-TMODE-LON
UBX-CFG-TMODE3.ecefYOrLonHP	CFG-TMODE-ECEF_Y_HP
UBX-CFG-TMODE3.ecefYOrLonHP	CFG-TMODE-LON_HP
UBX-CFG-TMODE3.ecefZOrAlt	CFG-TMODE-ECEF_Z
UBX-CFG-TMODE3.ecefZOrAlt	CFG-TMODE-HEIGHT
UBX-CFG-TMODE3.ecefZOrAltHP	CFG-TMODE-ECEF_Z_HP
UBX-CFG-TMODE3.ecefZOrAltHP	CFG-TMODE-HEIGHT_HP
UBX-CFG-TMODE3.fixedPosAcc	CFG-TMODE-FIXED_POS_ACC
UBX-CFG-TMODE3.flags	CFG-TMODE-MODE
UBX-CFG-TMODE3.flags	CFG-TMODE-POS_TYPE
UBX-CFG-TMODE3.svinAccLimit	CFG-TMODE-SVIN_ACC_LIMIT
UBX-CFG-TMODE3.svinMinDur	CFG-TMODE-SVIN_MIN_DUR
UBX-CFG-TP5.active	CFG-TP-TP1_ENA
UBX-CFG-TP5.alignToTow	CFG-TP-ALIGN_TO_TOW_TP1
UBX-CFG-TP5.antCableDelay	CFG-TP-ANT_CABLEDELAY

UBX Messages Fields and the Corresponding Configuration Items continued

UBX Message and Field Name	Configuration Item
UBX-CFG-TP5.freqPeriod	CFG-TP-FREQ_TP1
UBX-CFG-TP5.freqPeriod	CFG-TP-PERIOD_TP1
UBX-CFG-TP5.freqPeriodLock	CFG-TP-FREQ_LOCK_TP1
UBX-CFG-TP5.freqPeriodLock	CFG-TP-PERIOD_LOCK_TP1
UBX-CFG-TP5.gridUtcGnss	CFG-TP-TIMEGRID_TP1
UBX-CFG-TP5.isFreq	CFG-TP-PULSE_DEF
UBX-CFG-TP5.isLength	CFG-TP-PULSE_LENGTH_DEF
UBX-CFG-TP5.lockGnssFreq	CFG-TP-SYNC_GNSS_TP1
UBX-CFG-TP5.lockedOtherSet	CFG-TP-USE_LOCKED_TP1
UBX-CFG-TP5.polarity	CFG-TP-POL_TP1
UBX-CFG-TP5.pulseLenRatio	CFG-TP-DUTY_TP1
UBX-CFG-TP5.pulseLenRatio	CFG-TP-LEN_TP1
UBX-CFG-TP5.pulseLenRatioLock	CFG-TP-DUTY_LOCK_TP1
UBX-CFG-TP5.pulseLenRatioLock	CFG-TP-LEN_LOCK_TP1
UBX-CFG-TP5.userConfigDelay	CFG-TP-USER_DELAY_TP1
UBX-CFG-USB.powerConsumption	CFG-USB-POWER
UBX-CFG-USB.powerMode	CFG-USB-SELFPOW
UBX-CFG-USB.productID	CFG-USB-PRODUCT_ID
UBX-CFG-USB.productString	CFG-USB-PRODUCT_STR0
UBX-CFG-USB.productString	CFG-USB-PRODUCT_STR1
UBX-CFG-USB.productString	CFG-USB-PRODUCT_STR2
UBX-CFG-USB.productString	CFG-USB-PRODUCT_STR3
UBX-CFG-USB.serialNumber	CFG-USB-SERIAL_NO_STR0
UBX-CFG-USB.serialNumber	CFG-USB-SERIAL_NO_STR1
UBX-CFG-USB.serialNumber	CFG-USB-SERIAL_NO_STR2
UBX-CFG-USB.serialNumber	CFG-USB-SERIAL_NO_STR3
UBX-CFG-USB.vendorID	CFG-USB-VENDOR_ID
UBX-CFG-USB.vendorString	CFG-USB-VENDOR_STR0
UBX-CFG-USB.vendorString	CFG-USB-VENDOR_STR1
UBX-CFG-USB.vendorString	CFG-USB-VENDOR_STR2
UBX-CFG-USB.vendorString	CFG-USB-VENDOR_STR3

## 7 RTCM Protocol

### 7.1 RTCM3

#### 7.1.1 Supported Messages

The following RTCM 3.3 input messages are supported:

##### Supported RTCM 3.3 Input Messages

Message Type	Description
1001	L1-only GPS RTK observations
1002	Extended L1-only GPS RTK observations
1003	L1/L2 GPS RTK observations
1004	Extended L1/L2 GPS RTK observations
1005	Stationary RTK reference station ARP
1006	Stationary RTK reference station ARP with antenna height
1007	Antenna descriptor
1009	L1-only GLONASS RTK observations
1010	Extended L1-only GLONASS RTK observations
1011	L1/L2 GLONASS RTK observations
1012	Extended L1/L2 GLONASS RTK observations
1033	Receiver and antenna descriptors
1074	GPS MSM4
1075	GPS MSM5
1077	GPS MSM7
1084	GLONASS MSM4
1085	GLONASS MSM5
1087	GLONASS MSM7
1094	Galileo MSM4
1095	Galileo MSM5
1097	Galileo MSM7
1124	BeiDou MSM4
1125	BeiDou MSM5
1127	BeiDou MSM7
1230	GLONASS code-phase biases

The following RTCM 3.3 output messages are supported:

RTCM output messages are configured using the configuration items [CFG-MSGOUT-RTCM\\*](#).

##### Supported RTCM 3.3 Output Messages

Message Type	Cls/ID	Description
1005	0xF5 0x05	Stationary RTK reference station ARP
1074	0xF5 0x4A	GPS MSM4
1077	0xF5 0x4D	GPS MSM7
1084	0xF5 0x54	GLONASS MSM4
1087	0xF5 0x57	GLONASS MSM7
1094	0xF5 0x5E	Galileo MSM4
1097	0xF5 0x61	Galileo MSM7
1124	0xF5 0x7C	BeiDou MSM4

*Supported RTCM 3.3 Output Messages continued*

Message Type	Cls/ID	Description
1127	0xF5 0x7F	BeiDou MSM7
1230	0xF5 0xE6	GLONASS code-phase biases

### 7.1.2 Configuration

The configuration of the RTK rover and reference station is explained in the [Integration Manual](#).

The RTCM3 protocol can be disabled/enabled on communication interfaces by means of the configuration items, for example [CFG-UART1OUTPROT-RTCM3X](#).

### 7.1.3 Reference

The RTCM3 support is implemented according to RTCM STANDARD 10403.3 DIFFERENTIAL GNSS (GLOBAL NAVIGATION SATELLITE SYSTEMS) SERVICES - VERSION 3.

# Appendix

## A Satellite Numbering

A summary of all the SV numbering schemes is provided in the following table.

### Satellite numbering

GNSS Type	SV range	UBX gnssId:svId	UBX svId	NMEA 2.X-4.0 0 (strict)	NMEA 2.X-4.0 (extended)	NMEA 4.1+ (strict)	NMEA 4.1+ (extended)
GPS	G1-G32	0:1-32	1-32	1-32	1-32	1-32	1-32
SBAS	S120-S158	1:120-158	120-158	33-64	33-64,152-158	33-64	33-64,152-158
Galileo	E1-E36	2:1-36	211-246	-	301-336	1-36	1-36
BeiDou	B1-B37	3:1-37	159-163,33-64	-	401-437	1-37	1-37
QZSS	Q1-Q5	5:1-5	193-197	-	193-197	-	193-197
GLONASS	R1-R32, R?	6:1-32, 6:255	65-96, 255	65-96, null	65-96, null	65-96, null	65-96, null

## B UBX and NMEA Signal Identifiers

UBX and NMEA protocols uses signal identifiers (commonly abbreviated to "sigId") to distinguish between different signals from GNSS.

Signal identifiers are only valid when combined with a GNSS identifier (see [above](#)). The table below shows the range of identifiers currently supported in the firmware.

The following table shows the mapping of GNSS signals to UBX / NMEA signal identifier.

### Signal Identifiers

Signal name	UBX gnssId	UBX sigId	NMEA 4.1+ gnssId	NMEA 4.1+ sigId
GPS L1C/A*	0	0	1	1
GPS L2 CL	0	3	1	6
GPS L2 CM	0	4	1	5
Galileo E1 C*	2	0	3	7
Galileo E1 B*	2	1	3	7
Galileo E5 bl	2	5	3	2
Galileo E5 bQ	2	6	3	2
BeiDou B1I D1*	3	0	4**	1**
BeiDou B1I D2*	3	1	4**	1**
BeiDou B2I D1	3	2	4**	3**
BeiDou B2I D2	3	3	4**	3**
QZSS L1C/A*	5	0		
GLONASS L1 OF*	6	0	2	1
GLONASS L2 OF	6	2	2	3

UBX messages, that don't have an explicit sigId field, contain information about the subset of signals marked with (\*).

BeiDou gnssId and sigId are not defined in the NMEA protocol version 4.1, values shown in the table are valid for u-blox products only (\*\*).

## C Configuration Defaults

The configuration defaults given in this section apply to the receiver firmwares given below.

### C.1 u-blox 9 ZED-F9P (version 1.00 HPG 1.00)

This section lists the configuration defaults for the *u-blox 9 ZED-F9P (version 1.00 HPG 1.00)*, protocol version 27.00.

#### Geofencing Configuration (CFG-GEOFENCE-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-GEOFENCE-CONFLVL	0x20240011	E1	-	-	0 (L000)
CFG-GEOFENCE-USE_PIO	0x10240012	L	-	-	0 (false)
CFG-GEOFENCE-PINPOL	0x20240013	E1	-	-	0 (LOW_IN)
CFG-GEOFENCE-PIN	0x20240014	U1	-	-	3
CFG-GEOFENCE-USE_FENCE1	0x10240020	L	-	-	0 (false)
CFG-GEOFENCE-FENCE1_LAT	0x40240021	I4	1e-7	deg	0
CFG-GEOFENCE-FENCE1_LON	0x40240022	I4	1e-7	deg	0
CFG-GEOFENCE-FENCE1_RAD	0x40240023	U4	0.01	m	0
CFG-GEOFENCE-USE_FENCE2	0x10240030	L	-	-	0 (false)
CFG-GEOFENCE-FENCE2_LAT	0x40240031	I4	1e-7	deg	0
CFG-GEOFENCE-FENCE2_LON	0x40240032	I4	1e-7	deg	0
CFG-GEOFENCE-FENCE2_RAD	0x40240033	U4	0.01	m	0
CFG-GEOFENCE-USE_FENCE3	0x10240040	L	-	-	0 (false)
CFG-GEOFENCE-FENCE3_LAT	0x40240041	I4	1e-7	deg	0
CFG-GEOFENCE-FENCE3_LON	0x40240042	I4	1e-7	deg	0
CFG-GEOFENCE-FENCE3_RAD	0x40240043	U4	0.01	m	0
CFG-GEOFENCE-USE_FENCE4	0x10240050	L	-	-	0 (false)
CFG-GEOFENCE-FENCE4_LAT	0x40240051	I4	1e-7	deg	0
CFG-GEOFENCE-FENCE4_LON	0x40240052	I4	1e-7	deg	0
CFG-GEOFENCE-FENCE4_RAD	0x40240053	U4	0.01	m	0

#### Hardware Configuration (CFG-HW-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-HW-ANT_CFG_VOLTCTRL	0x10a3002e	L	-	-	0 (false)
CFG-HW-ANT_CFG_SHORTDET	0x10a3002f	L	-	-	0 (false)
CFG-HW-ANT_CFG_OPENDT	0x10a30031	L	-	-	0 (false)
CFG-HW-ANT_CFG_PWRDOWN	0x10a30033	L	-	-	0 (false)
CFG-HW-ANT_CFG_RECOVER	0x10a30035	L	-	-	0 (false)
CFG-HW-ANT_SUP_SWITCH_PIN	0x20a30036	U1	-	-	16
CFG-HW-ANT_SUP_SHORT_PIN	0x20a30037	U1	-	-	15
CFG-HW-ANT_SUP_OPEN_PIN	0x20a30038	U1	-	-	8
CFG-HW-RFDC_TIMEOUT	0x20a30050	U1	-	s	0

#### Configuration of the I2C Interface (CFG-I2C-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-I2C-ADDRESS	0x20510001	U1	-	-	132
CFG-I2C-EXTENDEDTIMEOUT	0x10510002	L	-	-	0 (false)
CFG-I2C-ENABLED	0x10510003	L	-	-	1 (true)



### Input Protocol Configuration of the I2C Interface (CFG-I2CINPROT-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-I2CINPROT-UBX	0x10710001	L	-	-	1 (true)
CFG-I2CINPROT-NMEA	0x10710002	L	-	-	1 (true)
CFG-I2CINPROT-RTCM3X	0x10710004	L	-	-	1 (true)

### Output Protocol Configuration of the I2C Interface (CFG-I2COUTPROT-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-I2COUTPROT-UBX	0x10720001	L	-	-	1 (true)
CFG-I2COUTPROT-NMEA	0x10720002	L	-	-	1 (true)
CFG-I2COUTPROT-RTCM3X	0x10720004	L	-	-	1 (true)

### Inf Message Configuration (CFG-INFMSG-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-INFMSG-UBX_I2C	0x20920001	X1	-	-	0x00
CFG-INFMSG-UBX_UART1	0x20920002	X1	-	-	0x00
CFG-INFMSG-UBX_UART2	0x20920003	X1	-	-	0x00
CFG-INFMSG-UBX_USB	0x20920004	X1	-	-	0x00
CFG-INFMSG-UBX_SPI	0x20920005	X1	-	-	0x00
CFG-INFMSG-NMEA_I2C	0x20920006	X1	-	-	0x07 (ERROR   WARNING   NOTICE)
CFG-INFMSG-NMEA_UART1	0x20920007	X1	-	-	0x07 (ERROR   WARNING   NOTICE)
CFG-INFMSG-NMEA_UART2	0x20920008	X1	-	-	0x07 (ERROR   WARNING   NOTICE)
CFG-INFMSG-NMEA_USB	0x20920009	X1	-	-	0x07 (ERROR   WARNING   NOTICE)
CFG-INFMSG-NMEA_SPI	0x2092000a	X1	-	-	0x07 (ERROR   WARNING   NOTICE)

### Jamming/Interference Monitor configuration (CFG-ITFM-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-ITFM-BBTHRESHOLD	0x20410001	U1	-	-	3
CFG-ITFM-CWTHRESHOLD	0x20410002	U1	-	-	15
CFG-ITFM-ENABLE	0x1041000d	L	-	-	0 (false)
CFG-ITFM-ANTSETTING	0x20410010	E1	-	-	0 (UNKNOWN)
CFG-ITFM-ENABLE_AUX	0x10410013	L	-	-	0 (false)

### Data Logger Configuration (CFG-LOGFILTER-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-LOGFILTER-RECORD_ENA	0x10de0002	L	-	-	0 (false)
CFG-LOGFILTER-ONCE_PER_WAKE_UP_ENA	0x10de0003	L	-	-	0 (false)
CFG-LOGFILTER-APPLY_ALL_FILTERS	0x10de0004	L	-	-	0 (false)
CFG-LOGFILTER-MIN_INTERVAL	0x30de0005	U2	-	s	0
CFG-LOGFILTER-TIME_THRS	0x30de0006	U2	-	s	0
CFG-LOGFILTER-SPEED_THRS	0x30de0007	U2	-	m/s	0
CFG-LOGFILTER-POSITION_THRS	0x40de0008	U4	-	m	0

### Motion Detector Configuration (CFG-MOT-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-MOT-GNSSSPEED_THRS	0x20250038	U1	0.01	m/s	0
CFG-MOT-GNSSDIST_THRS	0x3025003b	U2	-	-	0

### Message Output Configuration (CFG-MSGOUT-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-MSGOUT-NMEA_ID_DTM_I2C	0x209100a6	U1	-	-	0
CFG-MSGOUT-NMEA_ID_DTM_SPI	0x209100aa	U1	-	-	0
CFG-MSGOUT-NMEA_ID_DTM_UART1	0x209100a7	U1	-	-	0
CFG-MSGOUT-NMEA_ID_DTM_UART2	0x209100a8	U1	-	-	0
CFG-MSGOUT-NMEA_ID_DTM_USB	0x209100a9	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GBS_I2C	0x209100dd	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GBS_SPI	0x209100e1	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GBS_UART1	0x209100de	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GBS_UART2	0x209100df	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GBS_USB	0x209100e0	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GGA_I2C	0x209100ba	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GGA_SPI	0x209100be	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GGA_UART1	0x209100bb	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GGA_UART2	0x209100bc	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GGA_USB	0x209100bd	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GLL_I2C	0x209100c9	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GLL_SPI	0x209100cd	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GLL_UART1	0x209100ca	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GLL_UART2	0x209100cb	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GLL_USB	0x209100cc	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GNS_I2C	0x209100b5	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GNS_SPI	0x209100b9	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GNS_UART1	0x209100b6	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GNS_UART2	0x209100b7	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GNS_USB	0x209100b8	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GRS_I2C	0x209100ce	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GRS_SPI	0x209100d2	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GRS_UART1	0x209100cf	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GRS_UART2	0x209100d0	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GRS_USB	0x209100d1	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GSA_I2C	0x209100bf	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSA_SPI	0x209100c3	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSA_UART1	0x209100c0	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSA_UART2	0x209100c1	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSA_USB	0x209100c2	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GST_I2C	0x209100d3	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GST_SPI	0x209100d7	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GST_UART1	0x209100d4	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GST_UART2	0x209100d5	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GST_USB	0x209100d6	U1	-	-	0

Message Output Configuration (CFG-MSGOUT-\*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-MSGOUT-NMEA_ID_GSV_I2C	0x209100c4	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSV_SPI	0x209100c8	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSV_UART1	0x209100c5	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSV_UART2	0x209100c6	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSV_USB	0x209100c7	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RMC_I2C	0x209100ab	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RMC_SPI	0x209100af	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RMC_UART1	0x209100ac	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RMC_UART2	0x209100ad	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RMC_USB	0x209100ae	U1	-	-	1
CFG-MSGOUT-NMEA_ID_VLW_I2C	0x209100e7	U1	-	-	0
CFG-MSGOUT-NMEA_ID_VLW_SPI	0x209100eb	U1	-	-	0
CFG-MSGOUT-NMEA_ID_VLW_UART1	0x209100e8	U1	-	-	0
CFG-MSGOUT-NMEA_ID_VLW_UART2	0x209100e9	U1	-	-	0
CFG-MSGOUT-NMEA_ID_VLW_USB	0x209100ea	U1	-	-	0
CFG-MSGOUT-NMEA_ID_VTG_I2C	0x209100b0	U1	-	-	1
CFG-MSGOUT-NMEA_ID_VTG_SPI	0x209100b4	U1	-	-	1
CFG-MSGOUT-NMEA_ID_VTG_UART1	0x209100b1	U1	-	-	1
CFG-MSGOUT-NMEA_ID_VTG_UART2	0x209100b2	U1	-	-	1
CFG-MSGOUT-NMEA_ID_VTG_USB	0x209100b3	U1	-	-	1
CFG-MSGOUT-NMEA_ID_ZDA_I2C	0x209100d8	U1	-	-	0
CFG-MSGOUT-NMEA_ID_ZDA_SPI	0x209100dc	U1	-	-	0
CFG-MSGOUT-NMEA_ID_ZDA_UART1	0x209100d9	U1	-	-	0
CFG-MSGOUT-NMEA_ID_ZDA_UART2	0x209100da	U1	-	-	0
CFG-MSGOUT-NMEA_ID_ZDA_USB	0x209100db	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_I2C	0x209100ec	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_SPI	0x209100f0	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_UART1	0x209100ed	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_UART2	0x209100ee	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_USB	0x209100ef	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_I2C	0x209100f1	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_SPI	0x209100f5	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_UART1	0x209100f2	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_UART2	0x209100f3	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_USB	0x209100f4	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYT_I2C	0x209100f6	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYT_SPI	0x209100fa	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYT_UART1	0x209100f7	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYT_UART2	0x209100f8	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYT_USB	0x209100f9	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1005_I2C	0x209102bd	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1005_SPI	0x209102c1	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1005_UART1	0x209102be	U1	-	-	0

Message Output Configuration (CFG-MSGOUT-\*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-MSGOUT-RTCM_3X_TYPE1005_UART2	0x209102bf	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1005_USB	0x209102c0	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1074_I2C	0x2091035e	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1074_SPI	0x20910362	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1074_UART1	0x2091035f	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1074_UART2	0x20910360	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1074_USB	0x20910361	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1077_I2C	0x209102cc	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1077_SPI	0x209102d0	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1077_UART1	0x209102cd	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1077_UART2	0x209102ce	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1077_USB	0x209102cf	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1084_I2C	0x20910363	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1084_SPI	0x20910367	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1084_UART1	0x20910364	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1084_UART2	0x20910365	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1084_USB	0x20910366	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1087_I2C	0x209102d1	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1087_SPI	0x209102d5	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1087_UART1	0x209102d2	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1087_UART2	0x209102d3	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1087_USB	0x209102d4	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1094_I2C	0x20910368	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1094_SPI	0x2091036c	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1094_UART1	0x20910369	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1094_UART2	0x2091036a	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1094_USB	0x2091036b	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1097_I2C	0x20910318	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1097_SPI	0x2091031c	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1097_UART1	0x20910319	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1097_UART2	0x2091031a	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1097_USB	0x2091031b	U1	-	-	0

Message Output Configuration (CFG-MSGOUT-\*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-MSGOUT-RTCM_3X_TYPE1124_I2C	0x2091036d	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1124_SPI	0x20910371	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1124_UART1	0x2091036e	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1124_UART2	0x2091036f	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1124_USB	0x20910370	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1127_I2C	0x209102d6	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1127_SPI	0x209102da	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1127_UART1	0x209102d7	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1127_UART2	0x209102d8	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1127_USB	0x209102d9	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1230_I2C	0x20910303	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1230_SPI	0x20910307	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1230_UART1	0x20910304	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1230_UART2	0x20910305	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1230_USB	0x20910306	U1	-	-	0
CFG-MSGOUT-UBX_LOG_INFO_I2C	0x20910259	U1	-	-	0
CFG-MSGOUT-UBX_LOG_INFO_SPI	0x2091025d	U1	-	-	0
CFG-MSGOUT-UBX_LOG_INFO_UART1	0x2091025a	U1	-	-	0
CFG-MSGOUT-UBX_LOG_INFO_UART2	0x2091025b	U1	-	-	0
CFG-MSGOUT-UBX_LOG_INFO_USB	0x2091025c	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMS_I2C	0x2091034f	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMS_SPI	0x20910353	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMS_UART1	0x20910350	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMS_UART2	0x20910351	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMS_USB	0x20910352	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_I2C	0x209101b9	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_SPI	0x209101bd	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_UART1	0x209101ba	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_UART2	0x209101bb	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_USB	0x209101bc	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_I2C	0x20910354	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_SPI	0x20910358	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_UART1	0x20910355	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_UART2	0x20910356	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_USB	0x20910357	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW_I2C	0x209101b4	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW_SPI	0x209101b8	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW_UART1	0x209101b5	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW_UART2	0x209101b6	U1	-	-	0

Message Output Configuration (CFG-MSGOUT-\*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-MSGOUT-UBX_MON_HW_USB	0x209101b7	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_I2C	0x209101a5	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_SPI	0x209101a9	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_UART1	0x209101a6	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_UART2	0x209101a7	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_USB	0x209101a8	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_I2C	0x20910196	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_SPI	0x2091019a	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_UART1	0x20910197	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_UART2	0x20910198	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_USB	0x20910199	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_I2C	0x20910359	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_SPI	0x2091035d	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_UART1	0x2091035a	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_UART2	0x2091035b	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_USB	0x2091035c	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_I2C	0x209101a0	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_SPI	0x209101a4	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_UART1	0x209101a1	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_UART2	0x209101a2	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_USB	0x209101a3	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXR_I2C	0x20910187	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXR_SPI	0x2091018b	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXR_UART1	0x20910188	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXR_UART2	0x20910189	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXR_USB	0x2091018a	U1	-	-	0
CFG-MSGOUT-UBX_MON_TXBUF_I2C	0x2091019b	U1	-	-	0
CFG-MSGOUT-UBX_MON_TXBUF_SPI	0x2091019f	U1	-	-	0
CFG-MSGOUT-UBX_MON_TXBUF_UART1	0x2091019c	U1	-	-	0
CFG-MSGOUT-UBX_MON_TXBUF_UART2	0x2091019d	U1	-	-	0
CFG-MSGOUT-UBX_MON_TXBUF_USB	0x2091019e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_CLOCK_I2C	0x20910065	U1	-	-	0
CFG-MSGOUT-UBX_NAV_CLOCK_SPI	0x20910069	U1	-	-	0
CFG-MSGOUT-UBX_NAV_CLOCK_UART1	0x20910066	U1	-	-	0
CFG-MSGOUT-UBX_NAV_CLOCK_UART2	0x20910067	U1	-	-	0
CFG-MSGOUT-UBX_NAV_CLOCK_USB	0x20910068	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_I2C	0x20910038	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_SPI	0x2091003c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_UART1	0x20910039	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_UART2	0x2091003a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_USB	0x2091003b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EOE_I2C	0x2091015f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EOE_SPI	0x20910163	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EOE_UART1	0x20910160	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EOE_UART2	0x20910161	U1	-	-	0

Message Output Configuration (CFG-MSGOUT-\*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-MSGOUT-UBX_NAV_EOE_USB	0x20910162	U1	-	-	0
CFG-MSGOUT-UBX_NAV_GEOFENCE_I2C	0x209100a1	U1	-	-	0
CFG-MSGOUT-UBX_NAV_GEOFENCE_SPI	0x209100a5	U1	-	-	0
CFG-MSGOUT-UBX_NAV_GEOFENCE_UART1	0x209100a2	U1	-	-	0
CFG-MSGOUT-UBX_NAV_GEOFENCE_UART2	0x209100a3	U1	-	-	0
CFG-MSGOUT-UBX_NAV_GEOFENCE_USB	0x209100a4	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSECEF_I2C	0x2091002e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSECEF_SPI	0x20910032	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSECEF_UART1	0x2091002f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSECEF_UART2	0x20910030	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSECEF_USB	0x20910031	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSLLH_I2C	0x20910033	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSLLH_SPI	0x20910037	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSLLH_UART1	0x20910034	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSLLH_UART2	0x20910035	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSLLH_USB	0x20910036	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ODO_I2C	0x2091007e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ODO_SPI	0x20910082	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ODO_UART1	0x2091007f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ODO_UART2	0x20910080	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ODO_USB	0x20910081	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_I2C	0x20910010	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_SPI	0x20910014	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_UART1	0x20910011	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_UART2	0x20910012	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_USB	0x20910013	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_I2C	0x20910024	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_SPI	0x20910028	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_UART1	0x20910025	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_UART2	0x20910026	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_USB	0x20910027	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_I2C	0x20910029	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_SPI	0x2091002d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_UART1	0x2091002a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_UART2	0x2091002b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_USB	0x2091002c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVT_I2C	0x20910006	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVT_SPI	0x2091000a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVT_UART1	0x20910007	U1	-	-	0



Message Output Configuration (CFG-MSGOUT-\*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-MSGOUT-UBX_NAV_PVT_UART2	0x20910008	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVT_USB	0x20910009	U1	-	-	0
CFG-MSGOUT-UBX_NAV_RELPOSNED_I2C	0x2091008d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_RELPOSNED_SPI	0x20910091	U1	-	-	0
CFG-MSGOUT-UBX_NAV_RELPOSNED_UART1	0x2091008e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_RELPOSNED_UART2	0x2091008f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_RELPOSNED_USB	0x20910090	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SAT_I2C	0x20910015	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SAT_SPI	0x20910019	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SAT_UART1	0x20910016	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SAT_UART2	0x20910017	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SAT_USB	0x20910018	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_I2C	0x20910345	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_SPI	0x20910349	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_UART1	0x20910346	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_UART2	0x20910347	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_USB	0x20910348	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_I2C	0x2091001a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_SPI	0x2091001e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_UART1	0x2091001b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_UART2	0x2091001c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_USB	0x2091001d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SVIN_I2C	0x20910088	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SVIN_SPI	0x2091008c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SVIN_UART1	0x20910089	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SVIN_UART2	0x2091008a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SVIN_USB	0x2091008b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_I2C	0x20910051	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_SPI	0x20910055	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_UART1	0x20910052	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_UART2	0x20910053	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_USB	0x20910054	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_I2C	0x20910056	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_SPI	0x2091005a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_UART1	0x20910057	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_UART2	0x20910058	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_USB	0x20910059	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_I2C	0x2091004c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_SPI	0x20910050	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_UART1	0x2091004d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_UART2	0x2091004e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_USB	0x2091004f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGPS_I2C	0x20910047	U1	-	-	0



Message Output Configuration (CFG-MSGOUT-\*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-MSGOUT-UBX_NAV_TIMEGPS_SPI	0x2091004b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGPS_UART1	0x20910048	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGPS_UART2	0x20910049	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGPS_USB	0x2091004a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMELS_I2C	0x20910060	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMELS_SPI	0x20910064	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMELS_UART1	0x20910061	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMELS_UART2	0x20910062	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMELS_USB	0x20910063	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_I2C	0x2091005b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_SPI	0x2091005f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_UART1	0x2091005c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_UART2	0x2091005d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_USB	0x2091005e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_I2C	0x2091003d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_SPI	0x20910041	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_UART1	0x2091003e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_UART2	0x2091003f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_USB	0x20910040	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_I2C	0x20910042	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_SPI	0x20910046	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_UART1	0x20910043	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_UART2	0x20910044	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_USB	0x20910045	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASX_I2C	0x20910204	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASX_SPI	0x20910208	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASX_UART1	0x20910205	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASX_UART2	0x20910206	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASX_USB	0x20910207	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RAWX_I2C	0x209102a4	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RAWX_SPI	0x209102a8	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RAWX_UART1	0x209102a5	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RAWX_UART2	0x209102a6	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RAWX_USB	0x209102a7	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_I2C	0x2091025e	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_SPI	0x20910262	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_UART1	0x2091025f	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_UART2	0x20910260	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_USB	0x20910261	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RTCM_I2C	0x20910268	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RTCM_SPI	0x2091026c	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RTCM_UART1	0x20910269	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RTCM_UART2	0x2091026a	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RTCM_USB	0x2091026b	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_I2C	0x20910231	U1	-	-	0

#### Message Output Configuration (CFG-MSGOUT-\*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-MSGOUT-UBX_RXM_SFRBX_SPI	0x20910235	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_UART1	0x20910232	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_UART2	0x20910233	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_USB	0x20910234	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_I2C	0x20910178	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_SPI	0x2091017c	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_UART1	0x20910179	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_UART2	0x2091017a	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_USB	0x2091017b	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_I2C	0x2091017d	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_SPI	0x20910181	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_UART1	0x2091017e	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_UART2	0x2091017f	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_USB	0x20910180	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_I2C	0x20910092	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_SPI	0x20910096	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_UART1	0x20910093	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_UART2	0x20910094	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_USB	0x20910095	U1	-	-	0

#### High Precision Navigation Configuration (CFG-NAVHPG-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-NAVHPG-DGNSSMODE	0x20140011	E1	-	-	3 (RTK_FIXED)

#### Standard Precision Navigation Configuration (CFG-NAVSPG-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-NAVSPG-FIXMODE	0x20110011	E1	-	-	3 (AUTO)
CFG-NAVSPG-INIFIX3D	0x10110013	L	-	-	0 (false)
CFG-NAVSPG-WKNROLLOVER	0x30110017	U2	-	-	2014
CFG-NAVSPG-USE_PPP	0x10110019	L	-	-	0 (false)
CFG-NAVSPG-UTCSTANDARD	0x2011001c	E1	-	-	0 (AUTO)
CFG-NAVSPG-DYNMODEL	0x20110021	E1	-	-	0 (PORT)
CFG-NAVSPG-ACKAIDING	0x10110025	L	-	-	0 (false)
CFG-NAVSPG-USE_USRDAT	0x10110061	L	-	-	0 (false)
CFG-NAVSPG-USRDAT_MAJA	0x50110062	R8	-	m	6378137
CFG-NAVSPG-USRDAT_FLAT	0x50110063	R8	-	-	298.25722356300002502
CFG-NAVSPG-USRDAT_DX	0x40110064	R4	-	m	0
CFG-NAVSPG-USRDAT_DY	0x40110065	R4	-	m	0
CFG-NAVSPG-USRDAT_DZ	0x40110066	R4	-	m	0
CFG-NAVSPG-USRDAT_ROT_X	0x40110067	R4	-	arcsec	0
CFG-NAVSPG-USRDAT_ROT_Y	0x40110068	R4	-	arcsec	0
CFG-NAVSPG-USRDAT_ROT_Z	0x40110069	R4	-	arcsec	0
CFG-NAVSPG-USRDAT_SCALE	0x4011006a	R4	-	ppm	0
CFG-NAVSPG-INFIL_MINSVS	0x201100a1	U1	-	-	3
CFG-NAVSPG-INFIL_MAXSVS	0x201100a2	U1	-	-	32
CFG-NAVSPG-INFIL_MINCNO	0x201100a3	U1	-	dBHz	6

## Standard Precision Navigation Configuration (CFG-NAVSPG-\*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-NAVSPG-INFIL_MINELEV	0x201100a4	I1	-	deg	10
CFG-NAVSPG-INFIL_NCNOTHRS	0x201100aa	U1	-	-	0
CFG-NAVSPG-INFIL_CNOTHRS	0x201100ab	U1	-	-	0
CFG-NAVSPG-OUTFIL_PDOP	0x301100b1	U2	0.1	-	250
CFG-NAVSPG-OUTFIL_TDOP	0x301100b2	U2	0.1	-	250
CFG-NAVSPG-OUTFIL_PACC	0x301100b3	U2	-	m	100
CFG-NAVSPG-OUTFIL_TACC	0x301100b4	U2	-	m	350
CFG-NAVSPG-OUTFIL_FACC	0x301100b5	U2	0.01	m/s	150
CFG-NAVSPG-CONSTR_ALT	0x401100c1	I4	0.01	m	0
CFG-NAVSPG-CONSTR_ALTVAR	0x401100c2	U4	0. 0001	m^2	10000
CFG-NAVSPG-CONSTR_DGNSSTO	0x201100c4	U1	-	s	60

## NMEA Protocol Configuration (CFG-NMEA-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-NMEA-PROTVER	0x20930001	E1	-	-	41 (V41)
CFG-NMEA-MAXSVS	0x20930002	E1	-	-	0 (UNLIM)
CFG-NMEA-COMPAT	0x10930003	L	-	-	0 (false)
CFG-NMEA-CONSIDER	0x10930004	L	-	-	1 (true)
CFG-NMEA-LIMIT82	0x10930005	L	-	-	0 (false)
CFG-NMEA-HIGHPREC	0x10930006	L	-	-	0 (false)
CFG-NMEA-SVNUMBERING	0x20930007	E1	-	-	0 (STRICT)
CFG-NMEA-FILT_GPS	0x10930011	L	-	-	0 (false)
CFG-NMEA-FILT_SBAS	0x10930012	L	-	-	0 (false)
CFG-NMEA-FILT_QZSS	0x10930015	L	-	-	0 (false)
CFG-NMEA-FILT_GLO	0x10930016	L	-	-	0 (false)
CFG-NMEA-FILT_BDS	0x10930017	L	-	-	0 (false)
CFG-NMEA-OUT_INVFIX	0x10930021	L	-	-	0 (false)
CFG-NMEA-OUT_MSKFIX	0x10930022	L	-	-	0 (false)
CFG-NMEA-OUT_INVTIME	0x10930023	L	-	-	0 (false)
CFG-NMEA-OUT_INVDATE	0x10930024	L	-	-	0 (false)
CFG-NMEA-OUT_ONLYGPS	0x10930025	L	-	-	0 (false)
CFG-NMEA-OUT_FROZENCOD	0x10930026	L	-	-	0 (false)
CFG-NMEA-MAINTALKERID	0x20930031	E1	-	-	0 (AUTO)
CFG-NMEA-GSVTALKERID	0x20930032	E1	-	-	0 (GNSS)
CFG-NMEA-BDSTALKERID	0x30930033	U2	-	-	0

## Odometer and Low-Speed Course Over Ground Filter Configuration (CFG-ODO-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-ODO-USE_ODO	0x10220001	L	-	-	0 (false)
CFG-ODO-USE_COG	0x10220002	L	-	-	0 (false)
CFG-ODO-OUTLPVEL	0x10220003	L	-	-	0 (false)
CFG-ODO-OUTLPCOG	0x10220004	L	-	-	0 (false)
CFG-ODO-PROFILE	0x20220005	E1	-	-	0 (RUN)
CFG-ODO-COGMAXSPEED	0x20220021	U1	-	m/s	10
CFG-ODO-COGMAXPOSACC	0x20220022	U1	-	-	50

#### Odometer and Low-Speed Course Over Ground Filter Configuration (CFG-ODO-\*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-ODO-VELLPGAIN	0x20220031	U1	-	-	153
CFG-ODO-COGLPGAIN	0x20220032	U1	-	-	76

#### Navigation and Measurement Rate Configuration (CFG-RATE-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-RATE-MEAS	0x30210001	U2	0.001	s	1000
CFG-RATE-NAV	0x30210002	U2	-	-	1
CFG-RATE-TIMEREFF	0x20210003	E1	-	-	1 (GPS)

#### Remote Inventory (CFG-RINV-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-RINV-DUMP	0x10c70001	L	-	-	0 (false)
CFG-RINV-BINARY	0x10c70002	L	-	-	0 (false)
CFG-RINV-DATA_SIZE	0x20c70003	U1	-	-	22
CFG-RINV-CHUNK0	0x50c70004	X8	-	-	0x203a656369746f4e ("Notice: ")
CFG-RINV-CHUNK1	0x50c70005	X8	-	-	0x2061746164206f6e ("no data ")
CFG-RINV-CHUNK2	0x50c70006	X8	-	-	0x0000216465766173 ("saved!\0\0")
CFG-RINV-CHUNK3	0x50c70007	X8	-	-	0x0000000000000000

#### Satellite Systems (GNSS) Signal Configuration (CFG-SIGNAL-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-SIGNAL-GPS_ENA	0x1031001f	L	-	-	1 (true)
CFG-SIGNAL-GPS_L1CA_ENA	0x10310001	L	-	-	1 (true)
CFG-SIGNAL-GPS_L2C_ENA	0x10310003	L	-	-	1 (true)
CFG-SIGNAL-GAL_ENA	0x10310021	L	-	-	1 (true)
CFG-SIGNAL-GAL_E1_ENA	0x10310007	L	-	-	1 (true)
CFG-SIGNAL-GAL_E5B_ENA	0x1031000a	L	-	-	1 (true)
CFG-SIGNAL-BDS_ENA	0x10310022	L	-	-	1 (true)
CFG-SIGNAL-BDS_B1_ENA	0x1031000d	L	-	-	1 (true)
CFG-SIGNAL-BDS_B2_ENA	0x1031000e	L	-	-	0 (false)
CFG-SIGNAL-QZSS_ENA	0x10310024	L	-	-	1 (true)
CFG-SIGNAL-QZSS_L1CA_ENA	0x10310012	L	-	-	1 (true)
CFG-SIGNAL-QZSS_L2C_ENA	0x10310015	L	-	-	1 (true)
CFG-SIGNAL-GLO_ENA	0x10310025	L	-	-	1 (true)
CFG-SIGNAL-GLO_L1_ENA	0x10310018	L	-	-	1 (true)
CFG-SIGNAL-GLO_L2_ENA	0x1031001a	L	-	-	1 (true)

#### Configuration of the SPI Interface (CFG-SPI-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-SPI-MAXFF	0x20640001	U1	-	-	50
CFG-SPI-CPOLARITY	0x10640002	L	-	-	0 (false)
CFG-SPI-CPHASE	0x10640003	L	-	-	0 (false)
CFG-SPI-EXTENDEDTIMEOUT	0x10640005	L	-	-	0 (false)

#### Configuration of the SPI Interface (CFG-SPI-\*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-SPI-ENABLED	0x10640006	L	-	-	0 (false)

#### Input Protocol Configuration of the SPI Interface (CFG-SPIINPROT-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-SPIINPROT-UBX	0x10790001	L	-	-	1 (true)
CFG-SPIINPROT-NMEA	0x10790002	L	-	-	1 (true)
CFG-SPIINPROT-RTCM3X	0x10790004	L	-	-	1 (true)

#### Output Protocol Configuration of the SPI Interface (CFG-SPIOUTPROT-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-SPIOUTPROT-UBX	0x107a0001	L	-	-	1 (true)
CFG-SPIOUTPROT-NMEA	0x107a0002	L	-	-	1 (true)
CFG-SPIOUTPROT-RTCM3X	0x107a0004	L	-	-	1 (true)

#### Time Mode Configuration (CFG-TMODE-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-TMODE-MODE	0x20030001	E1	-	-	0 (DISABLED)
CFG-TMODE-POS_TYPE	0x20030002	E1	-	-	0 (ECEF)
CFG-TMODE-ECEF_X	0x40030003	I4	-	cm	0
CFG-TMODE-ECEF_Y	0x40030004	I4	-	cm	0
CFG-TMODE-ECEF_Z	0x40030005	I4	-	cm	0
CFG-TMODE-ECEF_X_HP	0x20030006	I1	0.1	mm	0
CFG-TMODE-ECEF_Y_HP	0x20030007	I1	0.1	mm	0
CFG-TMODE-ECEF_Z_HP	0x20030008	I1	0.1	mm	0
CFG-TMODE-LAT	0x40030009	I4	1e-7	deg	0
CFG-TMODE-LON	0x4003000a	I4	1e-7	deg	0
CFG-TMODE-HEIGHT	0x4003000b	I4	-	cm	0
CFG-TMODE-LAT_HP	0x2003000c	I1	1e-9	deg	0
CFG-TMODE-LON_HP	0x2003000d	I1	1e-9	deg	0
CFG-TMODE-HEIGHT_HP	0x2003000e	I1	0.1	mm	0
CFG-TMODE-FIXED_POS_ACC	0x4003000f	U4	0.1	mm	0
CFG-TMODE-SVIN_MIN_DUR	0x40030010	U4	-	s	0
CFG-TMODE-SVIN_ACC_LIMIT	0x40030011	U4	0.1	mm	0

#### Timepulse Configuration (CFG-TP-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-TP-PULSE_DEF	0x20050023	E1	-	-	0 (PERIOD)
CFG-TP-PULSE_LENGTH_DEF	0x20050030	E1	-	-	1 (LENGTH)
CFG-TP-ANT_CABLEDELAY	0x30050001	I2	0. 00000 0001	s	50
CFG-TP-PERIOD_TP1	0x40050002	U4	0. 00000 1	s	1000000

#### Timepulse Configuration (CFG-TP-\*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-TP-PERIOD_LOCK_TP1	0x40050003	U4	0. 00000 1	s	1000000
CFG-TP-FREQ_TP1	0x40050024	U4	-	Hz	1
CFG-TP-FREQ_LOCK_TP1	0x40050025	U4	-	Hz	1
CFG-TP-LEN_TP1	0x40050004	U4	0. 00000 1	s	0
CFG-TP-LEN_LOCK_TP1	0x40050005	U4	0. 00000 1	s	100000
CFG-TP-DUTY_TP1	0x5005002a	R8	-	%	0
CFG-TP-DUTY_LOCK_TP1	0x5005002b	R8	-	%	10
CFG-TP-USER_DELAY_TP1	0x40050006	I4	0. 00000 0001	s	0
CFG-TP-TP1_ENA	0x10050007	L	-	-	1 (true)
CFG-TP-SYNC_GNSS_TP1	0x10050008	L	-	-	1 (true)
CFG-TP-USE_LOCKED_TP1	0x10050009	L	-	-	1 (true)
CFG-TP-ALIGN_TO_TOW_TP1	0x1005000a	L	-	-	1 (true)
CFG-TP-POL_TP1	0x1005000b	L	-	-	1 (true)
CFG-TP-TIMEGRID_TP1	0x2005000c	E1	-	-	0 (UTC)

#### Tx-Ready Configuration (CFG-TXREADY-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-TXREADY-ENABLED	0x10a20001	L	-	-	0 (false)
CFG-TXREADY-POLARITY	0x10a20002	L	-	-	0 (false)
CFG-TXREADY-PIN	0x20a20003	U1	-	-	0
CFG-TXREADY-THRESHOLD	0x30a20004	U2	-	-	0
CFG-TXREADY-INTERFACE	0x20a20005	E1	-	-	0 (I2C)

#### Configuration of the UART1 Interface (CFG-UART1-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-UART1-BAUDRATE	0x40520001	U4	-	-	38400
CFG-UART1-STOPBITS	0x20520002	E1	-	-	1 (ONE)
CFG-UART1-DATABITS	0x20520003	E1	-	-	0 (EIGHT)
CFG-UART1-PARITY	0x20520004	E1	-	-	0 (NONE)
CFG-UART1-ENABLED	0x10520005	L	-	-	1 (true)

#### Input Protocol Configuration of the UART1 Interface (CFG-UART1INPROT-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-UART1INPROT-UBX	0x10730001	L	-	-	1 (true)
CFG-UART1INPROT-NMEA	0x10730002	L	-	-	1 (true)
CFG-UART1INPROT-RTCM3X	0x10730004	L	-	-	1 (true)

### Output Protocol Configuration of the UART1 Interface (CFG-UART1OUTPROT-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-UART1OUTPROT-UBX	0x10740001	L	-	-	1 (true)
CFG-UART1OUTPROT-NMEA	0x10740002	L	-	-	1 (true)
CFG-UART1OUTPROT-RTCM3X	0x10740004	L	-	-	1 (true)

### Configuration of the UART2 Interface (CFG-UART2-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-UART2-BAUDRATE	0x40530001	U4	-	-	38400
CFG-UART2-STOPBITS	0x20530002	E1	-	-	1 (ONE)
CFG-UART2-DATABITS	0x20530003	E1	-	-	0 (EIGHT)
CFG-UART2-PARITY	0x20530004	E1	-	-	0 (NONE)
CFG-UART2-ENABLED	0x10530005	L	-	-	1 (true)
CFG-UART2-REMAP	0x10530006	L	-	-	0 (false)

### Input Protocol Configuration of the UART2 Interface (CFG-UART2INPROT-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-UART2INPROT-UBX	0x10750001	L	-	-	0 (false)
CFG-UART2INPROT-NMEA	0x10750002	L	-	-	0 (false)
CFG-UART2INPROT-RTCM3X	0x10750004	L	-	-	1 (true)

### Output Protocol Configuration of the UART2 Interface (CFG-UART2OUTPROT-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-UART2OUTPROT-UBX	0x10760001	L	-	-	0 (false)
CFG-UART2OUTPROT-NMEA	0x10760002	L	-	-	0 (false)
CFG-UART2OUTPROT-RTCM3X	0x10760004	L	-	-	1 (true)

### Configuration of the USB Interface (CFG-USB-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-USB-ENABLED	0x10650001	L	-	-	1 (true)
CFG-USB-SELFPOW	0x10650002	L	-	-	1 (true)
CFG-USB-VENDOR_ID	0x3065000a	U2	-	-	5446
CFG-USB-PRODUCT_ID	0x3065000b	U2	-	-	425
CFG-USB-POWER	0x3065000c	U2	-	mA	0
CFG-USB-VENDOR_STR0	0x5065000d	X8	-	-	0x4120786f6c622d75 ("u-blox A")
CFG-USB-VENDOR_STR1	0x5065000e	X8	-	-	0x2e777777202d2047 ("G - www.")
CFG-USB-VENDOR_STR2	0x5065000f	X8	-	-	0x632e786f6c622d75 ("u-blox.c")
CFG-USB-VENDOR_STR3	0x50650010	X8	-	-	0x00000000000006d6f ("om\0\0\0\0\0")
CFG-USB-PRODUCT_STR0	0x50650011	X8	-	-	0x4720786f6c622d75 ("u-blox G")
CFG-USB-PRODUCT_STR1	0x50650012	X8	-	-	0x656365722053534e ("NSS rece")
CFG-USB-PRODUCT_STR2	0x50650013	X8	-	-	0x0000000072657669 ("iver\0\0\0\0")



#### Configuration of the USB Interface (CFG-USB-\*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
<a href="#">CFG-USB-PRODUCT_STR3</a>	0x50650014	X8	-	-	0x0000000000000000
<a href="#">CFG-USB-SERIAL_NO_STR0</a>	0x50650015	X8	-	-	0x0000000000000000
<a href="#">CFG-USB-SERIAL_NO_STR1</a>	0x50650016	X8	-	-	0x0000000000000000
<a href="#">CFG-USB-SERIAL_NO_STR2</a>	0x50650017	X8	-	-	0x0000000000000000
<a href="#">CFG-USB-SERIAL_NO_STR3</a>	0x50650018	X8	-	-	0x0000000000000000

#### Input Protocol Configuration of the USB Interface (CFG-USBINPROT-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
<a href="#">CFG-USBINPROT-UBX</a>	0x10770001	L	-	-	1 (true)
<a href="#">CFG-USBINPROT-NMEA</a>	0x10770002	L	-	-	1 (true)
<a href="#">CFG-USBINPROT-RTCM3X</a>	0x10770004	L	-	-	1 (true)

#### Output Protocol Configuration of the USB Interface (CFG-USBOUPTROT-\*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
<a href="#">CFG-USBOUPTROT-UBX</a>	0x10780001	L	-	-	1 (true)
<a href="#">CFG-USBOUPTROT-NMEA</a>	0x10780002	L	-	-	1 (true)
<a href="#">CFG-USBOUPTROT-RTCM3X</a>	0x10780004	L	-	-	1 (true)



## Related Documents

### Overview

As part of our commitment to customer support, u-blox maintains an extensive volume of technical documentation for our products. In addition to product-specific data sheets and integration manuals, general documents are also available. These include:

- GPS Compendium, Docu. No [GPS-X-02007](#)
- GPS Antennas - RF Design Considerations for u-blox GPS Receivers, Docu. No [GPS-X-08014](#)

Our website [www.u-blox.com](http://www.u-blox.com) is a valuable resource for general and product specific documentation.

### Related Documents for ZED-F9P

- u-blox ZED-F9P, Data Sheet, Docu. No UBX-17051259
- u-blox ZED-F9P, Integration Manual, Docu. No UBX-18010802

## Revision History

<i>Revision</i>	<i>Date</i>	<i>Name</i>	<i>Status / Comments</i>
R04	18-Sep-2018	jhak	Advance Information

Advance Information

# Contact

For complete contact information visit us at [www.u-blox.com](http://www.u-blox.com)

## u-blox Offices

### North, Central and South America

#### u-blox America, Inc.

Phone: +1 703 483 3180  
E-mail: [info\\_us@u-blox.com](mailto:info_us@u-blox.com)

#### Regional Office West Coast:

Phone: +1 408 573 3640  
E-mail: [info\\_us@u-blox.com](mailto:info_us@u-blox.com)

#### Technical Support:

Phone: +1 703 483 3185  
E-mail: [support\\_us@u-blox.com](mailto:support_us@u-blox.com)

### Headquarters

#### Europe, Middle East, Africa

#### u-blox AG

Phone: +41 44 722 74 44  
E-mail: [info@u-blox.com](mailto:info@u-blox.com)  
Support: [support@u-blox.com](mailto:support@u-blox.com)

#### Documentation Feedback

E-mail: [docsupport@u-blox.com](mailto:docsupport@u-blox.com)

### Asia, Australia, Pacific

#### u-blox Singapore Pte. Ltd.

Phone: +65 6734 3811  
E-mail: [info\\_ap@u-blox.com](mailto:info_ap@u-blox.com)  
Support: [support\\_ap@u-blox.com](mailto:support_ap@u-blox.com)

#### Regional Office Australia:

Phone: +61 2 8448 2016  
E-mail: [info\\_anz@u-blox.com](mailto:info_anz@u-blox.com)  
Support: [support\\_ap@u-blox.com](mailto:support_ap@u-blox.com)

#### Regional Office China (Beijing):

Phone: +86 10 68 133 545  
E-mail: [info\\_cn@u-blox.com](mailto:info_cn@u-blox.com)  
Support: [support\\_cn@u-blox.com](mailto:support_cn@u-blox.com)

#### Regional Office China (Chongqing):

Phone: +86 23 6815 1588  
E-mail: [info\\_cn@u-blox.com](mailto:info_cn@u-blox.com)  
Support: [support\\_cn@u-blox.com](mailto:support_cn@u-blox.com)

#### Regional Office China (Shanghai):

Phone: +86 21 6090 4832  
E-mail: [info\\_cn@u-blox.com](mailto:info_cn@u-blox.com)  
Support: [support\\_cn@u-blox.com](mailto:support_cn@u-blox.com)

#### Regional Office China (Shenzhen):

Phone: +86 755 8627 1083  
E-mail: [info\\_cn@u-blox.com](mailto:info_cn@u-blox.com)  
Support: [support\\_cn@u-blox.com](mailto:support_cn@u-blox.com)

#### Regional Office India:

Phone: +91 80 4050 9200  
E-mail: [info\\_in@u-blox.com](mailto:info_in@u-blox.com)  
Support: [support\\_in@u-blox.com](mailto:support_in@u-blox.com)

#### Regional Office Japan (Osaka):

Phone: +81 6 6941 3660  
E-mail: [info\\_jp@u-blox.com](mailto:info_jp@u-blox.com)  
Support: [support\\_jp@u-blox.com](mailto:support_jp@u-blox.com)

#### Regional Office Japan (Tokyo):

Phone: +81 3 5775 3850  
E-mail: [info\\_jp@u-blox.com](mailto:info_jp@u-blox.com)  
Support: [support\\_jp@u-blox.com](mailto:support_jp@u-blox.com)

#### Regional Office Korea:

Phone: +82 2 542 0861  
E-mail: [info\\_kr@u-blox.com](mailto:info_kr@u-blox.com)  
Support: [support\\_kr@u-blox.com](mailto:support_kr@u-blox.com)

#### Regional Office Taiwan:

Phone: +886 2 2657 1090  
E-mail: [info\\_tw@u-blox.com](mailto:info_tw@u-blox.com)  
Support: [support\\_tw@u-blox.com](mailto:support_tw@u-blox.com)