



QSG148: Getting Started with the Silicon Labs Bluetooth[®] Mesh Lighting Demonstration



This document provides step-by-step instructions to demonstrate a basic Bluetooth mesh network. In this demo, three Wireless Starter Kit (WSTK)-based devices are provisioned as two Lights and one Switch. The mobile application allows the control of either the group of Lights or an individual Light. By pressing buttons on the Switch device, you can control the ON/OFF states and brightness for all lights in the same group. The demo is open-sourced and provides a good demonstration of a basic Bluetooth mesh network.

KEY POINTS

- Prerequisite for the demo
- Hardware set-up of WSTKs
- Bluetooth mesh SDK installation in Simplicity Studio
- Demo firmware installation
- Instructions for provisioning, configuring, and controlling network nodes using the Android smartphone application

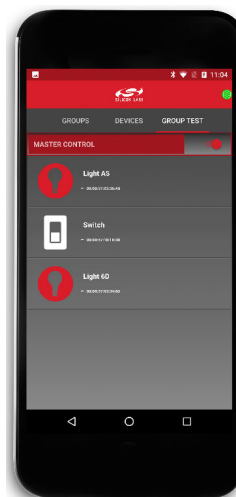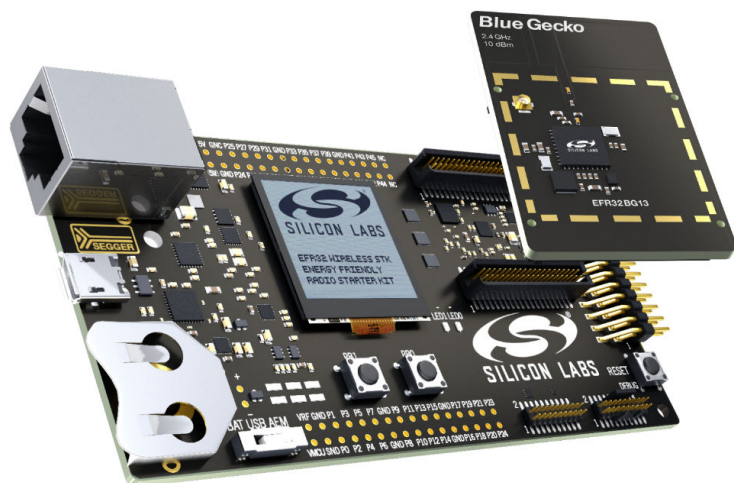

1. Prerequisites

The Silicon Labs Bluetooth mesh lighting demonstration is designed to illustrate Bluetooth mesh operation without any need to configure or compile software. To get started with Bluetooth mesh demo, obtain the following.

1.1 Order Development Kits

The Blue Gecko Bluetooth SoC Wireless Starter Kit is the easiest and fastest way to start the evaluation and development of your own Bluetooth mesh applications. To get started with Bluetooth mesh demo, you need to have **three (3)** EFR32™ Blue Gecko Bluetooth® Low Energy Wireless SoC Starter Kits (**PN: SLWSTK6020B**).

Go to <http://www.silabs.com/products/development-tools/wireless/bluetooth/blue-gecko-bluetooth-low-energy-soc-starter-kit> to order the kits from Silicon Labs' authorized distributors.

This demo requires either **EFR32BG13** or **EFR32BG12** radio boards. If you already have the WSTK Main Boards, you can purchase the required radio boards [here](#).

1.2 Download Simplicity Studio

Go to: <http://www.silabs.com/simplicity-studio> to download the latest Simplicity Studio version compatible with your computer's operating system.

1.3 Download Silicon Labs' Bluetooth Mesh App for Android Smartphone in Google Play

Download the **Bluetooth Mesh** Android application by Silicon Labs from Google Play.

Note: The minimum requirement for the smartphone is Android 6 (API23).

Alternatively you can download Silicon Labs' Bluetooth mesh App for iOS from the App Store.

1.4 Obtaining Support

You can access the Silicon Labs support portal at <https://www.silabs.com/support> through Simplicity Studio Resources. Click the "Email-Support" link and log in with your self-registered credentials. Use the support portal to contact Customer Support for any questions you might have about the demonstration.

2. Getting Started

2.1 Preparing the WSTK

The layout of the Wireless Starter Kit (WSTK) Main Board with attached EFR32BG13 radio board is shown in the following figure:

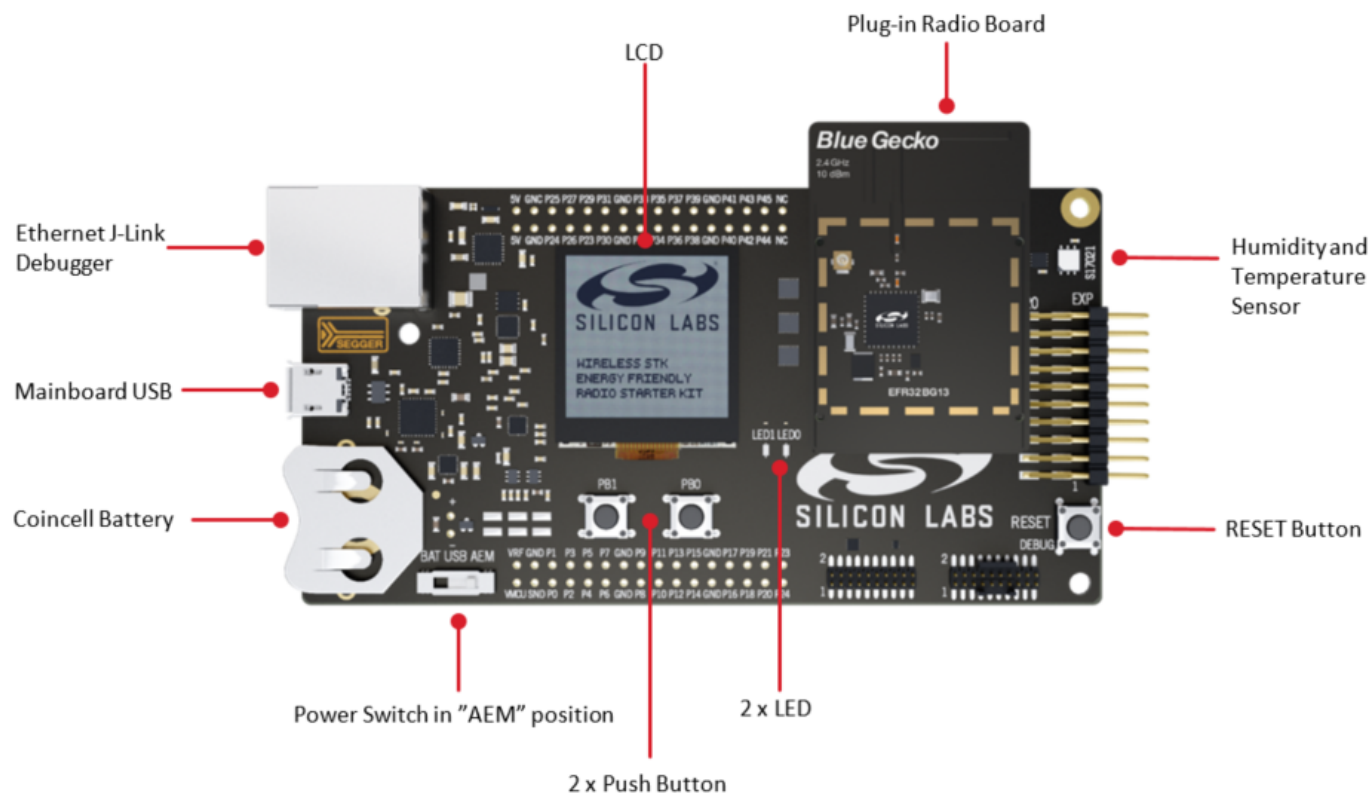


Figure 2.1. WSTK Main Board with Radio Board Attached

1. Connect a Blue Gecko Radio Board to the WSTK Main Board.

Use radio board SLWRB4104A **EFR32BG13** 2.4 GHz (+10 dBm) for this demo experience.

2. Connect the WSTK to a PC using the "J-Link USB" connector and the cable provided with the starter kit.
3. If not already set, turn the Power switch to "AEM" position.
4. Repeat the above steps for other two kits so all three kits are connected to your computer.

Verifying the Setup:


1. Check that the blue "USB Connection Indicator" LED (next to "J-Link USB") turns on or starts blinking.
2. Check that the Main Board LCD display turns on and displays a Silicon Labs logo.

For more detailed information regarding the Starter Kit, refer to [UG279: EFR32BG13 Blue Gecko Bluetooth Starter Kit User's Guide](#).


2.2 Open Simplicity Studio and Install Bluetooth mesh SDK

Bluetooth mesh SDK is installed using the Simplicity Studio package manager.

1. Open Simplicity Studio and log in using your Silicon Labs account.
2. Click the Download Update icon (red/green down arrow under the menu bars), and click Package Manager.

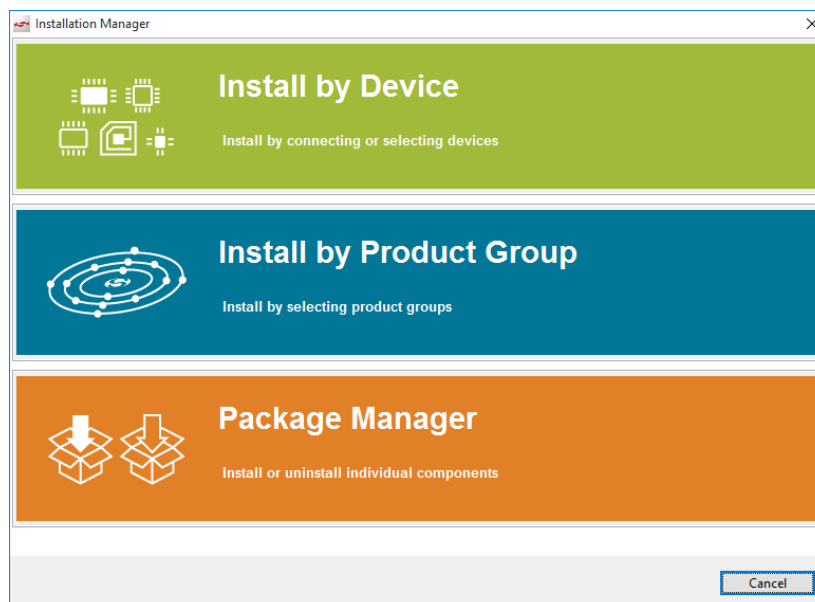

3. Go to the SDKs tab to install Bluetooth mesh SDK.

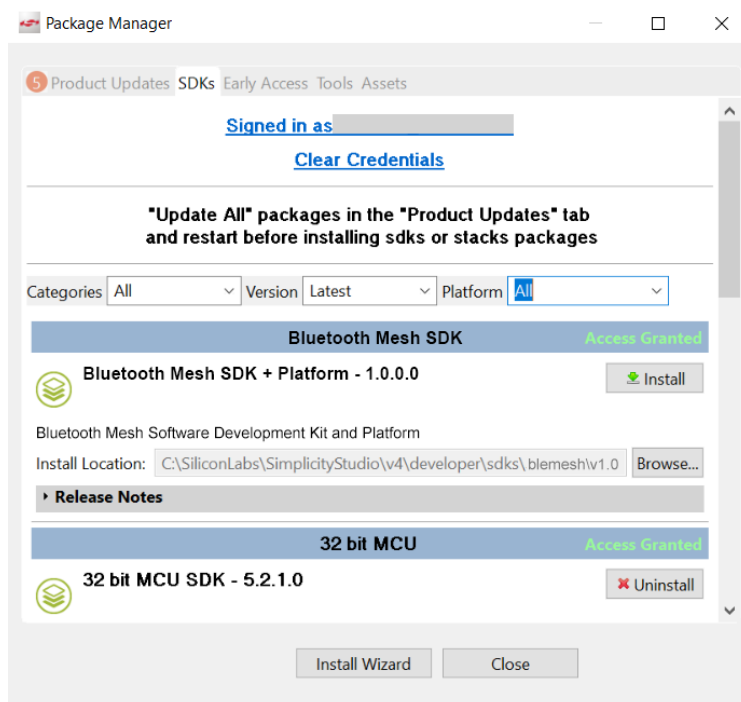

4. In the Launcher screen, check if the preferred SDK is “Bluetooth mesh SDK + Platform”. If not, click the link provided to change the preferred SDK to “Bluetooth mesh SDK + Platform”.

You can find more detailed instructions for Simplicity Studio in [QSG139: Bluetooth Development with Simplicity Studio](#).

2.3 Install the Demonstration Firmware

When the devices are connected to your PC with a USB cable, you can see three devices listed in the **Device** window in Simplicity Studio. Select the J-link for a device to display demonstrations, examples, and documentation associated with the Bluetooth Mesh SDK.

For this demo, you need to flash two devices with **BT Mesh – Light Example** and one device with **BT Mesh – Switch Example**.

To install the firmware, click the demo. In the **Mode** drop-down in the next dialog, select **Run**. Click **[Start]**.

J-Link Silicon Labs (440061615)

Preferred SDK: Bluetooth Mesh v1.0.0; Bluetooth, Mesh 1.0.0.0 Click [here](#) to change the preferred SDK.

Debug Mode: MCU [Change](#)

New Project Recent Projects

Getting Started

Documentation

Compatible Tools

Demos

- Bluetooth Mesh SDK + Platform 1.0.0.0
 - Bluetooth Mesh SDK + Platform Demos

BT Mesh - Empty SOC	
Bluetooth Mesh: SOC Empty application. It	
BT Mesh - Light Example	
Bluetooth Mesh: Light Example. This is an	
BT Mesh - Switch Example	
Bluetooth Mesh: Switch Example. This is an	
NCP target - BT Mesh - Empty	
Bluetooth Mesh: NCP (Network co-	

Software Examples

- Bluetooth Mesh SDK + Platform 1.0.0.0
 - Bluetooth Mesh SDK + Platform Examples

BT Mesh - Empty SOC	
Bluetooth Mesh: SOC Empty application. It	
BT Mesh - Light Example	
Bluetooth Mesh: Light Example. This is an	
BT Mesh - Switch Example	
Bluetooth Mesh: Switch Example. This is an	
NCP target - BT Mesh - Empty	
Bluetooth Mesh: NCP (Network co-processor)	

Demos

Select Demo

Select a demo and the mode with which to run it.

Name	Description
BT Mesh - Empty SOC	Bluetooth Mesh: SOC Empty a...
BT Mesh - Light Example	Bluetooth Mesh: Light Examl...
BT Mesh - Switch Example	Bluetooth Mesh: Switch Exam...
NCP target - BT Mesh - Empty	Bluetooth Mesh: NCP (Networ...

Bluetooth Mesh: Light Example. This is an out-of-the-box Software Demo where the LEDs of the WSTK are switched on and off triggered by push button presses. It is based on the Bluetooth Mesh Generic On/Off Model. It currently only works with BRD4104A/SLWRB4104A.

Mode: Run

☒ Filter by selected product line

Start Cancel



2.4 Use the Demo with an Android Smartphone

Make sure that all three devices have the status of “**unprovisioned**” on the device LCD screen before starting with the application.

Open the **Bluetooth Mesh App** by Silicon Labs on your Android phone.


Follow the procedures below to set up and use the demonstration.

1. Go to provisioning view and search for unprovisioned devices.
2. Select the Bluetooth mesh device you want to provision and configure.
3. Enter the descriptive name for the device and the network you want to add it to.

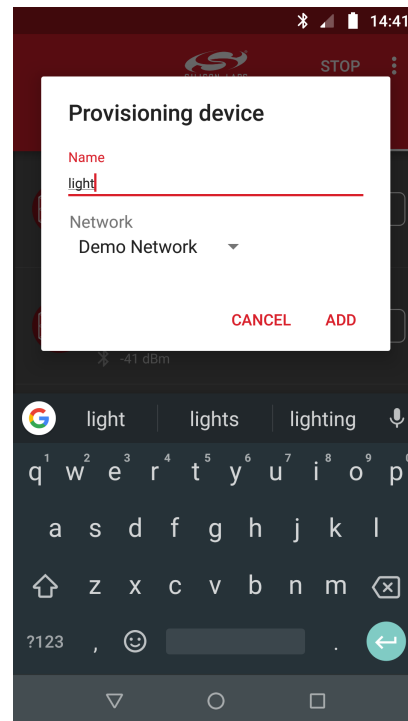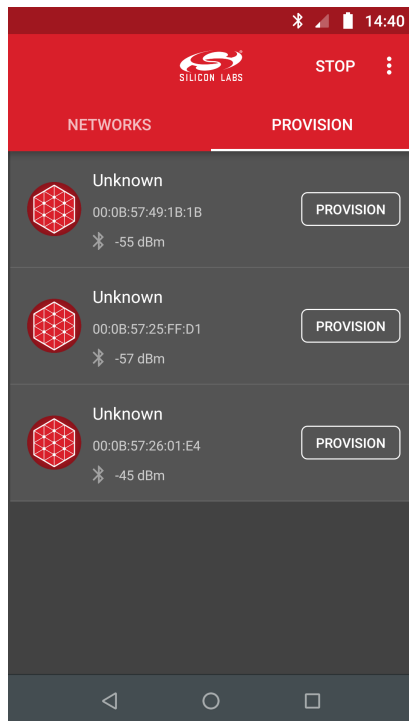


Note: The Android application has a pre-generated network and group, but you can add more groups to the application if you like.

The network and node database can be erased by long-pressing the network in the main view and by pressing the trash icon.

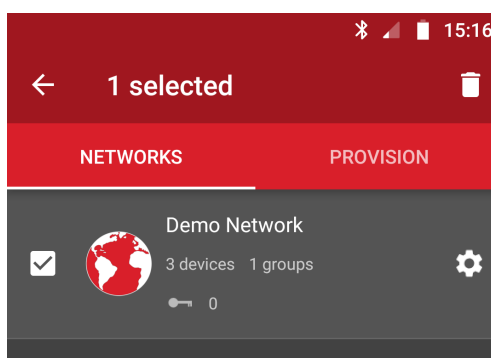

To configure the newly provisioned Bluetooth mesh:



1. Right after provisioning the Android application connects the proxy service on the node.
2. During configuration select the Bluetooth mesh features (proxy, relay, low power, and friend) that you want to enable.
 - a. Notice that if you disable proxy, the node can no longer be directly accessed over GATT.
3. Select the functionality (mesh model) that you want to enable.
4. Select the group you want to add the device to.

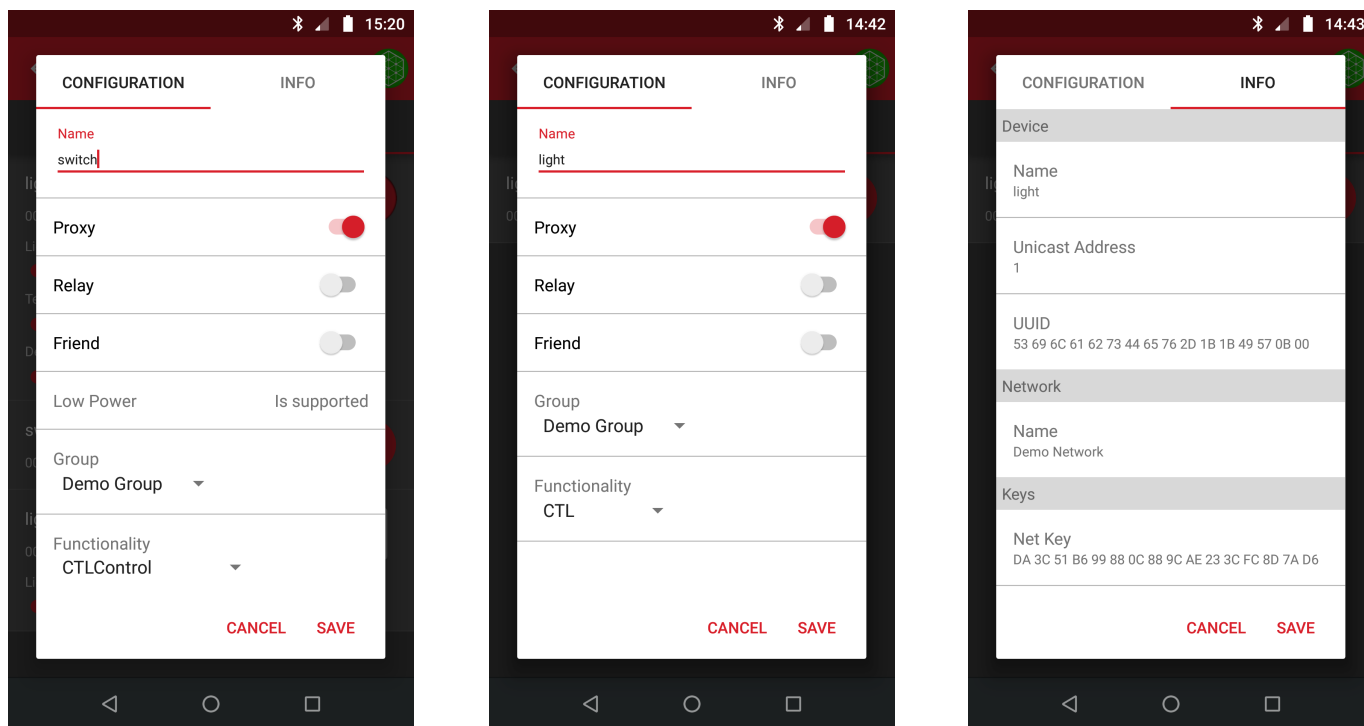

Note: The information view shows the Bluetooth mesh node features, such as Unicast address, UUID, and security keys as well as the supported mesh models. It can be used for debug purposes.

To control a Bluetooth mesh node with the Android application:

1. Select the network and group you want to control .
2. The application will show the available nodes in that group.
3. You can control the light:
 - a. Pressing the light bulb icon will send an On/Off message.
 - b. Moving the upper slider will send Light Lightness (dimming) messages.
 - c. Moving the medium and lower sliders will send CTL (temperature and delta UV) messages.
4. By going to devices view and long-pressing a node you can either reconfigure the node by pressing the gear icon or remove the node from the network by pressing the trash icon.

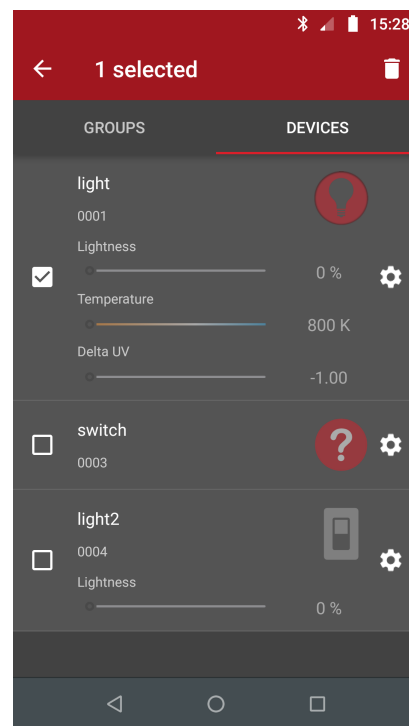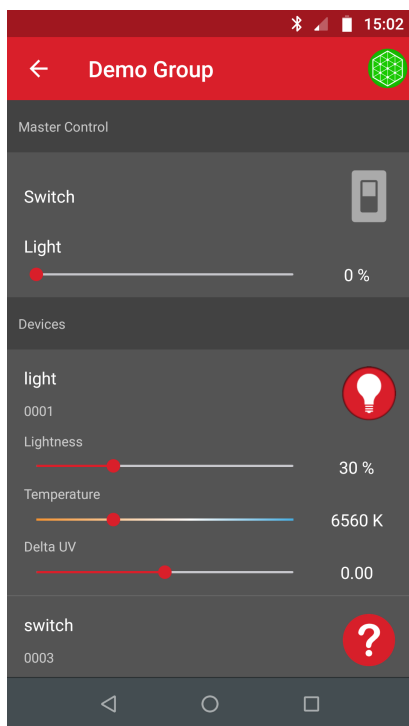

Once the Android application has been used to provision a light bulb and a light switch to a network and group, the light switch (WSTK) can also be used to control the light bulb (WSTK) with the PB0 and PB1 buttons.

PB0 button:

- Short press: Decrease Light Lightness by 10%
- Medium press: Decrease CTL (temperature) value
- Long press: Send Off message

PB1 button:

- Short press: Increase Light Lightness by 10%
- Medium press: Increase CTL (temperature) value
- Long press: Send On message




2.5 Use the Demo with an iOS Smartphone

Make sure that all three devices have the status of **“unprovisioned”** on the device LCD screen before starting with the Mobile App.


Open the **Bluetooth Mesh** App by Silicon Labs on your iOS phone.

Follow the procedures below to set up and use the demonstration.

1. Create a Bluetooth mesh network.
2. Select the network and create a group.
3. Go to the provisioning view and search for unprovisioned devices.
4. Select the Bluetooth mesh device you want to provision and configure.

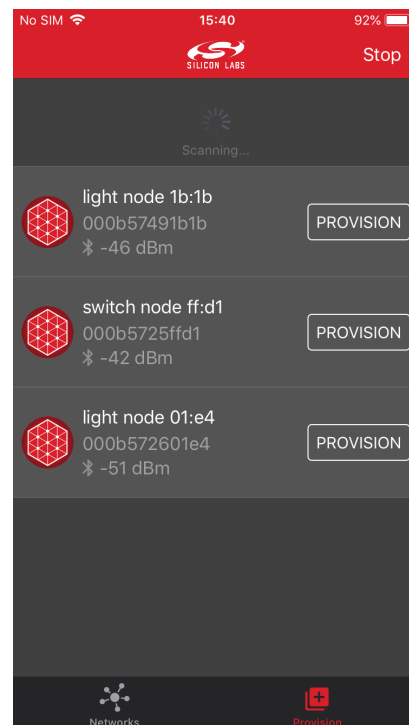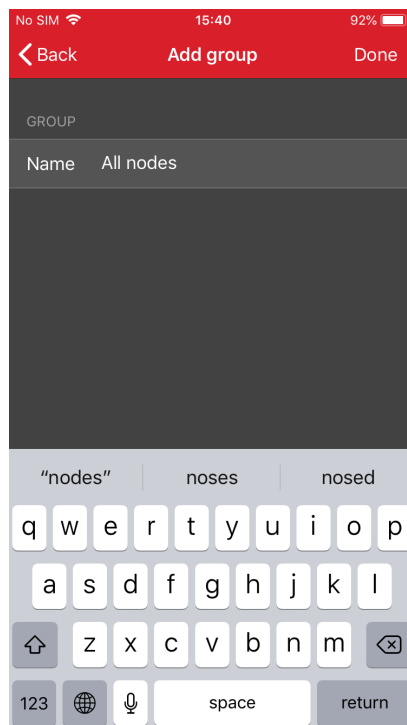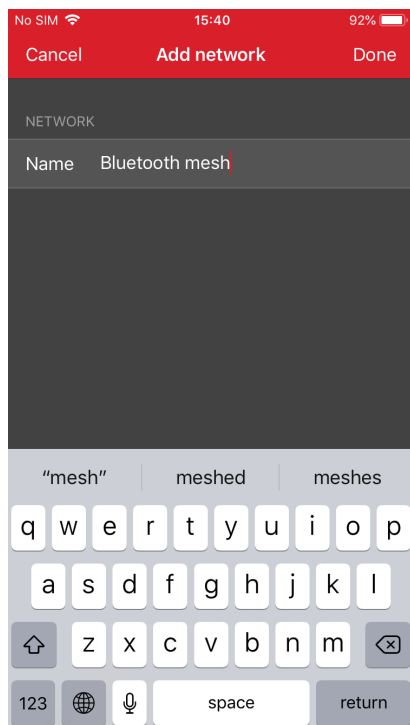


The network and node database can be erased by left-swiping the network in the main view and then pressing the trash icon.

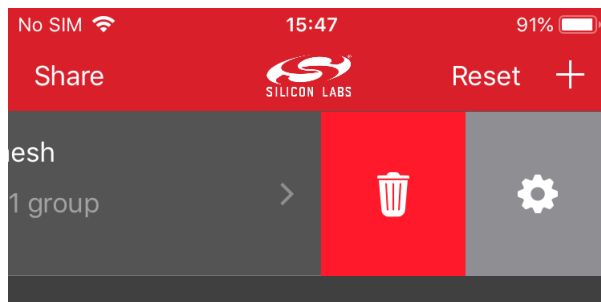

To provision a Bluetooth mesh device and configure the node:



1. During provisioning select the network you want to add the device to.
2. During configuration select the Bluetooth mesh features (proxy, relay, low power and friend) that you want to enable.
 - a. Notice that if you disable proxy, the node no longer be directly accessed over GATT.
3. Select the group you want to add the device to.
4. Finally select the functionality (mesh model) that you want to enable.

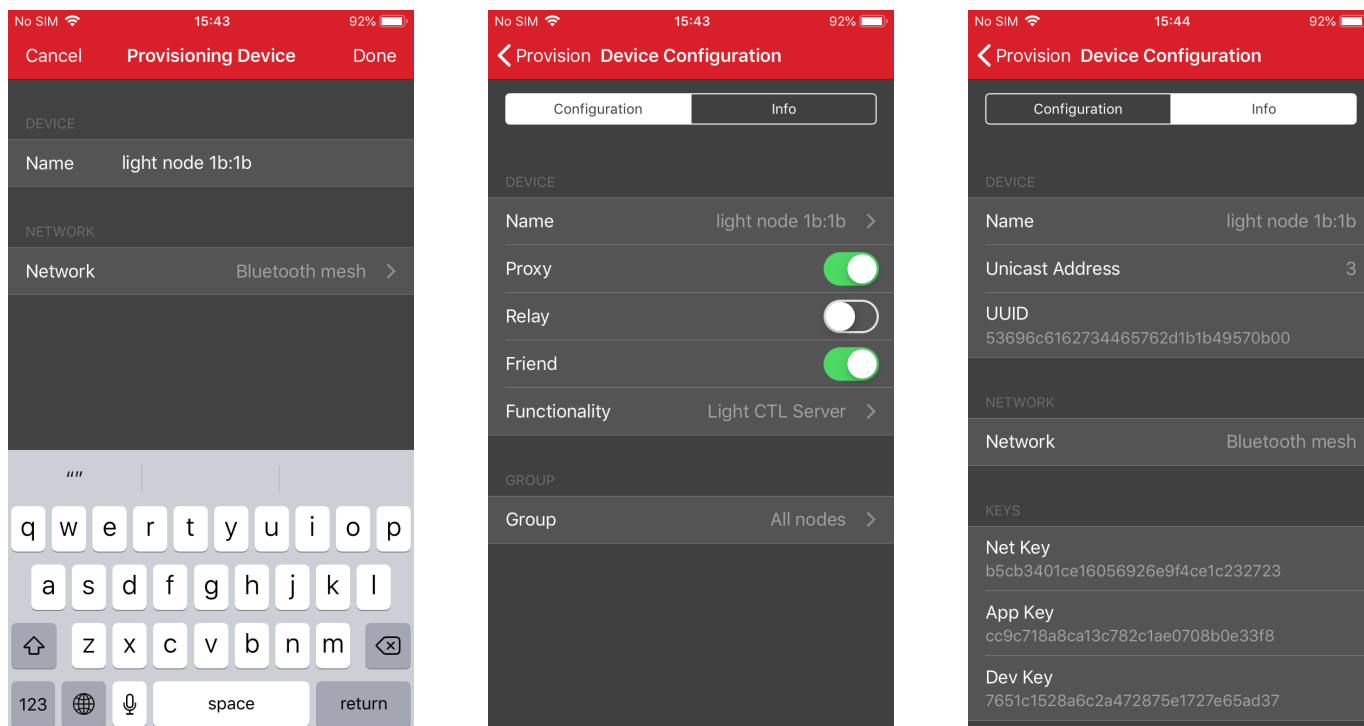

Note: The information view shows the Bluetooth mesh node features, such as Unicast address, UUID, and security keys as well as the supported mesh models. It can be used for debug purposes.

To control a Bluetooth mesh node with the iOS application:

1. Select the network and group you want to control.
2. The application will show the available nodes in that group.
3. You can control the light:
 - a. Pressing the light bulb icon will send an On/Off message.
 - b. Moving the upper slider will send Light Lightness (dimming) messages.
 - c. Moving the medium and lower sliders will send CTL (temperature and delta UV) messages.
4. By going to the Devices view and tapping a node name you can reconfigure the node. To remove the node from the network left-swipe it and press the trash icon.

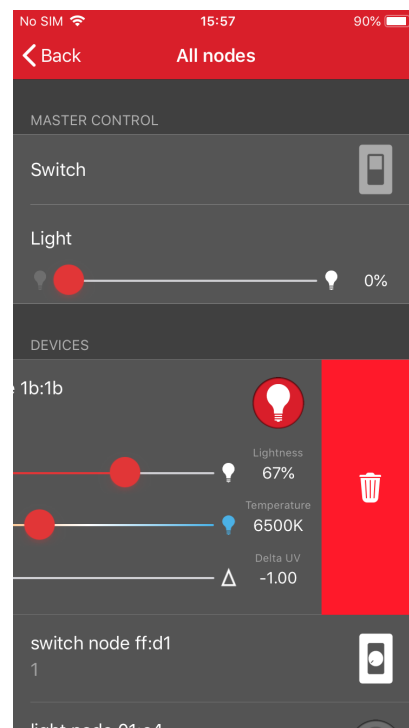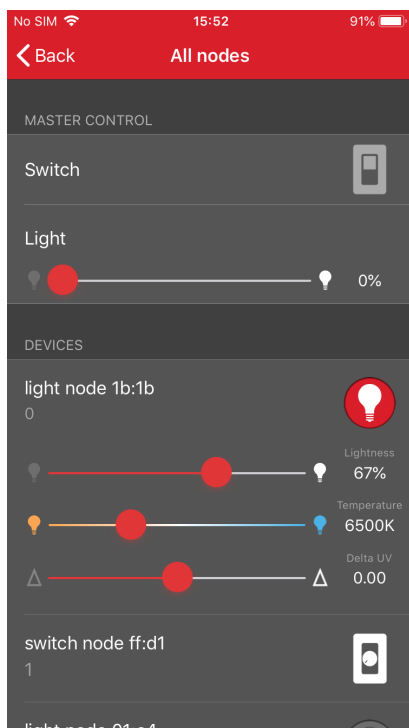

Once the iOS application has been used to provision a light bulb and a light switch to a network and group, the light switch (WSTK) can also be used to control the light bulb (WSTK) with the PB0 and PB1 buttons.

PB0 button:

- Short press: Decrease Light Lightness by 10%
- Medium press: Decrease CTL (temperature) value
- Long press: Send Off message


PB1 button:

- Short press: Increase Light Lightness by 10%
- Medium press: Increase CTL (temperature) value
- Long press: Send On message

3. Next Steps


To understand how the demo works, see *AN1098: Understanding the Silicon Labs Bluetooth Mesh Lighting Demonstration*.

Explore the other documentation provided by Silicon Labs to get started with customizing your own Bluetooth mesh applications. SDK-specific documentation is provided under Documents on the Getting Started tab of the Launcher perspective.

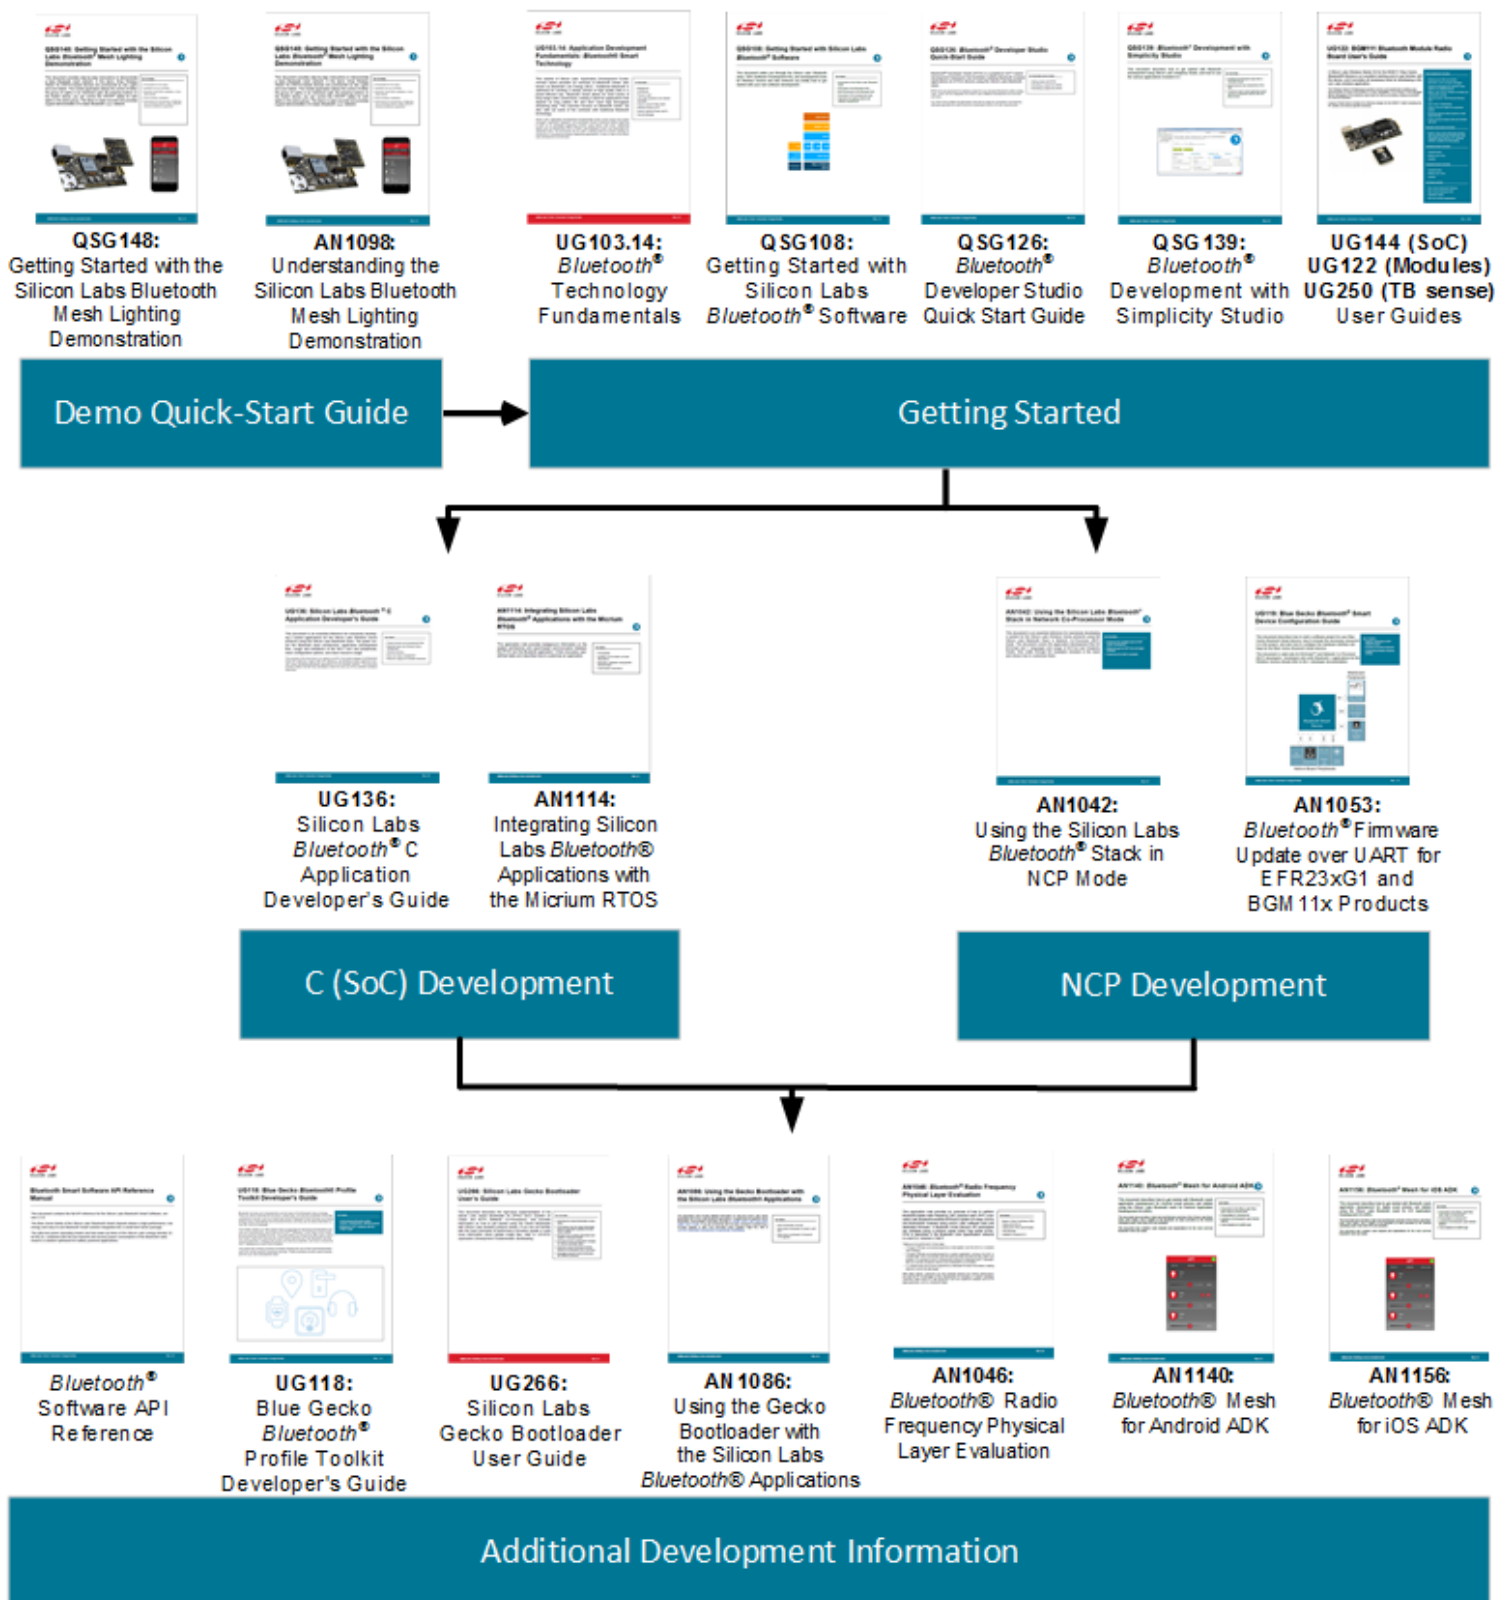

Silicon Labs

Simplicity Studio™4

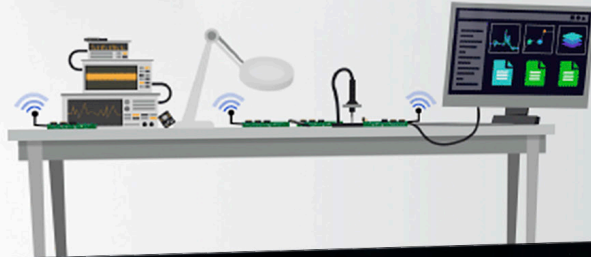

Simplicity Studio

One-click access to MCU and wireless tools, documentation, software, source code libraries & more. Available for Windows, Mac and Linux!



IoT Portfolio
www.silabs.com/IoT



SW/HW
www.silabs.com/simplicity



Quality
www.silabs.com/quality



Support and Community
community.silabs.com

Disclaimer

Silicon Labs intends to provide customers with the latest, accurate, and in-depth documentation of all peripherals and modules available for system and software implementers using or intending to use the Silicon Labs products. Characterization data, available modules and peripherals, memory sizes and memory addresses refer to each specific device, and "Typical" parameters provided can and do vary in different applications. Application examples described herein are for illustrative purposes only. Silicon Labs reserves the right to make changes without further notice and limitation to product information, specifications, and descriptions herein, and does not give warranties as to the accuracy or completeness of the included information. Silicon Labs shall have no liability for the consequences of use of the information supplied herein. This document does not imply or express copyright licenses granted hereunder to design or fabricate any integrated circuits. The products are not designed or authorized to be used within any Life Support System without the specific written consent of Silicon Labs. A "Life Support System" is any product or system intended to support or sustain life and/or health, which, if it fails, can be reasonably expected to result in significant personal injury or death. Silicon Labs products are not designed or authorized for military applications. Silicon Labs products shall under no circumstances be used in weapons of mass destruction including (but not limited to) nuclear, biological or chemical weapons, or missiles capable of delivering such weapons.

Trademark Information

Silicon Laboratories Inc.®, Silicon Laboratories®, Silicon Labs®, SiLabs® and the Silicon Labs logo®, Bluegiga®, Bluegiga Logo®, Clockbuilder®, CMEMS®, DSPLL®, EFM®, EFM32®, EFR®, Ember®, Energy Micro, Energy Micro logo and combinations thereof, "the world's most energy friendly microcontrollers", Ember®, EZLink®, EZRadio®, EZRadioPRO®, Gecko®, ISOModem®, Micrium, Precision32®, ProSLIC®, Simplicity Studio®, SiPHY®, Telegesis, the Telegesis Logo®, USBXpress®, Zentri, Z-Wave, and others are trademarks or registered trademarks of Silicon Labs. ARM, CORTEX, Cortex-M3 and THUMB are trademarks or registered trademarks of ARM Holdings. Keil is a registered trademark of ARM Limited. All other products or brand names mentioned herein are trademarks of their respective holders.



SILICON LABS

Silicon Laboratories Inc.
400 West Cesar Chavez
Austin, TX 78701
USA

<http://www.silabs.com>