

Ground Radar plugin for EuroScope

- version 1.5 -

General

Table of Contents

1	Acknowledgements	3
2	Getting started	3
2.1	Plugin updates	3
3	Global Menu	4
3.1	Pin	4
3.2	Settings menu	4
3.3	Window menu	7
3.4	Functions menu	7
3.5	QNH	8
3.6	Low Visibility Procedures status	8
3.7	Safety Nets.....	8
3.8	Developer menu	8
4	Track presentation.....	9
4.1	Ground mode	9
4.2	Tower mode.....	10
4.3	Label field mouse functions.....	10
5	Track label menus.....	11
5.1	Callsign menu	11
5.2	Ground state menu	11
5.3	Stand assignment menu	12
5.4	Manual stand assignment menu	12
6	Windows.....	13
6.1	2nd Traffic Situation Window	13
6.2	Approach Window	13
6.3	Approach Path Window.....	15
6.4	Runway Configuration Window.....	16
6.5	RVR Window	17
7	Lists.....	18
7.1	Time To Threshold List.....	18
7.2	Departure Timer List.....	19
7.3	Alerts List	19
7.4	Arrival List	20
7.5	Departure List	20
7.6	Stands List.....	21
8	Safety Nets.....	22
8.1	Runway Monitoring and Conflict Alerting (RMCA).....	22
8.2	Conformance Monitoring Alerts for Controllers (CMAC)	22
9	Tag items and functions	24
9.1	Tag items	24
9.2	Tag functions	24

1 Acknowledgements

This plugin contains code and/or ideas from the following sources:

- Raw radar data aircraft shapes are based on Pierre Ferran's work on his [vSMR](#) plugin
- JSON parsing uses the [JSON for Modern C++](#) library
- File transfers use the [libcurl](#) library

2 Getting started

The Ground Radar plugin has two modes. "Ground" mode is based on the SAAB A3000 A-SMGCS system, and "Tower" mode on the SAAB RDP air situation display. Some settings are required in the used ASR file to determine which mode to use, and to set up some of the necessary parameters.

If the plugin was provided in a package, all the necessary settings are most likely set already. If not, refer to the Developer Guide for information on how to install and set up the plugin.

In case the plugin fails to load, download the [latest runtime libraries](#).

2.1 Plugin updates

On startup, the plugin will attempt to check for updates. If the check fails or a new version is available, a message box will be presented. In case a mandatory update exists and the latest date to update has already passed, the plugin features will be blocked until it is updated.

When an update is available, the message box will show where to download the current version. The update package contains the plugin dll, the current manual set and the plugin data files that are common to all setups. Replace the existing files with the new ones but do not delete any files unless specifically asked to do so.

3 Global Menu

3.1 Pin

Left-click to toggle permanently displaying the Global Menu on the screen. A box will be displayed around the pin symbol when so. When not permanently displayed, the Global Menu will be hidden when the cursor is outside the menu area and none of its submenus are open.

3.2 Settings menu

- Display > Opens the Display submenu
- Labels > Opens the Labels submenu
- Lists > Opens the Lists submenu (Ground mode only)
- Raw Video > Opens the Raw Video submenu (Ground mode only)

3.2.1 Display submenu

3.2.1.1 Ground mode

- Pro mode Toggles the Pro mode on/off
- Tracks
 - o Display Toggles the label, track symbol, history dots and heading line on/off. Can't be set off if Settings->Raw Video...->Raw Video is also off.
 - o History Sets the number of history dots to display (0-19)
 - o HDG line Toggles the heading line on/off
 - o AltFilter Hides tracks above specified height above airport elevation in 100's of feet (1-999)
- 2nd Window
 - o Rotation Rotates the view (-360.0 to 360.0 degrees or empty to set "auto")
- APP Window
 - o History Sets the number of history dots to display (0-19)
 - o Prediction Sets the length of the prediction line in minutes (0-99)
 - o Rotation Rotates the view (-360.0 to 360.0 degrees or empty to set "auto")
 - o Extensions Sets the extended centerlines length in nm (0-999)
 - o AltFilter Hides labels above specified level in 100's of feet (0-999)
- App Path Window
 - o History Sets the number of history dots to display (0-19)

The 'Pro mode' setting determines what data will be displayed and how the radar tracks are correlated to flight plans. With the setting off, the airport area will have perfect primary and secondary radar coverage and all the aircraft are shown correctly correlated.

When 'Pro mode' is selected on, the radar coverage depends on the plugin and EuroScope setup, and for the correlation the plugin first checks mode S availability (radar coverage and flight plan equipment suffix). If available, it will be used for correlation. If not, the correlation state as reported by EuroScope (depending on the 'Professional mode' settings in EuroScope's General Settings) will be used.

The heading line is a 10 pixels long line drawn from the position symbol showing the heading of the aircraft.

"Auto" rotation for the 2nd Traffic Situation Window and APP Window sets the rotation to match the primary window.

3.2.1.2 Tower mode

- Tracks
 - o History Sets the number of history dots to display (0-19)
 - o Prediction Sets the length of the prediction line in minutes (0-99)
 - o AltFilter Hi Hides labels above specified level in 100's of feet (-10-999)
 - o AltFilter Lo Hides labels below specified level in 100's of feet (-10-999)

3.2.2 Labels submenu

3.2.2.1 Ground mode

- Ground
 - o Stby Toggles display of labels for tracks with transponder in standby
 - o NoState Toggles display of labels for departures with no ground state
 - o OnFreq Toggles display of labels for departures with state ON FREQ
 - o Parked Toggles display of labels for arrivals with ground state PARKED
 - o PosX Sets the default label position x-offset in pixels (positive right)
 - o PosY Sets the default label position y-offset in pixels (positive down)
 - o <FieldName> Toggles the <FieldName> field on/off
- APP Window
 - o PosX Sets the default label position x-offset in pixels (positive right)
 - o PosY Sets the default label position y-offset in pixels (positive down)
 - o <FieldName> Toggles the <FieldName> field on/off
- App Path Window
 - o PosX Sets the default label position x-offset in pixels (positive right)
 - o PosY Sets the default label position y-offset in pixels (positive down)
 - o <FieldName> Toggles the <FieldName> field on/off

The four label filtering options for the ground mode only apply to stationary tracks. The filters can be temporarily disabled by moving the mouse cursor over an empty part of the Global Menu. When the cursor leaves the area, the filters will be automatically re-enabled.

3.2.2.2 Tower mode

- Tower
 - o PosX Sets the default label position x-offset in pixels (positive right)
 - o PosY Sets the default label position y-offset in pixels (positive down)
 - o <FieldName> Toggles the <FieldName> field on/off

3.2.3 Lists submenu

- TTT
 - o DTT Toggles the DTT column on/off
 - o TYPE Toggles the TYPE column on/off
 - o WTC Toggles the WTC column on/off
 - o ETA Toggles the ETA column on/off
 - o STAND Toggles the STAND column on/off
- Dep Timer
 - o TYPE Toggles the TYPE column on/off
 - o WTC Toggles the WTC column on/off
 - o SID Toggles the SID column on/off
 - o ADES Toggles the ADES column on/off
- Alerts
 - o Items Number of flights to display
- ARR
 - o Items Number of flights to display
 - o RWY Toggles the RWY column on/off
 - o TYPE Toggles the TYPE column on/off
 - o WTC Toggles the WTC column on/off
 - o ADEP Toggles the ADEP column on/off
 - o ETA Toggles the ETA column on/off
 - o STAND Toggles the STAND column on/off
- DEP
 - o Items Number of flights to display
 - o TYPE Toggles the TYPE column on/off
 - o WTC Toggles the WTC column on/off
 - o EOBT Toggles the EOBT column on/off
 - o STAND Toggles the STAND column on/off
 - o ADES Toggles the ADES column on/off
 - o RWY Toggles the RWY column on/off
 - o SID Toggles the SID column on/off
- Stands
 - o Items Number of stands to display

3.2.4 Raw Video submenu

- Raw Video Toggles the raw video display on/off. Can't be set off if Settings->Display...->Tracks->Display is also off.
- Brightness Adjusts the general brightness of the radar returns (1-100). Note that if the Ground Label is set "off", having a low brightness setting may make it very hard to see the traffic.
- Afterglow Controls how fast the returns fade (0-100)
- History Sets the maximum number of history positions (0-10)

3.3 Window menu

- 2nd Opens the [2nd Traffic Situation Window](#)
- APP Opens the [Approach Window](#)
- Approach Path > Opens an [Approach Path Window](#) (select approach from list)
- TTT > Opens a [Time To Threshold List](#) (select runway from list)
- Dep Timer > Opens a [Departure Timer List](#) (select runway from list)
- Lists > Opens the Lists submenu
- Runway Conf Opens the [Runway Configuration Window](#)
- RVR Opens the [RVR Window](#)

The items in the Window menu are active only in the ground mode of the plugin, “Approach Path” only when at least one approach has been defined in the plugin settings.

3.3.1 Lists submenu

- Alerts Opens the [Alerts List](#)
- ARR Opens the [Arrival List](#)
- DEP Opens the [Departure List](#)
- Stands Opens the [Stands List](#)

3.4 Functions menu

- Flight Plan Opens the Flight plan setting dialog (enter callsign)
- Text notes > Opens the Text notes submenu
- Maps > Opens the Maps submenu

3.4.1 Text notes submenu

- Create... Creates a new text note
- Delete... Deletes a single text note
- Delete all Deletes all text notes

It is possible to insert text notes on the radar screen to act as reminders. They will stay fixed at the geographical coordinates they are inserted to, the coordinates defining the center point of the note.

When creating a note, a text entry field opens to enter the note text. When the **[Enter]** key is pressed, the note will be created at the current mouse cursor position.

The notes can be deleted one by one or all of them at the same time. When deleting one by one, the notes are boxed to display their click areas. Clicking on one will delete the note. Pressing the **[Esc]** key or selecting the “Delete...” menu item again will abort the operation.

3.4.2 Maps submenu

The maps submenu displays a list of all map folders found in the maps data file. Left-clicking on a folder name displays the maps in that folder on the right side of the folder list. The selected folder is displayed in reverse video. Each map’s display state can be selected on or off. Additionally, those maps that have automatic activation rules defined in the data file can be selected to activate and deactivate automatically. The default state is “Auto” for all maps with that possibility, and “Off” for other maps.

The map list can be undocked from the menu by dragging it, the list then becomes the Maps Window. The active folder must still be selected using the maps submenu.

3.5 QNH

Displays the latest QNH if a METAR for the airport has been received by EuroScope. When the QNH changes, the background will be set to yellow color. Left-click to acknowledge the change.

3.6 Low Visibility Procedures status

Left-click to toggle between “NORMAL” and “LVP”. This sets the runway related alert settings accordingly.

3.7 Safety Nets

- | | |
|-------|--------------------------|
| - APM | Toggle APM alerts on/off |
| - RIM | Toggle RIM alerts on/off |
| - CVM | Toggle CVM alerts on/off |
| - OSM | Toggle OSM alerts on/off |
| - RVM | Toggle RVM alerts on/off |
| - ECM | Toggle ECM alerts on/off |
| - RUM | Toggle RUM alerts on/off |

When a safety net is switched off, its button is shown with a yellow background. See the Safety Nets chapter for information on which alerts are connected to which system.

3.8 Developer menu

Left-click on the blue “HITT” label to open the menu

- | | |
|--------------------------|---|
| - Reload Settings | Reloads the information in the settings files |
| - Reload Data Files | Reloads the information in the data files |
| - Show/Hide Airport Data | Toggles airport related data display on/off |

When selected on, the airport data displays the following for development use:

- Airport reference point (green crosshairs and circle), ICAO code and elevation
- Airport area, i.e. airport radius circle around the reference point (green dotted line)
- Runway end and threshold locations (marked with runway id in red color)
- Runway areas (red polygons, LVP versions with dotted lines)
- Runway buffer areas (yellow polygons, LVP versions with dotted lines)
- Runway crossings (red crosses)
- Aircraft stands
 - o Occupied and blocked in red
 - o Assigned in yellow
 - o Free but blocked from automatic assignment in dotted green
 - o Free and available for automatic assignment in solid green



4 Track presentation

In both the ground and tower modes, the track symbols and labels are colored according to the flight's status (arrival, departure or overflight/unknown). By default, the arrivals are yellow, departures light blue and overflight/unknown tracks light grey. In the tower mode also the history dots and prediction lines use the same coloring. In the ground mode all history dots use the overflight/unknown color and there is no prediction line available. Hovering the mouse cursor over a label will show all data fields even if not selected on in the settings.

The track labels displayed here are the default sets.

4.1 Ground mode

4.1.1 Track symbol

-  Primary track
-  Secondary (mode A or S) or combined track

Right-clicking on the track symbol toggles the heading line

4.1.2 Uncorrelated track label

ALRT
CALLSIGN FLTID

- ALRT Safety net alert indicator
- CALLSIGN Transponded SSR code ("----" for primary only tracks)
- FLTID Mode S downlinked callsign

4.1.3 Correlated track label

Departure

Arrival

Overflight/unknown

ALRT FLTID_E ASSR_E COMM
CALLSIGN DRWY DEP
ATYP WTC RMK

ALRT FLTID_E ASSR_E COMM
CALLSIGN STAND
ATYP WTC RMK

ALRT FLTID_E ASSR_E COMM
CALLSIGN
ATYP WTC RMK

- ALRT Safety net alert indicator
- ASSR_E Assigned SSR code if different from the transponded code
- ATYP Aircraft type
- COMM "t" if text only, "r" if voice receive only
- CALLSIGN Callsign
- DRWY Departure runway identifier, automatically displayed when either:
 - there is more than one active departure runway, or
 - RUM is enabled and the assigned runway is not an active departure runway
- DEP Assigned heading or SID designator
- FLTID_E "S" (unselected)/mode S callsign (selected) if different from correlated flightplan callsign
- RMK Scratchpad contents
- STAND Assigned arrival stand
 - Highlighted after a change until acknowledged

- WTC Wake turbulence category

4.2 Tower mode

4.2.1 Track symbol

- ○ Primary track
- □ Uncorrelated secondary or combined track
- ◇ Correlated secondary track
- ◆ Correlated combined track

4.2.2 Uncorrelated track label

CALLSIGN FLTID
AFL+VS GS

- AFL+VS Actual flight level and an arrow to indicate climb or descent
 - At or below the transition altitude the displayed value is the altitude in hundreds of feet, prefixed by "A"
- CALLSIGN Transponded SSR code
- FLTID Mode S downlinked callsign
- GS Groundspeed in knots (rounded to nearest 10 knots)

4.2.3 Correlated track label

CALLSIGN COMM
AFL+VS GS

- AFL+VS Actual flight level and an arrow to indicate climb or descent
 - At or below the transition altitude the displayed value is the altitude in hundreds of feet, prefixed by "A"
- CALLSIGN Callsign
- COMM "t" if text only, "r" if voice receive only
- GS Groundspeed in knots (rounded to nearest 10 knots)

4.3 Label field mouse functions

The following mouse functions are available (left-click unless specified):

- ARWY Open runway setup popup list
- CALLSIGN Open Callsign menu
- DEP

Left-click:	Open SID setup popup list
Right-click:	Open assigned heading popup list
- STAND

New assignment:	Acknowledge it
Otherwise:	Open Stand assignment menu
- RMK Edit scratch pad string

5 Track label menus

5.1 Callsign menu

The Callsign menu for correlated tracks contains the following (unavailable ones shown with grey text):

- <Ground state> (Displays current ground state) Opens the [Ground state menu](#)
- Assume Assumes the track
- Trans <ID> Transfers the track to the indicated controller
- Man Tfr Opens a menu to manually transfer the track to any controller
- Free Drops the track
- FPL Opens the EuroScope Flight plan setting dialog
- Stand Opens the [Stand assignment menu](#)
- Uncorrelate Uncorrelates the flight plan from the radar track

For uncorrelated tracks, the menu only contains one item:

- Correlate Correlate the radar track with a flight plan (enter the callsign)

5.2 Ground state menu

The Ground state menu includes the default and custom ground states:

Departure:

- ON FREQ Sets the custom “On Freq” state
- DEICE Sets the custom “De-Ice” state
- START UP Sets the default or custom “Start-Up” state depending on EuroScope version
- PUSH Sets the default “Push” state
- TAXI Sets the default “Taxi Out” state
- LINE UP Sets the custom “Line Up” state
- TAKE OFF Sets the default “Depa” state
- (empty) Clears the ground state

Arrival:

- TAXI Sets the default “Taxi In” state
- PARKED Sets the default “Parked” state
- (empty) Clears the ground state

For compatibility reasons, the custom states set the following default states:

- On Freq Clears any default state if one had already been set
- De-Ice Clears any default state if one had already been set
- Line Up “Taxi Out”
- (empty) Departure: Clears any default state if one had already been set
Arrival: If “Parked” state had been set, sets “Taxi In”.

5.3 Stand assignment menu

The Stand assignment menu is used for various tasks related to arrival stand assignment. It will not open if another controller is tracking the aircraft. The menu contains the following options:

- Auto Assigns a new arrival stand automatically
- Manual Opens the [Manual stand assignment menu](#)
- Publish Communicates the current stand assignment to other controllers
- Clear Clears the stand assignment

In addition to the manual “publish” method to communicate stand assignments, an assignment is automatically communicated to all controllers in range when the assignment is made, when the aircraft is transferred or dropped using the Callsign menu functions, and also using the flight strip when the track is transferred (by this method only to the next controller).


5.4 Manual stand assignment menu

This menu lists the stands at the airport for manual assignment. Stands that are occupied, blocked or already assigned are displayed in grey color. The “[---]” item allows to manually type in the stand designator.

6 Windows

To move a window, drag it from the title bar. To close it, click on the [X] button in the top right corner. To resize (where available), drag the box in the bottom right corner.

6.1 2nd Traffic Situation Window

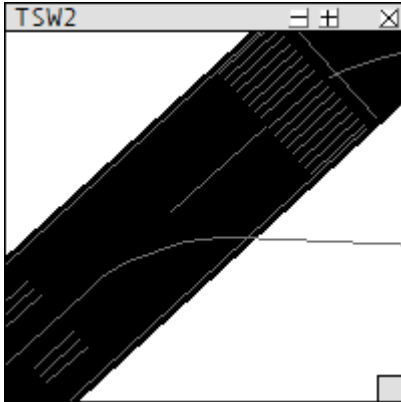


A second Traffic Situation Window can be opened to display another view of the airport. It can be set up to display the same background as the primary one but requires specific plugin maps to be created.

To pan the view, drag somewhere on the display area.

Left-clicking on the [+] button zooms the display in, [-] zooms it out. The available zoom range is 1-100000 pixels/nm, the initial value being 100 pixels/nm. Each click increases or decreases the scale by 25%.

6.2 Approach Window

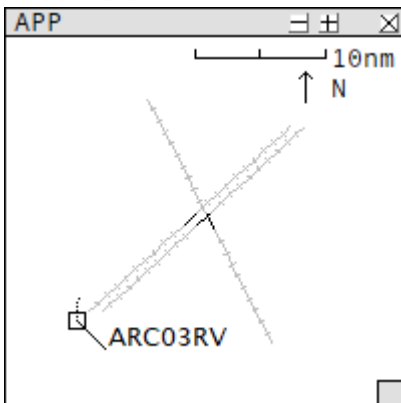

The Approach Window displays traffic around the airport (traffic on the ground at the airport is hidden). The window displays the runway centerlines, and optionally extended centerlines and various maps.

To pan the view, drag somewhere on the display area. The panning is limited so that the airport reference point must stay within the display area.

Left-clicking on the [+] button zooms the display in, [-] zooms it out. The available zoom range is 1-100 pixels/nm, the initial value being 10 pixels/nm. Each click increases or decreases the scale by 25%.

The arrow below the scale, shown if the display has been rotated, points to true north.

Hovering the mouse cursor over a label will display all data fields even if not selected on in the settings.

For the mouse functions in labels, refer to [Label field mouse functions](#)

6.2.1 Uncorrelated track label

ALRT
CALLSIGN FLTID
AFL GS

- AFL Actual flight level
 - At or below the transition altitude the displayed value is the altitude in hundreds of feet, prefixed by “A”.
- ALRT Safety net alert indicator
- CALLSIGN Transponded SSR code
- FLTID Mode S downlinked callsign
- GS Groundspeed in knots

6.2.2 Correlated track label

Departure

Arrival

Overflight/unknown

ALRT FLTID_E ASSR_E COMM
CALLSIGN DRWY DEP
AFL GS
ATYP WTC RMK


ALRT FLTID_E ASSR_E COMM
CALLSIGN ARWY STAND
AFL GS
ATYP WTC RMK

ALRT FLTID_E ASSR_E COMM
CALLSIGN
AFL GS
ATYP WTC RMK

- AFL Actual flight level
 - At or below the transition altitude the displayed value is the altitude in hundreds of feet, prefixed by “A”.
- ALRT Safety net alert indicator
- ARWY Arrival runway identifier, automatically displayed when either:
 - there is more than one active arrival runway, or
 - the assigned runway is not an active arrival runway
- ASSR_E Assigned SSR code if different from the transponded code
- ATYP Aircraft type
- COMM “t” if text only, “r” if voice receive only
- CALLSIGN Callsign
- DRWY Departure runway identifier, automatically displayed when either:
 - there is more than one active departure runway, or
 - the assigned runway is not an active departure runway
- DEP Assigned heading or SID designator
- FLTID_E “S” (unselected)/mode S callsign (selected) if different from correlated flightplan callsign
- GS Groundspeed in knots

- RMK Scratchpad contents
- STAND Assigned arrival stand
 - Highlighted after a change until acknowledged
- WTC Wake turbulence category

6.3 Approach Path Window

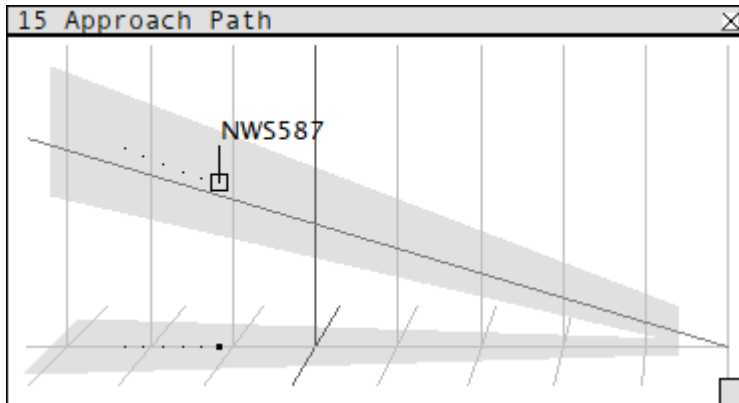

The Approach Path Window displays a vertical and horizontal view of a pre-defined approach. Distance lines are shown at 1 nm intervals.

Hovering the mouse cursor over a label will display all data fields even if not selected on in the settings.

For the mouse functions in labels, refer to [Label field mouse functions](#)

6.3.1 Uncorrelated track label

ALRT
CALLSIGN FLTID
AFL GS

- AFL Actual flight level
 - At or below the transition altitude the displayed value is the altitude in hundreds of feet, prefixed by "A".
- ALRT Safety net alert indicator
- CALLSIGN Transponded SSR code
- FLTID Mode S downlinked callsign
- GS Groundspeed in knots

6.3.2 Correlated track label

Departure

Arrival

Overflight/unknown

```
ALRT FLTID_E ASSR_E COMM
CALLSIGN DRWY DEP
AFL GS
ATYP WTC RMK
```

```
ALRT FLTID_E ASSR_E COMM
CALLSIGN ARWY STAND
AFL GS
ATYP WTC RMK
```

```
ALRT FLTID_E ASSR_E COMM
CALLSIGN
AFL GS
ATYP WTC RMK
```

- AFL Actual flight level
 - At or below the transition altitude the displayed value is the altitude in hundreds of feet, prefixed by “A”.
- ALRT Safety net alert indicator
- ARWY Arrival runway identifier, automatically displayed when either:
 - there is more than one active arrival runway, or
 - the assigned runway is not an active arrival runway
- ASSR_E Assigned SSR code if different from the transponded code
- ATYP Aircraft type
- COMM “t” if text only, “r” if voice receive only
- CALLSIGN Callsign
- DRWY Departure runway identifier, automatically displayed when either:
 - there is more than one active departure runway, or
 - the assigned runway is not an active departure runway
- DEP Assigned heading or SID designator
- FLTID_E “S” (unselected)/mode S callsign (selected) if different from correlated flightplan callsign
- GS Groundspeed in knots
- RMK Scratchpad contents
- STAND Assigned arrival stand
 - Highlighted after a change until acknowledged
- WTC Wake turbulence category

6.4 Runway Configuration Window

RWY Conf
RWY MODE
04L
04R
15 ARR
22L
22R DEP
33

The Runway Configuration Window displays the current activity state of the airport’s runways as either “DEP”, “ARR”, “DEP/ARR” or empty.

6.5 RVR Window

RVR			✕
STRIP	RVR	RVR	
04L/22R		1500	
04R/22L		0550U	
15/33	0800D		

The RVR Window displays the RVR values if available in a received VATSIM METAR. For values reported as variable, the minimum value is shown.

7 Lists

To move the lists, drag from the title bar. To close them, click on the [X] button in the top right corner.

When a scrollbar is displayed, the displayed items can be scrolled one at a time by using the “up” and “down” triangle buttons above and below the scrollbar, by dragging the scrollbar or by clicking the scrollbar area above or below the scrollbar itself (left-clicking scrolls by the number of items displayed, right-clicking moves the scrollbar to the clicked position).

7.1 Time To Threshold List

15 INBOUND							X
TTT	C/S	DTT	TYPE	W	ETA	STAND	
02:20	NWS587	6.1	B738	M	07:43	S47	

The Time To Threshold List displays a list of aircraft approaching that runway. The aircraft are added to the list when they are established on the extended centerline (less than 0.6nm cross track error and ground track within 20 degrees of the runway heading), are less than 30nm from the threshold and at an altitude not more than 5000ft above the airport elevation. The list is sorted according to distance from the threshold, with the closest aircraft at the top.

When an aircraft is on final to a runway other than the one it is supposed to land on, it will be added to the list when it is a bit closer to the threshold, when the plugin code assumes that it will land on the runway regardless of the runway assignment (less than 0.3nm cross track error, ground track within 10 degrees of the runway heading and less than 4nm from the runway threshold).

- TTT Time to threshold (mm:ss) assuming current groundspeed
- C/S Callsign
- DTT Distance to threshold (nm) (selectable field)
- TYPE Type (selectable field)
- W Wake turbulence category (selectable field)
- ETA Estimated time of arrival (hh:mm) (selectable field)
- STAND Assigned arrival stand (selectable field)

7.2 Departure Timer List

22R OUTBOUND				
DT	C/S	TYPE	W	SID ADES
00:36	C-AIDA	TBM9	L	TEVRU3N ENTC
01:31	FIN24SP	A320	M	TEVRU3N EFR0

The Departure Timer List displays aircraft that have recently departed from that runway. The aircraft are added to the list when their groundspeed exceeds 40 knots and are automatically removed after a defined time, 10 minutes by default. They can also be manually removed at any time by left-double-clicking on the DT field. The list is sorted according to departure time, with the most recently departed aircraft at the top.

- DT Elapsed time (mm:ss) from departure
- C/S Callsign
- TYPE Type (selectable field)
- W Wake turbulence category (selectable field)
- SID SID designator (selectable field)
- ADES Destination ICAO code (selectable field)

7.3 Alerts List

ALERTS	
C/S	ALERT
C-AIDA	No taxi clearance

The Alerts List displays the active alerts and informations provided by the safety nets. The list is sorted to display the alerts first, sorted according to the callsign, and then the informations.

- C/S Callsign
- ALERT Alert or information type

It is possible to cancel APM “Area penetration” and RVM “Restriction” alerts for a stationary track by left-clicking the callsign in the Alerts List. The alerts will be automatically activated again when the track starts moving.

7.4 Arrival List

ARR						
RWY	C/S	TYPE	W	ADEP	ETA	STAND
22R	NWS587	B738	M	UUEE	07:56	S49

The Arrival List displays flights inbound to the airport, estimated to arrive within the next 60 minutes. The list is sorted according the estimated time of arrival, with the first to arrive on top. Setting a flight's ground state to "Parked" will remove it from the list.

- RWY Arrival runway (selectable field)
- C/S Callsign
- TYPE Type (selectable field)
- W Wake turbulence category (selectable field)
- ADEP Departure airport ICAO code (selectable field)
- ETA Estimated time of arrival (hh:mm) (selectable field)
- STAND Assigned arrival stand (selectable field)


7.5 Departure List

DEP							
C/S	TYPE	W	EOBT	STAND	ADES	RWY	SID
AFL24	A319	M	16:15	125	ULLI	22R	ARVEP3N
BAW136K	A319	M	15:10	19	EFRO	22R	TEVRU3N
C-AIDA	TBM9	L	02:30		ENTC	22R	TEVRU3N
EIN125	A320	M	16:35	27	EIDW	22R	ADIVO3N
FIN101X	A321	M	05:25		EFRO	22R	TEVRU3N
FIN24SP	A320	M	14:57		EFRO	22R	TEVRU3N
FIN24VR	A319	M	17:00	20	EFRO	22R	TEVRU3N
FIN6EB	A319	M	00:00	W34	EFRO	22R	TEVRU3N
FIN8PN	A321	M	16:19		EFRO	22R	TEVRU3N
IBK124	B738	M	16:15		EFRO	22R	TEVRU3N

The Departure List displays flights departing from the airport. The list is sorted alphabetically on C/S.

- C/S Callsign
- TYPE Type (selectable field)
- W Wake turbulence category (selectable field)
- EOBT Estimated off-block time (hh:mm) (selectable field)
- STAND Departure stand (selectable field)
- ADES Destination airport ICAO code (selectable field)
- RWY Departure runway (selectable field)
- SID SID designator (selectable field)

7.6 Stands List

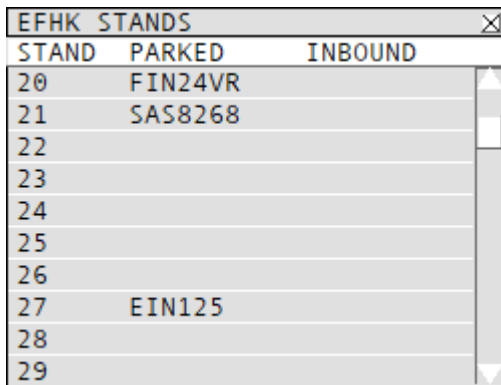

STAND	PARKED	INBOUND
20	FIN24VR	
21	SAS8268	
22		
23		
24		
25		
26		
27	EIN125	
28		
29		

The Stands List shows an overview of the stand allocation status at the airport. It also allows to manually assign arrival stands, mark stands as occupied by a specific aircraft, or to block stands from automatic allocation. Blocked stands are displayed with grey text if automatically blocked, red text if manually blocked.

In addition to the Settings menu, the number of displayed stands can be adjusted by dragging the “down” triangle button below the scrollbar when it’s visible.

- STAND Left-click to toggle manually blocked status
- PARKED Left-click to open a menu to mark the stand occupied by an aircraft, or to clear the information when it exists
- INBOUND Left-click to open a menu to manually assign the stand for an aircraft

Stands defined as an area (capable of parking multiple aircraft) will display the number of aircraft parked and assigned to park there in the “PARKED” and “INBOUND” columns. It is not possible to manually set an area stand as occupied by an aircraft.

The “Parked” menu shows all aircraft within 5nm of the airport reference point, and the “Inbound” menu all aircraft arriving at that airport regardless of distance to the airport. When assigning a stand, it may take a couple of seconds until it shows in the window as the stand assignments are refreshed every 5 seconds within the plugin.

8 Safety Nets

In the ground mode of the plugin, the following potentially unsafe situations are highlighted by presenting an alert indication in the track label. If more than one alert is active simultaneously, the first one in the below order is shown. The alerts are also shown in the Alerts List, and by coloring the callsign item appropriately in other lists. The safety nets can be toggled on/off using the buttons on the Global Menu bar. The button that controls each alert is shown boxed before the alert name in the list below.

8.1 Runway Monitoring and Conflict Alerting (RMCA)

RMCA displays conflicts between aircraft on a runway or on approach. In addition to monitoring single runways, it also looks for conflicts on crossing runways. Whether the conflict is shown as an alert or information depends on its severity (closure rate, time to threshold, etc.)

CONFLICT

RIM RMCA conflict alert

CONFLICT

RIM RMCA conflict information

8.2 Conformance Monitoring Alerts for Controllers (CMAC)

CMAC provides alerts when aircraft deviate or potentially deviate from clearances or normal procedures.

NO TOF CLR

CVM No take-off clearance alert

Departing aircraft above 20kts ground speed on runway without "DEPA" state

RWY INCURSION

RIM Runway Incursion Monitoring alert

Departing aircraft on:

- its departure runway with a ground state other than "LINE UP" or "DEPA"
- another runway with a ground state other than "TAXI"
- any runway with a ground state other than "TAXI", "LINE UP" or "DEPA" when no departure runway has been set

HIJACK

ECM Emergency Code Monitoring alert

COMFAIL

Displayed for squawks 7500, 7600 and 7700 within 30nm of the airport

EMERG

RWY CLOSED

APM Runway closed alert

Aircraft on a closed runway

RWY TYPE

RVM Runway type alert

Aircraft on a runway not suitable for it

TWY TYPE

RVM Taxiway type alert

Aircraft on a taxiway not suitable for it

APM

APM Area Penetration Monitoring alert

Aircraft inside an area prohibited for all traffic

RESTRICTION

RVM Restriction Violation Monitoring alert

Aircraft inside an area prohibited for it

TWY CLOSED	APM Taxiway closed alert <i>Aircraft on a closed taxiway</i>
HIGH SPEED	CVM High speed alert <i>Aircraft moving very fast (over 55kts ground speed) outside a runway</i>
STATIONARY RPA	CVM Stationary within the runway protected area alert <i>Arriving aircraft stopped inside a runway protected area</i>
RWY CLOSED	APM Runway closed information <i>Aircraft assigned a closed runway</i>
RWY TYPE	RVM Runway type information <i>Aircraft assigned a runway not suitable for it</i>
NO CONTACT	CVM No contact information <i>Arriving aircraft still in "transfer in" state, less than 120sec/4nm to threshold</i>
TRANSFER?	CVM No transfer information <i>Departing aircraft still assumed and outside a defined volume (height above airport elevation, distance from reference point) (applicable only when logged in as GND or TWR)</i>
HIGH SPEED	CVM High speed information <i>Aircraft moving fast (40-55kts ground speed) outside a runway</i>
NO TAXI CLR	CVM No taxi clearance information <i>Departing aircraft moving forward with ground state "none", "ON FREQ", "DEICE" or "START UP", or over 10kts ground speed with ground state "PUSH"</i>
NO PUSH CLR	CVM No pushback clearance information <i>Departing aircraft moving backward with ground state "none", "ON FREQ", "DEICE" or "START UP"</i>
STAND	OSM Occupied Stand Monitoring alert <i>Arriving aircraft whose stand is currently occupied (This alert is only displayed on the track label)</i>
ARWY	RUM Runway Usage Monitoring alert <i>Arriving aircraft assigned an arrival runway that is not active for arrivals when there is at least one active arrival runway (ARWY item shown with a red background)</i>
DRWY	RUM Runway Usage Monitoring alert <i>Departing aircraft assigned a departure runway that is not active for departures when there is at least one active departure runway (DRWY item shown with a red background)</i>

9 Tag items and functions

The plugin includes a number of tag items and functions to use in EuroScope flight lists or track labels.

9.1 Tag items

Arrival stand	Displays the assigned arrival stand. Colored with ES color “Emergency” if the stand is occupied or blocked, “Information” if the assignment has changed.
Departure stand	Displays the departure stand (only as long as the aircraft is still there)
Ground state	Displays the aircraft’s ground state using the plugin’s custom texts for them, including the plugin specific ground states. The displayed text for each state is adjustable using the plugin settings.

9.2 Tag functions

Open Ground state menu	Opens the Ground state menu
Open Stand menu	Opens the Stand assignment menu . When the aircraft has a changed stand assignment, instead of opening the menu, this tag function clears the “Information” color.