



# HD Integrated Camera Interface Specifications

Version 1.05  
January 19, 2015

AVC Networks Company  
Panasonic Corporation

## Change History

Date	Description	Version
Mar. 23, 2011	Issued the first edition.	1.00
Sep. 14, 2011	<ul style="list-style-type: none"><li>• HTTP1.0→HTTP1.1</li><li>• Status of the support provided changed: AW-HE50 camera is not supported, and AW-HE50 camera is supported by Ver.2 or a later version.</li></ul>	1.01
Jan. 19, 2011	<ul style="list-style-type: none"><li>• AW-HE120 camera supported.</li></ul>	1.02
Oct. 9, 2012	<ul style="list-style-type: none"><li>• AW-HE60 camera supported.</li></ul>	1.03
Nov. 28, 2014	<ul style="list-style-type: none"><li>• AW-HE130 camera supported.</li></ul>	1.04
Jan. 19, 2015	<ul style="list-style-type: none"><li>• AW-HE40/AW-HE65/AW-HE70 cameras supported.</li></ul>	1.05

## Contents

[Total: 175 pages]

1. Introduction.....	5
2. Configuration outline.....	5
3. Camera and pan-tilt head control .....	6
3.1. Pan-tilt head control.....	6
3.1.1. Power On/Standby .....	9
3.1.2. Installation and smart picture flip commands .....	10
3.1.3. Pan/tilt .....	11
3.1.4. Movement range limit On/Off.....	14
3.1.5. Lens operations .....	15
3.1.6. Lens information notification .....	18
3.1.7. Preset.....	19
3.1.8. Tally .....	21
3.1.9. Wireless remote controller setting .....	22
3.1.10. Zoom position-linked pan/tilt speed adjustment On/Off .....	23
3.1.11. Software version information .....	24
3.1.12. Error information .....	26
3.2. Camera control .....	28
3.2.1. Lens operations .....	31
3.2.2. Color Bars setting .....	37
3.2.3. Scene file setting.....	38
3.2.4. Shutter mode setting.....	39
3.2.5. Frame mix setting .....	45
3.2.6. Gain setting.....	47
3.2.7. Color settings .....	50
3.2.8. Chroma level setting .....	84
3.2.9. AWB/ABB setting .....	85
3.2.10. Detail setting .....	91
3.2.11. Flesh Tone Mode setting.....	97
3.2.12. Digital noise reduction (DNR) setting .....	98
3.2.13. Pedestal setting .....	99
3.2.14. Gamma/DRS setting.....	101
3.2.15. Backlight compensation setting .....	104
3.2.16. Genlock setting .....	105
3.2.17. Output setting.....	107
3.2.18. Preset playback range setting .....	112
3.2.19. Digital zoom settings.....	113
3.2.20. Camera information acquisition .....	115
3.2.21. OSD menu .....	116
3.2.22. Smart picture flip information .....	119
3.2.23. Focus Adjust with PTZ setting .....	120

3.2.24.	Frequency setting .....	121
3.2.25.	Error information .....	122
3.2.26.	Option switch settings .....	123
3.2.27.	Audio settings .....	124
3.2.28.	Tally Brightness settings .....	125
3.2.29.	Knee settings .....	126
3.2.30.	White Clip settings .....	127
3.2.31.	OIS settings .....	128
3.2.32.	HDR settings.....	129
4.	Camera information update notification .....	130
4.1.	Procedure for receiving the update notifications .....	131
4.2.	Data format for update notifications.....	133
4.3.	Setting change sequence .....	134
4.3.1.	Changing the settings from a terminal.....	134
4.3.2.	Setting value initialization .....	137
4.3.3.	Scene file selection .....	146
4.4.	Special sequences.....	154
4.4.1.	Version information notification.....	154
4.4.2.	Error information .....	155
4.4.3.	LPI information (lens information).....	158
4.4.4.	Preset playback .....	159
4.4.5.	AWB/ABB execution .....	160
4.4.6.	AWB Mode switching.....	162
5.	Camera information batch acquisition .....	163
6.	Error return .....	173
<Appendix>	.....	175

## 1. Introduction

This manual describes the external interface specifications which are applicable when the HD integrated camera is operated using Ethernet.

It consists of three main sections, namely, camera and pan-tilt head control, camera information update notifications and error return.

Applicable models

- AW-HE50 series\*, AW-HE120 series, AW-HE60 series, AW-HE130 series  
AW-HE40 series, AW-HE65 series, AW-HE70 series

※The functions indicated as “Ver.2” in the text can be used when the activation process has been completed after the upgrade kit (AW-HEF5) is applied.

## 2. Configuration outline

This manual has the following general configuration.

### ① Camera and pan-tilt head control

It is possible to control the pan, tilt and white balance adjustments.

It is also possible to acquire the gain and other camera information by initiating queries.

The various functions are employed for the operations with the camera using HTTP which is the host protocol of TCP.

For further details, refer to chapter 3.

### ② Camera information update notification

The local terminal is notified of the values of the gain and other settings which have been changed at another terminal or other terminals so that it can acquire the camera information.

This feature is useful when one camera is controlled by a multiple number of terminals, and when the setting for enabling update notifications to be received has been established, the information which has been changed by other terminals can be acquired.

For further details, refer to chapter 4.

### ③ Camera information batch acquisition

The camera information can be acquired in batch form. Since there is no need to query each and every camera information item when this feature is used, the feature is useful when all the camera information is required such as at startup.

For further details, refer to chapter 5.

### ④ Error return

An error — whether ER1, ER2 or ER3 — is returned when an error has been generated by a command in ① above or when the AWB result contains an error.

For further details, refer to chapter 6.

### 3. Camera and pan-tilt head control

Given below are the external interfaces which are used when operating the camera using Ethernet. This chapter presents the following details.

① Pan-tilt head control

This interface controls the pan-tilt head, and it uses the “pan-tilt head control commands”.

② Camera control

This interface is concerned with the camera’s lens control and image adjustments, and it uses the “camera control commands”.

#### 3.1. Pan-tilt head control

The pan-tilt head control commands are in compliance with the HTTP1.1 communication specifications. Their format is given below.

For details on the HTTP messages, refer to <Appendix>.

##### 【Command format】

[Send]

http://[**IP Address**]/cgi-bin/aw\_ptz?cmd=[**Command**]&res=[**Type**]

where

※**IP Address**..... IP address of camera at connection destination

※**Command**..... Details given in “Command” column in the command tables below

※**Type**..... Fixed at “1”

[Receive]

200 OK “**Command**”

※**Command**..... Response value of each command; set in the HTTP message body

##### Example: Pan/tilt (Stop)

[Send]

http://192.168.0.10/cgi-bin/aw\_ptz?cmd=#PTS5050&res=1

[Receive]

200 OK “**pTS5050**”

※Depending on the browser or middleware used, “#” may have to be converted to “%23” by ASCII conversion.

http://192.168.0.10/cgi-bin/aw\_ptz?cmd=%23PTS5050&res=1

Given below is the communication sequence which accords with the command format presented on the previous page.

For the communication sequence of the errors generated in response to commands which have been sent, refer to “6. Error return”.

### 【Sequence】

“PC1” is the control terminal in the sequence below.

#### **Example:** Pan/tilt (Stop) control

Camera IP Address = 192.168.0.10

Command = PTS5050

The control to stop the pan-tilt operation is exercised from PC1. [200 OK “pTS5050”] is returned as the response from the camera.

The control command and query command are available as the pan-tilt head control commands. Given below is the command sequence.

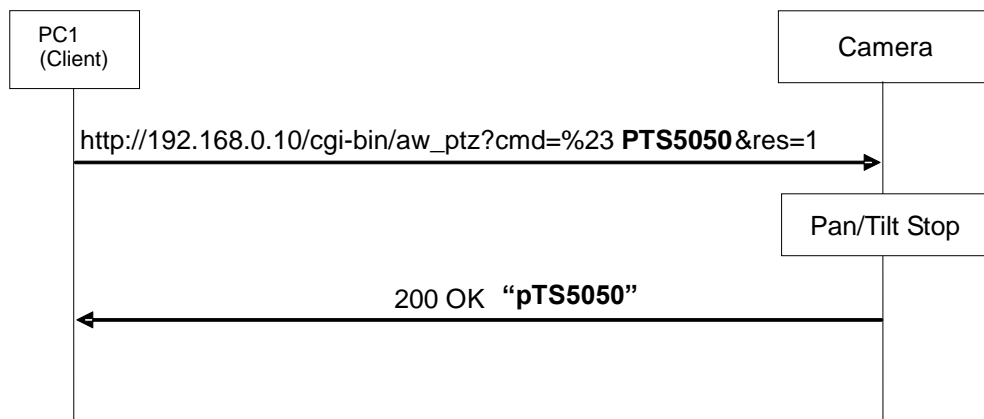


Fig.3.1-1 Command sequence of pan-tilt head control

It must be borne in mind that communication with the camera is subject to some restrictions. These restrictions are as follows.

### 【Restrictions】

1. When using the pan-tilt head control commands, send the commands with a gap of 130 ms between each command. Given below is the sequence.

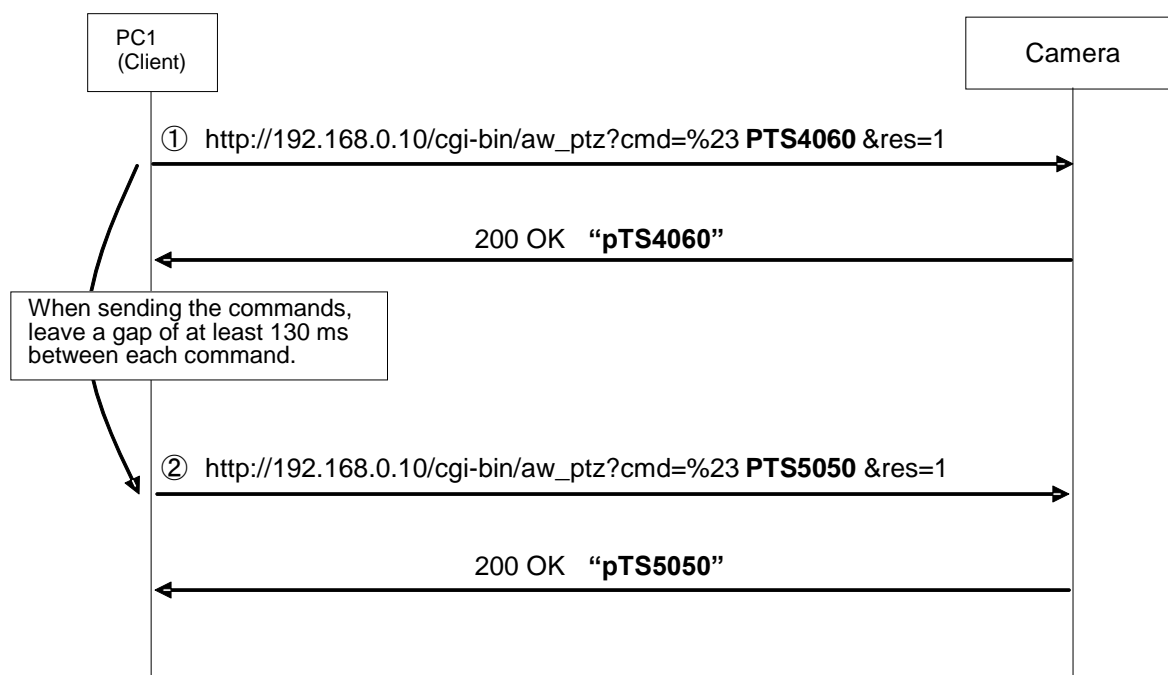


Fig.3.1-2 Restrictions

2. The number of sessions during which the camera can be accessed simultaneously is as follows.
  - a) Maximum number of HTTP sessions: 72
  - b) Number of terminals which can receive update notifications at the same time: 5  
When the AW-RP50 is connected, it is counted as one unit.
3. Keep-Alive cannot be set with HTTP connections.  
Connect and disconnect are performed each time a command is sent or received.
4. Some settings and conditions may restrict the effects of other settings (※including those with exclusive control conditions). See also the operating instructions which are provided with the products.
5. Send the commands which change the settings only at the point in time when the changes are required. (Do not send them at regular intervals.)  
※ The applicable models incorporate an EEPROM for storing the settings, and each time a command that changes the settings is received, data is written in the EEPROM. The number of times data can be written in the EEPROM is limited so if data is sent frequently, the model will cease to operate normally when the maximum number of times for writing the data has been reached.



### 3.1.1. Power On/Standby

These commands enable the power On/Standby of the camera to be controlled and the current power On/Standby statuses to be acquired.

Table 3.1.1. Power On/Standby

Command name	Category	Command	Data value	Setting	Remarks
Power On/ Standby control command	Control	#O[Data]	0 f 1 n	Standby Standby Power On Power On	
	Response	p[Data]			
Power On/ Standby query command	Request	#O	None		
	Response	p[Data]	0 1	Standby Power On	
			3	Transferring from Standby to ON	※Only supported by the AW-HE120/ AW-HE130/AW-HE40/AW-HE65/ AW-HE70.

Example of use) Power: On

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_ptz?cmd=%23O1&res=1

**[Response]** AW-HE50 → PC

200 OK "p1"

### 3.1.2. Installation and smart picture flip commands

These commands control the method used for the installation of the camera (stand-alone or suspended) and smart picture flip, and they enable the current installation and smart picture flip settings to be acquired.

Table 3.1.2. Installation position

Command name	Category	Command	Data value	Setting	Remarks
Installation position control command	Control	#INS[Data]	0 1	Desktop Hanging	
	Response	iNS[Data]			
Installation position query command	Request	#INS	None		
	Response	iNS[Data]	0 1	Desktop Hanging	
Smart picture flip Auto/Off control command	Control	#SPF[Data]	0	Off	<ul style="list-style-type: none"> <li>This command enables smart picture flip to be set to Auto or Off</li> <li>※Only supported by the AW-HE120/AW-HE130.</li> </ul>
	Response	sPF[Data]	1	Auto	
Smart picture flip Auto/Off query command	Request	#SPF	None		<ul style="list-style-type: none"> <li>※Only supported by the AW-HE120/AW-HE130.</li> </ul>
	Response	sPF[Data]	0 1	Off Auto	
Smart picture flip angle setting control command	Control	#FDA[Data]	3C ┐ 78	60degree ┐ 120degree	<ul style="list-style-type: none"> <li>This command enables the angle of smart picture flip to be set.</li> <li>※Only supported by the AW-HE120/AW-HE130.</li> </ul>
	Response	fDA[Data]			
Smart picture flip angle setting query command	Request	#FDA	None		<ul style="list-style-type: none"> <li>※Only supported by the AW-HE120/AW-HE130.</li> </ul>
	Response	fDA[Data]	3C ┐ 78	60degree ┐ 120degree	

Example of use)

• Installation position: Desktop

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_ptz?cmd=%23INS0&res=1

**[Response]** AW-HE50 → PC

200 OK "iNS0"

• Smart picture flip: Auto

**[Control]** PC → AW-HE120

http://192.168.0.10/cgi-bin/aw\_ptz?cmd=%23SPF1&res=1

**[Response]** AW-HE120 → PC

200 OK "sPF1"

• Smart picture flip angle: 60deg

**[Control]** PC → AW-HE120

http://192.168.0.10/cgi-bin/aw\_ptz?cmd=%23FDA3C&res=1

**[Response]** AW-HE120 → PC

200 OK "fDA3C"

### 3.1.3. Pan/tilt

These commands enable the pan and tilt of the pan-tilt head of the camera to be controlled and the current position information and operating speed to be acquired.

Table 3.1.3. Pan/tilt

Command name	Category	Command	Data value	Setting	Remarks
Pan/tilt position control command (specify an absolute value)	Control	#APC[Data1][Data2]	[Data1] 0000 } 8000 } FFFF [Data2] 0000 } 8000 } FFFF	[Data1]Pan Pos ccwLimit  center  cwLimit [Data2]Tilt Pos upLimit  center  downLimit	<ul style="list-style-type: none"> <li>• The pan-tilt head moved to the home position by #APC[8000][8000].</li> <li>• Pan(−175) – (+175)deg 2D08 – D2F5</li> <li>■ In the case of the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70</li> <li>• Tilt(−30) – (+90)deg 5556 – 8E38</li> <li>■ In the case of the AW-HE120/AW-HE130</li> <li>• Tilt(−30) – (+210)deg 1C73 – 8E38</li> <li>• The resolution is calculated to be 29.7 sec.</li> </ul>
	Response	aPC[Data1][Data2]			
Pan/tilt position query command (specify an absolute value)	Request	#APC	None		
	Response	aPC[Data1][Data2]	[Data1] 0000 } 8000 } FFFF [Data2] 0000 } 8000 } FFFF	[Data1]Pan Pos ccwLimit  center  cwLimit [Data2]Tilt Pos upLimit  center  downLimit	
Pan/tilt position/speed control command (specify an absolute value)	Control	#APS[Data1][Data2][Data3][Data4]	[Data1] 0000 } 8000 } FFFF [Data2] 0000 } 8000 } FFFF [Data3] 00 } 1D [Data4] 0 1 2	[Data1]Pan Pos ccwLimit  center  cwLimit [Data2]Tilt Pos upLimit  center  downLimit [Data3]Pst Spd 1 } 30 [Data4]Spd Tbl SLOW MID FAST	※Only supported by the AW-HE130/AW-HE40/AW-HE65/AW-HE70. • The pan-tilt head is moved to the home position by #APC[8000][8000][ ][ ]. For range, refer to #APC.
	Response	aPS[Data1][Data2][Data3][Data4]			

Command name	Category	Command	Data value	Setting	Remarks
Pan/tilt position control command (specify an relative value)	Control	#RPC[Data1][Data2]	[Data1] 0000 } 8000 } FFFF [Data2] 0000 } 8000 } FFFF	[Data1]Pan Pos ccwLimit  center  cwLimit [Data2]Tilt Pos upLimit	※Only supported by the AW-HE130/AW-HE40/AW-HE65/AW-HE70. • The pan-tilt head is moved to the current position by #RPC[8000][8000]  For range, refer to #APC.
	Response	rPC[Data1][Data2]	8000 } FFFF	center  downLimit	
Pan/tilt position/speed control command (specify an relative value)	Control	#RPS[Data1][Data2][Data3][Data4]	[Data1] 0000 } 8000 } FFFF [Data2] 0000 } 8000 } FFFF [Data3] 00 } 1D [Data4] 0 1 2	[Data1]Pan Pos ccwLimit  center  cwLimit [Data2]Tilt Pos upLimit  downLimit [Data3]Pst Spd 1 } 30 [Data4]Spd Tbl SLOW MID FAST	※Only supported by the AW-HE130/AW-HE40/AW-HE65/AW-HE70. • The pan-tilt head is moved to the current position by #RPS[8000][8000][][]  For range, refer to #APC.
	Response	rPS[Data1][Data2][Data3][Data4]	8000 } FFFF [Data3] 00 } 1D [Data4] 0 1 2	center  downLimit [Data3]Pst Spd 1 } 30 [Data4]Spd Tbl SLOW MID FAST	
Speed (pan/tilt) control command	Control	#P[Data]	01 } 49 50 51 } 99	Left Max. Speed } Left Min. Speed Pan Stop Right Min. Speed } Right Max. Speed	Pan speed to be controlled
	Response	pS[Data]			
	Control	#T[Data]	01 } 49 50 51 } 99	Down Max. Speed } Down Min. Speed Tilt Stop UP Min. Speed } UP Max. Speed	Tilt speed to be controlled
	Response	tS[Data]			

Command name	Category	Command	Data value	Setting	Remarks
Speed (pan/tilt) control command	Control	#PTS[Data1][Data2]	[Data1]	[Data1]	[Data1]
			01	Left Max. Speed	Pan speed control
			∟	∟	[Data2]
			49	Left Min. Speed	Tilt speed control
			50	Pan Stop	
			51	Right Min. Speed	
			∟	∟	
			99	Right Max. Speed	
			[Data2]	[Data2]	
			01	Down Max. Speed	
			∟	∟	
			49	Down Min. Speed	
			50	Tilt Stop	
			51	UP Min. Speed	
			∟	∟	
			99	UP Max. Speed	
	Response	pTS[Data1][Data2]			

Example of use)

- Camera control: PAN= 7FFF, TILT= 7FFF (Home position)

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_ptz?cmd=%23APC7FFF7FFF&res=1

**[Response]** AW-HE50 → PC

200 OK "aPC7FFF7FFF"

- Pan speed control: max. speed to the right

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_ptz?cmd=%23P99&res=1

**[Response]** AW-HE50 → PC

200 OK "pS99"

- Tilt speed control: max. speed downward

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_ptz?cmd=%23T01&res=1

**[Response]** AW-HE50 → PC

200 OK "tS01"

- Pan/tilt speed control: max. speed to the left, max. speed upward

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_ptz?cmd=%23PTS0199&res=1

**[Response]** AW-HE50 → PC

200 OK "pTS0199"

### 3.1.4. Movement range limit On/Off

These commands enable the movement range settings (limiter settings) for the pan and tilt of the camera and the information of the current movement range limits to be acquired.

Up, down, left and right limits can be set.

Table 3.1.4. Movement range limit On/Off

Command name	Category	Command	Data value	Setting	Remarks
Movement range limit On/Off control command	Control	#LC[Data1] [Data2]	[Data1] 1 2 3 4 [Data2] 0 1	[Data1] Up Down Left Right [Data2] Release Set	The directions in which the movement range is to be limited are controlled, and limit set or release is controlled. [Data1] Control in the movement range limit direction [Data2] Limit set/release
	Response	IC[Data1][Data2]			
	Control	#L[Data]	1 2 3 4	Up Down Left Right	The direction in which the movement range is to be limited is controlled. • Operation toggles between set and release.
	Response	I [Data]	0 1	Release Set	Limit set/release
Movement range limit On/Off query command	Request	#LC[Data]	1 2 3 4	Up Down Left Right	
	Response	IC[Data1][Data2]	[Data1] 1 2 3 4 [Data2] 0 1	[Data1] Up Down Left Right [Data2] Release Set	[Data1] Control in the movement range limit direction [Data2] Limit set/release

Example of use)

- Setting the movement range limit in the upward direction

**[Control]** PC → AW-HE50

[http://192.168.0.10/cgi-bin/aw\\_ptz?cmd=%23LC11&res=1](http://192.168.0.10/cgi-bin/aw_ptz?cmd=%23LC11&res=1)

**[Response]** AW-HE50 → PC

200 OK "IC11"

- Releasing the movement range limit in the upward direction

**[Control]** PC → AW-HE50

[http://192.168.0.10/cgi-bin/aw\\_ptz?cmd=%23LC10&res=1](http://192.168.0.10/cgi-bin/aw_ptz?cmd=%23LC10&res=1)

**[Response]** AW-HE50 → PC

200 OK "IC10"

- Setting/releasing the movement range limit in the upward direction

**[Control]** PC → AW-HE50

[http://192.168.0.10/cgi-bin/aw\\_ptz?cmd=%23L1&res=1](http://192.168.0.10/cgi-bin/aw_ptz?cmd=%23L1&res=1)

**[Response]** AW-HE50 → PC

200 OK "I1"

### 3.1.5. Lens operations

#### 3.1.5.1. Zoom

These commands control the zooming (between Wide and Tele) of the camera lens and enable the current zoom position and zooming speed to be acquired.

Table 3.1.5.1. Zoom

Command name	Category	Command	Data value	Setting	Remarks
Zoom (position control) control command	Control	#AXZ[Data]	555 ⌋ FFF	Wide ⌋ Tele	
	Response	axz[Data]			
Zoom position query command	Request	#GZ	None		
	Response	gz[Data]	555 ⌋ FFF “---”	Wide ⌋ Tele Standby	The “---” setting is supported only by the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70.
Zoom (speed control) control command	Control	#Z[Data]	01 ⌋ 49 50 51 ⌋ 99	Wide Max. Speed ⌋ Wide Min. Speed Zoom Stop Tele Min. Speed ⌋ Tele Max. Speed	Zooming speed to be controlled
	Response	zS[Data]			

Example of use)

•Zoom: Tele

**[Control]** PC → AW-HE50

[http://192.168.0.10/cgi-bin/aw\\_ptz?cmd=%23AXZFFF&res=1](http://192.168.0.10/cgi-bin/aw_ptz?cmd=%23AXZFFF&res=1)

**[Response]** AW-HE50 → PC

200 OK “axzFFF”

•Speed control: zooming max. speed in Wide direction

**[Control]** PC → AW-HE50

[http://192.168.0.10/cgi-bin/aw\\_ptz?cmd=%23Z01&res=1](http://192.168.0.10/cgi-bin/aw_ptz?cmd=%23Z01&res=1)

**[Response]** AW-HE50 → PC

200 OK “zS01”

### 3.1.5.2. Focus

These commands control the focusing (between Near and Far) of the camera and enable the current focus position and focus adjustment speed to be acquired.

They also enable On/Off for the auto focus to be controlled and the current auto focus On/Off status to be acquired.

Commands which control the focusing are also described in section “3.2.1.1. Focus” of “3.2. Camera control”.

Table 3.1.5.2. Focus

Command name	Category	Command	Data value	Setting	Remarks
Focus (position control) control command	Control	#AXF[Data]	555 }	Near }	• Invalid when auto focus is On (ER3 is returned).
	Response	axf[Data]	FFF	Far	
Focus position query command	Request	#GF	None		
	Response	gf[Data]	555 } FFF “---”	Near } Far Standby	The “---” setting is supported only by the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70.
Focus (speed control) control command	Control	#F[Data]	01 } 49 50 51 } }	Near Max. Speed } Near Min. Speed Focus Stop Far Min. Speed } }	• Focusing speed to be controlled • Invalid when auto focus is On (ER3 is returned).
	Response	fS[Data]	99	Far Max. Speed	
Auto focus On/Off control command	Control	#D1[Data]	0 1	Off(Manual) On(Auto)	• In case of AW-HE130, auto focus cannot be set to On when FrameMix is set to 18 [dB] or higher.
	Response	d1[Data]			
Auto focus On/Off query command	Request	#D1	None		
	Response	d1[Data]	0 1	Off(Manual) On(Auto)	

Example of use)

• Focus: Near

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_ptz?cmd=%23AXF555&res=1

**[Response]** AW-HE50 → PC

200 OK “axf555”

• Speed control: max. focusing speed in Far direction

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_ptz?cmd=%23F99&res=1

**[Response]** AW-HE50 → PC

200 OK “fS99”

• Auto focus: auto focus start

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_ptz?cmd=%23D11&res=1

**[Response]** AW-HE50 → PC

200 OK “d11”



### 3.1.5.3. Iris

These commands control the iris (between Close and Open) of the camera and enable the current iris position to be acquired.

In addition, they enable Auto/Manual control of the iris and the current iris Auto/Manual statuses to be acquired.

Commands which control the iris are also described in section “3.2.1.2. Iris” of “3.2. Camera control”.

Table 3.1.5.3. Iris

Command name	Category	Command	Data value	Setting	Remarks
Iris position control command	Control	#I [Data]	01 }	Iris Close }	
	Response	iC[Data]	99	Iris Open	
	Control	#AXI [Data]	555 }	Iris Close }	
	Response	axi [Data]	FFF	Iris Open	
Iris position Auto/Manual query command	Request	#GI	None		
	Response	gi [Data1] [Data2]	[Data1] 555 } FFF “---” [Data2] 0 1	Iris Close } Iris Open Standby  Manual Iris Auto Iris	<ul style="list-style-type: none"> <li>The “---” setting is supported only by the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70.</li> <li>In case of AW-HE130, auto focus cannot be set to On when FrameMix is set to 18 [dB] or higher.</li> </ul>
Auto Iris On/Off control command	Control	#D3[Data]	0 1	Manual Iris Auto Iris	
	Response	d3[Data]			
Auto Iris On/Off query command	Request	#D3	None		
	Response	d3[Data]	0 1	Manual Iris Auto Iris	

Example of use)

• Iris: Open

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_ptz?cmd=%23I99&res=1

**[Response]** AW-HE50 → PC

200 OK “iC99”

• Iris: Close

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_ptz?cmd=%23AXI555&res=1

**[Response]** AW-HE50 → PC

200 OK “axi555”

• Auto iris: On

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_ptz?cmd=%23D31&res=1

**[Response]** AW-HE50 → PC

200 OK “d31”

### 3.1.6. Lens information notification

These commands enable On or Off to be set for the lens information notification of the camera and the current lens information notification On/Off status and lens information to be acquired.

Table 3.1.6. Lens information notification On/Off

Command name	Category	Command	Data value	Setting	Remarks
Lens information notification On/Off control command	Control	#LPC[Data]	0 1	Off On	Off: Information is not posted. On: Information is posted.
	Response	IPC[Data]			
Lens information notification On/Off query command	Request	#LPC	None		
	Response	IPC[Data]	0 1	Off On	Off: Information is not posted. On: Information is posted.
Lens information query command	Request	#LPI	None		
	Response	IPI [Data1] [Data2][Data3]	[Data1] 555 } FFF [Data2] 555 } FFF [Data3] 555 } FFF	[Data1] Zoom Position Wide } Tele [Data2] Focus Position Near } Far [Data3] Iris Position Close } Open	[Data1] Same return as #GZ [Data2] Same return as #GF [Data3] Same return as #GI  • The command is sent periodically (every 300 ms) to all the channels to which the command can be sent.

Example of use)

- Lens information notification: On

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_ptz?cmd=%23LPC1&res=1

**[Response]** AW-HE50 → PC

200 OK "IPC1"

- Lens information acquisition

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_ptz?cmd=%23LPI&res=1

**[Response]** AW-HE50 → PC

200 OK "IPI [Data1][Data2][Data3]"

### 3.1.7. Preset

These commands register and play back the presets of the camera and enable the preset number last played back to be acquired.

They also enable the preset speed to be registered and the current preset speed to be acquired.

Table 3.1.7. Preset

Command name	Category	Command	Data value	Setting	Remarks
Preset (register) control command	Control	#M[Data]	00 } 99	Preset 001 } Preset 100	
	Response	s[Data]			
Preset (playback) control command	Control	#R[Data]	00 } 99	Preset 001 } Preset 100	
	Response	s[Data]			
Preset number query command	Request	#S	None		Request for preset number last played back
	Response	s[Data]	00 } 99	Preset 001 } Preset 100	
Preset Speed control command	Request	#UPVS[Data]	000 250 } 999	30 : MaxSpeed 1 : Slow } 30 : Fast	
	Response	uPVS[Data]			
Preset Speed query command	Request	#UPVS			
	Response	uPVS[Data]	250 } 999	1 : Slow } 30 : Fast	
Freeze during preset control command	Control	#PRF[Data]	0 1	OFF ON	※Only supported by the AW-HE130/AW-HE40/AW-HE65/AW-HE70.
	Response	pRF[Data]	0 1	OFF ON	
Freeze during preset query command	Request	#PRF	None		※Only supported by the AW-HE130/AW-HE40/AW-HE65/AW-HE70.
	Response	pRF[Data]	0 1	OFF ON	
Preset Speed Table control command	Control	#PST[Data]	0 1 2	SLOW MID HIGH	※Only supported by the AW-HE130/AW-HE40/AW-HE65/AW-HE70.
	Response	pST[Data]	0 1 2	SLOW MID HIGH	
Preset Speed Table query command	Request	#PST	None		※Only supported by the AW-HE130/AW-HE40/AW-HE65/AW-HE70.
	Response	pST[Data]	0 1	OFF ON	

※After the presets have all been played back, the completion notification is sent in the “q\*\*” format.  
For details, refer to “4.4.4. Preset playback”.

Example of use)

- Preset: registering a setting in Preset 08

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_ptz?cmd=%23M07&res=1

**[Response]** AW-HE50 → PC

200 OK "s07"

- Preset: playing back Preset 12

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_ptz?cmd=%23R11&res=1

**[Response]** AW-HE50 → PC

200 OK "s11"

- Preset: Preset Speed Set to 1(Slow)

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_ptz?cmd=%23UPVS250&res=1

**[Response]** AW-HE50 → PC

200 OK "uPVS250"

### 3.1.8. Tally

These commands exercise enable/disable control over the tally input of the camera and enable the current tally input enable/disable statuses to be acquired.

In addition, they exercise tally On/Off control over the camera.

Table 3.1.8. Tally

Command name	Category	Command	Data value	Setting	Remarks
Tally input enable/disable control command	Control	#TAE[Data]	0 1	Disable Enable	
	Response	tAE[Data]			
Tally input enable/disable query command	Request	#TAE	None		
	Response	tAE[Data]	0 1	Disable Enable	
Tally On/Off control command	Control	#DA[Data]	0 1	Tally Off Tally On	
	Response	dA[Data]			
Tally On/Off query command	Request	#DA	None		
	Response	dA[Data]	0 1	Tally Off Tally On	

Example of use)

- Tally input (enable/disable): Enable

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_ptz?cmd=%23TAE1&res=1

**[Response]** AW-HE50 → PC

200 OK "tAE1"

- Tally: On

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_ptz?cmd=%23DA1&res=1

**[Response]** AW-HE50 → PC

200 OK "dA1"

### 3.1.9. Wireless remote controller setting

These commands make it possible for enable or disable to be set for the control which is exercised over the wireless remote controller of the camera and for the current enable/disable statuses to be acquired.

Table 3.1.9. Wireless remote controller enable/disable setting

Command name	Category	Command	Data value	Setting	Remarks
Wireless remote controller control enable/disable control command	Control	#WLC[Data]	0 1	Disable Enable	
	Response	wLC[Data]			
Wireless remote controller control enable/disable query command	Request	#WLC	None		
	Response	wLC[Data]	0 1	Disable Enable	
Wireless remote controller ID control command	Control	#RID[Data]	0 1 2 3	CAM1 CAM2 CAM3 CAM4	※Only supported by the AW-HE40/AW-HE65/AW-HE70.
	Response	rID[Data]			
Wireless remote controller ID query command	Request	#RID	None		※Only supported by the AW-HE40/AW-HE65/AW-HE70.
	Response	rID[Data]	0 1 2 3	CAM1 CAM2 CAM3 CAM4	

Example of use) Wireless remote controller: Disable

**[Control]** PC → AW-HE50

[http://192.168.0.10/cgi-bin/aw\\_ptz?cmd=%23WLC0&res=1](http://192.168.0.10/cgi-bin/aw_ptz?cmd=%23WLC0&res=1)

**[Response]** AW-HE50 → PC

200 OK "wLC0"

### 3.1.10. Zoom position-linked pan/tilt speed adjustment On/Off

These commands exercise On/Off control over the zoom position-linked pan/tilt speed adjustments of the camera and enable the current On/Off statuses to be acquired.

When the lens is zoomed toward Tele, the pan/tilt movement is set to the low speed.

Table 3.1.10. Zoom position-linked pan/tilt speed adjustment On/Off

Command name	Category	Command	Data value	Setting	Remarks
Zoom position-linked pan/tilt speed adjustment On/Off control command	Control	#SWZ[Data]	0 1	Off On	
	Response	sWZ[Data]			
Zoom position-linked pan/tilt speed adjustment On/Off query command	Request	#SWZ	None		
	Response	sWZ[Data]	0 1	Off On	

Example of use)

• Zoom position-linked pan/tilt speed adjustment: On

**[Control]** PC → AW-HE50

[http://192.168.0.10/cgi-bin/aw\\_ptz?cmd=%23SWZ1&res=1](http://192.168.0.10/cgi-bin/aw_ptz?cmd=%23SWZ1&res=1)

**[Response]** AW-HE50 → PC

200 OK "sWZ1"

### 3.1.11. Software version information

This command enables the software version information to be acquired.

Table 3.1.11. Software version information

Command name	Category	Command	Data value	Setting	Remarks
Software version information query command	Request	#QSV[Data1]	In the case of the AW-HE50/AW-HE60		
			[Data1]	[Data1]	※The Camera EEPROM setting is supported only by the AW-HE60.
			0	Pan Tilt CPU	
			1	Camera CPU	
			2	Camera PLD	
			3	Network CPU	
			4	OUT PLD	
			5	Reserve	
			6	Reserve	
			7	Reserve	
			8	Camera EEPROM	
			In the case of the AW-HE120		
			[Data1]	[Data1]	
			0	Servo CPU	
			1	CameraMain CPU	
			2	Frontend FPGA	
			3	Network CPU	
			4	Backend FPGA	
			5	Interface CPU	
			6	Lens FPGA	
			7	Interface EEPROM	
			8	Camera EEPROM	
			In the case of the AW-HE130		
			[Data1]	[Data1]	
			0	Servo CPU	
			1	CameraMain CPU	
			2	COM FPGA	
			3	Network CPU	
			4	AVIO FPGA	
			5	Interface CPU	
			6	Lens FPGA	
			7	Interface EEPROM	
			8	Reserved	
			In the case of the AW-HE40/AW-HE65/AW-HE70		
			[Data1]	[Data1]	
			0	Servo CPU	
			1	Cam CPU	
			2	FPGA	
			3	BE CPU	
			4	reserve	
			5	Interface CPU	
			6	reserve	
			7	Interface EEPROM	
			8	reserve	



Command name	Category	Command	Data value	Setting	Remarks
	Response	qSV[Data1]V[Data2]. [Data3][Data4] [Data5][Data6]	[Data2] 00-99 [Data3] 00-99 [Data4] E L [Data5] 00-99 [Data6] 0 1 2	[Data2] MAJOR VERSION [Data3] MINOR VERSION [Data4] (Debug Build) (Release Build) [Data5] (REVISION) [Data6] NTSC PAL Other	

Example of use) Software version information acquisition: Camera CPU

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_ptz?cmd=%23QSV1&res=1

**[Response]** AW-HE50 → PC

200 OK "qSV[Data1]V[Data2].[Data3][Data4][Data5][Data6]"

## 3.1.12. Error information

This command enables the error information mainly of the pan-tilt head to be acquired.

Table 3.1.12. Error information

Command name	Category	Command	Data value	Setting	Remarks
Error information query command	Request	#RER	None		
	Response	rER[Data]	In the case of the AW-HE50/AW-HE60		
			00	Disable	Normal
			01	Enable	-
			02		-
			03		Motor Driver Error
			04		Pan Sensor Error
			05		Tilt Sensor Error
			06		Controller RX Over run Error
			07		Controller RX Framing Error
			08		Network RX Over run Error
			09		Network RX Framing Error
			0A		-
			0B		-
			-		-
			17		Controller RX Command Buffer Overflow
			-		-
			19		Network RX Command Buffer Overflow
			-		-
			21		System Error
			22		Spec Limit Over
			23		FPGA Config Error
			24		Network communication Error
			25		Lens Initialize Error
			-		-
			30		Lvds_Adjustment_NG
			31		Bar_Signal_Check_NG
			32		H_Sync_Check_NG
			33		HDMI_Check_NG

Command name	Category	Command	Data value	Setting	Remarks
			In the case of the AW-HE120/AW-HE130		
			00	Disable	Normal
			01	Enable	-
			02		-
			03		Motor Driver Error
			04		Pan Sensor Error
			05		Tilt Sensor Error
			06		Controller RX Over run Error
			07		Controller RX Framing Error
			08		Network RX Over run Error
			09		Network RX Framing Error
			0A		-
			0B		-
			-		-
			17		Controller RX Command Buffer Overflow
			-		-
			19		Network RX Command Buffer Overflow
			-		-
			21		System Error
			22		Spec Limit Over
			-		-
			24-		Network communication Error
			25		CAMERA communication Error
			26		CAMERA RX Over run Error
			27		CAMERA RX Framing Error
			28		CAMERA RX Command Buffer Overflow
			In the case of the AW-HE40/AW-HE65/AW-HE70		
			00	Disable	Normal(No Error)
			03	Enable	Motor Driver Error
			04		Pan Sensor Error
			05		Tilt Sensor Error
			06		IF/FPGA UART Over run Error
			07		IF/FPGA UART Framing Error
			08		IF/NET UART Over run Error
			09		IF/NET UART Framing Error
			17		IF/FPGA UART Buffer Overflow
			19		IF/NET UART Buffer Overflow
			21		System Error(IF/SERVO Error)
			22		PT Limit Over
			24		NET Life-monitoring Error
			25		BE Life-monitoring Error
			26		IF/BE UART Buffer Overflow
			27		IF/BE UART Framing Error
			28		IF/BE UART Buffer Overflow
			29		CAM Life-monitoring Error

Example of use) Error information acquisition

**[Control]** PC → AW-HE50

[http://192.168.0.10/cgi-bin/aw\\_ptz?cmd=%23RER&res=1](http://192.168.0.10/cgi-bin/aw_ptz?cmd=%23RER&res=1)

**[Response]** AW-HE50 → PC

200 OK "rER[Data]"

### 3.2. Camera control

The camera control commands are based on the HTTP1.1 communication specifications. Their format is given below. For details on the HTTP messages, refer to <Appendix>.

#### 【Command format】

[Send]

**http://[IP Address]/cgi-bin/aw\_cam?cmd=[Command]&res=[Type]**

※**IP Address**..... IP address of camera at connection destination

※**Command**..... Details given in “Command” column in the command tables below

※**Type**..... Normally “1” (but “0” for the AWB[OWS] and ABB[OAS] commands)

[Receive]

200 OK “**Command**”

※**Command**..... Response value of each command; described in the HTTP message body.

There is no response in the case of an AWB or ABB command whose Type is 0.

Refer to “4. Camera information update notification” in order to receive the AWB/ABB result notifications.

**Example:** Focus setting = Auto

[Send]

**http://192.168.0.10/cgi-bin/aw\_cam?cmd=OAF:0&res=1**

[Receive] The response is the HTTP response.

200 OK “**OAF:0**”

Given below is the sequence used when communication has been performed in accordance with the command format described on the previous page.

For the sequence when errors have been generated in response to commands, refer to “6. Error return”.

### 【Sequence】

“PC1” is the control terminal in the sequence below.

**Example:** Focus setting = Auto

Camera IP Address = 192.168.0.10

Command = OAF:1

Auto focus control is performed from PC1, and [200 OK “OAF:1”] is returned as the response.

Both a control command and query command are available as the camera control commands.

Given below is the command sequence.

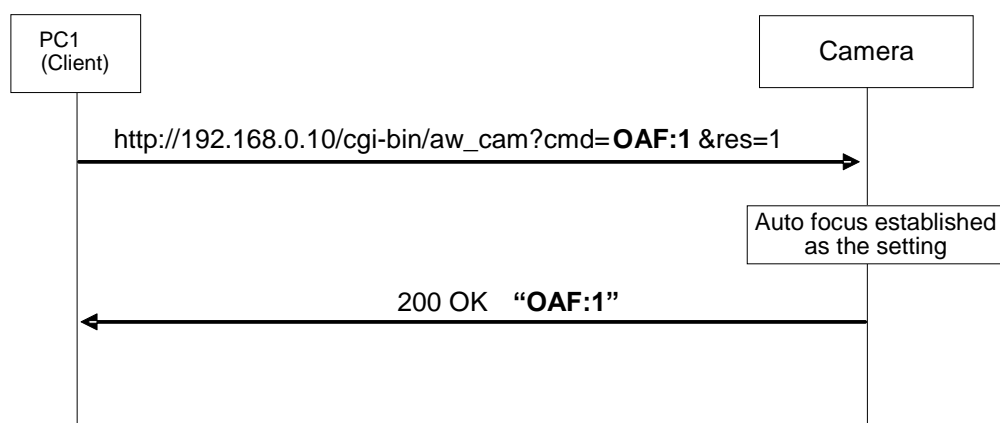


Fig.3.2-1 Camera control command sequence

The following restrictions should be noted when using these commands.  
These restrictions are as follows.

### 【Restrictions】

1. When sending the camera control commands, send the commands with a gap of 130 ms between each command.  
Given below is the command sequence.

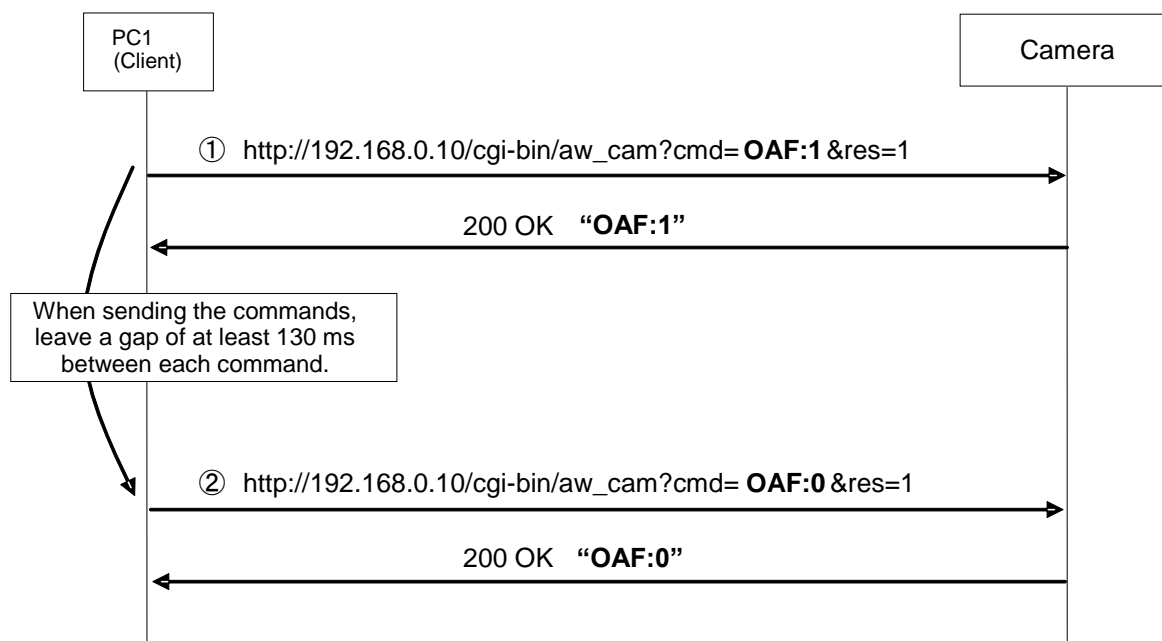


Fig.3.2-2 Restrictions

2. Send the commands which change the settings only at the point in time when the changes are required. (Do not send them at regular intervals.)  
※The applicable models incorporate an EEPROM for storing the settings, and each time a command that changes the settings is received, data is written in the EEPROM. The number of times data can be written in the EEPROM is limited so if data is sent frequently, the model will cease to operate normally when the maximum number of times for writing the data has been reached.

### 3.2.1. Lens operations

#### 3.2.1.1. Focus

These commands exercise Auto/Manual control of the focusing and one-touch auto focus control of the camera.

Commands which control the focusing are also described in section “3.1.5.2. Focus” of “3.1. Pan-tilt head control”.

Table 3.2.1.1. Focus

Command name	Category	Command	Data value	Setting	Remarks
Focus Auto/Manual control command	Control	OAF:[Data]	0 1	Manual Auto	• In case of AW-HE130, focus cannot be set to Auto when FrameMix is set to 18 [dB] or higher.
	Response	OAF:[Data]			
Focus Auto/Manual query command	Request	QAF	None		
	Response	OAF:[Data]	0 1	Manual Auto	
One-touch focus control command	Control	OSE:69:[Data]	1	One Touch AF	One-touch focus On control
	Response	OSE:69:1			

Example of use)

• Focus (Auto/Manual): Auto

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OAF:1&res=1

**[Response]** AW-HE50 → PC

200 OK “OAF:1”

• Execution of one-touch focus control

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSE:69:1&res=1

**[Response]** AW-HE50 → PC

200 OK “OSE:69:1”

## 3.2.1.2. Iris

These commands control the iris (between Close and Open) of the camera and enable the current iris position to be acquired.

They also enable iris Auto/Manual to be controlled, the iris Auto/Manual status to be checked and the 10 steps of the contrast level (AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70), the 20 steps of the picture level (AW-HE120) or the 100 steps of the picture level (AW-HE130) to be set and these settings to be checked.

Commands which control the iris are also described in section “3.1.5.3. Iris” of “3.1. Pan-tilt head control”.

Table 3.2.1.2. Iris

Command name	Category	Command	Data value	Setting	Remarks
Iris Auto/Manual control command	Control	ORS:[Data]	0 1	Manual Auto	<ul style="list-style-type: none"> <li>This command restores the held manual iris setting when control is switched from Auto to Manual.</li> <li>In the case of AW-HE130, Iris cannot be set to Auto when FrameMix is set to 18 [dB] or higher.</li> </ul>
	Response	ORS:[Data]			
Iris Auto/Manual query command	Request	QRS	None		
	Response	ORS:[Data]	0 1	Manual Auto	
Contrast level Picture level control command	Control	OSD:48:[Data]	In the case of the AW-HE50/AW-HE60		<ul style="list-style-type: none"> <li>While “----” is displayed for Contrast Level on the OSD menu, the setting is accepted but it is not reflected in the images. The setting is reflected in the images when the “----” display is released.</li> <li>Contrast level control (Auto)</li> </ul>
			64 5A~63 50~59 46~4F 3C~45 32~3B 28~31 1B~27 14~1A 0A~13 00~09	+5 +4 +3 +2 +1 0 -1 -2 -3 -4 -5	



Command name	Category	Command	Data value	Setting	Remarks
			In the case of the AW-HE120		
			64	+10	<ul style="list-style-type: none"><li>While “----” is displayed for Picture Level on the OSD menu, the setting is accepted but it is not reflected in the images. The setting is reflected in the images when the “----” display is released.</li><li>Valid when Gain AGC, Iris Auto and Shutter ELC have been set.</li></ul>
			63~5F	+9	
			5E~5A	+8	
			59~55	+7	
			54~50	+6	
			4F~4B	+5	
			4A~46	+4	
			45~41	+3	
			40~3C	+2	
			3B~37	+1	
			36~32	0	
			31~2D	-1	
			2C~28	-2	
			27~23	-3	
			22~1E	-4	
			1D~19	-5	
			18~14	-6	
			13~0F	-7	
			0E~0A	-8	
			09~05	-9	
			04~00	-10	
			In the case of the AW-HE130		
			64~33	+50~+1	<ul style="list-style-type: none"><li>While “----” is displayed for Picture Level on the OSD menu, the setting is accepted but it is not reflected in the images. The setting is reflected in the images when the “----” display is released.</li><li>Valid when Gain AGC, Iris Auto and Shutter ELC have been set.</li></ul>
			32	0	
			31~00	-1~-50	
			In the case of the AW-HE40/AW-HE65/AW-HE70		
	Response	OSD:48:[Data]	64~33	+10~+1	<ul style="list-style-type: none"><li>While “----” is displayed for Contrast Level on the OSD menu, the setting is not accepted.</li></ul>
			32	0	
			31~00	-1~-10	

Command name	Category	Command	Data value	Setting	Remarks
Contrast level Picture level query command	Request	QSD:48	None		
	Response	OSD:48:[Data]	In the case of the AW-HE50/AW-HE60		
			64	+5	• Contrast level
			5A~63	+4	
			50~59	+3	
			46~4F	+2	
			3C~45	+1	
			32~3B	0	
			28~31	-1	
			1B~27	-2	
			14~1A	-3	
			0A~13	-4	
			00~09	-5	
			In the case of the AW-HE120		
			64	+10	• Picture level • Valid when Gain AGC, Iris Auto and Shutter ELC have been set.
			63~5F	+9	
			5E~5A	+8	
			59~55	+7	
			54~50	+6	
			4F~4B	+5	
			4A~46	+4	
			45~41	+3	
			40~3C	+2	
			3B~37	+1	
			36~32	0	
			31~2D	-1	
			2C~28	-2	
		27~23	-3		
		22~1E	-4		
		1D~19	-5		
		18~14	-6		
		13~0F	-7		
		0E~0A	-8		
		09~05	-9		
		04~00	-10		
		In the case of the AW-HE130			
		64~33	+50~+1	• Valid when Gain AGC, Iris Auto and Shutter ELC have been set.	
		32	0		
		31~00	-1~-50		
		In the case of the AW-HE40/AW-HE65/AW-HE70			
		64~33	+10~+1	• Contrast level	
		32	0		
		31~00	-1~-10		

Command name	Category	Command	Data value	Setting	Remarks
Iris volume control command	Control	ORV:[Data]	000 }	Close }	Iris volume control (Manual)
	Response	ORV:[Data]	3FF	Open	
Iris volume query command	Request	QRV	None		Iris volume status request (Manual)
	Response	ORV:[Data]	000 } 3FF	Close } Open	
	Request	QSD:4F	None		
	Response	OSD:4F:[Data]	00 } FF	Close } Open	Iris volume status request

Example of use)

• Auto iris: On

**[Control]** PC → AW-HE50

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=ORS:1&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=ORS:1&res=1)

**[Response]** AW-HE50 → PC

200 OK "ORS:1"

• Iris: Open

**[Control]** PC → AW-HE50

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=ORV:3FF&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=ORV:3FF&res=1)

**[Response]** AW-HE50 → PC

200 OK "ORV:3FF"

• Contrast level: 0

**[Control]** PC → AW-HE50

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OSD:48:32&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OSD:48:32&res=1)

**[Response]** AW-HE50 → PC

200 OK "OSD:48:32"

### 3.2.1.3. ND filter setting

These commands control the ND filter of the camera, and they enable the ND filter status to be acquired.

Table 3.2.1.3. ND filter setting

Command name	Category	Command	Data value	Setting	Remarks
ND filter control command	Control	OFT:[Data]	In the case of the AW-HE120		
			0	Through	
			1	1/4	
			2	1/16	
			3	1/64	
			In the case of the AW-HE130		
			0	Through	ND filter switching is not possible in Night mode
			3	1/64	
			4	1/8	
	Response	OFT:[Data]			
ND filter query command	Request	QFT	None		
	Response	OFT:[Data]	In the case of the AW-HE120		
			0	Through	
			1	1/4	
			2	1/16	
			3	1/64	
			In the case of the AW-HE130		
			0	Through	
			3	1/64	
			4	1/8	

Example of use) ND filter: 1/4

**[Control]** PC → AW-HE120

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OFT:1&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OFT:1&res=1)

**[Response]** AW-HE120 → PC

200 OK "OFT:1"

### 3.2.2. Color Bars setting

These commands enable color bar/camera to be switched, the color bar setup to be set and the current settings to be acquired.

Table 3.2.2. Color Bars

Command name	Category	Command	Data value	Setting	Remarks
Color bar/Camera control command	Control	DCB:[Data]	0 1	Camera Color Bars	
	Response	DCB:[Data]			
Color bar/Camera query command	Request	QBR	None		
	Response	OBR:[Data]	0 1	Camera Color Bars	
Color bar setup level control command	Control	DCS:[Data]	0 1	Off On	※Only enabled for the AW-HE120/AW-HE130.
	Response	DCS:[Data]			
Color bar setup level query command	Request	QCS	None		
	Response	OCS:[Data]	0 1	Off On	※Only enabled for the AW-HE120/AW-HE130.

Example of use)

- Color bar/Camera control: Color bar

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_cam?cmd=DGB:1&res=1

**[Response]** AW-HE50 → PC

200 OK "DGB:1"

- Color bar setup level: Off

**[Control]** PC → AW-HE120

http://192.168.0.10/cgi-bin/aw\_cam?cmd=DCS:0&res=1

**[Response]** AW-HE120 → PC

200 OK "DCS:0"

### 3.2.3. Scene file setting

These commands specify the scene files of the camera and enable the settings of the currently selected scene file to be acquired.

Table 3.2.3. Scene file setting

Command name	Category	Command	Data value	Setting	Remarks
Scene file control command	Control	XSF:[Data]	In the case of the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70		
			1	Manual1	
			2	Manual2	
			3	Manual3	
			4	FullAuto	
			In the case of the AW-HE120/AW-HE130		
	1	Scene1			
2	Scene2				
3	Scene3				
4	Scene4				
Response	XSF:[Data]				
Scene file query command	Request	QSF	None		
	Response	OSF:[Data]	In the case of the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70		
			0	Manual1	• The data value differs depending on the responses to the control command and query command.
			1	Manual2	
			2	Manual3	
			3	FullAuto	
			In the case of the AW-HE120/AW-HE130		
1	Scene1	• The data value differs depending on the responses to the control command and query command.			
2	Scene2				
3	Scene3				
4	Scene4				

Example of use) Scene file: Manual1

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_cam?cmd=XSF:1&res=1

**[Response]** AW-HE50 → PC

200 OK "XSF:1"

### 3.2.4. Shutter mode setting

These commands control the shutter of the camera and enable the currently set shutter mode to be acquired.

Table 3.2.4. Shutter mode setting

Command name	Category	Command	Data value	Setting	Remarks
Shutter control command	Control	OSH:[Data]	In the case of the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70		
			0	Shutter Off	<ul style="list-style-type: none"><li>• Disabled at the FullAuto setting (ER3 is returned).</li><li>• When auto iris is On, the setting is accepted but it is not reflected in the images. The setting is reflected in the images when auto iris is changed from On to Off.</li></ul>
			3	1/100(59.94Hz)	
				1/120(50Hz)	
			5	1/250	
			6	1/500	
			7	1/1000	
			8	1/2000	
			9	1/4000	
			A	1/10000	
			B	Syncro-Scan	
			In the case of the AW-HE120		
			0	Shutter Off	
			3	1/100(59.94Hz)	
				1/120(50Hz)	
			5	1/250	
			6	1/500	
			7	1/1000	
			8	1/2000	
			9	1/4000	
			A	1/10000	
			B	Syncro-Scan	
			C	ELC	
			When the output format of AW-HE130 is set to (1080/59.94i / 1080/59.94P / 720/59.94P / 480/59.94P)		
			0	Shutter Off	
			3	1/100	
			4	1/120	
			5	1/250	
			6	1/500	
			7	1/1000	
			8	1/2000	
			9	1/4000	
A	1/10000				
B	Syncro-Scan				
C	ELC				
When the output format of AW-HE130 is set to (1080/29.97p)					
0	Shutter Off				
2	1/60				
4	1/120				
5	1/250				
6	1/500				
7	1/1000				
8	1/2000				
9	1/4000				
A	1/10000				
B	Syncro-Scan				
C	ELC				
F	1/30				

Command name	Category	Command	Data value	Setting	Remarks
			When the output format of AW-HE130 is set to (1080/23.98p)		
			0	Shutter Off	
			2	1/60	
			4	1/120	
			5	1/250	
			6	1/500	
			7	1/1000	
			8	1/2000	
			9	1/4000	
			A	1/10000	
			B	Synchro-Scan	
			C	ELC	
			D	1/24	
			When the output format of AW-HE130 is set to (1080/50i / 1080/50P / 720/50P / 480/50P)		
			0	Shutter Off	
			2	1/60	
			3	1/120	
			5	1/250	
			6	1/500	
			7	1/1000	
			8	1/2000	
			9	1/4000	
			A	1/10000	
			B	Synchro-Scan	
			C	ELC	
			When the output format of AW-HE130 is set to (1080/25p)		
			0	Shutter Off	
			2	1/60	
			3	1/120	
			5	1/250	
			6	1/500	
			7	1/1000	
			8	1/2000	
			9	1/4000	
			A	1/10000	
			B	Synchro-Scan	
			C	ELC	
			E	1/25	
Response	OSH:[Data]				
Shutter query command	Request	QSH	None		
	Response	OSH:[Data]	In the case of the AW-HE50/AW-HE60/AW-HE40/AW-HE65/ AW-HE70		
			0	Shutter Off	
3	1/100(59.94Hz) 1/120(50Hz)				
5	1/250				
6	1/500				
7	1/1000				
8	1/2000				
9	1/4000				
A	1/10000				
B	Synchro-Scan				



Command name	Category	Command	Data value	Setting	Remarks
			In the case of the AW-HE120		
			0	Shutter Off	
			3	1/100(59.94Hz)	
				1/120(50Hz)	
			5	1/250	
			6	1/500	
			7	1/1000	
			8	1/2000	
			9	1/4000	
			A	1/10000	
			B	Synchro-Scan	
			C	ELC	
			When the output format of AW-HE130 is set to (1080/59.94i / 1080/59.94P / 720/59.94P / 480/59.94P)		
			0	Shutter Off	
			3	1/100	
			4	1/120	
			5	1/250	
			6	1/500	
			7	1/1000	
			8	1/2000	
			9	1/4000	
			A	1/10000	
			B	Synchro-Scan	
			C	ELC	
			When the output format of AW-HE130 is set to (1080/29.97p)		
			0	Shutter Off	
			2	1/60	
			4	1/120	
			5	1/250	
			6	1/500	
			7	1/1000	
			8	1/2000	
			9	1/4000	
			A	1/10000	
			B	Synchro-Scan	
			C	ELC	
			F	1/30	
			When the output format of AW-HE130 is set to (1080/23.98p)		
			0	Shutter Off	
			2	1/60	
			4	1/120	
			5	1/250	
			6	1/500	
			7	1/1000	
			8	1/2000	
			9	1/4000	
			A	1/10000	
			B	Synchro-Scan	
			C	ELC	
			D	1/24	

Command name	Category	Command	Data value	Setting	Remarks
			When the output format of AW-HE130 is set to (1080/50i / 1080/50P / 720/50P / 480/50P)		
			0	Shutter Off	
			2	1/60	
			3	1/120	
			5	1/250	
			6	1/500	
			7	1/1000	
			8	1/2000	
			9	1/4000	
			A	1/10000	
			B	Synchro-Scan	
			C	ELC	
			When the output format of AW-HE130 is set to (1080/25p)		
			0	Shutter Off	
			2	1/60	
			3	1/120	
			5	1/250	
			6	1/500	
			7	1/1000	
			8	1/2000	
			9	1/4000	
			A	1/10000	
			B	Synchro-Scan	
			C	ELC	
			E	1/25	

Command name	Category	Command	Data value	Setting	Remarks			
Synchro scan control command	Control	OMS:[Data]	In the case of the AW-HE50/AW-HE60					
			001	60.24Hz(59.94Hz) 50.20Hz(50Hz) }	• Disabled at the FullAuto setting (ER3 is returned). • When auto iris is On, the setting is accepted but it is not reflected in the images. The setting is reflected in the images when auto iris is changed from On to Off.			
			0FF	646.21Hz(59.94Hz) 538.51Hz(50Hz)				
			In the case of the AW-HE120					
			001	60.17Hz(59.94Hz) 50.19Hz(50Hz) }	• While “----” is displayed for Step/Synchro on the OSD menu, the setting is accepted but it is not reflected in the images. The setting is reflected in the images when the “----” display is released.			
			0FF	644.26Hz(59.94Hz) 537.13Hz(50Hz)				
			In the case of the AW-HE130					
			001	60.15Hz(59.94Hz) 50.15Hz(50Hz) }	• While “----” is displayed for Step/Synchro on the OSD menu, the setting is accepted but it is not reflected in the images. The setting is reflected in the images when the “----” display is released.			
			0FF	642.21Hz(59.94Hz) 535.71Hz(50Hz)				
			In the case of the AW-HE40/AW-HE65/AW-HE70					
			001	59.94Hz(59.94Hz) 50.00Hz(50Hz) }	• Disabled at the FullAuto setting (ER3 is returned). • While “----” is displayed for Step/Synchro on the OSD menu, the setting is not accepted.			
			0FF	660.09Hz(59.94Hz) 570.13Hz(50Hz)				
			Response	OMS:[Data]				
			Synchro scan query command	Request	QMS	None		
				Response	OMS:[Data]	In the case of the AW-HE50/AW-HE60		
	001	60.24Hz(59.94Hz) 50.20Hz(50Hz) }						
0FF	646.21Hz(59.94Hz) 538.51Hz(50Hz)							
In the case of the AW-HE120								
001	60.17Hz(59.94Hz) 50.19Hz(50Hz) }							
0FF	644.26Hz(59.94Hz) 537.13Hz(50Hz)							
In the case of the AW-HE130								
001	60.15Hz(59.94Hz) 50.15Hz(50Hz) }							
0FF	642.21Hz(59.94Hz) 535.71Hz(50Hz)							

Command name	Category	Command	Data value	Setting	Remarks
			In the case of the AW-HE40/AW-HE65/AW-HE70		
			001	59.94Hz(59.94Hz)	
			}	50.00Hz(50Hz)	
			0FF	660.09Hz(59.94Hz) 570.13Hz(50Hz)	

Example of use)

• Shutter: 1/500

**[Control]** PC → AW-HE50

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OSH:6&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OSH:6&res=1)

**[Response]** AW-HE50 → PC

200 OK "OSH:6"

• Synchro scan (when 59.94Hz has been set as the frequency): 60.24Hz

**[Control]** PC → AW-HE50

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OMS:001&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OMS:001&res=1)

**[Response]** AW-HE50 → PC

200 OK "OMS:001"

### 3.2.5. Frame mix setting

These commands enable the frame mixing of camera to be set and the current settings to be acquired.

Table 3.2.5. Frame mix setting

Command name	Category	Command	Data value	Setting	Remarks
Frame mix control command	Control	OSA:65:[Data]	In the case of the AW-HE50/AW-HE60		
			00	Off	<ul style="list-style-type: none"><li>Disabled at the FullAuto setting (ER3 is returned).</li><li>When auto iris is On, the setting is accepted but it is not reflected in the images. The setting is reflected in the images when auto iris is changed from On to Off.</li></ul>
			06	6dB	
			0C	12dB	
			12	18dB	
			80	Auto	
			In the case of the AW-HE120/AW-HE130		
			00	Off	<ul style="list-style-type: none"><li>In the case of AW-HE120, when the format is 1050/59.94i and 1080/50i, or the shutter is set to other than OFF, the setting is accepted but it is not reflected in the images. The setting is reflected in the images when the above restrictions are released.</li><li>In the case of AW-HE130, FrameMix cannot be set to 18 [dB] or higher when either Iris, Gain, or Focus is set to Auto.</li></ul>
			06	6dB	
			0C	12dB	
			12	18dB	
			18	24dB	
	In the case of the AW-HE40/AW-HE65/AW-HE70				
00	Off	<ul style="list-style-type: none"><li>Disabled at the FullAuto setting (ER3 is returned).</li><li>When auto iris is On, the setting is not accepted</li></ul>			
06	6dB				
0C	12dB				
12	18dB				
	Response	OSA:65:[Data]	18	24dB	
			80	Auto	
Frame mix query command	Request	QSA:65	None		
	Response	OSA:65:[Data]	In the case of the AW-HE50/AW-HE60		
			00	Off	
			06	6dB	
			0C	12dB	
			12	18dB	
			80	Auto	
			In the case of the AW-HE120/AW-HE130		
			00	Off	
			06	6dB	
			0C	12dB	
			12	18dB	
			18	24dB	
			In the case of the AW-HE40/AW-HE65/AW-HE70		
			00	Off	
			06	6dB	
			0C	12dB	
			12	18dB	
			18	24dB	
80	Auto				

Command name	Category	Command	Data value	Setting	Remarks
Maximum frame mix value control command	Control	OSE:74:[Data]	00 01 02 03	0dB 6dB 12dB 18dB	<ul style="list-style-type: none"> <li>Disabled at the FullAuto setting (ER3 is returned).</li> <li>Maximum frame mix value control (Auto)</li> </ul> ※Supported only by the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70.
	Response	OSE:74:[Data]			
Maximum frame mix value query command	Request	QSE:74	None		
	Response	OSE:74:[Data]	00 01 02 03	0dB 6dB 12dB 18dB	※Supported only by the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70.

Example of use)

•Frame mix: 12dB

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSA:65:0C&res=1

**[Response]** AW-HE50 → PC

200 OK "OSA:65:0C"

•Maximum frame mix value: 18dB

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSE:74:03&res=1

**[Response]** AW-HE50 → PC

200 OK "OSE:74:03"

### 3.2.6. Gain setting

These commands enable the gain settings of the camera to be established and the current settings to be acquired.

Table 3.2.6. Gain setting

Command name	Category	Command	Data value	Setting	Remarks
Gain control command	Control	OGU:[Data]	In the case of the AW-HE50/AW-HE60		
			08	0dB	• Disabled at the FullAuto setting (ER3 is returned).
			0B	3dB	
			0E	6dB	
			11	9dB	
			14	12dB	
			17	15dB	
			1A	18dB	
			80	Auto	
			In the case of the AW-HE120		
			08	0dB	• Value can be set in increments of 1dB.
			1	1	
			11	9dB	
			1	1	
			1A	18dB	
			80	Auto	
			In the case of the AW-HE130		
			08	0db	• Value can be set in increments of 1dB.
			1	1	
	11	9db			
	1	1			
	1A	18db			
	1	1			
2C	36db				
80	Auto				
In the case of the AW-HE40/AW-HE65/AW-HE70					
08	0dB	• Disabled at the FullAuto setting (ER3 is returned).			
0B	3dB				
0E	6dB				
1	1	• Value can be set in increments of 3dB.			
38	48dB				
80	Auto				
	Response	OGU:[Data]			

Command name	Category	Command	Data value	Setting	Remarks
Gain query command	Request	QGU	None		
	Response	OGU:[Data]	In the case of the AW-HE50/AW-HE60		
			08	0dB	
			0B	3dB	
			0E	6dB	
			11	9dB	
			14	12dB	
			17	15dB	
			1A	18dB	
			80	Auto	
			In the case of the AW-HE120		
			08	0dB	
			1	1	
			11	9dB	
			1	1	
			1A	18dB	
			80	Auto	
			In the case of the AW-HE130		
			08	0db	
			1	1	
			11	9db	
			1	1	
			1A	18db	
			1	1	
			2C	36db	
			80	Auto	
			In the case of the AW-HE40/AW-HE65/AW-HE70		
			08	0dB	• Disabled at the FullAuto setting (ER3 is returned).
			0B	3dB	
			0E	6dB	
			1	1	
			38	48dB	
			80	Auto	



Command name	Category	Command	Data value	Setting	Remarks	
AGC maximum gain value control command	Control	OSD:69:[Data]	In the case of the AW-HE50/AW-HE60			
			01	6dB	• Disabled at the FullAuto setting (ER3 is returned).	
			02	12dB		
			03	18dB		
			In the case of the AW-HE120/AW-HE130			
			01	6dB	• Disabled at the FullAuto setting (ER3 is returned).	
			02	12dB		
			03	18dB		
			In the case of the AW-HE40/AW-HE65/AW-HE70			
			01	6dB		
			02	12dB		
	03	18dB				
04	24dB					
05	30dB					
06	36dB					
Response	OSD:69:[Data]	07	42dB			
		08	48dB			
AGC maximum gain value query command	Request	QSD:69	None			
	Response	OSD:69:[Data]	In the case of the AW-HE50/AW-HE60			
			01	6dB	• Disabled at the FullAuto setting (ER3 is returned).	
			02	12dB		
			03	18dB		
			In the case of the AW-HE120/AW-HE130			
			01	6dB		
			02	12dB		
			03	18dB		
			In the case of the AW-HE40/AW-HE65/AW-HE70			
			01	6dB		
			02	12dB		
			03	18dB		
			04	24dB		
			05	30dB		
			06	36dB		
			07	42dB		
08	48dB					

Example of use)

• Gain: 3dB

**[Control]** PC → AW-HE50

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OGU:0B&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OGU:0B&res=1)

**[Response]** AW-HE50 → PC

200 OK "OGU:0B"

• AGC maximum gain value: 18dB

**[Control]** PC → AW-HE50

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OSD:69:03&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OSD:69:03&res=1)

**[Response]** AW-HE50 → PC

200 OK "OSD:69:03"

### 3.2.7. Color settings

#### 3.2.7.1. R/B gain settings

These commands control the R/B gain levels of the camera, and they enable the current settings to be acquired.

Table 3.2.7.1. R/B gain settings

Command name	Category	Command	Data value	Setting	Remarks		
R gain control command	Control	ORI:[Data]	In the case of the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70				
			000 ⌋ 096 ⌋ 12C	−30 ⌋ 0 ⌋ +30	※The AW-HE50 is supported by Ver.2 or a later version. • Setting (menu display value) = (Data value − 0x96) / 5 • Cleared to zero at AWB OK completion.		
			In the case of the AW-HE120/AW-HE130				
			000 ⌋ 096 ⌋ 12C	−150 ⌋ 0 ⌋ +150		• Setting (menu display value) = (Data value − 0x96) • Cleared to zero at AWB OK completion.	
			Response	ORI:[Data]			
			Control	ORG:[Data]	In the case of the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70		
					00 ⌋ 1E ⌋ 3C	−30 ⌋ 0 ⌋ +30	※The AW-HE50 is supported by Ver.2 or a later version. • Setting (menu display value) = (Data value − 0x1E) • Cleared to zero at AWB OK completion.
	In the case of the AW-HE120/AW-HE130						
	00 ⌋ 1E ⌋ 3C	−150 ⌋ 0 ⌋ +150			• Setting (menu display value) = (Data value − 0x1E) x 5 • Cleared to zero at AWB OK completion.		
	Response	ORG[Data]					
	R gain query command	Request			QRI	None	
Response		ORI:[Data]			In the case of the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70		
			000 ⌋ 096 ⌋ 12C	−30 ⌋ 0 ⌋ +30	※The AW-HE50 is supported by Ver.2 or a later version. • Data value of response = (Setting x 5 + 0x96)		
			In the case of the AW-HE120/AW-HE130				
			000 ⌋ 096 ⌋ 12C	−150 ⌋ 0 ⌋ +150		• Data value of response = (Setting + 0x96)	

Command name	Category	Command	Data value	Setting	Remarks
R gain query command	Request	QGR	None		• The AW-HE50 is supported by Ver.2 or a later version.
	Response	OGR:[Data]	In the case of the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70		
			00 ⌋ 1E ⌋ 3C	-30 ⌋ 0 ⌋ +30	※The AW-HE50 is supported by Ver.2 or a later version. • Data value of response = (Setting + 0x1E)
			In the case of the AW-HE120/AW-HE130		
			00 ⌋ 1E ⌋ 3C	-150 ⌋ 0 ⌋ +150	• Data value of response = (Setting / 5 + 0x1E)
B gain control command	Control	OBI:[Data]	In the case of the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70		
			000 ⌋ 096 ⌋ 12C	-30 ⌋ 0 ⌋ +30	※The AW-HE50 is supported by Ver.2 or a later version. • Setting (menu display value) = (Data value - 0x96) / 5 • Cleared to zero at AWB OK completion.
			In the case of the AW-HE120/AW-HE130		
			000 ⌋ 096 ⌋ 12C	-150 ⌋ 0 ⌋ +150	• Setting (menu display value) = (Data value - 0x96) • Cleared to zero at AWB OK completion.
	Response	OBI:[Data]	12C	+150	
	Control	OBG:[Data]	In the case of the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70		
			00 ⌋ 1E ⌋ 3C	-30 ⌋ 0 ⌋ +30	※The AW-HE50 is supported by Ver.2 or a later version. • Setting (menu display value) = (Data value - 0x1E) • Cleared to zero at AWB OK completion.
			In the case of the AW-HE120/AW-HE130		
			00 ⌋ 1E ⌋ 3C	-150 ⌋ 0 ⌋ +150	• Setting (menu display value) = (Data value - 0x1E) x 5 • Cleared to zero at AWB OK completion.
	Response	OBG:[Data]	3C	+150	
B gain query command	Request	QBI	None		• The AW-HE50 is supported by Ver.2 or a later version.
	Response	OBI:[Data]	In the case of the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70		
			000 ⌋ 096 ⌋ 12C	-30 ⌋ 0 ⌋ +30	※The AW-HE50 is supported by Ver.2 or a later version. • Data value of response = (Setting x 5 + 0x96)
			In the case of the AW-HE120/AW-HE130		
			000 ⌋ 096 ⌋ 12C	-150 ⌋ 0 ⌋ +150	• Data value of response = (Setting + 0x96)

Command name	Category	Command	Data value	Setting	Remarks
B gain query command	Request	QGB	None		• The AW-HE50 is supported by Ver.2 or a later version.
	Response	OGB:[Data]	In the case of the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70		
			00 ⌋ 1E ⌋ 3C	−30 ⌋ 0 ⌋ +30	※The AW-HE50 is supported by Ver.2 or a later version. • Data value of response = (Setting + 0x1E)
			In the case of the AW-HE120/AW-HE130		
			00 ⌋ 1E ⌋ 3C	−150 ⌋ 0 ⌋ +150	• Data value of response = (Setting / 5 + 0x1E)

Example of use)

• R gain: −30

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_cam?cmd=ORG:00&res=1

**[Response]** AW-HE50 → PC

200 OK "ORG:00"

• R gain: +150

**[Control]** PC → AW-HE120

http://192.168.0.10/cgi-bin/aw\_cam?cmd=ORI:12C&res=1

**[Response]** AW-HE120 → PC

200 OK "ORI:12C"

• B gain: −30

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OBG:00&res=1

**[Response]** AW-HE50 → PC

200 OK "OBG:00"

• B gain: +150

**[Control]** PC → AW-HE120

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OBI:12C&res=1

**[Response]** AW-HE120 → PC

200 OK "OBI:12C"

## 3.2.7.2. R/B pedestal settings

These commands control the R/B pedestal values of the camera, and they enable the current settings to be acquired.

Table 3.2.7.2. R/B pedestal settings

Command name	Category	Command	Data value	Setting	Remarks
R pedestal control command	Control	ORP:[Data]	In the case of the AW-HE120		<ul style="list-style-type: none"> <li>Setting (menu display value) = (Data value - 0x96)</li> <li>Cleared to zero at ABB OK completion.</li> </ul>
			000	-150	
			⌋	⌋	
			096	0	
			⌋	⌋	
			12C	+150	
			In the case of the AW-HE130		<ul style="list-style-type: none"> <li>Setting (menu display value) = (Data value - 0x96)</li> <li>Cleared to zero at ABB OK completion.</li> </ul>
			032	-100	
			⌋	⌋	
			096	0	
			⌋	⌋	
	Response	ORP:[Data]	0FA	+100	
	Control	ORD:[Data]	In the case of the AW-HE120		<ul style="list-style-type: none"> <li>Setting (menu display value) = (Data value - 0x1E) x 5</li> <li>Cleared to zero at ABB OK completion.</li> </ul>
			00	-150	
			⌋	⌋	
			1E	0	
			⌋	⌋	
			3C	+150	
			In the case of the AW-HE130		<ul style="list-style-type: none"> <li>Setting (menu display value) = (Data value - 0x1E) x 5</li> <li>Cleared to zero at ABB OK completion.</li> </ul>
			0A	-100	
			⌋	⌋	
			1E	0	
			⌋	⌋	
	Response	ORD:[Data]	32	+100	
R pedestal query command	Request	QRP	None		※Only supported by the AW-HE120/AW-HE130.
	Response	ORP:[Data]	In the case of the AW-HE120		<ul style="list-style-type: none"> <li>Data value of response = (Setting + 0x96)</li> </ul>
			000	-150	
			⌋	⌋	
			096	0	
			⌋	⌋	
			12C	+150	
			In the case of the AW-HE130		
			032	-100	
			⌋	⌋	
			096	0	
			⌋	⌋	
			0FA	+100	
	Request	QRD	None		
	Response	ORD:[Data]	In the case of the AW-HE120		<ul style="list-style-type: none"> <li>Data value of response = (Setting / 5 + 0x1E)</li> </ul>
			00	-150	
			⌋	⌋	
			1E	0	
			⌋	⌋	
			3C	+150	
			In the case of the AW-HE130		<ul style="list-style-type: none"> <li>Data value of response = (Setting / 5 + 0x1E)</li> </ul>
			0A	-100	
			⌋	⌋	
			1E	0	
			⌋	⌋	
			32	+100	

Command name	Category	Command	Data value	Setting	Remarks
B pedestal control command	Control	OBP:[Data]	In the case of the AW-HE120		
			000	−150	<ul style="list-style-type: none"> <li>Setting (menu display value) = (Data value − 0x96)</li> <li>Cleared to zero at ABB OK completion.</li> </ul>
			⌋	⌋	
			096	0	
			⌋	⌋	
			12C	+150	
			In the case of the AW-HE130		
			032	−100	<ul style="list-style-type: none"> <li>Setting (menu display value) = (Data value − 0x96)</li> <li>Cleared to zero at ABB OK completion.</li> </ul>
			⌋	⌋	
			096	0	
			⌋	⌋	
			0FA	+100	
	Response	OBP:[Data]			
	Control	OBD:[Data]	In the case of the AW-HE120		
			00	−150	<ul style="list-style-type: none"> <li>Setting (menu display value) = (Data value − 0x1E) x 5</li> <li>Cleared to zero at ABB OK completion.</li> <li>The value displayed on the menu is the command setting multiplied by 5.</li> </ul>
			⌋	⌋	
			1E	0	
			⌋	⌋	
			3C	+150	
			In the case of the AW-HE130		
			0A	−100	<ul style="list-style-type: none"> <li>Setting (menu display value) = (Data value − 0x1E) x 5</li> <li>Cleared to zero at ABB OK completion.</li> <li>The value displayed on the menu is the command setting multiplied by 5.</li> </ul>
			⌋	⌋	
			1E	0	
			⌋	⌋	
			32	+100	
	Response	OBD:[Data]			

Command name	Category	Command	Data value	Setting	Remarks
B pedestal query command	Request	QBP	None		※Only supported by the AW-HE120/AW-HE130.
	Response	OBP:[Data]	In the case of the AW-HE120		• Data value of response = (Setting + 0x96)
			000	−150	
			}	}	
			096	0	
			}	}	
			12C	+150	
			In the case of the AW-HE130		• Data value of response = (Setting + 0x96)
			032	−100	
			}	}	
			096	0	
			}	}	
			0FA	+100	
	Request	QBD	None		
	Response	OBD:[Data]	In the case of the AW-HE120		• Data value of response = (Setting / 5 + 0x1E)
			00	−150	
			}	}	
			1E	0	
			}	}	
			3C	+150	
			• In the case of the AW-HE130		• Data value of response = (Setting / 5 + 0x1E)
			0A	−100	
			}	}	
			1E	0	
			}	}	
			32	+100	

Example of use)

• R pedestal: −150

**[Control]** PC → AW-HE120

http://192.168.0.10/cgi-bin/aw\_cam?cmd=ORP:000&res=1

**[Response]** AW-HE120 → PC

200 OK "ORP:000"

• R pedestal: +150

**[Control]** PC → AW-HE120

http://192.168.0.10/cgi-bin/aw\_cam?cmd=ORD:3C&res=1

**[Response]** AW-HE120 → PC

200 OK "ORD:3C"

• B pedestal: +150

**[Control]** PC → AW-HE120

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OBP:12C&res=1

**[Response]** AW-HE120 → PC

200 OK "OBP:12C"

• B pedestal: −150

**[Control]** PC → AW-HE120

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OBD:00&res=1

**[Response]** AW-HE120 → PC

200 OK "OBD:00"

## 3.2.7.3. Color matrix settings

These commands control the color matrix of the camera, and they enable the current settings to be acquired.

Table 3.2.7.3. Color matrix settings

Command name	Category	Command	Data value	Setting	Remarks
Color matrix control command	Control	OSE:31:[Data]	0 1 2 3	Normal EBU NTSC User	<ul style="list-style-type: none"> <li>The linear matrix and color correction settings can be selected only at the User setting.</li> <li>※Only supported by the AW-HE120/AW-HE130/AW-HE40/AW-HE65/AW-HE70.</li> </ul>
	Response	OSE:31:[Data]			※Only supported by the AW-HE120/AW-HE130/AW-HE40/AW-HE65/AW-HE70.
Color matrix query command	Request	QSE:31	None		※Only supported by the AW-HE120/AW-HE130/AW-HE40/AW-HE65/AW-HE70.
	Response	OSE:31:[Data]	0 1 2 3	Normal EBU NTSC User	※Only supported by the AW-HE120/AW-HE130/AW-HE40/AW-HE65/AW-HE70.
Linear matrix R-G control command	Control	OSD:2F:[Data]	00 ⌋ 1F ⌋ 3E	−31 ⌋ 0 ⌋ +31	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
	Response	OSD:2F:[Data]			※Only supported by the AW-HE120.
	Control	OSD:A4:[Data]	41 ⌋ 80 ⌋ BF	−63 ⌋ 0 ⌋ +63	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
	Response	OSD:A4:[Data]			※Only supported by the AW-HE130.
Linear matrix R-G query command	Request	QSD:2F	None		※Only supported by the AW-HE120.
	Response	OSD:2F:[Data]	00 ⌋ 1F ⌋ 3E	−31 ⌋ 0 ⌋ +31	※Only supported by the AW-HE120.
	Request	QSD:A4	None		※Only supported by the AW-HE130.
	Response	OSD:A4:[Data]	41 ⌋ 80 ⌋ BF	−63 ⌋ 0 ⌋ +63	※Only supported by the AW-HE130.



Command name	Category	Command	Data value	Setting	Remarks
Linear matrix R-B control command	Control	OSD:30:[Data]	00 ⌋ 1F ⌋ 3E	−31 ⌋ 0 ⌋ +31	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul> ※Only supported by the AW-HE120.
	Response	OSD:30:[Data]			※Only supported by the AW-HE120.
	Control	OSD:A5:[Data]	41 ⌋ 80 ⌋ BF	−63 ⌋ 0 ⌋ +63	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul> ※Only supported by the AW-HE130.
	Response	OSD:A5:[Data]			※Only supported by the AW-HE130.
Linear matrix R-B query command	Request	QSD:30	None		※Only supported by the AW-HE120.
	Response	OSD:30:[Data]	00 ⌋ 1F ⌋ 3E	−31 ⌋ 0 ⌋ +31	※Only supported by the AW-HE120.
	Request	QSD:A5	None		※Only supported by the AW-HE130.
	Response	OSD:A5:[Data]	41 ⌋ 80 ⌋ BF	−63 ⌋ 0 ⌋ +63	※Only supported by the AW-HE130.
Linear matrix G-R control command	Control	OSD:31:[Data]	00 ⌋ 1F ⌋ 3E	−31 ⌋ 0 ⌋ +31	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul> ※Only supported by the AW-HE120.
	Response	OSD:31:[Data]			※Only supported by the AW-HE120.
	Control	OSD:A6:[Data]	41 ⌋ 80 ⌋ BF	−63 ⌋ 0 ⌋ +63	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul> ※Only supported by the AW-HE130.
	Response	OSD:A6:[Data]			※Only supported by the AW-HE130.
Linear matrix G-R query command	Request	QSD:31	None		※Only supported by the AW-HE120.
	Response	OSD:31:[Data]	00 ⌋ 1F ⌋ 3E	−31 ⌋ 0 ⌋ +31	※Only supported by the AW-HE120.
	Request	QSD:A6	None		※Only supported by the AW-HE130.
	Response	OSD:A6:[Data]	41 ⌋ 80 ⌋ BF	−63 ⌋ 0 ⌋ +63	※Only supported by the AW-HE130.

Command name	Category	Command	Data value	Setting	Remarks
Linear matrix G-B control command	Control	OSD:32:[Data]	00 ⌋ 1F ⌋ 3E	−31 ⌋ 0 ⌋ +31	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul> ※Only supported by the AW-HE120.
	Response	OSD:32:[Data]			※Only supported by the AW-HE120.
	Control	OSD:A7:[Data]	41 ⌋ 80 ⌋ BF	−63 ⌋ 0 ⌋ +63	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul> ※Only supported by the AW-HE130.
	Response	OSD:A7:[Data]			※Only supported by the AW-HE130.
	Request	QSD:32	None		※Only supported by the AW-HE120.
Linear matrix G-B query command	Response	OSD:32:[Data]	00 ⌋ 1F ⌋ 3E	−31 ⌋ 0 ⌋ +31	※Only supported by the AW-HE120.
	Request	QSD:A7	None		※Only supported by the AW-HE130.
	Response	OSD:A7:[Data]	41 ⌋ 80 ⌋ BF	−63 ⌋ 0 ⌋ +63	※Only supported by the AW-HE130.
	Request	QSD:33	None		※Only supported by the AW-HE120.
	Response	OSD:33:[Data]	00 ⌋ 1F ⌋ 3E	−31 ⌋ 0 ⌋ +31	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul> ※Only supported by the AW-HE120.
Linear matrix B-R control command	Control	OSD:33:[Data]	00 ⌋ 1F ⌋ 3E	−31 ⌋ 0 ⌋ +31	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul> ※Only supported by the AW-HE120.
	Response	OSD:33:[Data]			※Only supported by the AW-HE120.
	Control	OSD:A8:[Data]	41 ⌋ 80 ⌋ BF	−63 ⌋ 0 ⌋ +63	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul> ※Only supported by the AW-HE130.
	Response	OSD:A8:[Data]			※Only supported by the AW-HE130.
	Request	QSD:A8	None		※Only supported by the AW-HE130.
Linear matrix B-R query command	Response	OSD:A8:[Data]	41 ⌋ 80 ⌋ BF	−63 ⌋ 0 ⌋ +63	※Only supported by the AW-HE130.
	Request	QSD:33	None		※Only supported by the AW-HE120.
	Response	OSD:33:[Data]	00 ⌋ 1F ⌋ 3E	−31 ⌋ 0 ⌋ +31	※Only supported by the AW-HE120.
	Request	QSD:A8	None		※Only supported by the AW-HE130.
	Response	OSD:A8:[Data]	41 ⌋ 80 ⌋ BF	−63 ⌋ 0 ⌋ +63	※Only supported by the AW-HE130.

Command name	Category	Command	Data value	Setting	Remarks
Linear matrix B-G control command	Control	OSD:34:[Data]	00 ⌋ 1F ⌋ 3E	−31 ⌋ 0 ⌋ +31	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul> ※Only supported by the AW-HE120.
	Response	OSD:34:[Data]			※Only supported by the AW-HE120.
	Control	OSD:A9:[Data]	41 ⌋ 80 ⌋ BF	−63 ⌋ 0 ⌋ +63	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul> ※Only supported by the AW-HE130.
	Response	OSD:A9:[Data]			※Only supported by the AW-HE130.
	Request	QSD:34	None		※Only supported by the AW-HE120.
Linear matrix B-G query command	Response	OSD:34:[Data]	00 ⌋ 1F ⌋ 3E	−31 ⌋ 0 ⌋ +31	※Only supported by the AW-HE120.
	Request	QSD:A9	None		※Only supported by the AW-HE130.
	Response	OSD:A9:[Data]	41 ⌋ 80 ⌋ BF	−63 ⌋ 0 ⌋ +63	※Only supported by the AW-HE130.
Color correction R GAIN/ SATURATION control command	Control	OSD:86:[Data]	In the case of the AW-HE120		
			01 ⌋ 80 ⌋ FF	−127 ⌋ 0 ⌋ +127	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			In the case of the AW-HE130		
			41 ⌋ 80 ⌋ BF	−63 ⌋ 0 ⌋ +63	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			In the case of the AW-HE40/AW-HE65/AW-HE70		
			61 ⌋ 80 ⌋ 9F	−31 ⌋ 0 ⌋ +31	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
	Response	OSD:86:[Data]			

Command name	Category	Command	Data value	Setting	Remarks
Color correction R GAIN/ SATURATION query command	Request	QSD:86	None		
	Response	OSD:86:[Data]	In the case of the AW-HE120		
			01 ⌋ 80 ⌋ FF	-127 ⌋ 0 ⌋ +127	
			In the case of the AW-HE130		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	
			In the case of the AW-HE40/AW-HE65/AW-HE70		
			61 ⌋ 80 ⌋ 9F	-31 ⌋ 0 ⌋ +31	
			In the case of the AW-HE120		
			01 ⌋ 80 ⌋ FF	-127 ⌋ 0 ⌋ +127	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			In the case of the AW-HE130/AW-HE40/AW-HE65/AW-HE70		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
Color correction R PHASE control command	Control	OSD:87:[Data]			
	Response	OSD:87:[Data]			
Color correction R PHASE query command	Request	QSD:87	None		
	Response	OSD:87:[Data]	In the case of the AW-HE120		
			01 ⌋ 80 ⌋ FF	-127 ⌋ 0 ⌋ +127	
			In the case of the AW-HE130/AW-HE40/AW-HE65/AW-HE70		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	
			In the case of the AW-HE120		
			01 ⌋ 80 ⌋ FF	-127 ⌋ 0 ⌋ +127	
			In the case of the AW-HE130/AW-HE40/AW-HE65/AW-HE70		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	
			In the case of the AW-HE120		
			01 ⌋ 80 ⌋ FF	-127 ⌋ 0 ⌋ +127	

Command name	Category	Command	Data value	Setting	Remarks
Color correction R_R_YI GAIN/ SATURATION control command	Control	OSD:9C:[Data]	In the case of the AW-HE130		<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			41	-63	
			7F	7F	
			BF	+63	
			In the case of the AW-HE40/AW-HE65/AW-HE70		<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			61	-31	
			7F	7F	
			9F	+31	
	Response	OSD:9C:[Data]			
Color correction R_R_YI GAIN/ SATURATION query command	Request	QSD:9C	None		
	Response	OSD:9C:[Data]	In the case of the AW-HE130		
			41	-63	
			7F	7F	
			In the case of the AW-HE40/AW-HE65/AW-HE70		
			61	-31	
			7F	7F	
			9F	+31	
Color correction R_R_YI PHASE control command	Control	OSD:9D:[Data]	In the case of the AW-HE130/AW-HE40/AW-HE65/AW-HE70		<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			41	-63	
			7F	7F	
			BF	+63	
	Response	OSD:9D:[Data]			
Color correction R_R_YI PHASE query command	Request	QSD:9D	None		
	Response	OSD:9D:[Data]	In the case of the AW-HE130/AW-HE40/AW-HE65/AW-HE70		
			41	-63	
			7F	7F	
			In the case of the AW-HE130		
			41	-63	
			7F	7F	
			BF	+63	
Color correction R_YI GAIN/ SATURATION control command	Control	OSD:88:[Data]	In the case of the AW-HE120		<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			01	-127	
			7F	7F	
			FF	+127	
			In the case of the AW-HE130		<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			41	-63	
			7F	7F	
			BF	+63	
	Response	OSD:88:[Data]			※Only supported by the AW-HE120/AW-HE130.

Command name	Category	Command	Data value	Setting	Remarks
Color correction R_YI GAIN/ SATURATION query command	Request	QSD:88	None		
	Response	OSD:88:[Data]	In the case of the AW-HE120		
			01 ⌋ 80 ⌋ FF	-127 ⌋ 0 ⌋ +127	
			In the case of the AW-HE130		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	
Color correction R_YI PHASE control command	Control	OSD:89:[Data]	In the case of the AW-HE120		
			01 ⌋ 80 ⌋ FF	-127 ⌋ 0 ⌋ +127	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			In the case of the AW-HE130		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
	Response	OSD:89:[Data]			※Only supported by the AW-HE120/AW-HE130.
Color correction R_YI PHASE query command	Request	QSD:89	None		
	Response	OSD:89:[Data]	In the case of the AW-HE120		
			01 ⌋ 80 ⌋ FF	-127 ⌋ 0 ⌋ +127	
			In the case of the AW-HE130		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	
Color correction R_YI_YI GAIN/ SATURATION control command	Control	OSD:9E:[Data]	In the case of the AW-HE130		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			In the case of the AW-HE40/AW-HE65/AW-HE70		
			61 ⌋ 80 ⌋ 9F	-31 ⌋ 0 ⌋ +31	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
	Response	OSD:9E:[Data]			

Command name	Category	Command	Data value	Setting	Remarks
Color correction R_YI_YI GAIN/ SATURATION query command	Request	QSD:9E	None		
	Response	OSD:9E:[Data]	In the case of the AW-HE130		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	
			In the case of the AW-HE40/AW-HE65/AW-HE70		
			61 ⌋ 80 ⌋ 9F	-31 ⌋ 0 ⌋ +31	
Color correction R_YI_YI PHASE control command	Control	OSD:9F:[Data]	In the case of the AW-HE130/AW-HE40/AW-HE65/AW-HE70		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
	Response	OSD:9F:[Data]			
Color correction R_YI PHASE query command	Request	QSD:9F	None		
	Response	OSD:9F:[Data]	In the case of the AW-HE130/AW-HE40/AW-HE65/AW-HE70		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	
Color correction YI GAIN/ SATURATION control command	Control	OSD:8A:[Data]	In the case of the AW-HE120		
			01 ⌋ 80 ⌋ FF	-127 ⌋ 0 ⌋ +127	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			In the case of the AW-HE130		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			In the case of the AW-HE40/AW-HE65/AW-HE70		
			61 ⌋ 80 ⌋ 9F	-31 ⌋ 0 ⌋ +31	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
	Response	OSD:8A:[Data]			

Command name	Category	Command	Data value	Setting	Remarks
Color correction YI GAIN/ SATURATION query command	Request	QSD:8A	None		
	Response	OSD:8A:[Data]	In the case of the AW-HE120		
			01 ⌋ 80 ⌋ FF	-127 ⌋ 0 ⌋ +127	
			In the case of the AW-HE130		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	
			In the case of the AW-HE40/AW-HE65/AW-HE70		
			61 ⌋ 80 ⌋ 9F	-31 ⌋ 0 ⌋ +31	
			In the case of the AW-HE120		
			01 ⌋ 80 ⌋ FF	-127 ⌋ 0 ⌋ +127	<ul style="list-style-type: none"> <li>• Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>• Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			In the case of the AW-HE130/AW-HE40/AW-HE65/AW-HE70		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	<ul style="list-style-type: none"> <li>• Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>• Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
Color correction YI PHASE control command	Control	OSD:8B:[Data]			
	Response	OSD:8B:[Data]			※Only supported by the AW-HE120/AW-HE130.
Color correction YI PHASE query command	Request	QSD:8B	None		
	Response	OSD:8B:[Data]	In the case of the AW-HE120		
			01 ⌋ 80 ⌋ FF	-127 ⌋ 0 ⌋ +127	
			In the case of the AW-HE130/AW-HE40/AW-HE65/AW-HE70		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	



Command name	Category	Command	Data value	Setting	Remarks
Color correction YI_G GAIN/ SATURATION control command	Control	OSD:8C:[Data]	In the case of the AW-HE120		<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			01	-127	
			⌋	⌋	
			80	0	
			⌋	⌋	
			FF	+127	
	Response	OSD:8C:[Data]	In the case of the AW-HE130		<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			41	-63	
			⌋	⌋	
			80	0	
			⌋	⌋	
			BF	+63	
Color correction YI_G GAIN/ SATURATION query command	Request	QSD:8C	None		
	Response	OSD:8C:[Data]	In the case of the AW-HE120		
			01	-127	
			⌋	⌋	
			80	0	
			⌋	⌋	
	Response	OSD:8C:[Data]	In the case of the AW-HE130		
			41	-63	
			⌋	⌋	
			80	0	
			⌋	⌋	
			BF	+63	
Color correction YI_G PHASE control command	Control	OSD:8D:[Data]	In the case of the AW-HE120		<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			01	-127	
			⌋	⌋	
			80	0	
			⌋	⌋	
			FF	+127	
	Response	OSD:8D:[Data]	In the case of the AW-HE130		<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			41	-63	
			⌋	⌋	
			80	0	
			⌋	⌋	
			BF	+63	
Color correction YI_G PHASE query command	Request	QSD:8D	None		
	Response	OSD:8D:[Data]	In the case of the AW-HE120		
			01	-127	
			⌋	⌋	
			80	0	
			⌋	⌋	
	Response	OSD:8D:[Data]	In the case of the AW-HE130		
			41	-63	
			⌋	⌋	
			80	0	
			⌋	⌋	
			BF	+63	

Command name	Category	Command	Data value	Setting	Remarks			
Color correction G GAIN/ SATURATION control command	Control	OSD:8E:[Data]	In the case of the AW-HE120		<ul style="list-style-type: none"><li>• Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li><li>• Setting is possible when User has been selected as the MatrixType setting.</li></ul>			
			01	−127				
			}	}				
			80	0				
</								

Command name	Category	Command	Data value	Setting	Remarks
Color correction G PHASE query command	Request	QSD:8F	None		
	Response	OSD:8F:[Data]	In the case of the AW-HE120		
			01 ⌋ 80 ⌋ FF	-127 ⌋ 0 ⌋ +127	
			In the case of the AW-HE130/AW-HE40/AW-HE65/AW-HE70		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	
Color correction G_Cy GAIN/ SATURATION control command	Control	OSD:90:[Data]	In the case of the AW-HE120		
			01 ⌋ 80 ⌋ FF	-127 ⌋ 0 ⌋ +127	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			In the case of the AW-HE130		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			In the case of the AW-HE40/AW-HE65/AW-HE70		
			61 ⌋ 80 ⌋ 9F	-31 ⌋ 0 ⌋ +31	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
Color correction G_Cy GAIN/ SATURATION query command	Response	OSD:90:[Data]			
	Request	QSD:90	None		
	Response	OSD:90:[Data]	In the case of the AW-HE120		
			01 ⌋ 80 ⌋ FF	-127 ⌋ 0 ⌋ +127	
			In the case of the AW-HE130		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	
			In the case of the AW-HE40/AW-HE65/AW-HE70		
			61 ⌋ 80 ⌋ 9F	-31 ⌋ 0 ⌋ +31	

Command name	Category	Command	Data value	Setting	Remarks
Color correction G_Cy PHASE control command	Control	OSD:91:[Data]	In the case of the AW-HE120		<ul style="list-style-type: none"><li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li><li>Setting is possible when User has been selected as the MatrixType setting.</li></ul> ※Only supported by the AW-HE120.
			01	-127	
			}	}	
			80	0	
			}	}	
			FF	+127	
			In the case of the AW-HE130/AW-HE40/AW-HE65/AW-HE70		
			41	-63	
			}	}	
			80	0	
}	}				
BF	+63				
	Response	OSD:91:[Data]			
Color correction G_Cy PHASE query command	Request	QSD:91			
	Response	OSD:91:[Data]	In the case of the AW-HE120		
			01	-127	
			}	}	
			80	0	
			}	}	
			FF	+127	
			In the case of the AW-HE130/AW-HE40/AW-HE65/AW-HE70		
			41	-63	
			}	}	
80			0		
}	}				
BF	+63				
Color correction Cy GAIN/ SATURATION control command	Control	OSD:92:[Data]	In the case of the AW-HE120		<ul style="list-style-type: none"><li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li><li>Setting is possible when User has been selected as the MatrixType setting.</li></ul>
			01	-127	
			}	}	
			80	0	
			}	}	
			FF	+127	
			In the case of the AW-HE130		
			41	-63	
			}	}	
			80	0	
}	}				
BF	+63				
			In the case of the AW-HE40/AW-HE65/AW-HE70		<ul style="list-style-type: none"><li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li><li>Setting is possible when User has been selected as the MatrixType setting.</li></ul>
61	-31				
}	}				
80	0				
}	}				
9F	+31				
	Response	OSD:92:[Data]			

Command name	Category	Command	Data value	Setting	Remarks
Color correction Cy GAIN/ SATURATION query command	Request	QSD:92	None		
	Response	OSD:92:[Data]	In the case of the AW-HE120		
			01 } 80 } FF	-127 } 0 } +127	
			In the case of the AW-HE130		
			41 } 80 } BF	-63 } 0 } +63	
			In the case of the AW-HE40/AW-HE65/AW-HE70		
			61 } 80 } 9F	-31 } 0 } +31	
			In the case of the AW-HE120		
			01 } 80 } FF	-127 } 0 } +127	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			In the case of the AW-HE130/AW-HE40/AW-HE65/AW-HE70		
			41 } 80 } BF	-63 } 0 } +63	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
Color correction Cy PHASE control command	Control	OSD:93:[Data]			
	Response	OSD:93:[Data]	In the case of the AW-HE120		
			01 } 80 } FF	-127 } 0 } +127	
			In the case of the AW-HE130/AW-HE40/AW-HE65/AW-HE70		
			41 } 80 } BF	-63 } 0 } +63	
			In the case of the AW-HE120		
Color correction Cy PHASE query command	Request	QSD:93	None		
	Response	OSD:93:[Data]	In the case of the AW-HE120		
			01 } 80 } FF	-127 } 0 } +127	
			In the case of the AW-HE130/AW-HE40/AW-HE65/AW-HE70		
			41 } 80 } BF	-63 } 0 } +63	
			In the case of the AW-HE120		

Command name	Category	Command	Data value	Setting	Remarks
Color correction Cy_B GAIN/ SATURATION control command	Control	OSD:94:[Data]	In the case of the AW-HE120		<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			01	-127	
			⌋	⌋	
			80	0	
			⌋	⌋	
			FF	+127	
	Response	OSD:94:[Data]	In the case of the AW-HE130		<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			41	-63	
			⌋	⌋	
			80	0	
			⌋	⌋	
			BF	+63	
					※Only supported by the AW-HE120/ AW-HE130.
Color correction Cy_B GAIN/ SATURATION query command	Request	QSD:94	None		
	Response	OSD:94:[Data]	In the case of the AW-HE120		
			01	-127	
			⌋	⌋	
			80	0	
			⌋	⌋	
			FF	+127	
			In the case of the AW-HE130		
			41	-63	
			⌋	⌋	
			80	0	
			⌋	⌋	
			BF	+63	
Color correction Cy_B PHASE control command	Control	OSD:95:[Data]	In the case of the AW-HE120		<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			01	-127	
			⌋	⌋	
			80	0	
			⌋	⌋	
			FF	+127	
	Response	OSD:95:[Data]	In the case of the AW-HE130		<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			41	-63	
			⌋	⌋	
			80	0	
			⌋	⌋	
			BF	+63	
					※Only supported by the AW-HE120/ AW-HE130.
Color correction Cy_B PHASE query command	Request	QSD:95	None		
	Response	OSD:95:[Data]	In the case of the AW-HE120		
			01	-127	
			⌋	⌋	
			80	0	
			⌋	⌋	
			FF	+127	
			In the case of the AW-HE130		
			41	-63	
			⌋	⌋	
			80	0	
			⌋	⌋	
			BF	+63	

Command name	Category	Command	Data value	Setting	Remarks
Color correction B GAIN/ SATURATION control command	Control	OSD:96:[Data]	In the case of the AW-HE120		
			01	-127	<ul style="list-style-type: none"><li>• Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li><li>• Setting is possible when User has been selected as the MatrixType setting.</li></ul>
			}	}	
			80	0	
			}	}	
			FF	+127	
			In the case of the AW-HE130		
			41	-63	<ul style="list-style-type: none"><li>• Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li><li>• Setting is possible when User has been selected as the MatrixType setting.</li></ul>
			}	}	
	80	0			
}	}				
BF	+63				
In the case of the AW-HE40/AW-HE65/AW-HE70					
61	-31	<ul style="list-style-type: none"><li>• Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li><li>• Setting is possible when User has been selected as the MatrixType setting.</li></ul>			
}	}				
80	0				
}	}				
9F	+31				
Response	OSD:96:[Data]				
Color correction B GAIN/ SATURATION query command	Request	QSD:96	None		
	Response	OSD:96:[Data]	In the case of the AW-HE120		
			01	-127	
			}	}	
			80	0	
			}	}	
			FF	+127	
			In the case of the AW-HE130		
			41	-63	
			}	}	
80	0				
}	}				
BF	+63				
In the case of the AW-HE40/AW-HE65/AW-HE70					
61	-31				
}	}				
80	0				
}	}				
9F	+31				
Color correction B PHASE control command	Control	OSD:97:[Data]	In the case of the AW-HE120		
			01	-127	<ul style="list-style-type: none"><li>• Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li><li>• Setting is possible when User has been selected as the MatrixType setting.</li></ul>
			}	}	
			80	0	
			}	}	
			FF	+127	
			In the case of the AW-HE130/AW-HE40/AW-HE65/AW-HE70		
			41	-63	<ul style="list-style-type: none"><li>• Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li><li>• Setting is possible when User has been selected as the MatrixType setting.</li></ul>
			}	}	
	80	0			
}	}				
BF	+63				
Response	OSD:97:[Data]				

Command name	Category	Command	Data value	Setting	Remarks
Color correction B PHASE query command	Request	QSD:97	None		
	Response	OSD:97:[Data]	In the case of the AW-HE120		
			01 ⌋ 80 ⌋ FF	-127 ⌋ 0 ⌋ +127	
			In the case of the AW-HE130/AW-HE40/AW-HE65/AW-HE70		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	
Color correction B_Mg GAIN/ SATURATION control command	Control	OSD:80:[Data]	In the case of the AW-HE120		
			01 ⌋ 80 ⌋ FF	-127 ⌋ 0 ⌋ +127	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			In the case of the AW-HE130		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
	Response	OSD:80:[Data]			
					※Only supported by the AW-HE120/AW-HE130.
Color correction B_Mg GAIN/ SATURATION query command	Request	QSD:80	None		
	Response	OSD:80:[Data]	In the case of the AW-HE120		
			01 ⌋ 80 ⌋ FF	-127 ⌋ 0 ⌋ +127	
			In the case of the AW-HE130		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	
Color correction B_Mg PHASE control command	Control	OSD:81:[Data]	In the case of the AW-HE120		
			01 ⌋ 80 ⌋ FF	-127 ⌋ 0 ⌋ +127	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			In the case of the AW-HE130		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
	Response	OSD:81:[Data]			
					※Only supported by the AW-HE120/AW-HE130.



Command name	Category	Command	Data value	Setting	Remarks
Color correction B_Mg PHASE query command	Request	QSD:81	None		
	Response	OSD:81:[Data]	In the case of the AW-HE120		
			01 ⌋ 80 ⌋ FF	-127 ⌋ 0 ⌋ +127	
			In the case of the AW-HE130		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	
Color correction Mg GAIN/ SATURATION control command	Control	OSD:82:[Data]	In the case of the AW-HE120		
			01 ⌋ 80 ⌋ FF	-127 ⌋ 0 ⌋ +127	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			In the case of the AW-HE130		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
			In the case of the AW-HE40/AW-HE65/AW-HE70		
			61 ⌋ 80 ⌋ 9F	-31 ⌋ 0 ⌋ +31	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
	Response	OSD:82:[Data]			
Color correction Mg GAIN/ SATURATION query command	Request	QSD:82	None		
	Response	OSD:82:[Data]	In the case of the AW-HE120		
			01 ⌋ 80 ⌋ FF	-127 ⌋ 0 ⌋ +127	
			In the case of the AW-HE130		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	
			In the case of the AW-HE40/AW-HE65/AW-HE70		
			61 ⌋ 80 ⌋ 9F	-31 ⌋ 0 ⌋ +31	

Command name	Category	Command	Data value	Setting	Remarks	
Color correction Mg PHASE control command	Control	OSD:83:[Data]	In the case of the AW-HE120		<ul style="list-style-type: none"><li>• Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li><li>• Setting is possible when User has been selected as the MatrixType setting.</li></ul>	
			01	-127		
			⌋	⌋		
			80	0		
			⌋	⌋		
	FF	+127				
			In the case of the AW-HE130/AW-HE40/AW-HE65/AW-HE70		<ul style="list-style-type: none"><li>• Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li><li>• Setting is possible when User has been selected as the MatrixType setting.</li></ul>	
41	-63					
⌋	⌋					
80	0					
⌋	⌋					
BF	+63					
	Response	OSD:83:[Data]			※Only supported by the AW-HE120/AW-HE130.	
Color correction Mg PHASE query command	Request	QSD:83	None			
	Response	OSD:83:[Data]	In the case of the AW-HE120			
			01	-127		
			⌋	⌋		
			80	0		
			⌋	⌋		
FF	+127					
			In the case of the AW-HE130/AW-HE40/AW-HE65/AW-HE70			
41	-63					
⌋	⌋					
80	0					
⌋	⌋					
BF	+63					
Color correction Mg_R GAIN/ SATURATION control command	Control	OSD:84:[Data]	In the case of the AW-HE120		<ul style="list-style-type: none"><li>• Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li><li>• Setting is possible when User has been selected as the MatrixType setting.</li></ul>	
			01	-127		
			⌋	⌋		
			80	0		
			⌋	⌋		
	FF	+127				
				In the case of the AW-HE130		<ul style="list-style-type: none"><li>• Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li><li>• Setting is possible when User has been selected as the MatrixType setting.</li></ul>
	41	-63				
	⌋	⌋				
	80	0				
⌋	⌋					
BF	+63					
			In the case of the AW-HE40/AW-HE65/AW-HE70		<ul style="list-style-type: none"><li>• Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li><li>• Setting is possible when User has been selected as the MatrixType setting.</li></ul>	
61	-31					
⌋	⌋					
80	0					
⌋	⌋					
9F	+31					
	Response	OSD:84:[Data]				

Command name	Category	Command	Data value	Setting	Remarks
Color correction Mg_R GAIN/ SATURATION query command	Request	QSD:84	None		
	Response	OSD:84:[Data]	In the case of the AW-HE120		
			01	-127	
			}	}	
			80	0	
			}	}	
			FF	+127	
			In the case of the AW-HE130		
			41	-63	
			}	}	
	80	0			
	}	}			
BF	+63				
In the case of the AW-HE40/AW-HE65/AW-HE70					
61	-31				
}	}				
80	0				
}	}				
9F	+31				
Color correction Mg_R PHASE control command	Control	OSD:85:[Data]	In the case of the AW-HE120		
			01	-127	• Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting. • Setting is possible when User has been selected as the MatrixType setting.
			}	}	
			80	0	
			}	}	
			FF	+127	
			In the case of the AW-HE130/AW-HE40/AW-HE65/AW-HE70		
			41	-63	• Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting. • Setting is possible when User has been selected as the MatrixType setting.
			}	}	
	80	0			
}	}				
BF	+63				
Response	OSD:85:[Data]				
Color correction Mg_R PHASE query command	Request	QSD:85	None		
	Response	OSD:85:[Data]	In the case of the AW-HE120		
			01	-127	
			}	}	
			80	0	
			}	}	
			FF	+127	
			In the case of the AW-HE130/AW-HE40/AW-HE65/AW-HE70		
			41	-63	
			}	}	
	80	0			
	}	}			
BF	+63				
Color correction Mg_R_R GAIN/ SATURATION control command	Control	OSD:9A:[Data]	In the case of the AW-HE130		
			41	-63	• Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting. • Setting is possible when User has been selected as the MatrixType setting.
			}	}	
			80	0	
			}	}	
			BF	+63	
	Response	OSD:9A:[Data]			※Only supported by the AW-HE130.

Command name	Category	Command	Data value	Setting	Remarks
Color correction Mg_R_R PHASE control command	Request	QSD:9A	None		
	Response	OSD:9A:[Data]	In the case of the AW-HE130		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	
Color correction Mg_R_R PHASE control command	Control	OSD:9B:[Data]	In the case of the AW-HE130		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
	Response	OSD:9B:[Data]			※Only supported by the AW-HE130.
Color correction Mg_R_R PHASE query command	Request	QSD:9B	None		
	Response	OSD:9B:[Data]	In the case of the AW-HE130		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	
Color correction Cy_Cy_B GAIN/ SATURATION control command	Control	OSD:AA:[Data]	In the case of the AW-HE40/AW-HE65/AW-HE70		
			61 ⌋ 80 ⌋ 9F	-31 ⌋ 0 ⌋ +31	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
	Response	OSD:AA:[Data]			
Color correction Cy_Cy_B GAIN/ SATURATION query command	Request	QSD:AA	None		
	Response	OSD:AA:[Data]	In the case of the AW-HE40/AW-HE65/AW-HE70		
			61 ⌋ 80 ⌋ 9F	-31 ⌋ 0 ⌋ +31	
Color correction Cy_Cy_B PHASE control command	Control	OSD:AB:[Data]	In the case of the AW-HE40/AW-HE65/AW-HE70		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
	Response	OSD:AB:[Data]			
Color correction Cy_Cy_B PHASE query command	Request	QSD:AB	None		
	Response	OSD:AB:[Data]	In the case of the AW-HE40/AW-HE65/AW-HE70		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	

Command name	Category	Command	Data value	Setting	Remarks
Color correction Cy_B_B GAIN/ SATURATION control command	Control	OSD:AC:[Data]	In the case of the AW-HE40/AW-HE65/AW-HE70		<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
	Response	OSD:AC:[Data]	61 ⌋ 80 ⌋ 9F	-31 ⌋ 0 ⌋ +31	
Color correction Cy_B_B GAIN/ SATURATION query command	Request	QSD:AC	None		
	Response	OSD:AC:[Data]	In the case of the AW-HE40/AW-HE65/AW-HE70		
Color correction Cy_B_B PHASE control command	Control	OSD:AD:[Data]	In the case of the AW-HE40/AW-HE65/AW-HE70		<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
	Response	OSD:AD:[Data]	41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	
Color correction Cy_B_B PHASE query command	Request	QSD:AD	None		
	Response	OSD:AD:[Data]	In the case of the AW-HE40/AW-HE65/AW-HE70		
Color correction B_B_Mg GAIN/ SATURATION control command	Control	OSD:C0:[Data]	In the case of the AW-HE40/AW-HE65/AW-HE70		<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
	Response	OSD:C0:[Data]	61 ⌋ 80 ⌋ 9F	-31 ⌋ 0 ⌋ +31	
Color correction B_B_Mg GAIN/ SATURATION query command	Request	QSD:C0	None		
	Response	OSD:C0:[Data]	In the case of the AW-HE40/AW-HE65/AW-HE70		
Color correction B_B_Mg PHASE control command	Control	OSD:C1:[Data]	In the case of the AW-HE40/AW-HE65/AW-HE70		<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
	Response	OSD:C1:[Data]	41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	

Command name	Category	Command	Data value	Setting	Remarks
Color correction B_B_Mg PHASE query command	Request	QSD:C1	None		
	Response	OSD:C1:[Data]	In the case of the AW-HE40/AW-HE65/AW-HE70		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	
Color correction B_Mg_Mg GAIN/ SATURATION control command	Control	OSD:C2:[Data]	In the case of the AW-HE40/AW-HE65/AW-HE70		
			61 ⌋ 80 ⌋ 9F	-31 ⌋ 0 ⌋ +31	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
	Response	OSD:C2:[Data]			
Color correction B_Mg_Mg GAIN/ SATURATION query command	Request	QSD:C2	None		
	Response	OSD:C2:[Data]	In the case of the AW-HE40/AW-HE65/AW-HE70		
			61 ⌋ 80 ⌋ 9F	-31 ⌋ 0 ⌋ +31	
Color correction B_Mg_Mg PHASE control command	Control	OSD:C3:[Data]	In the case of the AW-HE40/AW-HE65/AW-HE70		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
	Response	OSD:C3:[Data]			
Color correction B_Mg_Mg PHASE query command	Request	QSD:C3	None		
	Response	OSD:C3:[Data]	In the case of the AW-HE40/AW-HE65/AW-HE70		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	
Color correction YI_YI_G GAIN/ SATURATION control command	Control	OSD:C4:[Data]	In the case of the AW-HE40/AW-HE65/AW-HE70		
			61 ⌋ 80 ⌋ 9F	-31 ⌋ 0 ⌋ +31	<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
	Response	OSD:C4:[Data]			
Color correction YI_YI_G GAIN/ SATURATION query command	Request	QSD:C4	None		
	Response	OSD:C4:[Data]	In the case of the AW-HE40/AW-HE65/AW-HE70		
			61 ⌋ 80 ⌋ 9F	-31 ⌋ 0 ⌋ +31	

Command name	Category	Command	Data value	Setting	Remarks
Color correction YI_YI_G PHASE control command	Control	OSD:C5:[Data]	In the case of the AW-HE40/AW-HE65/AW-HE70		<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
	Response	OSD:C5:[Data]	41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	
Color correction YI_YI_G PHASE query command	Request	QSD:C5	None		
	Response	OSD:C5:[Data]	In the case of the AW-HE40/AW-HE65/AW-HE70		
Color correction YI_G_G GAIN/ SATURATION control command	Control	OSD:C6:[Data]	In the case of the AW-HE40/AW-HE65/AW-HE70		<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
	Response	OSD:C6:[Data]	61 ⌋ 80 ⌋ 9F	-31 ⌋ 0 ⌋ +31	
Color correction YI_G_G GAIN/ SATURATION query command	Request	QSD:C6	None		
	Response	OSD:C6:[Data]	In the case of the AW-HE40/AW-HE65/AW-HE70		
Color correction YI_G_G PHASE control command	Control	OSD:C7:[Data]	In the case of the AW-HE40/AW-HE65/AW-HE70		<ul style="list-style-type: none"> <li>Settings cannot be changed if Normal, EBU or NTSC has been selected as the MatrixType setting.</li> <li>Setting is possible when User has been selected as the MatrixType setting.</li> </ul>
	Response	OSD:C7:[Data]	41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	
Color correction YI_G_G PHASE query command	Request	QSD:C7	None		
	Response	OSD:C7:[Data]	In the case of the AW-HE40/AW-HE65/AW-HE70		
			41 ⌋ 80 ⌋ BF	-63 ⌋ 0 ⌋ +63	

## Example of use)

• Color matrix: User

[Control] PC → AW-HE120

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OSE:31:3&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OSE:31:3&res=1)

[Response] AW-HE120 → PC

200 OK "OSE:31:3"

- Linear matrix R-G: +31  
    **[Control]** PC → AW-HE120  
        http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:2F:3E&res=1  
    **[Response]** AW-HE120 → PC  
        200 OK "OSD:2F:3E"
- Linear matrix R-B: +31  
    **[Control]** PC → AW-HE120  
        http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:30:3E&res=1  
    **[Response]** AW-HE120 → PC  
        200 OK "OSD:30:3E"
- Linear matrix G-R: +31  
    **[Control]** PC → AW-HE120  
        http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:31:3E&res=1  
    **[Response]** AW-HE120 → PC  
        200 OK "OSD:31:3E"
- Linear matrix G-B: +31  
    **[Control]** PC → AW-HE120  
        http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:32:3E&res=1  
    **[Response]** AW-HE120 → PC  
        200 OK "OSD:32:3E"
- Linear matrix B-R: +31  
    **[Control]** PC → AW-HE120  
        http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:33:3E&res=1  
    **[Response]** AW-HE120 → PC  
        200 OK "OSD:33:3E"
- Linear matrix B-G: +31  
    **[Control]** PC → AW-HE120  
        http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:34:3E&res=1  
    **[Response]** AW-HE120 → PC  
        200 OK "OSD:34:3E"
- Color correction R GAIN/SATURATION: +127  
    **[Control]** PC → AW-HE120  
        http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:86:FF&res=1  
    **[Response]** AW-HE120 → PC  
        200 OK "OSD:86:FF"
- Color correction R PHASE: +127  
    **[Control]** PC → AW-HE120  
        http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:87:FF&res=1  
    **[Response]** AW-HE120 → PC  
        200 OK "OSD:87:FF"



- Color correction R\_YI GAIN/SATURATION: +127  
**[Control]** PC → AW-HE120  
http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:88:FF&res=1  
**[Response]** AW-HE120 → PC  
200 OK "OSD:88:FF"
  
- Color correction R\_YI PHASE: +127  
**[Control]** PC → AW-HE120  
http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:89:FF&res=1  
**[Response]** AW-HE120 → PC  
200 OK "OSD:89:FF"
  
- Color correction YI GAIN/SATURATION: +127  
**[Control]** PC → AW-HE120  
http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:8A:FF&res=1  
**[Response]** AW-HE120 → PC  
200 OK "OSD:8A:FF"
  
- Color correction YI PHASE: +127  
**[Control]** PC → AW-HE120  
http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:8B:FF&res=1  
**[Response]** AW-HE120 → PC  
200 OK "OSD:8B:FF"
  
- Color correction YI\_G GAIN/SATURATION: +127  
**[Control]** PC → AW-HE120  
http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:8C:FF&res=1  
**[Response]** AW-HE120 → PC  
200 OK "OSD:8C:FF"
  
- Color correction YI\_G PHASE: +127  
**[Control]** PC → AW-HE120  
http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:8D:FF&res=1  
**[Response]** AW-HE120 → PC  
200 OK "OSD:8D:FF"
  
- Color correction G GAIN/SATURATION: +127  
**[Control]** PC → AW-HE120  
http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:8E:FF&res=1  
**[Response]** AW-HE120 → PC  
200 OK "OSD:8E:FF"
  
- Color correction G PHASE: +127  
**[Control]** PC → AW-HE120  
http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:8F:FF&res=1  
**[Response]** AW-HE120 → PC  
200 OK "OSD:8F:FF"

- Color correction G\_Cy GAIN/SATURATION: +127  
  **[Control]** PC → AW-HE120  
    http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:90:FF&res=1  
  **[Response]** AW-HE120 → PC  
    200 OK "OSD:90:FF"
- Color correction G\_Cy PHASE: +127  
  **[Control]** PC → AW-HE120  
    http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:91:FF&res=1  
  **[Response]** AW-HE120 → PC  
    200 OK "OSD:91:FF"
- Color correction Cy GAIN/SATURATION: +127  
  **[Control]** PC → AW-HE120  
    http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:92:FF&res=1  
  **[Response]** AW-HE120 → PC  
    200 OK "OSD:92:FF"
- Color correction Cy PHASE: +127  
  **[Control]** PC → AW-HE120  
    http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:93:FF&res=1  
  **[Response]** AW-HE120 → PC  
    200 OK "OSD:93:FF"
- Color correction Cy\_B GAIN/SATURATION: +127  
  **[Control]** PC → AW-HE120  
    http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:94:FF&res=1  
  **[Response]** AW-HE120 → PC  
    200 OK "OSD:94:FF"
- Color correction Cy\_B PHASE: +127  
  **[Control]** PC → AW-HE120  
    http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:95:FF&res=1  
  **[Response]** AW-HE120 → PC  
    200 OK "OSD:95:FF"
- Color correction B GAIN/SATURATION: +127  
  **[Control]** PC → AW-HE120  
    http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:96:FF&res=1  
  **[Response]** AW-HE120 → PC  
    200 OK "OSD:96:FF"
- Color correction B PHASE: +127  
  **[Control]** PC → AW-HE120  
    http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:97:FF&res=1  
  **[Response]** AW-HE120 → PC  
    200 OK "OSD:97:FF"

- Color correction B\_Mg GAIN/SATURATION: +127  
  **[Control]** PC → AW-HE120  
    http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:80:FF&res=1  
  **[Response]** AW-HE120 → PC  
    200 OK "OSD:80:FF"
  
- Color correction B\_Mg PHASE: +127  
  **[Control]** PC → AW-HE120  
    http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:81:FF&res=1  
  **[Response]** AW-HE120 → PC  
    200 OK "OSD:81:FF"
  
- Color correction Mg GAIN/SATURATION: +127  
  **[Control]** PC → AW-HE120  
    http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:82:FF&res=1  
  **[Response]** AW-HE120 → PC  
    200 OK "OSD:82:FF"
  
- Color correction Mg PHASE: +127  
  **[Control]** PC → AW-HE120  
    http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:83:FF&res=1  
  **[Response]** AW-HE120 → PC  
    200 OK "OSD:83:FF"
  
- Color correction Mg\_R GAIN/SATURATION: +127  
  **[Control]** PC → AW-HE120  
    http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:84:FF&res=1  
  **[Response]** AW-HE120 → PC  
    200 OK "OSD:84:FF"
  
- Color correction Mg\_R PHASE: +127  
  **[Control]** PC → AW-HE120  
    http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:85:FF&res=1  
  **[Response]** AW-HE120 → PC  
    200 OK "OSD:85:FF"

### 3.2.8. Chroma level setting

These commands enable the chroma level of the camera to be set and the current settings to be acquired.

Table 3.2.8. Chroma level setting

Command name	Category	Command	Data value	Setting	Remarks
Chroma level control command	Control	OCG:[Data]	In the case of the AW-HE50/AW-HE60/AW-HE120/AW-HE40/AW-HE65/AW-HE70		
			00	−3	■ In the case of the AW-HE50/AW-HE60 • Disabled at the FullAuto setting (ER3 is returned).
			01	−2	
			02	−1	
			03	0	
			04	+1	
	05	+2			
	06	+3			
	Response	OCG:[Data]			
	Control	OSD:B0:[Data]	In the case of the AW-HE130		
00h			OFF		
1Dh			−99%		
∟			∟		
80h			0		
∟			∟		
A8h	40%				
Response	OSD:B0:[Data]				
Chroma level query command	Request	QCG	In the case of the AW-HE50/AW-HE60/AW-HE120/AW-HE40/AW-HE65/AW-HE70		
			None		
	Response	OCG:[Data]	00	−3	
			01	−2	
			02	−1	
			03	0	
			04	+1	
			05	+2	
			06	+3	
	Request	QSD:B0	In the case of the AW-HE130		
			None		
	Response	OSD:B0:[Data]	00h	OFF	
1Dh			−99%		
∟			∟		
80h			0		
∟			∟		
A8h			40%		

Example of use)

• Chroma level: 0

**[Control]** PC → AW-HE50

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OCG:03&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OCG:03&res=1)

**[Response]** AW-HE50 → PC

200 OK "OCG:03"

### 3.2.9. AWB/ABB setting

These commands select the AWB mode of the camera, execute AWB/ABB and enable the current AWB mode status to be acquired.

Table 3.2.9. AWB/ABB setting

Command name	Category	Command	Data value	Setting	Remarks
AWB (AWC) execution control command	Control	OWS	None		AWB (AWC) is executed.
	Notification	OWS ER3:OWS		AWC/AWB OK AWC/AWB NG	<ul style="list-style-type: none"> <li>There is no response which supports this control command. Notification is given by the separate update notification function. For details, refer to "4. Camera information update notification".</li> </ul>
AWB execution underway status display On/Off control command	Control	OSA:88:[Data]	0 1	Off On	<ul style="list-style-type: none"> <li>On or Off for screen display of AWB OK/NG.</li> <li>The status is fixed at Off when TALLY signals are present.</li> </ul>
	Response	OSA:88:[Data]			
AWB execution underway status display On/Off query command	Request	QSA:88	None		
	Response	OSA:88:[Data]	0 1	Off On	
AWB (AWC) Mode control command	Control	OAW:[Data]	In the case of the AW-HE50/AW-HE60		<ul style="list-style-type: none"> <li>Disabled at the FullAuto setting (ER3 is returned).</li> </ul>
			0	ATW	
			1	AWB A	
			2	AWB B	
			3	ATW	
			In the case of the AW-HE120		
			0	ATW	
			1	AWB A	
			2	AWB B	
			3	ATW	
			4	PRESET 3200K	
			5	PRESET 5600K	
			In the case of the AW-HE130/AW-HE40/AW-HE65/AW-HE70		
			0	ATW	
			1	AWB A	
			2	AWB B	
			3	ATW	
			4	PRESET 3200K	
			5	PRESET 5600K	
			9	VAR	
	Response	OAW:[Data]			

Command name	Category	Command	Data value	Setting	Remarks
AWB (AWC) Mode query command	Request	QAW	None		
	Response	OAW:[Data]	In the case of the AW-HE50/AW-HE60		
			0	ATW	• The data value differs depending on the responses to the control command and query command.
			2	AWB A	
			3	AWB B	
			In the case of the AW-HE120		
			0	ATW	• The data value differs depending on the responses to the control command and query command.
			2	AWB A	
			3	AWB B	
			4	PRESET 3200K	
5	PRESET 5600K				
In the case of the AW-HE130/AW-HE40/AW-HE65/AW-HE70					
0	ATW				
1	AWB A				
2	AWB B				
3	ATW				
4	PRESET 3200K				
5	PRESET 5600K				
9	VAR				
ABB (ABC) execution control command	Control	OAS	None		ABB (ABC) is executed.
	Notification	OAS ER3:OAS		ABB(ABC) OK ABB(ABC) NG	※Only supported by the AW-HE120/ AW-HE130/AW-HE40/AW-HE65/ AW-HE70. • There is no response which supports this control command. Notification is given by the separate update notification function. For details, refer to “4. Camera information update notification”.
Color Temperature control command	Control	OSD:B1:[Data]	In the case of the AW-HE130		
			000h	2000K	
			001h	2010K	
			002h	2020K	
			003h	2040K	
			004h	2050K	
			005h	2070K	
			006h	2080K	
			007h	2090K	
			008h	2110K	
			009h	2120K	
			00Ah	2140K	
			00Bh	2150K	
			00Ch	2170K	
			00Dh	2180K	
			00Eh	2200K	
			00Fh	2210K	
			010h	2230K	
			011h	2240K	
			012h	2260K	
			013h	2280K	
			014h	2300K	
			015h	2310K	
			016h	2330K	
			017h	2340K	
			018h	2360K	

Command name	Category	Command	Data value	Setting	Remarks
			019h	2380K	
			01Ah	2400K	
			01Bh	2420K	
			01Ch	2440K	
			01Dh	2460K	
			01Eh	2480K	
			01Fh	2500K	
			020h	2520K	
			021h	2540K	
			022h	2560K	
			023h	2600K	
			024h	2620K	
			025h	2640K	
			026h	2680K	
			027h	2700K	
			028h	2720K	
			029h	2740K	
			02Ah	2780K	
			02Bh	2800K	
			02Ch	2820K	
			02Dh	2850K	
			02Eh	2870K	
			02Fh	2920K	
			030h	2950K	
			031h	2970K	
			032h	3000K	
			033h	3020K	
			034h	3070K	
			035h	3100K	
			036h	3120K	
			037h	3150K	
			038h	3200K	
			039h	3250K	
			03Ah	3270K	
			03Bh	3330K	
			03Ch	3360K	
			03Dh	3420K	
			03Eh	3450K	
			03Fh	3510K	
			040h	3570K	
			041h	3600K	
			042h	3660K	
			043h	3720K	
			044h	3780K	
			045h	3840K	
			046h	3870K	
			047h	3930K	
			048h	3990K	
			049h	4050K	
			04Ah	4110K	
			04Bh	4170K	
			04Ch	4240K	
			04Dh	4320K	
			04Eh	4360K	
			04Fh	4440K	

Command name	Category	Command	Data value	Setting	Remarks
			050h	4520K	
			051h	4600K	
			052h	4680K	
			053h	4760K	
			054h	4840K	
			055h	4920K	
			056h	5000K	
			057h	5100K	
			058h	5200K	
			059h	5300K	
			05Ah	5400K	
			05Bh	5500K	
			05Ch	5600K	
			05Dh	5750K	
			05Eh	5850K	
			05Fh	6000K	
			060h	6150K	
			061h	6300K	
			062h	6450K	
			063h	6650K	
			064h	6800K	
			065h	7000K	
			066h	7150K	
			067h	7400K	
			068h	7600K	
			069h	7800K	
			06Ah	8100K	
			06Bh	8300K	
			06Ch	8600K	
			06Dh	8900K	
			06Eh	9200K	
			06Fh	9600K	
			070h	10000K	
			071h	10500K	
			072h	11000K	
			073h	11500K	
			074h	12000K	
			075h	12500K	
			076h	13000K	
			077h	14000K	
			078h	15000K	
			In the case of the AW-HE40/AW-HE65/AW-HE70		
			000h	2400K	
			001h	2500K	
			002h	2600K	
			003h	2700K	
			004h	2800K	
			005h	2900K	
			006h	3000K	
			007h	3100K	
			008h	3200K	
			009h	3300K	
			00Ah	3400K	
			00Bh	3500K	
			00Ch	3600K	



Command name	Category	Command	Data value	Setting	Remarks
			00Dh	3700K	
			00Eh	3800K	
			00Fh	3900K	
			010h	4000K	
			011h	4100K	
			012h	4200K	
			013h	4300K	
			014h	4400K	
			015h	4500K	
			016h	4600K	
			017h	4700K	
			018h	4800K	
			019h	4900K	
			01Ah	5000K	
			01Bh	5100K	
			01Ch	5200K	
			01Dh	5300K	
			01Eh	5400K	
			01Fh	5500K	
			020h	5600K	
			021h	5700K	
			022h	5800K	
			023h	5900K	
			024h	6000K	
			025h	6100K	
			026h	6200K	
			027h	6300K	
			028h	6400K	
			029h	6500K	
			02Ah	6600K	
			02Bh	6700K	
			02Ch	6800K	
			02Dh	6900K	
			02Eh	7000K	
			02Fh	7100K	
			030h	7200K	
			031h	7300K	
			032h	7400K	
			033h	7500K	
			034h	7600K	
			035h	7700K	
			036h	7800K	
			037h	7900K	
			038h	8000K	
			039h	8100K	
			03Ah	8200K	
			03Bh	8300K	
			03Ch	8400K	
			03Dh	8500K	
			03Eh	8600K	
			03Fh	8700K	
			040h	8800K	
			041h	8900K	
			042h	9000K	
			043h	9100K	

Command name	Category	Command	Data value	Setting	Remarks
			044h 045h 046h 047h 048h 049h 04Ah 04Bh	9200K 9300K 9400K 9500K 9600K 9700K 9800K 9900K	
	Response	OSD:B1:[Data]			
Color Temperature query command	Request	QSD:B1	None		
	Response	OSD:B1:[Data]	In the case of the AW-HE130		
			000h ⌋ 078h	2000K ⌋ 15000K	• Refer to the Data/Setting values of the control command.
			In the case of the AW-HE40/AW-HE65/AW-HE70		
			000h ⌋ 04Bh	2400K ⌋ 9900K	• Refer to the Data/Setting values of the control command.

Example of use)

•AWB (AWC) execution

**[Control]** PC → AW-HE50

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OWS&res=0](http://192.168.0.10/cgi-bin/aw_cam?cmd=OWS&res=0)

**[Response]** AW-HE50 → PC

None

•AWB (AWC), ABB execution underway status display: On

**[Control]** PC → AW-HE50

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OSA:88:1&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OSA:88:1&res=1)

**[Response]** AW-HE50 → PC

200 OK "OSA:88:1"

•AWB (AWC) mode: ATW

**[Control]** PC → AW-HE50

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OAW:0&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OAW:0&res=1)

**[Response]** AW-HE50 → PC

200 OK "OAW:0"

•ABB execution

**[Control]** PC → AW-HE120

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OAS&res=0](http://192.168.0.10/cgi-bin/aw_cam?cmd=OAS&res=0)

**[Response]** AW-HE120 → PC

200 OK "OAS"

## 3.2.10. Detail setting

These commands control the detail of the camera and enable the current settings to be acquired.

Table 3.2.10. Detail setting

Command name	Category	Command	Data value	Setting	Remarks
Detail control command	Control	ODT:[Data]	In the case of the AW-HE50/AW-HE60/AW-HE120/AW-HE40/AW-HE65/AW-HE70		
			0 1 2	Off Low High	Disabled at the FullAuto setting (ER3 is returned).
			In the case of the AW-HE130		
			0 1 2	Off On On	
			Response	ODT:[Data]	
	Detail query command	Request	QDT	None	
Response		ODT:[Data]	In the case of the AW-HE50/AW-HE60/AW-HE120/AW-HE40/AW-HE65/AW-HE70		
			0 1 2	Off Low High	Disabled at the FullAuto setting (ER3 is returned).
			In the case of the AW-HE130		
			0 1 2	Off On On	
			H.DTL LEVEL H control command	Control	OSD:0A:[Data]
Response	OSD:0A:[Data]				
H.DTL LEVEL H query command	Request	QSD:0A		None	
	Response	OSD:0A:[Data]	02 1 3F	2 1 63	※Only supported by the AW-HE120.
V DTL LEVEL H control command	Control	OSD:0E:[Data]	02 1 1F	2 1 31	<ul style="list-style-type: none"><li>• Even when Off is selected as the detail setting, this command is received, and its setting is reflected.</li><li>• The setting can never be lower than the V DTL LEVEL L.</li></ul> ※Only supported by the AW-HE120.
		Response			
V DTL LEVEL H query command	Request	QSD:0E	None		※Only supported by the AW-HE120.
	Response	OSD:0E:[Data]	02 1 1F	2 1 31	※Only supported by the AW-HE120.
H.DTL LEVEL L control command	Control	OSD:12:[Data]	01 1 3E	1 1 62	<ul style="list-style-type: none"><li>• Even when Off is selected as the detail setting, this command is received, and its setting is reflected.</li><li>• The level is set to less than the H.DTL LEVEL H setting.</li></ul> ※Only supported by the AW-HE120.
		Response			

Command name	Category	Command	Data value	Setting	Remarks
H.DTL LEVEL L query command	Request	QSD:12	None		※Only supported by the AW-HE120.
	Response	OSD:12:[Data]	01 ┐ 3E	1 ┐ 62	※Only supported by the AW-HE120.
V DTL LEVEL L control command	Control	OSD:16:[Data]	01 ┐ 1E	1 ┐ 30	<ul style="list-style-type: none"> <li>• Even when Off is selected as the detail setting, this command is received, and its setting is reflected.</li> <li>• The level is set to less than the V DTL LEVEL H setting.</li> </ul> ※Only supported by the AW-HE120.
	Response	OSD:16:[Data]			※Only supported by the AW-HE120.
V DTL LEVEL L query command	Request	QSD:16	None		※Only supported by the AW-HE120.
	Response	OSD:16:[Data]	01 ┐ 1E	1 ┐ 30	※Only supported by the AW-HE120.
V DTL LEVEL control command	Control	OSD:A1:[Data]	79 ┐ 80 ┐ 87	-7 ┐ 0 ┐ 7	※Only supported by the AW-HE130.
	Response	OSD:A1:[Data]			※Only supported by the AW-HE130.
V DTL LEVEL query command	Request	QSD:A1	None		※Only supported by the AW-HE130.
	Response	OSD:A1:[Data]	79 ┐ 80 ┐ 87	-7 ┐ 0 ┐ 7	※Only supported by the AW-HE130.
DETAIL BAND control command	Control	OSD:1E:[Data]	01 ┐ 05	1 ┐ 5	<ul style="list-style-type: none"> <li>• Even when Off is selected as the detail setting, this command is received, and its setting is reflected.</li> <li>• The detail boost frequency can be controlled and the settings can be acquired.</li> <li>• If a high frequency is set, smaller subjects can be provided with the detail effect.</li> </ul> ※Only supported by the AW-HE120.
	Response	OSD:1E:[Data]			※Only supported by the AW-HE120.
	Control	OSD:A2:[Data]	79 ┐ 80 ┐ 87	-7 ┐ 0 ┐ 7	※Only supported by the AW-HE130.
	Response	OSD:A2:[Data]			※Only supported by the AW-HE130.
DETAIL BAND query command	Request	QSD:1E	None		※Only supported by the AW-HE120.
	Response	OSD:1E:[Data]	01 ┐ 05	1 ┐ 5	※Only supported by the AW-HE120.
	Request	QSD:A2	None		※Only supported by the AW-HE130.
	Response	OSD:A2:[Data]	79 ┐ 80 ┐ 87	-7 ┐ 0 ┐ 7	※Only supported by the AW-HE130.

Command name	Category	Command	Data value	Setting	Remarks
NOISE SUPPRESS/CRISP control command	Control	OSD:22:[Data]	In the case of the AW-HE120		
			00 1 07	0 1 7	<ul style="list-style-type: none"><li>• Even when Off is selected as the detail setting, this command is received, and its setting is reflected.</li><li>• The screen noise produced by the detail is reduced.</li><li>• The higher the value, the lower the noise.</li></ul> ※Only supported by the AW-HE120.
			In the case of the AW-HE130		
			00 1 3C	0 1 60	
	Response	OSD:22:[Data]			※Only supported by the AW-HE120/ AW-HE130.
	NOISE SUPPRESS/CRISP query command	Request	QSD:22	None	
Response		OSD:22:[Data]	In the case of the AW-HE120		
			00 1 07	0 1 7	
			In the case of the AW-HE130		
			00 1 3C	0 1 60	
FLESH TONE NOISE SUPPRESS control command		Control	OSD:4B:[Data]	00 01 02	Off Low High
	Response	OSD:4B:[Data]			※Only supported by the AW-HE120.
	Control	OSD:A3:[Data]	80 1 9F	0 1 31	※Only supported by the AW-HE130.
Response	OSD:A3:[Data]			※Only supported by the AW-HE130.	
FLESH TONE NOISE SUPPRESS query command	Request	QSD:4B	None		※Only supported by the AW-HE120.
	Response	OSD:4B:[Data]	00 01 02	Off Low High	※Only supported by the AW-HE120.
	Request	QSD:A3	None		※Only supported by the AW-HE130.
	Response	OSD:A3:[Data]	80 1 9F	0 1 31	※Only supported by the AW-HE130.

Command name	Category	Command	Data value	Setting	Remarks				
TOTAL DTL LEVEL control command	Control	OSA:30:[Data]	In the case of the AW-HE60						
			81 ⌋ 92	1 ⌋ 18	<ul style="list-style-type: none"><li>• Even when Off is selected as the detail setting, this command is received, and its setting is reflected.</li><li>■ In the case of the AW-HE60</li><li>• The level is set to less than the TOTAL DTL LEVEL HIGH.</li></ul> ※Supported only by AW-HE60 CameraMain V3.05 or subsequent versions.				
			In the case of the AW-HE130						
			61 ⌋ 9F	0 ⌋ 62					
			In the case of the AW-HE40/AW-HE65/AW-HE70						
			81 ⌋ 91	1 ⌋ 17		<ul style="list-style-type: none"><li>• The level is set to less than the TOTAL DTL LEVEL HIGH.</li></ul>			
	Response	OSA:30:[Data]							
TOTAL DTL LEVEL query command	Request	QSA:30	None		※AW-HE60 CameraMain V3.05 or subsequent versions. ※Only supported by the AW-HE130.				
	Response	OSA:30:[Data]	In the case of the AW-HE60						
			81 ⌋ 92	1 ⌋ 18	CameraMain V3.05 or subsequent versions.				
			In the case of the AW-HE130						
			61 ⌋ 9F	0 ⌋ 62					
			In the case of the AW-HE40/AW-HE65/AW-HE70						
			81 ⌋ 91	1 ⌋ 17					
			TOTAL DTL LEVEL HIGH control command	Control		OSA:B1:[Data]	In the case of the AW-HE60		
							82 ⌋ 92	2 ⌋ 18	<ul style="list-style-type: none"><li>• Even when Off is selected as the detail setting, this command is received, and its setting is reflected.</li><li>• A level below the TOTAL DTL LEVEL setting cannot be set.</li></ul> ※Supported only by AW-HE60 CameraMain V3.05 or subsequent versions.
	In the case of the AW-HE40/AW-HE65/AW-HE70								
82 ⌋ 92	2 ⌋ 18	<ul style="list-style-type: none"><li>• A level below the TOTAL DTL LEVEL setting cannot be set.</li></ul>							
Response	OSA:B1:[Data]								

Command name	Category	Command	Data value	Setting	Remarks
TOTAL DTL LEVEL HIGH query command	Request	QSA:B1	None		※Supported only by AW-HE60 CameraMain V3.05 or subsequent versions.
	Response	OSA:B1:[Data]	In the case of the AW-HE60		
			82 }	2 }	※Supported only by AW-HE60 CameraMain V3.05 or subsequent versions.
			92	18	
			In the case of the AW-HE40/AW-HE65/AW-HE70		
			82 }	2 }	
			92	18	

Example of use)

•Detail: Low

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_cam?cmd=ODT:1&res=1

**[Response]** AW-HE50 → PC

200 OK "ODT:1"

•H.DTL LEVEL: H 63

**[Control]** PC → AW-HE120

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:0A:3F&res=1

**[Response]** AW-HE120 → PC

200 OK "OSD:0A:3F"

•V DTL LEVEL: H 31

**[Control]** PC → AW-HE120

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:0E:1F&res=1

**[Response]** AW-HE120 → PC

200 OK "OSD:0E:1F"

•H.DTL LEVEL: L 62

**[Control]** PC → AW-HE120

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:12:3E&res=1

**[Response]** AW-HE120 → PC

200 OK "OSD:12:3E"

•V DTL LEVEL: L 30

**[Control]** PC → AW-HE120

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:16:1E&res=1

**[Response]** AW-HE120 → PC

200 OK "OSD:16:1E"

•DETAIL BAND: 1

**[Control]** PC → AW-HE120

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:1E:01&res=1

**[Response]** AW-HE120 → PC

200 OK "OSD:1E:01"

## • NOISE SUPPRESS/CRISP: 7

**[Control]** PC → AW-HE120[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OSD:22:07&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OSD:22:07&res=1)**[Response]** AW-HE120 → PC

200 OK "OSD:22:07"

## • FLESH TONE NOISE SUPPRESS: Low

**[Control]** PC → AW-HE120[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OSD:4B:01&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OSD:4B:01&res=1)**[Response]** AW-HE120 → PC

200 OK "OSD:4B:01"

## • TOTAL DTL LEVEL: 12

**[Control]** PC → AW-HE60[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OSA:30:8C&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OSA:30:8C&res=1)**[Response]** AW-HE60 → PC

200 OK "OSA:30:8C"

## • TOTAL DTL LEVEL HIGH: 18

**[Control]** PC → AW-HE60[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OSA:B1:92&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OSA:B1:92&res=1)**[Response]** AW-HE60 → PC

200 OK "OSA:B1:92"



### 3.2.11. Flesh Tone Mode setting

These commands control the flesh tone mode of the camera and enable the current settings to be acquired.

Table 3.2.11. Flesh Tone Mode setting

Command name	Category	Command	Data value	Setting	Remarks
Flesh Tone Mode control command	Control	OSE:32:[Data]	0 1 3	Off Low High	<ul style="list-style-type: none"> <li>Disabled at the FullAuto setting (ER3 is returned).</li> <li>※Supported only by the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70.</li> </ul>
	Response	OSE:32:[Data]			<ul style="list-style-type: none"> <li>※Supported only by the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70.</li> </ul>
Flesh Tone Mode query command	Request	QSE:32	None		<ul style="list-style-type: none"> <li>※Supported only by the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70.</li> </ul>
	Response	OSE:32:[Data]	0 1 3	Off Low High	<ul style="list-style-type: none"> <li>※Supported only by the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70.</li> </ul>

Example of use) Flesh Tone Mode: High

**[Control]** PC → AW-HE50

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OSE:32:3&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OSE:32:3&res=1)

**[Response]** AW-HE50 → PC

200 OK "OSE:32:3"

### 3.2.12. Digital noise reduction (DNR) setting

These commands control the digital noise reduction (DNR) of the camera and enable the current settings to be acquired.

Table 3.2.12. Digital noise reduction (DNR) setting

Command name	Category	Command	Data value	Setting	Remarks
Digital noise reduction (DNR) control command	Control	OSD:3A:[Data]	00 01 02	Off Low High	<ul style="list-style-type: none"> <li>■ In the case of the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70</li> <li>• Disabled at the FullAuto setting (ER3 is returned).</li> </ul>
	Response	OSD:3A:[Data]			
Digital noise reduction (DNR) query command	Request	QSD:3A	None		
	Response	OSD:3A:[Data]	00 01 02	Off Low High	

Example of use) Digital noise reduction (DNR): High

**[Control]** PC → AW-HE50

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OSD:3A:02&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OSD:3A:02&res=1)

**[Response]** AW-HE50 → PC

200 OK "OSD:3A:02"

## 3.2.13. Pedestal setting

These commands control the pedestal of the camera and enable the current settings to be acquired.

Table 3.2.13. Pedestal setting

Command name	Category	Command	Data value	Setting	Remarks				
Pedestal control command	Control	OTP:[Data]	In the case of the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70						
			000 ⌋ 096 ⌋ 12C	−10 ⌋ 0 ⌋ +10	• Setting (menu display value) = (Data value − 0x96) / 15 • Disabled at the FullAuto setting (ER3 is returned).				
			In the case of the AW-HE120/AW-HE130						
			000 ⌋ 096 ⌋ 12C	−150 ⌋ 0 ⌋ +150		• Setting (menu display value) = (Data value − 0x96)			
			Response	OTP:[Data]					
			Control	OTD:[Data]			In the case of the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70		
					00 ⌋ 1E ⌋ 3C		−10 ⌋ 0 ⌋ +10	• Setting (menu display value) = (Data value − 0x96) / 3 • Disabled at the FullAuto setting (ER3 is returned).	
					In the case of the AW-HE120/AW-HE130				
					00 ⌋ 1E ⌋ 3C	−150 ⌋ 0 ⌋ +150	• Setting (menu display value) = (Data value − 0x1E) x 5		
					Response	OTD:[Data]			
	Pedestal query command	Request			QTP	None			
Response		OTP:[Data]			In the case of the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70				
					000 ⌋ 096 ⌋ 12C	−10 ⌋ 0 ⌋ +10	• Data value of response = (Setting x 15 + 0x96)		
					In the case of the AW-HE120/AW-HE130				
					000 ⌋ 096 ⌋ 12C	−150 ⌋ 0 ⌋ +150		• Data value of response = (Setting + 0x96)	

Command name	Category	Command	Data value	Setting	Remarks		
Pedestal query command	Request	QTD	None				
	Response	OTD:[Data]	In the case of the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70				
			00 } 1E } 3C	-10 } 0 } +10	• Data value of response = (Setting x 3 + 0x1E)		
			In the case of the AW-HE120/AW-HE130				
			00 } 1E } 3C	-150 } 0 } +150		• Data value of response = (Setting / 5 + 0x1E)	

Example of use)

• Pedestal: -10

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OTP:000&res=1

**[Response]** AW-HE50 → PC

200 OK "OTP:000"

• Pedestal: +10

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OTD:3C&res=1

**[Response]** AW-HE50 → PC

200 OK "OTD:3C"

## 3.2.14. Gamma/DRS setting

These commands control the Gamma or DRS of the camera and enable the current settings to be acquired.

There are three setting items: DRS, gamma type and gamma level.

Table 3.2.14. Gamma/DRS setting

Command name	Category	Command	Data value	Setting	Remarks	
DRS control command	Control	OSE:33:[Data]	In the case of the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70			
			0 1 3	Off Low High	• Disabled at the FullAuto setting (ER3 is returned).	
			In the case of the AW-HE120/AW-HE130			
			0 1 2 3	Off Low Mid High	• When any setting except Off is used for DRS and any setting except Normal is used for the gamma type or when digital zooming is valid, the setting is accepted but it is not reflected in the images. The setting is reflected in the images when the above restrictions are released.	
			Response	OSE:33:[Data]		
	DRS query command	Request	QSE:33	None		
DRS query command	Response	OSE:33:[Data]	In the case of the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70			
			0 1 3	Off Low High	• Disabled at the FullAuto setting (ER3 is returned).	
			In the case of the AW-HE120/AW-HE130			
			0 1 2 3	Off Low Mid High		
			Gamma type control command	Control	OSE:72:[Data]	In the case of the AW-HE50/AW-HE60/AW-HE120/AW-HE40/AW-HE65/AW-HE70
	0 1 2	Off Normal Cinema	■ In the case of the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70 • Disabled at the FullAuto setting (ER3 is returned). When the DRS is in any mode except Off, the setting is accepted but it is not reflected in the images. The setting is reflected in the images when DRS is changed from the mode which is not Off to Off.			
In the case of the AW-HE130						
0 1 2 3	HD SD FILMLIKE1 FILMLIKE2					
Response	OSE:72:[Data]	4	FILMLIKE3			

Command name	Category	Command	Data value	Setting	Remarks
Gamma type query command	Request	QSE:72	None		
	Response	OSE:72:[Data]	In the case of the AW-HE50/AW-HE60/AW-HE120/AW-HE40/AW-HE65/AW-HE70		
			0 1 2	Off Normal Cinema	<ul style="list-style-type: none"> <li>■ In the case of the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70</li> <li>• Disabled at the FullAuto setting (ER3 is returned).</li> </ul>
			In the case of the AW-HE130		
			0 1 2 3 4	HD SD FILMLIKE1 FILMLIKE2 FILMLIKE3	
Gamma level control command	Control	OSD:50:[Data]	00 01 02	Low Mid High	<ul style="list-style-type: none"> <li>■ In the case of the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70</li> <li>• Disabled at the FullAuto setting (ER3 is returned).</li> <li>■ In the case of the AW-HE50/AW-HE60</li> <li>• When the DRS is in any mode except Off, the setting is accepted but it is not reflected in the images. The setting is reflected in the images when DRS is changed from the mode which is not Off to Off.</li> <li>• When the DRS is in any mode except Off and any setting except Normal is established for the gamma type, the setting is accepted but it is not reflected in the images. The setting is reflected in the images when DRS is changed to Off and the gamma type is changed to Normal.</li> <li>■ In the case of the AW-HE120</li> <li>• When any setting except Normal is used for the gamma type, the setting is accepted but it is not reflected in the images. The setting is reflected in the images when the above restrictions are released.</li> </ul>
	Response	OSD:50:[Data]			
Gamma level query command	Request	QSD:50	None		
	Response	OSD:50:[Data]	00 01 02	Low Mid High	

Command name	Category	Command	Data value	Setting	Remarks
Gamma	Control	OSA:6A:[Data]	67	0.30	※Only supported by the AW-HE130.
			}	}	
			6C	0.35	
			}	}	
	Response	OSA:6A:[Data]	80	0.55	※Only supported by the AW-HE130.
			}	}	
			94	0.75	
			}	}	
	Request	QSA:6A	None		※Only supported by the AW-HE130.
	Response	OSA:6A:[Data]	67	0.30	※Only supported by the AW-HE130.
			}	}	
			6C	0.35	
			}	}	
			80	0.55	
			}	}	
			94	0.75	
			}	}	

Example of use)

•DRS: Off

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSE:33:0&res=1

**[Response]** AW-HE50 → PC

200 OK "OSE:33:0"

•Gamma type: Normal

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSE:72:1&res=1

**[Response]** AW-HE50 → PC

200 OK "OSE:72:1"

•Gamma level: Mid

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:50:01&res=1

**[Response]** AW-HE50 → PC

200 OK "OSD:50:01"

### 3.2.15. Backlight compensation setting

These commands exercise On/Off control over the backlight compensation of the camera and enable the current settings to be acquired.

Table 3.2.15. Backlight compensation setting

Command name	Category	Command	Data value	Setting	Remarks
Backlight compensation control command	Control	OSE:73:[Data]	0 1	Off On	<ul style="list-style-type: none"> <li>Disabled at the FullAuto setting (ER3 is returned).</li> <li>■ In the case of the AW-HE50/AW-HE60 <ul style="list-style-type: none"> <li>When On is set for auto iris, or Auto is set for Frame Mix or Gain, the setting is accepted but it is not reflected in the images. The setting is reflected in the images when auto iris is changed from On to Off, or Frame Mix or Gain is changed to Manual.</li> </ul> </li> </ul>
	Response	OSE:73:[Data]			※ Supported only by the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70.
Backlight compensation query command	Request	QSE:73	None		※ Supported only by the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70.
	Response	OSE:73:[Data]	0 1	Off On	※ Supported only by the AW-HE50/AW-HE60/AW-HE40/AW-HE65/AW-HE70.

Example of use)

• Backlight compensation: Off

**[Control]** PC → AW-HE50

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OSE:73:0&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OSE:73:0&res=1)

**[Response]** AW-HE50 → PC

200 OK "OSE:73:0"



### 3.2.16. Genlock setting

These commands exercise genlock control over the camera and enable the current settings to be acquired.

The setting items include horizontal sync phase, subcarrier sync phase (coarse) and subcarrier sync phase (fine).

Table 3.2.16. Genlock setting

Command name	Category	Command	Data value	Setting	Remarks
Horizontal sync phase control command	Control	OHP:[Data]	000 ⌋ 338 ⌋ 3FF	−206 ⌋ 0 ⌋ +49	※This command has no effect with the AW-HE50H/AW-HE60H. • Setting (menu display value) = (Data value/ 4 − 206)
	Response	OHP:[Data]			
Horizontal sync phase query command	Request	QHP	None		※This command has no effect with the AW-HE50H/AW-HE60H. • Data value = (Setting + 206) x 4
	Response	OHP:[Data]	000 ⌋ 338 ⌋ 3FC	−206 ⌋ 0 ⌋ +49	
Subcarrier sync phase (coarse) control command	Control	OSC:[Data]	0 1 2 3	90° 180° 270° 0°	※Supported only by the AW-HE50S/AW-HE60S.
	Response	OSC:[Data]			※Supported only by the AW-HE50S/AW-HE60S.
Subcarrier sync phase (coarse) query command	Request	QSC	None		※Supported only by the AW-HE50S/AW-HE60S.
	Response	OSC:[Data]	0 1 2 3 5 6 7 8	90° 180° 270° 0° 45° 135° 225° 315°	※Supported only by the AW-HE50S/AW-HE60S. • The data value differs depending on the responses to the control command and query command.
Subcarrier sync phase (fine) control command	Control	OSN:[Data]	000 ⌋ 007 008 ⌋ 200 ⌋ 3FB 3FC ⌋ 3FF	−127 ⌋ −127 −126 ⌋ 0 ⌋ +126 +127 ⌋ +127	※Supported only by the AW-HE50S/AW-HE60S.
	Response	OSN:[Data]			※Supported only by the AW-HE50S/AW-HE60S.

Command name	Category	Command	Data value	Setting	Remarks
Subcarrier sync phase (fine) query command	Request	QSN	None		※Supported only by the AW-HE50S/AW-HE60S.
	Response	OSN:[Data]	000 ⌋ 007 008 ⌋ 200 ⌋ 3FB 3FC ⌋ 3FF	−127 ⌋ −127 −126 ⌋ 0 ⌋ +126 +127 ⌋ +127	※Supported only by the AW-HE50S/AW-HE60S.

Example of use)

- Horizontal sync phase: +49

**[Control]** PC → AW-HE50

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OHP:3FF&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OHP:3FF&res=1)

**[Response]** AW-HE50 → PC

200 OK "OHP:3FF"

- Subcarrier sync phase (coarse): 90°

**[Control]** PC → AW-HE50

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OSC:0&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OSC:0&res=1)

**[Response]** AW-HE50 → PC

200 OK "OSC:0"

- Subcarrier sync phase (fine): +127

**[Control]** PC → AW-HE50

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OSN:3FF&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OSN:3FF&res=1)

**[Response]** AW-HE50 → PC

200 OK "OSN:3FF"

### 3.2.17. Output setting

These commands control the output settings of the camera and enable the current settings to be acquired.

The setting items include format, down-conversion mode and HDMI color components.

Table 3.2.17. Output setting

Command name	Category	Command	Data value	Setting	Remarks
Format control command	Control	OSA:87:[Data]	In the case of the AW-HE50		
			1	720/59.94p(59.94Hz)	<ul style="list-style-type: none"><li>• Data values with different field frequencies are invalid (ER3 is returned).</li><li>• The following formats are supported by Ver.2 or a later version. 1080/29.97PsF 1080/25PsF 1080/59.94p 1080/50p</li><li>• The following formats are supported only by the HDMI models. 1080/59.94p 1080/50p</li></ul>
			2	720/50p(50Hz)	
			4	1080/59.94i(59.94Hz)	
			5	1080/50i(50Hz)	
			7	1080/29.97PsF(59.94Hz)	
			8	1080/25PsF(50Hz)	
			B	480/59.94i(59.94Hz)	
			D	576/50i(50Hz)	
			10	1080/59.94p(59.94Hz)	
			11	1080/50p(50Hz)	
			In the case of the AW-HE60		
			1	720/59.94p(59.94Hz)	<ul style="list-style-type: none"><li>• Data values with different field frequencies are invalid (ER3 is returned).</li><li>• The following formats are supported only by the HDMI models. 1080/59.94p 1080/50p 480/59.94p 576/50p</li></ul>
			2	720/50p(50Hz)	
			4	1080/59.94i(59.94Hz)	
			5	1080/50i(50Hz)	
			7	1080/29.97PsF(59.94Hz)	
			8	1080/25PsF(50Hz)	
			B	480/59.94i(59.94Hz)	
			D	576/50i(50Hz)	
			10	1080/59.94p(59.94Hz)	
			11	1080/50p(50Hz)	
			12	480/59.94p(59.94Hz)	
			13	576/50p(50Hz)	
			In the case of the AW-HE120		
			1	720/59.94p(59.94Hz)	<ul style="list-style-type: none"><li>• Data values with different field frequencies are invalid (ER3 is returned).</li></ul>
			2	720/50p(50Hz)	
			4	1080/59.94i(59.94Hz)	
			5	1080/50i(50Hz)	
			B	480/59.94i(59.94Hz)	
			D	576/50i(50Hz)	
			10	1080/59.94p(59.94Hz)	
			11	1080/50p(50Hz)	
12	480/59.94p(59.94Hz)				
13	576/50p(50Hz)				
In the case of the AW-HE130					
1	720/59.94p(59.94Hz)	<ul style="list-style-type: none"><li>• When 480/59.94p is selected, the HDMI output is set to 480/59.94p and SID output will be 480/59.94i.</li></ul>			
2	720/50p(50Hz)				
4	1080/59.94i(59.94Hz)				
5	1080/50i(50Hz)				
7	1080/29.97PsF(59.94Hz)				
8	1080/25PsF(50Hz)				
A	1080/23.98PsF(59.94Hz)				

Command name	Category	Command	Data value	Setting	Remarks		
			10	1080/59.94p(59.94Hz)	• When 576/50p is selected, the HDMI output is set to 576/50p and SID output will be 576/50i.		
			11	1080/50p(50Hz)			
			12	480/59.94p(59.94Hz)			
			13	576/50p(50Hz)			
			14	1080/29.97p(59.94Hz)			
			15	1080/25p(50Hz)			
			16	1080/23.98p(59.94Hz)			
			In the case of the AW-HE40/AW-HE65/AW-HE70				
				[59.94Hz]	• The formats marked with ** are supported only by the HDMI models.		
			1	720/59.94p			
			4	1080/59.94i			
			7	1080/29.97PsF			
			10	1080/59.94p **			
			14	1080/29.97p			
			80	Auto **			
			---	---			
				[50Hz]			
			2	720/50p			
			5	1080/50i			
			8	1080/25PsF			
			11	1080/50p **			
			15	1080/25p			
			80	Auto **			
Response	OSA:87:[Data]						

Command name	Category	Command	Data value	Setting	Remarks
Format query command	Request	QSA:87	None		
	Response	OSA:87:[Data]	In the case of the AW-HE50		
			1	720/59.94p(59.94Hz)	
			2	720/50p(50Hz)	
			4	1080/59.94i(59.94Hz)	
			5	1080/50i(50Hz)	
			7	1080/29.97PsF(59.94Hz)	
			8	1080/25PsF(50Hz)	
			B	480/59.94i(59.94Hz)	
			D	576/50i(50Hz)	
			10	1080/59.94p(59.94Hz)	
			11	1080/50p(50Hz)	
			In the case of the AW-HE60		
			1	720/59.94p(59.94Hz)	
			2	720/50p(50Hz)	
			4	1080/59.94i(59.94Hz)	
			5	1080/50i(50Hz)	
			7	1080/29.97PsF(59.94Hz)	
			8	1080/25PsF(50Hz)	
			B	480/59.94i(59.94Hz)	
			D	576/50i(50Hz)	
			10	1080/59.94p(59.94Hz)	
			11	1080/50p(50Hz)	
			12	480/59.94p(59.94Hz)	
			13	576/50p(50Hz)	
			In the case of the AW-HE120		
			1	720/59.94p(59.94Hz)	
2	720/50p(50Hz)				
4	1080/59.94i(59.94Hz)				
5	1080/50i(50Hz)				
B	480/59.94i(59.94Hz)				
D	576/50i(50Hz)				
10	1080/59.94p(59.94Hz)				
11	1080/50p(50Hz)				
12	480/59.94p(59.94Hz)				
13	576/50p(50Hz)				
In the case of the AW-HE130					
1	720/59.94p(59.94Hz)	<ul style="list-style-type: none"><li>• When 480/59.94p is selected, the HDMI output is set to 480/59.94p and SID output will be 480/59.94i.</li><li>• When 576/50p is selected, the HDMI output is set to 576/50p and SID output will be 576/50i.</li></ul>			
2	720/50p(50Hz)				
4	1080/59.94i(59.94Hz)				
5	1080/50i(50Hz)				
7	1080/29.97PsF(59.94Hz)				
8	1080/25PsF(50Hz)				
A	1080/23.98PsF(59.94Hz)				
10	1080/59.94p(59.94Hz)				
11	1080/50p(50Hz)				
12	480/59.94p(59.94Hz)				
13	576/50p(50Hz)				
14	1080/29.97p(59.94Hz)				
15	1080/25p(50Hz)				
16	1080/23.98p(59.94Hz)				

Command name	Category	Command	Data value	Setting	Remarks
			In the case of the AW-HE40/AW-HE65/AW-HE70		
			1	[59.94Hz] 720/59.94p	<ul style="list-style-type: none"> <li>The formats marked with ** are supported only by the HDMI models.</li> </ul>
			4	1080/59.94i	
			7	1080/29.97PsF	
			10	1080/59.94p **	
			14	1080/29.97p	
			---	---	
				[50Hz]	
			2	720/50p	
			5	1080/50i	
			8	1080/25PsF	
			11	1080/50p **	
			15	1080/25p	

Command name	Category	Command	Data value	Setting	Remarks
Down-conversion mode control command	Control	OSE:20:[Data]	0 1 2	SideCut Squeeze LetterBOX	
	Response	OSE:20:[Data]			
Down-conversion mode query command	Request	QSE:20	None		
	Response	OSE:20:[Data]	0 1 2	SideCut Squeeze LetterBOX	
HDMI color component control command	Control	OSE:68:[Data]	0 1 2 3	RGB-NOR RGB-ENH YCbCr422 YCbCr444	※This command has no effect with the AW-HE50S/AW-HE60S/AW-HE130.
	Response	OSE:68:[Data]			
HDMI color component query command	Request	QSE:68	None		※This command has no effect with the AW-HE50S/AW-HE60S/AW-HE130.
	Response	OSE:68:[Data]	0 1 2 3	RGB-NOR RGB-ENH YCbCr422 YCbCr444	
Analog component output control command	Control	OSD:65:[Data]	00 01	YPbPr RGB	※Only supported by the AW-HE120.
	Response	OSD:65:[Data]			
Analog component output query command	Request	QSD:65	None		※Only supported by the AW-HE120.
	Response	OSD:65:[Data]	00 01	YPbPr RGB	

Example of use)

•Format: 720/59.94p

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSA:87:01&res=1

**[Response]** AW-HE50 → PC

200 OK "OSA:87:01"

•Down-conversion mode: Squeeze

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSE:20:1&res=1

**[Response]** AW-HE50 → PC

200 OK "OSE:20:1"

•HDMI color components: RGB-NOR

**[Control]** PC → AW-HE50H

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSE:68:0&res=1

**[Response]** AW-HE50H → PC

200 OK "OSE:68:0"

•Analog component output: RGB

**[Control]** PC → AW-HE120

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSD:65:01&res=1

**[Response]** AW-HE120 → PC

200 OK "OSD:65:01"

### 3.2.18. Preset playback range setting

These commands control the playback range when the presets of the camera are to be played back and enable the current settings to be acquired.

Table 3.2.18. Preset playback range setting

Command name	Category	Command	Data value	Setting	Remarks
Preset playback range control command	Control	OSE:71:[Data]	0 1 2	Mode A Mode B Mode C	
	Response	OSE:71:[Data]			
Preset playback range query command	Request	QSE:71	None		
	Response	OSE:71:[Data]	0 1 2	Mode A Mode B Mode C	

Example of use) Preset playback range: Mode A

**[Control]** PC → AW-HE50

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OSE:71:0&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OSE:71:0&res=1)

**[Response]** AW-HE50 → PC

200 OK "OSE:71:0"



## 3.2.19. Digital zoom settings

These commands control the digital zoom of the camera, and they enable the digital zoom settings to be acquired.

Table 3.2.19. Digital zoom settings

Command name	Category	Command	Data value	Setting	Remarks
Digital zoom On/Off control command	Control	OSE:70:[Data]	0 1	Disable Enable	
	Response	OSE:70:[Data]			
Digital zoom On/Off query command	Request	QSE:70	None		
	Response	OSE:70:[Data]	0 1	Disable Enable	
Digital zoom maximum magnification control command	Control	OSE:7A:[Data]	02 } 10 } 16	x2 } x10 } x16	<ul style="list-style-type: none"> <li>This command enables the maximum digital zoom magnification to be set.</li> <li>※Only supported by the AW-HE120/AW-HE130/AW-HE40/AW-HE65/AW-HE70.</li> </ul>
	Response	OSE:7A:[Data]			※Only supported by the AW-HE120/AW-HE130/AW-HE40/AW-HE65/AW-HE70.
Digital zoom maximum magnification query command	Request	QSE:7A	None		※Only supported by the AW-HE120/AW-HE130/AW-HE40/AW-HE65/AW-HE70.
	Response	OSE:7A:[Data]	02 } 10 } 16	x2 } x10 } x16	※Only supported by the AW-HE120/AW-HE130/AW-HE40/AW-HE65/AW-HE70.
Digital zoom magnification control command	Control	OSE:76:[Data]	0100 } 1000 } 1600	x1.00 } x10.00 } x16.00	<ul style="list-style-type: none"> <li>This command enables the digital zoom magnification to be set.</li> </ul>
	Response	OSE:76:[Data]			
Digital zoom magnification query command	Request	QSE:76	None		
	Response	OSE:76:[Data]	0100 } 1000 } 1600	x1.00 } x10.00 } x16.00	
Digital Extender control command	Control	ODE:[Data]	0 1	Off On	※Only supported by the AW-HE130/AW-HE40/AW-HE65/AW-HE70.
	Response	ODE:[Data]	0 1	Off On	
Digital Extender query command	Request	QDE	None		
	Response	ODE:[Data]	0 1	Off On	
iZoom control command	Control	OSD:B3:[Data]	0 1	Off On	※Only supported by the AW-HE40/AW-HE65/ AW-HE70.
	Response	OSD:B3:[Data]	0 1	Off On	
iZoom query command	Request	QSD:B3	None		
	Response	OSD:B3:[Data]	0 1	Off On	

Example of use)

- Digital zoom: Enable

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSE:70:1&res=1

**[Response]** AW-HE50 → PC

200 OK "OSE:70:1"

- Maximum digital zoom magnification: 10×

**[Control]** PC → AW-HE120

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSE:7A:10&res=1

**[Response]** AW-HE120 → PC

200 OK "OSE:7A:10"

- Digital zoom magnification: 1×

**[Control]** PC → AW-HE120

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSE:76:0100&res=1

**[Response]** AW-HE120 → PC

200 OK "OSE:76:0100"

### 3.2.20. Camera information acquisition

These commands enable the current camera information of the camera to be acquired.

Table 3.2.20. Camera information acquisition

Command name	Category	Command	Data value	Setting	Remarks
Model number query command	Request	QID	None		
	Response	OID:[Data]	In the case of the AW-HE50		
			AW-HE50		Model number of camera
			In the case of the AW-HE60		
			AW-HE60		Model number of camera
			In the case of the AW-HE120		
			AW-HE120		Model number of camera
			In the case of the AW-HE130		
			AW-HE130		Model number of camera
			In the case of the AW-HE40		
			AW-HE40		Model number of camera
			In the case of the AW-HE65		
			AW-HE65		Model number of camera
			In the case of the AW-HE70		
			AW-HE70		Model number of camera
Camera microcontroller software version query command	Request	QSV	None		
	Response	OSV:[Data]			Camera Microcontroller software version Example: V01.28

Example of use)

• Model number acquisition

**[Control]** PC → AW-HE50/AW-HE120

http://192.168.0.10/cgi-bin/aw\_cam?cmd=QID&res=1

**[Response]** AW-HE50/AW-HE120 → PC

200 OK "OID:AW-HE50"

※In the case of the AW-HE50

200 OK "OID:AW-HE120"

※In the case of the AW-HE120

• Camera microcontroller software version acquisition

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_cam?cmd=QSV&res=1

**[Response]** AW-HE50 → PC

200 OK "OSV:V01.00"

## 3.2.21. OSD menu

These commands exercise control over the OSD menu of the camera and enable the current settings to be acquired.

Table 3.2.21. OSD menu

Command name	Category	Command	Data value	Setting	Remarks
OSD menu On/Off control command	Control	DUS:[Data]	0 1	Menu Off Menu On	The camera OSD menu is turned On or Off.
	Response	DUS:[Data]			
OSD menu On/Off query command	Request	QUS	None		
	Response	OUS:[Data]	0 1	Menu Off Menu On	
MENU switch On control command	Control	DPG	None		
		DPG:[Data]	1		This cancels the (blinking) settings that are not confirmed yet.
	Response	DPG:[Data]			
ITEM switch On control command	Control	DIT	None		
		DIT:[Data]	1		Entered.
	Response	DIT:[Data]			
YES switch On control command	Control	DUP	None		
		DUP:[Data]	1 A	1Step 10Step	The cursor moves up (the value is changed)
	Response	DUP:[Data]			
NO switch On control command	Control	DDW	None		
		DDW:[Data]	1 A	1Step 10Step	The cursor moves down (the value is changed).
	Response	DDW:[Data]			
RIGHT switch control command	Control	DRT:[Data]	1 A	1Step 10Step	※Only supported by the AW-HE120/AW-HE130.
	Response	DRT:[Data]			※Only supported by the AW-HE120/AW-HE130.
LEFT switch control command	Control	DLT:[Data]	1 A	1Step 10Step	※Only supported by the AW-HE120/AW-HE130.
	Response	DLT:[Data]			※Only supported by the AW-HE120/AW-HE130.
OSD Off With TALLY control command	Control	OSE:75:[Data]	0 1	Off On	• The OSD menus are not displayed when “On” is selected as this setting and TALLY is On.
	Response	OSE:75:[Data]			
OSD Off With TALLY query command	Request	QSE:75	None		
	Response	OSE:75:[Data]	0 1	Off On	

200 OK "DUS:1"

## • OSD Off With TALLY: On

**[Control]** PC → AW-HE120[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OSE:75:1&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OSE:75:1&res=1)**[Response]** AW-HE120 → PC

200 OK "OSE:75:1"

## • OSD Mix: Off

**[Control]** PC → AW-HE120[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OSE:7B:00&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OSE:7B:00&res=1)**[Response]** AW-HE120 → PC

200 OK "OSE:7B:00"

## • SDI/HDMI, COMP CHARACTER MIX: Off

**[Control]** PC → AW-HE60[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OSD:98:1:0&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OSD:98:1:0&res=1)**[Response]** AW-HE60 → PC

200 OK "OSD:98:1:0"

### 3.2.22. Smart picture flip information

This command enables the status of the camera's smart picture flip to be acquired.

Table 3.2.22. Smart picture flip information

Command name	Category	Command	Data value	Setting	Remarks
Smart picture flip status query command	Request	QFS	None		<ul style="list-style-type: none"> <li>Basically, the information is generated by the camera itself, and posted.</li> <li>The current status is posted at startup as well.</li> <li>Current status queries are also supported by the query command.</li> <li>Normal is switched to Flip or vice versa depending on the Install Position setting.</li> </ul> ※Only supported by the AW-HE120/AW-HE130.
	Response	OFS:[Data]	0 1	Normal Flip	※Only supported by the AW-HE120/AW-HE130.

Example of use)

- Smart picture flip status acquisition

**[Control]** PC → AW-HE120

http://192.168.0.10/cgi-bin/aw\_cam?cmd=QFS&res=1

**[Response]** AW-HE120 → PC

200 OK "OFS:[Data]"

### 3.2.23. Focus Adjust with PTZ setting

These commands control the Focus Adjust with PTZ and enable the current settings to be acquired.

Table 3.2.23. Focus Adjust with PTZ

Command name	Category	Command	Data value	Setting	Remarks
Focus ADJ With PTZ control command	Control	OAZ:[Data]	0 1	Off On	
	Response	OAZ:[Data]			
Focus ADJ With PTZ query command	Request	QAZ	None		
	Response	OAZ:[Data]	0 1	Off On	

Example of use) Focus Adjust with PTZ: On

**[Control]** PC → AW-HE50

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OAZ:1&res=1

**[Response]** AW-HE50 → PC

200 OK "OAZ:1"



### 3.2.24. Frequency setting

These commands enable the system frequency to be switched and the current setting to be acquired.

Table 3.2.24. Frequency

Command name	Category	Command	Data value	Setting	Remarks
Frequency control command	Control	OSE:77:[Data]	0	59.94Hz 50Hz	※The AW-HE50 is supported by Ver.2 or a later version.
	Response	OSE:77:[Data]	1		
Frequency query command	Request	QSE:77	None		
	Response	OSE:77:[Data]	0 1	59.94Hz 50Hz	※The AW-HE50 is supported by Ver.2 or a later version.

Example of use) Frequency: 50Hz

**[Control]** PC → AW-HE120

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OSE:77:1&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OSE:77:1&res=1)

**[Response]** AW-HE120 → PC

200 OK "OSE:77:1"

### 3.2.25. Error information

This command acquires the error information mainly of the camera.

Table 3.2.25. Error information

Command name	Category	Command	Data value	Setting	Remarks
Error information query command	Request	QER	None		※Only supported by the AW-HE120.
	Response	OER:[Data]	0 1	Normal Fan Error	※Only supported by the AW-HE120.

Example of use)

•Error information acquisition

**[Control]** PC → AW-HE120

http://192.168.0.10/cgi-bin/aw\_cam?cmd=QER&res=1

**[Response]** AW-HE120 → PC

200 OK "OER:[Data]"

### 3.2.26. Option switch settings

These commands control the On/Off of the option functions.

Table 3.2.26. Option switch

Command name	Category	Command	Data value	Setting	Remarks
Option switch control command	Control	#D6[Data]	0 1	OFF ON	※Only supported by the AW-HE60/AW-HE130/AW-HE40/AW-HE65/AW-HE70. OFF: Switching to Day mode. ON: Switching to Night mode.
	Response	d6[Data]			
Option switch query command	Request	#D6	None		※Only supported by the AW-HE60/AW-HE130/AW-HE40/AW-HE65/AW-HE70. OFF: Day mode ON: Night mode
	Response	d6[Data]	0 1	OFF ON	
Night mode selection control command	Control	OSD:B2:[Data]	0 1	Manual Auto	※Only supported by the AW-HE40/AW-HE65/AW-HE70.
	Response	OSD:B2:[Data]			
Night mode selection query command	Request	QSD:B2	None		※Only supported by the AW-HE40/AW-HE65/AW-HE70.
	Response	OSD:B2:[Data]	0 1	Manual Auto	
Night mode level control command	Control	OSD:B7:[Data]	0 1 2	Low Mid High	※Only supported by the AW-HE40/AW-HE65/AW-HE70.
	Response	OSD:B7:[Data]			
Night mode level query command	Request	QSD:B7	None		※Only supported by the AW-HE40/AW-HE65/AW-HE70.
	Response	OSD:B7:[Data]	0 1 2	Low Mid High	

Example of use)

• Option switch: ON

**[Control]** PC → AW-HE60

http://192.168.0.10/cgi-bin/aw\_ptz?cmd=%23D61&res=1

**[Response]** AW-HE60 → PC

200 OK "d61"

### 3.2.27. Audio settings

These commands control over audio functions.

Table 3.2.27. Audio settings

Command name	Category	Command	Data value	Setting	Remarks
Audio settings control command	Control	OSA:D0:[Data]	0 1	OFF ON	※Only supported by the AW-HE130/AW-HE40/AW-HE65/AW-HE70.
	Response	OSA:D0:[Data]			
Audio settings query command	Request	QSA:D0	None		
	Response	OSA:D0:[Data]	0 1	OFF ON	
Audio Input Volume control command	Control	OSA:D1:[Data]	0 1 2 3 4 5	Mic High Mic Middle Mic Low Line High Line Middle Line Low	※Only supported by the AW-HE130/AW-HE40/AW-HE65/AW-HE70.
	Response	OSA:D1:[Data]			
Audio Input Volume query command	Request	QSA:D1	None		
	Response	OSA:D1:[Data]	0 1 2 3 4 5	Mic High Mic Middle Mic Low Line High Line Middle Line Low	
Audio Plugin Power control command	Control	OSA:D2:[Data]	0 1	OFF ON	※Only supported by the AW-HE130/AW-HE40/AW-HE65/AW-HE70.
	Response	OSA:D2:[Data]			
Audio Plugin Power query command	Request	QSA:D2	None		
	Response	OSA:D2:[Data]	0 1	OFF ON	

Example of use)

• Audio settings: ON

**[Control]** PC → AW-HE130

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OSA:D0:1&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OSA:D0:1&res=1)

**[Response]** AW-HE130 → PC

200 OK "OSA:D0:1"

• Audio Input Volume: Mic High

**[Control]** PC → AW-HE130

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OSA:D1:0&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OSA:D1:0&res=1)

**[Response]** AW-HE130 → PC

200 OK "OSA:D1:0"

• Audio Plugin Power: ON

**[Control]** PC → AW-HE130

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OSA:D2:1&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OSA:D2:1&res=1)

**[Response]** AW-HE130 → PC

200 OK "OSA:D2:1"

### 3.2.28. Tally Brightness settings

These commands control the brightness of the tally LEDs.

Table 3.2.28. Tally Brightness settings

Command name	Category	Command	Data value	Setting	Remarks
Tally Brightness settings control command	Control	OSA:D3:[Data]	0 1 2	LOW MID HIGH	※Only supported by the AW-HE130.
	Response	OSA:D3:[Data]			
Tally Brightness settings query command	Request	QSA:D3	None		※Only supported by the AW-HE130.
	Response	OSA:D3:[Data]	0 1 2	LOW MID HIGH	

Example of use)

• Tally Brightness settings: MID

**[Control]** PC → AW-HE130

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSA:D3:1&res=1

**[Response]** AW-HE130 → PC

200 OK "OSA:D3:1"

### 3.2.29. Knee settings

These commands control over Knee.

Table 3.2.29. Knee settings

Command name	Category	Command	Data value	Setting	Remarks
Knee settings control command	Control	OSA:2D:[Data]	0 1 2	OFF MANUAL AUTO	※Only supported by the AW-HE130. •When DRS is set to On, the knee setting is disabled.
	Response	OSA:2D:[Data]			
Knee settings query command	Request	QSA:2D	None		※Only supported by the AW-HE130.
	Response	OSA:2D:[Data]	0 1 2	OFF MANUAL AUTO	
Knee Point control command	Control	OSA:20:[Data]	22h └ 80h └ B6h	70.00% └ 93.50% └ 107.00%	※Only supported by the AW-HE130.
	Response	OSA:20:[Data]			
Knee Point query command	Request	QSA:20	None		※Only supported by the AW-HE130.
	Response	OSA:20:[Data]	22h └ 80h └ B6h	70.00% └ 93.50% └ 107.00%	
Knee Slope control command	Control	OSA:24:[Data]	00h └ 63h	0 └ 99	※Only supported by the AW-HE130.
	Response	OSA:24:[Data]			
Knee Slope query command	Request	QSA:24	None		※Only supported by the AW-HE130.
	Response	OSA:24:[Data]	00h └ 63h	0 └ 99	

Example of use)

•Knee settings: MANUAL

**[Control]** PC → AW-HE130

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSA:2D:1&res=1

**[Response]** AW-HE130 → PC

200 OK "OSA:2D:1"

•Knee Point: 93.50%

**[Control]** PC → AW-HE130

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSA:20:80&res=1

**[Response]** AW-HE130 → PC

200 OK "OSA:20:80"

•Knee Slope: 0

**[Control]** PC → AW-HE130

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSA:24:00&res=1

**[Response]** AW-HE130 → PC

200 OK "OSA:24:00"

### 3.2.30. White Clip settings

These commands control over White Clip.

Table 3.2.30. White Clip settings

Command name	Category	Command	Data value	Setting	Remarks
White Clip settings control command	Control	OSA:2E:[Data]	0 1	OFF ON	※Only supported by the AW-HE130.
	Response	OSA:2E:[Data]			
White Clip settings query command	Request	QSA:2E	None	OFF ON	※Only supported by the AW-HE130.
	Response	OSA:2E:[Data]	0 1		
White Clip Level control command	Control	OSA:2A:[Data]	00h 1 13h	90% 1 109%	※Only supported by the AW-HE130. • When [Knee Mode] is set to Auto and the White Clip value is changed, the Knee value will also change.
	Response	OSA:2A:[Data]			
White Clip Level query command	Request	QSA:2A	None	90% 1 109%	※Only supported by the AW-HE130.
	Response	OSA:2A:[Data]	00h 1 13h		

Example of use)

•White Clip settings: ON

**[Control]** PC → AW-HE130

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSA:2E:1&res=1

**[Response]** AW-HE130 → PC

200 OK "OSA:2E:1"

•White Clip Level: 90%

**[Control]** PC → AW-HE130

http://192.168.0.10/cgi-bin/aw\_cam?cmd=OSA:2A:00&res=1

**[Response]** AW-HE130 → PC

200 OK "OSA:2A:00"

### 3.2.31. OIS settings

These commands control over OIS.

Table 3.2.31. OIS settings

Command name	Category	Command	Data value	Setting	Remarks
OIS settings control command	Control	OIS:[Data]	0 1	Off On	※Only supported by the AW-HE130/AW-HE40/AW-HE65/AW-HE70.  ■ Models AW-HE40/AW-HE65/AW-HE70 provide electronic image stabilization instead.
	Response	OIS:[Data]			
OIS settings query command	Request	QIS	None		
	Response	OIS:[Data]	0 1	Off On	

Example of use)

• OIS settings: On

**[Control]** PC → AW-HE130

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OIS:1&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OIS:1&res=1)

**[Response]** AW-HE130 → PC

200 OK "OIS:1"



### 3.2.32. HDR settings

These commands control over HDR.

Table 3.2.32. HDR settings

Command name	Category	Command	Data value	Setting	Remarks
HDR settings control command	Control	OSD:B4:[Data]	In the case of the AW-HE40/AW-HE65/AW-HE70		
			0	Off	
			1	Low	
			3	High	
	Response	OSD:B4:[Data]			
HDR settings query command	Request	QSD:B4	None		
	Response	OSD:B4:[Data]	In the case of the AW-HE40/AW-HE65/AW-HE70		
			0	Off	
			1	Low	
			3	High	

Example of use)

•HDR settings: Off

**[Control]** PC → AW-HE40

[http://192.168.0.10/cgi-bin/aw\\_cam?cmd=OSD:B4:0&res=1](http://192.168.0.10/cgi-bin/aw_cam?cmd=OSD:B4:0&res=1)

**[Response]** AW-HE40 → PC

200 OK "OSD:B4:0"

#### 4. Camera information update notification

The following restrictions apply to camera operations that are performed using HTTP communication and that have been described in the previous chapters:

- A) Even when a camera setting is changed by one terminal, the other terminals will not know that the setting has been changed unless they send the query command to the camera.
- B) In the case of a preset playback, AWB/ABB execution or other control commands that take time to be processed, it is necessary to wait until the processing is completed for the response.

By sending information autonomously from the camera to the terminals, it is possible to do the following:

- A) When a camera setting is changed by one terminal, the other terminals are notified of the setting change immediately.
- B) With a control command that takes time to be processed, the HTTP response is returned as soon as the command has been received, and separate notification of the processing result is given as soon as the processing is completed.

These functions are referred to as the camera information update notification function.

This chapter uses the term “update notification” to refer to this function.

#### 4.1. Procedure for receiving the update notifications

An HTTP message is sent to the camera to start or stop the reception of the update notification from the camera.

At a time like this, the number of the TCP port on the terminal for receiving the update notification (having the update notification sent) is specified.

The ① update notification receive start steps and ② update notification receive end steps are each described below.

##### ① Update notification receive start step

###### Example)

When reception is to be started with "192.168.0.10" used as the IP address of the camera

`http://192.168.0.10/cgi-bin/event?connect=start&my_port=31004&uid=0`

※my\_port ... Number of the TCP port on the terminal (fixed at 31004)

Given below is the sequence which is followed when receiving the update notifications is started.

##### 【Update notification receive start sequence】

The update notification receive start command is sent from the terminal where the update notifications are to be received.

"204 No Content" is returned from the camera which has received the command.

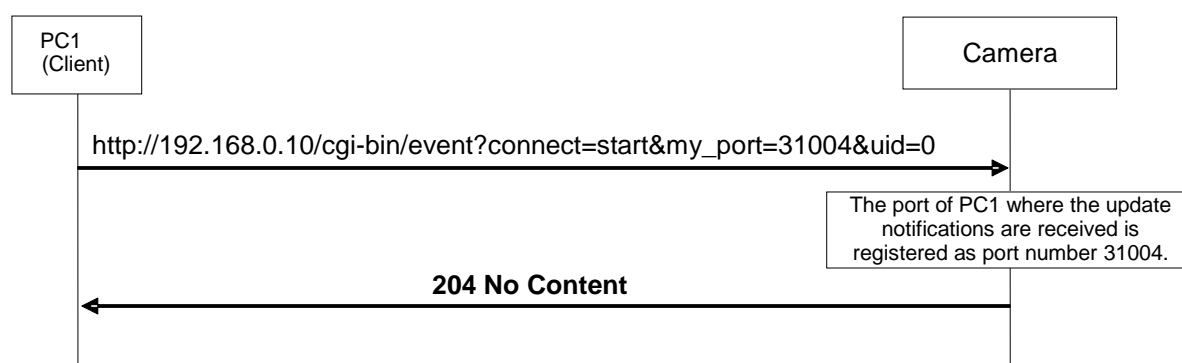


Fig.4-1 Update notification receive start sequence

##### 【Caution】

Proceed with the update notification receive start step when communication has been cut off because the LAN cable has been disconnected, for example.

## ② Update notification receive end step

To close the application of the client, the update notification receive end step must be taken without fail.

### Example)

When reception is to be ended with "192.168.0.10" used as the IP address of the camera

`http://192.168.0.10/cgi-bin/event?connect=stop&my_port=31004&uid=0`

※my\_port ... Number of the TCP port on the terminal (fixed at 31004)

Given below is the sequence which is followed when receiving the update notifications is to be ended.

### 【Update notification receive end sequence】

The update notification receive end command is sent from the terminal which has received the update notifications.

"204 No Content" is returned from the camera which received the command.

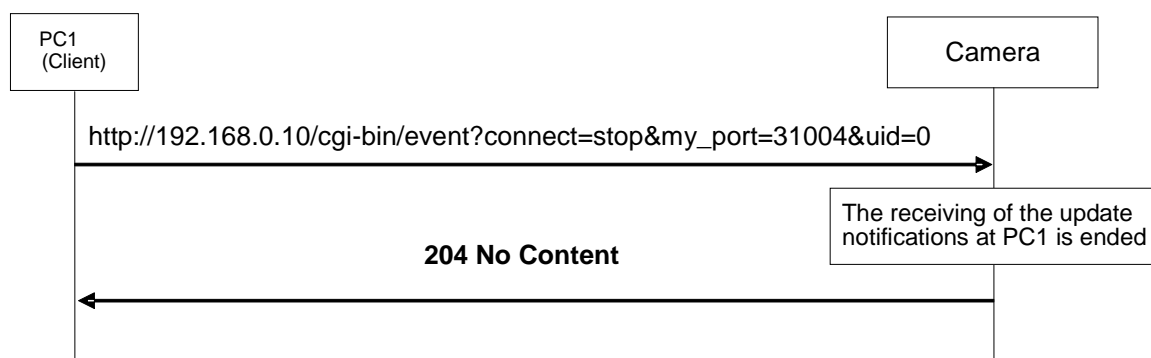


Fig.4-2 Update notification receive end sequence

## 4.2. Data format for update notifications

The data received in the update notifications will be described next.

The update notification is given to the TCP port on the terminal whose number was specified using the update notification start command by TCP protocol communication.

A breakdown of the data received is given below.

### 【Receive data】

Reserve (22 bytes)	<b>Size (2 bytes)</b>	Reserve (4 bytes)	<b>Update notification information (Variable length: Max. 504 bytes)</b>	Reserve (24 bytes)
-----------------------	---------------------------	----------------------	--	-----------------------

Fig.4-3 Receive data format

The updated information is set in “Update notification information” of the receive data format.

The data received from the camera has a variable length.

The size of the update notification information is the value obtained by subtracting 8 bytes from the “Size” area setting.

- “Update notification information” data length = “Size” – 8 bytes

The updates of the camera are described in the update notification information.

The format used for the update notification information received from the camera is given below.

### 【Update notification information format】

**[CR][LF][Command response format][CR][LF]**

※[CR]:0x0d, [LF]:0x0a

Example 1) Power: On

[CR][LF]**p1**[CR][LF]

Example 2) Color bar: On

[CR][LF]**DCB:1**[CR][LF]

### 4.3. Setting change sequence

Update notifications are sent when the settings or statuses of the camera have been changed.

Given below is an example of the update notification sequence.

It is assumed that the update notification start command has been sent to all the terminals in the sequence and that the terminals can receive the update notifications from the camera.

#### 4.3.1. Changing the settings from a terminal

##### 【Changing the settings from the local terminal】

When the settings of the camera have been changed from the local terminal (PC1), the changes are also posted by an update notification separately from the HTTP response to the command.

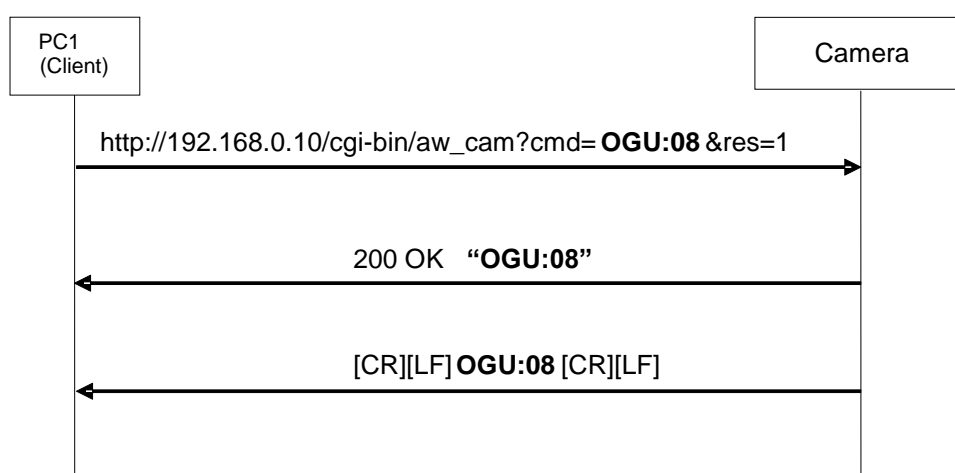


Fig.4-4 Changing the settings from the local terminal

**【Changing the settings from another terminal】**

When a camera setting has been changed from another terminal (PC2), the local terminal (PC1) is also notified of the change.

In addition to the HTTP response to the command, the other terminal (PC2) is notified of the change by an update notification as well.

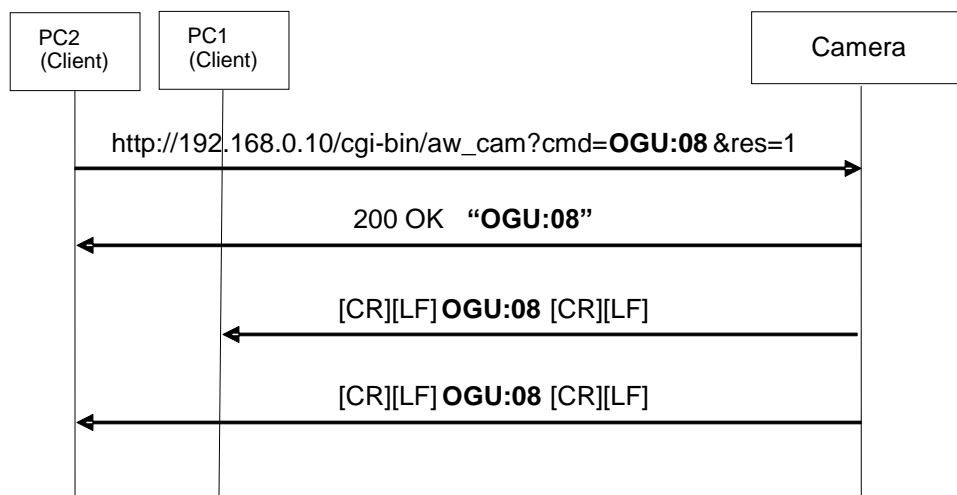


Fig.4-5 Changing the settings from another terminal

## (Remarks)

When the camera receives the control command and its setting is changed, it gives an update notification.

(It does not give an update notification if a query command has been received.)

However, when any of the following commands have been received, the update notification is not given.

## ① OSD menu

Table 4-1

Command name		Command
OSD menu Off/On	control command	DUS:[Data]
MENU switch On	control command	DPG
ITEM switch On	control command	DIT
YES switch On	control command	DUP
NO switch On	control command	DDW
RIGHT switch On	control command	DRT
LEFT switch On	control command	DLT

※The RIGHT/LEFT switch On control command is supported only by the AW-HE120.

## ② Pan, tilt, zoom, focus and iris operation commands

## &lt;Pan-tilt head control commands&gt;

Table 4-2

Command name		Command
Pan/tilt	control command	#APC[Data1][Data2]
		#P[Data]
		#T[Data]
		#PTS[Data1][Data2]
Zoom	control command	#AXZ[Data]
		#Z[Data]
Focus	control command	#AXF[Data]
		#F[Data]
Iris position	control command	#I [Data]
		#AXI [Data]

## &lt;Camera control commands&gt;

Table 4-3

Command name		Command
One-touch focus	control command	OSE:69:[Data]
Contrast level (Picture level)	control command	OSD:48:[Data]
Iris volume	control command	ORV:[Data]



### 4.3.2. Setting value initialization

The contents of the table below are posted in succession by the update notifications when the settings have been initialized using the OSD menu of the camera or from the web screen.

Table 4-4-1 (In the case of the AW-HE50/AW-HE60)

Notification	Remarks
XSF	Scene file
ORS	Iris (Auto/Manual)
OSD:48	Contrast level
OSH	Shutter
OMS	Synchro scan
OGU	Gain
OSA:65	Frame mix
OSD:69	Maximum gain value
OSE:74	Maximum frame mix value
OCG	Chroma level
OAW	AWB (AWC) mode
ODT	Detail
OSA:B1	TOTAL DTL LEVEL HIGH ※Supported only by AW-HE60 CameraMain V3.05 or subsequent versions.
OSA:30	TOTAL DTL LEVEL ※Supported only by AW-HE60 CameraMain V3.05 or subsequent versions.
OSE:32	Flesh Tone Mode
OSE:31	Color matrix
OSD:3A	Digital noise reduction (DNR)
OTD	Pedestal
OSE:72	Gamma type
OSD:50	Gamma level
OSE:73	Backlight compensation
OSE:33	DRS
OHP	Horizontal sync phase
OSC	Subcarrier sync phase (coarse)
OSN	Subcarrier sync phase (fine)
OSE:20	Down-conversion mode
OSE:68	HDMI color component
iNS	Installation position
uPVS	Pan preset speed
OSE:71	Preset playback range
OSE:70	Digital zoom On/Off
sWZ	Zoom position-linked pan/tilt speed adjustment On/Off
OAF	Focus Auto/Manual
OAZ	Auto focus On/Off during zooming
tAE	Tally input enable/disable
OSA:88	AWB execution underway status display On/Off
wLC	Wireless Control
OSE:75	OSD Off With TALLY
d6	Option switch ※Only supported by the AW-HE60.
OSD:98:1	CHARACTER MIX (SDI/HDMI, COMP) ※Only supported by the AW-HE60.
OSD:98:0	CHARACTER MIX (Browser/Video) ※Only supported by the AW-HE60.

Table 4-4-2 (In the case of the AW-HE120)

Notification	Remarks
XSF	Scene file
iNS	Installation position
ORS	Iris (Auto/Manual)
sPF	Smart Picture Flip
OSD:48	Picture level
fDA	Flip Detect Angle
OSH	Shutter
uPVS	Pan preset speed
OMS	Synchro scan
sWZ	Zoom position-linked pan/tilt speed adjustment On/Off
OGU	Gain
wLC	Wireless Control
OSA:65	Frame mix
OSD:69	Maximum gain value
OSE:74	Maximum frame mix value
OCG	Chroma level
OAW	AWB (AWC) mode
ODT	Detail
OSE:31	Color matrix
OSD:3A	Digital noise reduction (DNR)
ORI	R GAIN
OBI	B GAIN
OTP	Pedestal
ORP	R PEDESTAL
OBP	B PEDESTAL
OSE:72	Gamma type
OSD:50	Gamma level
OSD:2F	Linear Matrix (R-G)
OSD:30	Linear Matrix (R-B)
OSD:31	Linear Matrix (G-R)
OSD:32	Linear Matrix (G-B)
OSD:33	Linear Matrix (B-R)
OSD:34	Linear Matrix (B-G)
OSD:0A	H Detail Level H
OSD:0E	V Detail Level H
OSD:12	H Detail Level L
OSD:16	V Detail Level L
OSD:1E	Detail Band
OSD:22	Noise Suppress
OSD:4B	FleshTone Noise Suppress
OSD:80	Color Correction (B_Mg GAIN/SATURATION)
OSD:81	Color Correction (B_Mg PHASE)
OSD:82	Color Correction (Mg GAIN/SATURATION)
OSD:83	Color Correction (Mg PHASE)

Table 4-4-2 (In the case of the AW-HE120) (continued)

Notification	Remarks
OSD:84	Color Correction (Mg_R GAIN/SATURATION)
OSD:85	Color Correction (Mg_R PHASE)
OSD:86	Color Correction (R GAIN/SATURATION)
OSD:87	Color Correction (R PHASE)
OSD:88	Color Correction (R_YI GAIN/SATURATION)
OSD:89	Color Correction (R_YI PHASE)
OSD:8A	Color Correction (YI GAIN/SATURATION)
OSD:8B	Color Correction (YI PHASE)
OSD:8C	Color Correction (YI_G GAIN/SATURATION)
OSD:8D	Color Correction (YI_G PHASE)
OSD:8E	Color Correction (G GAIN/SATURATION)
OSD:8F	Color Correction (G PHASE)
OSD:90	Color Correction (G_Cy GAIN/SATURATION)
OSD:91	Color Correction (G_Cy PHASE)
OSD:92	Color Correction (Cy GAIN/SATURATION)
OSD:93	Color Correction (Cy PHASE)
OSD:94	Color Correction (Cy_B GAIN/SATURATION)
OSD:95	Color Correction (Cy_B PHASE)
OSD:96	Color Correction (B GAIN/SATURATION)
OSD:97	Color Correction (B PHASE)
OFT	ND Filter
OSE:33	DRS
OAF	Focus Auto/Manual
OSE:7B	OSD Mix
OHP	Horizontal sync phase
ORV	Iris Mode (AUTO/MANUAL)
OSA:87	Format
OSA:88	AWB execution underway status display On/Off
OSE:20	Down-conversion mode
OSE:68	HDMI color component
OSE:70	Digital zoom On/Off
OSE:71	Preset playback range
OSE:75	OSD Off With TALLY
OSE:77	Frequency
OSE:7A	Maximum Digital Zoom
DCB	COLOR BAR/CAMERA
OAZ	Auto focus On/Off during zooming
DCS	Color Bars Setup
OSD:65	OUTPUT SELECT

Table 4-4-3 (In the case of the AW-HE130)

Notification	Remarks
XSF	Scene file
OSD:48	Picture Level
ORS	Iris Mode
OSH	Shutter Mode
OMS	Step/Synchro
OGU	Gain
OSD:69	AGC Max Gain
OSA:65	Frame Mix
OFT	ND Filter
d6	Day/Night
OSD:B0	Chroma Level
OAW	White Balance Mode
OSD:B1	Color Temperature
ORI	R Gain
OBI	B Gain
OTP	Pedestal
ORP	R Pedestal
OBP	B Pedestal
ODT	Detail
OSA:30	Master Detail
OSD:A1	V Detail Level
OSD:A2	Detail Band
OSD:22	Noise Suppress
OSD:A3	FleshTone NoiseSUP.
OSE:72	Gamma Type
OSA:6A	Gamma
OSE:33	DRS
OSA:2D	Knee Mode
OSA:20	Knee Point
OSA:24	Knee Slope
OSA:2E	White Clip
OSA:2A	White Clip Level
OSD:3A	DNR
OSE:31	Matrix Type
OSD:A4	Linear Matrix (R-G)
OSD:A5	Linear Matrix (R-B)
OSD:A6	Linear Matrix (G-R)
OSD:A7	Linear Matrix (G-B)
OSD:A8	Linear Matrix (B-R)
OSD:A9	Linear Matrix (B-G)
OSD:80	Color Correction (B_Mg GAIN/SATURATION)
OSD:81	Color Correction (B_Mg PHASE)
OSD:82	Color Correction (Mg GAIN/SATURATION)
OSD:83	Color Correction (Mg PHASE)

Table 4-4-3 (In the case of the AW-HE130) (continued)

Notification	Remarks
OSD:84	Color Correction (Mg_R GAIN/SATURATION)
OSD:85	Color Correction (Mg_R PHASE)
OSD:9A	Color Correction (Mg_R_R GAIN/SATURATION)
OSD:9B	Color Correction (Mg_R_R PHASE)
OSD:86	Color Correction (R GAIN/SATURATION)
OSD:87	Color Correction (R PHASE)
OSD:9C	Color Correction (R_R_YI GAIN/SATURATION)
OSD:9D	Color Correction (R_R_YI PHASE)
OSD:88	Color Correction (R_YI GAIN/SATURATION)
OSD:89	Color Correction (R_YI PHASE)
OSD:9E	Color Correction (R_YI_YI GAIN/SATURATION)
OSD:9F	Color Correction (R_YI_YI PHASE)
OSD:8A	Color Correction (YI GAIN/SATURATION)
OSD:8B	Color Correction (YI PHASE)
OSD:8C	Color Correction (YI_G GAIN/SATURATION)
OSD:8D	Color Correction (YI_G PHASE)
OSD:8E	Color Correction (G GAIN/SATURATION)
OSD:8F	Color Correction (G PHASE)
OSD:90	Color Correction (G_Cy GAIN/SATURATION)
OSD:91	Color Correction (G_Cy PHASE)
OSD:92	Color Correction (Cy GAIN/SATURATION)
OSD:93	Color Correction (Cy PHASE)
OSD:94	Color Correction (Cy_B GAIN/SATURATION)
OSD:95	Color Correction (Cy_B PHASE)
OSD:96	Color Correction (B GAIN/SATURATION)
OSD:97	Color Correction (B PHASE)
OHP	Horizontal Phase
OSE:20	Down CONV. Mode
OSE:68	HDMI Color
DCS	Color Bars Setup
iNS	Installation position
sPF	Smart Picture Flip
fDA	Flip Detect Angle
pST	Preset Speed Table
uPVS	Preset Speed
OSE:71	Preset Scope
pRF	Freeze During Preset
sWZ	Speed With Zoom POS.
OAF	Focus Mode
OAZ	Focus ADJ With PTZ.
OSE:70	Digital Zoom
OSE:7A	Max Digital Zoom
ODE	Digital Extender
OIS	OIS

Table 4-4-3 (In the case of the AW-HE130) (continued)

Notification	Remarks
tAE	Tally Enable
OSA:D3	Tally Brightness
wLC	Wireless Control
OSE:7B	OSD Mix
OSE:75	OSD Off With Tally
OSA:88	OSD Status
OSA:D0	Audio Enable
OSA:D1	Audio Input Volume
OSA:D2	Audio Plugin Power
OVP:01	Model Select

Table 4-4-4 (In the case of the AW-HE40/AW-HE65/AW-HE70)

Notification	Remarks
XSF	Scene file
OSE:70	Digital Zoom
OSE:7A	Max Digital Zoom
OSD:B3	i.Zoom
ODE	Digital Extender
OAF	Focus Mode
d1	Extender/AF Control
OAZ	Focus ADJ With PTZ.
ORS	Iris Mode
d3	Iris Auto/Manual
ORV	Iris Mode (AUTO/MANUAL)
OSH	Shutter Mode
OMS	Step/Synchro
OGU	Gain
OSD:69	AGC Max Gain
OSA:65	Frame Mix
OSE:74	Maximum frame mix value
OCG	Chroma Level
OSD:48	Picture Level
OIS	OIS
OAW	White Balance Mode
OSD:B1	Color Temperature
OTD	Pedestal
ODT	Detail
OSA:30	Master Detail
OSA:B1	TOTAL DTL LEVEL HIGH
OSE:72	Gamma Type
OSD:50	Gamma Level
OSE:33	DRS
OSD:3A	DNR
d6	Day/Night
OSD:B2	Night Mode Sel
OSD:B7	NIGHT-DAY LEVEL
OSD:B4	HDR
OSE:31	Matrix Type
OSD:82	Color Correction (Mg GAIN/SATURATION)
OSD:83	Color Correction (Mg PHASE)
OSD:84	Color Correction (Mg_R GAIN/SATURATION)
OSD:85	Color Correction (Mg_R PHASE)
OSD:86	Color Correction (R GAIN/SATURATION)
OSD:87	Color Correction (R PHASE)
OSD:9C	Color Correction (R_R_YI GAIN/SATURATION)
OSD:9D	Color Correction (R_R_YI PHASE)
OSD:9E	Color Correction (R_YI_YI GAIN/SATURATION)
OSD:9F	Color Correction (R_YI_YI PHASE)
OSD:8A	Color Correction (YI GAIN/SATURATION)

Notification	Remarks
OSD:8B	Color Correction (YI PHASE)
OSD:8E	Color Correction (G GAIN/SATURATION)
OSD:8F	Color Correction (G PHASE)
OSD:90	Color Correction (G_Cy GAIN/SATURATION)
OSD:91	Color Correction (G_Cy PHASE)
OSD:92	Color Correction (Cy GAIN/SATURATION)
OSD:93	Color Correction (Cy PHASE)
OSD:96	Color Correction (B GAIN/SATURATION)
OSD:97	Color Correction (B PHASE)
OSD:AA	Color Correction (Cy_Cy_B GAIN/SATURATION)
OSD:AB	Color Correction (Cy_Cy_B PHASE)
OSD:AC	Color Correction (Cy_B_B GAIN/SATURATION)
OSD:AD	Color Correction (Cy_B_B PHASE)
OSD:C0	Color Correction (B_B_Mg GAIN/SATURATION)
OSD:C1	Color Correction (B_B_Mg PHASE)
OSD:C2	Color Correction (B_Mg_Mg GAIN/SATURATION)
OSD:C3	Color Correction (B_Mg_Mg PHASE)
OSD:C4	Color Correction (YI_YI_G GAIN/SATURATION)
OSD:C5	Color Correction (YI_YI_G PHASE)
OSD:C6	Color Correction (YI_G_G GAIN/SATURATION)
OSD:C7	Color Correction (YI_G_G PHASE)
DCB	COLOR BAR/CAMERA
OSA:D0	Audio Enable
OSA:D1	Audio Input Volume
OSA:D2	Audio Plugin Power
sWZ	Speed With Zoom POS.
pST	Preset Speed Table
uPVS	Preset Speed
uTVS	Preset Speed
OSE:71	Preset Scope
pRF	Freeze During Preset
iNS	Installation position
OSA:88	OSD Status
OSE:75	OSD Off With Tally
wLC	Wireless Control
rID	Wireless Controller ID
rZL	IP image resolution
OVP:01	Model Select



The sequence during setting value initialization is as follows.

### 【Setting value initialization sequence】

The items whose settings have been changed by initialization are notified in succession when the settings are initialized using the OSD menu of the camera or from the web screen.

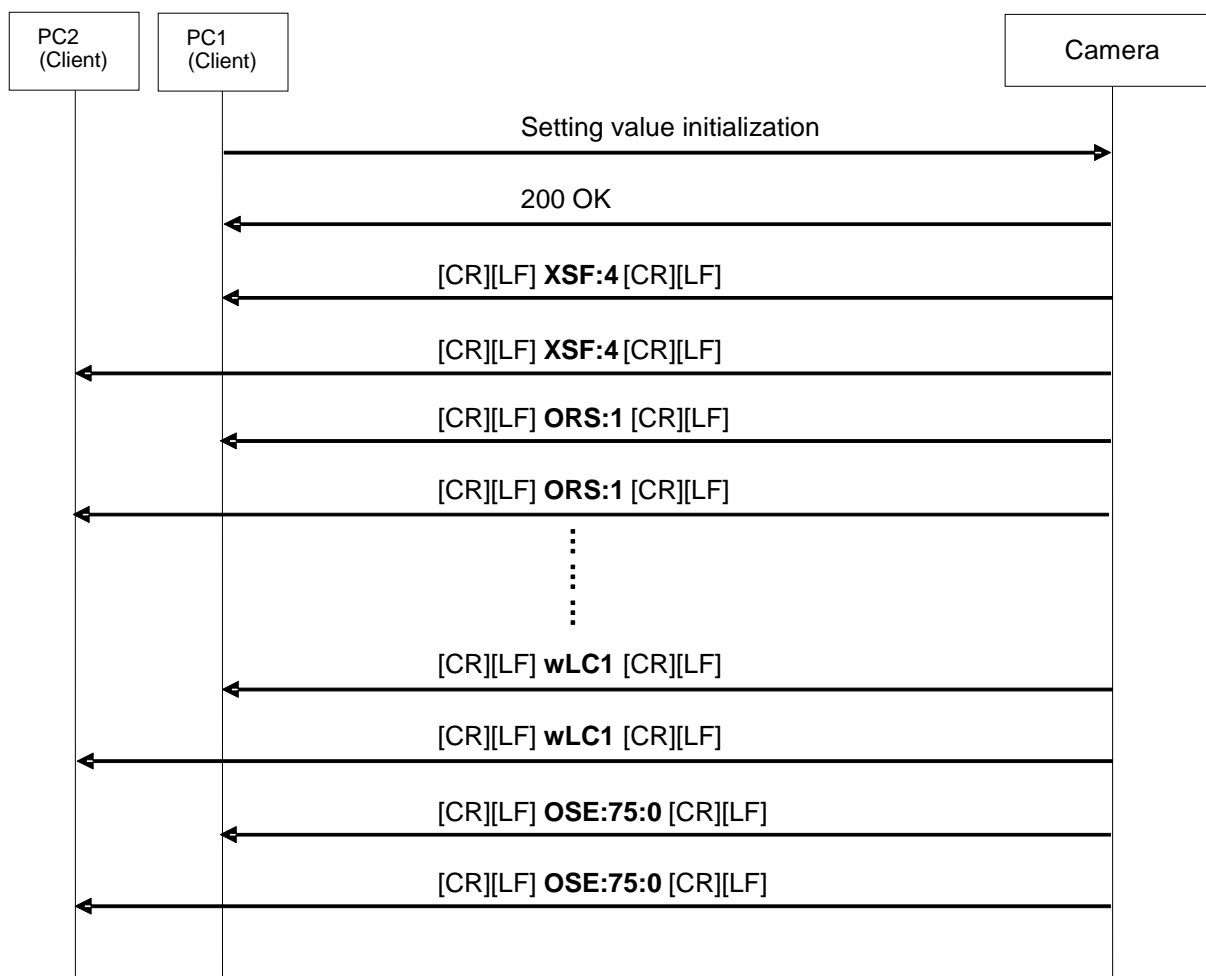


Fig.4-6 Setting value initialization

### 4.3.3. Scene file selection

The contents of the table below are posted in succession by the update notifications when scene files have been switched.

Table 4-5-1 (In the case of the AW-HE50/AW-HE60)

Notification	Remarks
XSF	Scene file
ORS	Iris (Auto/Manual)
OSD:48	Contrast level
OSH	Shutter
OMS	Synchro scan
OGU	Gain
OSA:65	Frame mix
OSD:69	Maximum gain value
OSE:74	Maximum frame mix value
OCG	Chroma level
OAW	AWB (AWC) mode
ODT	Detail
OSA:B1	TOTAL DTL LEVEL HIGH ※Supported only by AW-HE60 CameraMain V3.05 or subsequent versions.
OSA:30	TOTAL DTL LEVEL ※Supported only by AW-HE60 CameraMain V3.05 or subsequent versions.
OSE:32	Flesh Tone Mode
OSE:31	Color matrix
OSD:3A	Digital noise reduction (DNR)
ORG	R GAIN ※The AW-HE50 is supported by Ver.2 or a later version.
OBG	B GAIN ※The AW-HE50 is supported by Ver.2 or a later version.
OTD	Pedestal
OSE:72	Gamma type
OSD:50	Gamma level
OSE:73	Backlight compensation
OSE:33	DRS
d6	Option switch ※Only supported by the AW-HE60.

Table 4-5-2 (In the case of the AW-HE120)

Notification	Remarks
XSF	Scene file
ORS	Iris (Auto/Manual)
OSD:48	Picture level
OSH	Shutter
OMS	Synchro scan
OGU	Gain
OSA:65	Frame mix
OSD:69	Maximum gain value
OSE:74	Maximum frame mix value
OCG	Chroma level
OAW	AWB (AWC) mode
ODT	Detail
OSE:31	Color matrix
OSD:3A	Digital noise reduction (DNR)
ORI	R GAIN
OBI	B GAIN
OTP	Pedestal
ORP	R PEDESTAL
OBP	B PEDESTAL
OSE:72	Gamma type
OSD:50	Gamma level
OSD:2F	Linear Matrix (R-G)
OSD:30	Linear Matrix (R-B)
OSD:31	Linear Matrix (G-R)
OSD:32	Linear Matrix (G-B)
OSD:33	Linear Matrix (B-R)
OSD:34	Linear Matrix (B-G)
OSD:0A	H Detail Level H
OSD:0E	V Detail Level H
OSD:12	H Detail Level L
OSD:16	V Detail Level L
OSD:1E	Detail Band
OSD:22	Noise Suppress
OSD:4B	FleshTone Noise Suppress
OSD:80	Color Correction (B_Mg GAIN/SATURATION)
OSD:81	Color Correction (B_Mg PHASE)
OSD:82	Color Correction (Mg GAIN/SATURATION)
OSD:83	Color Correction (Mg PHASE)
OSD:84	Color Correction (Mg_R GAIN/SATURATION)
OSD:85	Color Correction (Mg_R PHASE)
OSD:86	Color Correction (R GAIN/SATURATION)
OSD:87	Color Correction (R PHASE)
OSD:88	Color Correction (R_YI GAIN/SATURATION)
OSD:89	Color Correction (R_YI PHASE)

Table 4-5-2 (In the case of the AW-HE120) (continued)

Notification	Remarks
OSD:8A	Color Correction (YI GAIN/SATURATION)
OSD:8B	Color Correction (YI PHASE)
OSD:8C	Color Correction (YI_G GAIN/SATURATION)
OSD:8D	Color Correction (YI_G PHASE)
OSD:8E	Color Correction (G GAIN/SATURATION)
OSD:8F	Color Correction (G PHASE)
OSD:90	Color Correction (G_Cy GAIN/SATURATION)
OSD:91	Color Correction (G_Cy PHASE)
OSD:92	Color Correction (Cy GAIN/SATURATION)
OSD:93	Color Correction (Cy PHASE)
OSD:94	Color Correction (Cy_B GAIN/SATURATION)
OSD:95	Color Correction (Cy_B PHASE)
OSD:96	Color Correction (B GAIN/SATURATION)
OSD:97	Color Correction (B PHASE)
OFT	ND Filter
OSE:33	DRS
OAF	Focus Auto/Manual
OSE:7B	OSD Mix
OHP	Horizontal Phase
ORV	Iris Mode (AUTO/MANUAL)
OSA:87	Format
OSA:88	OSD Status
OSE:20	DownCONV.Mode
OSE:68	HDMI COLOR
OSE:70	DIGITAL ZOOM ENABLE
OSE:71	PRESET SCOPE
OSE:75	OSD Off With Tally
OSE:77	Frequency
OSE:7A	Maximum Digital Zoom
DCB	COLOR BAR/CAMERA
OAZ	Focus ADJ with PTZ
DCS	Color Bars Setup
OSD:65	OUTPUT SELECT

Table 4-5-3 (In the case of the AW-HE130)

Notification	Remarks
XSF	Scene file
OSD:48	Picture Level
ORS	Iris Mode
OSH	Shutter Mode
OMS	Step/Synchro
OGU	Gain
OSD:69	AGC Max Gain
OSA:65	Frame Mix
OFT	ND Filter
d6	Day/Night
OSD:B0	Chroma Level
OAW	White Balance Mode
OSD:B1	Color Temperature
ORI	R Gain
OBI	B Gain
OTP	Pedestal
ORP	R Pedestal
OBP	B Pedestal
ODT	Detail
OSA:30	Master Detail
OSD:A1	V Detail Level
OSD:A2	Detail Band
OSD:22	Noise Suppress
OSD:A3	FleshTone NoiseSUP.
OSE:72	Gamma Type
OSA:6A	Gamma
OSE:33	DRS
OSA:2D	Knee Mode
OSA:20	Knee Point
OSA:24	Knee Slope
OSA:2E	White Clip
OSA:2A	White Clip Level
OSD:3A	DNR
OSE:31	Matrix Type
OSD:A4	Linear Matrix (R-G)
OSD:A5	Linear Matrix (R-B)
OSD:A6	Linear Matrix (G-R)
OSD:A7	Linear Matrix (G-B)
OSD:A8	Linear Matrix (B-R)
OSD:A9	Linear Matrix (B-G)
OSD:80	Color Correction (B_Mg GAIN/SATURATION)
OSD:81	Color Correction (B_Mg PHASE)
OSD:82	Color Correction (Mg GAIN/SATURATION)
OSD:83	Color Correction (Mg PHASE)

Table 4-5-3 (In the case of the AW-HE130) (continued)

Notification	Remarks
OSD:84	Color Correction (Mg_R GAIN/SATURATION)
OSD:85	Color Correction (Mg_R PHASE)
OSD:9A	Color Correction (Mg_R_R GAIN/SATURATION)
OSD:9B	Color Correction (Mg_R_R PHASE)
OSD:86	Color Correction (R GAIN/SATURATION)
OSD:87	Color Correction (R PHASE)
OSD:9C	Color Correction (R_R_YI GAIN/SATURATION)
OSD:9D	Color Correction (R_R_YI PHASE)
OSD:88	Color Correction (R_YI GAIN/SATURATION)
OSD:89	Color Correction (R_YI PHASE)
OSD:9E	Color Correction (R_YI_YI GAIN/SATURATION)
OSD:9F	Color Correction (R_YI_YI PHASE)
OSD:8A	Color Correction (YI GAIN/SATURATION)
OSD:8B	Color Correction (YI PHASE)
OSD:8C	Color Correction (YI_G GAIN/SATURATION)
OSD:8D	Color Correction (YI_G PHASE)
OSD:8E	Color Correction (G GAIN/SATURATION)
OSD:8F	Color Correction (G PHASE)
OSD:90	Color Correction (G_Cy GAIN/SATURATION)
OSD:91	Color Correction (G_Cy PHASE)
OSD:92	Color Correction (Cy GAIN/SATURATION)
OSD:93	Color Correction (Cy PHASE)
OSD:94	Color Correction (Cy_B GAIN/SATURATION)
OSD:95	Color Correction (Cy_B PHASE)
OSD:96	Color Correction (B GAIN/SATURATION)
OSD:97	Color Correction (B PHASE)

Table 4-5-4 (In the case of the AW-HE40/AW-HE65/AW-HE70)

Notification	Remarks
XSF	Scene file
ORS	Iris Mode
d3	Iris Auto/Manual
OSH	Shutter Mode
OMS	Step/Synchro
OGU	Gain
OSD:69	AGC Max Gain
OSA:65	Frame Mix
OSE:74	Maximum frame mix value
OCG	Chroma Level
OSD:48	Picture Level
OSE:73	BACK LIGHT COMPENSATION
OAW	White Balance Mode
OSD:B1	Color Temperature
OTD	Pedestal
ODT	Detail
OSA:30	Master Detail
OSA:B1	TOTAL DTL LEVEL HIGH
OSE:32	SOFT SKIN
OSE:72	Gamma Type
OSD:50	Gamma Level
OSE:33	DRS
OSD:3A	DNR
d6	Day/Night
OSD:B2	Night Mode Sel
OSD:B7	NIGHT-DAY LEVEL
OSD:B4	HDR
OSE:31	Matrix Type
OSD:82	Color Correction (Mg GAIN/SATURATION)
OSD:83	Color Correction (Mg PHASE)
OSD:84	Color Correction (Mg_R GAIN/SATURATION)
OSD:85	Color Correction (Mg_R PHASE)
OSD:86	Color Correction (R GAIN/SATURATION)
OSD:87	Color Correction (R PHASE)
OSD:9C	Color Correction (R_R_YI GAIN/SATURATION)
OSD:9D	Color Correction (R_R_YI PHASE)
OSD:9E	Color Correction (R_YI_YI GAIN/SATURATION)
OSD:9F	Color Correction (R_YI_YI PHASE)
OSD:8A	Color Correction (YI GAIN/SATURATION)
OSD:8B	Color Correction (YI PHASE)
OSD:8E	Color Correction (G GAIN/SATURATION)
OSD:8F	Color Correction (G PHASE)
OSD:90	Color Correction (G_Cy GAIN/SATURATION)
OSD:91	Color Correction (G_Cy PHASE)
OSD:92	Color Correction (Cy GAIN/SATURATION)
OSD:93	Color Correction (Cy PHASE)
OSD:96	Color Correction (B GAIN/SATURATION)
OSD:97	Color Correction (B PHASE)
OSD:AA	Color Correction (Cy_Cy_B GAIN/SATURATION)
OSD:AB	Color Correction (Cy_Cy_B PHASE)
OSD:AC	Color Correction (Cy_B_B GAIN/SATURATION)
OSD:AD	Color Correction (Cy_B_B PHASE)

Notification	Remarks
OSD:C0	Color Correction (B_B_Mg GAIN/SATURATION)
OSD:C1	Color Correction (B_B_Mg PHASE)
OSD:C2	Color Correction (B_Mg_Mg GAIN/SATURATION)
OSD:C3	Color Correction (B_Mg_Mg PHASE)
OSD:C4	Color Correction (YI_YI_G GAIN/SATURATION)
OSD:C5	Color Correction (YI_YI_G PHASE)
OSD:C6	Color Correction (YI_G_G GAIN/SATURATION)
OSD:C7	Color Correction (YI_G_G PHASE)




Given below is the sequence which is followed when scene files are selected.

### 【Scene file selection sequence】

The sequence below is followed if the scene file is changed to “Manual1”.

When “XSF:1” is returned in the response to the scene selection command and the scene file change is completed, the settings changed by the change in the scene file are posted in sequence by update notifications.

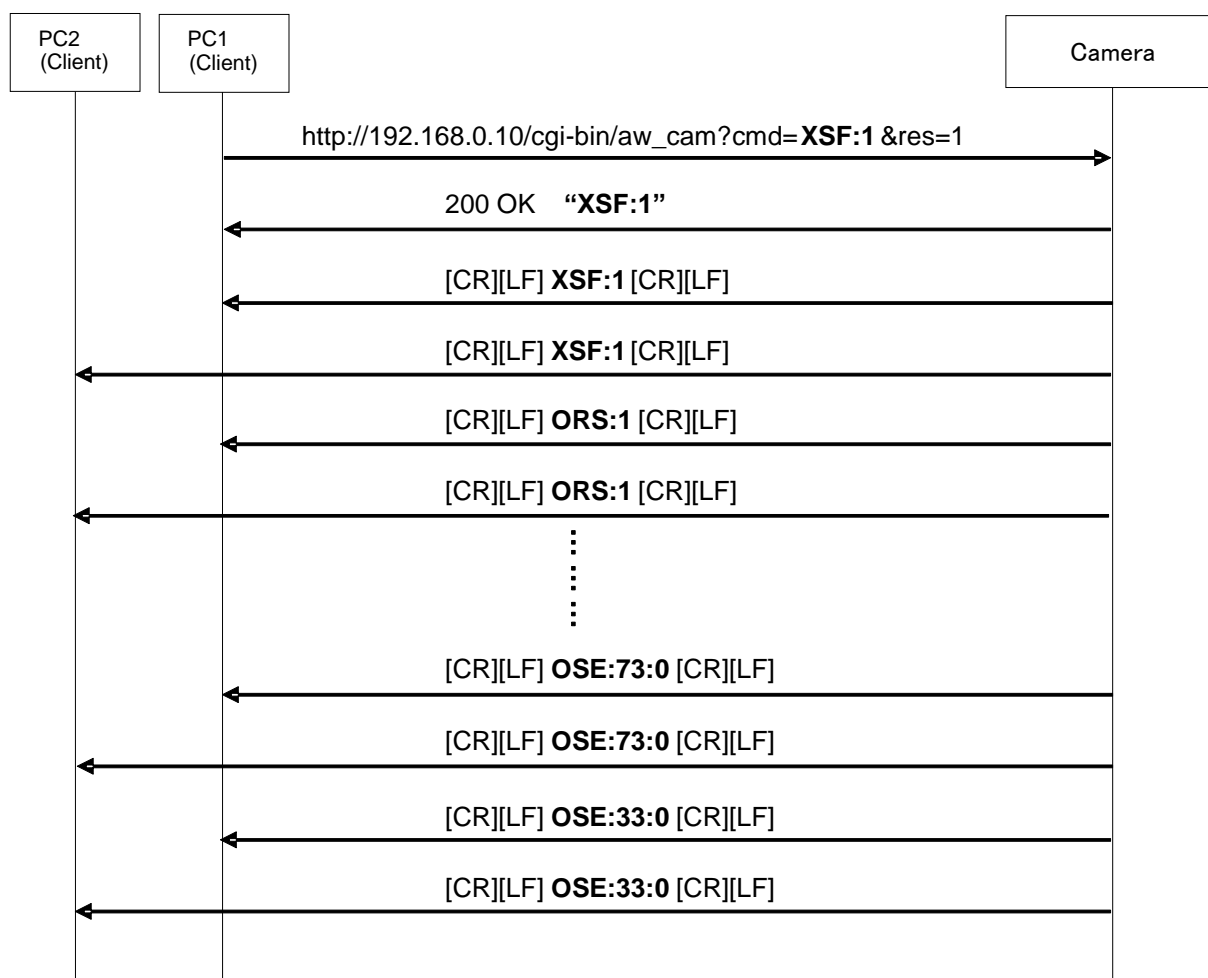

※The backlight compensation response (OSE:73:[Data]) is not supported by the AW-HE120.

Fig.4-7 Scene file selection

Described below are sequences which differ from the ones described in the previous pages.

#### 4.4. Special sequences

Update notifications are sometimes sent at times other than when the settings or statuses of the camera have been changed.

Some cases are presented below.

It is assumed that the update notification start command has been sent to all the terminals in the sequence and that the terminals can receive the update notifications from the camera.

##### 4.4.1. Version information notification

The version information is posted in 60-second cycles.

The information posted is given below.

Table 4-6

Notification	Version information
qSV3V**.*****	qSV3V01.00L.002

Given below is the sequence which is followed when the version information is received.

##### 【Sequence when the version information is received】

The camera sends the version information in 60-second cycles, and this information is received by terminals PC1 and PC2.

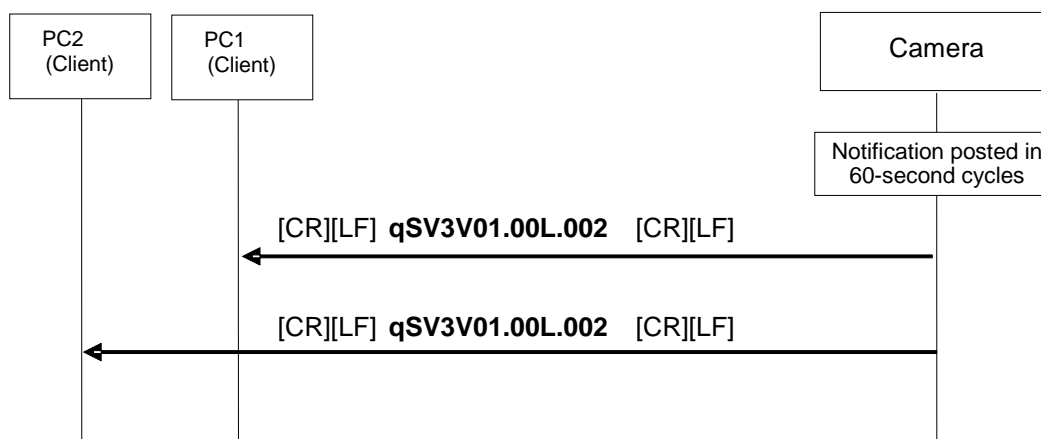


Fig.4-8 Sequence when the version information is received

#### 4.4.2. Error information

In cases where the camera has detected error information, the error information is posted in 30-second cycles.

When operation has been restored from an error condition, [Error Code 00:Normal] is posted only once.

If the error has not been detected, the error information is not posted.

Given below is the information which is posted.

Table 4-7

Notification	Error Code
rER[Error Code]	In the case of the AW-HE50/AW-HE60
	00: Normal
	03: Motor Driver Error
	04: Pan Sensor Error
	05: Tilt Sensor Error
	06: Controller RX Over run Error
	07: Controller RX Framing Error
	08: Network RX Over run Error
	09: Network RX Framing Error
	17: Controller RX Command Buffer Overflow
	19: Network RX Command Buffer Overflow
	21: System Error
	22: Spec Limit Over
	23: FPGA Config Error
	24: Network communication Error
	25: Lens Initialize Error
	30: Lvds_Adjustment_NG
	31: Bar_Signal_Check_NG
	32: H_Sync_Check_NG
	33: HDMI_Check_NG
	In the case of the AW-HE120/AW-HE130
	00: Normal
	01:-
	02:-
	03: Motor Driver Error
	04: Pan Sensor Error
	05: Tilt Sensor Error
	06: Controller RX Over run Error
	07: Controller RX Framing Error
	08: Network RX Over run Error
	09: Network RX Framing Error
	0A:-
	0B:-
	17: Controller RX Command Buffer Overflow
	19: Network RX Command Buffer Overflow
	21: System Error
	22: Spec Limit Over
	24: Network communication Error
	25: CAMERA communication Error
	26: CAMERA RX Over run Error
	27: CAMERA RX Framing Error
	28: CAMERA RX Command Buffer Overflow

Notification	Error Code
	In the case of the AW-HE40/AW-HE65/AW-HE70
	00:Normal(No Error) 03:Motor Driver Error 04:Pan Sensor Error 05:Tilt Sensor Error 06:IF/FPGA UART Over run Error 07:IF/FPGA UART Framing Error 08:IF/NET UART Over run Error 09:IF/NET UART Framing Error 17:IF/FPGA UART Buffer Overflow 19:IF/NET UART Buffer Overflow 21:System Error(IF/SERVO Error) 22:PT Limit Over 24:NET Life-monitoring Error 25:BE Life-monitoring Error 26:IF/BE UART Buffer Overflow 27:IF/BE UART Framing Error 28:IF/BE UART Buffer Overflow 29:CAM Life-monitoring Error

Given below is the sequence which is followed when error information is received.

**【Error information receive sequence】**

When the camera detects an error, it sends the error information to the terminals, and terminals PC1 and PC2 receive this information.

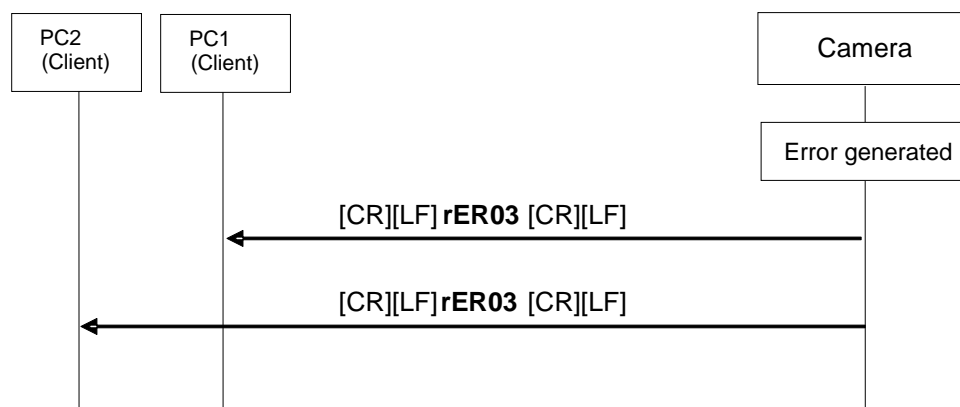


Fig.4-9 Sequence when error information is received

#### 4.4.3. LPI information (lens information)

Notification is sent in a 300ms cycle when “On: Information is posted” has been set for the lens information notification On/Off control command in “3.1.6. Lens information notification” and a change has been made in the LPI information (lens information). The information posted is given below.

Table 4-8

Notification	Lens information
IPI [ZZZ] [FFF] [III]	ZZZ .....Zoom position FFF .....Focus position III .....Iris position

Given below is the sequence which is followed when changes in the LPI (lens) information are received.

#### 【Sequence when LPI information (lens information) is changed】

When the camera detects changes in the LPI (lens) information, the changed LPI (lens) information is sent to the terminals, and terminals PC1 and PC2 receive this information.

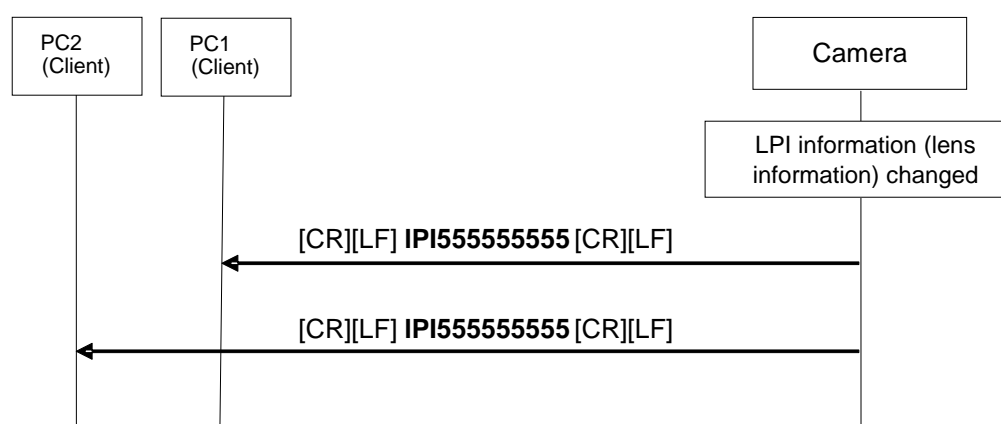


Fig.4-10 Sequence when LPI information is changed

#### 4.4.4. Preset playback

This command sends the preset playback completion notification as an update notification when preset playback in the camera has been completed. The table below gives the notification details.

Table 4-9

Notification	Remarks
q[numeral]	Number of the preset which was played back

Given below is the sequence which is followed when presets are played back.

##### 【Preset playback sequence】

This is the sequence in which preset number 08 is played back.

As soon as the preset playback command is received, “s07” is returned as the HTTP response, and as soon as the playback is completed after this, “q07” is posted separately as the update notification.

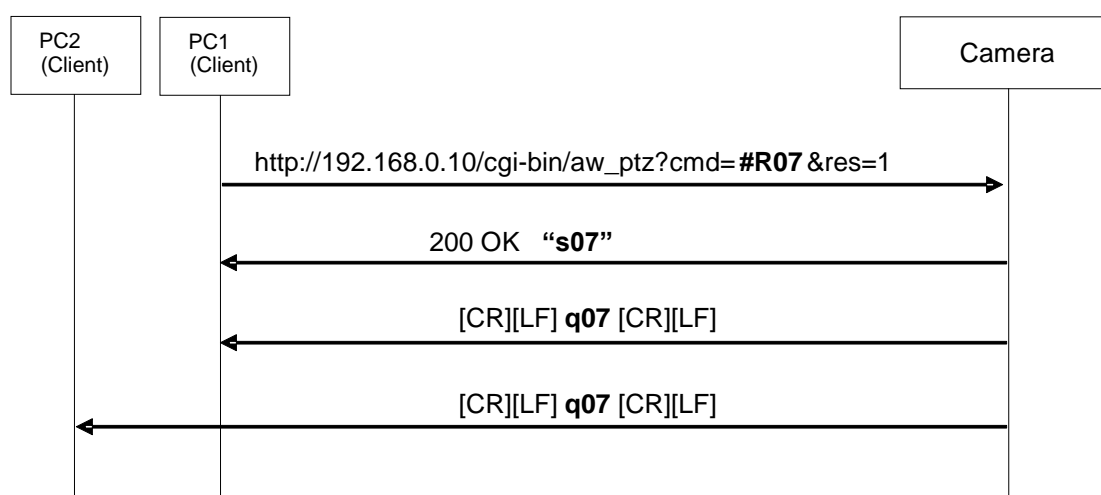


Fig.4-11 Preset playback

#### 4.4.5. AWB/ABB execution

This command sends the execution results as an update notification when execution of AWB/ABB has been completed by the camera.

The information posted is given below.

Table 4-10 AWB result

Notification	Remarks
OWS	AWB execution successful
ORI:096	R Gain (only when AWB is successfully executed) ※1 * Notified with the AW-HE120/AW-HE130
OBI:096	B Gain (only when AWB is successfully executed) ※1 * Notified with the AW-HE120/AW-HE130
ORG:1E	R Gain (only when AWB is successfully executed) ※1 * Notified by AW-HE50 Ver.2 or subsequent versions or by AW-HE60.
OBG:1E	B Gain (only when AWB is successfully executed) ※1 * Notified by AW-HE50 Ver.2 or subsequent versions or by AW-HE60.
ER3:OWS	AWB execution failed

※1: The R gain and B gain update notifications are supported by Ver.2 or a later version for the AW-HE50.

Table 4-11 ABB result

Notification	Remarks
OAS	ABB execution successful
ORP:096	R Pedestal (only when ABB is successfully executed) ※2
OBP:096	B Pedestal (only when ABB is successfully executed) ※2
ER3:OAS	ABB execution failed ※2

※2: With the AW-HE50 or the AW-HE60, the HTTP response is always given immediately for OAS, and no update notification is sent.




Given below is an example of the sequence which is followed when AWB is executed.

### 【AWB execution sequence】

As soon as the AWB execution command is received, “204 No Content” is returned as the HTTP response, and as soon as the AWB execution is completed, “OWS” is posted separately as the update notification.

For details on what happens if AWB execution has failed, refer to “6. Error return”.

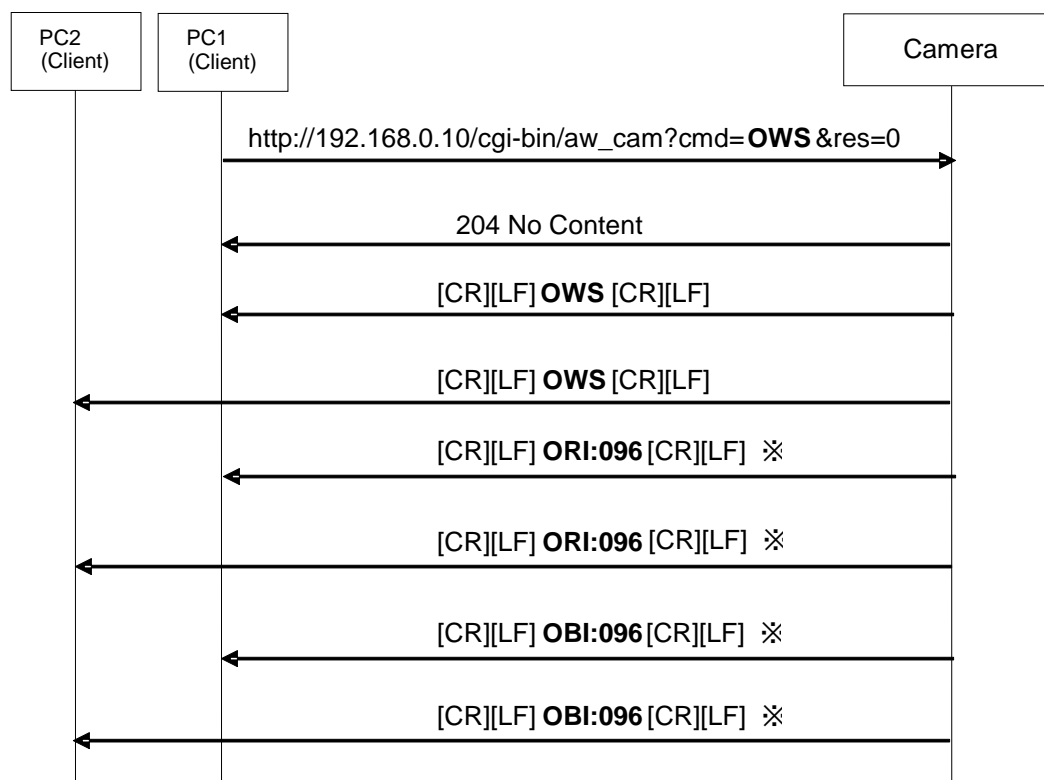

※ The R gain and B gain update notifications are supported by Ver.2 or a later version for the AW-HE50.

※ In AW-HE50 Ver.2 or subsequent versions or in AW-HE60, if AWB A or AWB B is set as the AWB mode after switching, ORG or OBG is posted instead of ORI or OBI.

Fig.4-12 AWB execution

#### 4.4.6. AWB Mode switching

The contents of the table below are posted in succession by update notifications when the AWB Mode setting has been switched.

Table 4-12

Notification	Remarks
OAW	AWB Mode
ORI	R Gain      ※Only supported by the AW-HE120/AW-HE130.
OBI	B Gain      ※Only supported by the AW-HE120/AW-HE130.
ORG	R Gain      ※Notified by AW-HE50 Ver.2 or subsequent versions or by AW-HE60/ AW-HE40/AW-HE65/AW-HE70.
OBG	B Gain      ※Notified by AW-HE50 Ver.2 or subsequent versions or by AW-HE60/ AW-HE40/AW-HE65/AW-HE70.


※The R gain and B gain are notified only when the AWB mode after switching has been set to AWB A or AWB B.

The sequence below is followed when the AWB Mode is switched.

##### 【AWB Mode switching sequence】

This sequence is followed if AWB Mode is switched to “AWB A”.

As the response to the AWB Mode switching command, “OAW:1” is returned, and the R gain and B gain settings stored for the AWB Mode after switching are posted in sequence by update notifications.

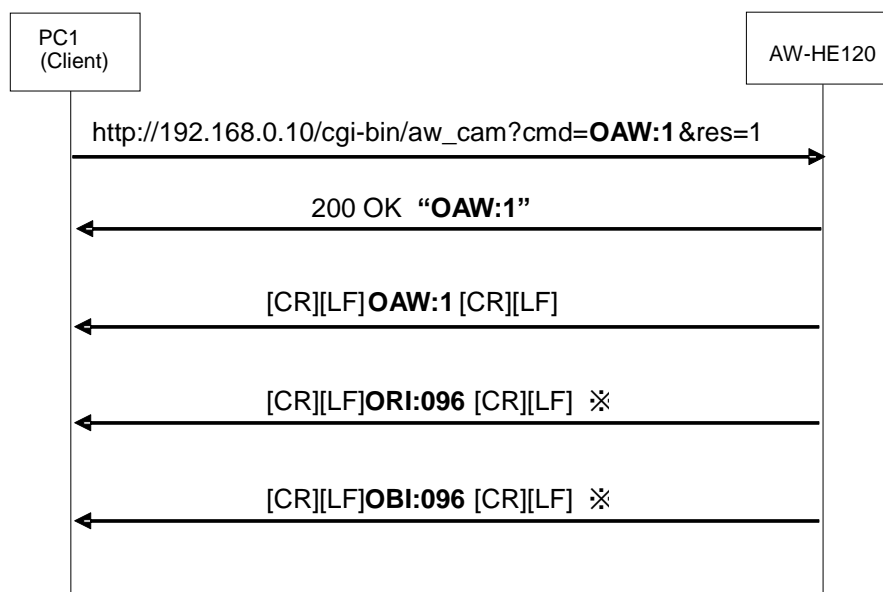

※ The R gain and B gain update notifications are supported by Ver.2 or a later version for the AW-HE50.

※ In AW-HE50 Ver.2 or subsequent versions or in AW-HE60/AW-HE40/AW-HE65/AW-HE70, if AWB A or AWB B is set as the AWB mode after switching, ORG or OBG is posted instead of ORI or OBI.

Fig.4-13 AWB Mode switching

## 5. Camera information batch acquisition

All the information of the camera can be acquired together as a batch.

### [Command format]

[Send]

http://[IP Address]/live/camdata.html

※IP Address..... IP address of camera at connection destination

[Receive]

200 OK "Camera information"

Where:

※Camera information Camera information listed in Table 5-1.  
[CR] and [LF] are used as the delimiters of the information.

### [Sequence]

The camera information is acquired from PC1. "200 OK [Camera information]" is returned as the response from the camera.

Given below is the command sequence.

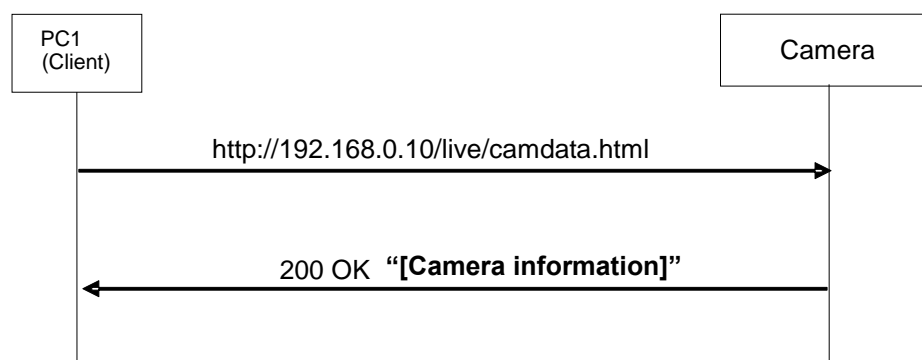


Fig.5-1 Camera information batch acquisition sequence

Table 5-1

Camera information	Command	[data] section
PowerOn/Off status	p[data]	0 : PowerOff 1 : PowerOn
Model Name	OID:[data]	In the case of the AW-HE50
		AW-HE50 (fixed)
		In the case of the AW-HE60
		AW-HE60 (fixed)
		In the case of the AW-HE120
		AW-HE120 (fixed)
		In the case of the AW-HE130
		AW-HE130 (fixed)
		In the case of the AW-HE40
		AW-HE40 (fixed)
		In the case of the AW-HE65
		AW-HE65 (fixed)
		In the case of the AW-HE70
		AW-HE70 (fixed)
CGI send interval	---	In the case of the AW-HE130
		CGI_TIME:130 (fixed)
		In the case of other models
		CGI_TIME:0 (fixed) ※The AW-HE50 is supported by Ver.2 or a later version.
Format	OSA:87:[data]	In the case of the AW-HE50
		1: 720/59.94p 2: 720/50p 4: 1080/59.94i 5: 1080/50i 7: 1080/29.97PsF 8: 1080/25PsF B: 480/59.94i D: 576/50i 10: 1080/59.94p 11: 1080/50p
		In the case of the AW-HE60
		1: 720/59.94p
		2: 720/50p
		4: 1080/59.94i
		5: 1080/50i
		7: 1080/29.97PsF
		8: 1080/25PsF
		B: 480/59.94i
		D: 576/50i
		10: 1080/59.94p
		11: 1080/50p
		12: 480/59.94p
		13: 576/50p

Camera information	Command	[data] section
		In the case of the AW-HE120
		1: 720/59.94p 2: 720/50p 4: 1080/59.94i 5: 1080/50i B: 480/59.94i D: 576/50i 10: 1080/59.94p 11: 1080/50p 12: 480/59.94p 13: 576/50p
		In the case of the AW-HE130
		1: 720/59.94p 2: 720/50p 4: 1080/59.94i 5: 1080/50i 7: 1080/29.97PsF 8: 1080/25PsF A: 1080/23.98PsF 10: 1080/59.94p 11: 1080/50p 12: 480/59.94p 13: 576/50p 14: 1080/29.97p 15: 1080/25p 16: 1080/23.98p
		In the case of the AW-HE40/AW-HE65/ AW-HE70
		1h(720/59.94p) 2h(720/50p) 4h(1080/59.94i) 5h(1080/50i) 7h(1080/29.97PsF) 8h(1080/25PsF) 10h(1080/59.94p) 11h(1080/50p) 14h(1080/29.97p) 15h(1080/25p)
Camera Title	---	TITLE:[data (Max. 20 half-size characters)]
Gain	OGU:[data]	In the case of the AW-HE50/AW-HE60
		80: Auto 08: 0dB 0B: 3dB 0E: 6dB 11: 9dB 14: 12dB 17: 15dB 1A: 18dB
		In the case of the AW-HE120
		80 : Auto 08 : 0dB } 11 : 9dB } 1A : 18dB ● Value can be set in increments of 1dB.

Camera information	Command	[data] section
		In the case of the AW-HE130
		80 : Auto 08 : 0dB } 1A : 18dB } 2C : 36dB • Value can be set in increments of 1dB.
		In the case of the AW-HE40/AW-HE65/ AW-HE70
		80 : Auto 08 : 0dB } 1A : 18dB } 38 : 48dB • Value can be set in increments of 3dB.
Pedestal	OTD:[data]	In the case of the AW-HE50/AW-HE60/ AW-HE40/AW-HE65/ AW-HE70
		3C: +10      1B: -1 39: +9       18: -2 36: +8       15: -3 33: +7       12: -4 30: +6       0F: -5 2D: +5       0C: -6 2A: +4       09: -7 27: +3       06: -8 24: +2       03: -9 21: +1       00: -10 1E:    0
AWB Mode	OAW:[data]	In the case of the AW-HE50/AW-HE60
		0: ATW 2: AWB A 3: AWB B
		In the case of the AW-HE120
		0: ATW 2: AWB A 3: AWB B 4: 3200K 5: 5600K
		In the case of the AW-HE130/AW-HE40/ AW-HE65/ AW-HE70
		0: ATW 2: AWB A 3: AWB B 4: 3200K 5: 5600K 9: VAR

Camera information	Command	[data] section
Shutter Mode	OSH:[data]	In the case of the AW-HE50/AW-HE60/ AW-HE120/AW-HE40/AW-HE65/AW-HE70
		0: Off 3: Step - 1/100(59.94Hz) 1/120(50Hz) 5: Step - 1/250 6: Step - 1/500 7: Step - 1/1000 8: Step - 1/2000 9: Step - 1/4000 A: Step - 1/10000 B: SynchroScan C: ELC ※AW-HE120 only
		In the case of the following formats of AW-HE130 (1080/59.94i / 1080/59.94P / 720/59.94P / 480/59.94P)
		0 OFF 3 1/100 4 1/120 5 1/250 6 1/500 7 1/1000 8 1/2000 9 1/4000 A 1/10000 B Synchro-Scan C ELC
		In the case of the following formats of AW-HE130 (1080/29.97p)
		0 OFF 2 1/60 4 1/120 5 1/250 6 1/500 7 1/1000 8 1/2000 9 1/4000 A 1/10000 B Synchro-Scan C ELC F 1/30

Camera information	Command	[data] section
		In the case of the following formats of AW-HE130 (1080/23.98p)
		0 OFF 2 1/60 4 1/120 5 1/250 6 1/500 7 1/1000 8 1/2000 9 1/4000 A 1/10000 B Synchro-Scan C ELC D 1/24
		In the case of the following formats of AW-HE130 (1080/50i / 1080/50P / 720/50P / 480/50P)
		0 OFF 2 1/60 3 1/120 5 1/250 6 1/500 7 1/1000 8 1/2000 9 1/4000 A 1/10000 B Synchro-Scan C ELC
		In the case of the following formats of AW-HE130 (1080/25p)
		0 OFF 2 1/60 3 1/120 5 1/250 6 1/500 7 1/1000 8 1/2000 9 1/4000 A 1/10000 B Synchro-Scan C ELC E 1/25
Detail	ODT:[data]	In the case of the AW-HE50/AW-HE60/AW-HE120/AW-HE40/AW-HE65/AW-HE70
		0: Off 1: Low 2: High
		In the case of the AW-HE130
		0: Off 1: On 2: On



Camera information	Command	[data] section
Scene	OSF:[data]	In the case of the AW-HE50/AW-HE60/ AW-HE40/AW-HE65/ AW-HE70
		0: Manual1 1: Manual2 2: Manual3 3: FullAuto
		In the case of the AW-HE120/AW-HE130
		0: Scene1 1: Scene2 2: Scene3 3: Scene4
Camera/ColorBar	OBR:[data]	0: Camera 1: ColorBar
Speed With Zoom Pos.	sWZ[data]	0: Off 1: On
Preset Mode	OSE:71:[data]	0: Mode A 1: Mode B 2: Mode C
Install Position	iNS[data]	0: Desktop 1: Hanging
OSD On/Off	OUS:[data]	0: Off 1: On
Focus Mode	d1[data]	0: Manual 1: Auto
Iris Mode	d3[data]	0: Manual 1: Auto
Latest Call Preset No.	s[data]	1~100
Total Detail Level	OSA:30:[data]	In the case of the AW-HE60
		81 : 1 ⌋ 91 : 17
		In the case of the AW-HE50/AW-HE120/ AW-HE40/AW-HE65/AW-HE70
		0 (fixed)
		In the case of the AW-HE130
		61 : 0 ⌋ 80 : 31 ⌋ 9F : 62
ND Filter	d2[data]	0 (fixed)
Option SW ※ In the case of AW-HE60 (V3.00 or later) and AW-HE130/AW-HE40/ AW-HE65/AW-HE70, used as Day/Night switching.	d6[data]	0: Off 1: On
Lamp	d4[data]	0 (fixed)
Iris Follow	OSD:4F:[data]	00: Close ⋮ FF: Open
Error Notice	OER:[data]	0: Normal 1: Fan Error
P/T Mode of Preset	rt[data]	1 (fixed)

Camera information	Command	[data] section
Zoom Position	axz[data]	555: Wide : FFF: Tele
Error Status Info.	rER[data]	00: No Error 01: Error01 : 0A: Error10 : 24: Error30 25: (Reserved) : 2F: (Reserved) 30: Error48 31: Error49 32: Error50 33: Error51
Focus Position	axf[data]	555: Near : FFF: Far
Preset Entry No.001~040	pE00[data]	0000000000~FFFFFFFF(40bit) bit01: Preset-No.001 : bit40: Preset-No.040  0: No Entry 1: Entry
Preset Entry No.041~080	pE01[data]	0000000000~FFFFFFFF(40bit) bit01: Preset-No.041 : bit40: Preset-No.080  0: No Entry 1: Entry
Preset Entry No.081~100	pE02[data]	0000000000~FFFFFFFF(40bit) bit01: Preset-No.081 : bit20: Preset-No.100 bit21: 0 (fixed) : bit40: 0 (fixed)  0: No Entry 1: Entry
Preset Speed	uPVS[data]	000: Max Speed (Preset Speed:30) 250: Slow (Preset Speed:1) : 999: Fast(Preset Speed:30)
Tilt-Up Limitation Set	IC1[data]	0: Release 1: Set
Tilt-Down Limitation Set	IC2[data]	0: Release 1: Set
Pan-Left Limitation Set	IC3[data]	0: Release 1: Set

Camera information	Command	[data] section
Pan-Right Limitation Set	IC4:[data]	0: Release 1: Set
R Gain	ORG:[data]	In the case of the AW-HE50 (Ver.2 or a later version)/AW-HE60/AW-HE40/AW-HE65/AW-HE70 00: -30 ⋮ 1E: 0 ⋮ 3C: +30
	ORI:[data]	In the case of the AW-HE120/AW-HE130 000: -150 ⋮ 096: 0 ⋮ 12C: +150
B Gain	OBG:[data]	In the case of the AW-HE50 (Ver.2 or a later version)/AW-HE60/AW-HE40/AW-HE65/AW-HE70 00: -30 ⋮ 1E: 0 ⋮ 3C: +30
	OBI:[data]	In the case of the AW-HE120/AW-HE130 000: -150 ⋮ 096: 0 ⋮ 12C: +150
Pedestal ※Only AW-HE120/AW-HE130	OTP:[data]	000: -150 ⋮ 096: 0 ⋮ 12C: +150
R Pedestal ※Only AW-HE120/AW-HE130	ORP:[data]	In the case of the AW-HE120 000: -150 ⋮ 096: 0 ⋮ 12C: +150
		In the case of the AW-HE130 032: -100 ⋮ 096: 0 ⋮ 0FA: +100

Camera information	Command	[data] section
B Pedestal ※Only AW-HE120/AW-HE130	OBP:[data]	In the case of the AW-HE120
		000: -150 ⋮ 096: 0 ⋮ 12C: +150
		In the case of the AW-HE130
		032: -100 ⋮ 096: 0 ⋮ 0FA: +100
Color Temperature	OSD:B1:[data]	In the case of the AW-HE130
		000: 2000K ⋮ 078: 15000K
		In the case of the AW-HE40/AW-HE65/ AW-HE70
		000: 2400K ⋮ 04B: 9900K
Preset Speed Table ※Only AW-HE130/AW-HE40/ AW-HE65/ AW-HE70	pST[data]	0: Slow 2: Fast
Freezing images during preset playback (Freeze During Preset) ※Only AW-HE130/AW-HE40/ AW-HE65/ AW-HE70	pRF[data]	0: Off 1: On
Image Stabilization (IS) ※Only AW-HE130 (Optical)/ AW-HE40/AW-HE65/ AW-HE70	OIS:[data]	0: Off 1: On
Digital Extender ※Only AW-HE130/AW-HE40/ AW-HE65/ AW-HE70	ODE:[data]	0: Off 1: On
Digital Zoom ※Only AW-HE40/AW-HE65/ AW-HE70	OSE:70:[Data]	0: Off 1: On
iZoom ※Only AW-HE40/AW-HE65/ AW-HE70	OSD:B3:[Data]	0: Off 1: On

## 6. Error return

The three errors ER1, ER2 and ER3 below are returned in response to control or query commands by the camera.

### ① ER1 (unsupported command)

This error is generated when a command which is not supported by the camera has been received by the camera.

**Example)** When the non-existent “XF” command is executed for the camera

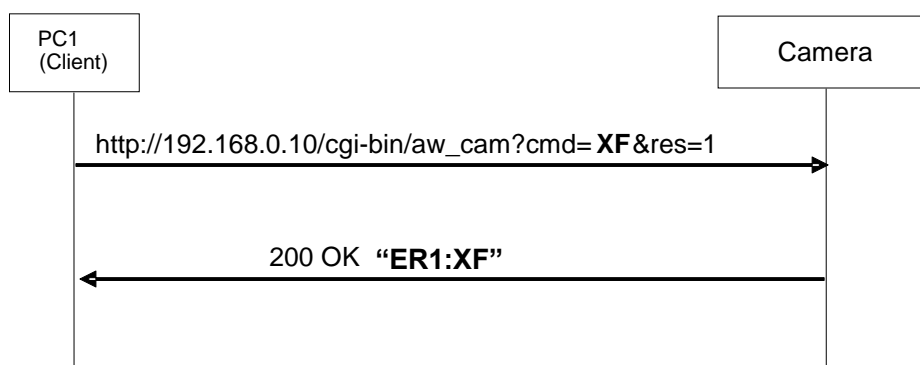


Fig.6-1 Error (ER1)

### ② ER2 (busy status)

This error is generated during Standby (Power Off) or at other times when the camera is in the busy status.

**Example)** When the scene file is changed to “Manual1” during Standby.

※In the case of the AW-HE50/AW-HE60

When the scene file is changed to “Scene1” during Standby.

※In the case of the AW-HE120

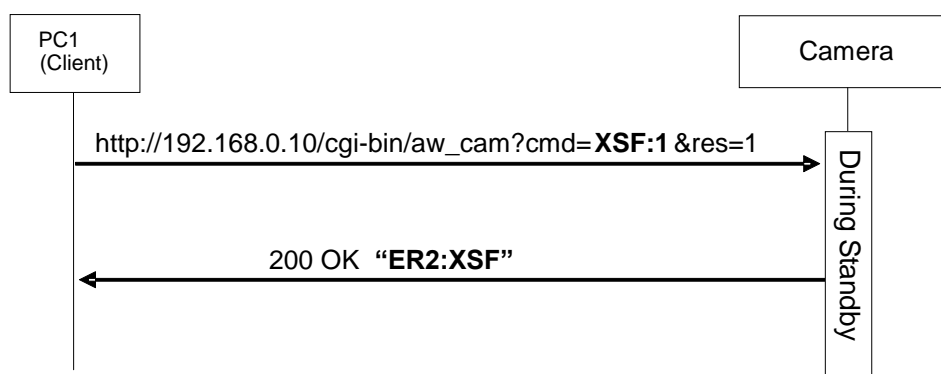


Fig.6-2 Error (ER2)

## ③ ER3 (outside acceptable range)

This error is generated when the data value of a command is outside the acceptable range.

**Example)**

The “OGU (gain setting)” command was executed with a data value of “90” which is outside the acceptable range.

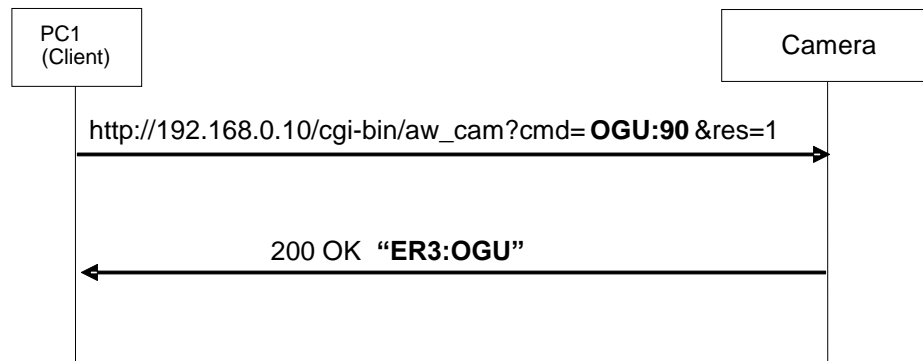


Fig.6-3 Error (ER3)

**<Appendix>**

This manual describes the HTTP messages using the format for input to the address bar of the web browser as in the example given below.

**(Example: `http://192.168.0.10/cgi-bin/aw_ptz?cmd=%23PTS5050&res=1`)**

The actual HTTP messages are in compliance with the HTTP1.1 communication specifications, and have the [Send] and [Receive] formats as given below.

**[Send]**

A command such as the ones listed below is sent after connection has been made to the specified port (default: 80) which has been set for the camera.

**Method: GET**

GET /cgi-bin/aw_ptz?cmd=#PTS5050&res=1 HTTP/1.1[CR][LF]	Request
Accept: image/gif, ... (omitted) ... , /*[CR][LF] Referer: http://192.168.0.10/[CR][LF] Accept-Language: en[CR][LF] Accept-Encoding: gzip, deflate[CR][LF] User-Agent: AW-Cam Controller[CR][LF] Host: 192.168.0.10[CR][LF] Connection: Keep-Alive[CR][LF]	Header
[CR][LF]	Blank line

**[Receive]**

A message with the command name and result value contained in the message body of the HTTP response message is received.

In this manual, this message is given as 200 OK "pTS5050", but in actual fact commands such as the following ones are received.

HTTP/1.1 200 OK[CR][LF]	Response
Status: 200[CR][LF] Date: Mon, 05 Dec 2011 00:00:00 GMT[CR][LF] Server: ver2.4 rev0[CR][LF] Connection: Close[CR][LF] Content-Type: Text/plain[CR][LF] Set-Cookie: Session=0[CR][LF] Accept-Ranges: bytes[CR][LF] Cache-control: no-cache[CR][LF] Content-length: 7[CR][LF]	Header
[CR][LF]	※Size of message body
[CR][LF]	Blank line
pTS5050	Message body