

ModatProgrammer

USER GUIDE

Gabdelgaziz Sayfutdinov

11.01.2021

Table of Contents

INTRODUCTION	3
AVAILABLE ARGUMENTS FOR PROGRAMMING TOOL	3
Command call order.....	3
System settings.....	3
Interface settings	3
SWI interface	3
I2C interface	4
UART interface.....	4
RS485 interface	4
Read/Write command.....	4
Write command.....	4
Read command.....	4
Config file	5
COMMAND REFERENCES.....	5
THR1AFE_BO	5

Introduction

The ModatProgrammer tool is used to program devices over different interfaces. Currently available interfaces are:

- SWI (Single Wire Interface)
- I2C
- RS485
- UART

The ModatProgrammer can be started by using the Executable file:

`modat_programmer_tool.exe`

Available arguments for programming tool

To properly use the `modat_programmer_tool`, the executable file has to be started using additional argument which are explained in more detail in the following sections.

The commands are described using a table, where the table columns have to following meaning. Below is an example for the `interface` argument.

Argument	Value	
<code>--interface</code>	<code>i2c</code>	Required

This means, that the executable file gets the following argument: `--interface=i2c`

The arguments are marked with the following flags:

Required	The arguments have to be set for a successful execution
Not required	This argument has to be set depending on the context.

Command call order

Each additional for the `modat_programmer_tool` must follow the following pattern.

1. System settings
2. Interface settings
3. Read/write command

System settings

The following system settings are currently available.

<code>--port</code>	COMx: COM Port to which the ModatProgrammer is connected	Required
---------------------	--	----------

Interface settings

Before writing or reading an interface has to be selected. Depending on the interface, additional interface settings have to be configured.

Note: To ensure proper functionality the order of the arguments should be kept as given.

SWI interface

<code>--interface</code>	<code>swi</code>	Required
--------------------------	------------------	----------

I2C interface

--interface	i2c	Required
--set_device_addr	Device addr of I2C device in HEX e.g. 0x50	Required
--set_device_type	Choose one of the following device types: - eeprom24lc16 - eeprom24lc128 - eeprom24lc256	Required

UART interface

To be implemented ...

RS485 interface

To be implemented ...

Read/Write command

Write command

--write	Define address at which the data should be written	Required
--data_type	"string" ... write a string "modat" ... write a modat by filling modat	Required

If as data_type string is chosen, the data can be added with the following argument

--data	Data to be transmitted as string	Required
--------	----------------------------------	----------

If the data_type is chosen to be modat, the following arguments have to be filled for the THR1AFE_BO module. Other modules will be added in the future.

--name	Name of module	Required
--sno	Serial number of module	Required
--revision	Revision of module	Required
--module_comp_version	Module compatibility version	
--modat_header_only	True or False: Only modat header is written	Not required

Read command

--read	Define address at which the data should be read	Required
--count	Number of bytes to read	Required

Config file

Instead of having to input the data into the using arguments, some configurations can be set in the config.ini file located in the config folder.

Command references

This section contains examples of how to fill the arguments for given modules.

THR1AFE_BO

The THR1AFE_BO Module requires the following commands for writing a modat header to the SWI EEPROM. The data is filled starting from address 0.

Assuming the following data:


Module name: THR1AFE_BO

Revision: 2

Comp Version: 1


Serial number: 123456789

The modat_programmer_tool.exe has to be executed using the following arguments.

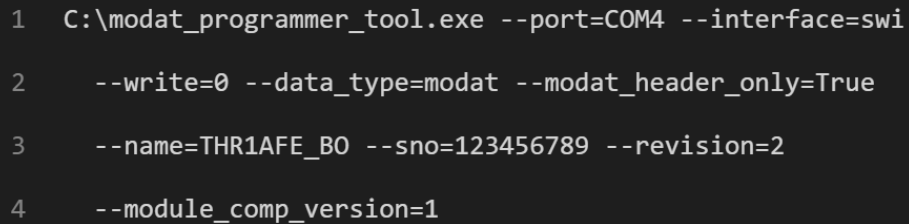A terminal window with a dark background and three colored window control buttons (red, yellow, green) in the top left corner. It displays a command to run modat_programmer_tool.exe with various arguments.

```
1 C:\modat_programmer_tool.exe --port=COM4 --interface=swi
2 --write=0 --data_type=modat --modat_header_only=True
3 --name=THR1AFE_BO --sno=123456789 --revision=2
4 --module_comp_version=1
```

To check the written data, it is possible to read the values from the EEPROM. The size of the written data is fixed to 64 bytes. Therefore, by using the following arguments, the data can be read.

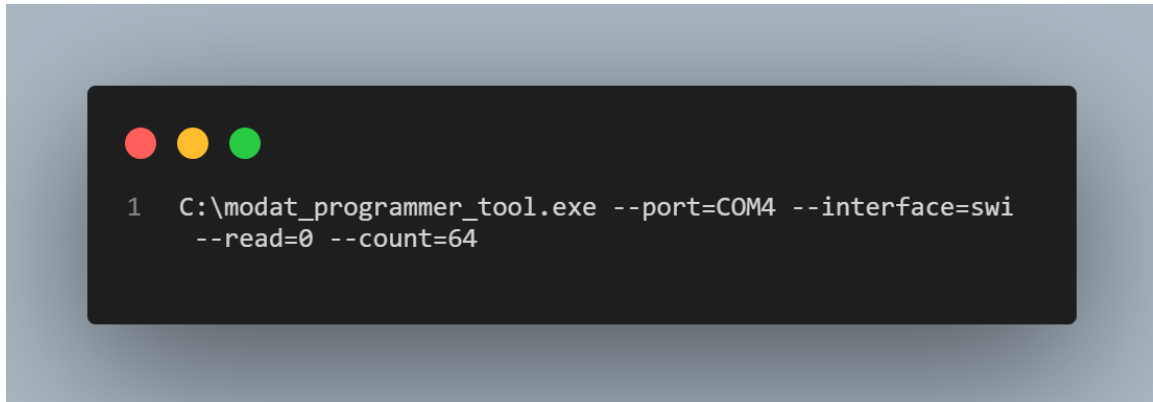

The read values can be seen in the log files which are located in the same directory as the `modat_programmer_tool.exe` file in the “log” folder.

Name	Date modified	Type	Size
Include	2021-01-14 20:49	File folder	
log	2021-01-14 20:56	File folder	
modat_programmer_tool.exe	2021-01-14 20:49	Application	2.244 KB
api-ms-win-core-console-l1-1-0.dll	2020-12-15 04:06	Application extens...	19 KB
api-ms-win-core-datetime-l1-1-0.dll	2020-12-15 04:06	Application extens...	19 KB
api-ms-win-core-debug-l1-1-0.dll	2020-12-15 04:06	Application extens...	19 KB
api-ms-win-core-errorhandling-l1-1-0.dll	2020-12-15 04:06	Application extens...	19 KB
api-ms-win-core-file-l1-1-0.dll	2020-12-15 04:06	Application extens...	22 KB

Open the `return_data_protocol.txt` file to see the logged values.

Name	Date modified	Type	Size
error_protocol.txt	2021-01-14 20:57	Text Document	0 KB
return_data_protocol.txt	2021-01-14 20:57	Text Document	1 KB
return_protocol_log.txt	2021-01-14 20:57	Text Document	1 KB