

**RGB LED control V1**  
**Design**

**Bassel Yasser Mahmoud**

**Mahmoud Adel**

## Contents

<b>Project Introduction .....</b>	<b>2</b>
<b>High Level Design .....</b>	<b>3</b>
<b>Layered Architecture.....</b>	<b>3</b>
<b>Module Description.....</b>	<b>4</b>
<b>Drivers' documentation.....</b>	<b>5</b>
<b>APP .....</b>	<b>5</b>
<b>HAL.....</b>	<b>7</b>
<b>MCAL .....</b>	<b>10</b>
<b>UML .....</b>	<b>14</b>
<b>Low Level Design .....</b>	<b>15</b>
<b>Flowchart.....</b>	<b>15</b>
<b>APP .....</b>	<b>15</b>
<b>HAL.....</b>	<b>16</b>
<b>MCAL .....</b>	<b>18</b>
<b>Pre-compiling configuration .....</b>	<b>24</b>
<b>MCAL .....</b>	<b>24</b>
<b>Linking Configuration.....</b>	<b>25</b>
<b>MCAL .....</b>	<b>25</b>

# Project Introduction

## Read System Requirements

### Hardware Requirements

- Use the TivaC board
- Use SW1 as an input button
- Use the RGB LED

### Software Requirements

- The RGB LED is OFF initially
- Pressing SW1:
  - After the first press, the Red led is on
  - After the second press, the Green Led is on
  - After the third press, the Blue led is on
  - After the fourth press, all LEDs are on
  - After the fifth press, should disable all LEDs
  - After the sixth press, repeat steps from 1 to 6

# High Level Design


## Layered Architecture

**APP Layer:** written in high level languages like java, C++, C# with rich GUI support. Application layer calls the middleware api in response to action by the user or an event.

**HAL Layer:** are a way to provide an interface between hardware and software so applications can be device independent.

**MCAL Layer:** is a software module that directly accesses on-chip MCU peripheral modules and external devices that are mapped to memory, and makes the upper software layer independent of the MCU. Details of the MCAL software module are shown below.

**Common Layer:** is the layer which consists of BIT\_MATH and STD types

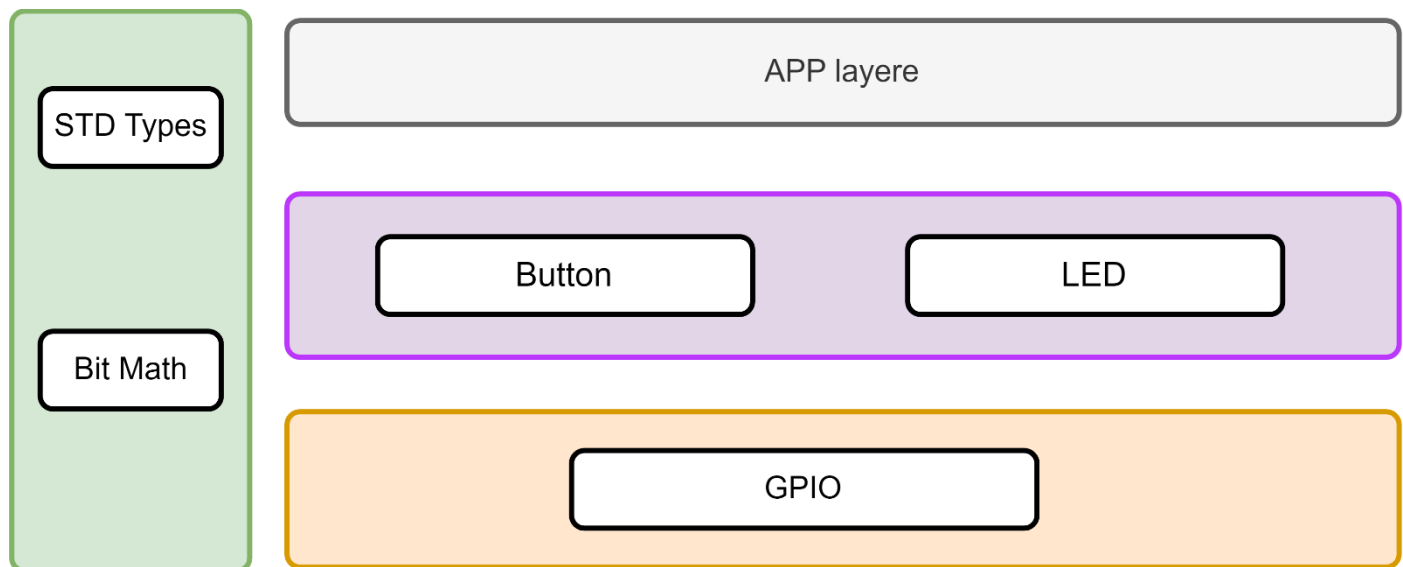

## Module Description

- **APP Layer**
  - **App:** written in high level languages like java, C++, C# with rich GUI support. Application layer calls the middleware api in response to action by the user or an event.
- **HAL Layer**
  - **button:** Initialize selected button pin as input
  - **Led:** this led module configure selected pin as output and generate volt
- **MCAL Layer**
  - **GPIO:** this module having configuration and Initialization for GPIO which communicate to hardware register directly
- **COMMON Layer**
  - **std\_types:** having basic standard types like (Uint32\_t, Uint8\_t, .....
  - **bit\_math :** Consist of bit manipulation like (SetBit, ClrBit, GetBit, ..)

# Drivers' documentation

## APP

### APP\_vidInit

<b>Service name</b>	APP_vidInit
<b>Description</b>	This Function Make Modules Initialization
<b>Syntax</b>	void APP_vidInit (void)
<b>Sync/Async</b>	Synchronous
<b>Reentrancy</b>	Non-Reentrant
<b>Parameters (in)</b>	void
<b>Parameters (out)</b>	None
<b>Return</b>	void
<b>Available via</b>	app.h

**APP\_vidStart**

<b>Service name</b>	APP_vidStart
<b>Description</b>	This Function Start the Application.
<b>Syntax</b>	void APP_vidStart (void)
<b>Sync/Async</b>	Synchronous
<b>Reentrancy</b>	Non-Reentrant
<b>Parameters (in)</b>	void
<b>Parameters (out)</b>	None
<b>Return</b>	void
<b>Available via</b>	app.h

# HAL

## HLED module

### HLed\_Init

Service name	<b>HLed_Init</b>
Description	This Function Init LED dio pin as output
Syntax	<code>enu_ledError_t HLed_Init (enu_pin en_pinNum)</code>
Sync/Async	Synchronous
Reentrancy	Reentrant
Parameters (in)	<b>en_pinNum: dio pin selection</b>
Parameters (out)	None
Return	<code>enu_ledError_t</code>
Available via	hled.h

### HLed\_on

Service name	<b>HLed_on</b>
Description	This Function give LED pin logic 1
Syntax	<code>enu_ledError_t HLed_on (enu_pin en_pinx);</code>
Sync/Async	Synchronous
Reentrancy	Reentrant
Parameters (in)	<b>en_pinNum: dio pin selection</b>
Parameters (out)	None
Return	<code>enu_ledError_t</code>
Available via	hled.h



## HLed\_off

<b>Service name</b>	<b>HLed_off</b>
<b>Description</b>	This Function give LED pin logic 0
<b>Syntax</b>	<code>enu_ledError_t HLed_off (enu_pin en_pinx)</code>
<b>Sync/Async</b>	Synchronous
<b>Reentrancy</b>	Reentrant
<b>Parameters (in)</b>	<code>en_pinNum: dio pin selection</code>
<b>Parameters (out)</b>	None
<b>Return</b>	<code>en_ledError_t</code>
<b>Available via</b>	hled.h

## HLed\_toggle

<b>Service name</b>	<b>HLed_toggle</b>
<b>Description</b>	This Function Change previous state of LED pin
<b>Syntax</b>	<code>enu_ledError_t HLed_toggle (enu_pin en_pinx)</code>
<b>Sync/Async</b>	Synchronous
<b>Reentrancy</b>	Reentrant
<b>Parameters (in)</b>	<code>en_pinNum: dio pin selection</code>
<b>Parameters (out)</b>	None
<b>Return</b>	<code>en_ledError_t</code>
<b>Available via</b>	hled.h

## Button module

### HButton\_Init

Service name	<b>HButton_Init</b>
Description	This Function Initialize button DIO pin as input and pull up
Syntax	<code>enu_buttonError_t HButton_Init (enu_pin en_pinx)</code>
Sync/Async	Synchronous
Reentrancy	Reentrant
Parameters (in)	<b>en_pinx</b> : DIO pin number
Parameters (out)	None
Return	<i>BUTTON_OK: in case of successful operation</i>
	<i>BUTTON_NOK: in case of failer operation</i>
Available via	button.h

### HButton\_getPinVal

Service name	<b>HButton_getPinVal</b>
Description	This Function Get button state
Syntax	<code>enu_buttonError_t HButton_getPinVal (enu_pin en_pinx, Uint8_t* pu8_refVal)</code>
Sync/Async	Synchronous
Reentrancy	Reentrant
Parameters (in)	<b>en_pinx</b> : DIO pin number
Parameters (out)	<b>pu8_refVal</b> : address of variable which button state to be stored
Return	<i>BUTTON_OK: in case of successful operation</i>
	<i>BUTTON_NOK: in case of failer operation</i>
Available via	button.h

# MCAL

## GPIO module

### MGPIO\_u8Init

Service name	MGPIO_u8Init
Description	This Function Initialize GPIO configuration
Syntax	<code>uint8_ MGPIO_u8Init (st_gpio_cfg_t* st_gpio_cfg)</code>
Sync/Async	Synchronous
Reentrancy	Reentrant
Parameters (in)	<b>st_gpio_cfg:</b> Address of struct Instance
Parameters (out)	None
Return	<i>MGPIO_SUCCESS: in case of successful operation</i>
	<i>MGPIO_FAILED: in case of failer operation</i>
Available via	mgpio_Interface.h

### MGPIO\_u8SetPinData

Service name	MGPIO_u8SetPinData
Description	This Function Initialize Pin Value High or Low
Syntax	<code>uint8_ MGPIO_u8SetPinData (enu_pin_t Copy_enPinNum, uint8_ Copy_PinValue)</code>
Sync/Async	Synchronous
Reentrancy	Reentrant
Parameters (in)	<b>Copy_enPinNum:</b> MGPIO_PINA_0 ~ MGPIO_PINF_7
	<b>Copy_PinValue:</b> MGPIO_PIN_LOW / MGPIO_PIN_HIGH
Parameters (out)	None
Return	<i>MGPIO_SUCCESS: in case of successful operation</i>
	<i>MGPIO_FAILED: in case of failer operation</i>
Available via	mgpio _Interface.h

### MGPIO\_u8GetPinData

<b>Service name</b>	<b>MGPIO_u8GetPinData</b>
<b>Description</b>	This Function Get value from selected pin
<b>Syntax</b>	<code>uint8_ MGPIO_u8GetPinData (enu_pin_t Copy_enPinNum, uint8_* Ref_puint8_PinVal)</code>
<b>Sync/Async</b>	Synchronous
<b>Reentrancy</b>	Reentrant
<b>Parameters (in)</b>	<b>Copy_enPinNum:</b> MGPIO_PINA_0 ~ MGPIO_PINF_7
<b>Parameters (out)</b>	<b>Ref_puint8_PinVal:</b> Reference to variable where the value status store on it
<b>Return</b>	<i>MGPIO_SUCCESS: in case of successful operation</i>
	<i>MGPIO_FAILED: in case of failer operation</i>
<b>Available via</b>	mgpio _Interface.h

## MGPIO\_u8IRQEnable

<b>Service name</b>	<b>MGPIO_u8IRQEnable</b>
<b>Description</b>	This Function Get value from selected pin
<b>Syntax</b>	<code>uint8_ MGPIO_u8IRQEnable (enu_pin_t Copy_enPinNum, enu_int_sens_type_t enu_int_sens_type, enu_int_sens_ctrl_t enu_int_sens_ctrl)</code>
<b>Sync/Async</b>	Synchronous
<b>Reentrancy</b>	Reentrant
<b>Parameters (in)</b>	<b>Copy_enPinNum:</b> MGPIO_PINA_0 ~ MGPIO_PINF_7
	<b>enu_int_sens_type:</b> MGPIO_INT_EDGE_SENSEITIVE ~ MGPIO_INT_LEVEL_SENSEITIVE
	<b>enu_int_sens_ctrl:</b> MGPIO_INT_BOTH_EDGES - MGPIO_INT_FALL_E_LOW_L - MGPIO_INT_RIS_E_HIGH_L
<b>Parameters (out)</b>	<b>NONE</b>
<b>Return</b>	<code>MGPIO_SUCCESS:</code> <i>in case of successful operation</i>
	<code>MGPIO_FAILED:</code> <i>in case of failer operation</i>
<b>Available via</b>	mgpio_Interface.h

### MGPIO\_u8IRQDisable


<b>Service name</b>	<b>MGPIO_u8IRQDisable</b>
<b>Description</b>	This Function Get value from selected pin
<b>Syntax</b>	<code>uint8_ MGPIO_u8IRQDisable (enu_pin_t Copy_enPinNum)</code>
<b>Sync/Async</b>	Synchronous
<b>Reentrancy</b>	Reentrant
<b>Parameters (in)</b>	<b>Copy_enPinNum:</b> MGPIO_PINA_0 ~ MGPIO_PINF_7
<b>Parameters (out)</b>	<b>NONE</b>
<b>Return</b>	<code>MGPIO_SUCCESS:</code> <i>in case of successful operation</i>
	<code>MGPIO_FAILED:</code> <i>in case of failer operation</i>
<b>Available via</b>	mgpio _Interface.h

### MGPIO\_u8SetCallBack

<b>Service name</b>	<b>MGPIO_u8SetCallBack</b>
<b>Description</b>	This Function Get value from selected pin
<b>Syntax</b>	<code>uint8_ MGPIO_u8SetCallBack (enu_pin_t Copy_enPinNum, ptr_func_t ptr_func)</code>
<b>Sync/Async</b>	Synchronous
<b>Reentrancy</b>	Non-Reentrant
<b>Parameters (in)</b>	<b>Copy_enPinNum:</b> MGPIO_PINA_0 ~ MGPIO_PINF_7
<b>Parameters (out)</b>	<b>ptr_func:</b> Address of application Function
<b>Return</b>	<code>MGPIO_SUCCESS:</code> <i>in case of successful operation</i>
	<code>MGPIO_FAILED:</code> <i>in case of failer operation</i>
<b>Available via</b>	mgpio _Interface.h



# UML

## State Machine

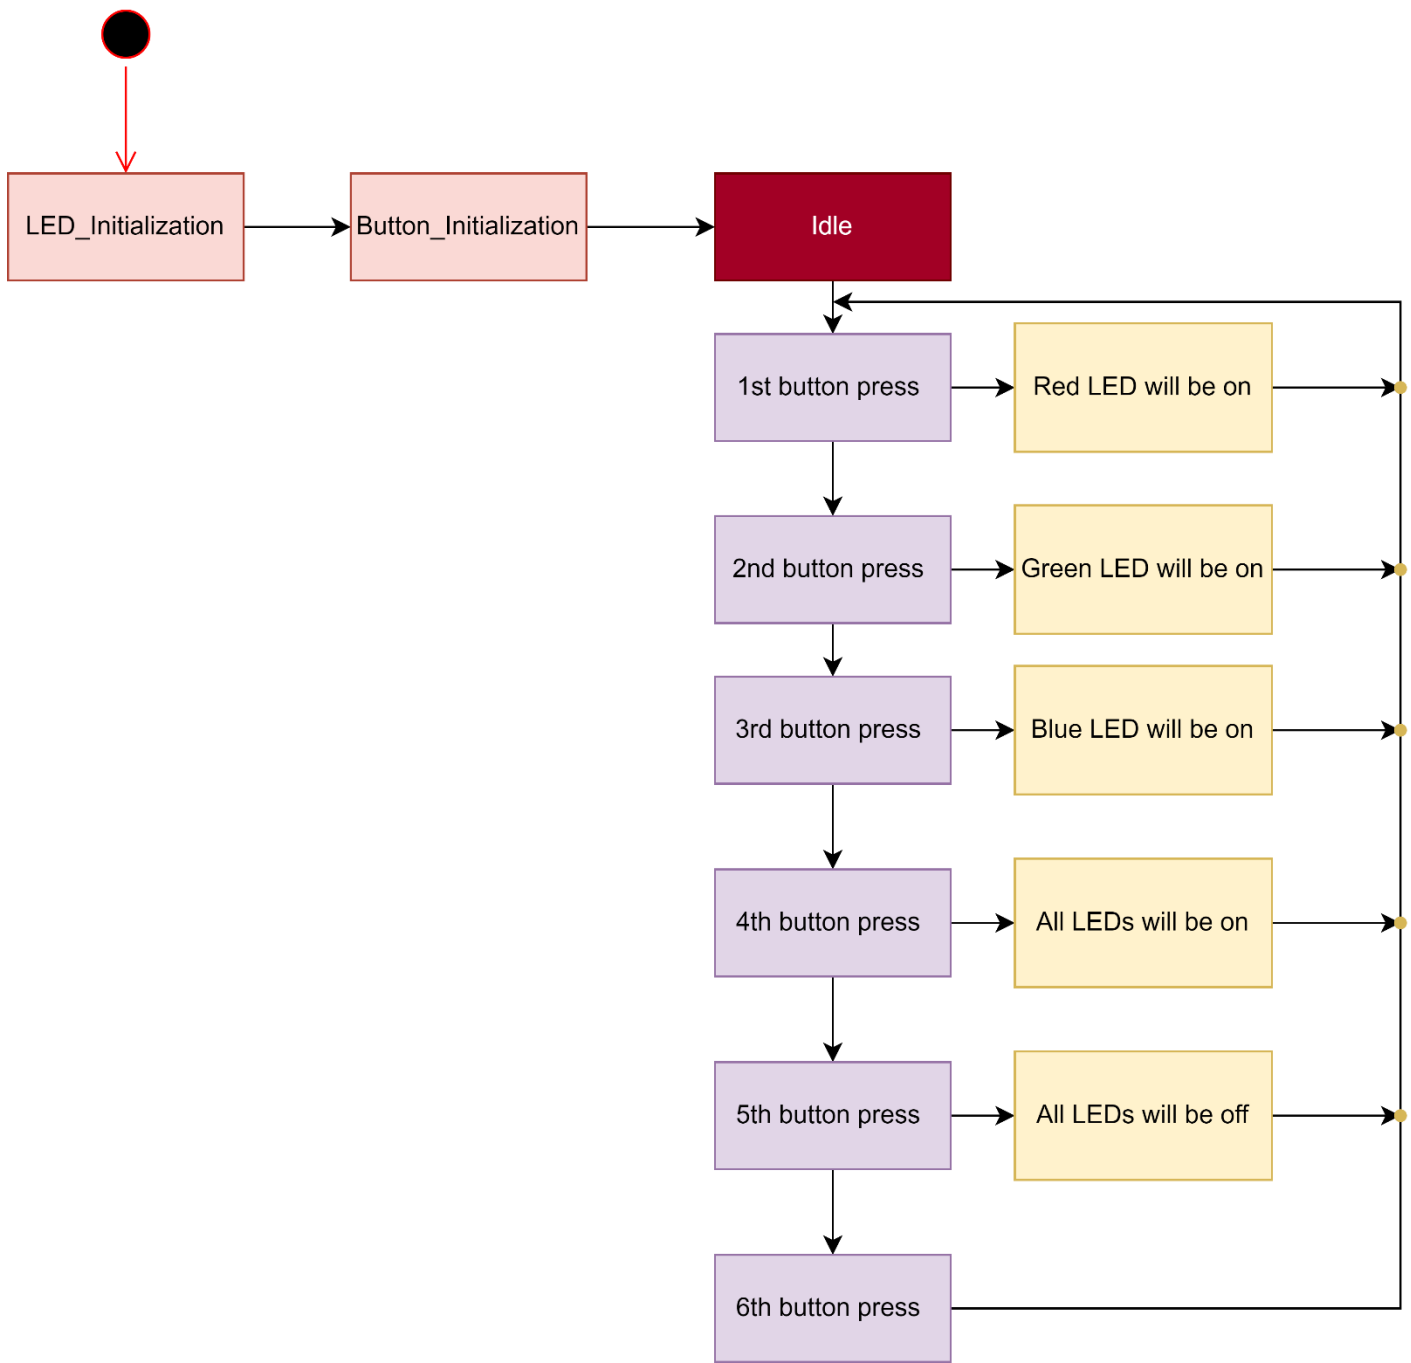

# Low Level Design

## Flowchart

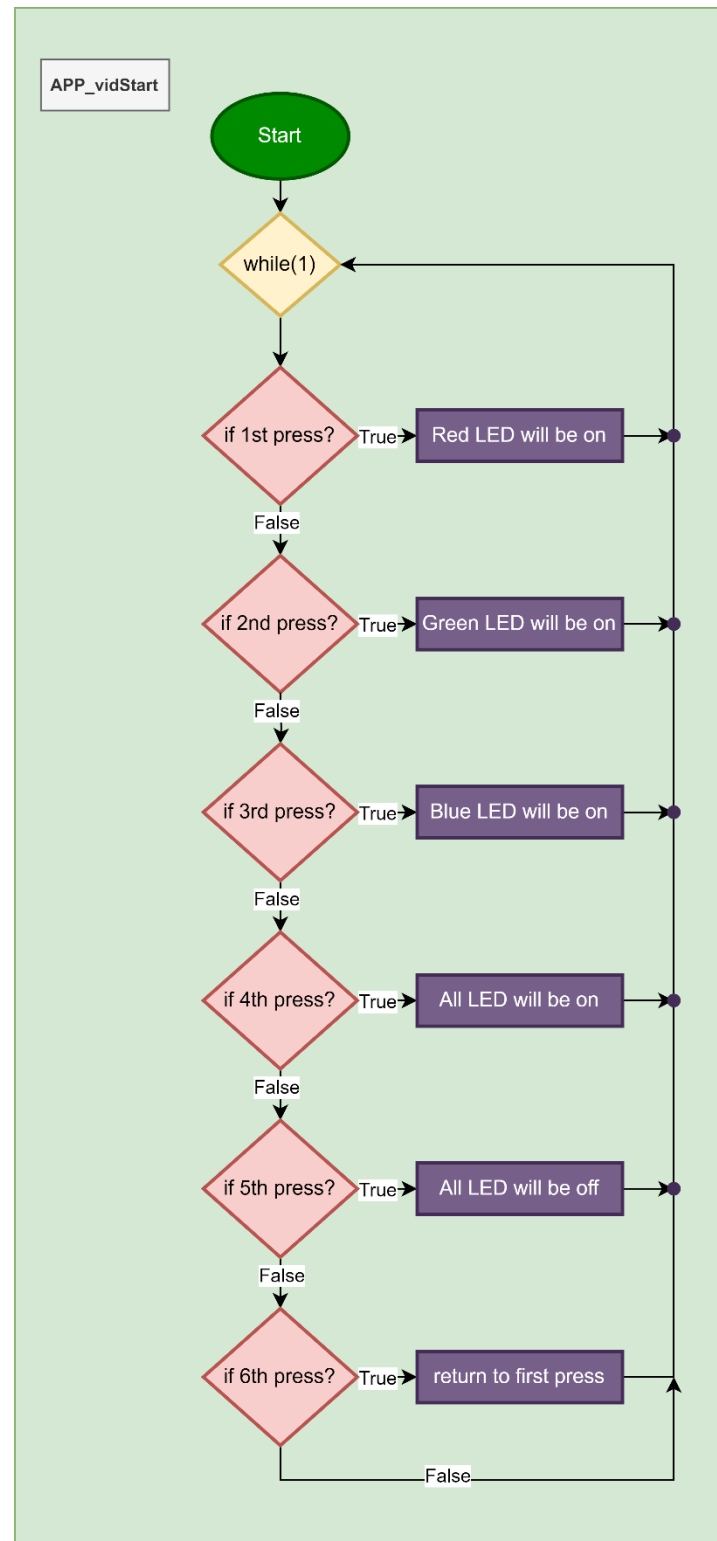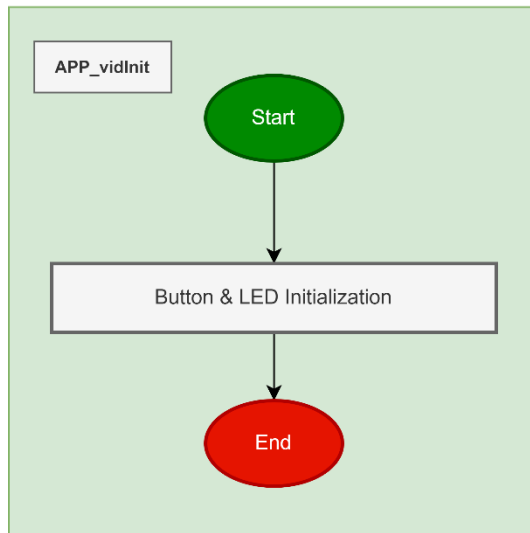**APP**



# HAL

## Button module

HButton\_Init

Start

Intialize button as Input

End





HButton\_getPinVal

Start

Get Button Status

End


## HLED module

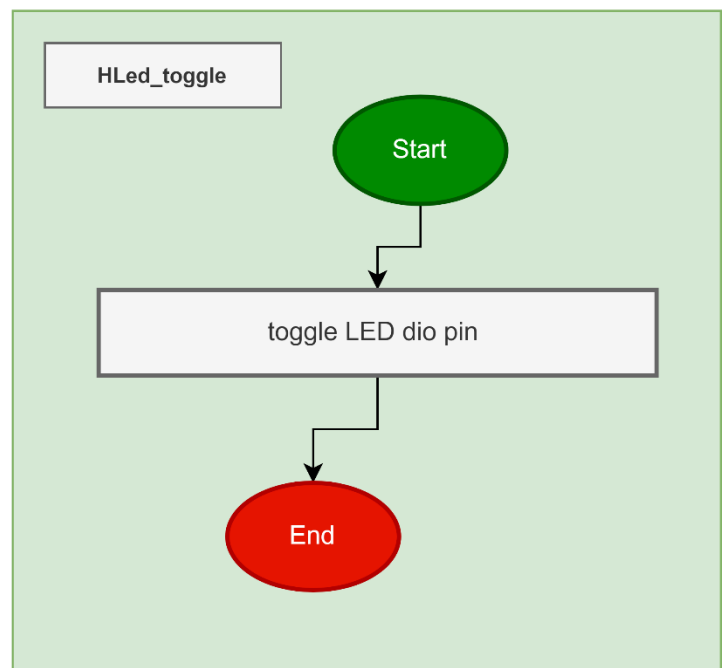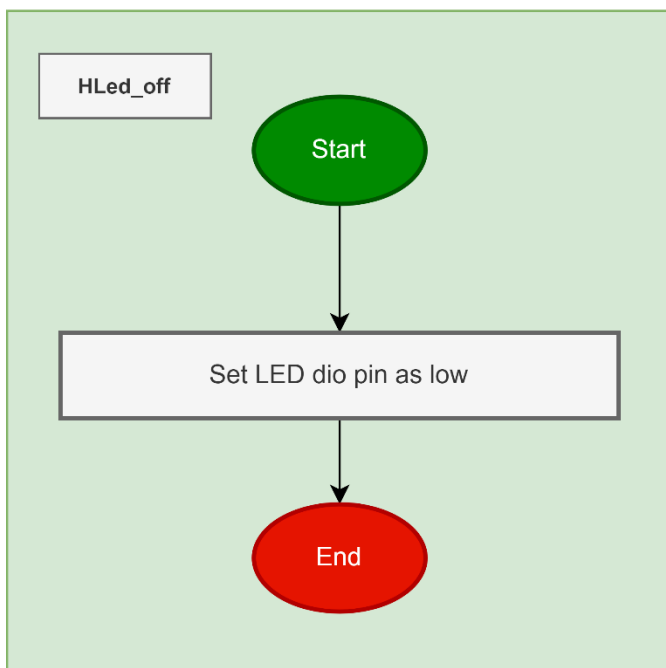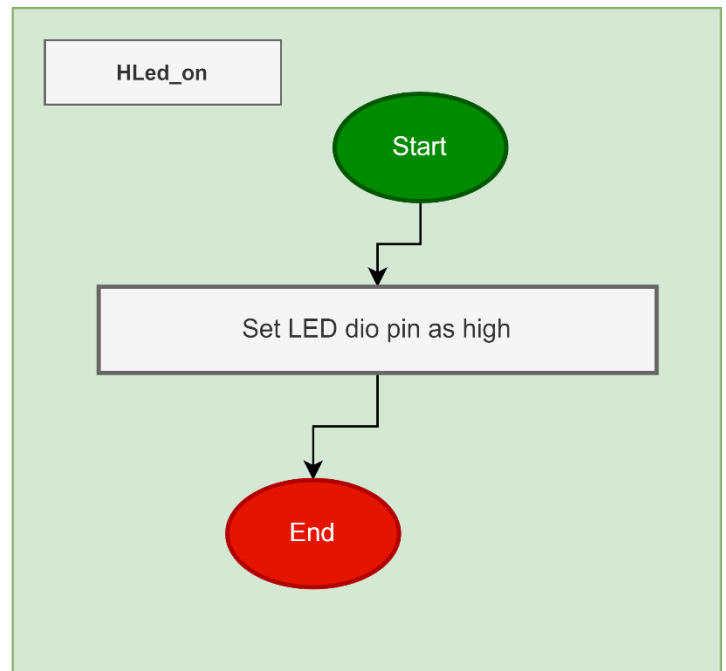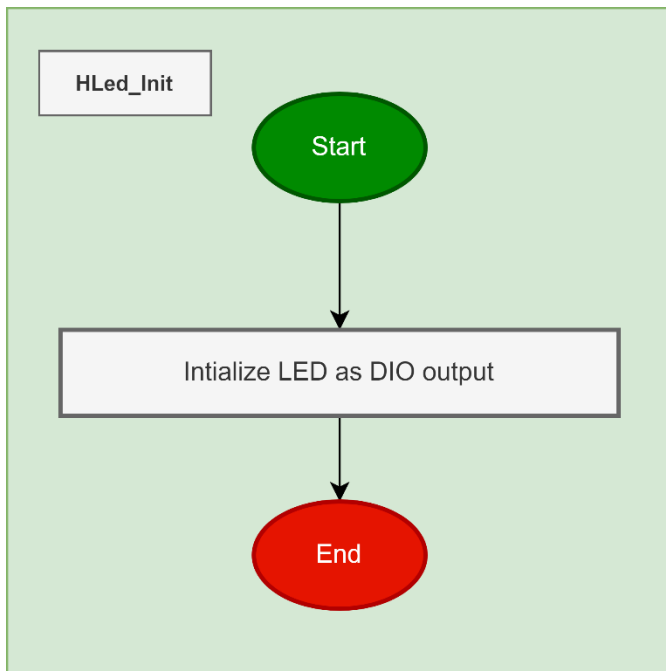



## MCAL

### GPIO module


#### MGPIO\_u8Init

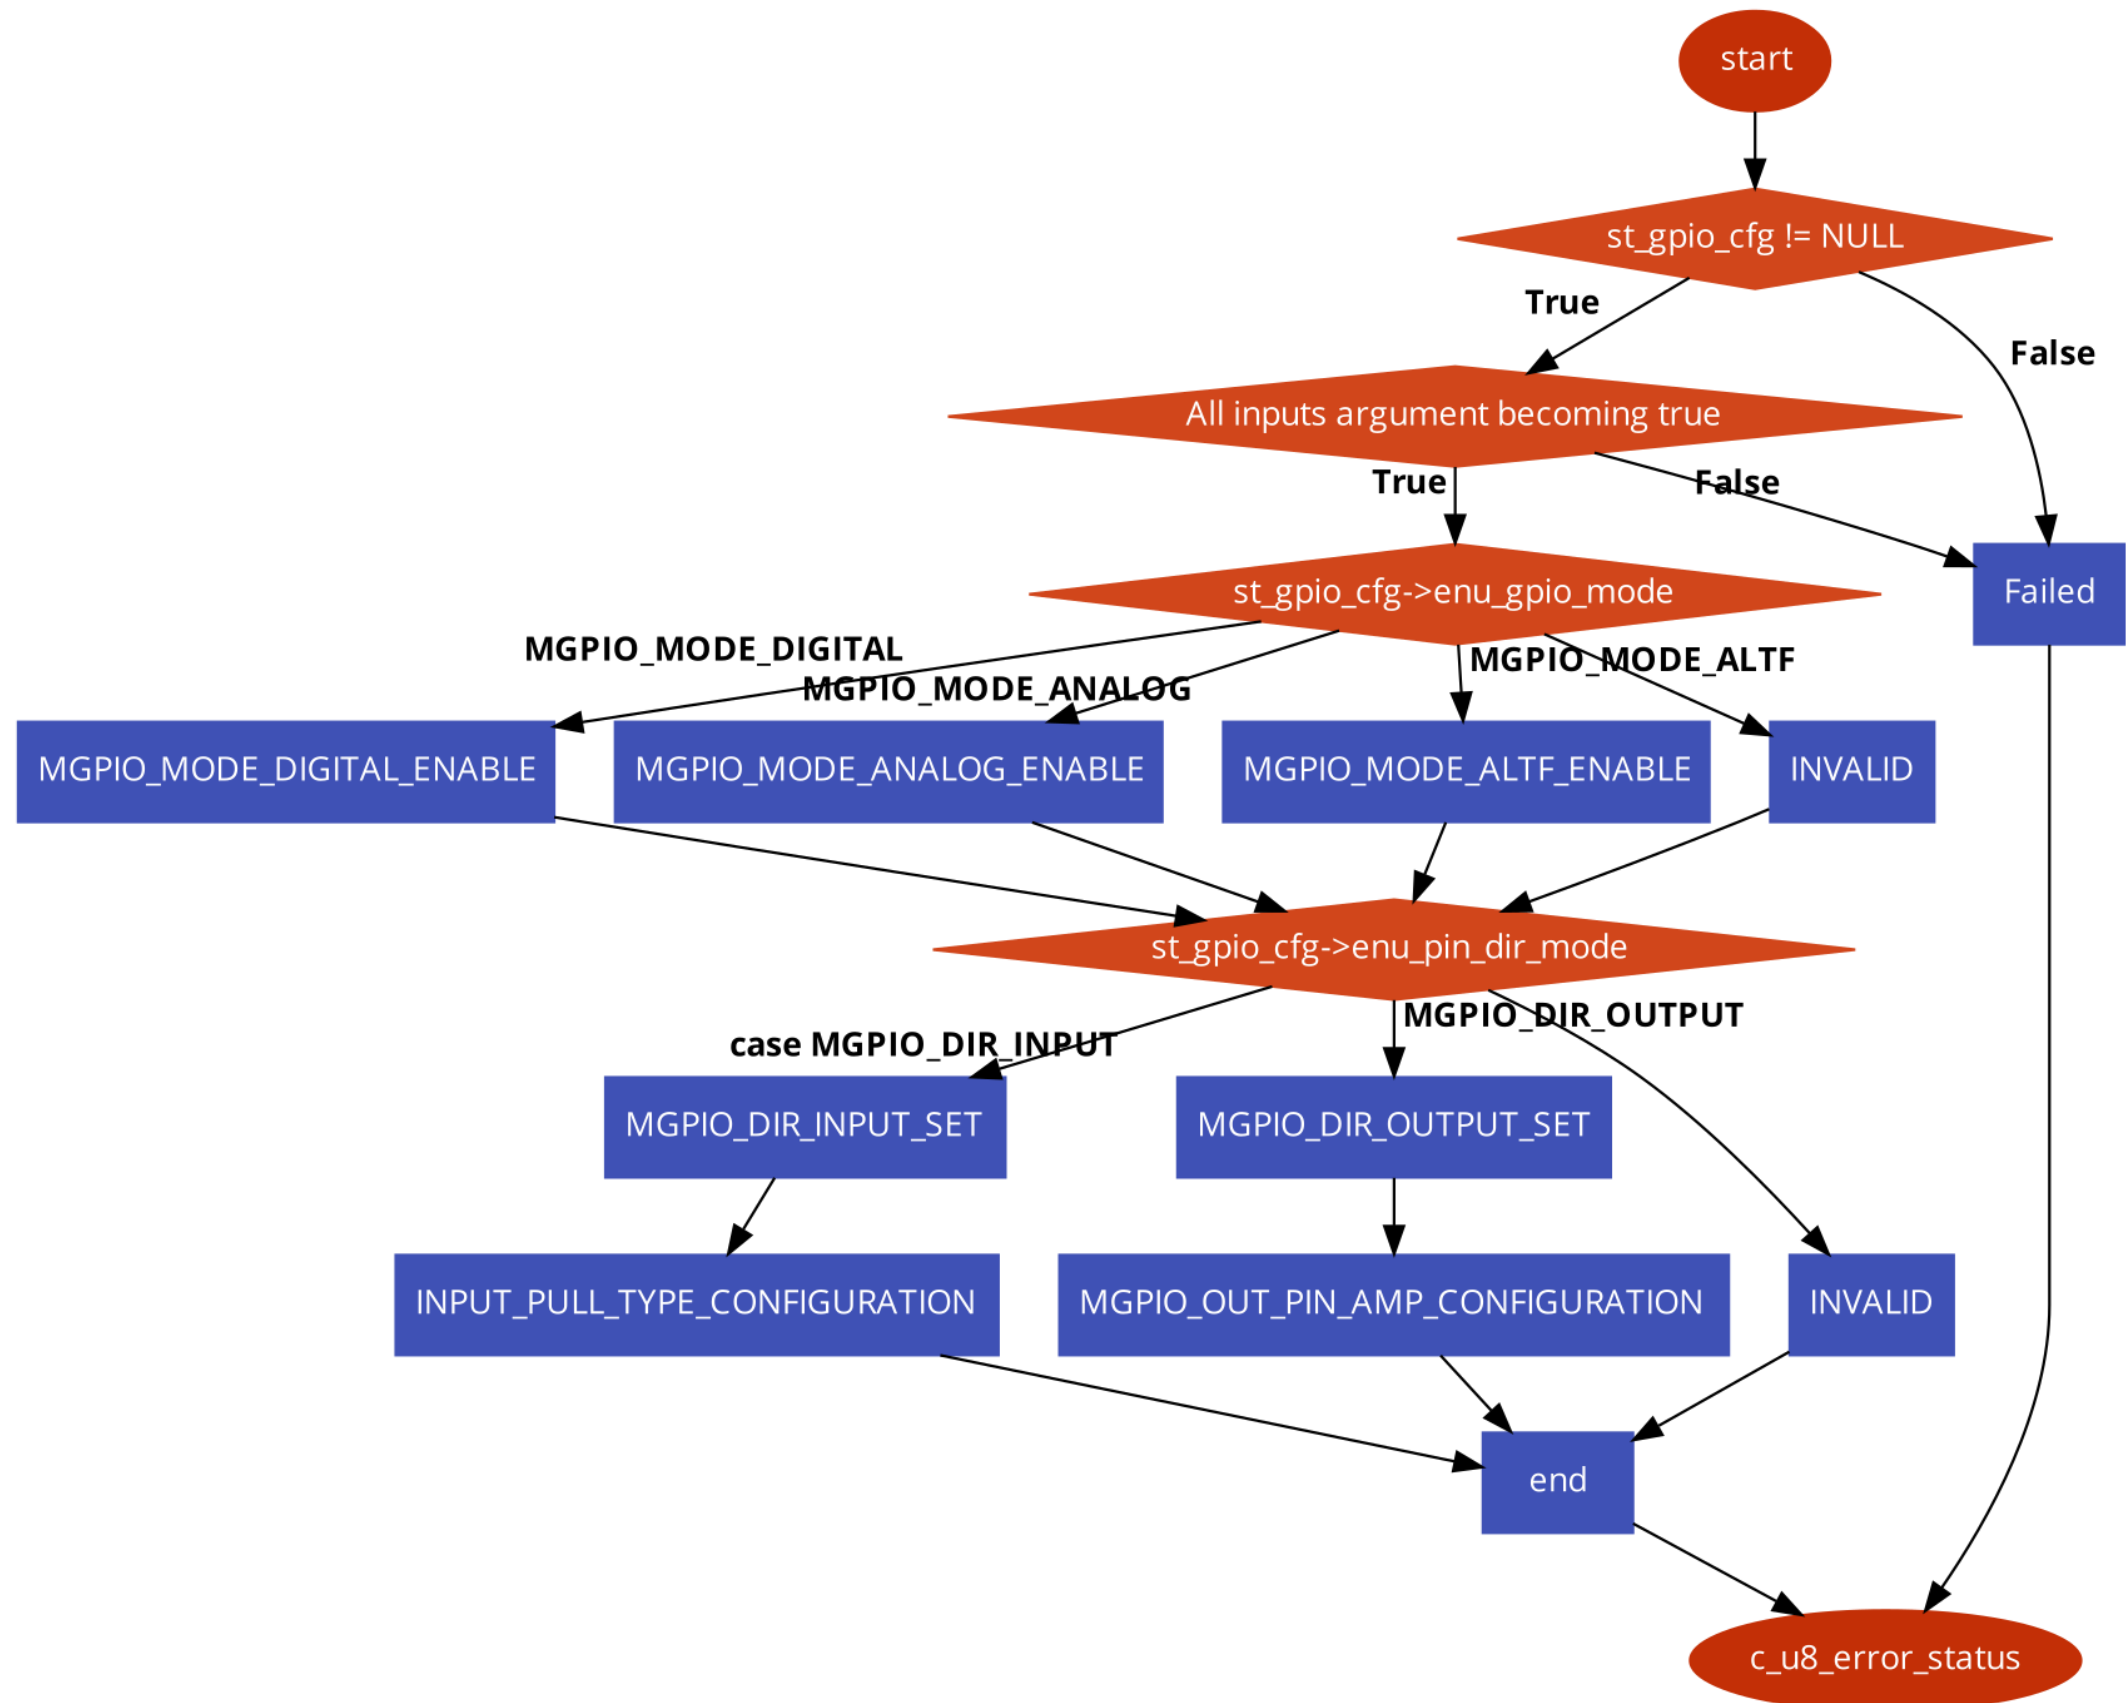


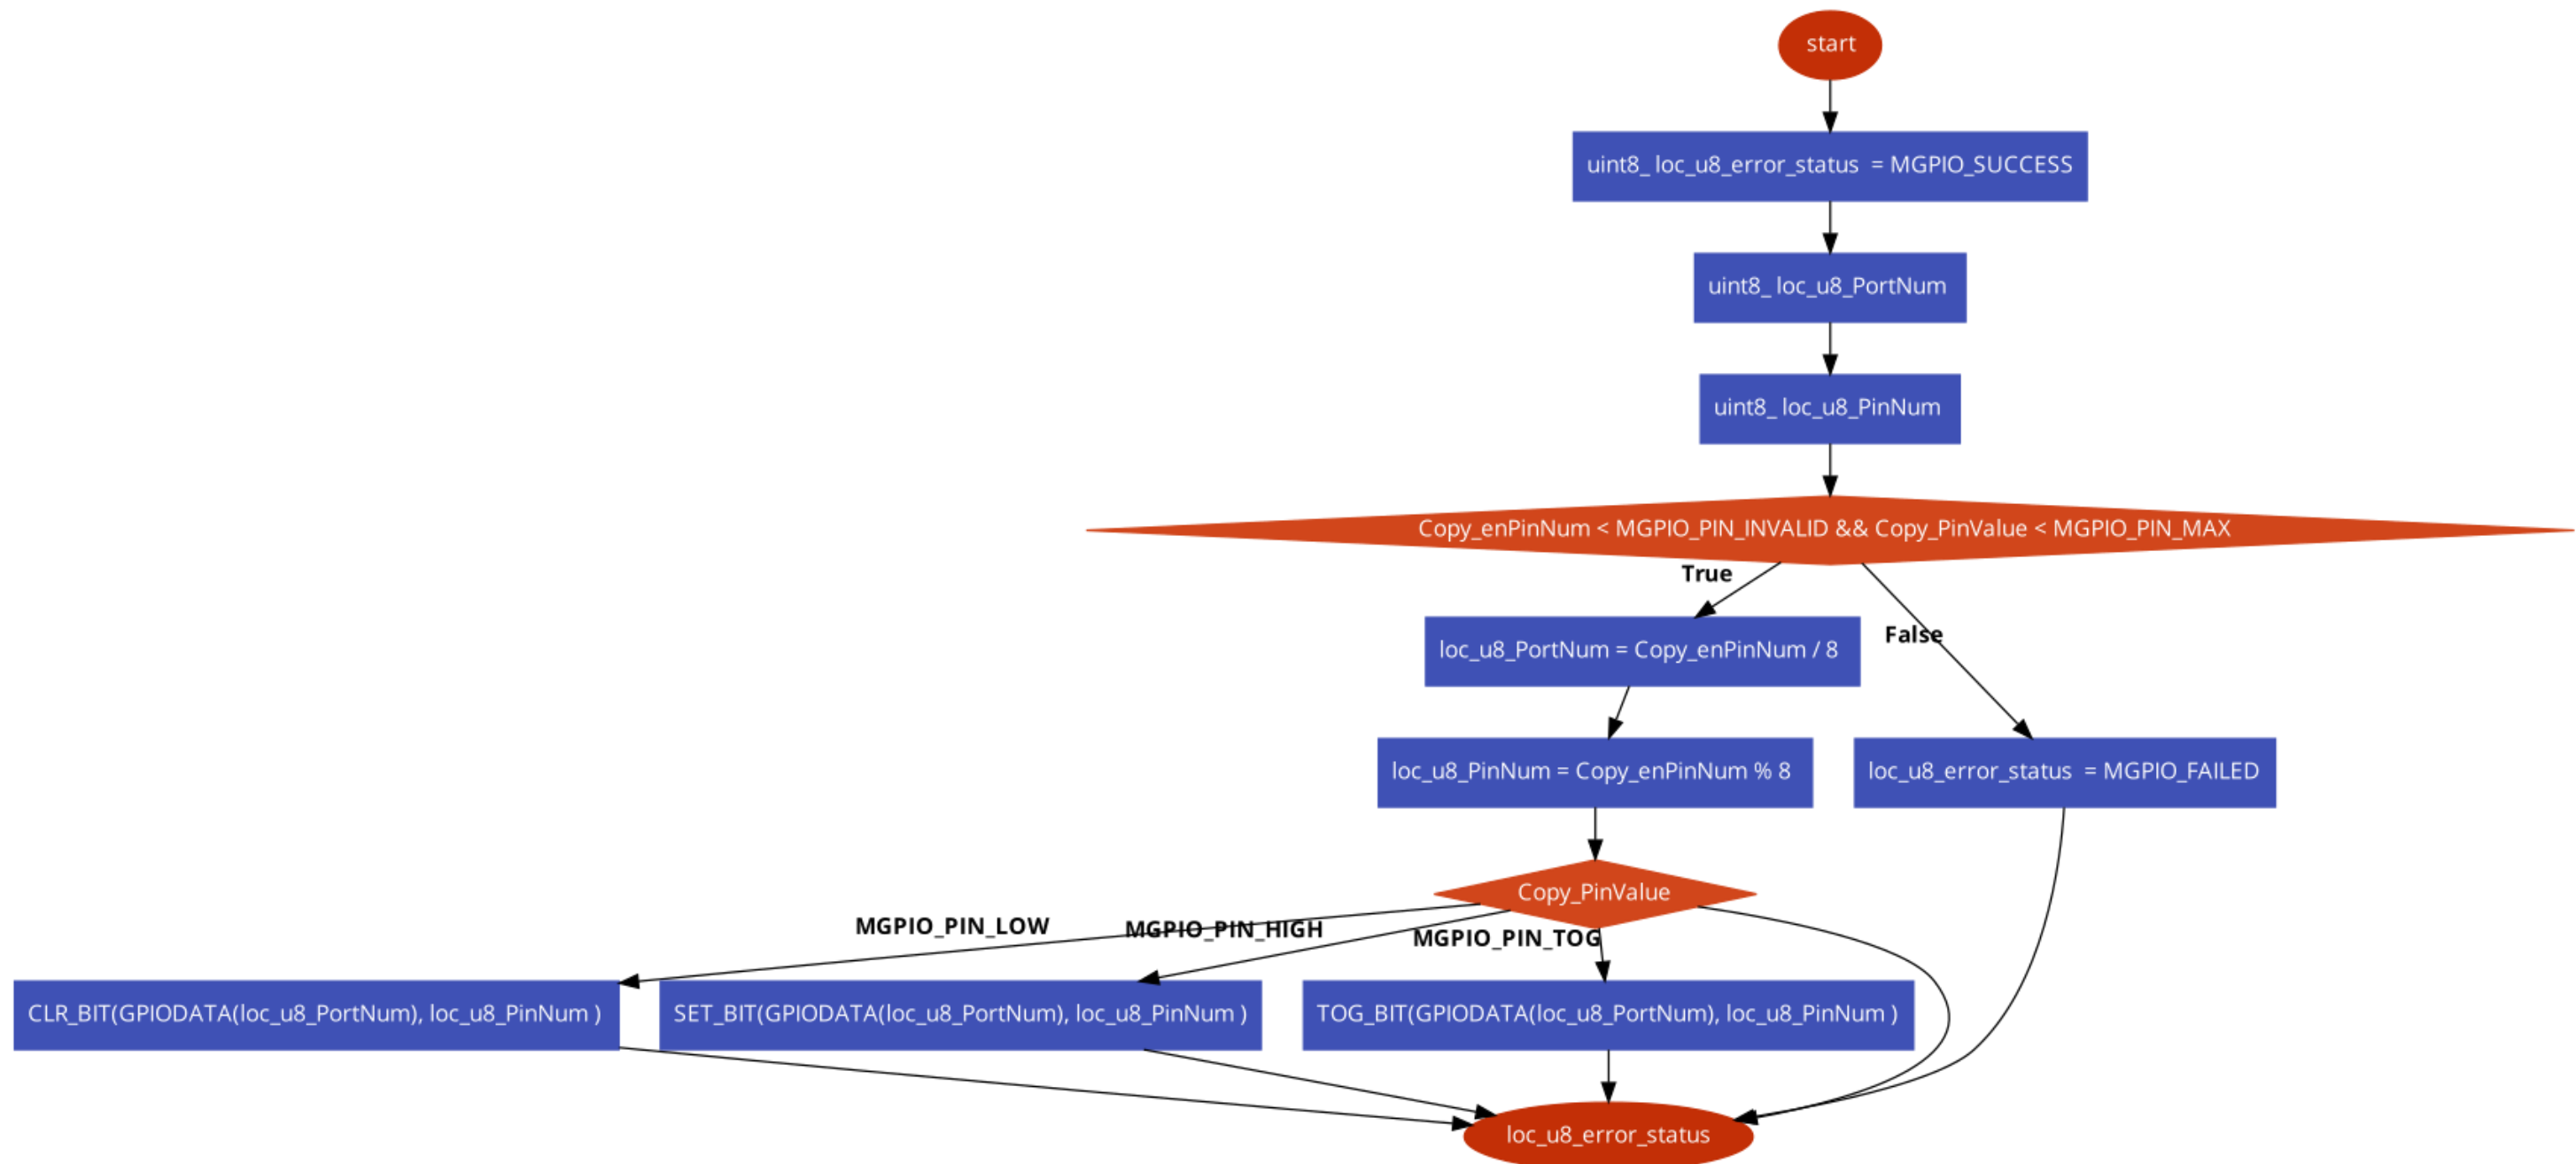
**MGPIO\_u8SetPinData**

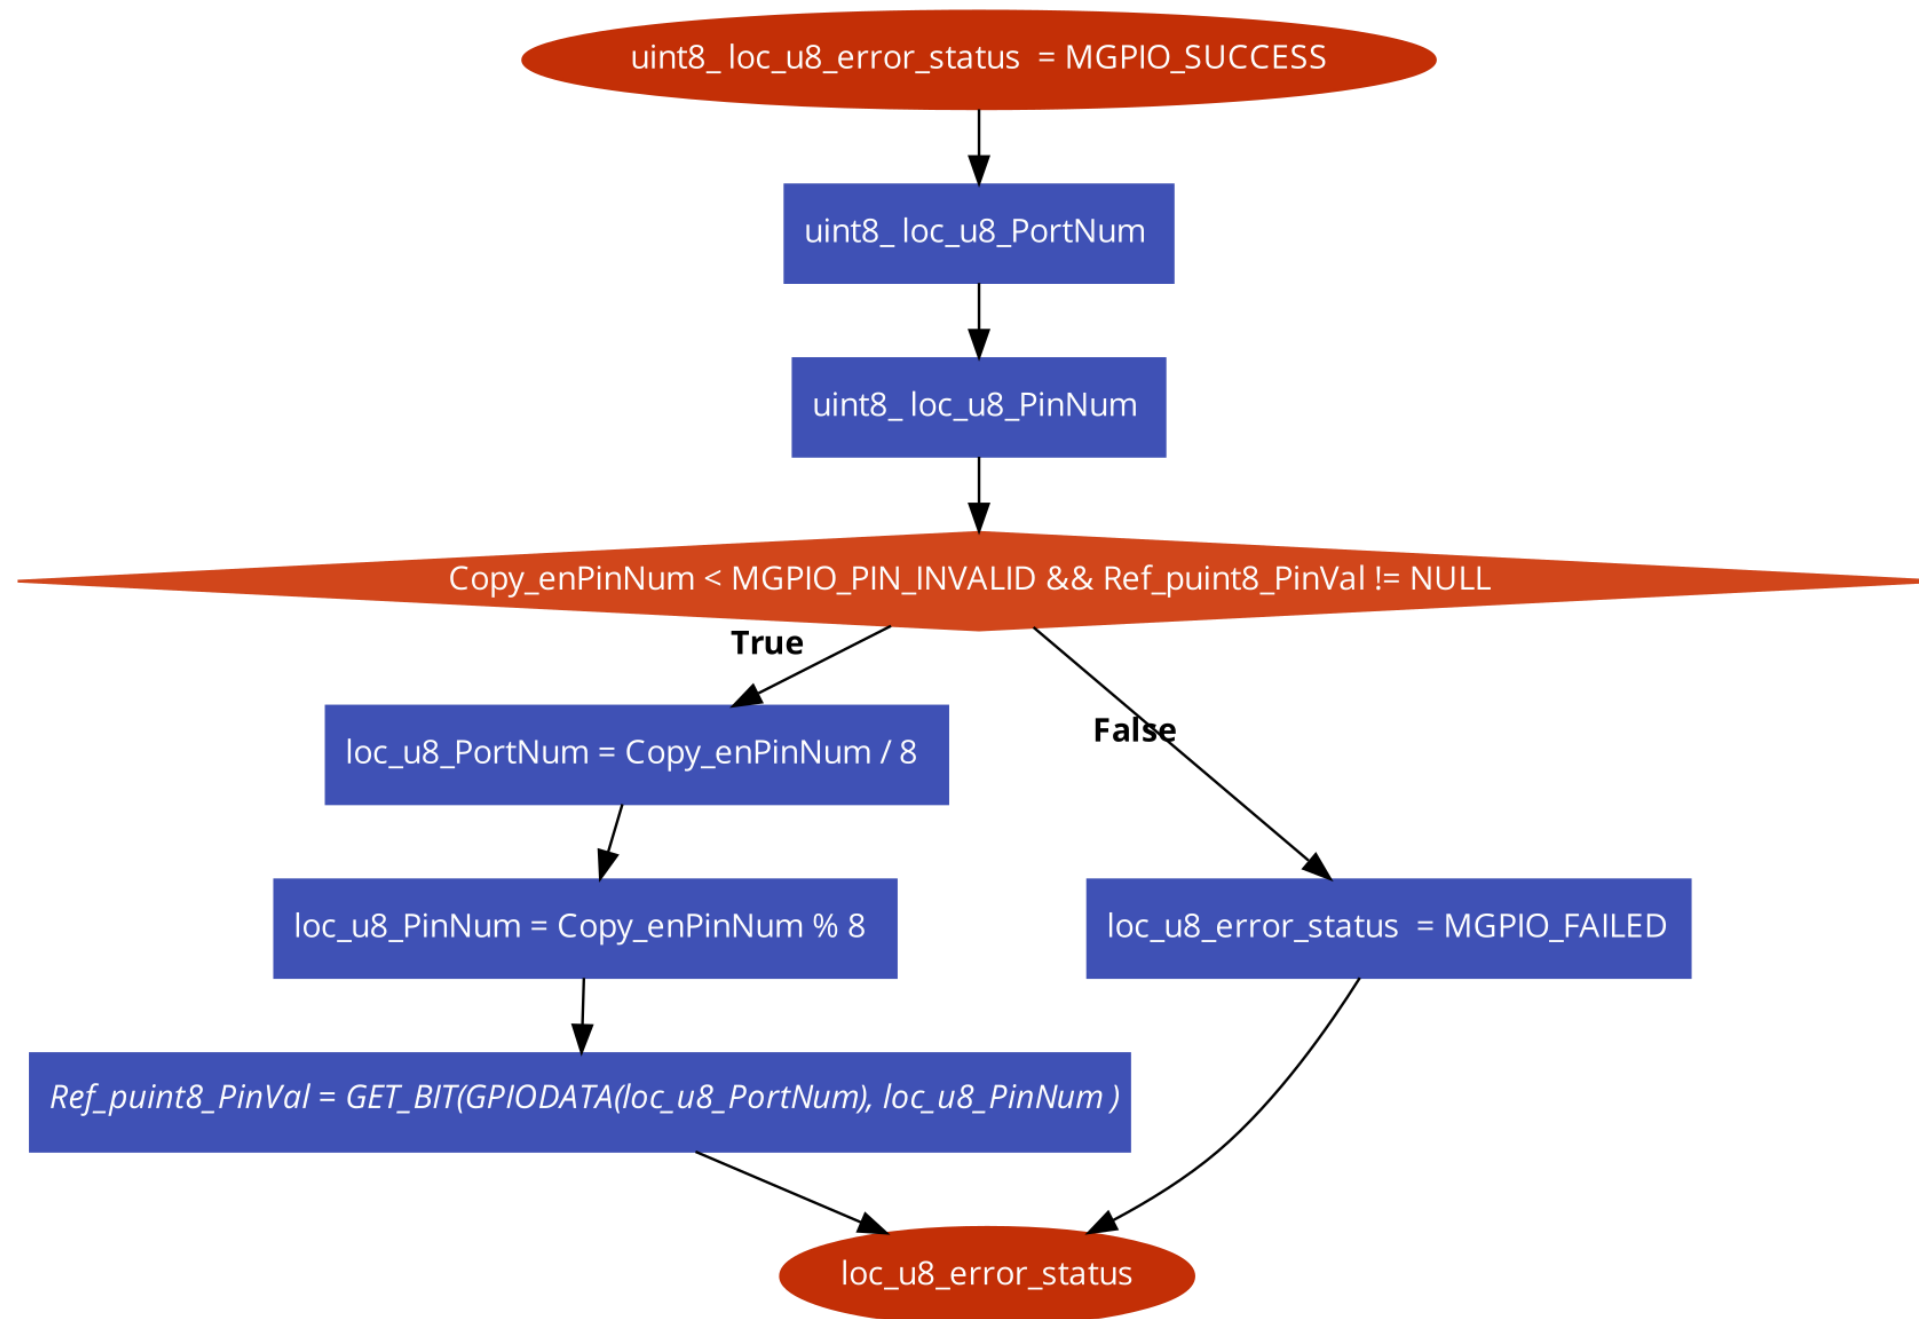**MGPIO\_u8GetPinData**

## MGPIO\_u8IRQEnable

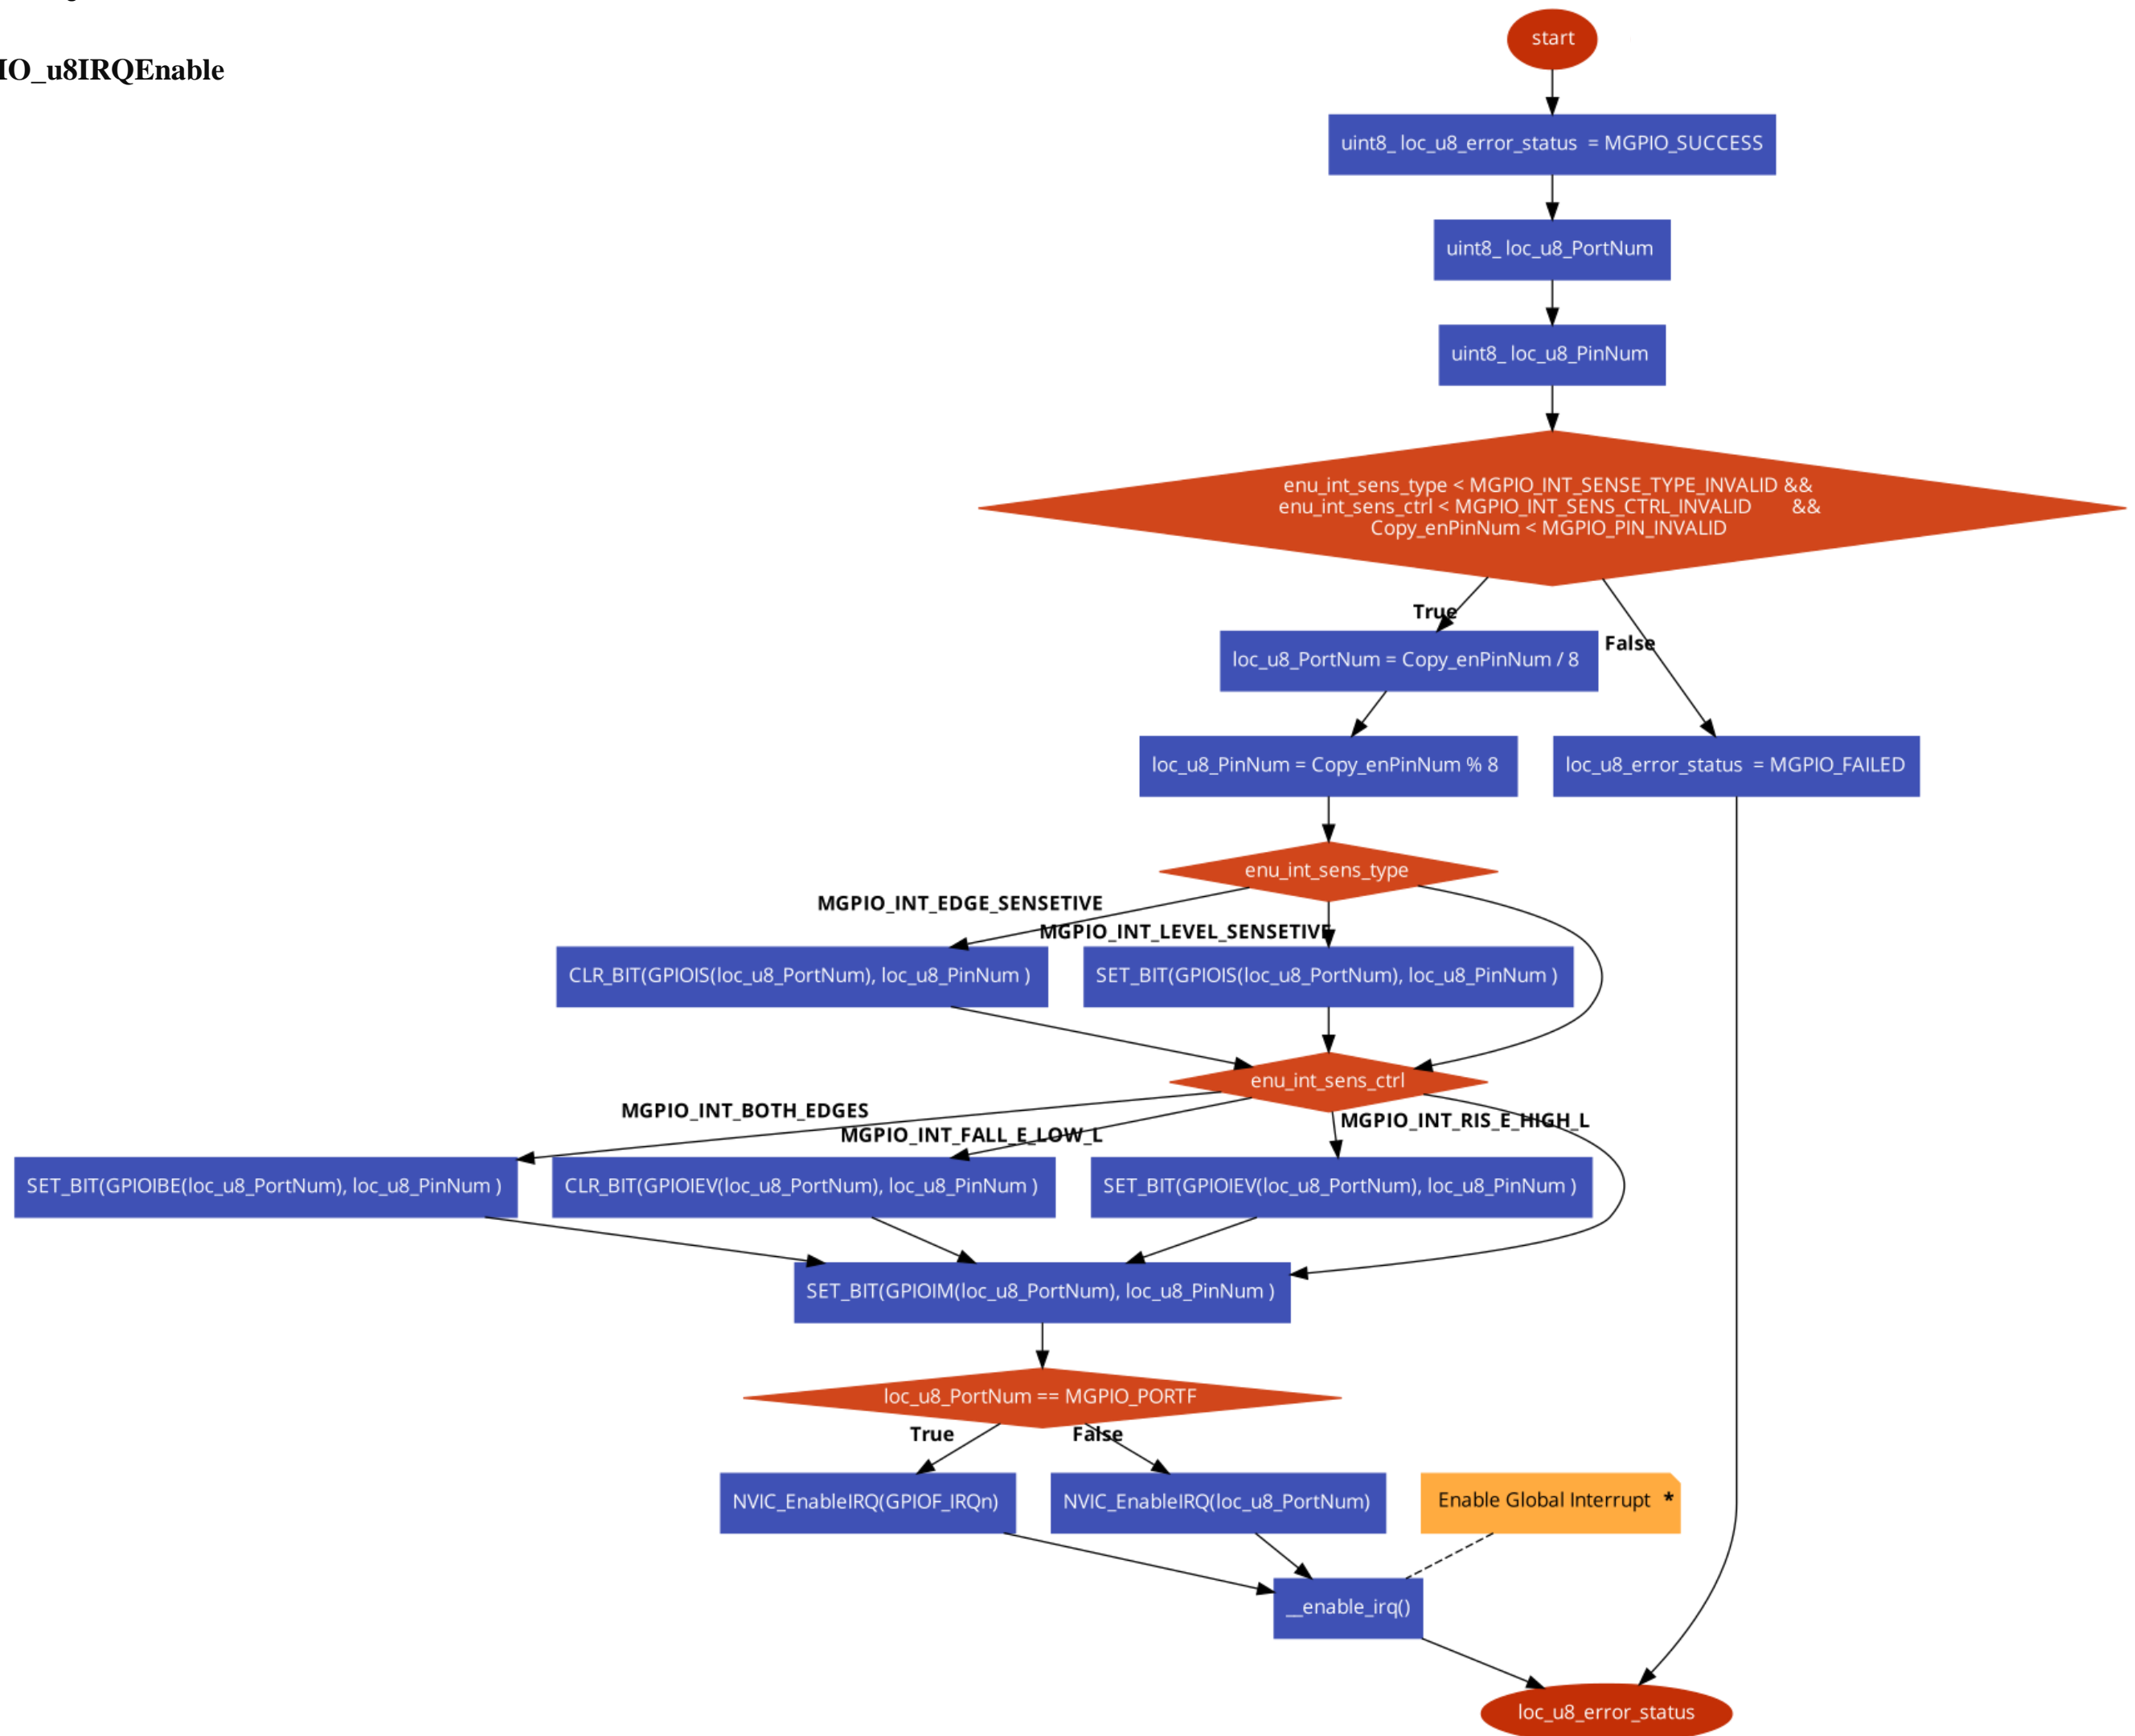

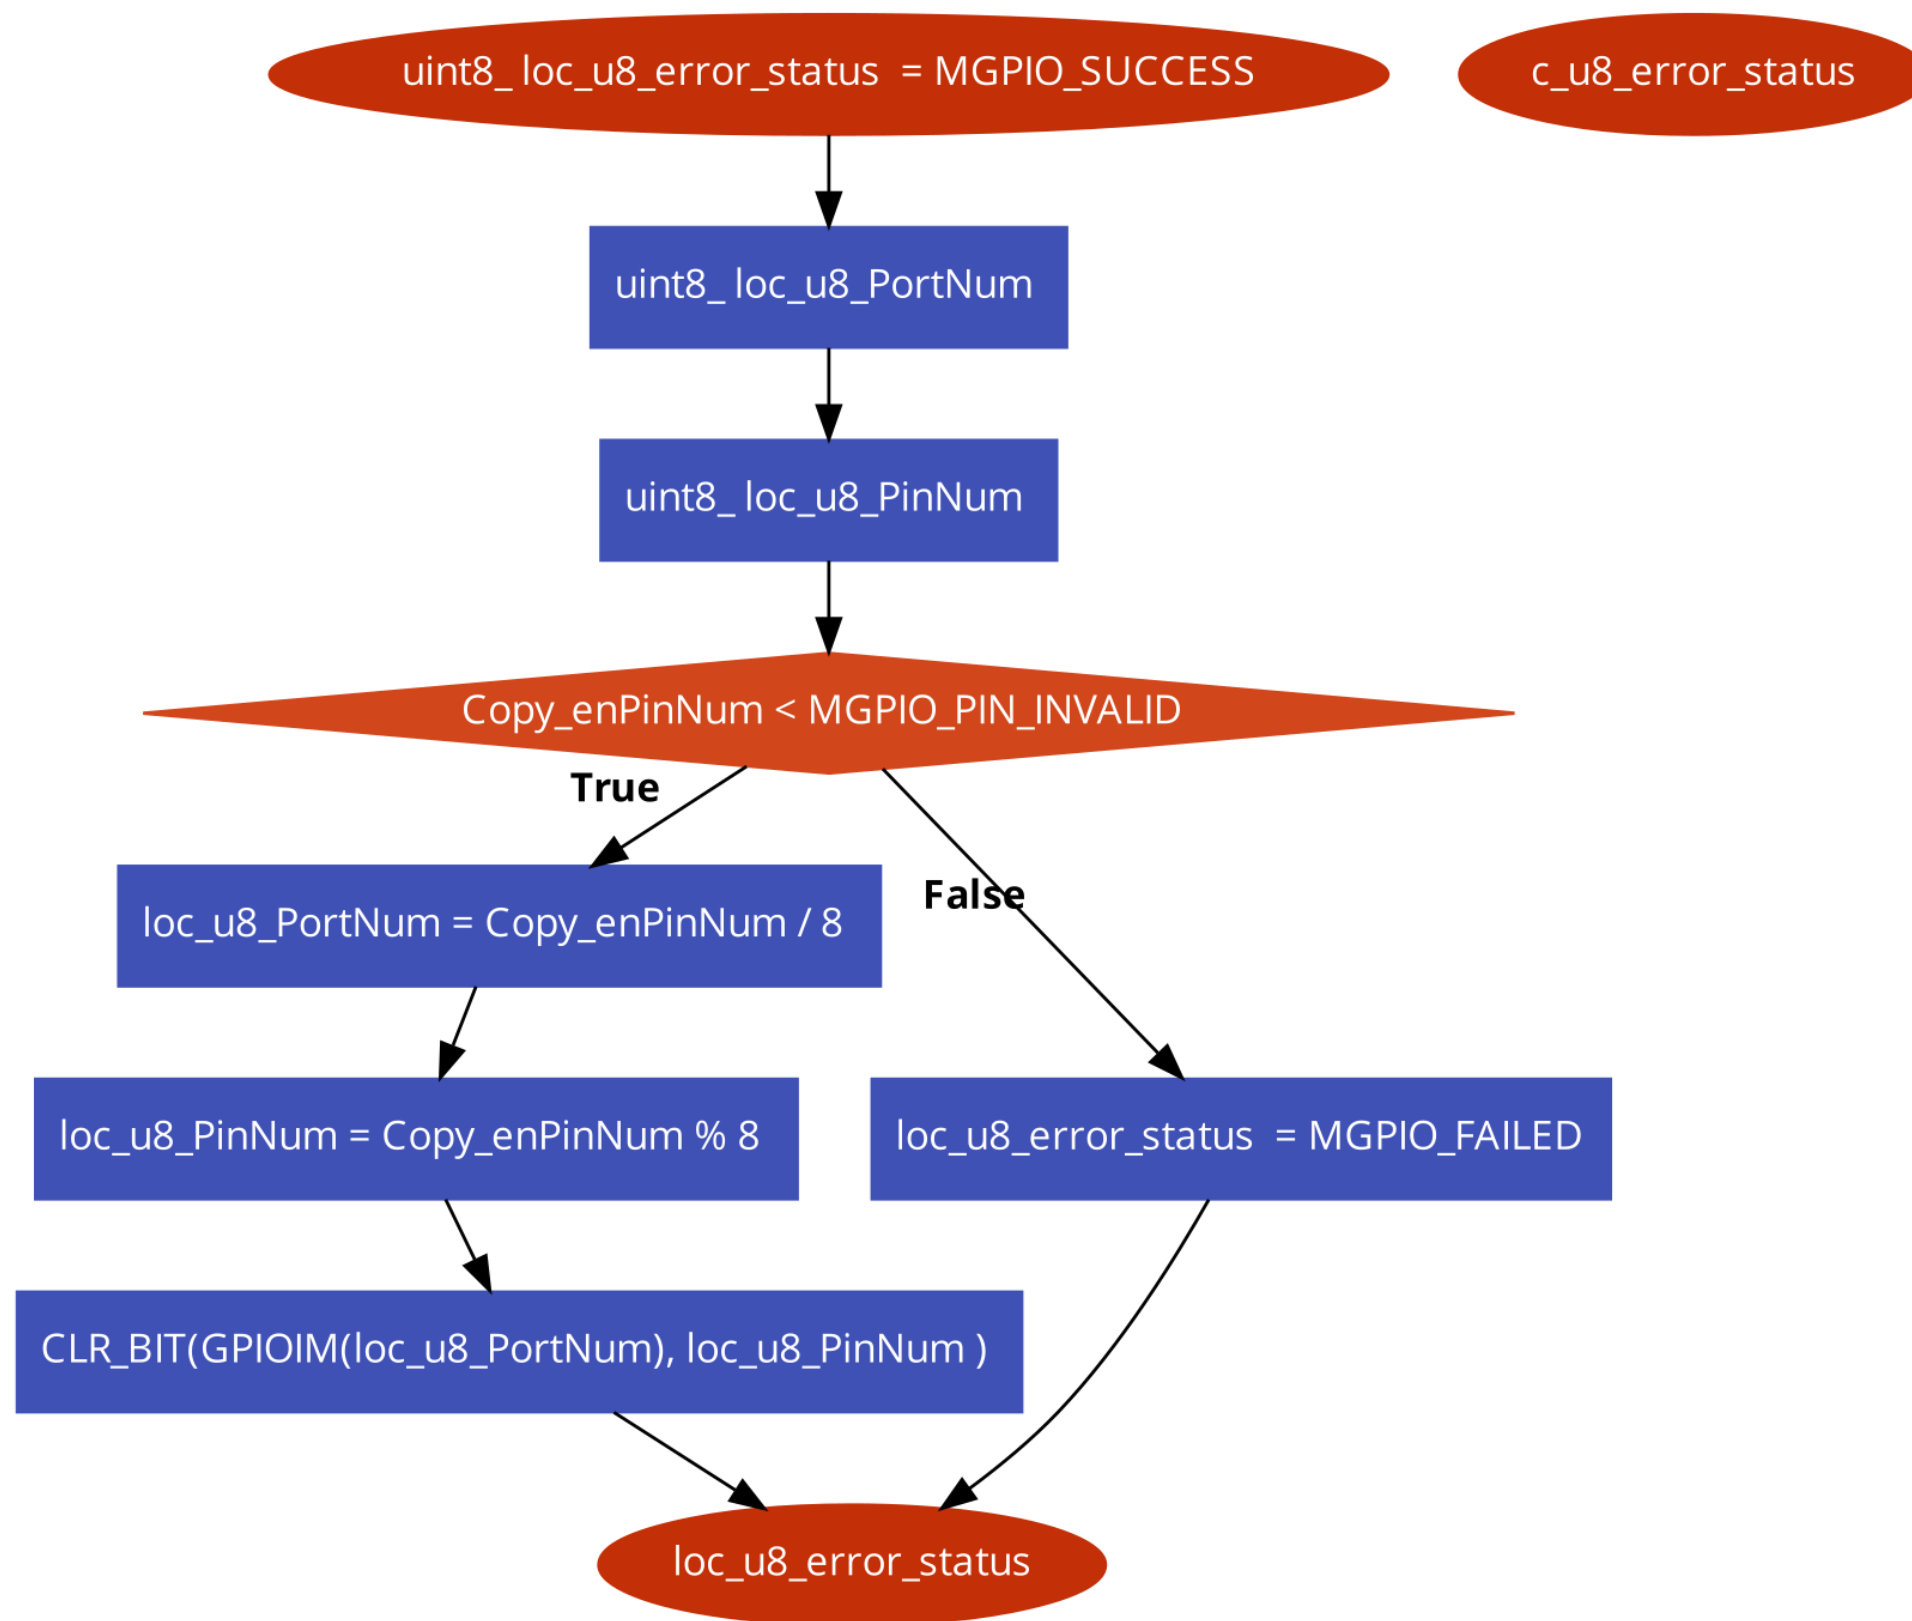**MGPIO\_u8IRQDisable**

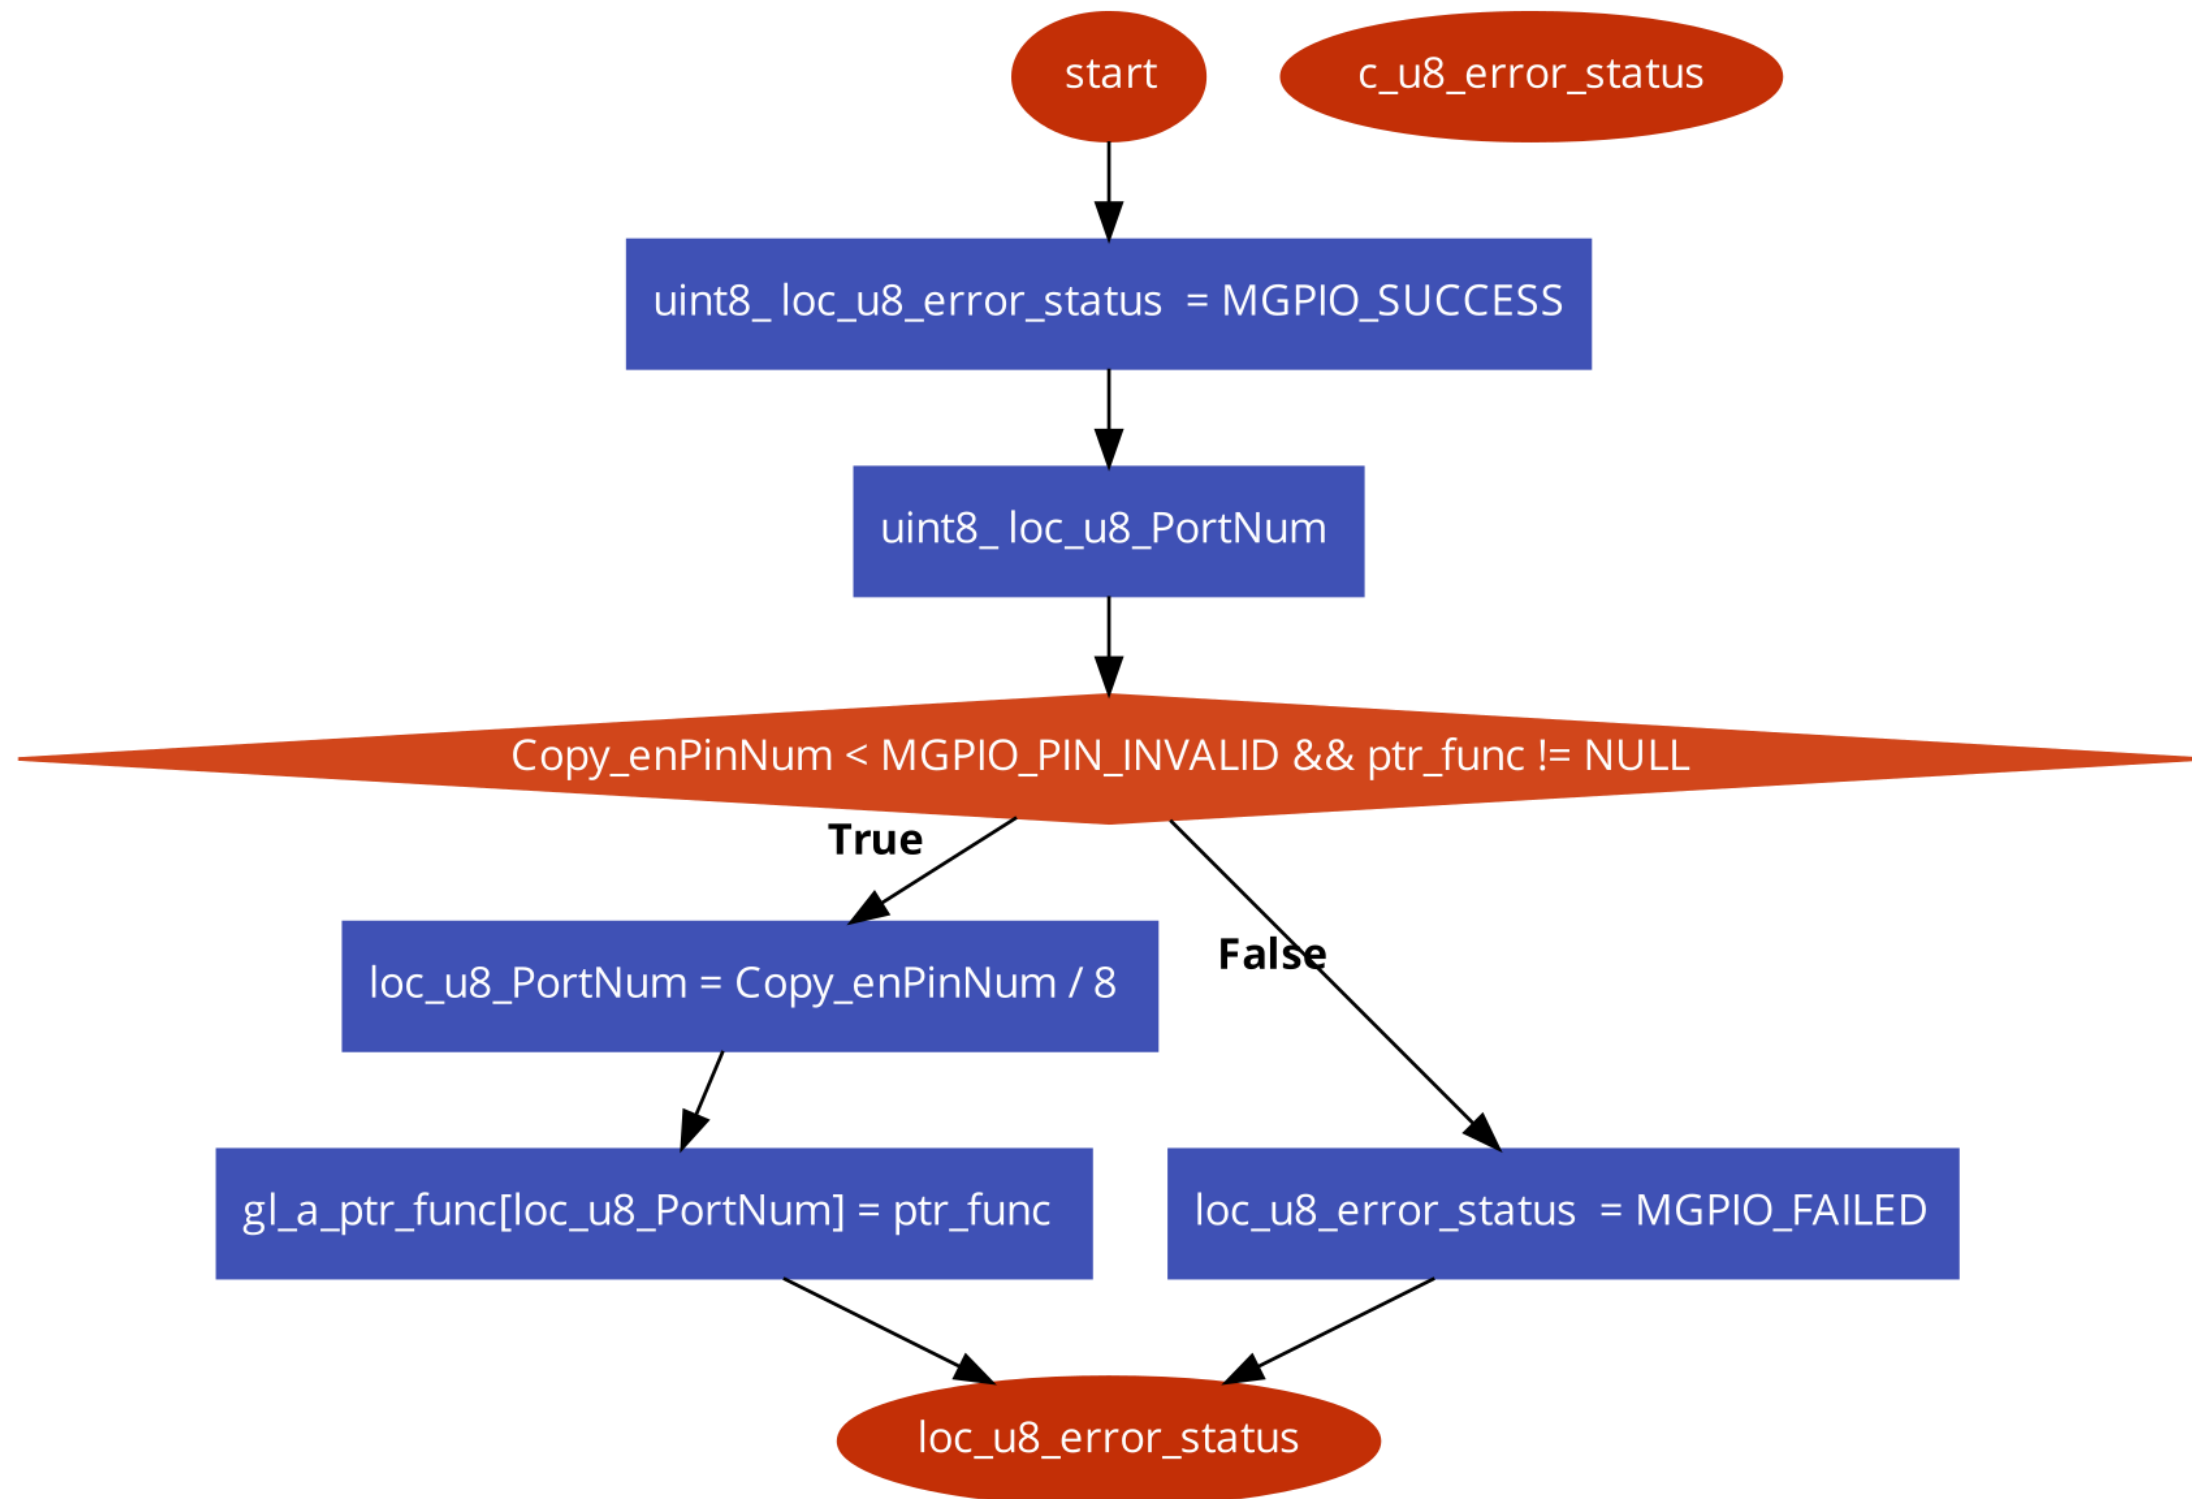**MGPIO\_u8SetCallBack**



Pre-compiling configuration

MCAL

MGPIO module

GPIO\_BUS\_TYPE

Name	GPIO_BUS_TYPE
Type	MACRO
Description	Define GPIO_bus
Configuration	<i>GPIO_APB</i>
	<i>GPIO_AHB</i>
Found in	mgpio_private.h

# Linking Configuration

## MCAL

### MGPIO module

st\_gpio\_cfg\_t

Name	st_gpio_cfg_t	
Type	struct	
Description	GPIO pin configuration	
Members	enu_pin	
	enu_gpio_mode	
	enu_pin_dir_mode	
	un_gpio_conf	enu_gpio_amp_mode
		u8_input_pull_type
Found in	mgpio_Interface.h	

enu\_pin\_t

Name	enu_pin_t
Type	enum
Description	GPIO pin Selection
Configuration	<i>MGPIO_PINA_0 ~ MGPIO_PINA_7</i>
	<i>MGPIO_PINB_0 ~ MGPIO_PINB_7</i>
	<i>MGPIO_PINC_0 ~ MGPIO_PINC_7</i>
	<i>MGPIO_PIND_0 ~ MGPIO_PIND_7</i>
	<i>MGPIO_PINE_0 ~ MGPIO_PINE_7</i>
	<i>MGPIO_PINF_0 ~ MGPIO_PINF_7</i>
Found in	mgpio_Interface.h

enu\_gpio\_mode\_t

Name	enu_gpio_mode_t
Type	enum
Description	GPIO Mode Selection
Configuration	<i>MGPIO_DIR_INPUT</i>
	<i>MGPIO_DIR_OUTPUT</i>
	<i>MGPIO_DIR_INVALID</i>
Found in	mgpio_Interface.h

enu\_gpio\_amp\_mode\_t

Name	enu_gpio_amp_mode_t
Type	enum
Description	GPIO Ampere mode Selection
Configuration	<i>MGPIO_OPEN_DRAIN</i>
	<i>MGPIO_MAMP_2</i>
	<i>MGPIO_MAMP_4</i>
	<i>MGPIO_MAMP_8</i>
	<i>MGPIO_MAMP_INVALID</i>
Found in	mgpio_Interface.h

enu\_gpio\_int\_t

Name	enu_gpio_int_t
Type	enum
Description	GPIO Interrupt mode Selection
Configuration	<i>MGPIO_INT_ENABLE</i>
	<i>MGPIO_INT_DISABLE</i>
	<i>MGPIO_INT_INVALID</i>
Found in	mgpio_Interface.h

enu\_int\_sens\_type\_t

Name	enu_int_sens_type_t
Type	enum
Description	GPIO Ampere mode Selection
Configuration	<i>MGPIO_INT_EDGE_SENSEITIVE</i>
	<i>MGPIO_INT_LEVEL_SENSEITIVE</i>
	<i>MGPIO_INT_SENSE_TYPE_INVALID</i>
Found in	mgpio_Interface.h

enu\_int\_sens\_ctrl\_t

Name	enu_int_sens_ctrl_t
Type	enum
Description	GPIO Ampere mode Selection
Configuration	<i>MGPIO_INT_BOTH_EDGES</i>
	<i>MGPIO_INT_FALL_E_LOW_L</i>
	<i>MGPIO_INT_RIS_E_HIGH_L</i>
	<i>MGPIO_INT_SENS_CTRL_INVALID</i>
Found in	mgpio_Interface.h