

PHANTOM® OMNI™

USER GUIDE



Copyright Notice

©2003-2004. SensAble Technologies, Inc. All rights reserved.

Printed in the USA.

Except as permitted by license, no part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means electronic, mechanical, recording or otherwise, without prior written consent of SensAble Technologies.

Trademarks

FreeForm, FreeForm Concept, FreeForm Modeling, FreeForm Modeling Plus, FreeForm Mold, PHANTOM, PHANTOM Desktop, PHANTOM Omni, GHOST, 3D Touch, SensAble and SensAble Technologies are trademarks or registered trademarks of SensAble Technologies, Inc. Other brand and product names are trademarks of their respective holders.

Warranties and Disclaimers

SensAble Technologies does not warrant that this publication is error free. This publication could include technical or typographical errors or other inaccuracies. SensAble may make changes to the product described in this publication or to this publication at any time, without notice.

Questions or Comments

If you have any questions for our technical support staff, please contact us at support@sensable.com. You can also phone 1-888-SENSABL (U.S.A. only) or 1-781-937-8315 (International).

If you have any questions or comments about the documentation, please contact us at documentation@sensable.com.

Corporate Headquarters

SensAble Technologies, Inc.

15 Constitution Way

Woburn, MA 01801

Phone: 1-888-SENSABL (U.S.A. only) or 1-781-937-8315 (International)

E-mail: support@sensable.com

Internet: <http://www.sensable.com>

Last Updated - 30 March, 2004 8:05 pm

P/N - 02495 R1

Contents

	Preface	i
Chapter 1	Getting Acquainted	1
	Shipping Box Contents	1
	The PHANTOM Omni Haptic Device	2
	Proper Handling and Positioning of the PHANTOM Omni ..	3
Chapter 2	Installing the PHANTOM Omni Device	7
	System Requirements	7
	Installing the PHANTOM Device Drivers	8
	Connecting the PHANTOM Omni Device	9
Chapter 3	Using the PHANTOM Omni Device	13
	Working in 3D Space	13
	Physical Limits of the Device	13
	Appendix A: Customer Support	17
	Appendix B: Troubleshooting	19
	Appendix C: Regulatory Notices	23
	Appendix D: Declaration of Conformity	25
	Appendix E: Configuring Multiple Devices	27
	Appendix F: PHANTOM Omni Packaging Instructions	29
	Appendix G: PHANTOM Omni Specifications	31

Preface

About This Guide

The PHANTOM® Omni™ User Guide describes the process of installing the required device drivers for your new PHANTOM Omni haptic device and connecting the hardware. You will also find information on how to use the device.

We've worked extensively to ensure that the PHANTOM Omni device and device drivers install and work smoothly. If you experience any problems in the installation or use of your device, please contact technical support as indicated in Appendix A of this document. Your feedback and input are essential! Please do not hesitate to contact us with technical questions and suggestions for improvement.

How This Guide Is Organized

This guide is divided as follows:

Chapter 1, Getting Acquainted, describes the PHANTOM Omni device and other items that were shipped with the device.

Chapter 2, Installing the PHANTOM Omni Device, describes how to install the software necessary to run this product on PCs under Windows® 2000 or Windows XP and how to connect the PHANTOM Omni device to your computer.

Chapter 3, Using the PHANTOM Omni Device, describes how to work with the device and introduces you to the physical limits in the device's range of motion.

Additionally, there are several appendices including how to contact customer support and information for troubleshooting your device.

Typographical Conventions

This guide uses the following typographical conventions:

Convention	Description	Example
<i>Italics</i>	First use of a new term; reference to another document or file.	See the <i>User Manual</i> .
<Italics>	A variable	<Installed Directory>/files.
Bold	Keywords, actual user input, directory paths or examples.	Click Ok .
Greater Than (>)	Indicates a menu pick.	Tools > Options
Courier	Identifies code samples.	
Note, Warning, Important	Calls out important information.	

1

Getting Acquainted

This chapter describes the following:

- The contents of the shipping box
- The PHANTOM Omni haptic device
- The proper handling of the device
- The other contents that were shipped with the device

Shipping Box Contents

In your shipping box you should find the following:

- The PHANTOM® Omni™ 3D Touch device.
- The PHANTOM Omni Kit: The kit contains this User Guide, a CD-ROM containing the PHANTOM Device Driver and electronic documentation.
- FireWire® cable: This IEEE-1394 compliant six pin to six pin FireWire cable is used to connect the PHANTOM Omni device to the IEEE-1394 compliant six pin FireWire port on your computer. The cable must be used with the two attached ferrite beads — please do not remove them.
- Two extra ferrite beads to be used on an optional user-supplied second FireWire cable.
- Universal Power Supply: The power supply can be used on any standard circuit (an AC input of 50-60 Hz and 100-240 VAC), using the supplied power cord. The power supply must be used with the attached ferrite bead - please do not remove it.
- Power Cord: The power cord connects the Universal Power Supply to the wall outlet.

- **Wrist Rest:** The gel-filled wrist rest helps to support your wrist and hand while using the PHANTOM Omni.

If any items are missing, please call SensAble Technologies at +1-888-SENSABL (US only) or +1-781-937-8315 (US and outside the US).

Important Do NOT throw away the packaging materials. If for any reason you need to ship the device in the future, you will want to reuse these materials to reduce the risk of damage to the device. For instructions on how to properly pack the device see Appendix F: “PHANTOM Omni Packaging Instructions”.

The PHANTOM Omni Haptic Device

The SensAble Technologies PHANTOM product line of haptic devices makes it possible for users to touch and manipulate virtual objects. The PHANTOM Omni model is the most cost-effective haptic device available today. Portable design, compact footprint, and IEEE-1394 FireWire port interface ensure quick installation and ease-of-use.

Features

- CE Certified
- Six degree-of-freedom positional sensing
- Portable design and compact footprint for workplace flexibility
- Comfortable molded-rubber stylus with textured paint for long term use and secure grip
- Removable stylus for end-user customization
- Two integrated momentary switches on the stylus for ease-of-use and end-user customization
- Wrist rest to maximize user comfort
- Compact workspace for ease-of-use
- Constructed of metal components and injection-molded plastics
- Stylus-docking inkwell for automatic workspace calibration

Proper Handling and Positioning of the PHANTOM Omni

Warning Gripping and lifting the PHANTOM Omni device improperly may damage it. To reduce the risk of damage, please follow the instructions below.

Handling

Calibrating the device The PHANTOM Omni may need to be recalibrated from time to time, particularly if it has lost power. To calibrate the device, place the stylus in the inkwell and start your haptically enabled application. The indicator light on the PHANTOM Omni device will be a steady blue when the device is properly calibrated.

Lifting the device -To properly lift the device grasp the base of the PHANTOM Omni unit on both sides and lift as shown in Figure 1-1. **DO NOT** lift by grasping the stylus. The stylus is detachable by design. Lifting the unit by the stylus will likely result in the unit dropping which can cause severe damage to the device.



FIGURE 1-1. Position hands to securely lift the device.

Lifting the stylus out of the inkwell Grasp the end of the stylus and lift UP and then OUT as show in the image on the left in Figure 1-2. Do NOT attempt to pull the stylus straight out as shown on the right.

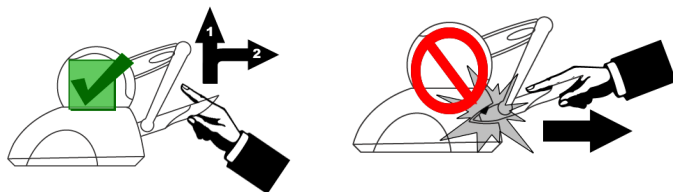


FIGURE 1-2. Be sure to lift the stylus in a two step motion.

Storing the stylus After the device is calibrated, the stylus may be kept in the inkwell or left resting on the desk. Keep in mind that storing the stylus in the inkwell increases the risk that the device will be knocked over or that the stylus will be damaged.

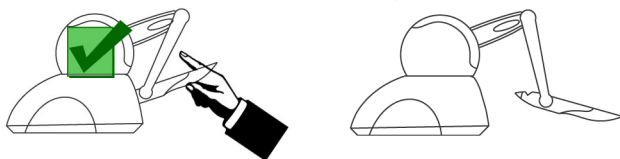


FIGURE 1-3. Stylus does not need to be stored in the inkwell.

Protecting the device from damage It is best to place the unit firmly on the desktop and away from edges to reduce the risk of damage to the device from a direct, unintentional elbow hit. The stylus is particularly vulnerable to sustaining damage when it is in the inkwell.

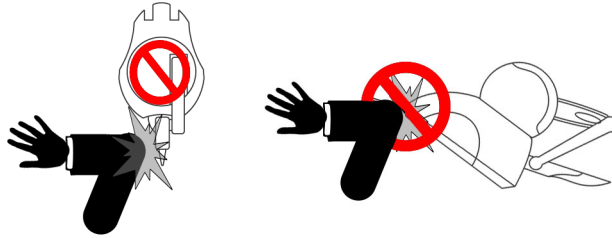


FIGURE 1-4. To reduce the risk of damage, keep the device out of harms way. Pay extra attention if the stylus is stored in the inkwell.

Reassembling the detachable stylus The stylus is detachable for future use. If the stylus is detached for any reason, reassemble it by aligning the blade on the shaft with the slot in the stylus and inserting it till it snaps in place as shown in.

Remember Do NOT attempt to lift the unit or relocate it on the desk by pulling on the stylus. This may result in severe damage to the device.

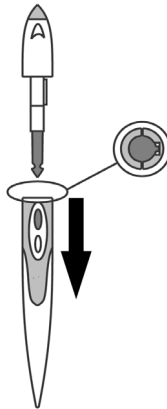


FIGURE 1-5. Align the blade and shaft to reassemble to stylus

Positioning the PHANTOM Omni device The correct placement of the device will vary from one user to another. You may want to experiment with placement that feels right for you. Working with the device should be comfortable and should not put any undo strain on your wrist or forearm. Using the included wrist rest should also help reduce joint fatigue. If you are left-handed you may find it easier to work with the mouse placed to the left of the keyboard. Remember to take breaks often to stretch your hands, wrists and elbows.

2

Installing the PHANTOM Omni Device

This chapter will provide system requirements and describe, step by step, how to install the PHANTOM Omni haptic device. The installation is done in two steps.

- 1 Install the software, the device driver, that allows your computer to communicate with the PHANTOM Omni device.
- 2 Connect the PHANTOM Omni device to your computer and power source.

System Requirements

The PHANTOM Omni haptic device requires certain hardware and software components to be able to work properly.

- An Intel® processor based personal computer (A minimum of Pentium® II class processor is recommended) or select AMD® processor personal computer with add-in IEEE-1394 complaint FireWire® port (See our Website for more detailed information).
- Windows 2000 or Windows XP.
- A hard drive with 30 MB of disk space.
- There are no specific memory requirements; however, a minimum of 32 MB RAM is recommended for overall system performance.
- The PHANTOM Device driver. The version will depend on your intended application of the device.

Installing the PHANTOM Device Drivers

The PHANTOM Omni device communicates with the computer through the FireWire port. To enable this, you must install a software driver, called the PHANTOM Device Drivers (PDD), to control the communication.

Actual installation procedure may vary slightly from the instructions given here depending on which version of the PDD you are installing and which operating system you are running. Instructions are given for Windows XP, with exceptions noted for Windows 2000.

Note As with most other software packages, you must have administrator privileges on the machine in order to install software. If you are unfamiliar with installing software or do not have administrator privileges, please have your System Administrator execute the following steps for you.

To install the device drivers:

- 1 Insert the CD into the CD-ROM drive.
Note If you purchased a SensAble software product, your PDD drivers can be found on your software product CD.
- 2 In Windows Explorer, locate the drive letter associated with your CD-ROM drive and double-click it.
- 3 In the CD's directory, locate the PHANTOM Device Drivers folder and double-click to open it.
- 4 Double-click **setup.exe** to begin the installation.
- 5 The InstallShield Wizard will appear. Click **Next**.
- 6 On the Customer Information window, enter a user and organization name if desired. Leave the radio button under "Install This Application For" in its default position. Click **Next**.
- 7 On the Setup Type window, make sure that "Complete" is selected. Click **Next**.

- 8 The next window will read "Ready to Install the Program." Click **Install** to begin the installation. You will see a status bar.

Windows XP Users Only A dialog will appear informing you that components of the software have not passed Windows Logo testing. This testing is currently underway. YOU CAN CONTINUE THE INSTALLATION PROCESS WITHOUT HARMING YOUR SYSTEM. Click "Continue Anyway" each time you see this dialog.

- 9 On the "PHANTOM Configuration" screen, select **Omni** from the "PHANTOM Model" pull-down menu, then click **OK**.
- 10 The next window will read "InstallShield Wizard Completed." Click **Finish**.
- 11 At this point you will be asked if you want to re-start your computer. Select **Yes** and re-start.

At this point the device driver is installed and you are ready to connect your haptic device. You may also note that demonstration applications have been installed and can be accessed in the 3D Touch Demos program group from the Windows Start menu.

Connecting the PHANTOM Omni Device

In this section you will setup the PHANTOM Omni device and plug in all of the cables.

Installation instructions for the PHANTOM Omni device follow:

- 1 Restart your computer after installing the PDD if you have not already done so.
- 2 Position the PHANTOM Omni device in your workspace, using both hands to grasp the base of the device. See "Proper Handling and Positioning of the PHANTOM Omni" on page 3 for instructions on how to handle the device to reduce the risk of damage.

2 INSTALLING THE PHANTOM OMNI DEVICE

Connecting the PHANTOM Omni Device

3 Connect the power supply.

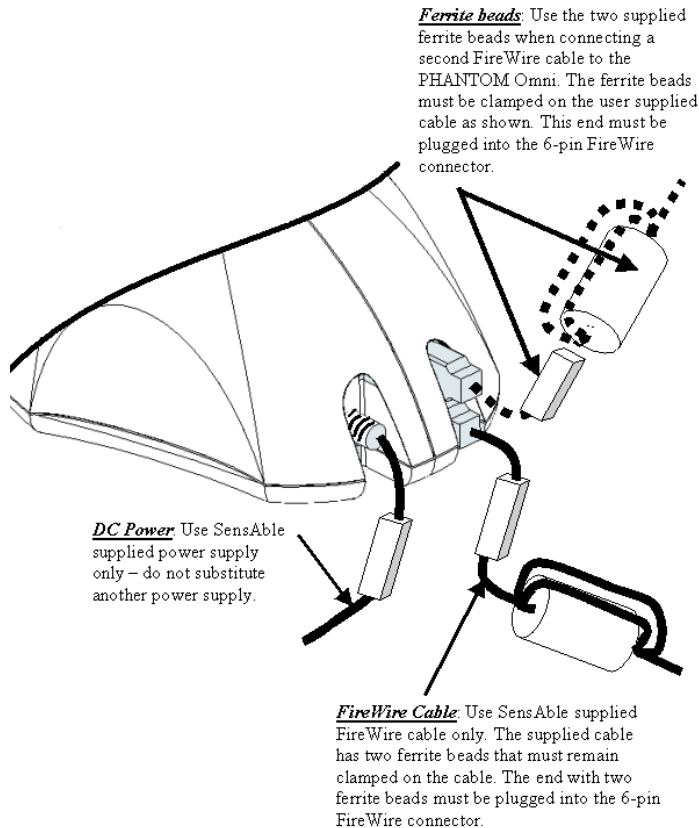


FIGURE 2-1. Back of the PHANTOM Omni device.

- Insert the round pin from the SensAble-supplied power supply into the back of the PHANTOM Omni device, as shown above in Figure 2-1. Do NOT substitute another power supply.
- Plug the power supply into an available AC outlet. (For 110 V the AC outlet must be rated for at least 2 Amps; for 220 V AC, at least 1 Amp).
- The Power supply has a green LED that should light up indicating that the power supply is live. If it is not, check all of the connections. Contact SensAble Technologies if the problem persists.

- 4 Connect the FireWire.
 - a Connect the supplied FireWire cable into either of the two 6-pin FireWire ports on the back of the PHANTOM Omni device, as shown in Figure 2-1. Do NOT substitute another FireWire cable.
 - b Connect the other end of the FireWire cable to the FireWire port on your computer.
- 5 After you have connected the PHANTOM Omni device to your computer, the "Found New Hardware Wizard" dialog will appear. Accept the default settings and click **Next**.

Continue as appropriate for your operating system:

For Windows XP Users

- 6 At this point, a dialog will appear informing you that components of the software have not passed Windows Logo testing. This testing is currently underway. YOU CAN CONTINUE THE INSTALLATION PROCESS WITHOUT HARMING YOUR SYSTEM. Click "Continue Anyway" each time you see this dialog.
- 7 Click **Finish** to complete the install process.
- 8 Continue to the next chapter to get familiar with using the PHANTOM Omni device.

Windows 2000 users

- 6 You will see the "Install Hardware Device Drivers" window indicating that it has found the SensAble Technologies device. Choose **Display a List of the Known Drivers for This Device**, then click **Next**. (If you do not see this message, check to ensure that the device cables are plugged in correctly and that, if applicable, your FireWire card is installed properly).
- 7 In the "Select a Device Driver" window, you will see "Support for SensAble Technologies 1394 PHANTOM Devices." Keep the default settings and click **Next**.
- 8 On the Start Device Driver Installation window, click **Next**.
- 9 You should see a window that says "Completing the Found New Hardware Wizard." Click **Finish**, and the process is complete.
- 10 Continue to the next chapter to get familiar with using the PHANTOM Omni device.

2 INSTALLING THE PHANTOM OMNI DEVICE

Connecting the PHANTOM Omni Device

3

Using the PHANTOM Omni Device

This chapter will introduce you to working with the PHANTOM Omni haptic device and the physical limits of the device's range of motion. It is important to understand these physical limitations so that you do not inadvertently damage the device by forcing it past its designed limits.

Working in 3D Space

We have become so accustomed to using a mouse to move around a computer monitor that we don't think twice as we move our hand around a desk to move the cursor on the computer screen. But there was a time not long ago when this seemingly simple task was not second nature; some even found it challenging and were often frustrated as they learned. If you are new to working in 3D digital space and haptics, working with the PHANTOM Omni device may take a little getting used to. Understanding where objects are in 3D space may take some practice before you are able to move and manipulate objects with ease and certainty.

Physical Limits of the Device

The PHANTOM Omni device has six degrees of motion. All the degrees of motion have physical limits. When you reach one of these limits you will feel a sudden stop; this is the mechanical stop designed into the device. Forcing the device past any of these stops risks damaging the device.

Take some time to become more familiar with the physical limits of the PHANTOM Omni before using the device by completing the following steps.

3 USING THE PHANTOM OMNI DEVICE

Physical Limits of the Device

- 1 Grasp the rubber grip of the stylus as you would a pen, with the free end of the stylus (what would be the non-writing end of a pen) pointing toward you and the point of the stylus (the end connected to the arm) pointing toward the unit. Using the following illustration as a guide gently move the stylus in all directions to feel the physical limits, mechanical stops.

In steps 2 and 3 you will perform macro movements. That is, you will move the arm and body of the PHANTOM Omni device. In step 4 you will perform micro movements, moving the device at the stylus



FIGURE 3-1. Macro movements. Showing movement of the PHANTOM Omni arm and the body.

- 2 Start with large-but gentle-movements. Move the stylus up/down and in/out. The primary movement will happen in the arm of the PHANTOM Omni device. When you reach a physical limit, you'll feel one of the device's mechanical stops. Don't force the device past any of these stops.
- 3 Next move the device left/right. The body of the PHANTOM Omni device will pivot until it reaches a physical limit. Again, do not try to force the device past any of the mechanical stops.



FIGURE 3-2. Micro movements. Showing movement at the stylus.

- 4 Holding the stylus with one hand, gently rotate the stylus back/forth, pivot it up/down, and left/right. Again, when you encounter a physical limit, do not force it.

Now you should have an understanding of the range of motion of the PHANTOM Omni device and where its limits are.

IMPORTANT: ALWAYS work with the connected end of the stylus pointing away from you. The stylus should always be held as shown in Figure 3-2. NEVER rotate the stylus with the point facing you.

To become more familiar with working with the device, you may want to check out the 3D Touch Demo applications, installed with the PDD, and found in the 3D Touch Demos program group from the Windows Start menu.

3 USING THE PHANTOM OMNI DEVICE

Physical Limits of the Device

Appendix A: Customer Support

Warning DO NOT OPEN THE DEVICE. There are no serviceable components in the PHANTOM Omni device or power supply. Return to SensAble for servicing.

If you encounter any difficulties, you can obtain Technical Support through the following three channels:

- If you purchased your PHANTOM Omni device from a distributor, please contact them first.
- SensAble Technologies Customer Support can be reached via e-mail at support@SensAble.com.
- SensAble Technologies Customer Support can also be reached via telephone:
 - In the United States: 1-888-SENSABL (1-888-736-7225)
 - Outside the United States: +1-781-939-7444

Appendix B: Troubleshooting

This section provides tips for correcting some common problem encountered with the PHANTOM Omni device. If after following these steps, you cannot resolve the problem, please contact customer support (see Appendix A:, "Customer Support").

The PHANTOM Omni 's light (located in the "inkwell") does not come on at all. The light on the PHANTOM Omni device should be on if it is receiving power. Check that the power supply is plugged into a working outlet (the light on the power supply should be green if it is). Then check that the connection between the power supply and the PHANTOM device is made correctly.

The PHANTOM Omni blinks on and off. A blinking light means your PHANTOM Omni device may not be properly calibrated. This can happen if you unplug it. To correct this situation, place your stylus in the inkwell. During this process, the light should turn a solid blue, which lets you know you are ready to resume working. If the light does not turn solid blue, please contact Customer Support.

The PHANTOM Omni stylus and the cursor in my application seem to be out of sync. This indicates that your PHANTOM Omni device may not be calibrated properly. This can happen if you unplug it. To re-calibrate the device, place the stylus in the inkwell. The light on the PHANTOM Omni device should turn a solid blue. If the light does not turn solid blue, please contact Customer Support.

When I start an application I get an error. This can happen if the device is not plugged in properly or is not configured properly. Execute the following steps, checking at each point for proper operation:

- 1 Verify power supply - Check to make sure the PHANTOM Omni device is plugged in properly. The green LED on the power supply will light up if power if the power supply is live.
- 2 Verify FireWire cable connection - Make sure that the FireWire cable is plugged into the LOWER port on the back of the PHANTOM Omni device. Make sure the other end is plugged into the FireWire port on your computer.
- 3 Verify the settings between your computer and the PHANTOM Omni device.

- a From the **Start** menu, select **Settings > Control Panel**.
 - b Within the Control Panel window, select **PHANTOM Configuration**.
 - c From the device dialog, make sure that PHANTOM Omni is chosen as the model.
 - d Restart your computer.
- 4 Verify the PHANTOM Device Driver (PDD) is installed properly.
 - a Uninstall the current PDD.
 - b Reinstall the PDD.
 - c Restart the computer.

If, after following the above, you are still unable to start an application, please contact SensAble Technical Support.

I am able to start an application; but even though the light is solid green, the device behaves strangely when I move it around in a scene.

It is possible that there is a defect or a loose connection inside the PHANTOM Omni device. **DO NOT ATTEMPT TO OPEN THE DEVICE.** Contact SensAble Technical Support. When contacting Support, you may be asked to run the "PHANToM Test" application to help with diagnosis. (Located in the <*Sensable Install Directory*>/Phantom Device Drivers). This application can be found in the directory where you installed the PHANTOM Device Drivers.

The following describe the basic features of this test application which you should be prepared to run.

- **Select** - Select the PHANTOM device which you want to test. Usually this will be "Default PHANTOM".
- **Read Encoders** - The values being sensed for the positions and rotations of the device are dynamically displayed in the window. The stylus switch is ON when the user presses the front, blue button. The presence switch is ON when the user presses the second, white button. The picture of the PHANTOM Omni should change dynamically as you move the stylus around.
- **Cycle Amps** - This will simply turn the amplifiers off then on again repeatedly to test their functioning. You should hear the device clicking on and off.

- **Test Forces** - IMPORTANT: Hold onto the stylus when executing this test. Move the sliders with your mouse to generate forces which push against your hand. X controls force parallel to the table. Y controls force up and down. And Z controls force in and out.
- **Box Test** - Provides a box which you can feel with your PHANTOM Omni. The sides of the box should feel flat and the corners sharp.
- **Quit** - Quits the test application.

Appendix C: Regulatory Notices

FCC Notice (U.S. Only)

The PHANTOM® Omni™ haptic device is classified by the Federal Communications Commission (FCC) as a Class B digital device.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult a customer service representative of SensAble Technologies or an experienced radio/ TV technician.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1 This device may not cause harmful interference.
- 2 This device must accept any interference received, including interference that may cause undesired operation.

The following information is provided on the device covered in this document in compliance with FCC regulations:

Product Name: PHANTOM Omni

Model Number: 02350

Company Name: SensAble Technologies, Inc.

NOTES

Any changes or modifications to the hardware not expressly approved by SensAble Technologies could void the user's authority to operate this equipment.

Use of FireWire cable with a ferrite bead is required to comply with the Class B limits of Part 15 of FCC rules. This cable is provided with the hardware; additional cables are available directly from SensAble Technologies. This device is to be used with the SensAble-supplied power supply only. Replacement power supplies are available directly from SensAble Technologies.

Rev3 02367

Appendix D: Declaration of Conformity

CE Notice

Application of Council Directive(s):	89/336/EEC EMC Directive 79/23/ECC Low Voltage Directive
Standards to which Conformity is Declared:	EN 55024 EN 55022 EN 61000 EN 60950-1: 2002
Manufacturers Name:	SensAble Technologies, Inc.® 15 Constitution Way Woburn, MA 01801, USA Made in China, For SensAble by Jetta Co Ltd Jetta House, 19 On Kui Street On Lok Tsuen, Fanling, N.T., Honk Kong
Products covered by this Declaration:	PHANTOM® Omni™
Type of Equipment	Computer Peripheral
Model/Part Numbers:	PHANTOM Omni: 02350 11/21/03 (basic light blue enclosure, SensAble Technologies' logos)
Year of Manufacture	2003

PN 02355 Rev 11/21/03

D DECLARATION OF CONFORMITY

Appendix E: Configuring Multiple Devices

If you want to use more than one PHANTOM haptic device with your computer, you can create as many as 20 uniquely named PHANTOM configurations. Each named PHANTOM configuration can refer to a particular system configuration that you use frequently. Which device to use is defined by the software application which uses it.

To create a new PHANTOM configuration use the PHANTOM Configuration Utility.

- 1 From the **Start** menu, select **Settings > Control Panel > PHANToM Configuration**. The PHANTOM Configuration window opens.
- 2 On the hardware tab, click **Add**.
- 3 Enter a name to call that device, click **OK**.
- 4 From the PHANTOM model menu, select the **correct model**.
- 5 Click **OK**.

Dual Configurations

The Dual Configuration settings only apply if you want to set up a pair of PHANTOM devices to work in tandem with each other. You must have created at least two PHANTOM devices as described above before the Dual Configuration tab can be used. Once you have created at least two devices, go to the Dual Configuration area and select the PHANTOM devices you would like to use in a paired configuration. Then, enable the check box to turn the dual configuration on.

Appendix F: PHANTOM Omni

Packaging Instructions

If you need to transport or ship the device, please follow these packaging guidelines to reduce the risk of damage to the device.

Important

Remember the PHANTOM Omni device is a sensitive piece of electronic equipment and must be handled with care. Lifting the device by any of the moving parts may adversely affect the unit's performance and risks damaging the device. The PHANTOM Omni device has a limited range of motion. Forcing the device past these limits risks damaging the device. If you have not already done so, please review “Proper Handling and Positioning of the PHANTOM Omni” on page 3.

Shipping Checklist / Packing Materials:

You will need the following items to ship the device safely.

The packaging materials in which the device was originally shipped:

- 1 Medium shipping box
- 1 Set of foam inserts (cradles the device)
- 6 Pieces of foam padding (lines the inside walls of box)
- 2 Squares of cardboard (inside bottom and top of box)
- Thin, clear, plastic wrapping material

Additionally,

- Packing tape

Packing the Device and Accessories

First package up the PHANTOM Omni device:

- 1 If necessary, assemble box and arrange cardboard, foam padding and bottom insert.
 - a Line the sides and bottom with the foam padding.
 - b Place cardboard on the bottom of the box.
 - c Fit the bottom foam insert into the bottom of the box.
- 2 Wrap the PHANTOM device in the plastic bag.
- 3 Orient the PHANTOM device to fit neatly inside the foam insert. You may need to grasp the PHANTOM device by the upper arm—the piece with the oblong cutout—in order to position it properly. **DO NOT** grab the stylus.
- 4 Gently lower the PHANTOM device into the insert, while maintaining alignment of the PHANTOM arm to the cutout.
- 5 Ensure that the PHANTOM device is fully seated by pressing firmly on the PHANTOM Omni label.
- 6 Check to see that the PHANTOM arm is fully seated by carefully pressing on the elbow joint.
- 7 Place the top half of foam insert over the PHANTOM device.

Next place all the accessories in the box:

- 8 Place the power supply, power cord, FireWire cable, and extra ferrite beads into the cutouts on the top of the foam insert.
- 9 Place the cardboard over the insert followed by the foam pad.
- 10 Close the box and tape shut.

Appendix G: PHANTOM Omni Specifications

Product specifications are subject to change without notice.

Nominal Position Resolution	> 450 dpi	~0.055 mm
Workspace	~6.4 w x 4.8 h x 2.8 d in	> 160 w x 120 h x 70 d mm
Backdrive Friction	< 1 oz	< 0.26 N
Maximum Exertable Force	0.75 lbf	3.3 N
Continuous Exertable Force (24 hrs)	> 0.2 lbf	> 0.88 N
Stiffness	X axis > 7.3 lbs./in Y axis > 13.4 lbs./in Z axis > 5.9 lbs./in	X axis > 1.26 N/ mm Y axis > 2.31 N/mm Z axis > 1.02 N/mm
Inertia (apparent mass at tip)	~ 0.101 lbm	~ 45 g
Footprint	~ 6 5/8 w x 8 d in	~ 168 w x 203 d mm
Weight*	3 lbs 15 oz	~1.47 kg
Operating Temperature	50° to 95°F	10° to 35°C
Storage Temperature	-40° to 149°F	-40° to 65°C
Relative Humidity	20% to 80% (noncondensing)	
Force Feedback	3 degrees of freedom (x, y, z)	
Position Sensing	x, y, z (digital encoders)	
	Pitch, roll, yaw (\pm 3% linearity potentiometers)	Pitch, roll, yaw (\pm 5% linearity potentiometers)
Interface	IEEE-1394 FireWire® port	
Input Voltage	100-240 VAC (Use supplied power supply only AD-740-1180)	
Input Frequency	50-60 Hz	
Input Current	1 A	
Warranty	Three months	

* Does not include power supply or cables.

