



NRC7394 Evaluation Kit

User Guide

(CLI Application)

Ultra-low power & Long-range Wi-Fi

Ver 1.3
Apr. 3, 2024

NEWRACOM, Inc.

NRC7394 Evaluation Kit User Guide (CLI Application)

Ultra-low power & Long-range Wi-Fi

© 2024 NEWRACOM, Inc.

All right reserved. No part of this document may be reproduced in any form without written permission from Newracom.

Newracom reserves the right to change in its products or product specification to improve function or design at any time without notice.

Office

Newracom, Inc.

505 Technology Drive, Irvine, CA 92618 USA

<http://www.newracom.com>

Contents

1	Overview.....	7
1.1	Software structure of CLI application	7
1.2	Build CLI application	8
1.3	Start CLI application	8
2	CLI Commands.....	10
2.1	Show Commands.....	10
2.1.1	show version	10
2.1.2	show uinfo [vif_id]	10
2.1.3	show config [vif_id]	11
2.1.4	show ampdu [clear]	12
2.1.5	show edca	13
2.1.6	show sta [vif id] <all aid <aid index>>	14
2.1.7	show ap [vif id]	14
2.1.8	show signal [start stop] [interval] [number]	14
2.1.9	show maxagg.....	15
2.1.10	show cca_thresh	15
2.1.11	show duty.....	16
2.1.12	show autotxgain.....	16
2.1.13	show recovery stats	17
2.1.14	show detection stats	17
2.1.15	show temp	17
2.1.16	show tx_time.....	18
2.1.17	show wakeup_pin	18
2.1.18	show wakeup_source	18
2.1.19	show xtal_status	18
2.1.20	show app_version	19
2.1.21	show stats simple_rx.....	19
2.1.22	show mac clear	20
2.1.23	show mac tx stats.....	20
2.1.24	show mac rx stats.....	21
2.1.25	show mac tx clear	21
2.1.26	show mac rx clear	22
2.1.27	show self_config <Country> <BW> <dwel time>	22
2.1.28	show optimal_channel <Country> <BW> <dwel time>	23
2.1.29	show cal_use.....	23
2.1.30	show sysconfig	24
2.1.31	show bcn_mcs [vif id].....	24
2.1.32	show rc_pf.....	25

2.1.33 show rc_param	25
2.1.34 show rc [vif_id] [aid]	25
2.2 Set Commands	27
2.2.1 set gi <short long> [vif_id]	27
2.2.2 set maxagg <ac> <maxagg> {options}.....	27
2.2.3 set ack_mode {mode}	28
2.2.4 set rc <on off> [vif_id]	28
2.2.5 set duty <on off> {duty window in usec} {tx duration in usec}.....	28
2.2.6 set duty_debug <on off>	29
2.2.7 set cca_thresh <value>	29
2.2.8 set txpwr <auto limit fixed> <value>	29
2.2.9 set wakeup_pin <debounce> <pin index>	30
2.2.10 set wakeup_source <wakeup_sources>	30
2.2.11 set addba [tid] {mac address}	30
2.2.12 set delba [tid] {mac address}	30
2.2.13 set rts <on off default> <threshold> <vif_id>	31
2.2.14 set tx_time <CS time> <Blank time>	31
2.2.15 set drop [vif id] [mac address] {on off}	31
2.2.16 set tsensor [GPIO for SCL] [GPIO for SDA]	32
2.2.17 set self_config <Country> <BW> <dwell time>	32
2.2.18 set color {value}	33
2.2.19 set probe_resp_vendor_ie <on off>	33
2.2.20 set report <on off>	34
2.2.21 set deepsleep_gpio <dir> <out> <pullup>	34
2.2.22 set support_ch_width [0 1].....	34
2.2.23 set ampdu_mode [mode]	35
2.2.24 set bcn_mcs [vif id] [MCS]	35
2.2.25 set rc_pf [Profile number].....	36
2.2.26 set rc_param [EWMA] [Update interval] [Probe interval].....	36
2.2.27 set cts <on off>.....	37
2.2.28 set bgscan_trx [1 0] [wait time operation ch for rx]	37
2.2.29 set scan_period [dwell time]	37
2.2.30 set mesh_rssi_threshold [threshold value]	38
2.3 Test commands	39
2.3.1 test mcs <value>	39
2.3.2 test country <Country>	39
2.3.3 test cont_tx <freq> <bw> <mcs> <txpwr> <stop>	39
2.4 GPIO commands.....	40
2.4.1 gpio read <pin index>.....	40
2.4.2 gpio write <pin index> <value>	40
2.4.3 gpio direction <pin index> [direction]	40
2.4.4 gpio pullup <pin index> [pull-up option]	41

3 Revision History 42

List of Tables

Table 2.1 Category of CLI commands 10

List of Figures

Figure 1.1	Software structure of CLI application	7
Figure 1.2	Build CLI application.....	8
Figure 1.3	Execution of CLI application.....	8
Figure 1.4	“help” CLI command	9
Figure 1.5	Exit of CLI application.....	10

1 Overview

This document introduces NRC7394 command line interface (CLI) application. The user can utilize the CLI application to check basic information for firmware, monitor channel quality; such as: received signal strength indicator (RSSI), signal to noise ratio (SNR), adjust transmit power, and configure NRC7394 to run in specific operating condition. The source code of this application is offered to user's so users can build an executable file suitable for the host.

1.1 Software structure of CLI application

As shown in Figure 1.1, the CLI application is a user-level application program. The CLI application uses Netlink library to communicate with NRC 11ah driver running on a Linux kernel. The CLI command initiated by the user and goes to the NRC 11ah driver and then to NRC7394 via host serial peripheral interface (HSPI).

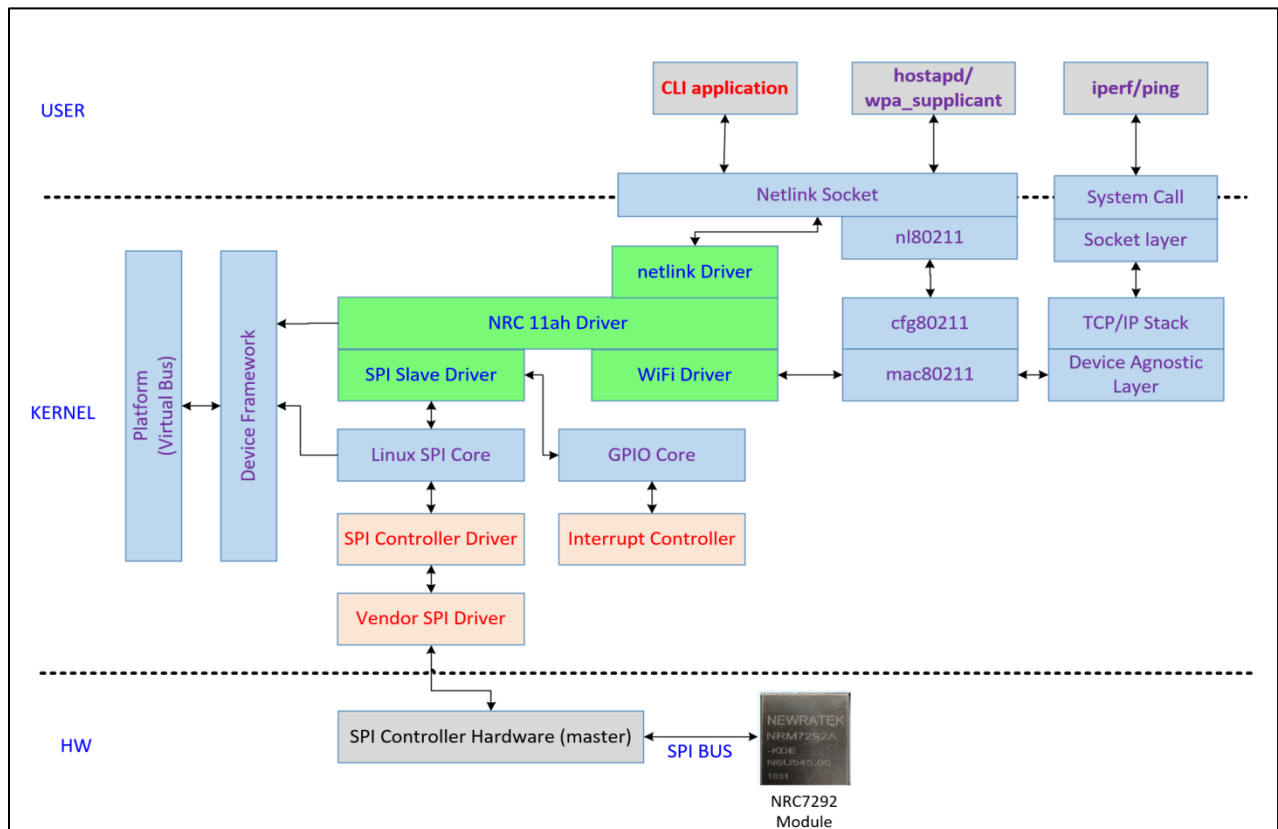


Figure 1.1 Software structure of CLI application

1.2 Build CLI application

A user can build the source code of CLI application with Makefile which is provided along with the source code. Once the user successfully builds it, the user can find "cli_app" executable file in the same directory where the user runs Makefile.

```
pi@raspberrypi:~/cli_app $ make clean;make
libcli_app.a
cli_app
pi@raspberrypi:~/cli_app $
```

Figure 1.2 Build CLI application

1.3 Start CLI application

"NRC>" prompt appears if a user executes "cli_app", then the user can enter in a CLI command into the prompt.

```
pi@raspberrypi:~/Downloads/7292_host_codes/cli_app $ ./cli_app
=====
Newracom Command Line Application (2.23.0)
=====
NRC> █
```

Figure 1.3 Execution of CLI application

“help” is a useful command which displays all the CLI commands with its usages as shown in Figure 1.4.

```

NRC> help
=====
help                                     :show CLI tree
write {address} {data}                  :write a 32-bit value to memory
exit                                    :exit program
show version                            :show version
show config [vif_id]                   :show configuration
show edca                               :show EDCA parameters
show uinfo [vif_id]                    :show UMAC information
show ampdu | show ampdu clear           :show/clear AMPDU count
show signal {start|stop} [interval] [number] :show rssi/snr, {options} are only valid in cli_app prompt
show maxagg                             :show max aggregation
show duty                               :show duty cycle
show autotxgain                         :show autotxgain
show cal_use                            :show cal use
show recovery stats                     :show recovery
show detection stats                    :show detection
show temp                               :show temp
show wakeup_pin                         :show wakeup pin configuration
show wakeup_source                      :show wakeup source configuration
show sta [vif_id] [all|aid [aid_index]] :show station information
show ap [vif_id]                       :show ap information
show tx_time                           :show tx time about {CS time} {Blank time}
show cca_thresh                         :show cca_thresh(unit: dBm)
show self_config {Country(KR,US...)} {BW} {dwell time} :show self config
show optimal_channel {Country(US,NZ...)} {BW} {dwell time} :show optimal_channel
show app_version                        :show app version
show sysconfig                          :show sysconfig
show rc [vif_id] [aid]                 :show tx's retry mcs info, maxtp/tp2/maxp/lowest
show rc_pf                              :show rate control profile number
show rc_param                           :show configured rate control parameter
show xtal_status                        :show xtal status
show stats_simple_rx                   :show received packet information
show mac clear                          :clear TX/RX Statistics
show mac tx stats                       :show TX Statistics
show mac tx clear                       :clear TX Statistics
show mac rx stats                       :show RX Statistics
show mac rx clear                       :clear RX Statistics
set gi {auto|short|long} {vif_id[0|1]} :set guard interval
set maxagg {AC(0-3)} {Max(0-8(1Mhz),0-16(2,4Mhz),0:off)} {size:default=0} :set aggregation
set ack_mode {no|ndp|normal|show}       :set ack mode
set rc {on|off} [vif_id] [mode]         :set rate control
set duty {on|off} {duty window} {tx duration} :set duty cycle
set duty_debug {on|off}                 :set debug mode for duty cycle
set txpwr {auto|limit|fixed} {value}    :set tx power and type
set wakeup_pin {Debounce(on|off)} {PIN Number(0~31)} :set wakeup pin for deepsleep
set wakeup_source rtc gpio hspi         :set wakeup source for deepsleep
set addba [tid] {mac address}           :set addba tid / send addba with mac address
set delba [tid] {mac address}           :set delba tid / send delba with mac address
set rts {on|off|default} <threshold> <vif_id> {ndp rts ri:1, normal rts ri:2} :set rts on/off
set cts {adaptive cts:on, legacy cts:off} :set cts on/off
set tx_time {CS time} {Blank time}      :set tx_time about {CS time} {Blank time}
set drop [vif_id] [mac address] {on|off} :set drop frames from configured mac address
set self_config {Country(KR,US...)} {BW} {dwell time} :set self_config
set tsensor [GPIO for SCL] [GPIO for SDA] :set temperature sensor scl, sda
set cca_thresh {CCA threshold(unit:dBm, -100~-35)} :set cca threshold
set color {value}                       :set color
set deepsleep_gpio {dir} {out} {pullup} :set GPIO direction/out data/pull during deepsleep operation
n
set report {on|off}                     :set lmac periodic report
set support_ch_width [0|1]              :set supported ch width in sig capa ie (0:1/2M, 1:1/2/4M)
set ampdu_mode [disable|manual|auto]     :set ampdu_mode
set bcn_mcs [vif_id] [10|0|1|2|3|4|5|6|7] :set bcn_mcs
:
set rc_pf [1|2]                         :set rate control profile number
set rc_param [1|2|3|4|5] {1|2|3|4|5|6|7} :set rate control parameter
set bgscan_trx [1:enable|0:disable] [wait time operation ch for rx: (0~100)msec] :set bgscan_trx
set scan_period [dwell time (min 20ms)] :set scan_period
set mesh_rssi_threshold {-120~-10dBm}    :set mesh_rssi_threshold
test mcs [mcs index]                    :test mcs
test country [country code]              :test country
test cont_tx {stop} | {freq(in MHz)} {bw(1m|2m|4m)} {mcs} {txpwr} :test continuous tx
gpio read [pin number]                   :gpio read
gpio write [pin number] [0|1]            :gpio write
gpio direction [pin index] {[0(input)|1(output)]} :read/write gpio direction
gpio pullup [pin index] {[0(off)|1(on)]} :read/write gpio pullup enable/disable
=====
OK

```

Figure 1.4 “help” CLI command

To stop the CLI application, a user can use “exit” command.

```
NRC> exit
=====
Exit Newracom Command Line Application
=====
pi@raspberrypi:~/nrc_pkg/script $
```

Figure 1.5 Exit of CLI application

2 CLI Commands

The categories of CLI commands is described in the below. The user can use the phy, set, and test CLI commands only for test purposes.

Table 2.1 Category of CLI commands

Category	Description
show	display statistics, status, signal, etc.
set	set MAC-layer parameters
test	set test parameters
write	Write a 32-bit value to memory
gpio	write/read gpio, set gpio dirction & pullup

2.1 Show Commands

2.1.1 show version

Display Firmware version and Gerrit/master number.

Parameters

N/A

```
NRC> show version
Newracom Firmware Version      : 01.04.00
gerrit/master                   : e1d9236
OK
```

2.1.2 show uinfo [vif_id]

Display 11ah capability information.

Parameters

vif_id : interface ID (default 0, vif_id can be 0 or 1 when the concurrent mode is enabled)

```

NRC> show uinfo 0
-----|* AP INFO *|-----
[ 0] bssid(00:00:00:00:00:00)  ssid()  ssid_len(0)  security(0)  beacon_interval(0)
      short bi(0)  assoc_s1g_channel(0)  cssid(0x0)  change_seq_num(0)
support: s1g_long(0)  pv1(0)  nontim(0)  twt(0)  ampdu(0)
      ndp_ospoll(0)  traveling_pilot(0)  shortgi(1mhz:0, 2mhz:0, 4mhz:0)  1m_ctrl_resp_preamble(0)
      maximum mpdu_len(0)  ampdu_len_exp(0)  minimum mpdu_start_spacing(0)  rx_sigmcs_map(0x0)  color(0)

-----|* STA INFO *|-----
[ 0] mac_addr(8c:0f:fa:00:29:01)  aid(0)  listen_interval(0)
support: s1g_long(1)  pv1(0)  nontim(1)  twt(0)  ampdu(1)
      ndp_ospoll(0)  traveling_pilot(0)  shortgi(1mhz:0, 2mhz:0, 4mhz:0)  1m_ctrl_resp_preamble(0)
      maximum mpdu_len(0)  ampdu_len_exp(1)  minimum mpdu_start_spacing(0)  rx_sigmcs_map(0x0)

-----
OK

```

2.1.3 show config [vif_id]

Display device configurations including device mode, MAC address, frequency, bandwidth, etc.

Parameters

vif_id : interface ID (default 0, vif_id can be 0 or 1 when the concurrent mode is enabled)

```

NRC> show config
-----
[MAC Configuration]
Boot Mode           : ROM_CM3
Device Mode         : STA
MAC Address         : ca:fe:ba:be:01:33
Country             : K1
Bandwidth           : 1M
- PRI CH BW         : 1M
- PRI CH LO         : 1
- Center LO         : ON
Frequency           : 9215 (1)
MAC80211 freq       : 5180 (36)
Default MCS         : 2
Rate Control        : ON
- Mode              : Feedback RC
- Info              : MCS:6 BW:1 Mhz (NRC Auto)
- MCS10(MGMT)       : ON
Guard Interval      : AUTO
Security            : OFF
RTS                 : OFF
Format              : S1G
Preamble type       : S1G_1M
Promiscuous Mode    : OFF
Color               : 0x0
Auto CFO Cal        : ON
TX Retry Limit      : 8
Fragment            : OFF
Defragment          : OFF
PS pretend          : OFF
Bitmap Encoding     : ON
Reverse Scrambler   : ON
Power Save          : OFF
BSSID               : 02:00:01:a9:f4:8c
AID                 : 4

[PHY Configuration]
Tx Gain             : AUTO
Base Rx Gain        : 65
Compensated Rx Gain : 65
Tx Power Type       : ~24 [AUTO]
-----
OK

```

2.1.4 show ampdu [clear]

Display statistics for aggregated MPDU (A-MPDU).

Parameters

clear : clear all statistics

```
NRC> show ampdu
-----
AMPDU : Value
-----
1      : 831
2      : 0
3      : 0
4      : 0
5      : 0
6      : 0
7      : 0
8      : 0
9      : 0
10     : 0
11     : 0
12     : 0
13     : 0
14     : 0
15     : 0
16     : 0
-----
OK
```

2.1.5 show edca

Display the Enhanced Distributed Channel Access (EDCA) parameters per access category (AC).

Parameters

N/A

```
NRC> show edca
-----
[AC] : 0
- priority : 0
- aggregation : 0
- max agg num : 16
- aifsn : 2
- cw min : 16
- cw max : 1024
- txop limit : 0
- txop max : 0

[AC] : 1
- priority : 1
- aggregation : 0
- max agg num : 16
- aifsn : 2
- cw min : 16
- cw max : 1024
- txop limit : 0
- txop max : 0

[AC] : 2
- priority : 2
- aggregation : 0
- max agg num : 16
- aifsn : 2
- cw min : 16
- cw max : 1024
- txop limit : 0
- txop max : 0

[AC] : 3
- priority : 3
- aggregation : 0
- max agg num : 16
- aifsn : 2
- cw min : 16
- cw max : 1024
- txop limit : 0
- txop max : 0

[AC] : 4
- priority : 4
- aggregation : 0
- max agg num : 16
- aifsn : 1
- cw min : 1
- cw max : 1
- txop limit : 0
- txop max : 0

[AC] : 5
- priority : 5
- aggregation : 0
- max agg num : 16
- aifsn : 3
- cw min : 16
- cw max : 1024
- txop limit : 0
- txop max : 0
-----
OK
```

2.1.6 show sta [vif id] <all|aid <aid index>>

Display station information including TX/RX PHY rate.

Parameters

vif_id : interface ID (default 0, vif_id can be 0 or 1 when the concurrent mode is enabled)

all | aid <aid index> : 'all' shows information of whole connected stations. 'aid <aid index>' shows information of the specified station.

```
NRC> show sta 0 all
=====
STATION   MAC_ADDR           AID   STATE   TX bit rate   RX bit rate
=====
0         ca:fe:ba:be:01:33  1     ASSOC   6.50MBit/s(MCS 7) 6.50MBit/s(MCS 7)
Duplicate AID count : 0
=====
OK
```

2.1.7 show ap [vif id]

Display ap information including TX/RX PHY rate.

Parameters

vif_id : interface ID (default 0, vif_id can be 0 or 1 when the concurrent mode is enabled)

```
NRC> show ap 0
=====
BSSID           BW           TX bit rate   RX bit rate
=====
8c:0f:fa:00:29:01 2M           5.20MBit/s(MCS 5) 6.50MBit/s(MCS 7)
=====
OK
```

2.1.8 show signal [start|stop] [interval] [number]

Display channel quality information (RSSI and SNR).

Parameters

start : start periodic display with interval (Ex. show signal start 1: display RSSI & SNR every 1 second)

stop : stop displaying

interval : period in second unit (default 1 second)

number : number of samples to display

Returns

```
NRC> show signal
MAC addr : 8c:0f:fa:00:2b:0e  rssi   : 9          snr    : 25
OK
```

※ 'show signal' and 'show stop' could not support in one line command operation.

```
NRC> show signal start
OK
NRC> Mac Addr : 8c:0f:fa:00:2b:0e      rssi: 9      snr: 26

Mac Addr : 8c:0f:fa:00:2b:0e      rssi: 9      snr: 26
Mac Addr : 8c:0f:fa:00:2b:0e      rssi: 9      snr: 26
Mac Addr : 8c:0f:fa:00:2b:0e      rssi: 9      snr: 26

show signal stop
-----
[MAC Addr]: 8c:0f:fa:00:2b:0e
[Total]   : 23
[RSSI]
  average : 1.565
  std_dev : 3.411
[SNR]
  average : 4.522
  std_dev : 9.855
-----
OK
```

Total : total number of samples displayed,
average : average value of RSSI and SNR
std_dev : standard deviation

2.1.9 show maxagg

Display aggregation status per AC.

Parameters

N/A

```
NRC> show maxagg
----- VIF0 -----
[Base info]
AC_BK: OFF (16, 0 bytes)
AC_BE: OFF (16, 0 bytes)
AC_VI: OFF (16, 0 bytes)
AC_VO: OFF (16, 0 bytes)
OK
```

2.1.10 show cca_thresh

Display CCA threshold value.

Parameters

N/A

```
NRC> show cca_thresh
-70
OK
```

2.1.11 show duty

Show status of duty cycle function.

If it is on, it shows duty window, tx duration, remain tx duration time in usec and duty error count.

Parameters

N/A

Returns

```
NRC> show duty
Duty cycle           : off
OK
```

or

```
NRC> show duty
Duty cycle           : on
Duty window          : 600000000
Tx duration           : 5000000
Remain tx duration   : 3375200
Duty error           : 0
OK
```

2.1.12 show autotxgain

Show status of autotxgain function.

If it is on, it shows Tx power index for each MCS (Modulation Coding Scheme).

Parameters

N/A

```
NRC> show autotxgain
Auto txgain          : on
Tx power index for MCS 0 : 23
Tx power index for MCS 1 : 22
Tx power index for MCS 2 : 22
Tx power index for MCS 3 : 19
Tx power index for MCS 4 : 19
Tx power index for MCS 5 : 17
Tx power index for MCS 6 : 17
Tx power index for MCS 7 : 16
Tx power index for MCS 10 : 23
OK
```


2.1.13 show recovery stats

The count statistics of recovery function entered.

Parameters

N/A

```
NRC> show recovery stats
-----
Number of Recovery Count : 0
Number of RX Frame regarding RX Buffer discard : 0
SN missing by QM
-----
QM[#]      Missing Count      Max diff
-----
QM[0]       0                  0
QM[1]       0                  0
QM[2]       0                  0
QM[3]      30                  17
QM[4]       1                  48
QM[5]       0                  0
-----
OK
```

2.1.14 show detection stats

The count statistics of detection function entered, which are tx triggered.

Parameters

N/A

```
NRC> show detection stats
-----
Tx Triggered Detection Count : 0
Rx Triggered Detection Count : 0
-----
--Non-zero Length NDP: 0
--IP Length: 0(0)
--MPDU Length Mismatch: 0
--Buffer Mismatch: 0
--MPDU Length Size: 0
-----
OK
```

2.1.15 show temp

The temperature of temperature sensor. If temperature sensor is not existed, it displays 'Not Support'.

Parameters

N/A

```
NRC> show temp
Temperature : 0x1A(26)
OK
```

2.1.16 show tx_time

Show tx_time parameters.

Parameters

N/A

```
NRC> show tx_time
CS time           : 988
TX delay          : 100
OK
```

2.1.17 show wakeup_pin

Get configuration of wakeup gpio pin from deep sleep mode.

Parameters

N/A

```
NRC> show wakeup_pin
Debounce : off           Pin number : 11
OK
```

2.1.18 show wakeup_source

Get configuration of wakeup source from deep sleep mode.

Parameters

N/A

```
NRC> show wakeup_source
Wakeup source      : RTC GPIO HSPI
OK
```

2.1.19 show xtal_status

Show indication whether the crystal oscillator is stable or not.

Parameters

N/A

Returns

```
NRC> show xtal_status
XTAL status        : 1
OK
```

2.1.20 show app_version

Show cli application version.

Parameters

N/A

```
NRC> show app_version
2.19.0
OK
```

2.1.21 show stats simple_rx

Display received packet information.

Parameters

N/A

Returns

RSSI : received signal strength indication

CS_Cnt : number of carrier sense counted

PSDU_Succ : number of PSDU count successfully received (SIG CRC OK)

MPDU_Rcv : number of MPDU count received

MPDU_Succ : number of MPDU count successfully received (FCS OK)

SNR : signal to noise ratio

**※ The PSDU_Succ counts NDP packets. However, the MPDU_Rcv does not count NDP packet.
In addition, The PSDU_Succ regards A-MPDU packet as 1 packet.**

```
NRC> show stats simple_rx
-----
RSSI                : -27
CS_Cnt              : 595182
PSDU_Succ           : 2603
MPDU_Rcv            : 1134
MPDU_Succ           : 1046
SNR                 : 31
-----
OK
```

2.1.22 show mac clear

Clear MAC-layer TX and RX statistics.

Parameters

N/A

```
NRC> show mac clear
success
OK
```

2.1.23 show mac tx stats

Display MAC-layer TX statistics.

Parameters

N/A

Returns

```
NRC> show mac tx stats
-----
MAC TX Statistics (OK count:24728, RTX count:259, last MCS:0)
-----
- AC[BK]      : OK(      0/      0) RTX(      0/      0)
- AC[BE]      : OK(    228/   28426) RTX(    214/   25084)
- AC[VI]      : OK(      0/      0) RTX(      0/      0)
- AC[VO]      : OK(    823/   84826) RTX(     45/   4565)
- AC[BC]      : OK(  23677/  805039) RTX(      0/      0)
- AC[GP]      : OK(      0/      0) RTX(      0/      0)
-----
- TYPE[MGMT]   : OK(    820/   83730) RTX(     45/   4565)
- TYPE[CTRL]   : OK(      0/      0) RTX(      0/      0)
- TYPE[DATA]   : OK(    231/   29522) RTX(    214/   25084)
- TYPE[BEAC]   : OK(  23678/  805066) RTX(      0/      0)
-----
- MCS[ 0]      : OK(    168/   19824) RTX(     36/   4248)
- MCS[ 1]      : OK(      0/      0) RTX(      0/      0)
- MCS[ 2]      : OK(     37/   6168) RTX(      0/      0)
- MCS[ 3]      : OK(      0/      0) RTX(      0/      0)
- MCS[ 4]      : OK(      0/      0) RTX(     59/   6962)
- MCS[ 5]      : OK(      0/      0) RTX(     55/   6490)
- MCS[ 6]      : OK(      0/      0) RTX(      4/    472)
- MCS[ 7]      : OK(      0/      0) RTX(     57/   6726)
- MCS[10]      : OK(  24525/  892353) RTX(     48/   4751)
-----
OK
```

OK (number of packets successfully transmitted / total aggregated bytes successfully transmitted)

RTX (number of packets retransmitted / total aggregated bytes retransmitted)

✘ AC[GP] : GP stands for general purpose. This is used to send a frame which is the highest priority. This is a vendor-specific function.

2.1.24 show mac rx stats

Display MAC-layer RX statistics.

Parameters

N/A

Returns

```
NRC> show mac rx stats
-----
MAC RX Statistics (OK count:4673, NOK count:12, last MCS:10)
-----
- AC[BK]      : OK(      0/      0) NOK(      0/      0)
- AC[BE]      : OK(    3778/   5319311) NOK(     12/   16672)
- AC[VI]      : OK(      0/      0) NOK(      0/      0)
- AC[VO]      : OK(     895/   38776) NOK(      0/      0)
- AC[BC]      : OK(      0/      0) NOK(      0/      0)
- AC[GP]      : OK(      0/      0) NOK(      0/      0)
-----
- TYPE[MGMT]   : OK(     889/   38332) NOK(      0/      0)
- TYPE[CTRL]   : OK(      0/      0) NOK(      0/      0)
- TYPE[DATA]   : OK(    3784/  5319755) NOK(     12/   16672)
- TYPE[BEAC]   : OK(      0/      0) NOK(      0/      0)
-----
- MCS[ 0]     : OK(     58/   17980) NOK(      0/      0)
- MCS[ 1]     : OK(      1/    130) NOK(      0/      0)
- MCS[ 2]     : OK(     21/   31710) NOK(      0/      0)
- MCS[ 3]     : OK(      5/    6114) NOK(      0/      0)
- MCS[ 4]     : OK(     29/   43790) NOK(      0/      0)
- MCS[ 5]     : OK(     11/   12318) NOK(      1/    1510)
- MCS[ 6]     : OK(    137/  206870) NOK(      3/    4530)
- MCS[ 7]     : OK(   3488/  4997538) NOK(      7/   10570)
- MCS[10]     : OK(     923/   41637) NOK(      1/      62)
-----
OK
```

OK (number of packets successfully received / total aggregated bytes successfully received)

NOK (number of packets received but discarded / total aggregated bytes discarded)

✘ NOK : Even though the MPDU is successfully received, it can be discarded due to duplication or address mismatch.

2.1.25 show mac tx clear

Clear MAC-layer TX statistics.

Parameters

N/A

```
NRC> show mac tx clear
success
OK
```

2.1.26 show mac rx clear

Clear MAC-layer RX statistics.

Parameters

N/A

```
NRC> show mac rx clear
success
OK
```

2.1.27 show self_config <Country> <BW> <dwel time>

Show self config.

Parameters

Country : Country Code. KR, US, EU.....

BW: scan channel bandwidth (1m, 2m, 4m)

dwel time: scan time for CCA (10 ~ 1000 ms)

```
NRC> show self_config US 1m 100
Frequency      CCA      bandwidth
--
902.5 MHz      21.7%    1M
903.5 MHz      0.0%    1M
904.5 MHz      0.0%    1M
905.5 MHz      0.0%    1M
906.5 MHz      0.0%    1M
907.5 MHz      0.0%    1M
908.5 MHz      1.8%    1M
909.5 MHz      2.1%    1M
910.5 MHz      0.0%    1M
911.5 MHz      0.0%    1M
912.5 MHz      0.0%    1M
913.5 MHz      0.0%    1M
914.5 MHz      4.6%    1M
915.5 MHz      2.7%    1M
916.5 MHz      0.9%    1M
917.5 MHz      0.0%    1M
918.5 MHz      3.1%    1M
919.5 MHz      3.6%    1M
920.5 MHz      23.3%   1M
921.5 MHz      27.9%   1M
922.5 MHz      4.2%    1M
923.5 MHz      3.7%    1M
924.5 MHz      10.3%   1M
925.5 MHz      10.3%   1M
926.5 MHz      0.8%    1M
927.5 MHz      6.3%    1M
[Optimal freq.] 903.5 MHz (CCA:0.0%, BW:1M)
[*]ch_num:3
OK
```

2.1.28 show optimal_channel <Country> <BW> <dwel time>

Optimize your channel selection to significantly reduce scan time. This feature is designed to enhance efficiency and improve the overall scanning process.

※ Please note that it is not available for use in small channel sizes such as K0, K1, K2, JP, and EU.

Parameters

Country : Country Code (US, AU, NZ, CN, TW)

BW: scan channel bandwidth (1m, 2m, 4m)

dwel time: scan time for CCA (10 ~ 1000 ms)

```
NRC> show optimal_channel US 1m 100
[Optimal freq.] 907.5 MHz (CCA:0.0%, BW:1M, Legacy channel number:11)
OK

NRC> show optimal_channel US 2m 100
[Optimal freq.] 907.0 MHz (CCA:0.0%, BW:2M, Legacy channel number:10)
OK

NRC> show optimal_channel US 4m 100
[Optimal freq.] 906.0 MHz (CCA:0.0%, BW:4M, Legacy channel number:8)
OK
```

2.1.29 show cal_use

Show whether calibration data is used and country code.

Parameters

N/A

Returns

```
NRC> show cal_use
Calibration_use : on           Country : US
OK
```

2.1.30 show sysconfig

Show NRC WiFi board system configurations.

Parameters

N/A

Returns

```
NRC> show sysconfig
[sysconfig]
version      : 2
mac_addr0    : 8c:0f:fa:00:2b:9a
mac_addr1    : 8c:0f:fa:00:52:aa
cal_use      : 1
hw_version   : 65535
rf_pll1dol2_tr : 0xA5A5A5A5 (Disabled)

[user_factory]

OK
```

2.1.31 show bcn_mcs [vif id]

Show the MCS (Modulation and Coding Scheme) level for beacon transmissions.

Parameters

vif_id : interface ID (default 0, vif_id can be 0 or 1 when the concurrent mode is enabled)

Returns

```
NRC> show bcn_mcs 0
----- current beacon rate -----
VIF#:0, Current beacon mcs = 10
-----

OK

NRC> show bcn_mcs 1
----- current beacon rate -----
VIF#:1, Current beacon mcs = 0
-----

OK
```


2.1.32 show rc_pf

Show rate control profile used.

1 : for strong RF field.

2 : for middle/low RF field.

Parameters

N/A

Returns

```
NRC> show rc_pf
Profile#                : 1
OK
```

2.1.33 show rc_param

Show rate control parameters.

EWMA : The percentage of Exponentially Weighted Moving Average (EWMA) used in rate control

Update interval : shows the frequency at which EWMA data is updated (unit : ms)

Probe interval: shows the probing interval (unit : ms)

Parameters

N/A

Returns

```
NRC> show rc_param
EWMA(%)                : 30
Update interval(ms)    : 500
Probe interval(ms)     : 50
OK
```

2.1.34 show rc [vif_id] [aid]

Show rate control key values for TX retry order

maxtp : 1st TX throughput rate

tp2 : 2nd TX throughput rate

maxp : 1st TX success probability rate

lowest : Lowest throughput rate

Parameters

vif_id : interface ID (default 0, vif_id can be 0 or 1 when the concurrent mode is enabled)

aid : Association ID. AP mode needs STA's aid#. Please use 'show uinfo [vif_id]' to check the STA's aid. This can be omitted in STA mode.

Returns

[STA mode]

```
NRC> show rc
-----
order                                mcs bw
-----
maxtp                               : 7  1
tp2                                 : 7  1
maxp                                 : 6  1
lowest                              : 10 1
-----
OK
```

[AP mode]

```
NRC> show rc 0 1
-----
order                                mcs bw
-----
maxtp                               : 7  2
tp2                                 : 7  2
maxp                                 : 6  2
lowest                              : 10 1
-----
OK
```

2.2 Set Commands

2.2.1 set gi <short|long> [vif_id]

Set Guard Interval.

Parameters

short : Short Guard Interval

long : Long Guard Interval (default)

vif_id : interface ID (default 0, vif_id can be 0 or 1 when the concurrent mode is enabled)

```
NRC> set gi short
OK
```

2.2.2 set maxagg <ac> <maxagg> {options}

Set maximum number of MPDU of AC in A-MDPU.

(AP)

```
set maxagg ac maxagg          // set maxagg for all-sta
```

```
set maxagg ac maxagg maxsize  // set maxagg and maxsize for all-sta
```

```
set maxagg ac maxagg vif aid  // set maxagg for specifi aid
```

(STA)

```
set maxagg ac maxagg          //set maxagg
```

```
set maxagg ac maxagg maxsize  //set maxagg and maxsize
```

Parameters

ac : access category

maxagg : number of MPDU in AMPDU (0-8(1Mhz), 0-16(2,4Mhz), 0: off)

maxsize: aggregation threshold size (default : 0)

vif : virtue interface identification

aid: association identification

```
NRC> set maxagg 0 2
-- updated aggregation
[STA AID: 0]
AC(BK): STATUS(ON) MAXNUM( 2) SIZE(0)
OK
```

2.2.3 set ack_mode {mode}

Set ACK mode.

Parameters

mode: no|ndp|normal|show

```
NRC> set ack_mode no
ACK_MODE           : NO
OK
```

2.2.4 set rc <on|off> [vif_id]

Set rate control on / off.

Parameters

on : enable rate control (automatic selection of MCS based on the link condition) (default)

off : disable rate control (user can select MCS manually by using “test mcs” command)

vif_id : interface ID (default 0, vif_id can be 0 or 1 when the concurrent mode is enabled)

```
NRC> set rc on
----- updated rate control -----
rc      : on      vif_id  : 0      mode   : NRC
-----
OK
```

2.2.5 set duty <on|off> {duty window in usec} {tx duration in usec}

Set duty cycle.

Parameters

on|off : enable|disable duty cycle function (default; off)

duty window : specify duty cycle window in usec. (should be >= 1000000)

tx duration : specify allowed tx duration within duty cycle window in usec. (should be >=100000)

(ex) duty window 10000000 (10sec) and tx duration 1000000 (1sec) will be set to access the channel 1 second during every 10 seconds.

```
NRC> set duty on 10000000 1000000
Duty cycle           : on
Duty window          : 10000000
Tx duration           : 1000000
OK
```

※ The supported duty cycle ratio ((Tx duration/Duty window) * 100) should be smaller than 10%.
(See ETSI EN 304 220-1) But if type is STA and country code is EU, ratio should be smaller than 2.8%. (See ETSI EN 304 220-2)

2.2.6 set duty_debug <on|off>

Set duty cycle debug on/off.

Parameters

on|off : enable|disable duty cycle debug

```
NRC> set duty_debug on
duty debug : on
OK
```

2.2.7 set cca_thresh <value>

Set CCA threshold value.

Parameters

value: CCA threshold value (-100 dbm ~ -35 dbm)

```
NRC> set cca_thresh -70
-70
OK
```

2.2.8 set txpwr <auto|limit|fixed> <value>

Set tx power type and value.

Parameters

type :

auto: The device will automatically adjust its Tx power based on the current network conditions and signal strength.

limit : The device will use a specified maximum Tx power limit.

fixed : The device will use a fixed Tx power level, which can be useful for testing or for applications where a consistent power level is required.

value : 1~30

```
NRC> set txpwr fixed 17
Type      : fixed      Tx power : 17
OK
```

2.2.9 set wakeup_pin <debounce> <pin index>

Configure a wakeup-gpio-pin when system state is uCode or deepsleep.

Parameters

debounce : on|off

pin index : 0~31

```
NRC> set wakeup_pin off 18
Debounce : off      Pin number : 18
OK
```

2.2.10 set wakeup_source <wakeup_sources>

Configure wakeup sources when system state is deepsleep.

Parameters

wakeup_sources : rtc gpio hspi

※ It is possible to assign multiple sources (ex) set wakeup_source rtc gpio

```
NRC> set wakeup_source rtc gpio
Wakeup source      : rtc gpio
OK
```

2.2.11 set addba [tid] {mac address}

Set addba tid / send addba with MAC address.

Parameters

tid: Traffic Identifier

mac address : mac address

```
NRC> set addba 1
OK
```

2.2.12 set delba [tid] {mac address}

Set delba tid / send delba with MAC address.

Parameters

tid: Traffic Identifier

mac address : mac address

```
NRC> set delba 1
OK
```

2.2.13 set rts <on|off|default> <threshold> <vif_id>

Enable/disable RTS, set RTS threshold.

Parameters

threshold : RTS & CTS threshold in Byte

vif_id : virtue interface identification

Ex1) send RTS regardless of packet length (set rts on 0 0)

Ex2) no use of RTS (set rts off 0 0)

Ex3) set RTS threshold (set rts default 1000 0)

```
NRC> set rts on 0 0
OK
```

2.2.14 set tx_time <CS time> <Blank time>

Set tx_time about <CS time> <Blank time>. CS time at least [(AFISN offset * 16 + 1) * 52us]

Parameters

CS time: Carrier sensing time. Listen before talk (52~13260 in us)

Blank time: Tx pause time (1~65535 in us)

```
NRC> set tx_time 52 10000
OK
```

2.2.15 set drop [vif id] [mac address] {on|off}

Set drop frames from configured MAC address.

Parameters

vif_id : interface ID (default 0, vif_id can be 0 or 1 when the concurrent mode is enabled)

mac address: drop frames from mac address

on|off: Enable/disable drop mac address

2.2.16 set tsensor [GPIO for SCL] [GPIO for SDA]

Set temperature sensor scl, sda.

Parameters

SCL: GPIO for SCL (default 31)

SDA: GPIO for SDA (default 30)

```
NRC> set tsensor 31 30
```

```
OK
```

2.2.17 set self_config <Country> <BW> <dwel time>

Set self-config assesses CCA in each channel and suggests the optimal frequency by analyzing signal strength, interference, and noise levels.

Parameters

Country : Country Code. KR, US, EU.....

BW: scan channel bandwidth (1m, 2m, 4m)

dwel time: scan time for CCA (10 ~ 1000 in ms)


```
NRC> set self_config US 1m 100
Frequency      CCA      bandwidth
--
902.5 MHz      8.9%      1M
903.5 MHz      0.2%      1M
904.5 MHz      0.0%      1M
905.5 MHz      0.0%      1M
906.5 MHz      0.0%      1M
907.5 MHz      0.0%      1M
908.5 MHz      0.6%      1M
909.5 MHz      2.1%      1M
910.5 MHz      0.0%      1M
911.5 MHz      0.0%      1M
912.5 MHz      0.0%      1M
913.5 MHz      0.0%      1M
914.5 MHz      6.0%      1M
915.5 MHz      4.1%      1M
916.5 MHz      0.6%      1M
917.5 MHz      0.0%      1M
918.5 MHz      1.8%      1M
919.5 MHz      4.7%      1M
920.5 MHz      11.9%     1M
921.5 MHz      13.0%     1M
922.5 MHz      1.1%      1M
923.5 MHz      1.3%      1M
924.5 MHz      6.4%      1M
925.5 MHz      6.9%      1M
926.5 MHz      0.9%      1M
927.5 MHz      0.0%      1M
[Optimal freq.] 904.5 MHz (CCA:0.0%, BW:1M)
[*]ch_num:5
OK
```

2.2.18 set color {value}

Set color bit.

Parameters

value : 0 -7

```
NRC> set color 1
OK
```

※ We just added a value to the beacon frame in our Wi-Fi setup, but it is currently not being utilized.

2.2.19 set probe_resp_vendor_ie <on|off>

Set probe response with vendor IE.

Parameters

on|off : enable|disable

```
NRC> set probe_resp_vendor_ie on
Vendor IE in probe_response :ON
OK
```

2.2.20 set report <on|off>

Set LMAC periodic report on/off.

Parameters

on|off : enable|disable

```
NRC> set report on
set report : on
OK
```

[Target conole log after 'set report on']

```
=====
1. RX:      0 Kbps      TX:      2 Kbps(  2 Kbps)      CPU:  150K Idle/sec
=====
2. CS              :      103 (total)      :      34 (1M corr)      :      59 (2M corr)      :      10 (SAT)
3. SYNC      ( 29%) :      30 (done)      :      73 (miss)      :      0 (timeout)
4. SIG      (100%) :      30 (ok)      :      0 (err)
5. MAC CRC      ( 96%) :      29 (ok)      :      0 (err)      :      0 (delimiter error)
6. NDP BA Error :      0
7. SNR(1Mhz)      :      27 (pri)      :      0 (sec)
8. RSSI          :      -75
9. Avg CFO (Last 16) :      -1.56 ppm
10. CCA          :      0%(1M)      :      0%(2M pri)      :      0 %(2m sec)
11. Noise (RSSI-SNR) :      -102
12. TX Idle Time :      0 us      :      0 ea
=====
```

2.2.21 set deepsleep_gpio <dir> <out> <pullup>

Set the GPIO direction, output data, and pullup settings using a 32-bit mask during deep sleep operation.

Parameters

dir : GPIO direction

out : GPIO output value

pull-up : GPIO pull-up option

```
NRC> set deepsleep_gpio 0x00c00000 0x10203000 0x00000000
OK
```

2.2.22 set support_ch_width [0|1]

Set the supported channel width in S1G capability IE.

Parameters

0:1/2M, 1:1/2/4M

```
NRC> set support_ch_width 1
set support_ch_width : 1
OK
```

2.2.23 set ampdu_mode [mode]

Set the AMPDU(Aggregate MAC Protocol Data Unit) mode

Parameters

mode : auto, manual or auto.

Returns

```
NRC> set ampdu_mode auto
OK
```

2.2.24 set bcn_mcs [vif id] [MCS]

Set the MCS (Modulation and Coding Scheme) level for beacon transmissions.

Parameters

vif_id : interface ID (default 0, vif_id can be 0 or 1 when the concurrent mode is enabled)

MCS level : 10, 0, 1, 2, 3, 4, 5, 6, 7

Returns

```
NRC> set bcn_mcs 0 5
set bcn_mcs: 5
OK

NRC> show bcn_mcs 0
----- current beacon rate -----
VIF#:0, Current beacon mcs = 5
-----
OK
```

2.2.25 set rc_pf [Profile number]

set rate control profile.

Parameters

Profile number: 1 for strong RF field or 2 for middle/low RF field.

Returns

```
NRC> set rc_pf 2
OK

NRC> show rc_pf
Profile#                : 2
OK
```

2.2.26 set rc_param [EWMA] [Update interval] [Probe interval]

set rate control parameters.

Parameters

EWMA value:	1 means 10%, 2 means 30%, ..., 5 means 50%
Update interval:	1 means 100ms, 2 means 200ms, ..., 7 means 700ms
Probe interval:	1 means 10ms, 2 means 20ms, ..., 255 means 2550ms
Default value :	30% and 500ms and 50ms

Returns

```
NRC> set rc_param 3 6 5
OK

NRC> show rc_param
EWMA(%)                : 30
Update interval(ms)    : 600
Probe interval(ms)     : 50
OK
```

2.2.27 set cts <on|off>

set CTS on/off (adaptive cts:on, legacy cts:off)

Parameters

on : adaptive cts

off : legacy cts

Returns

```
NRC> set cts on  
OK
```

2.2.28 set bgscan_trx [1|0] [wait time operation ch for rx]

set bgscan_trx

Parameters

1|0 : 1:enable or 0:disable

off : wait time operation ch for rx: (0~100)msec

Returns

```
NRC> set bgscan_trx 1 50  
set bgscan_trx: 1  
OK
```

2.2.29 set scan_period [dwell time]

set scan period

Parameters

dwell time : dwell time (min 20ms)

Returns

```
NRC> set scan_period 100  
set scan_period: 100  
OK
```

2.2.30 set mesh_rssi_threshold [threshold value]

set mesh threshold value

Parameters

Threshold_value : mesh_rssi_threshold {-120~-10dBm}

Returns

```
NRC> set mesh_rssi_threshold -40  
OK
```

2.3 Test commands

2.3.1 test mcs <value>

Set MCS(Modulation Coding Scheme) index.

Parameters

value : 0~7, 10 (10 can be used only in 1MHz bandwidth)

```
NRC> test mcs 7
OK
```

2.3.2 test country <Country>

Set country for a test command

Parameters

Country : Country Code. KR, US, EU.....

```
NRC> test country US
OK
```

2.3.3 test cont_tx <freq> <bw> <mcs> <txpwr> | <stop>

test countinous TX

Parameters

freq : frequency (in MHz)

bw : 1m, 2m, 4m

mcs : 0~7, 10 (10 can be used only in 1MHz bandwidth)

txpwr : TX power

[Start]

```
NRC> test cont_tx 9025 1m 7 17
OK
```

[Stop]

```
NRC> test cont_tx stop
OK
```

2.4 GPIO commands

The GPIO CLI commands listed below can be used to configure GPIO options to read from and write to GPIO pins. Note that GPIO command usage is valid for non-dedicated GPIO pins only. Refer to the NRC7394 Technical Reference Manual for the list of dedicated GPIO pins.

2.4.1 gpio read <pin index>

Read the value (0: low / 1: high) from a GPIO pin.

Parameters

pin index: GPIO pin index

```
NRC> gpio read 18
1
OK
```

2.4.2 gpio write <pin index> <value>

Write a value (0: low / 1: high) to a GPIO pin.

Parameters

pin index: GPIO pin index

value: 0: low / 1: high

```
NRC> gpio write 18 0
0x47fbfff3
OK
```

2.4.3 gpio direction <pin index> [direction]

Get or set the direction (0: input / 1: output) of a GPIO pin.

Parameters

pin index: GPIO pin index

direction: set GPIO direction

[Get]


```
NRC> gpio direction 18
1
OK
```

[Set]

```
NRC> gpio direction 18 1
0x07ffff30
OK
```

※ (For set command only) direction: 0: input / 1: output

2.4.4 gpio pullup <pin index> [pull-up option]

Get or set the pull-up option (0: disable / 1: enable) for a GPIO pin.

Parameters

pin index: GPIO pin index

pull-up option: set pull-up option

[Get]

```
NRC> gpio pullup 7
1
OK
```

[Set]

```
NRC> gpio pullup 18 0
0xc0000080
OK
```

※ (For set command only) pull-up option: 0: disable / 1: enable

3 Revision History

Revision No	Date	Comments
Ver 1.0	4/5/2023	Initial version
Ver 1.1	9/19/2023	Remove 'auto' parameter for set gi [Added] test country, test cont_tx, show cal_use, show sysconfig, show rc_pf, show rc_param, set ampdu_mode, set bcn_mcs, show bcn_mcs, show xtal_status
Ver 1.2	11/15/2023	[Added] show rc, show app_version, show optimal_channel, set duty_debug, set color, set probe_resp_vendor_ie, set report <on off>, set deepsleep_gpio, set support_ch_width, set bgscan_trx, set scan_period, set mesh_rssi_threshold
Ver 1.3	4/3/2024	[Updated] show rc_param, set rc_param