



# **NRC7394 Evaluation Kit**

## **User Guide**

### **(CLI Application)**

**Ultra-low power & Long-range Wi-Fi**

**Ver 1.1**  
**Sept. 19, 2023**

**NEWRACOM, Inc.**

## **NRC7394 Evaluation Kit User Guide (CLI Application)**

### **Ultra-low power & Long-range Wi-Fi**

**© 2023 NEWRACOM, Inc.**

All right reserved. No part of this document may be reproduced in any form without written permission from Newracom.

Newracom reserves the right to change in its products or product specification to improve function or design at any time without notice.

### **Office**

Newracom, Inc.

505 Technology Drive, Irvine, CA 92618 USA

<http://www.newracom.com>

# Contents

<b>1</b>	<b>Overview.....</b>	<b>7</b>
1.1	Software structure of CLI application .....	7
1.2	Build CLI application .....	8
1.3	Start CLI application .....	8
<b>2</b>	<b>CLI Commands.....</b>	<b>10</b>
2.1	show .....	10
2.1.1	show version .....	10
2.1.2	show config [vif_id] .....	10
2.1.3	show edca .....	10
2.1.4	show uinfo [vif_id] .....	10
2.1.5	show ampdu [clear] .....	11
2.1.6	show sta [vif id] <all aid <aid index>> .....	11
2.1.7	show ap [vif id] .....	11
2.1.8	show signal [start stop] [interval] [number] .....	11
2.1.9	show maxagg .....	12
2.1.10	show duty .....	12
2.1.11	show autotxgain .....	13
2.1.12	show cca_thresh .....	13
2.1.13	show recovery stats .....	14
2.1.14	show detection stats .....	14
2.1.15	show temp .....	14
2.1.16	show tx_time .....	14
2.1.17	show wakeup_pin .....	14
2.1.18	show wakeup_source .....	15
2.1.19	show stats simple_rx .....	15
2.1.20	show mac clear .....	16
2.1.21	show mac tx stats .....	16
2.1.22	show mac rx stats .....	17
2.1.23	show mac tx clear .....	18
2.1.24	show mac rx clear .....	18
2.1.25	show self_config <Country> <BW> <dwel time> .....	18
2.1.26	show cal_use .....	18
2.1.27	show sysconfig .....	18
2.1.28	show xtal_status .....	20
2.1.29	show bcn_mcs [vif id] .....	20
2.1.30	show rc_pf .....	20
2.1.31	show rc_param .....	21
2.2	set .....	22

2.2.1 set gi <short long> [vif_id].....	22
2.2.2 set maxagg <ac> <maxagg> {options}.....	22
2.2.3 set ack_mode {mode} .....	23
2.2.4 set rc <on off> [vif_id] .....	23
2.2.5 set duty <on off> {duty window in usec} {tx duration in usec}.....	23
2.2.6 set cca_thresh <value> .....	23
2.2.7 set txpwr <value> .....	24
2.2.8 set wakeup_pin <debounce> <pin index> .....	24
2.2.9 set wakeup_source <wakeup_sources> .....	24
2.2.10 set addba [tid] {mac address} .....	24
2.2.11 set delba [tid] {mac address} .....	24
2.2.12 set rts <on off default> <threshold> <vif_id> .....	25
2.2.13 set tx_time <CS time> <Blank time> .....	25
2.2.14 set drop [vif id] [mac address] {on off} .....	25
2.2.15 set tsensor [GPIO for SCL] [GPIO for SDA] .....	26
2.2.16 set self_config <Country> <BW> <dwel time>.....	26
2.2.17 set ampdu_mode [mode] .....	26
2.2.18 set bcn_mcs [vif id] [MCS level] .....	26
2.2.19 set rc_pf [Profile number] .....	27
2.2.20 set rc_param [EWMA ID] [Interval ID] .....	27
2.3 test .....	29
2.3.1 test mcs <value> .....	29
2.3.2 test country <Country> .....	29
2.3.3 test cont_tx <freq> <bw> <mcs> <txpwr>   <stop> .....	29
2.4 gpio.....	30
2.4.1 gpio read <pin index>.....	30
2.4.2 gpio write <pin index> <value> .....	30
2.4.3 gpio direction <pin index> [direction] .....	30
2.4.4 gpio pullup <pin index> [pull-up option] .....	30
<b>3 Revision History .....</b>	<b>31</b>

# List of Tables

Table 2.1    Category of CLI commands ..... 10

# List of Figures


Figure 1.1	Software structure of CLI application .....	7
Figure 1.2	Build CLI application.....	8
Figure 1.3	Execution of CLI application.....	8
Figure 1.4	“help” CLI command .....	9
Figure 1.5	Exit of CLI application.....	9

# 1 Overview

This document introduces NRC7394 command line interface (CLI) application. The user can utilize the CLI application to check basic information for firmware, monitor channel quality; such as: received signal strength indicator (RSSI), signal to noise ratio (SNR), adjust transmit power, and configure NRC7394 to run in specific operating condition. The source code of this application is offered to user's so users can build an executable file suitable for the host.

## 1.1 Software structure of CLI application

As shown in Figure 1.1, the CLI application is a user-level application program. The CLI application uses Netlink library to communicate with NRC 11ah driver running on a Linux kernel. The CLI command initiated by the user and goes to the NRC 11ah driver and then to NRC7394 via host serial peripheral interface (HSPI).

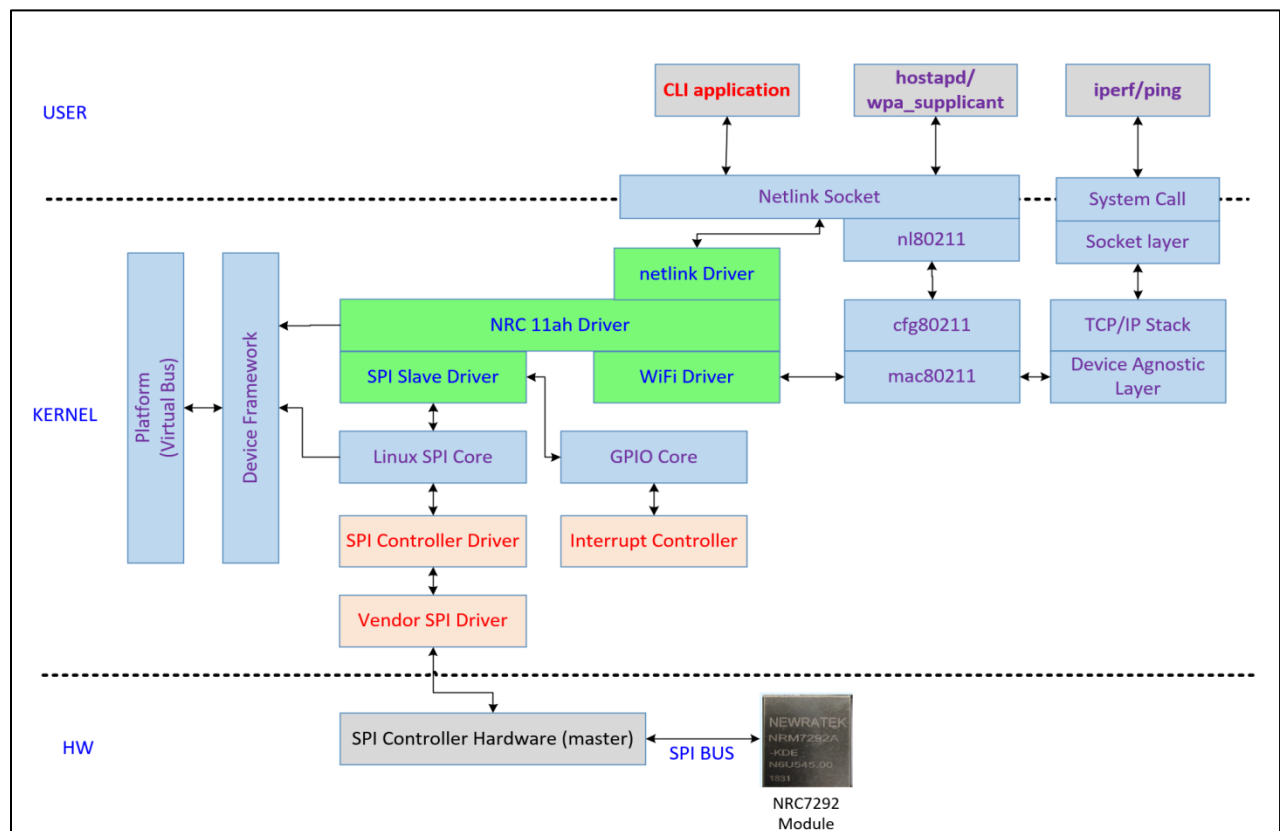

**Figure 1.1 Software structure of CLI application**

## 1.2 Build CLI application

A user can build the source code of CLI application with Makefile which is provided along with the source code. Once the user successfully builds it, the user can find "cli\_app" executable file in the same directory where the user runs Makefile.

```
pi@raspberrypi:~/cli_app $ make clean;make
libcli_app.a
cli_app
pi@raspberrypi:~/cli_app $
```

Figure 1.2 Build CLI application

## 1.3 Start CLI application

"NRC>" prompt appears if a user executes "cli\_app", then the user can enter in a CLI command into the prompt.

```
pi@raspberrypi:~/nrc_pkg/script $ ./cli_app
=====
Newracom Command Line Application (2.10.1)
=====
NRC> █
```

Figure 1.3 Execution of CLI application



“help” is a useful command which displays all the CLI commands with its usages as shown in Figure 1.4.

```

NRC> help
=====
help
write <address> <data>
exit
show version
show config [vif_id]
show edca
show uinfo [vif_id]
show ampdu | show ampdu clear
show signal {start|stop} [interval] [number]
show maxagg
show duty
show autotxgain
show cal_use
show recovery stats
show detection stats
show temp
show wakeup_pin
show wakeup_source
show sta [vif_id] {all|aid [aid_index]}
show tx_time
show cca_thresh
show stats simple_rx
show mac clear
show mac tx stats
show mac tx clear
show mac rx stats
show mac rx clear
set gi {short|long|auto}
set maxagg {AC(0-3)} <Max(0-8(1Mhz),0-16(2,4Mhz),0:off)> {size:default=0}
set config {ack(0,1)} {agg(0,1)} [mcs]
set rc {on|off} [vif_id] [mode]
set duty {on|off} {duty window} {tx duration} {duty margin}
set cal_use {on|off}
set txpwr {value(1~30)}
set wakeup_pin {Debounce(on|off)} {PIN Number(0~31)}
set wakeup_source rtc gpio hspi
set addba [tid] {mac address}
set delba [tid] {mac address}
set rts {on|off|default} <threshold> <vif_id>
set tx_time <CS time> <Blank time>
set drop [vif id] [mac address] {on|off}
set tsensor [GPIO for SCL] [GPIO for SDA]
set self_config {Country(KR,US...)}{BW}{dwell time}
set cca_thresh {CCA threshold(unit:dBm, -100~-70)}
test mcs [mcs index]
gpio read [pin number]
gpio write [pin number] [0|1]
gpio direction [pin index] {[0(input)|1(output)]}
gpio pullup [pin index] {[0(off)|1(on)]}
=====
:show CLI tree
:write a 32-bit value to memory
:exit program
:show version
:show configuration
:show EDCA parameters
:show UMAC information
:show/clear AMPDU count
:show rssi/snr, {options} are only valid in cli_app prompt
:show max aggregation
:show duty cycle
:show autotxgain
:show cal_use
:show recovery
:show detection
:show temp
:show wakeup pin configuration
:show wakeup source configuration
:show station information
:show tx_time about <CS time> <Blank time>
:show cca_thresh(unit: dBm)
:show received packet information
:clear TX/RX Statistics
:show TX Statistics
:clear TX Statistics
:show RX Statistics
:clear RX Statistics
:set guard interval
:set aggregation
:set ack, aggregation, mcs
:set rate control
:set duty cycle
:set cal_use
:set txpwr
:set wakeup pin for deepsleep
:set wakeup source for deepsleep
:set addba tid / send addba with mac address
:set delba tid / send delba with mac address
:set rts on/off
:set tx_time about <CS time> <Blank time>
:set drop frames from configured mac address
:set temperature sensor scl, sda
:set self_config
:set cca threshold
:set mcs
:gpio read
:gpio write
:read/write gpio direction
:read/write gpio pullup enable|disable
=====
OK

```

Figure 1.4 “help” CLI command

To stop the CLI application, a user can use “exit” command.

```

NRC> exit
=====
Exit Newracom Command Line Application
=====
pi@raspberrypi:~/nrc_pkg/script $

```

Figure 1.5 Exit of CLI application

## 2 CLI Commands

The categories of CLI commands is described in the below. The user can use the phy, set, and test CLI commands only for test purposes.

**Table 2.1 Category of CLI commands**

Category	Description
show	display statistics, status, signal, etc.
set	set MAC-layer parameters
test	set test parameters
write	Write a 32-bit value to memory
gpio	write/read gpio, set gpio dirction & pullup

### 2.1 show

#### 2.1.1 show version

Display Firmware version, gerrit/master number and board revision

**Parameters**

N/A

#### 2.1.2 show config [vif\_id]

Display device configurations including device mode, MAC address, frequency, bandwidth, etc.

**Parameters**

vif\_id : interface ID (default 0, vif\_id can be 0 or 1 when the concurrent mode is enabled)

#### 2.1.3 show edca

Display EDCA parameters per access category (AC)

**Parameters**

N/A

#### 2.1.4 show uinfo [vif\_id]

Display 11ah capability information

**Parameters**

vif\_id : interface ID (default 0, vif\_id can be 0 or 1 when the concurrent mode is enabled)

### 2.1.5 show ampdu [clear]

Display statistics for aggregated MPDU (AMPDU)

#### Parameters

clear : clear all statistics

### 2.1.6 show sta [vif id] <all|aid <aid index>>

Display station information including TX/RX phy rate

#### Parameters

vif\_id : interface ID (default 0, vif\_id can be 0 or 1 when the concurrent mode is enabled)

all | aid <aid index> : 'all' shows information of whole connected stations. 'aid <aid index>' shows information of the specified station.

### 2.1.7 show ap [vif id]

Display ap information including TX/RX phy rate

#### Parameters

vif\_id : interface ID (default 0, vif\_id can be 0 or 1 when the concurrent mode is enabled)

### 2.1.8 show signal [start|stop] [interval] [number]

Display channel quality information (RSSI and SNR)

#### Parameters

start : start periodic display with interval (Ex. show signal start 1: display RSSI & SNR every 1 second)

stop : stop displaying

interval : period in second unit (default 1 second)

number : number of samples to display

#### Returns

```
NRC> show signal
MAC addr : 8c:0f:fa:00:2b:0e    rssi    : 9          snr    : 25
OK
```

Total : total number of samples displayed

average : average value of RSSI and SNR

std\_dev : standard deviation

```
NRC> show signal start
OK
NRC> Mac Addr : 8c:0f:fa:00:2b:0e      rssi: 9      snr: 26

Mac Addr : 8c:0f:fa:00:2b:0e      rssi: 9      snr: 26
Mac Addr : 8c:0f:fa:00:2b:0e      rssi: 9      snr: 26
Mac Addr : 8c:0f:fa:00:2b:0e      rssi: 9      snr: 26

show signal stop
-----
[MAC Addr]: 8c:0f:fa:00:2b:0e
[Total]   : 23
[RSSI]
  average : 1.565
  std_dev : 3.411
[SNR]
  average : 4.522
  std_dev : 9.855
-----
OK
```

### 2.1.9 show maxagg

Display aggregation status per AC

#### Parameters

N/A

```
NRC> show maxagg
AC_BK: OFF
AC_BE:  ON (16,    0 bytes)
AC_VI: OFF
AC_VO: OFF
OK
```

### 2.1.10 show duty

Show status of duty cycle function

If it is on, it shows duty window, tx duration, and remain tx duration time in usec

#### Parameters

N/A

#### Returns

Duty cycle : off

or

Duty cycle : on  
Duty window : 60000000  
Tx duration : 5000000  
Remain tx duration : 5000000

### 2.1.11 show autotxgain

Show status of autotxgain function

If it is on, it shows Tx power index for each MCS

#### Parameters

N/A

Auto txgain : off

or

Auto txgain : on

Tx power index for MCS 0 : 22

Tx power index for MCS 1 : 21

Tx power index for MCS 2 : 20

Tx power index for MCS 3 : 19

Tx power index for MCS 4 : 19

Tx power index for MCS 5 : 18

Tx power index for MCS 6 : 17

Tx power index for MCS 7 : 16

Tx power index for MCS 10 : 23

### 2.1.12 show cca\_thresh

Display CCA threshold value

#### Parameters

N/A

```
NRC> show cca_thresh
-70
OK
```

### 2.1.13 show recovery stats

The count statistics of recovery function entered

#### Parameters

N/A

### 2.1.14 show detection stats

The count statistics of detection function entered, which are tx triggered

#### Parameters

N/A

### 2.1.15 show temp

The temperature of temperature sensor. If temperature sensor is not existed, it displays 'Not Support'.

#### Parameters

N/A

```
NRC> show temp
Temperature          : 0x21(33)
OK
```

### 2.1.16 show tx\_time

Show tx\_time parameters.

#### Parameters

N/A

```
NRC> show tx_time
CS time              : 988
TX delay              : 100
OK
```

### 2.1.17 show wakeup\_pin

Get configuration of wakeup gpio pin from deep sleep mode

#### Parameters

N/A

```
NRC> show wakeup_pin
Debounce : off          Pin number : 11
OK
```

### 2.1.18 show wakeup\_source

Get configuration of wakeup source from deep sleep mode

#### Parameters

N/A

```
NRC> show wakeup_source
Wakeup source      : RTC GPIO HSPI
OK
```

### 2.1.19 show stats simple\_rx

Display received packet information

#### Parameters

N/A

#### Returns

RSSI : received signal strength indication

CS\_Cnt : number of carrier sense counted

PSDU\_Succ : number of PSDU count successfully received (SIG CRC OK)

MPDU\_Rcv : number of MPDU count received

MPDU\_Succ : number of MPDU count successfully received (FCS OK)

SNR : signal to noise ratio

**※ The PSDU\_Succ counts NDP packets. However, the MPDU\_Rcv does not count NDP packet. In addition, The PSDU\_Succ regards A-MPDU packet as 1 packet.**

```
NRC> show stats simple_rx
-----
RSSI                : -27
CS_Cnt              : 595182
PSDU_Succ           : 2603
MPDU_Rcv            : 1134
MPDU_Succ           : 1046
SNR                 : 31
-----
OK
```

### 2.1.20 show mac clear

Clear MAC-layer TX and RX statistics

#### Parameters

N/A

### 2.1.21 show mac tx stats

Display MAC-layer TX statistics

#### Parameters

N/A

#### Returns

```
NRC> show mac tx stats
-----
MAC TX Statistics (OK count:24728, RTX count:259, last MCS:0)
-----
- AC[BK]      : OK(      0/      0) RTX(      0/      0)
- AC[BE]      : OK(    228/   28426) RTX(    214/   25084)
- AC[VI]      : OK(      0/      0) RTX(      0/      0)
- AC[VO]      : OK(    823/   84826) RTX(     45/   4565)
- AC[BC]      : OK(  23677/  805039) RTX(      0/      0)
- AC[GP]      : OK(      0/      0) RTX(      0/      0)
-----
- TYPE[MGMT]   : OK(    820/   83730) RTX(     45/   4565)
- TYPE[CTRL]   : OK(      0/      0) RTX(      0/      0)
- TYPE[DATA]   : OK(    231/   29522) RTX(    214/   25084)
- TYPE[BEAC]   : OK(  23678/  805066) RTX(      0/      0)
-----
- MCS[ 0]      : OK(    168/   19824) RTX(     36/   4248)
- MCS[ 1]      : OK(      0/      0) RTX(      0/      0)
- MCS[ 2]      : OK(     37/   6168) RTX(      0/      0)
- MCS[ 3]      : OK(      0/      0) RTX(      0/      0)
- MCS[ 4]      : OK(      0/      0) RTX(     59/   6962)
- MCS[ 5]      : OK(      0/      0) RTX(     55/   6490)
- MCS[ 6]      : OK(      0/      0) RTX(      4/    472)
- MCS[ 7]      : OK(      0/      0) RTX(     57/   6726)
- MCS[10]      : OK(  24525/  892353) RTX(     48/   4751)
-----
OK
```

OK (number of packets successfully transmitted / total aggregated bytes successfully transmitted)

RTX (number of packets retransmitted / total aggregated bytes retransmitted)

**✘ AC[GP] : GP stands for general purpose. This is used to send a frame which is the highest priority. This is a vendor-specific function.**



## 2.1.22 show mac rx stats

Display MAC-layer RX statistics

### Parameters

N/A

### Returns

```
NRC> show mac rx stats
-----
MAC RX Statistics (OK count:4673, NOK count:12, last MCS:10)
-----
- AC[BK]      : OK(      0/      0) NOK(      0/      0)
- AC[BE]      : OK(    3778/   5319311) NOK(     12/   16672)
- AC[VI]      : OK(      0/      0) NOK(      0/      0)
- AC[VO]      : OK(     895/   38776) NOK(      0/      0)
- AC[BC]      : OK(      0/      0) NOK(      0/      0)
- AC[GP]      : OK(      0/      0) NOK(      0/      0)
-----
- TYPE[MGMT]   : OK(     889/   38332) NOK(      0/      0)
- TYPE[CTRL]   : OK(      0/      0) NOK(      0/      0)
- TYPE[DATA]   : OK(    3784/  5319755) NOK(     12/   16672)
- TYPE[BEAC]   : OK(      0/      0) NOK(      0/      0)
-----
- MCS[ 0]     : OK(     58/   17980) NOK(      0/      0)
- MCS[ 1]     : OK(      1/    130) NOK(      0/      0)
- MCS[ 2]     : OK(     21/   31710) NOK(      0/      0)
- MCS[ 3]     : OK(      5/    6114) NOK(      0/      0)
- MCS[ 4]     : OK(     29/   43790) NOK(      0/      0)
- MCS[ 5]     : OK(     11/   12318) NOK(      1/   1510)
- MCS[ 6]     : OK(    137/  206870) NOK(      3/    4530)
- MCS[ 7]     : OK(   3488/ 4997538) NOK(      7/   10570)
- MCS[10]     : OK(     923/   41637) NOK(      1/      62)
-----
OK
```

OK (number of packets successfully received / total aggregated bytes successfully received)

NOK (number of packets received but discarded / total aggregated bytes discarded)

**✘ NOK : Even though the MPDU is successfully received, it can be discarded due to duplication or address mismatch.**

### 2.1.23 show mac tx clear

Clear MAC-layer TX statistics

#### Parameters

N/A

### 2.1.24 show mac rx clear

Clear MAC-layer RX statistics

#### Parameters

N/A

### 2.1.25 show self\_config <Country> <BW> <dwel time>

Show self config

#### Parameters

Country : Country Code. KR, US, EU.....

BW: scan channel bandwidth (1M, 2M, 4M)

dwel time: scan time for CCA (10 ~ 1000 ms)

### 2.1.26 show cal\_use

Show whether calibration data is used and country code.

#### Parameters

N/A

#### Returns

```
NRC> show cal_use
Calibration_use : on          Country : US
OK
```

### 2.1.27 show sysconfig

Show NRC WiFi board system configurations.

#### Parameters

N/A

## Returns

```
NRC> show sysconfig
[sysconfig]
version          : 2
mac_addr0        : 20:73:45:50:b0:0f
mac_addr1        : 20:73:45:50:b1:0f
cal_use          : 1
hw_version       : 1
trx_pass_fail    :
  cfo_cal        : 1
  da_cal         : 1
  txpwr_cal      : 1
  rssi_cal       : 1
  tx_test        : 1
  rx_test        : 0
chip_type        : 7394
module_type      : 2
module_feature   :
  txpwr_boosting_valid : 1
  fem_polarity_valid   : 0
  external_pa_valid    : 0
  max_txgain_valid     : 1
  max_txpwr_valid      : 1
txpwr_boosting   : 2
max_txgain       : 46
max_txpwr        : 30
fem_polarity     : "0x00"
gpio_index_map   :
  pa_en_valid       : 0
  pa_en_pin         : 0
  ant_sel_valid     : 1
  ant_sel_pin       : 15
  power_down_valid  : 1
  power_down_data   : 1
  power_down_pin    : 16

serial_number    :
user_factory     : {
"test_field1": "abc",
"test_field2": "xyz",
"test_field3": "123"
}

[user_factory]
{
"test_field1": "abc",
"test_field2": "xyz",
"test_field3": "123"
}

OK
```

### 2.1.28 show xtal\_status

Show indication whether the crystal oscillator is stable or not.

#### Parameters

N/A

#### Returns

```
NRC> show xtal_status
XTAL status          : 1
OK
```

### 2.1.29 show bcn\_mcs [vif id]

Show the MCS (Modulation and Coding Scheme) level for beacon transmissions.

#### Parameters

vif\_id : interface ID (default 0, vif\_id can be 0 or 1 when the concurrent mode is enabled)

#### Returns

```
NRC> show bcn_mcs 0
----- current beacon rate -----
VIF#:0, Current beacon mcs = 10
-----
OK

NRC> show bcn_mcs 1
----- current beacon rate -----
VIF#:1, Current beacon mcs = 0
-----
OK
```

### 2.1.30 show rc\_pf

Show rate control profile used.

1 : for strong RF field.

2 : for middle/low RF field.

#### Parameters

N/A

#### Returns

```
NRC> show rc_pf
Profile#
OK
```

```
: 1
```

### 2.1.31 show rc\_param

Show rate control parameters.

EWMA : The percentage of Exponentially Weighted Moving Average (EWMA) used in rate control

Update interval : shows the frequency at which EWMA data is updated (unit : ms)

#### Parameters

N/A

#### Returns

```
NRC> show rc_param
EWMA(%) : 30      Update interval(ms) : 500
OK
```

## 2.2 set

### 2.2.1 set gi <short|long> [vif\_id]

Set Guard Interval

#### Parameters

short : Short Guard Interval

long : Long Guard Interval (default)

vif\_id : interface ID (default 0, vif\_id can be 0 or 1 when the concurrent mode is enabled)

### 2.2.2 set maxagg <ac> <maxagg> {options}

Set maximum number of MPDU of AC in AMPDU

(AP)

```
set maxagg ac maxagg           // set maxagg for all-sta
```

```
set maxagg ac maxagg maxsize   // set maxagg and maxsize for all-sta
```

```
set maxagg ac maxagg vif aid    // set maxagg for specifi aid
```

(STA)

```
set maxagg ac maxagg           //set maxagg
```

```
set maxagg ac maxagg maxsize   //set maxagg and maxsize
```

#### Parameters

ac : access category

maxagg : number of MPDU in AMPDU (0-8(1Mhz), 0-16(2,4Mhz), 0: off)

maxsize: aggregation threshold size (default : 0)

vif : virtue interface identification

aid: association identification

### 2.2.3 set ack\_mode {mode}

Set ACK mode

#### Parameters

mode: no|ndp|normal|show

### 2.2.4 set rc <on|off> [vif\_id]

rate control on / off

#### Parameters

on : enable rate control (automatic selection of MCS based on the link condition) (default)

off : disable rate control (user can select MCS manually by using “test mcs” command)

vif\_id : interface ID (default 0, vif\_id can be 0 or 1 when the concurrent mode is enabled)

### 2.2.5 set duty <on|off> {duty window in usec} {tx duration in usec}

Set duty cycle

#### Parameters

on|off : enable|disable duty cycle function (default; off)

duty window : specify duty cycle window in usec. (default: 60 sec)

tx duration : specify allowed tx duration within duty cycle window in usec. (default: 5 sec)

*(ex) duty window 10000000 (10sec) and tx duration 1000000 (1sec) will be set to access the channel 1 second during every 10 seconds.*

### 2.2.6 set cca\_thresh <value>

set CCA threshold value

#### Parameters

value: CCA threshold value (-85 dbm ~ -76 dbm)

```
NRC> set cca_thresh -70
-70
OK
```

### 2.2.7 set txpwr <value>

Set tx power

#### Parameters

value : 1~20

※ *This command only could be applied when autotxgain is off.*

### 2.2.8 set wakeup\_pin <debounce> <pin index>

Configure a wakeup-gpio-pin when system state is uCode or deepsleep

#### Parameters

debounce : on|off

pin index : 0~31

### 2.2.9 set wakeup\_source <wakeup\_sources>

Configure wakeup sources when system state is deepsleep.

#### Parameters

wakeup\_sources : rtc gpio hspi

※ It is possible to assign multiple sources (ex) set wakeup\_source rtc gpio

### 2.2.10 set addba [tid] {mac address}

set addba tid / send addba with mac address

#### Parameters

tid: Traffic Identifier

mac address : mac address

### 2.2.11 set delba [tid] {mac address}

set delba tid / send delba with mac address

#### Parameters



tid: Traffic Identifier

mac address : mac address

### 2.2.12 set rts <on|off|default> <threshold> <vif\_id>

Enable/disable RTS, set RTS threshold

#### Parameters

threshold : RTS & CTS threshold in Byte

vif\_id : virtue interface identification

Ex1) send RTS regardless of packet length (set rts on 0 0)

Ex2) no use of RTS (set rts off 0 0)

Ex3) set RTS threshold (set rts default 1000 0)

### 2.2.13 set tx\_time <CS time> <Blank time>

set tx\_time about <CS time> <Blank time>

#### Parameters

CS time: Carrier sensing time. Listen before talk (in us)

Blank time: Tx pause time (in us)

### 2.2.14 set drop [vif id] [mac address] {on|off}

set drop frames from configured mac address

#### Parameters

vif\_id : interface ID (default 0, vif\_id can be 0 or 1 when the concurrent mode is enabled)

mac address: drop frames from mac address

on|off: Enable disable drop mac address

### 2.2.15 set tsensor [GPIO for SCL] [GPIO for SDA]

set temperature sensor scl, sda

#### Parameters

SCL: GPIO for SCL (default 31)

SDA: GPIO for SDA (default 30)

### 2.2.16 set self\_config <Country> <BW> <dwel time>

set self\_config

#### Parameters

Country : Country Code. KR, US, EU.....

BW: scan channel bandwidth (1M, 2M, 4M)

dwel time: scan time for CCA (10 ~ 1000 ms)

### 2.2.17 set ampdu\_mode [mode]

Set the AMPDU(Aggregate MAC Protocol Data Unit) mode

#### Parameters

mode : auto, manual or auto.

#### Returns

```
NRC> set ampdu_mode auto
OK
```

### 2.2.18 set bcn\_mcs [vif id] [MCS level]

Set the MCS (Modulation and Coding Scheme) level for beacon transmissions.

#### Parameters

vif\_id : interface ID (default 0, vif\_id can be 0 or 1 when the concurrent mode is enabled)

MCS level : 10, 0, 1, 2, 3, 4, 5, 6, 7

#### Returns

```
NRC> set bcn_mcs 0 5
set bcn_mcs: 5
OK

NRC> show bcn_mcs 0
----- current beacon rate -----
VIF#:0, Current beacon mcs = 5
-----
OK
```

### 2.2.19 set rc\_pf [Profile number]

set rate control profile.

#### Parameters

Profile number: 1 for strong RF field or 2 for middle/low RF field.

#### Returns

```
NRC> set rc_pf 2
OK

NRC> show rc_pf
Profile#           : 2
OK
```

### 2.2.20 set rc\_param [EWMA ID] [Interval ID]

set rate control parameters.

#### Parameters

EWMA ID : EWMA ID x 10 (%) will be set for EWMA. (1/2/3/4/5)

Interval ID : Interval ID x 100 (ms) will be set for the interval. (1/2/3/4/5/6/7)

#### Returns

```
NRC> set rc_param 3 5  
OK
```

```
NRC> show rc_param  
EWMA(%) : 30          Update interval(ms) : 500  
OK
```

## 2.3 test

### 2.3.1 test mcs <value>

Set MCS(Modulation Coding Scheme) index.

#### Parameters

value : 0~7, 10 (10 can be used only in 1MHz bandwidth)

```
NRC> test mcs 7
OK
```

### 2.3.2 test country <Country>

Set country for a test command

#### Parameters

Country : Country Code. KR, US, EU.....

```
NRC> test country US
OK
```

### 2.3.3 test cont\_tx <freq> <bw> <mcs> <txpwr> | <stop>

test countinous TX

#### Parameters

freq : frequency (in MHz)

bw : 1m, 2m, 4m

mcs : 0~7, 10 (10 can be used only in 1MHz bandwidth)

txpwr : TX power

[Start]

```
NRC> test cont_tx 9025 1m 7 17
OK
```

[Stop]

```
NRC> test cont_tx stop
OK
```

## 2.4 gpio

The GPIO CLI commands listed below can be used to configure GPIO options to read from and write to GPIO pins. Note that GPIO command usage is valid for non-dedicated GPIO pins only. Refer to the NRC7292 Technical Reference Manual for the list of dedicated GPIO pins.

### 2.4.1 gpio read <pin index>

Read the value (0: low / 1: high) from a GPIO pin.

#### Parameters

pin index: GPIO pin index

### 2.4.2 gpio write <pin index> <value>

Write a value (0: low / 1: high) to a GPIO pin.

#### Parameters

pin index: GPIO pin index

value: 0: low / 1: high

### 2.4.3 gpio direction <pin index> [direction]

Get or set the direction (0: input / 1: output) of a GPIO pin.

#### Parameters

pin index: GPIO pin index

(For set command only) direction: 0: input / 1: output

### 2.4.4 gpio pullup <pin index> [pull-up option]

Get or set the pull-up option (0: disable / 1: enable) for a GPIO pin.

#### Parameters

pin index: GPIO pin index

(For set command only) pull-up option: 0: disable / 1: enable

### 3 Revision History

Revision No	Date	Comments
Ver 1.0	4/5/2023	Initial version
Ver 1.1	9/19/2023	Remove 'auto' parameter for set gi [Added] test country, test cont_tx, show cal_use, show sysconfig, show rc_pf, show rc_param, set ampdu_mode, set bcn_mcs, show bcn_mcs, show xtal_status