


---

## Home Automation Stack

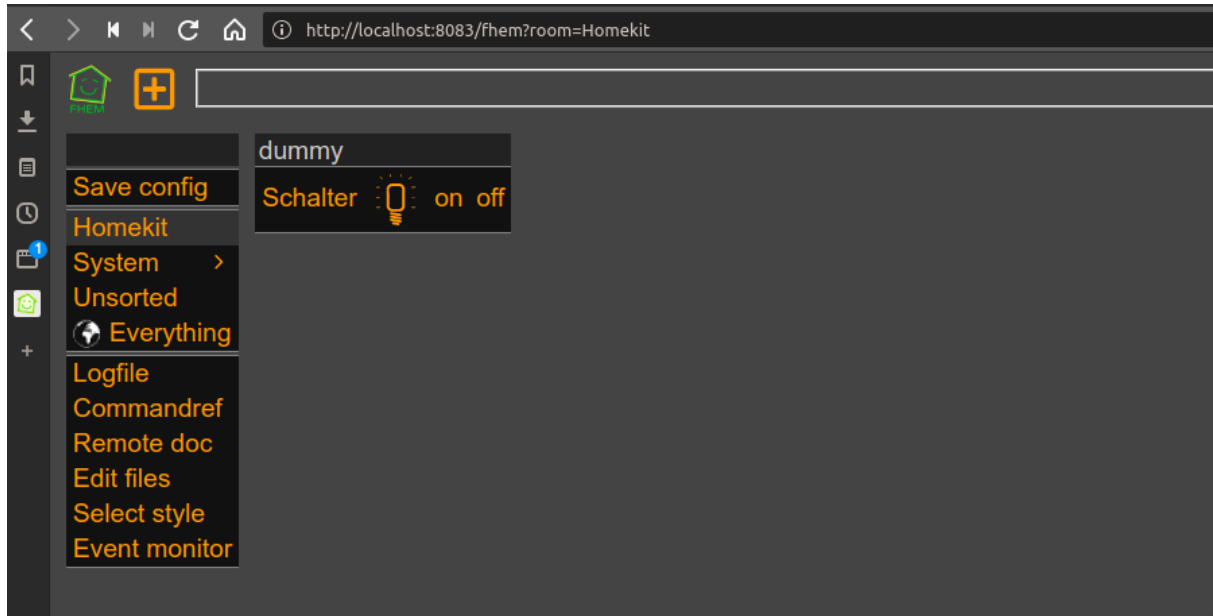

The stack contains everything to run FHEM on a Docker host. Mosquitto is used as message broker. SIRI functions are realized with the help of a homebridge container. The complete stack runs on x86 as well as arm architectures. It is very easy to clone its complete productive environment and has a simple way to build a test system.

### Todo

- DBLog Integration
- Boot config Raspberrypi for Homematic modul

### Requirements

- docker
- docker-compose

### Installation raspberrypi

#### Raspian Download

Download the image of your choice: Raspian Download Unzip the image and install it with:

---

```
1  sudo dd bs=4M if=2019-09-26-raspbian-buster-full.img of=/dev/mmcblk0
   conv=fsync
2  sync
```

Eject the card and insert it again to mount the filesystems boot & rootfs. Touch a blank file ssh to enable

```
1  sudo touch /media/boot/ssh
2  sync
3  umount /media/boot
4  umount /media/rootfs
```

Eject the card and insert into your raspberry. After that power on the rpi and login with the known

```
1  ssh pi@raspberrypi4
```

```
1  pi@raspberrypi:~ $ passwd
2  Changing password for pi.
3  Current password:
4  New password:
5  Retype new password:
6  passwd: password updated successfully
7  pi@raspberrypi:~ $
```

### System Update

```
1  sudo apt-get update
2  sudo apt-get dist-upgrade
```

### Set timezone

```
1  sudo dpkg-reconfigure tzdata
```

### Raspberry Config

- 1) Expand the root filesystem (A1 / Advanced Options)
- 2) Update raspi-config

```
sudo raspi-config sudo reboot
```

### Intall additional packages

---

```
1 sudo apt-get install wget git apt-transport-https vim telnet zsh zsh-  
autosuggestions zsh-syntax-highlighting
```

### Install oh-my-zsh

```
1 sh -c "$(curl -fsSL https://raw.githubusercontent.com/ohmyzsh/ohmyzsh/master/  
tools/install.sh)"
```

### Install log2ram (/var/log 2 ram)

```
1 echo "deb http://packages.azlux.fr/debian/ buster main" | sudo tee /  
etc/apt/sources.list.d/azlux.list  
2 wget -qO - https://azlux.fr/repo.gpg.key | sudo apt-key add -  
3 apt update  
4 apt install log2ram
```

### Setup ssh key for user

```
1 ssh-keygen -t rsa -b 8192
```

### Install .ssh/config file to ignore strictHostKeyChecking

```
1 vi ~/.ssh/config  
2  
3 Host fhemlocalhost  
4 Hostname localhost  
5 Port 222  
6 User fhem  
7 StrictHostKeyChecking no
```

### Install docker & docker-compose

```
1 #curl -sSL https://get.docker.com | sh  
2 #sudo systemctl enable docker  
3 #sudo systemctl start docker  
4 sudo apt-get install docker docker-compose  
5 sudo usermod -aG docker pi  
6 sudo reboot
```

## git repository export and start all container


```
1 cd
2 git clone https://github.com/stormmurdoc/fhemdocker.git
3 cd fhemdocker
4 docker-compose up
```

## Access the application

```
1 http://localhost:80
```

## Container

### Tasmota Admin

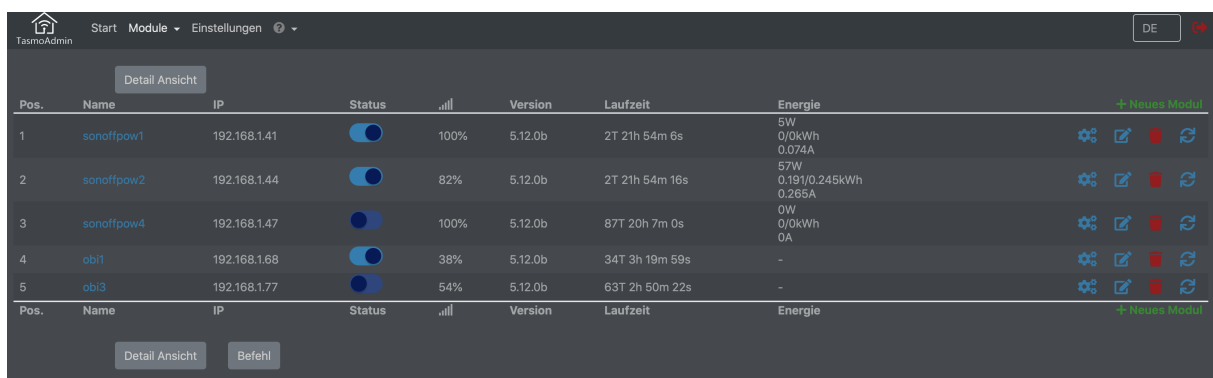

The screenshot shows the Tasmota Admin web interface. At the top, there is a navigation bar with a home icon, the text 'TasmotaAdmin', and a menu with 'Start', 'Module', 'Einstellungen', and a user icon. On the right of the navigation bar are buttons for 'DE' and a red star icon. Below the navigation bar is a 'Detail Ansicht' button. The main content area displays a table of modules. The table has columns for 'Pos.', 'Name', 'IP', 'Status', a signal strength icon, 'Version', 'Laufzeit', and 'Energie'. There are five rows of modules. Each row has a set of icons on the right: a gear, a document, a red square, and a refresh icon. Below the table, there are two buttons: 'Detail Ansicht' and 'Befehl'. At the bottom right of the table area, there is a '+ Neues Modul' link.

Pos.	Name	IP	Status		Version	Laufzeit	Energie	
1	sonoffpow1	192.168.1.41		100%	5.12.0b	2T 21h 54m 6s	5W 0/0kWh 0.074A	
2	sonoffpow2	192.168.1.44		82%	5.12.0b	2T 21h 54m 16s	57W 0.191/0.245kWh 0.265A	
3	sonoffpow4	192.168.1.47		100%	5.12.0b	87T 20h 7m 0s	0W 0/0kWh 0A	
4	obi1	192.168.1.68		38%	5.12.0b	34T 3h 19m 59s	-	
5	obi3	192.168.1.77		54%	5.12.0b	63T 2h 50m 22s	-	

Detail Ansicht Befehl

+ Neues Modul

Abbildung 1: "tasmotaadmin"

---

## Tasmota Compiler

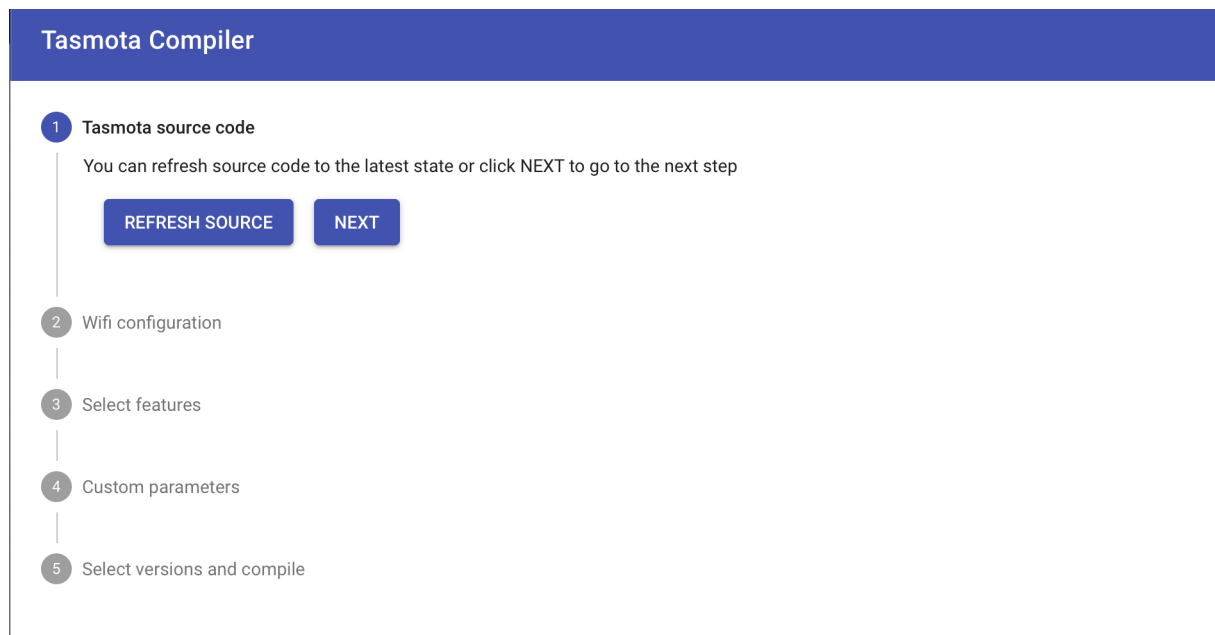


Abbildung 2: "tasmotacompiler"

## Homebridge

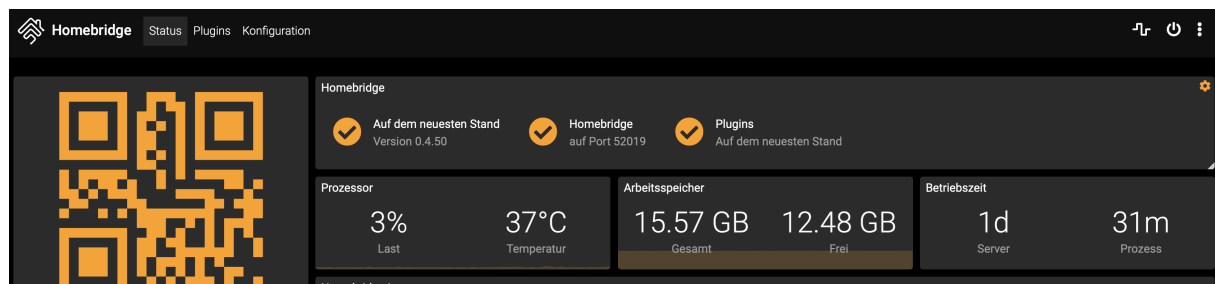


Abbildung 3: "homebridge"

## Portainer

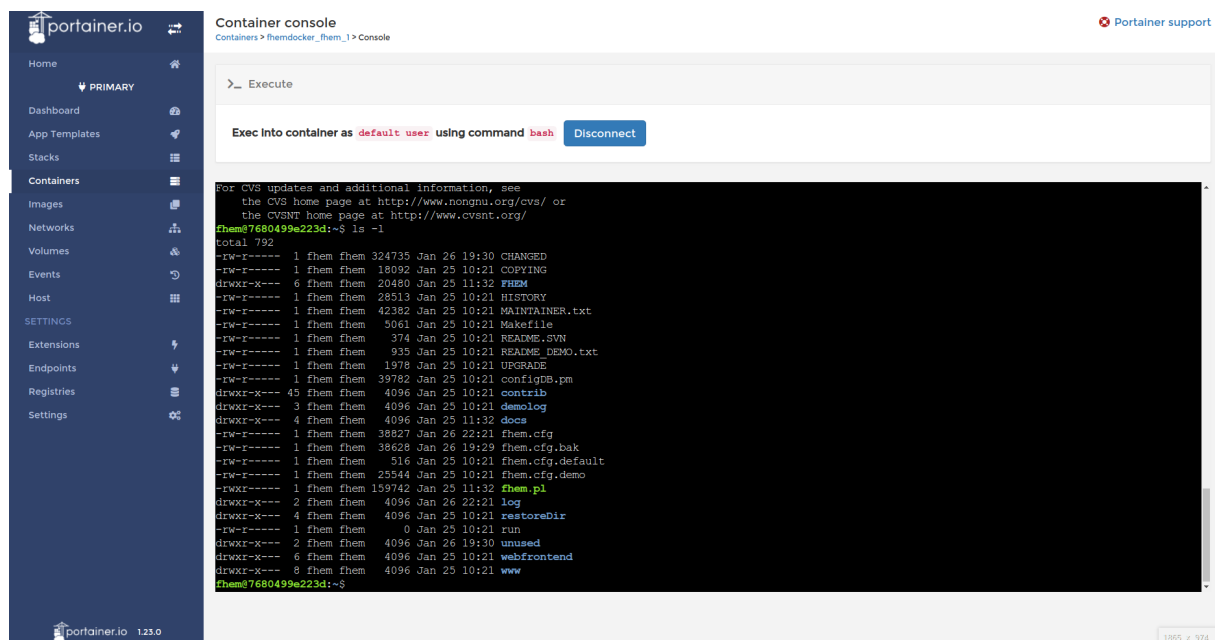


Abbildung 4: “portainer”

## Deconz

### deCONZ Image Container Integration

## Configuring Raspbian for RaspBee

Raspbian defaults Bluetooth to /dev/ttyAMA0 and configures a login shell over serial (tty). You must disable the tty login shell and enable the serial port hardware, and swap Bluetooth to /dev/S0, to allow RaspBee to work properly under Docker.

To disable the login shell over serial and enable the serial port hardware:

- 1) `sudo raspi-config`
- 2) Select Interfacing Options
- 3) Select Serial
- 4) “Would you like a login shell to be accessible over serial?” Select No
- 5) “Would you like the serial port hardware to be enabled?” Select Yes
- 6) Exit raspi-config and reboot To swap Bluetooth to /dev/S0 (moving RaspBee to /dev/ttyAMA0), run the following command and then reboot:

---


```
echo 'dtoverlay=pi3-miniuart-bt' | sudo tee -a /boot/config.txt
```

After running the above command and rebooting, RaspBee should be available at /dev/ttyAMA0.

## ctop

### Description

ctop is a commandline monitoring tool for linux containers

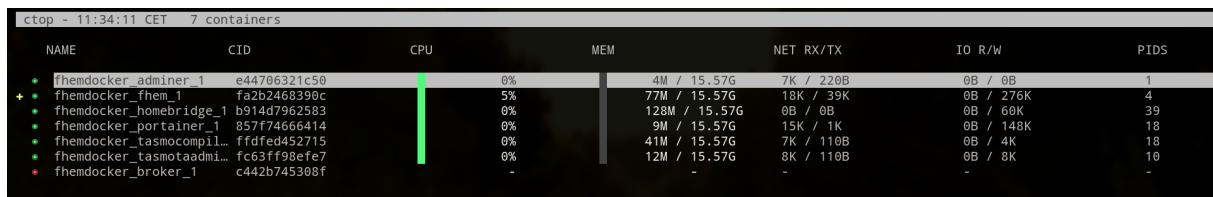

ctop - 11:34:11 CET 7 containers						
NAME	CID	CPU	MEM	NET RX/TX	IO R/W	PIDS
fhemdocker_adminer_1	e44706321c50	0%	4M / 15.57G	7K / 220B	0B / 0B	1
fhemdocker_fhem_1	fa2b2468390c	5%	77M / 15.57G	18K / 39K	0B / 276K	4
fhemdocker_homebridge_1	b914d7962583	0%	128M / 15.57G	0B / 0B	0B / 60K	39
fhemdocker_portainer_1	857f74666414	0%	9M / 15.57G	15K / 1K	0B / 148K	18
fhemdocker_tasmocompil...	ffdfed452715	0%	41M / 15.57G	7K / 110B	0B / 4K	18
fhemdocker_tasmotaadmi...	fc63ff98efe7	0%	12M / 15.57G	8K / 110B	0B / 8K	10
fhemdocker_broker_1	c442b745388f	-	-	-	-	-

Abbildung 5: “ctop”

### Installation

ctop is available in AUR, so you can install it using AUR helpers, such as YaY, in Arch Linux and its variants such as Antergos and Manjaro Linux.

### Installation Linux

```
1 sudo wget https://github.com/bcicen/ctop/releases/download/v0.7.3/
  ctop-0.7.3-linux-amd64 -O /usr/local/bin/ctop
2 sudo chmod +x /usr/local/bin/ctop
```

```
1 sudo wget https://github.com/bcicen/ctop/releases/download/v0.7.3/
  ctop-0.7.3-linux-arm -O /usr/local/bin/ctop
2 sudo chmod +x /usr/local/bin/ctop
```

### Contributing to fhemdocker

Contributions are encouraged and welcome!