


# Az-Delivery

## Welcome!

Thank you for purchasing our *AZ-Delivery 1.3 inch OLED I2C Screen*. On the following pages, you will be introduced to how to use and set up this handy device.

**Have fun!**

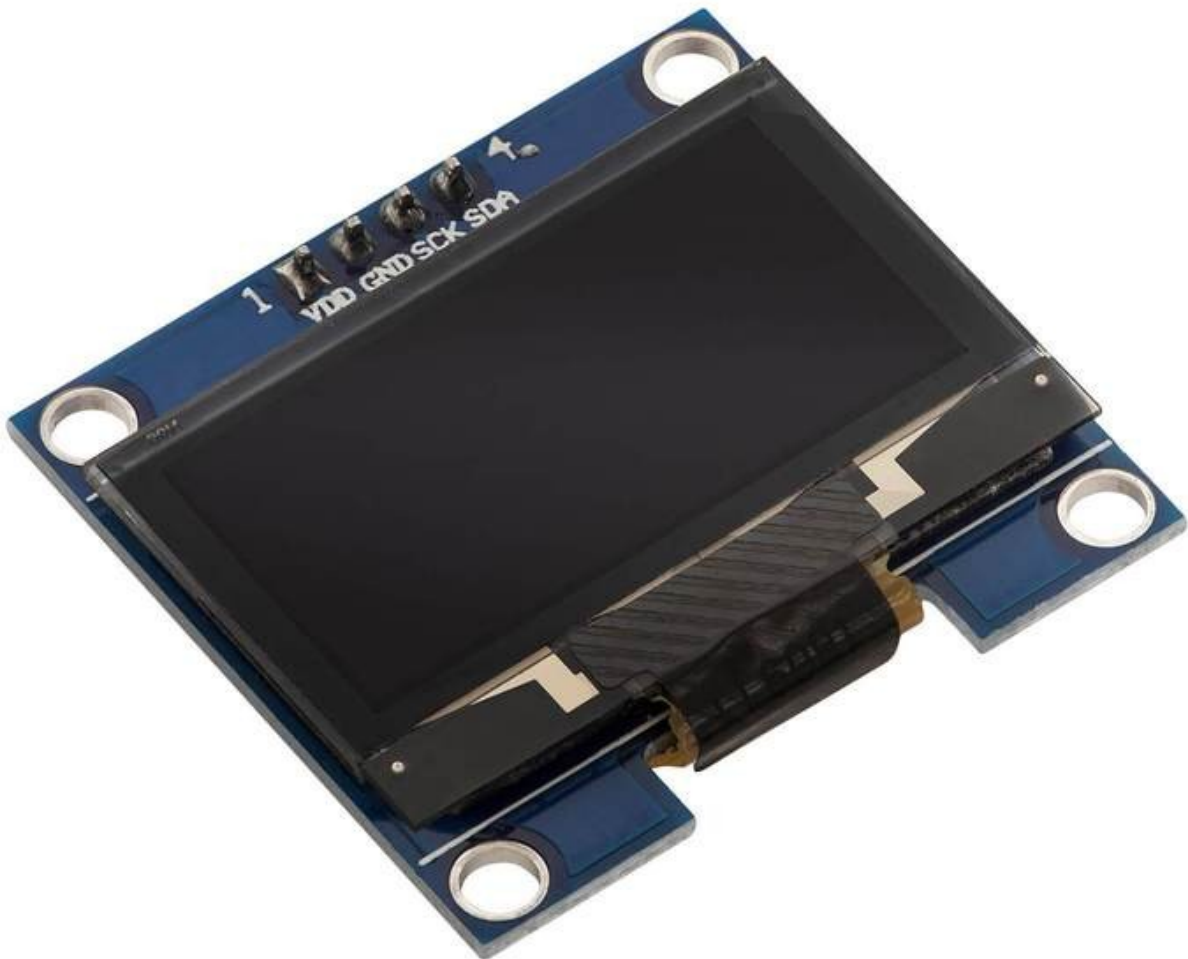

## Areas of application

Education and teaching: Use in schools, universities and training institutions to teach the basics of electronics, programming and embedded systems. Research and development: Use in research and development projects to create prototypes and experiments in the fields of electronics and computer science. Prototype development: Use in the development and testing of new electronic circuits and devices. Hobby and Maker Projects: Used by electronics enthusiasts and hobbyists to develop and implement DIY projects.

## Required knowledge and skills

Basic understanding of electronics and electrical engineering. Knowledge of programming, especially in the C/C++ programming language. Ability to read schematics and design simple circuits. Experience working with electronic components and soldering.

## Operating conditions

The product may only be operated with the voltages specified in the data sheet to avoid damage. A stabilized DC power source is required for operation. When connecting to other electronic components and circuits, the maximum current and voltage limits must be observed to avoid overloads and damage.

## Environmental conditions

The product should be used in a clean, dry environment to avoid damage caused by moisture or dust. Protect the product from direct sunlight (UV), as this can negatively affect the lifespan of the display.

## Intended Use

The product is designed for use in educational, research and development environments. It is used to develop, program and prototype electronic projects and applications. The product is not intended as a finished consumer product, but rather as a tool for technically savvy users, including engineers, developers, researchers and students.

## Improper foreseeable use

The product is not suitable for industrial use or safety-relevant applications. Use of the product in medical devices or for aviation and space travel purposes is not permitted.

## disposal

Do not discard with household waste! Your product is according to the European one Directive on waste electrical and electronic equipment to be disposed of in an environmentally friendly manner. The valuable raw materials contained therein can be recycled become. The application of this directive contributes to environmental and health protection. Use the collection point set up by your municipality to return and Recycling of old electrical and electronic devices. WEEE Reg. No.: DE 62624346

## electrostatic discharge

The display is sensitive to electrostatic discharge (ESD), which can damage or destroy the electronic components. Please note the following safety instructions to avoid ESD hazards: Attention: Electrostatic charges on your body can damage the display. Note: Ground yourself by wearing an anti-static wrist strap connected to a grounded surface or by touching a grounded metal surface before handling the display. Attention: Use anti-static mats and bags to protect the display. Note: Place the display on an anti-static work mat and store in anti-static bags when not in use. Note: A clean and grounded workplace minimizes the risk of ESD. Action: Keep your workplace clean and free of materials that can generate electrostatic charges. Make sure all surfaces used are grounded.

## safety instructions

Although the display complies with the requirements of the RoHS Directive (2011/65/EU) and does not contain any hazardous substances in quantities above the permitted limits, residual chemical hazards may still exist. Please note the following safety instructions: Attention: The back of the display and the circuit board can release chemical residues from manufacturing or during operation. Note: Wear protective gloves when handling or installing the display for a long time to avoid skin irritation. Caution: Electronic components can emit small amounts of volatile organic compounds (VOCs), especially if the display is new. Note: Make sure you work in a well-ventilated area to minimize the concentration of fumes in the air. Caution: Do not use harsh chemicals or solvents to clean the display as they may damage the protective coating or electronics. Note: Use an anti-static cleaning cloth or special electronics cleaner to carefully clean the display. Although the display complies with

the requirements of the RoHS Directive (2011/65/EU) and does not contain any hazardous substances in quantities above the permitted limits, residual chemical hazards may still exist. Please note the following safety instructions: Attention: The back of the display and the circuit board can release chemical residues from manufacturing or during operation. Note: Wear protective gloves when handling or installing the display for a long time to avoid skin irritation. Caution: Electronic components can emit small amounts of volatile organic compounds (VOCs), especially if the display is new. Note: Make sure you work in a well-ventilated area to minimize the concentration of fumes in the air. Caution: Do not use harsh chemicals or solvents to clean the display as they may damage the protective coating or electronics. Note: Use an anti-static cleaning cloth or special electronics cleaner to carefully clean the display. The display contains sensitive electronic components and a top layer. Improper handling or excessive pressure can cause damage to the display or injury. Observe the following safety instructions to avoid mechanical hazards: Attention: The cover of the display is fragile and can break if handled improperly. Note: Avoid applying strong pressure or bending the display. Handle the display carefully and only by the circuit board to avoid breakages. Caution: Drops or impacts can crack the surface of the display and damage the electronic components on the back. Note: Avoid dropping the display and protect it from impacts. Use a soft surface when working to avoid scratches. Attention: If the display breaks, sharp pieces of glass can cause injuries. Note: If the display breaks, handle the fragments carefully and wear protective gloves to avoid cuts. Dispose of the glass pieces safely. Note: Improper attachment can lead to mechanical stress and breakage of the display. Action: Attach the display securely and without excessive pressure. Use appropriate brackets or housings to mount the display stably. Caution: Improper cleaning methods may scratch or damage the surface. Note: Only use soft, anti-static cloths to clean the display. Avoid aggressive cleaning agents and strong friction. The display operates with electrical voltages and currents that, if used improperly, can cause electric shocks, short circuits or fires. Please note the following safety instructions: Attention: Use the product only with the specified voltages. Note: The performance limits of the product can be found in the associated data sheet. Note: Improper voltage sources can damage the display or cause dangerous situations. Action: Only use tested and suitable power supplies or batteries to power your circuits. Make sure the voltage source meets the requirements of the display. Caution: Avoid short circuits between the connectors and components of the product. Note: Make sure that no conductive objects touch or bridge the circuit board. Use insulated tools and pay attention to the arrangement of connections. Caution: Do not perform any work on the product when it is connected to a power source. Note: Disconnect the product from power before making any circuit changes or connecting or removing components. Note: Look for signs of electrical damage such as smoke, unusual odors, or discoloration. Action: If such signs occur, turn off the power immediately and inspect the circuit thoroughly for errors. The display can generate heat during operation, which could lead to overheating, burns or fire if handled improperly. Please note the following safety instructions: Attention: Some components of the display can heat up during operation or in the event of an error. Measure: After switching off, allow the display to cool down sufficiently before touching the individual components on the back directly. Avoid direct contact with hot components. Caution: Overloading can cause excessive heating of the electronic components. Note: Make sure the power and voltage supply meets the specifications of the display and does not cause overload.



## Table of Contents

Introduction.....	3
Specifications.....	4
How to set-up Arduino IDE.....	5
How to set-up the Raspberry Pi and Python.....	9
The pinout.....	10
Connecting the screen with Atmega328P Board.....	11
Library for Arduino IDE.....	12
Sketch example.....	13
Connecting the screen with Raspberry Pi.....	24
Enabling the I2C interface.....	25
finding I2C Adresses.....	26
Python library.....	27
Python script.....	28



## Introduction

OLED stands for Organic Light Emitting Diodes. OLED screens are arrays of LEDs stacked together in a matrix. The 1.3 OLED screen has 128x64 pixels (LEDs). To control these LEDs we need a driver circuit or a chip. The screen has a driver chip called *SH1106*. The driver chip has an I2C interface for communication with the main microcontroller.

The OLED screen and SH1106 driver chip operate in the 3.3V range. But there is an on-board 3.3V voltage regulator, therefore, these screens can be operated in the 5V range.

The performance of these screens is much better than traditional LCDs. Simple I2C communication and low power consumption make them more suited for a variety of applications.

## Specifications

Power supply voltage	from 3.3V to 5V
Communication interface	I2C
Pixel Color	White
Operating temperature	from -20 to 70 °C
Low power consumption	< 11mA
Dimensions	36 x 34 x 3mm [1.4 x1.3 x 0.1inch]

To extend the lifetime of the screen, it is common to use a “Screen saver”. It is recommended not to use constant information over a long period of time, because that will shorten the lifespan of the screen and increase the, so called, “Screen burn” effect.

## How to set-up Arduino IDE

If the Arduino IDE is not installed, follow the [link](#) and download the installation file for the operating system of choice.

### Download the Arduino IDE



The screenshot shows the Arduino IDE download page. On the left, there is a teal circle with a white infinity symbol containing a minus and a plus sign. To its right, the text reads: **ARDUINO 1.8.9**  
The open-source Arduino Software (IDE) makes it easy to write code and upload it to the board. It runs on Windows, Mac OS X, and Linux. The environment is written in Java and based on Processing and other open-source software.  
This software can be used with any Arduino board. Refer to the [Getting Started](#) page for Installation instructions.

On the right side, there are links for different operating systems: **Windows** Installer, for Windows XP and up; **Windows** ZIP file for non admin install; **Windows app** Requires Win 8.1 or 10 with a 'Get' button; **Mac OS X** 10.8 Mountain Lion or newer; **Linux** 32 bits; **Linux** 64 bits; **Linux** ARM 32 bits; **Linux** ARM 64 bits. At the bottom right, there are links for Release Notes, Source Code, and Checksums (sha512).

For *windows* users, double click on the downloaded .exe file and follow the instructions in the installation window.

# Az-Delivery

For *Linux* users, download a file with the extension `.tar.xz`, which has to be extracted. When it is extracted, go to the extracted directory and open the terminal in that directory. Two `.sh` scripts have to be executed, the first called `arduino-linux-setup.sh` and the second called `install.sh`.


To run the first script in the terminal, open the terminal in the extracted directory and run the following command:

```
sh arduino-linux-setup.sh user_name
```

**user\_name** - is the name of a superuser in the Linux operating system. A password for the superuser has to be entered when the command is started. Wait for a few minutes for the script to complete everything.

The second script called `install.sh` script has to be used after installation of the first script. Run the following command in the terminal (extracted directory): **sh install.sh**

After the installation of these scripts, go to the *All Apps*, where the *Arduino IDE* is installed.

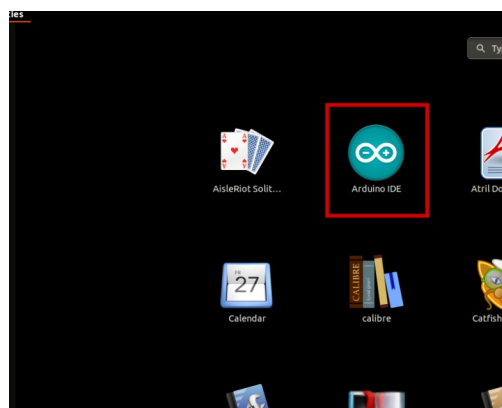




# Az-Delivery

Almost all operating systems come with a text editor preinstalled (for example, *Windows* comes with *Notepad*, *Linux Ubuntu* comes with *Gedit*, *Linux Raspbian* comes with *Leafpad*, etc.). All of these text editors are perfectly fine for the purpose of the eBook.

Next thing is to check if your PC can detect your board. Open freshly installed Arduino IDE, and go to:

*Tools > Board > {your board name here}*

*{your board name here}* should be the *Arduino/Genuino Uno*, as it can be seen on the following image:

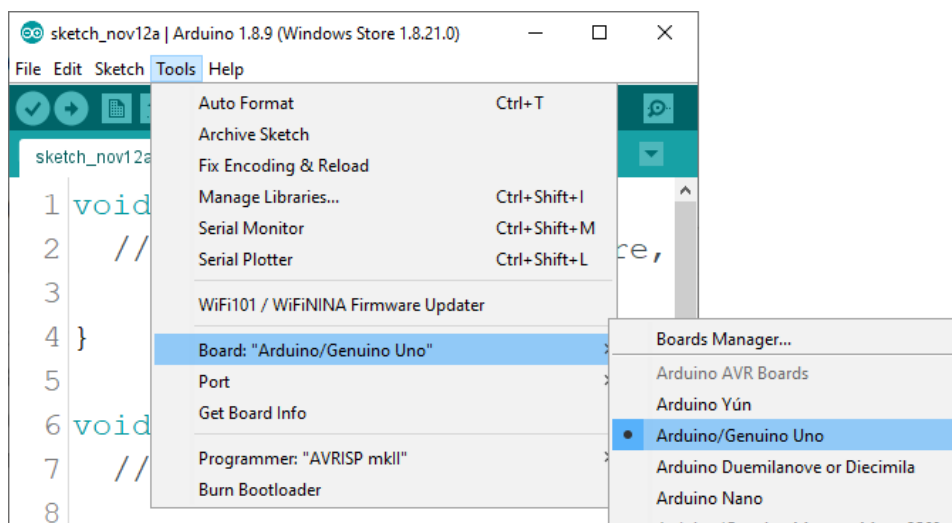


The port to which the microcontroller board is connected has to be selected.

Go to: *Tools > Port > {port name goes here}*

and when the microcontroller board is connected to the USB port, the port name can be seen in the drop-down menu on the previous image.

If the Arduino IDE is used on Windows, port names are as follows:

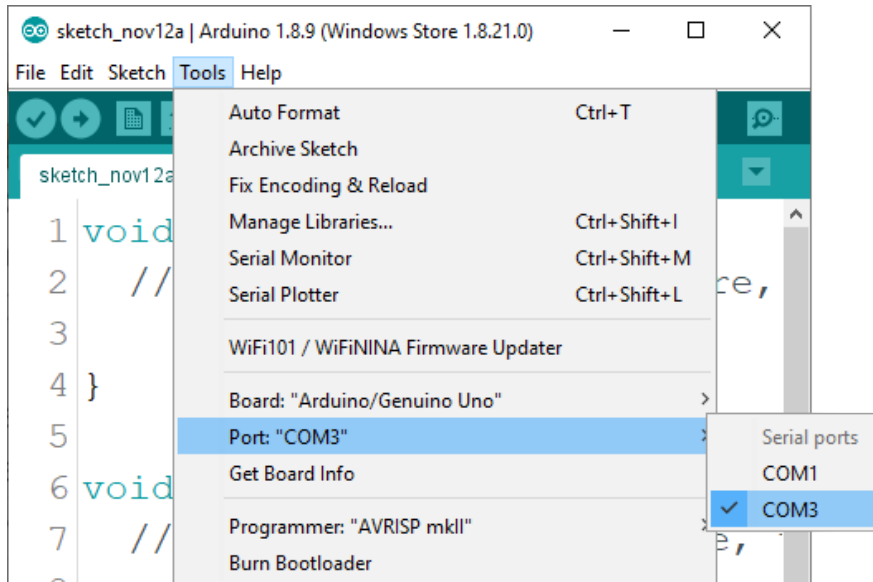

For *Linux* users, for example port name is `/dev/ttyUSBx`, where *x* represents integer number between 0 and 9.



## How to set-up the Raspberry Pi and Python

For the Raspberry Pi, first the operating system has to be installed, then everything has to be set-up so that it can be used in the *Headless* mode. The *Headless* mode enables remote connection to the Raspberry Pi, without the need for a *PC* screen Monitor, mouse or keyboard. The only things that are used in this mode are the Raspberry Pi itself, power supply and internet connection. All of this is explained minutely in the free eBook:


[Raspberry Pi Quick Startup Guide](#)

The *Raspbian* operating system comes with *Python* preinstalled.

## The pinout

The 1.3 inch OLED screen has four pins. The pinout is shown on the following image:

I2C Serial Data Line - SDA  
I2C Serial Clock Line - SCK  
Ground - GND  
Power Supply - VDD

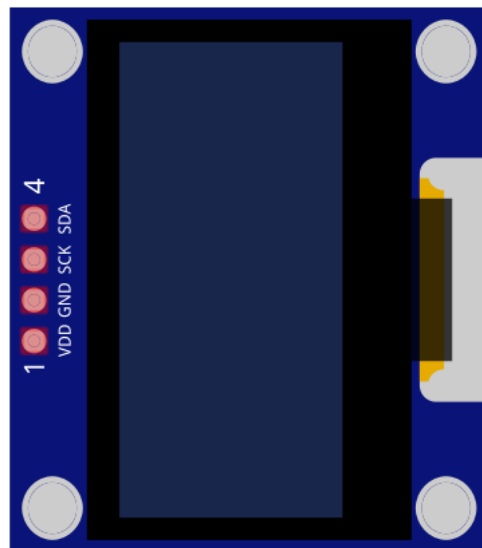


The screen has an on-board voltage regulator. The pins of the 1.3 inch OLED screen can be connected to 3.3V or to 5V power supply without danger to the sensor itself.

**NOTE:** When using Raspberry Pi, the power supply should be drawn from a 3.3V pin only.

## Connecting the screen with Atmega328P Board


Connect the 1.3 inch OLED screen with the Atmega328P Board as shown on the following connection diagram:

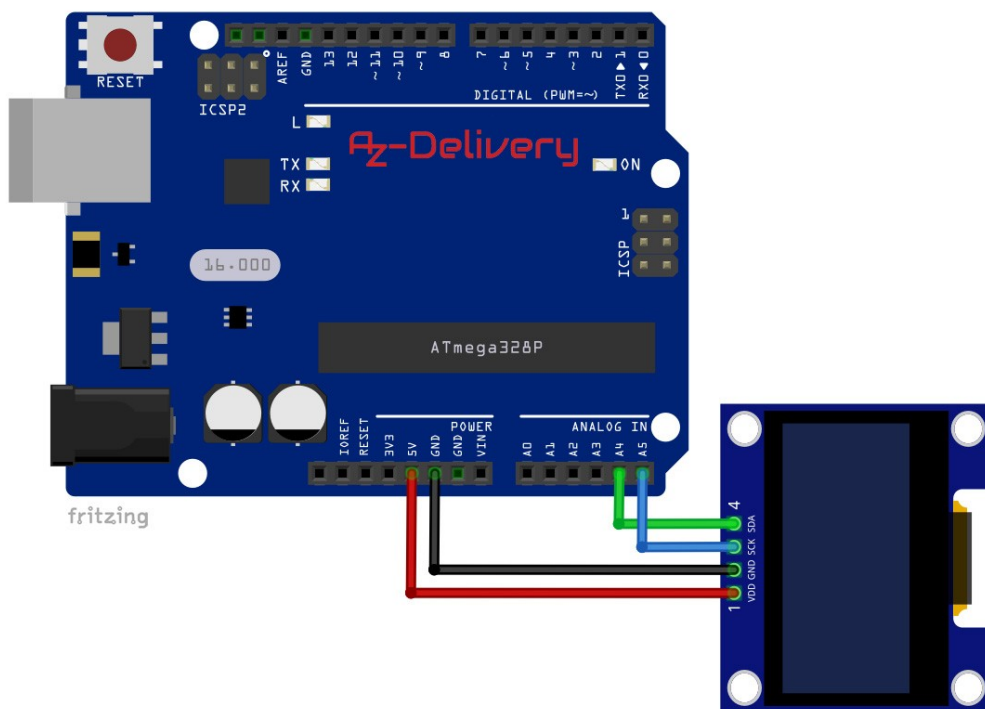

Screen pin	Pin	Wire color
SDA	A4	Green wire
SCK	A5	Blue wire
GND	GND	Black wire
VCC	5V	Red wire

## Library for Arduino IDE

To use the screen with an Atmega328P Board, it is recommended to download an external library for it. The library that is going to be used is called the “U8g2”. To download and install it, open Arduino IDE and go to: *Tools > Manage Libraries*. When a new window opens, type “u8g2” in the search box and install the library “U8g2” made by “oliver”, as shown in the following image:

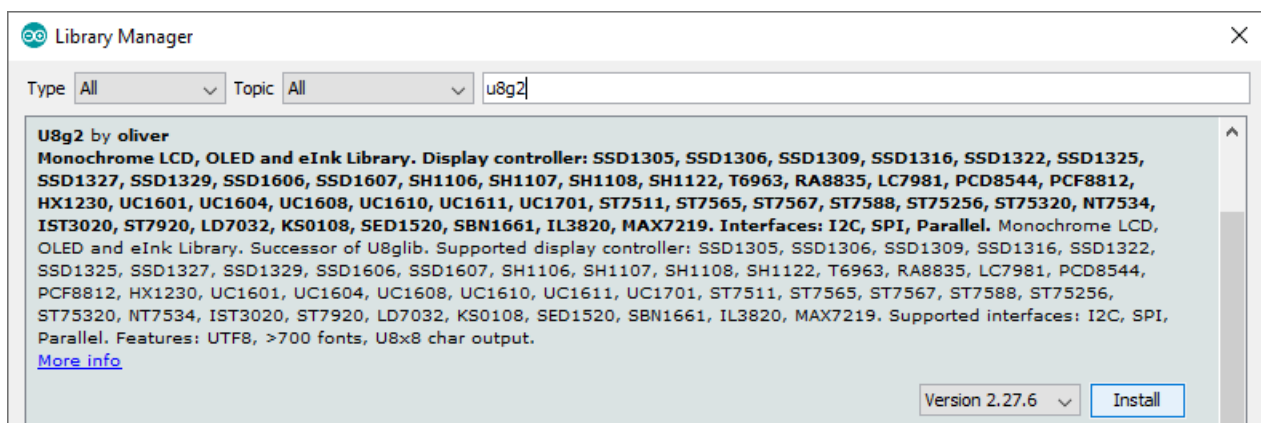

Several sketch examples come with the library, to open one, go to:

*File > Examples > U8g2 > full\_buffer > GraphicsTest*

With this sketch example, you can test your screen. However, the code used in the example is fairly complex. The sketch is modified to make a more beginner-friendly version of the code.

# Az-Delivery

## Sketch example

```
#include <U8g2lib.h>
#include <Wire.h>
#define time_delay 2000
U8G2_SH1106_128X64_NONAME_F_HW_I2C u8g2(U8G2_R0, U8X8_PIN_NONE);

const char COPYRIGHT_SYMBOL[] = {0xa9, '\\0'};
void u8g2_prepare() {
    u8g2.setFont(u8g2_font_6x10_tf);
    u8g2.setFontRefHeightExtendedText();
    u8g2.setDrawColor(1);
    u8g2.setFontPosTop();
    u8g2.setFontDirection(0);
}
void u8g2_box_frame() {
    u8g2.drawStr(0, 0, "drawBox");
    u8g2.drawBox(5, 10, 20, 10);
    u8g2.drawStr(60, 0, "drawFrame");
    u8g2.drawFrame(65, 10, 20, 10);
}
void u8g2_r_frame_box() {
    u8g2.drawStr(0, 0, "drawRFrame");
    u8g2.drawRFrame(5, 10, 40, 15, 3);
    u8g2.drawStr(70, 0, "drawRBox");
    u8g2.drawRBox(70, 10, 25, 15, 3);
}
void u8g2_disc_circle() {
    u8g2.drawStr(0, 0, "drawDisc");
    u8g2.drawDisc(10, 18, 9);
    u8g2.drawStr(60, 0, "drawCircle");
    u8g2.drawCircle(70, 18, 9);
}
```

# Az-Delivery

```
void u8g2_string_orientation() {
    u8g2.setFontDirection(0);
    u8g2.drawStr(5, 15, "0");
    u8g2.setFontDirection(3);
    u8g2.drawStr(40, 25, "90");
    u8g2.setFontDirection(2);
    u8g2.drawStr(75, 15, "180");
    u8g2.setFontDirection(1);
    u8g2.drawStr(100, 10, "270");
}

void u8g2_line() {
    u8g2.drawStr(0, 0, "drawLine");
    u8g2.drawLine(7, 20, 77, 32);
}

void u8g2_triangle() {
    u8g2.drawStr(0, 0, "drawTriangle");
    u8g2.drawTriangle(14, 20, 45, 30, 10, 32);
}

void u8g2_unicode() {
    u8g2.drawStr(0, 0, "Unicode");
    u8g2.setFont(u8g2_font_unifont_t_symbols);
    u8g2.setFontPosTop();
    u8g2.setFontDirection(0);
    u8g2.drawUTF8(10, 20, "☀");
    u8g2.drawUTF8(30, 20, "☁");
    u8g2.drawUTF8(50, 20, "☂");
    u8g2.drawUTF8(70, 20, "☂");
    u8g2.drawUTF8(95, 20, COPYRIGHT_SYMBOL); //COPYRIGHT SYMBOL
    u8g2.drawUTF8(115, 15, "\xb0"); // DEGREE SYMBOL
}
```



# Az-Delivery

```
#define image_width 128
#define image_height 21
static const unsigned char image_bits[] U8X8_PROGMEM = {
    0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00,
    0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00,
    0x06, 0x03, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0xfc, 0x1f, 0x00, 0x00,
    0xfc, 0x1f, 0x00, 0x00, 0x06, 0x03, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00,
    0xfe, 0x1f, 0x00, 0x00, 0xfc, 0x7f, 0x00, 0x00, 0x06, 0x00, 0x00, 0x00,
    0x00, 0x00, 0x00, 0x00, 0x07, 0x18, 0x00, 0x00, 0x0c, 0x60, 0x00, 0x00,
    0x06, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x03, 0x18, 0x00, 0x00,
    0x0c, 0xc0, 0x00, 0x00, 0x06, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00,
    0x03, 0x18, 0x00, 0x00, 0x0c, 0xc0, 0xf0, 0x1f, 0x06, 0x63, 0x80, 0xf1,
    0x1f, 0xfc, 0x33, 0xc0, 0x03, 0x18, 0x00, 0x00, 0x0c, 0xc0, 0xf8, 0x3f,
    0x06, 0x63, 0xc0, 0xf9, 0x3f, 0xfe, 0x33, 0xc0, 0x03, 0x18, 0x00, 0x00,
    0x0c, 0xc0, 0x18, 0x30, 0x06, 0x63, 0xc0, 0x18, 0x30, 0x06, 0x30, 0xc0,
    0xff, 0xff, 0xdf, 0xff, 0x0c, 0xc0, 0x18, 0x30, 0x06, 0x63, 0xe0, 0x18,
    0x30, 0x06, 0x30, 0xc0, 0xff, 0xff, 0xdf, 0xff, 0x0c, 0xc0, 0x98, 0x3f,
    0x06, 0x63, 0x60, 0x98, 0x3f, 0x06, 0x30, 0xc0, 0x03, 0x18, 0x0c, 0x00,
    0x0c, 0xc0, 0x98, 0x1f, 0x06, 0x63, 0x70, 0x98, 0x1f, 0x06, 0x30, 0xc0,
    0x03, 0x18, 0x06, 0x00, 0x0c, 0xc0, 0x18, 0x00, 0x06, 0x63, 0x38, 0x18,
    0x00, 0x06, 0x30, 0xc0, 0x03, 0x18, 0x03, 0x00, 0x0c, 0xe0, 0x18, 0x00,
    0x06, 0x63, 0x1c, 0x18, 0x00, 0x06, 0x30, 0xc0, 0x00, 0x80, 0x01, 0x00,
    0xfc, 0x7f, 0xf8, 0x07, 0x1e, 0xe3, 0x0f, 0xf8, 0x07, 0x06, 0xf0, 0xcf,
    0x00, 0xc0, 0x00, 0x00, 0xfc, 0x3f, 0xf0, 0x07, 0x1c, 0xe3, 0x07, 0xf0,
    0x07, 0x06, 0xe0, 0xcf, 0x00, 0x60, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00,
    0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0xc0, 0x00, 0x30, 0x00, 0x00,
    0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0xc0,
    0x00, 0x18, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00,
    0x00, 0x00, 0x00, 0xe0, 0x00, 0xfc, 0x1f, 0x00, 0x00, 0x00, 0x00, 0x00,
    0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x7f, 0x00, 0xfc, 0x1f, 0x00,
    0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x3f };
```

# Az-Delivery

```
void u8g2_bitmap() {
    u8g2.drawXBMP(0, 5, image_width, image_height, image_bits);
}
void setup(void) {
    u8g2.begin();
    u8g2_prepare();
}
float i = 0.0;
void loop(void) {
    u8g2.clearBuffer();
    u8g2_prepare();
    u8g2_box_frame();
    u8g2.sendBuffer();
    delay(time_delay);

    u8g2.clearBuffer();
    u8g2_disc_circle();
    u8g2.sendBuffer();
    delay(time_delay);

    u8g2.clearBuffer();
    u8g2_r_frame_box();
    u8g2.sendBuffer();
    delay(time_delay);

    u8g2.clearBuffer();
    u8g2_prepare();
    u8g2_string_orientation();
    u8g2.sendBuffer();
    delay(time_delay);

    u8g2.clearBuffer();
    u8g2_line();
    u8g2.sendBuffer();
    delay(time_delay);
}
```

# Az-Delivery

```
// one tab
u8g2.clearBuffer();
u8g2_triangle();
u8g2.sendBuffer();
delay(time_delay);

u8g2.clearBuffer();
u8g2_prepare();
u8g2_unicode();
u8g2.sendBuffer();
delay(time_delay);

u8g2.clearBuffer();
u8g2_bitmap();
u8g2.sendBuffer();
delay(time_delay);

u8g2.clearBuffer();
u8g2.setCursor(0, 0);
u8g2.print(i);
i = i + 1.5;
u8g2.sendBuffer();
delay(time_delay);
}
```

# Az-Delivery

First, two libraries, the *U8g2lib* and *Wire* are imported. Next, an object called *u8g2* is created with the following line of code:

```
U8G2_SSD1306_128X32_UNIVISION_F_HW_I2C u8g2(U8G2_R0, U8X8_PIN_NONE);
```

The created object represents the screen itself and it is used to control the screen. The *U8g2* library can be used for many other OLED screens, thus there are many constructors in the sketch examples from the library.

Next, a function called *u8g2\_prepare()* is created, which has no arguments and returns no value. The five *u8g2* library functions are used.

The first function is called *setFont()*, which has one argument and returns no value. The argument represents the *u8g2* font. Follow the link to see the list of available fonts:

<https://github.com/olikraus/u8g2/wiki/fntlist8x8>

The second function is called *setFontRefHeightExtendedText()*, which has no arguments and returns no value. It is used for drawing characters on the screen. For more detailed explanation, follow the link:

<https://github.com/olikraus/u8g2/wiki/u8g2reference#setFontrefheightextendedtext>

# Az-Delivery

The third function is called *setDrawColor()*, which has one argument and returns no value. The argument value is an integer number which represents a color index for all drawing functions. Font drawing procedures use this argument to set the foreground color. The default value is *1*. If it is set to *0* then the space around the character is lit up, and the character is not. Argument value *2* can be used also, but there's no difference from *0*.

The fourth function is called *setFontPosTop()*, which has no argument and returns no value. This function controls the character position in one line of text. The function has a couple of versions. The first is *setFontPosBaseLine()* second is *setFontPosCenter()*, and third is *setFontPosBottom()*. Their purpose is to change the position of the characters in the one line.

The fifth function is called *setFontDirection()*, which has one argument and returns no value. The argument is an integer number which represents direction of the text. The value is an integer number in a range from *0* to *3* (*0 = 0°*, *1 = 90°*, *2 = 180°* and *3 = 270°*).

# Az-Delivery

The function called *drawStr()* has three arguments and returns no value. It is used to display a constant string on the screen. The first two arguments represent the *X* and *Y* positions of the cursor, where the text is displayed. The third argument represents the text itself, a string value. Functions that set-up text layout should be used before using *drawStr()* function, or else the *drawStr()* function will use the default settings for the font, size and overall layout of the text.

To display shapes, specific library functions for each shape has to be used:

The function called *drawFrame()* has four arguments and returns no value. It is used to display frame, an empty rectangle. The first two arguments represent the *X* and *Y* positions of the top left corner of the frame. The third argument represents the width of the frame and the fourth argument represents the height of the frame.

The function called *drawRFrame()* has five arguments and returns no value. It is used to display a frame with rounded corners. The first two arguments represent the *X* and *Y* positions of the top left corner of the frame. The second two arguments represent the width and height of the frame and the fifth argument represents the corner radius.

# Az-Delivery

The function called *drawBox()* has four arguments and returns no value. It is used to display a filled rectangle. The first two arguments represent the *X* and *Y* positions of the top left corner of the rectangle. The second two arguments represent the width and height of the rectangle.

The function called *drawRBox()* has five arguments and returns no value. It is used to display a filled rectangle with rounded edges. The first two arguments represent the *X* and *Y* positions of the top left corner of the rectangle. The second two arguments represent the width and height of the rectangle and the fifth argument represents the corner radius.

The function called *drawCircle()* has three arguments and returns no value. It is used to display a circle. The first two arguments represent the *X* and *Y* positions of the circle center point. The third argument represents the circle radius.

The function called *drawDisc()* has three arguments and returns no value. It is used to display a disc. The first two arguments represent *X* and *Y* positions of the disc center point. The third argument represents the disc radius.

# Az-Delivery

The function called *drawTriangle()* has six arguments and returns no value. It is used to display a filled triangle. The first two arguments represent the *X* and *Y* positions of the first corner point of the triangle. The second two arguments represent the *X* and *Y* positions of the second corner point of the triangle. The last two arguments represent the *X* and *Y* positions of the last corner point of the triangle.

The function called *drawLine()* has four arguments and returns no value. It is used to display a line. The first two arguments represent the *X* and *Y* positions of the starting point of the line. The second two arguments represent *X* and *Y* positions of the end point of the line.

The function called *drawUTF8()* has three arguments and returns a value. It is used to display a text, the string value that can contain a character encoded as a *Unicode* character. The first two arguments represent the *X* and *Y* positions of the cursor and the third represents the text itself. The *Unicode* characters can be displayed in a couple of ways. The first is to copy and paste the existing character into the sketch, like in the following line of the code: `u8g2.drawUTF8(50, 20, "☂");`

The second is to create a *char* array, which has two values: the first value is a hexadecimal number of the *Unicode* character and the second value is a null character. This can be done by using the *char* array called *COPYRIGHT\_SYMBOL*, like in the following lines of code:  
`const char COPYRIGHT_SYMBOL[] = {0xa9, '\\0'};`



# Az-Delivery

```
u8g2.drawUTF8(95, 20, COPYRIGHT_SYMBOL); //COPYRIGHT SYMBOL
```

The third way of using the function is to use a hexadecimal number for the character itself, like in the following line of code:

```
u8g2.drawUTF8(115, 15, "\xb0"); // DEGREE SYMBOL
```


The function returns a value, an integer number which represents the width of the text (string).

To display something on the screen, the screen data buffer has to be cleared, then new value for data buffer has to be set (an image) and then to send the new value to the screen. This way, a new image will be displayed on the screen. In order to make this change visible, *delay()* function has to be used to delay the next change of the data buffer, like in the following lines of code:

```
u8g2.clearBuffer();  
u8g2_bitmap(); // setting the data buffer  
u8g2.sendBuffer();  
delay(time_delay);
```

## Connecting the screen with Raspberry Pi

Connect the screen with the Raspberry Pi as shown on the following connection diagram:

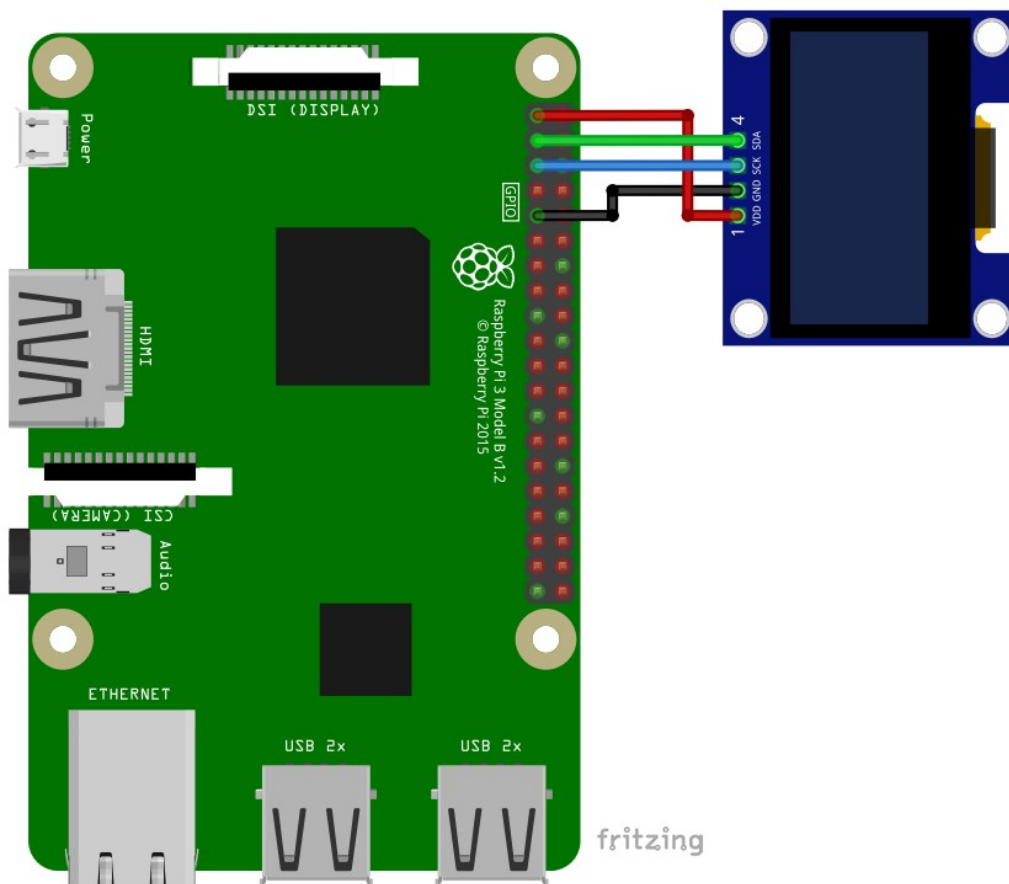


Screen pin	Raspberry Pi pin	Physical pin	Wire color
SDA	GPIO2	3	Green wire
SCL	GPIO3	5	Blue wire
GND	GND	9	Black wire
VCC	3V3	1	Red wire


## Enabling the I2C interface

In order to use the module with Raspberry Pi, I2C interface has to be enabled. Open following menu:

Application Menu > Preferences > Raspberry Pi Configuration

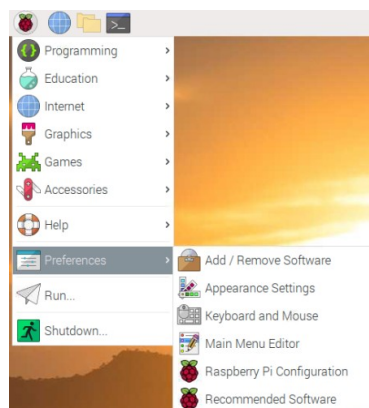

In the new window, under the tab *Interfaces*, enable the I2C radio button, as on the following image:

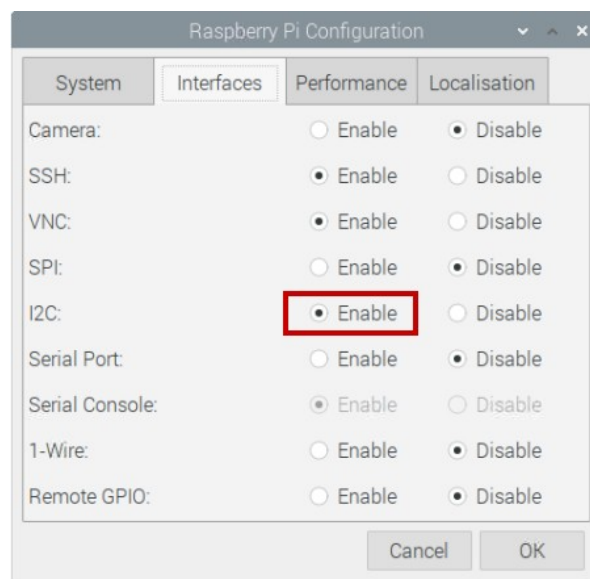

## Finding the address of the OLED module

If it is enabled, we will use the command `i2cdetect -y 1` to find the module on the I2C bus: **`i2cdetect -y 1`**

The result should look like the one shown below:

```
pi@rpi3py:~$ i2cdetect -y 1
   0  1  2  3  4  5  6  7  8  9  a  b  c  d  e  f
00:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
10:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
20:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
30:  --  --  --  --  --  --  --  --  --  --  --  3c  --  --  --
40:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
50:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
60:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
70:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
```

Our device was recognised with the address "0x3c". This is the standard address for this type of device.



## Python-library

For the display of shapes, text and images we will use a Python library. On the current Raspberry Pi OS, Python3, pip3 and git are already pre-installed, but if this is not the case, you can install the whole thing with the following commands:

```
sudo apt-get install python3-dev libffi-dev libssl-dev  
python3-pil libjpeg-dev zlib1g-dev libfreetype6-dev  
liblcms2-dev libopenjp2-7 libtiff5 -y
```

```
sudo apt-get install python3-rpi.gpio python3-pip -y
```

```
sudo apt-get install git -y
```

We use the "luma.oled" library, which can be installed with the following command:

```
sudo -H pip3 install luma.oled
```



## Python-Script

In the folder "pi" we now create a folder called "oled" and go to this folder

```
sudo mkdir oled
```

```
cd oled
```

luma.oled offers many examples and we can download them with the following command:

```
sudo git clone https://github.com/rm-hull/luma.examples
```

with:

```
cd luma.examples/examples/
```

we change to the folder in which the examples are located.

and with:

```
python3 demo.py
```

we can start one of the examples. If there is a white noise on the display, the correct controller must be passed. this can be done with:

```
python3 demo.py --device [controller]
```

luma.oled uses the SSD1306 by default, if you have SH1106 for example, starting the script would look like this:

```
python3 demo.py --device sh1106
```

# Az-Delivery

There are more examples in the folder.

With the command:

**ls -a**

you can see them.

Try out more examples.

And with:

**sudo nano [examplescript]**

the scripts can be edited.

# AZ-Delivery

Now it is the time to learn and make your own projects. You can do that with the help of many example scripts and other tutorials, which can be found on the Internet.

**If you are looking for the high quality products for and Raspberry Pi, AZ-Delivery Vertriebs GmbH is the right company to get them from. You will be provided with numerous application examples, full installation guides, eBooks, libraries and assistance from our technical experts.**

<https://az-delivery.de>

Have Fun!

Impressum

<https://az-delivery.de/pages/about-us>