


# Multibeam 2



## User Manual

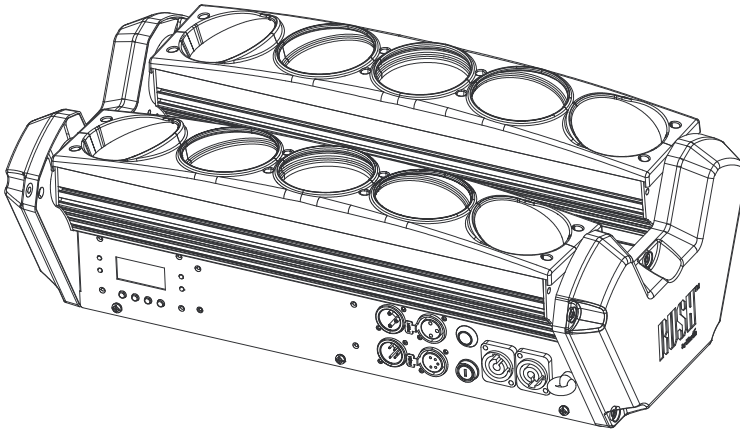

© 2013-2015 Martin Professional ApS . Information subject to change without notice. Martin Professional ApS and all affiliated companies disclaim liability for any injury, damage, direct or indirect loss, consequential or economic loss or any other loss occasioned by the use of, inability to use or reliance on the information contained in this manual. The Martin logo, the RUSH logo, the RUSH name, the Martin name and all other trademarks in this document pertaining to services or products by Martin Professional ApS or its affiliates and subsidiaries are trademarks owned or licensed by Martin Professional ApS or its affiliates or subsidiaries.

Martin Professional • Olof Palmes Allé 18 • 8200 Aarhus N • Denmark • [www.martin.com](http://www.martin.com)

**Manual: Revision F**

# Table of contents

|  |    |
|--|----|
| Safety information .....                           | 4  |
| Introduction .....                                 | 9  |
| Before using the product for the first time .....  | 9  |
| Physical installation .....                        | 10 |
| Fastening the fixture to a flat surface .....      | 10 |
| Mounting the fixture on a truss .....              | 10 |
| Securing with a safety cable .....                 | 11 |
| AC power .....                                     | 12 |
| Linking fixtures to power in a chain .....         | 13 |
| Fixture overview .....                             | 13 |
| Control data link .....                            | 15 |
| Tips for reliable data transmission .....          | 15 |
| Connecting the DMX data link .....                 | 15 |
| Fixture setup .....                                | 16 |
| Using the control panel .....                      | 16 |
| DMX addressing .....                               | 16 |
| Standalone and Master/Client standalone mode ..... | 17 |
| Show mode (show selection) .....                   | 18 |
| Sound state (Music trig) .....                     | 18 |
| DMX state (behavior when DMX signal stops) .....   | 18 |
| Display backlight sleep mode .....                 | 19 |
| Fixture settings .....                             | 19 |
| Fixture test .....                                 | 20 |
| Fixture information .....                          | 20 |
| Reset functions and settings .....                 | 21 |
| Effects .....                                      | 21 |
| Tilt movement .....                                | 21 |
| Strobe effects .....                               | 21 |
| Electronic dimming .....                           | 21 |
| Individual RGBW color control .....                | 21 |
| Maintenance .....                                  | 22 |
| Cleaning .....                                     | 22 |
| Fuse replacement .....                             | 23 |
| DMX protocol .....                                 | 24 |
| Control menus .....                                | 26 |
| Troubleshooting .....                              | 27 |
| Specifications .....                               | 29 |

# Safety information



## WARNING!

**Read the safety precautions in this manual before installing, operating or servicing this product.**

The following symbols are used to identify important safety information on the product and in this manual:



### Warning!

**Safety hazard.  
Risk of severe  
injury or death.**



### Warning!

**LED light  
emission. Risk  
of eye injury.**



### Warning!

**Refer to manual  
before  
installing,  
powering or  
servicing.**



### Warning!

**Hazardous  
voltage. Risk of  
lethal or severe  
electric shock.**



### Warning!

**Hot surfaces  
and fire hazard.**



**Warning! Risk Group 2 product according to EN 62471. Do not stare directly into the beam. Do not view the light output with optical instruments or any device that may concentrate the beam.**

This lighting fixture is for professional use only – it is not for household use. The fixture must be installed by a qualified technician. The safety of the installation is the responsibility of the installer. The fixture presents risks of severe injury or death due to fire hazards, electric shock and falls if the safety precautions below are not followed.

If you have any questions about how to install, operate or service the fixture safely, please contact your Martin™ distributor (see [www.martin.com/distributors](http://www.martin.com/distributors) for details) or call the Martin™ 24-hour service hotline on +45 8740 0000, or in the USA on 1-888-tech-180.

Respect all locally applicable laws, codes and regulations when installing, operating or servicing the fixture.

Refer any service operation not described in this manual to an authorized Martin™ service technician. Do not try to carry out any such operation yourself, as doing so may present a health or safety risk. It may also cause damage or malfunction and it may void your product warranty.



Install, operate and service RUSH by Martin™ products only as directed in their user manuals, or you may create a safety hazard or cause damage that is not covered by product warranties.

Follow the safety precautions listed below and observe all warnings in this manual and printed on the product. Keep this manual for future use.

For the latest user documentation and other information about this and all Martin™ products, please visit the Martin website at <http://www.martin.com>



### **Protection from electric shock**

Do not expose the fixture to rain or moisture.

Disconnect the fixture from AC power before carrying out any installation or maintenance work and when the fixture is not in use.

Ensure that the fixture is electrically connected to ground (earth).

Use only a source of AC power that complies with local building and electrical codes and has both overload and ground-fault (earth-fault) protection.

Socket outlets or external power switches used to supply the fixture with power must be located near the fixture and easily accessible so that the fixture can easily be disconnected from power.

Replace defective fuses with ones of the specified type and rating only.

Isolate the fixture from power immediately if the power plug or any seal, cover, cable, or other component is damaged, defective, deformed, wet or showing signs of overheating. Do not reapply power until repairs have been completed.

Before using the fixture, check that all power distribution equipment and cables are in perfect condition and rated for the current requirements of all connected devices.

Use only Neutrik PowerCon cable connectors to connect to power sockets.

Do not connect devices to power in a chain that will exceed the electrical ratings of any cable or connector used in the chain.

The supplied power input cable is rated 6 A and can safely supply only one fixture with mains power. Do not connect any device to the fixture's MAINS OUT connector when using this cable. If you replace this cable and also use the replacement cable to supply only one fixture with mains power, the replacement cable must also be rated 6 A minimum, have three conductors 18 AWG or 0.75 mm<sup>2</sup> minimum conductor size, have an outer cable diameter of 6 - 15 mm (0.2 - 0.6 in.) and be temperature-rated to suit the application. In the USA and Canada the cable must be UL listed, type SJT or equivalent. In the EU the cable must be type H05VV-F or equivalent.

To connect fixtures to mains power in a chain, you must first obtain 14 AWG or 1.5 mm<sup>2</sup> power input and throughput cables that are 16 A rated and temperature-rated to suit the application. In the USA and Canada the cables must be UL-listed, type SJT or equivalent. In the EU the cables must be type H05VV-F or equivalent. Suitable cables with Neutrik PowerCon connectors are available from Martin™ (see 'Accessories' on page 31). If you use these cables, you can connect fixtures to power in a linked chain, MAINS OUT throughput socket to MAINS IN input socket, but do not link more than:

- seven (7) RUSH Multibeam 2 fixtures in total at 100-120 V, or
- twelve (12) RUSH Multibeam 2 fixtures in total at 200-240 V.

The voltage and frequency at the MAINS OUT socket are the same as the voltage and frequency applied to the MAINS IN socket. Only connect devices to the MAINS OUT socket that accept this voltage and frequency.



### **Protection from burns and fire**

Do not operate the fixture if the ambient temperature ( $T_a$ ) exceeds 40° C (104° F).

The surface of the product casing can reach up to 45° C (113° F) during operation. Avoid contact by persons and materials. Allow the fixture to cool for at least 30 minutes before handling.

Keep flammable materials well away from the fixture. Keep all combustible materials (e.g. fabric, wood, paper) at least 100 mm (4 in.) away from the lenses on the LED bars.

Ensure that there is free and unobstructed airflow around the fixture. Provide a minimum clearance of 100 mm (4 in.) around air vents.

Do not illuminate surfaces within 200 mm (7.9 ins.) of the fixture.

Do not attempt to bypass thermostatic switches or fuses.

Do not stick filters, masks or other materials onto any optical component.

The fixture's optical components can focus the sun's rays, creating a risk of fire and damage. Do not expose the front of the fixture to sunlight or any other intense light source.



### **Protection from eye injury**

Ensure that persons are not looking directly into the light output when the product lights up suddenly. This can happen when power is applied, when the product receives a DMX signal, or when certain control menu items are selected.

Do not look at LEDs with magnifiers, telescopes, binoculars or similar optical instruments that may concentrate the light output.

To minimize the risk of eye irritation or injury, disconnect the fixture from power at all times when the fixture is not in use, and provide well-lit conditions to reduce the pupil diameter of anyone working on or near the fixture.

Do not operate the fixture with missing or damaged covers, shields or any optical component. If shields, lenses or ultraviolet screens have become visibly damaged to such an extent that their effectiveness is impaired, for example by cracks or deep scratches, return the fixture to an authorized Martin™ service agent for replacement.



## **Protection from injury**

Fasten the fixture securely to a fixed surface or fixed structure when in use. The fixture is not portable when installed.

Ensure that any supporting structure and/or hardware used can hold at least 10 times the weight of all the devices they support.

If suspending from a rigging structure, fasten the fixture to a rigging clamp. Do not use safety cables as the primary means of support.

If the fixture is installed in a location where it may cause injury or damage if it falls, install as directed in this manual a secondary attachment such as a safety cable that will hold the fixture if a primary attachment fails. The secondary attachment must be approved by an official body such as TÜV as a safety attachment for the weight that it secures, must comply with EN 60598-2-17 Section 17.6.6 and must be capable of bearing a static suspended load that is ten times the weight of the fixture and all installed accessories.

Allow enough clearance around the fixture to ensure that it cannot collide with an object or another fixture when it moves.

Check that all external covers and rigging hardware are securely fastened.

Block access below the work area and work from a stable platform whenever installing, servicing or moving the fixture.

In the event of an operating problem, stop using the fixture immediately and disconnect it from power. Do not attempt to use a fixture that is obviously damaged.

Do not modify the fixture or install other than genuine RUSH by Martin™ parts.



# Introduction

The RUSH Multibeam 2™ is a versatile effect featuring two moveable LED bars, each with 5 individually controllable narrow beams for powerful mid-air effects. It punches out 10 intense and narrow long-throw beams and features electronic dimming and strobe effects.

The Multibeam 2 can be controlled via DMX or set to standalone operation, where you can choose from Auto trig (pre-programmed shows) or Music trig (sound-activated shows). Pre-programmed shows can also be selected via DMX. Fixtures can be linked together and set to master/client standalone operation for synchronized standalone shows across multiple fixtures.

The fixture is supplied with a 1.5 m (5 ft) power cable (local power plug not included) and an omega-type mounting bracket.

## Before using the product for the first time

1. Read 'Safety information' on page 4 before installing, powering, operating or servicing the fixture.
2. Unpack and ensure that there is no transportation damage before using the fixture. Never attempt to operate a damaged fixture.
3. If the fixture is not going to be hard-wired to an AC mains power source, install a local power plug (not supplied) on the end of the supplied power cable.
4. Before operating, ensure that the voltage and frequency of the local power supply match the mains power requirements of the fixture.
5. Check the RUSH support pages on the Martin Professional website at [www.martin.com](http://www.martin.com) for the most recent user documentation and technical information for the fixture. RUSH by Martin™ user manual revisions are identified by the revision letter at the bottom of the inside cover.

Note that whenever AC mains power is applied to the fixture, it will reset all effects and functions to their home positions. Be ready for the LED bars to move. The reset process usually takes around 20 seconds.

# Physical installation



**Read ‘Safety information’ on page 4 before installing the fixture.**

The fixture is designed for indoor use only and must be used in a dry location with adequate ventilation. Ensure that none of the fixture’s ventilation slots are blocked and ensure that the product is fastened to a secure structure or surface.

Fasten the fixture to a secure structure or surface. Do not stand it on a surface or leave it where it can be moved or fall over. If you install the fixture in a location where it may cause injury or damage if it falls, secure it as directed in this user manual using a securely anchored safety cable that will hold the fixture if the primary fastening method fails.

Martin™ can supply safety cables and rigging clamps that are suitable for use with the fixture (see ‘Accessories’ on page 30).

## Fastening the fixture to a flat surface

The fixture can be fastened to a hard, fixed, flat surface that is oriented at any angle. Ensure that the surface and all fasteners used can support at least 10 times the weight of all fixtures and equipment they will support.

## Mounting the fixture on a truss


The fixture can be clamped to a truss or similar rigging structure in any orientation. When installing the fixture hanging vertically down, you can use an open-type clamp such as a G-clamp. When installing in any other orientation, you must use a half-coupler clamp (see illustration on right) that completely encircles the truss chord.



To clamp the fixture to a truss:

1. Check that the rigging structure can support at least 10 times the weight of all fixtures and equipment to be installed on it.
2. Block access under the work area.
3. The fixture is supplied with an omega-type bracket to which a rigging clamp can be attached. Obtain a rigging clamp that is in perfect condition and approved for the fixture’s weight. Bolt the rigging clamp securely to the bracket with a grade 8.8 minimum steel M12 bolt and self-locking nut (or as recommended by the clamp manufacturer).

4. Fasten the omega bracket to the base of the fixture using the bracket's quarter-turn fasteners. Turn quarter-turn fasteners a full 90° to lock them (see illustration on right).
5. Working from a stable platform, hang the fixture on the truss and fasten the rigging clamp onto the truss.
6. Secure the fixture with a safety cable as directed below.
7. Check that the LED bars will not collide with other fixtures or objects.

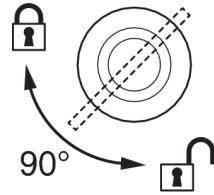

### **Securing with a safety cable**

Secure the fixture with a safety cable (or other secondary attachment) that is approved for the weight of the fixture so that the safety cable will hold the fixture if a primary attachment fails. Loop the safety cable through the eyebolt in the side of the fixture (see **9** in illustration on page 13) and around a secure anchoring point.

# AC power



Read 'Safety information' on page 4 before connecting the fixture to AC mains power.

**Warning!** The mains power input cable supplied with the fixture is rated 6 A and can supply only one fixture with mains power. Do not connect any device to the fixture's MAINS OUT power throughput socket when using this input cable. If you want to connect other fixtures to the MAINS OUT socket, see 'Linking fixtures to power in a chain' on page 13.

For protection from electric shock, the fixture must be grounded (earthed). The power distribution circuit must be equipped with a fuse or circuit breaker and ground-fault (earth-fault) protection.

Socket outlets or external power switches used to supply the fixture with power must be located near the fixture and easily accessible so that the fixture can easily be disconnected from power.

Do not insert or remove live Neutrik PowerCon connectors to apply or cut power, as this may cause arcing at the terminals that will damage the connectors.

Do not use an external dimming system to supply power to the fixture, as this may cause damage to the fixture that is not covered by the product warranty.

The fixture can be hard-wired to a building electrical installation if you want to install it permanently, or a power plug (not supplied) that is suitable for the local power outlets can be installed on the power cable.

If you install a power plug on the power cable, follow the plug manufacturer's instructions and connect the wires in the power cable as shown in this table:

|           | Earth, Ground or ⊕ | Neutral or N | Live or L |
|-----------|--------------------|--------------|-----------|
| US system | Green              | White        | Black     |
| EU system | Yellow/green       | Blue         | Brown     |

The fixture has an auto-ranging power supply that accepts AC mains power at 100-240 V at 50/60 Hz. Do not apply AC mains power at any other voltage or frequency to the fixture.


## Linking fixtures to power in a chain

If you obtain a 14 AWG or 1.5 mm<sup>2</sup> power input cable and 14 AWG or 1.5 mm<sup>2</sup> throughput cables from Martin™ (see ‘Accessories’ on page 31), you can relay mains power from one fixture to another by connecting fixtures to power in a linked daisy-chain, MAINS OUT throughput socket to MAINS IN input socket.

Using 14 AWG or 1.5mm<sup>2</sup> cables from Martin™, you can link:

- Maximum seven (7) RUSH Multibeam 2 fixtures in total to power in a chain at 100-120 V, or
- Maximum twelve (12) RUSH Multibeam 2 fixtures in total to power in a chain at 200-240 V.

## Fixture overview

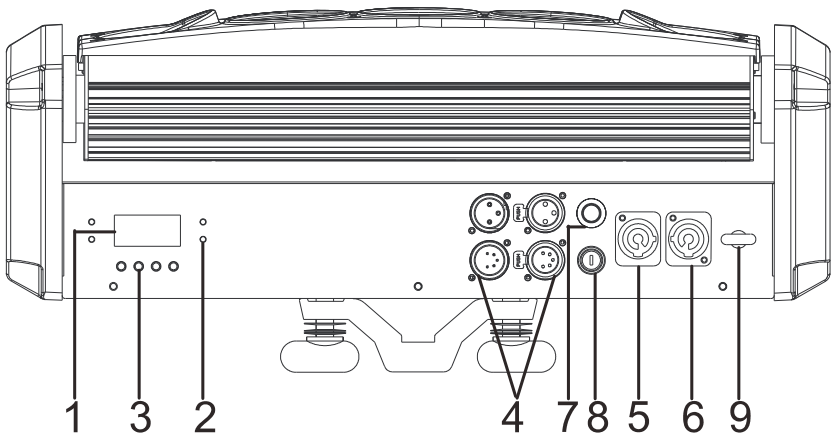

**1 - Display**

**2 - LEDs**

The four LEDs on the rear of the fixture have the following functions:

|        |          |                               |
|--------|----------|-------------------------------|
| DMX    | On       | Valid DMX signal present      |
| MASTER | On       | Master mode                   |
| CLIENT | On       | Client mode                   |
| SOUND  | Flashing | Sound activation (Music trig) |

### 3 - Buttons

|       |  |
|-------|--|
| MENU  | <ul style="list-style-type: none"><li>• Activate the menu mode functions, or</li><li>• Return to the previous level of the menu structure, or</li><li>• Press and hold to exit the menus</li></ul> |
| DOWN  | Go down a menu branch  |
| UP    | Go up a menu branch  |
| ENTER | Confirm the selected function  |

### 4 - DMX XLR input/output sockets

3-pin and 5-pin XLR sockets are provided for DMX input and output (throughput).

### 5 - Mains power input

A blue Neutrik PowerCon socket is provided to connect the fixture to AC mains power.

### 6 - Mains power throughput

See Safety information on page 4. The light-grey Neutrik PowerCon socket can be used to supply power to other fixtures only if the supplied power input cable is replaced as directed in this manual and safety limits are respected.

### 7 - Microphone

Built-in microphone for sound-activated scene changes in standalone Music trig mode.

### 8 - Fuse


The T 6.3A fixture fuse is located in a fuse holder next to the power input/output connectors.

### 9 - Safety cable attachment

Eyebolt for securing the fixture with a secondary attachment such as a safety cable.

## Control data link

A DMX 512 data link is required in order to control the fixture via DMX. The fixture has 3-pin and 5-pin XLR connectors for DMX data input and output.

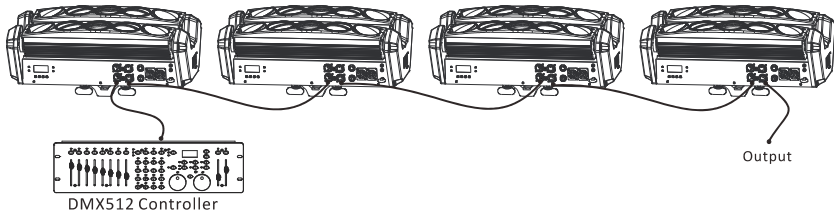

The number of daisy-chained fixtures is limited by the number of DMX channels required by the fixtures in relation to the maximum 512 channels available in one DMX universe. Note that if independent control of a fixture is required, it must have its own DMX channels. Fixtures that are required to behave identically can share the same DMX address and channels. To add more fixtures or groups of fixtures when the above limit is reached, add a DMX universe and another daisy-chained link.

### Tips for reliable data transmission

Use shielded twisted-pair cable designed for RS-485 devices: standard microphone cable cannot transmit control data reliably over long runs. 24 AWG cable is suitable for runs up to 300 meters (1000 ft.). Heavier gauge cable and/or an amplifier is recommended for longer runs. The pin-out on all connectors is pin 1 = shield, pin 2 = cold (-), and pin 3 = hot (+). Pins 4 and 5 in the 5-pin XLR connectors are not used in the fixture but are available for possible additional data signals as required by the DMX512-A standard. Standard pin-out is pin 4 = data 2 cold (-) and pin 5 = data 2 hot (+).

To split the link into branches, use a splitter such as the Martin 4-Channel Opto-Isolated RS-485 Splitter/Amplifier. Terminate the link by installing a DMX termination plug in the output socket of the last fixture. The termination plug, which is a male XLR plug with a 120 Ohm, 0.25 W resistor soldered between pins 2 and 3, “soaks up” the control signal so it does not reflect and cause interference. If a splitter is used, terminate each branch of the link.

### Connecting the DMX data link

To connect the fixture to data:

1. Connect the DMX data output from the controller to the first fixture’s male XLR DMX input connector.

2. Connect the first fixture's DMX output to the DMX input of the next fixture and continue connecting fixtures output to input. Terminate the last fixture on the link with a DMX termination plug.

## Fixture setup

This section explains how to change the fixture's settings by entering the menus in the fixture's onboard control panel and selecting menu options. Options remain selected even if the fixture is powered off.

See 'Control menus' on page 23 for a complete map of the control menu structure and brief explanations of the menu options available.

### Using the control panel

To access the menus in the control panel, press the MENU button.

- Use the DOWN and UP buttons to scroll through menus and menu options.
- Use the ENTER button to enter menus and select menu options.
- Menu options that are available but not selected flash in the display. When you select a menu option using the ENTER button, the option stops flashing.
- To return to the previous level of the menu structure without making a change, press the MENU button.
- To exit the menus completely, press and hold the MENU button.

### DMX addressing

The fixture can be controlled using signals sent by a DMX controller over up to 45 channels. The DMX address, also known as the start channel, is the first channel used to receive instructions from the DMX controller. Each DMX-controlled fixture must have its DMX address set. For example, if a fixture has a DMX address of 1 and you want to use all 45 channels, then the next fixture can have a DMX address of 46, the next 91, then 136, until all the 512 channels in one DMX universe have been allocated.

For independent control, each fixture must be assigned its own DMX channels. If you give the same DMX address to two fixtures of the same type, they will behave identically. This can be useful for diagnostic purposes and for symmetrical control, particularly when combined with the inverse pan and tilt options.



To set the fixture's DMX address:

1. In the fixture's control panel, use the UP and DOWN buttons to select DMX ADDRESS and press ENTER. The fixture's currently set DMX address will blink in the display.
2. Use the UP and DOWN buttons to select a new address (1 to 512).
3. Once the new address has been selected, press ENTER to set it (or press MENU to exit without making a change).

## Standalone and Master/Client standalone mode

In standalone mode, fixtures run a pre-programmed or sound-activated show without DMX control.

A single fixture will run in standalone mode if:

- It is not receiving a DMX signal
- It is set to Master in CLIENT MODE.
- It is set to Master/Client in DMX STATE

Two or more fixtures will run in Master/Client standalone mode if:

- They are not receiving a DMX signal
- The first fixture is set to Master and the other fixtures are set to Client in CLIENT MODE
- All fixtures are set to Master/Client in DMX STATE
- Fixtures are connected to each other on a data link.

In Master/Client standalone mode, the Master fixture runs a pre-programmed or sound-activated show without DMX control and Client fixtures run pre-programmed shows that are synchronized with the Master fixture.

Each fixture's MASTER or CLIENT LED lights to indicate the fixture's setting.

If a Master fixture is set to On (music trig) in the SOUND STATE menu, its SOUND LED flashes in sync with the music beat.

***Important! Set only the first fixture on the data link to be MASTER.***

To adjust a fixture's MASTER/CLIENT settings:

1. Select CLIENT MODE and press ENTER.
2. Use the UP and DOWN buttons to select:
  - **Master** – fixture runs a standalone show (sound-activated or pre-programmed ) and sends synchronizing information to connected client fixtures, or
  - **Client 1** – fixture receives synchronizing information and runs the same show as the master fixture, or

- **Client 2** – fixture receives synchronizing information and runs a show that is in sync with the master fixture's show but is not identical to it.
3. Once the mode has been selected, press ENTER to set it (or press MENU to exit without making a change).

## Show mode (show selection)

Show mode lets you select a show to display in standalone mode. You can choose from one random or 12 pre-programmed shows.

The fixture must be set to standalone mode (see 'Standalone and Master/Client standalone mode' on page 17).

To select a fixture's show:

1. Select SHOW MODE and press ENTER to confirm.
2. Use the DOWN and UP buttons to select Show 0 (random show) or Show 1 to Show 12 (pre-programmed shows).
3. Press ENTER to confirm (or press MENU to exit without making a change).

## Sound state (Music trig)

The fixture has a built-in microphone that allows its show to be triggered by a music beat, for example.

To turn on Music trig:

1. Set DMX STATE to Master/Client (see above).
2. Select SOUND STATE and press ENTER to confirm.
3. Use the DOWN and UP buttons to select On (Music trig on) or Off (Music trig off).
4. Press ENTER to confirm (or press MENU to exit without making a change).

## DMX state (behavior when DMX signal stops)

You can define the behavior of the fixture if it is powered on and receiving a DMX signal, and then the DMX signal stops.

To define how the fixture reacts when the DMX signal stops:

1. Select DMX STATE and press ENTER to confirm.
2. Use the UP and DOWN buttons to select:
  - **Master Client** – fixture behaves as Master or Client depending on what has been set in the CLIENT MODE menu.  
If set to Master in the CLIENT MODE menu, it runs a standalone show (sound-activated or pre-programmed ) and sends synchronizing

information to Client fixtures if any are connected. If set to Client in the CLIENT MODE menu, it receives synchronizing information from a Master fixture if one is connected.

- **Blackout** – fixture blacks out.  
The fixture is set to Blackout by default.
- **Hold** – fixture continues to obey the last command that was sent via DMX until it is powered off. The last command is deleted from memory when the fixture is powered off.

3. Press ENTER to confirm (or press MENU to exit without making a change).

## Display backlight sleep mode

By default, the display backlighting remains on permanently when power is applied to the fixture. If you enable Sleep mode, the backlighting goes off automatically if the buttons and menus are not used for a short period. It lights up again as soon as one of the buttons is pressed.

To enable or disable display backlight sleep mode:

1. Select BACKLIGHT and press ENTER to confirm.
2. Use the DOWN and UP buttons to select Off (Sleep mode disabled) or On (Sleep mode enabled).
3. Press ENTER to confirm (or press MENU to exit without making a change).

## Fixture settings

Tilt can be inverted (left and right are exchanged) on one or both LED bars, and the LED activation sequence can be reversed. These options can be used to create symmetrical effects.

### *Tilt inverse 1*

To adjust the LED Bar 1 tilt setting:

1. Select TILT 1 INVERSE and press ENTER to confirm.
2. Use the DOWN and UP buttons to select Yes (LED bar 1 inversion) or No (normal).
3. Press ENTER to confirm (or press MENU to exit without making a change).

### *Tilt inverse 2*

To adjust the LED Bar 2 tilt setting:

1. Select TILT 2 INVERSE and press ENTER to confirm.
2. Use the DOWN and UP buttons to select Yes (LED bar 2 inversion) or No (normal).
3. Press ENTER to confirm (or press MENU to exit without making a change).

## ***LED reverse***

To adjust the LED sequence reversal setting:

1. Select REVERSE and press ENTER to confirm.
2. Use the DOWN and UP buttons to select Yes (LED sequence reversed) or No (LED sequence normal).
3. Press ENTER to confirm (or press MENU to exit without making a change).

## **Fixture test**

Automatic tests of all functions can be run from the control menus.

### ***Auto test***

To perform a complete test of all of the fixture functions:

1. Select AUTO TEST and press ENTER to confirm. The fixture will run the auto test routine.
2. Press MENU to exit the test.

## **Fixture information**

### ***Fixture temperature readout***

To check the onboard temperature of the fixture:

1. Select TEMP and press ENTER. The display will show the temperature of the unit.
2. Press MENU to exit.

### ***Fixture operating hours counter***

To see how many hours the fixture has been used:

1. Select FIXTURE HOURS and press ENTER. The number of hours will be shown.
2. Press MENU to exit.

### ***Software version***

To see what software version is installed in the fixture:

1. Select SOFTWARE VERSION and press ENTER. The firmware version will be shown.
2. Press MENU to exit.

## Reset functions and settings

1. Select RESET.
2. Press ENTER to reset the fixture (or press MENU to exit without resetting).

## Effects

This section describes DMX-controllable effects that require particular explanation. See 'DMX protocol' starting on page 24 for a full list of the DMX channels and values required to control the different effects.

### Tilt movement

Each of the two moveable LED bars can be tilted from 50° to 170° independently.

### Strobe effects


The strobe effect provides variable speed regular strobe, random strobe and various pulse effects.

### Electronic dimming

The overall intensity of all the beams can be adjusted 0-100 %.

### Individual RGBW color control

Individual control of red, green, blue and white intensity in each of the 10 LED beams is available. Individual pixels are controlled via DMX in the order shown below:

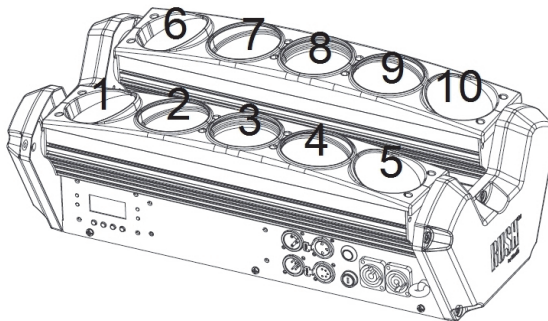

# Maintenance



**Read ‘Safety information’ on page 4 before servicing the fixture.**

Refer any service operation not described in this user manual to a qualified service technician.

Disconnect mains power before cleaning or servicing the fixture.

Service fixtures in an area where there is no risk of injury from falling parts, tools or other materials.

The user may carry out the service operations described in this manual. All other service operations must be carried out by an authorized Martin™ service technician. Do not try to repair the fixture yourself, as you may create a safety risk or cause damage that is not covered by the product warranty.

Installation, on-site service and maintenance can be provided worldwide by the Martin Professional™ Global Service organization and its approved agents, giving owners access to Martin’s expertise and product knowledge in a partnership that will ensure the highest level of performance throughout the product’s lifetime. Please contact Martin™ for details.

There are no user serviceable parts inside the fixture. Do not open the housing.

Excessive dust, smoke fluid, and particle buildup degrades performance, causes overheating and will damage the fixture. Damage caused by inadequate cleaning or maintenance is not covered by the product warranty.

## Cleaning

The cleaning of external optical lenses must be carried out periodically to optimize light output. Cleaning schedules for lighting fixtures vary greatly depending on the operating environment. It is therefore impossible to specify precise cleaning intervals for the fixture. Environmental factors that may result in a need for frequent cleaning include:

- Use of smoke or fog machines.
- High airflow rates (near air conditioning vents, for example).
- Presence of cigarette smoke.
- Airborne dust (from stage effects, building structures and fittings or the natural environment at outdoor events, for example).

If one or more of these factors is present, inspect fixtures within their first 100 hours of operation to see whether cleaning is necessary. Check again at frequent intervals. This procedure will allow you to assess cleaning

requirements in your particular situation. If in doubt, consult your RUSH by Martin dealer about a suitable maintenance schedule.

Use gentle pressure only when cleaning, and work in a clean, well-lit area. Do not use any product that contains solvents or abrasives, as these can cause surface damage.

To clean the fixture:

1. Disconnect the fixture from power and allow it to cool for at least 15 minutes.
2. Vacuum or gently blow away dust and loose particles from the outside of the fixture and the air vents with low-pressure compressed air.
3. Clean the LED lenses by wiping gently with a soft, clean lint-free cloth moistened with a weak detergent solution. Do not rub the surface hard: lift particles off with a soft repeated press. Dry with a soft, clean, lint-free cloth or low-pressure compressed air. Remove stuck particles with an unscented tissue or cotton swab moistened with glass cleaner or distilled water.
4. Check that the fixture is dry before reapplying power.

## **Fuse replacement**

If the fixture is completely dead, the fixture's primary fuse F1 may have blown and it may be necessary to install a new fuse. This fuse is located in a fuseholder next to the Mains OUT socket on the connections panel. (see Fixture overview on page 11).

To change the fuse:

1. Disconnect the fixture from power and allow it to cool for at least 15 minutes.
2. Use a large flat-bladed screwdriver to unscrew the cap of the fuseholder.
3. Replace the fuse with one of the same type and rating only.
4. Reinstall the fuseholder cap before reapplying power.

# DMX protocol

| Channel | Value   | Function                            |
|---------|---------|-------------------------------------|
| 1       |         | <b>Pre-programmed shows</b>         |
|         | 0-7     | Blackout                            |
|         | 8-27    | Show 1                              |
|         | 28-47   | Show 2                              |
|         | 48-67   | Show 3                              |
|         | 68-87   | Show 4                              |
|         | 88-107  | Show 5                              |
|         | 108-127 | Show 6                              |
|         | 128-147 | Show 7                              |
|         | 148-167 | Show 8                              |
|         | 168-187 | Show 9                              |
|         | 188-207 | Show 10                             |
|         | 208-227 | Show 11                             |
|         | 228-247 | Show 12                             |
|         | 248-255 | Random Show                         |
| 2       | 0-255   | Tilt 1 movement: 50° - 170°         |
| 3       | 0-255   | Tilt 2 movement: 50° - 170°         |
| 4       | 0-255   | Dimmer 0-100%                       |
| 5       |         | <b>Strobe</b>                       |
|         | 0-7     | Open                                |
|         | 8-131   | Strobe, slow-fast                   |
|         | 132-139 | Open                                |
|         | 140-181 | Pulse effect, fast close, slow open |
|         | 182-189 | Open                                |
|         | 190-231 | Pulse effect, slow close, fast open |
|         | 232-239 | Open                                |
|         | 240-247 | Random strobe                       |
|         | 248-255 | Open                                |
| 6       | 0-255   | Red LED 1 - 0-100%                  |
| 7       | 0-255   | Green LED 1 - 0-100%                |
| 8       | 0-255   | Blue LED 1 - 0-100%                 |
| 9       | 0-255   | White LED 1 - 0-100%                |
| 10      | 0-255   | Red LED 2 - 0-100%                  |
| 11      | 0-255   | Green LED 2 - 0-100%                |
| 12      | 0-255   | Blue LED 2 - 0-100%                 |
| 13      | 0-255   | White LED 2 - 0-100%                |
| 14      | 0-255   | Red LED 3 - 0-100%                  |
| 15      | 0-255   | Green LED 3 - 0-100%                |



| Channel | Value | Function              |
|---------|-------|-----------------------|
| 16      | 0-255 | Blue LED 3 - 0-100%   |
| 17      | 0-255 | White LED 3 - 0-100%  |
| 18      | 0-255 | Red LED 4 - 0-100%    |
| 19      | 0-255 | Green LED 4 - 0-100%  |
| 20      | 0-255 | Blue LED 4 - 0-100%   |
| 21      | 0-255 | White LED 4 - 0-100%  |
| 22      | 0-255 | Red LED 5 - 0-100%    |
| 23      | 0-255 | Green LED 5 - 0-100%  |
| 24      | 0-255 | Blue LED 5 - 0-100%   |
| 25      | 0-255 | White LED 5 - 0-100%  |
| 26      | 0-255 | Red LED 6 - 0-100%    |
| 27      | 0-255 | Green LED 6 - 0-100%  |
| 28      | 0-255 | Blue LED 6 - 0-100%   |
| 29      | 0-255 | White LED 6 - 0-100%  |
| 30      | 0-255 | Red LED 7 - 0-100%    |
| 31      | 0-255 | Green LED 7 - 0-100%  |
| 32      | 0-255 | Blue LED 7 - 0-100%   |
| 33      | 0-255 | White LED 7 - 0-100%  |
| 34      | 0-255 | Red LED 8 - 0-100%    |
| 35      | 0-255 | Green LED 8 - 0-100%  |
| 36      | 0-255 | Blue LED 8 - 0-100%   |
| 37      | 0-255 | White LED 8 - 0-100%  |
| 38      | 0-255 | Red LED 9 - 0-100%    |
| 39      | 0-255 | Green LED 9 - 0-100%  |
| 40      | 0-255 | Blue LED 9 - 0-100%   |
| 41      | 0-255 | White LED 9 - 0-100%  |
| 42      | 0-255 | Red LED 10 - 0-100%   |
| 43      | 0-255 | Green LED 10 - 0-100% |
| 44      | 0-255 | Blue LED 10 - 0-100%  |
| 45      | 0-255 | White LED 10 - 0-100% |

## Control menus

To access the control menus, press the MENU button. Use the UP and DOWN buttons to navigate the menus. Select any required menu option using the ENTER button. For more information, see 'Using the control ' on page 13.

Default fixture settings are shown in **bold**.

| Menu             | Setting/value          | Explanation  |
|------------------|------------------------|--|
| DMX Address      | <b>001–512</b>         | Fixture DMX address setting  |
| Client Mode      | <b>Master</b>          | <b>Fixture acts as Master</b>  |
|                  | Client 1               | Fixture acts as Client 1   |
|                  | Client 2               | Fixture acts as Client 2   |
| Show Mode        | <b>Show 0</b>          | <b>Random show</b>   |
|                  | Show 1<br>-<br>Show 12 | Pre-programmed shows 1 - 12  |
|                  |                        |  |
| Sound State      | Off                    | Music trig off   |
|                  | <b>On</b>              | <b>Music trig on</b>   |
| DMX State        | Master/Client          | If DMX signal stops, fixture enters master/client mode                                       |
|                  | <b>Blackout</b>        | <b>If DMX signal stops, fixture blacks out</b>   |
|                  | Hold                   | If DMX signal stops, fixture continues to obey the last command it received via DMX          |
| Backlight        | Off                    | Display backlight does not go into sleep mode, remains on permanently                        |
|                  | <b>On</b>              | <b>Display backlight goes into sleep mode if control buttons not used for a short period</b> |
| Tilt 1 Inverse   | Yes/ <b>No</b>         | Invert tilt direction, LED bar 1   |
| Tilt 2 Inverse   | Yes/ <b>No</b>         | Invert tilt direction, LED bar 2   |
| Reverse          | Yes/ <b>No</b>         | Reverse LED sequence   |
| Auto Test        |                        | Automatic test of all functions  |
| Temp             |                        | Display fixture's current temperature  |
| Fixture Hours    |                        | Display fixture operating hour counter   |
| Software Version |                        | Display currently installed firmware version   |

| Menu  | Setting/value | Explanation       |
|-------|---------------|-------------------|
| Reset | Yes/No        | Reset all effects |

## Troubleshooting

This section describes a few common problems that may occur during operation and provides some suggestions for easy troubleshooting:


| Symptom  | Potential cause   | Remedies  |
|--|---|---|
| No light from fixture or fans not working.                                   | Power supply issue, such as blown fuse, faulty connector or damaged cable.                        | Check whether fixture's power indicator LED is lit.<br>Check all power connections and cables.<br>Replace fixture's primary fuse.   |
| Fixture does not react to music beat.  | Sound activation disabled.<br>Sound level too low to activate music trigger.                      | Ensure that fixture is not connected to a DMX signal.<br>Check master/client settings<br>Tap the microphone to ensure that it is functioning.<br>The fixture should react when in Music trig mode.<br>Place fixture and music source closer together. |
| One of the control channels is unresponsive or only responds intermittently. | DMX setup or DMX link fault.<br>Damaged step motor or cable connection between LED bars and body. | See next section.<br>Contact your RUSH by Martin authorized distributor for assistance.   |

| Symptom                                  | Potential cause   | Remedies   |
|--|---|--|
| Fixture does not respond to DMX control. | <p>Incorrect DMX addressing.</p> <p>Fault on DMX link due to damaged connector or cable, or potential interference from proximity to a high-voltage installation.</p> | <p>Ensure that fixture's DMX address matches address set on DMX control device.</p> <p>Check that fixture DMX LED is on, and if not, check all DMX cables and connections.</p> <p>Ensure that DMX link is terminated.</p> <p>Check that all devices on DMX link use standard DMX polarity.</p> <p>Attempt to control the fixture with another DMX control device.</p> <p>Move or shield link if it is very close to an unshielded high-voltage installation.</p> |

# Specifications

## Physical

Weight..... 8 kg (17.7 lbs.)  
Dimensions ..... 473 x 248 x 167 mm (18.6 x 9.8 x 6.6 in.)

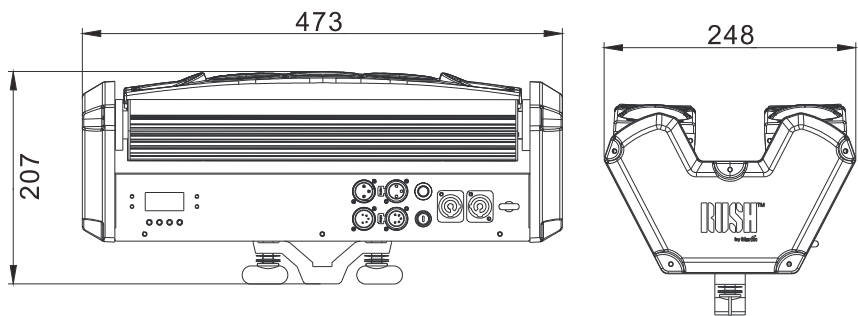

## Dynamic Effects

Color mixing ..... RGBW  
Color selection ..... 32 color presets  
Electronic 'shutter' effect..... Strobe and pulse effects, instant  
.....open and blackout  
Pre-programmed shows ..... One random and 12 preset  
Electronic dimming ..... 0 - 100%

## Control and Programming

Control options..... DMX, standalone, master/client  
DMX channels..... 45  
Standalone trigger options..... Music trig, Auto trig  
Setting and addressing ..... Control panel with backlit LCD display  
DMX compliance..... USITT DMX512/1990

## Optics and Photometric Data

Light source ..... 10 x 10 W RGBW Cree XM L-LEDs  
Minimum LED lifetime ..... 50 000 hours (to >70% luminous output)\*  
Beam angle..... 8°

*\*Figure obtained under manufacturer's test conditions*

## Construction

Color ..... Black  
Housing ..... High-impact flame-retardant thermoplastic

Protection rating .....IP 20

**Installation**

Mounting points..... Pair of quarter-turn fastener sockets  
Location..... Indoor use only, must be fastened to surface or structure  
Orientation.....Any  
Minimum distance to illuminated surfaces .....2 m (6.4 ft.)  
Minimum distance to combustible material .....0.2 m (8 in.)

**Connections**

AC power input .....Neutrik PowerCon  
AC power throughput.....Neutrik PowerCon  
DMX data in/out ..... 3-pin & 5-pin locking XLR

**Electrical**

AC power ..... 100-240 V nominal, 50/60 Hz  
Power consumption .....137 W  
Fuse ..... T 6.3 A  
Power supply unit.....Auto-ranging electronic switch mode  
*Power consumption figures are typical, not maximum. Allow for +/-10% variation*

**Thermal**

Cooling..... Forced air  
Maximum ambient temperature (T<sub>a</sub> max.) .....40° C (104° F)  
Minimum ambient temperature (T<sub>a</sub> min) .....0°C (32° F)

**Approvals**



EU safety..... EN 60598-2-17 (EN 60598-1), EN 62471, EN 62493  
EU EMC ..... EN 55015, EN 55032, EN 55103-2,  
EN 61000-3-2, EN 61000-3-3, EN 61547  
US safety..... UL 1573  
US EMC ..... FCC Part 15 Class A  
Australia/NZ ..... C-TICK N4241

**Included Items**

Power cable, 6 A, 18 AWG, 0.75 mm<sup>2</sup>, UL- listed, H05VV-F, 1.5 m, without mains plug  
Omega-type mounting bracket for rigging clamp attachment

## Accessories

### *Cables, 16 A, for connection to power in chains*

|  |              |
|--|--------------|
| Power input cable, 14 AWG, SJT, 1.5 mm <sup>2</sup> , H05VV-F,<br>with PowerCon input connector, 3 m (9.8 ft.) ..... | P/N 11541508 |
| Power relay cable, 14 AWG, SJT, 1.5 mm <sup>2</sup> , H05VV-F,<br>with PowerCon connectors, 1.4 m (4.6 ft.) .....    | P/N 11541509 |
| Power relay cable, 14 AWG, SJT, 1.5 mm <sup>2</sup> , H05VV-F,<br>with PowerCon connectors, 2.25 m (7.4 ft.) .....   | P/N 11541510 |
| Power relay cable, 14 AWG, SJT, 1.5 mm <sup>2</sup> , H05VV-F,<br>with PowerCon connectors, 3.25 m (10.7 ft.) .....  | P/N 11541511 |

### *Power connectors*

#### Neutrik PowerCon NAC3FCA

|  |              |
|--|--------------|
| power input connector, cable mount, blue ..... | P/N 05342804 |
|--|--------------|

#### Neutrik PowerCon NAC3FCB

|   |              |
|---|--------------|
| power output connector, cable mount, light grey ..... | P/N 05342805 |
|---|--------------|

### *Installation hardware*

|   |              |
|---|--------------|
| Half-coupler clamp .....  | P/N 91602005 |
| G-clamp (suspension vertically downwards only) .....            | P/N 91602003 |
| Quick-trigger clamp (suspension vertically downwards only) .... | P/N 91602007 |
| Safety wire, safe working load 50 kg .....                      | P/N 91604003 |

## Related Items

|                                 |              |
|---------------------------------|--------------|
| RUSH Software Uploader 1™ ..... | P/N 91611399 |
|---------------------------------|--------------|

## Ordering Information

|  |              |
|--|--------------|
| RUSH Multibeam 2™ in cardboard box, EU model ..... | P/N 90480030 |
| RUSH Multibeam 2™ in cardboard box, US model ..... | P/N 90480035 |

*Specifications are subject to change without notice. For latest product specifications, see [www.martin.com](http://www.martin.com)*



#### Disposing of this product

RUSH by Martin™ products are supplied in compliance with Directive 2012/19/EC of the European Parliament and of the Council of the European Union on WEEE (Waste Electrical and Electronic Equipment), where applicable. Help preserve the environment! Ensure that this product is recycled at the end of its life. Your supplier can give details of local arrangements for the disposal of RUSH by Martin products

**Photobiological safety warning**

The notice shown below is displayed on this product. If it becomes difficult or impossible to read, it must be replaced using the illustration below to produce a new label.

|   |
|---|
| <b>RISK GROUP 2</b>   |
| <b>CAUTION. Possibly hazardous radiation emitted from this product.</b><br><b>Do not stare at operating lamp.</b><br><b>May be harmful to the eyes.</b> |









