



深圳市尚瑞思电子有限公司  
Shen Zhen Sunrise Electronics CO.,Ltd  
TEL:+86-755-23093179-802 FAX: +86-755-23093179-816  
[www.sunrisedigit.com/en](http://www.sunrisedigit.com/en) [sales@sunrisedigit.com](mailto:sales@sunrisedigit.com)


---

# SR\_FRS\_0W5U

Walkie Talkie Transceiver /Data transfer Module

UHF(400M-480M)

DATA SHEET  
(V106)

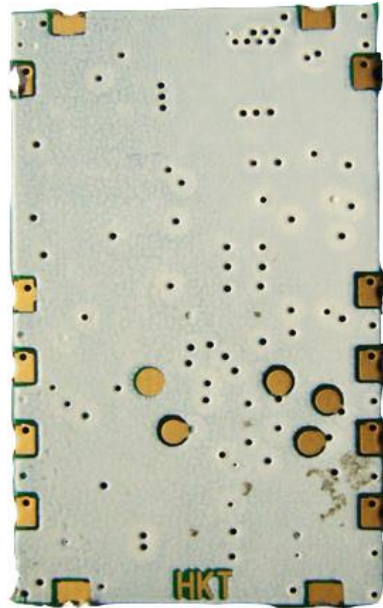

DATE: 2013-3-1

---

Rm 505, 5/F, Meilan Int'l Business Center, #32 Xixiang Rd,  
Baoan District, Shenzhen City, Guangdong Province, China



## 1. Product Outline

The SR\_FRS\_0W5 (UHF) is a low cost but high performance integrated walkie talkie module. With built-in high performance micro controller, narrow band rf transceiver and standard Uart interface, it can be easily used and succeed in all the walkie talkie function with good quality voice and long distance transmission. Users only need to connect external audio amplifiers, microphone or speaker with this module, then it can work as a small walkie talkie with 0.5W output. In open area, it can come to performance of 3Km communication. Simplified interface and ultra small size make this module into a wide range of applications, also can conveniently embed into various handheld devices, to improve the comprehensive performance of end products.

Besides the excellent voice intercom, The more important feature is this module has the data/SMS transfer ability; up to 100 byte can be sent at one time; it is compliance with the standard UART transfer protocol;

The key feature is its ultra small size: 15\*25\*3.0MM, it is easy to be embed into other system such as mobile phone, MP3, MP4, etc

## 2. Product performance

- FM demodulation technique Based on digital signal processing technology;
- Frequency Range: UHF 400M-480MHZ
- Frequency step: 5K/6.25K/12.5K/25K;
- RF Output Power: 0.5W
- voice encryption (scrambling): 8 type.
- Voice Compression- Expansion ;
- SMS Receive /Transformer, The wireless Baut : 1200;
- CTCSS (38 group) + CDCSS (83 group) ;
- Automatic elimination tail ;
- Volume adjustable (1-9) ;
- Vox level adjustable (0-8) ;



- SQ level adjustable (0-9) ;
- MIC sensitivity level adjustable (1-8)
- The ultra low power dissipation in Sleep Mode (0.1uA) ;
- Power supply : DC 3.3~5.0V
- Ultra small size: 15\*25\*3.0 MM;
- Communication distance: more than 3 KM in open area .

#### Applications:

portable intercom and paging systems;

wireless data transmission;

mobile phones and other embedded in radio functions product


Portable walkie-talkie,

Outdoor sports equipment,

Building security,

Audio monitor system

### 3. Module mechanical size

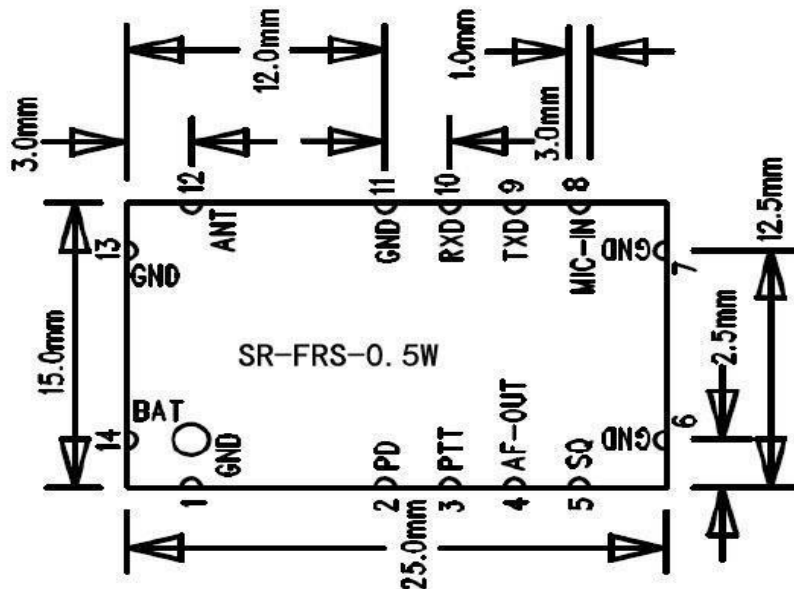

**TOP VIEW**




#### 4. Module pin assignment

Pin name	Pin number	Function description
GND	1	GND
PD	2	Sleep control, 0: into sleep state 1: Running
PTT	3	PTT control 1: Receive; 0: Transmit
AF_OUT	4	Audio output
SQ	5	Squelch control 0: active 1:inactive
GND	6	GND
GND	7	GND
MIC_IN	8	Microphone input
TXD	9	UART_TXD
RXD	10	UART_RXD
GND	11	GND
ANT	12	Rf Antenna input;
GND	13	GND
BAT	14	Power supply: DC 3.3V - 5V




## 5. Typical application Block diagram

### 5.1 without MCU, it works alone

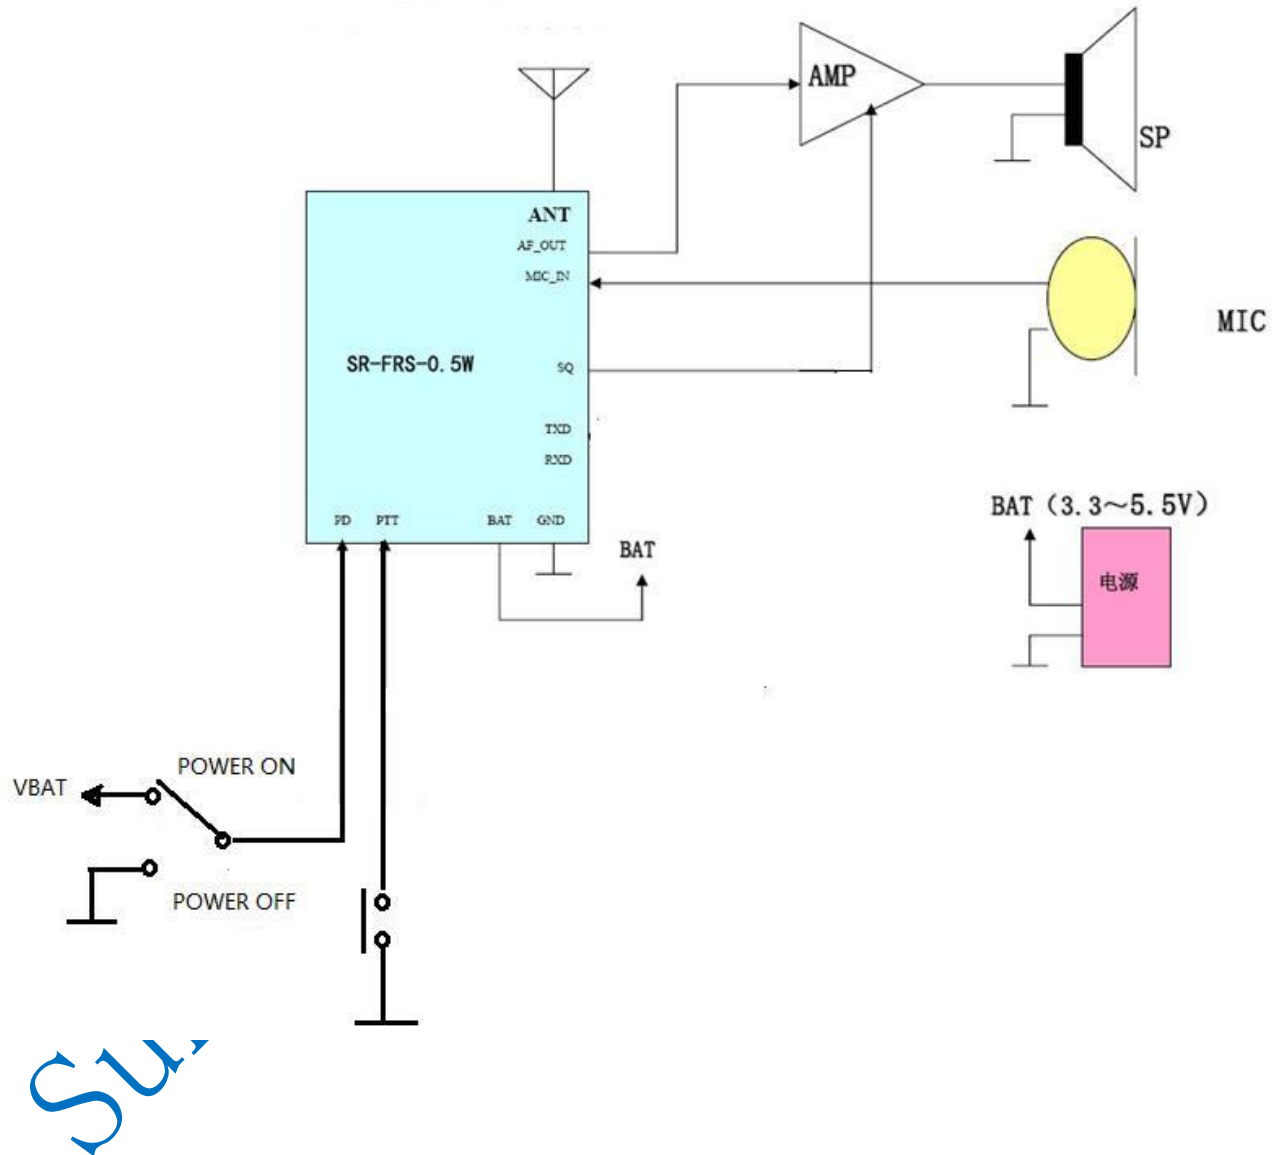



## 5.2 Works with MCU

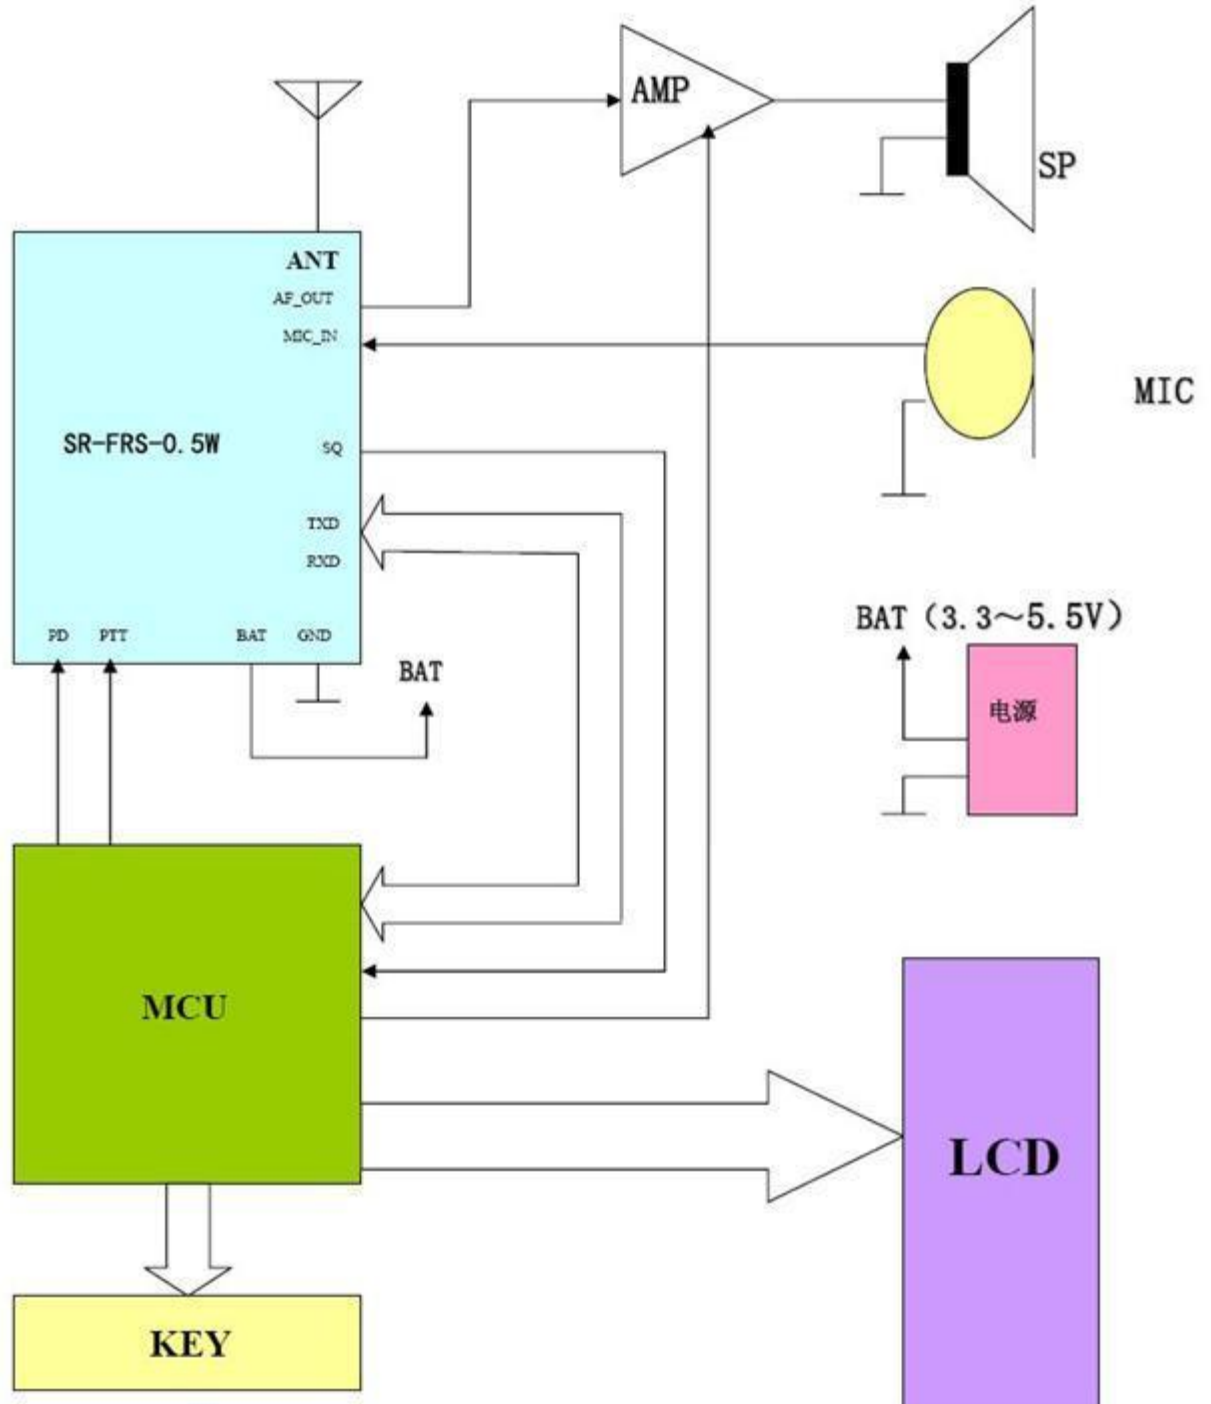



## 6. Electrical Characteristics

### 6.1 DC Electrical Characteristics (Recommended)

Symbol	Description	Min	Typical	Max	unit
VBAT	Power supply	3.3	4.0	4.5	V
Tamb	Ambient temperature	-20	27	60	℃
	Internal Initialize Time when power on	400	500		ms
	CMOS low level	0		0.6	V
	CMOS high level	2.4		3	V

Notes: VCC = 3V(for control port voltage )

### 6.2 DC Electrical Characteristics (Maximum )

Symbol	description	Min	Typical	Max	unit
VBAT	Power supply	3.3	4.2	5.0	V
Tamb	Ambient temperature	-30		85	℃
I <sub>IN</sub>	I/O input current	-5		5	mA
V <sub>IN</sub>	I/O input voltage )	-0.3		3.3	V

### 6.3 Power Characteristics

(Test conditons: VBAT = 4.0V, T<sub>A</sub> = -25 to 85 ℃)

Work mode	description	Test condition	Typical	unit
Continuous Receive	The receiver is in normal work mode	Input 450.050MHZ, RF level -47dBm, AF=1KHz,MOD=1.5KHz	65	mA
Continuous Transmit	The transmitter is in normal work mode	Input 1KHz Modulated signal	330	MA

Receive Squelch power Save mode	The receiver is in power save state with standby condition.		12	mA
Deep sleep (PDN Is low)	Both the receiver and transmitter are all power off.	Within 500ms finish the power on process, switch to continuous receive/transmit mode.	0.1	uA



## 6.4 Overall electrical performance specifications

Frequency Range (MHz)	UHF:400-480
Channel spacing (KHz)	25 / 12.5KHZ
Antenna Impedance ( $\Omega$ )	50
Operating temperature ( $^{\circ}\text{C}$ )	-20~+60
Frequency Stability (ppm)	$\pm 2.5$

## 6.5 Receive Performance

(unless special comment, Test condition VBAT = 4.0 V, TA = -25 $^{\circ}\text{C}$ )

Symbol	description	Test condition	Min	Typical	Max	unit
		UHF	400		480	
Sensitivity	Reference sensitivity	12dB S/N for Audio output	-120	-122		dBm
	Squelch Sensitivity	Adjustable by software		-120		
	Received SNR	1.5KHZ Deviation	52	55		
	Adjacent Channel Selectivity	12.5KHz Deviation	58	60		dB
	Intermodulation Immunity	12.5KHz Channel spacing	55	60		
	Spurious response rejection	12.5KHz Channel spacing	55	55		dB
AF OUT	Audio Output (RMS)	Fo=1 KHz Adjustable by software		150	150	MV
	Audio output distortion	Fo=1 KHz		1	3	%
	Audio response	300HZ 500HZ 1000HZ 2500HZ 3000HZ		+2 +4 0 -7 -13		





## 6.6 Transmit Performance

(unless special comment, Test condition VBAT = 4.0 V, TA = -25 °C)

Symbol	Description	Test condition	Min	Typical	Max	unit
			400		480	MHZ
Pout	Rf Transmit power		350	400	500	MW
	Transmit current			300	350	mA
	Maximum modulation frequency deviation limit	Narrow bandwidth Broadband			2.5 5.0	KHZ KHZ
	Modulation sensitivity	8 Level adjustable by software	5	7	12	MV
	Audio modulation distortion			1	3	%
	Modulation characteristics	300HZ 500HZ 1000HZ 2500HZ 3000HZ	-10 -6 0 5 6			DB DB DB DB DB
SNR	S/N		40	42	45	dB
	Carrier suppression			-60		dBc
	IM3 Suppression			-60		dBc
	Adjacent Channel Power	12.5KHz offset		-65		dBc
	Stray radiation			-36		dBc

## 7. UART communication protocol

SR-FRS-0W5 (UHF)module has the AT instruction interface, the AT instruction can be used to communicate with or control the module; the AT instruction covered all the inquiry and control command; For detail please refer our company 《SR-FRS-0W5 UART communication protocol》



## 8. Comment:

- 1、 The default parameter for this module after power on are as bellow:

GBW=12.5KHZHZ,

UHF:

TFV=450.050MHZ,

RFV=450.050MHZ,

CTCSS=01, ( For both Transfer and receive)

SQ=3,

Scramble: OFF

- 2、 The PTT pin cann't be pulled to Lo when in data transfer mode.

Sunrise Electronics



深圳市尚瑞思电子有限公司  
Shen Zhen Sunrise Electronics CO.,Ltd  
TEL:+86-755-23093179-802 FAX: +86-755-23093179-816  
[www.sunrisedigit.com/en](http://www.sunrisedigit.com/en) [sales@sunrisedigit.com](mailto:sales@sunrisedigit.com)

---

## **SR-FRS-0W5U**

**Walkie Talkie Transceiver & Data Transfer module**  
UHF(400M-480M)

UART communication protocol

VER101

---

Rm 505, 5/F, Meilan Int'l Business Center, #32 Xixiang Rd,  
Baoan District, Shenzhen City, Guangdong Province, China



## 1 Outline

SR-FRS-0W5 module has a standard AT command interface, it is easily to communicate with and control the module;

The AT command involved all the inquiry and control to the module, You may select the command to use as needed.

### 1.1 AT command type

- 1) Command without parameter:

**AT+<command>**, eg.: AT+DMOCONNECT

- 2) Command with parameter:

**AT+<command>=<par1>,<par2>,<par3>...**

- 3) Response command format are as below :

**<CR><LF><command string><CR><LF>**

<CR> Enter, 0x0D

<LF> Newline, 0x0A。

### 1.2 AT Command format

All the AT command started with “AT”, And ended with<CR>。

The UART port default setting are as below:

- ◆ 8 bit data,
- ◆ 1 bit stop,
- ◆ without parity ,
- ◆ CTS/RTS,
- ◆ 9600 baut

AT command response format:

**<CR><LF><command string><CR><LF>**



## 2 the communication command format

### 2.1 The command frame format define

The communication format are as AT instruction。

All data are as **ASCII** code, except the Length of SMS are **Hex** code.

The control command format:

**AT+DMOXXX**

The module response command format:

**+DMOXXX**

### 2.2 The control command list

#### 2.2.1 AT+DMOCONNECT (shake hand command)

Description	The shake hand command is used for verify whether if the module runs normally ; if the host can't get the module response up to 3 times, Host should power off the module, then power on again.	
Command	AT+DMOCONNECT	
Example	Host command	AT+DMOCONNECT
	Module response command	+DMOCONNECT:0 Success +DMOCONNECT:1 Failure



## 2.2.2 AT+DMOSETGROUP (Group setting command)

Description	Bandwidth, frequency, CTCSS, SQ setting command;	
Command	AT+DMOSETGROUP=GBW,TFV,RFV,RXCXCSS,SQ,TXCXCSS,FLAG	
Example	Host	AT+DMOSETGROUP=0,450.0250,450.0250,1,2,1,0
	Module Response command	+DMOSETGROUP:0 Success +DMOSETGROUP:1 Failure
comment	<b>GBW:</b> Bandwidth. 0: Narrow (for normal use ) 1: Wide (for professional use )	
	<b>TFV:</b> Transmit frequency: UHF: 400.0000M-480.0000M HZ (It should be the integer multiple of 6.25K or 5K )	
	<b>RFV:</b> Receive frequency: UHF: 400.0000M-480.0000M HZ (It should be the integer multiple of 6.25K or 5K )	
	<b>RXCXCSS :</b> CTCSS/CDCSS , (00-121) for receive <b>TXCXCSS :</b> CTCSS/CDCSS , (00-121) for transmit 00: no coding 01-38: CTCSS (analog ) 39-121: CDCSS (digital )	
	<b>SQ:</b> Squelch level setting Level: 0-8 0: into monitor mode	
	<b>Flag :</b> <b>Bit0</b> (Busy Lock switch) 0, OFF 1, ON <b>Bit1</b> (Compression Expansion switch) 0, OFF 1, ON	



### 2.2.3 AT+DMOAUTOPOWCONTR (Auto power save command)

Description	Module auto power save setting	
Command	AT+DMOAUTOPOWCONTR=X	
Example	Host command	AT+DMOAUTOPOWCONTR=0
	Module Response command	+DMOAUTOPOWCONTR:0 Success +DMOAUTOPOWCONTR:1 Failure
comment	X: 0 Enable power save (default) 1 Disable power save	

Tips:

1. When for message sending/Data transfer application, Please disable power save for fast transmit and receive.
2. When for VOX application, Please disable power save.

### 2.2.4 AT+DMOVERQ (Inquiry module software version command)

Description	Inquiry the module software version	
command	AT+DMOVERQ	
Example	Host command	AT+DMOVERQ
	Module Response command	+DMOVERQ: V1.0
comment	The response of module is the module software version.	

### 2.2.5 AT+DMOSETVOLUME (Volume setting command)

Description	Volume setting	
Command	AT+DMOSETVOLUME=X	
Example	Host command	AT+DMOSETVOLUME=1
	Module response	+ DMOSETVOLUME: 0 Success + DMOSETVOLUME: 1 Failure



	command	
Comment	X: 1-9 (default: 8)	

### 2.2.6 AT+DMOSETVOX (Acoustic control command)

Description	Acoustic control setting	
Command	AT+DMOSETVOX=X	
Example	Host command	AT+DMOSETVOX=6
	Module response command	+ DMOSETVOX: 0 Success + DMOSETVOX: 1 Failure
Comment	X: Acoustic control level ( 0-8 ) (0: Means VOX OFF, default value) ;  LEVEL1=12MV LEVLE5=7MV LEVEL8=5MV	

Tips:

- 1) The number more big, the sensitivity more high;
- 2) When VOX ON, the Auto power off should be disabled,

that is (AT+DMOAUTOPOWCONTR=1)

### 2.2.7 AT+DMOSETMIC (Microphone sensitivity & Voice scram setting command)

Description	Microphone sensitivity & Voice scram setting command	
Command	AT+DMOSETMIC=MICLVL, SCRAMLVL	
Example	Host command	AT+DMOSETMIC=1,0
	Module response command	+ DMOSETMIC: 0 Success + DMOSETMIC: 1 Failure
Comment	MICLVL: Mic sensitivity level ( 1-8 ), default value is 6 ; The lever is more big ,and the sensitivity is more high;	
	SCRAMLVL: Voice scram ( 0-8.) 0 : Disable voice scram (default : 0) 1-8: It means 8 different encryption mode;	





### 2.2.8 AT+DMOMES (Short message sending / Data transfer command)

Description	Host send message or data to module for transmit	
Command	AT+DMOMES=[Message Lenth]XXX	
Example	Host command	AT+DMOMES=7ABCDEFGG (41 54 2B 44 4D 4F 4D 45 53 3D 07 41 42 43 44 45 46 47 0D 0A)
	Module response command	+ DMOMES:0 Success + DMOMES:1 Failure
Comment	[Message Lenth]: the message length ( Max 100 Bytes), it is HEX code, only one Byte.	
	XXX: is the message contents.	

#### Tips:

1. For fast transmit and receive SMS, Please disable Auto power off;

That is : (AT+DMOAUTOPOWCONTR=1);

2. [Message Lenth] is HEX code.

If send the command from PC, Please be noted that , once type the command by “TEXT”, the [Message Lenth] would be treated as one or two bytes, it caused the wrong message be sent. So, it is necessary to modify the message length into one byte by hand under the “HEX” mode before send the message.

For example: AT+DMOMES=7ABCDEFGG

The length number 7 would be treated as 37;

Should modify the length to be 0x7 by hand;

AT+DMOMES=12ABCDEFABCDEF

The length number 12 would be treated as 31 32



Should modify the length to be 0xC by hand;

### 2.2.9 +DMOMES (The module received the message and automatically send to HOST)

Description	The module received the message and automatically send to HOST	
Command	+DMOMES=[Message Lenth]XXX	
Example	Module send the message to Host	+DMOMES =7ABCDEF0 ( 2B 44 4D 4F 4D 45 53 3D 07 41 42 43 44 45 46 47 0D 0A)
	Host response to Module	AT+DMOMES: 0 Success AT+DMOMES: 1 Failure
Comment	[Message Lenth]: is the message length(Max 70 bytes), <b>HEX</b> code。	
	XXX: is the message contents.	




深圳市尚瑞思电子有限公司  
Shen Zhen Sunrise Electronics CO.,Ltd  
TEL:+86-755-23093179-802 FAX: +86-755-23093179-816  
[www.sunrisedigit.com/en](http://www.sunrisedigit.com/en) [sales@sunrisedigit.com](mailto:sales@sunrisedigit.com)

---

## Appendix:

### Demo board for SR\_FRS\_0W5(UHF / VHF)

#### 1. DEMO\_B\_0W5U

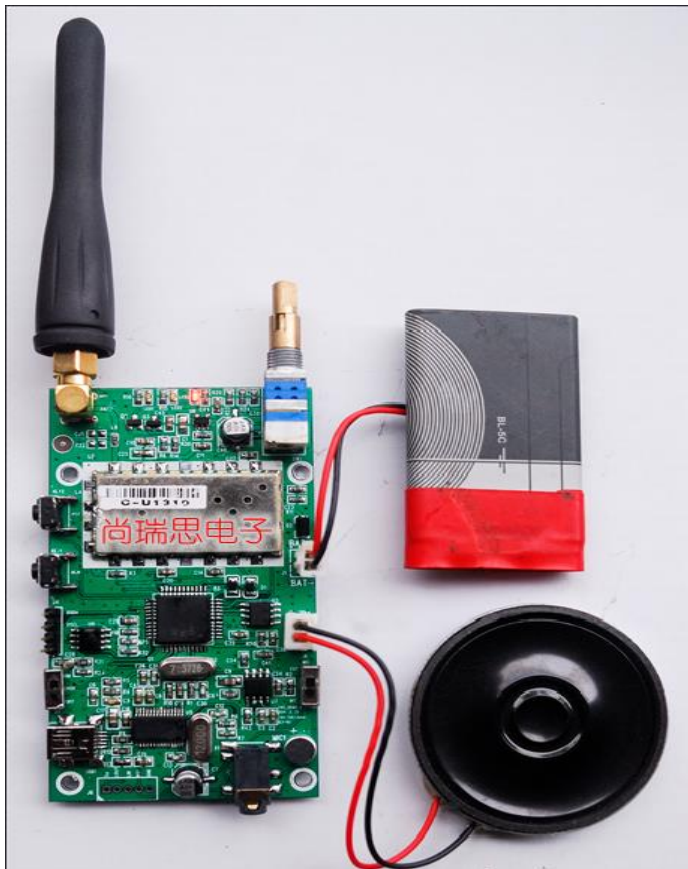

- 1) Can be used for SR-FRS-1W and SR\_FRS\_0W5 module demonstration;
- 2) It can support both UHF (400M-480M) and VHF(136M-174M);
- 3) Power ON/OFF, Volume adjust, Channel adjust 3 in 1 switch;
- 4) 16 Channels can be selected;
- 5) Enable or Disable VOX is easy by VOX switch control; The VOX sensitivity can be set via the PC;


---

Rm 505, 5/F, Meilan Int'l Business Center, #32 Xixiang Rd,  
Baoan District, Shenzhen City, Guangdong Province, China



- 6) Voice broadcast the channel number; Chinese/ English can be selected;
- 7) Monitor ON/OFF by [MON]key;
- 8) Voice intercom demo;
- 9) Data /SMS transfer demo;
- 10) Provide user interface: SQ,LINE\_IN, LINE\_OUT,PTT,GND;
- 11) Restore to be the factory setting;
- 12) USB for parameter setting by connect the demo board to the PC.

## 2. DEMO\_A\_0W5U

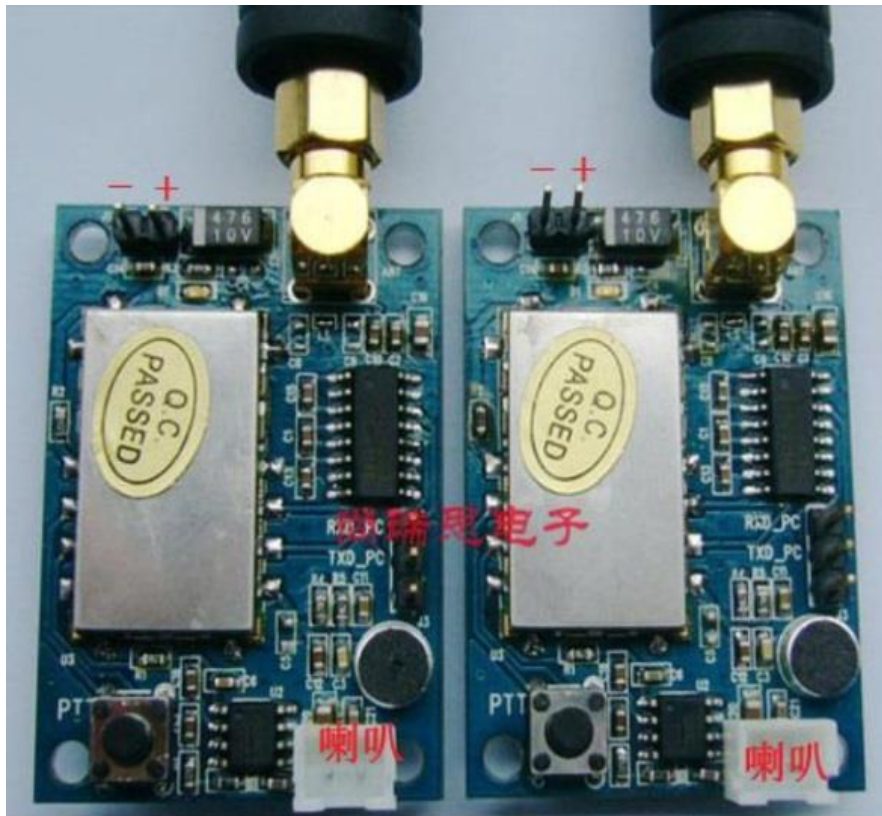

- 1) Just for SR\_FRS\_0W5 module demonstration;
- 2) Support both UHF and VHF;
- 3) Without MCU, it can work alone;
- 4) Built in UART communication interface, It is easy to do the parameter setting or data transfer via PC;
- 5) Voice intercom demo;
- 6) Data transfer/Sms demo;
- 7) Only one default frequency;
- 8) The demo board size is very small;



### 3. DEMO\_D\_0W5U



- 1) The demo board can be used for SR\_FRS\_0W5, SR\_FRS\_1W, SR\_FRS\_2W module demonstration;
- 2) It support both UHF and VHF;
- 3) LCD with 128X64 pix;
- 4) Encode switch with press switch make the operation is more easy;
- 5) All parameter can be set by the demo board itself or via the PC;
- 6) Both Tx frequency and Rx frequency can be set alone;
- 7) Both Tx CTCSS and Rx CTCSS can be set alone;
- 8) 100 channels;
- 9) Auto scan;
- 10) Monitor;
- 11) Many interface for the user;



深圳市尚瑞思电子有限公司  
Shen Zhen Sunrise Electronics CO.,Ltd  
TEL:+86-755-23093179-802 FAX: +86-755-23093179-816  
[www.sunrisedigit.com/en](http://www.sunrisedigit.com/en) [sales@sunrisedigit.com](mailto:sales@sunrisedigit.com)

---

12) Li battery charge;

If you want the complete specification for these demo board, please  
down load from our website or get it from us:

Sunrise Electronics

---

Rm 505, 5/F, Meilan Int'l Business Center, #32 Xixiang Rd,  
Baoan District, Shenzhen City, Guangdong Province, China