



Read this document carefully before using this device. The guarantee will be expired by damaging of the device if you don't attend to the directions in the user manual. Also we don't accept any compensations for personal injury, material damage or capital disadvantages.

ENDA EPC8420 PID PROFILE CONTROLLER

Thank you for choosing ENDA EPC8420 profile controller.

- * 48 x 96mm sized.
- * Selectable sensor type.
- * Automatic calculation of PID parameters (SELF TUNE).
 - ⚠ Enter PID parameters of the system if they are known at the beginning. Otherwise, Self-Tune should be activated.
- * Communication via RS-485 ModBus protocol (Optional).
- * Selectable SSR or relay control output.
- * Selectable 0-20mA or 4-20mA analog control output.
- * Relay output can be programmable as second alarm or control output.
- * AL1 output or Timer output or can be used as control AL1 relay output.
- * Selectable Heat/Cool control.
- * Input offset feature.
- * In the case of sensor failure periodical running or relay state can be selected.
- * Until the eight steps to make the profile control.
- * In each step AL1 and AL2 outputs programming.
- * To continue where it left off in power failure feature.
- * For the keypad security levels.
- * Programming by using keypad or Modbus.
- * CE marked according to European Norms.



**RoHS
Compliant**



TECHNICAL SPECIFICATIONS

| Input type | | Temperature range | | Accuracy |
|-------------------------------|----------|-------------------|-------------------|----------------------------------|
| | | °C | °F | |
| Pt 100 Resistance Thermometer | EN 60751 | -200...600 °C | -328... +1112 °F | ± 0,2% (of full scale) ± 1 digit |
| Pt 100 Resistance Thermometer | EN 60751 | -99.9...300.0 °C | -99.9...+543.0 °F | ± 0,2% (of full scale) ± 1 digit |
| J (Fe-CuNi) Thermocouple | EN 60584 | 0... 600 °C | +32... +1112 °F | ± 0,2% (of full scale) ± 1 digit |
| K (NiCr-Ni) Thermocouple | EN 60584 | 0...1200 °C | +32... +2192 °F | ± 0,2% (of full scale) ± 1 digit |
| T (Cu-CuNi) Thermocouple | EN 60584 | 0... 400 °C | +32... +752 °F | ± 0,2% (of full scale) ± 1 digit |
| S (Pt/0Rh-Pt) Thermocouple | EN 60584 | 0...1600 °C | +32... +2912 °F | ± 0,2% (of full scale) ± 1 digit |
| R (Pt13Rh-Pt) Thermocouple | EN 60584 | 0...1600 °C | +32... +2912 °F | ± 0,2% (of full scale) ± 1 digit |

| ENVIRONMENTAL CONDITIONS | |
|--|--|
| Ambient/storage temperature | 0 ... +50 °C/-25... +70 °C (with no icing) |
| Max. Relative humidity | 80% up to 31 °C decreasing linearly 50% at 40 °C. |
| Rated pollution degree | According to EN 60529 Front panel : IP65 Rear panel : IP20 |
| Height | Max. 2000m |
| ⚠ Do not use the device in locations subject to corrosive and flammable gases. | |

| ELECTRICAL CHARACTERISTICS | |
|----------------------------|--|
| Supply | 230V AC +10% -20%, 50/60Hz or 24V AC ±10%, 50/60Hz. |
| Power consumption | Max. 7VA |
| Wiring | 2.5mm² screw-terminal connections |
| Line resistance | For thermocouple max.100ohm, for 3 wired Pt 100 max. 20ohm |
| Data retention | EEPROM (minimum 10 years) |
| EMC | EN 61326-1: 2006 |
| Safety requirements | EN 61010-1: 2010 (Pollution degree 2, overvoltage category II) |


| OUTPUTS | |
|---------------------------|---|
| CONT./AL2 | Relay : 250V AC, 2A (for resistive load), NO/NC. Selectable as Control or Alarm2 output. |
| AL1 | Relay : 250V AC, 2A (for resistive load), NO/NC selectable. (Alarm1 output). |
| ANL/SSR | Selectable logic control output. (Max. 12V, 20mA) |
| Life expectancy for relay | Mechanical 30.000.000 operation; Electrical 300.000 operation |

| CONTROL | |
|-------------------|---|
| Control type | Single set-point and alarm control |
| Control algorithm | On-Off / P, PI, PD, PID (selectable) |
| A/D converter | 15 bits |
| Sampling time | 500ms |
| Proportional band | Adjustable between 0% and 100%. If Pb=0%, On-Off control is selected. |
| Integral time | Adjustable between 0.0 and 100.0 minutes |
| Derivative time | Adjustable between 0.00 and 25.00 minutes |
| Control period | Adjustable between 1 and 250 seconds |
| Hysteresis | Adjustable between 1 and 50 °C/F |
| Output power | The ratio of power at a set point can be adjusted between 0% and 100% |

| HOUSING | |
|--------------------|--|
| Housing type | Suitable for flush-panel mounting according to DIN 43 700. |
| Dimensions | W48xH96xD87mm |
| Weight | Approx. 250g (after packing) |
| Enclosure material | Self extinguishing plastics. |




While cleaning the device, solvents (thinner, benzene, acid etc.) or corrosive materials must not be used.

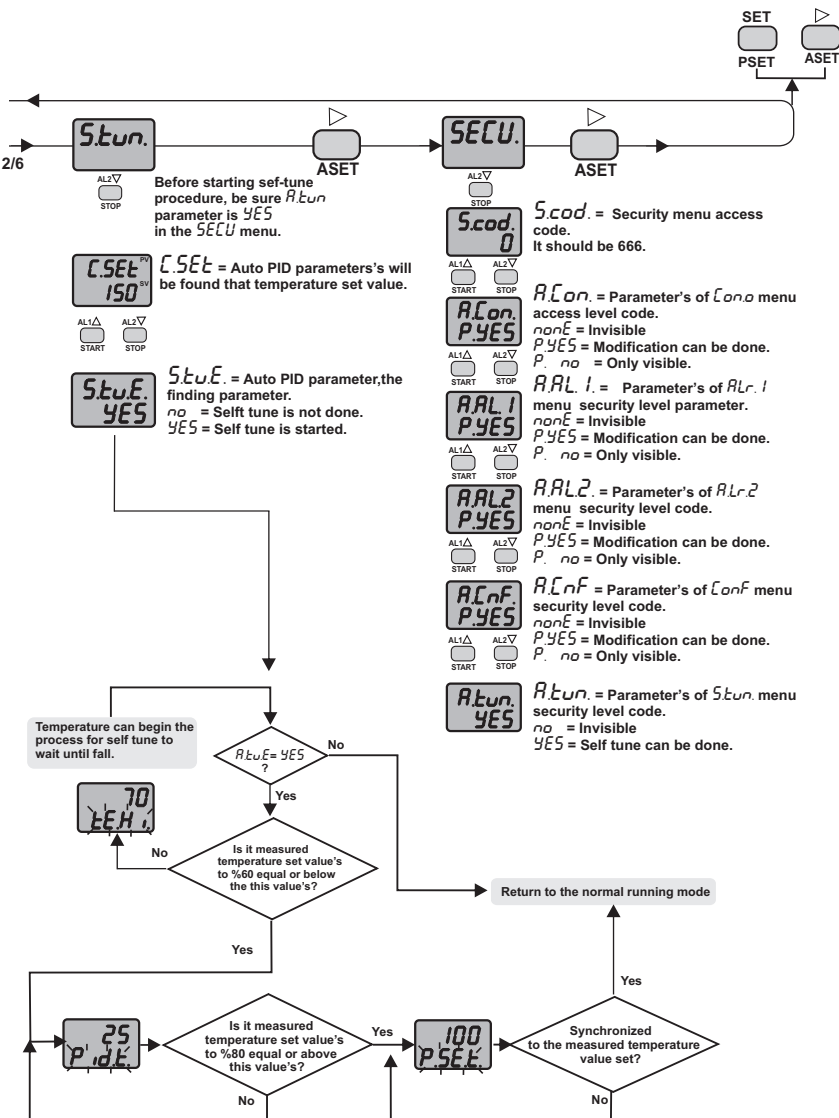


Probe error is not, to the self tune mode is entered. The measured temperature is low enough to make that self tune, P_{idLE} message is seen in sub-indicator and the self tune process starts. For the self tune process to begin, measured temperature must be to % 60 equal or under the set value's. If this condition is not right, in the sub-indicator LEH message flashes and the device can make self tune waits until the temperature falls. When the temperature decreased, P_{idLE} message starts to flash in the sub-indicator and self tune process is started and PID parameters can be calculated until possible in the sub-indicator of this message continues to flash. After PID parameters found in the sub-indicator P_{SELE} message starts to flash. In this case, device PID controlled the heating till the set value and finding the required amount of energy for being stabilised on the set level heating; returned quitting the self tune mode and writing the P_{SELE} parameter as %.

If pressed on any keys while the *P id.t.* message flashes on sub-indicator, self tune mode is quitted without accounting display PID parameters.


SEGMENTS OF PROGRAMMING

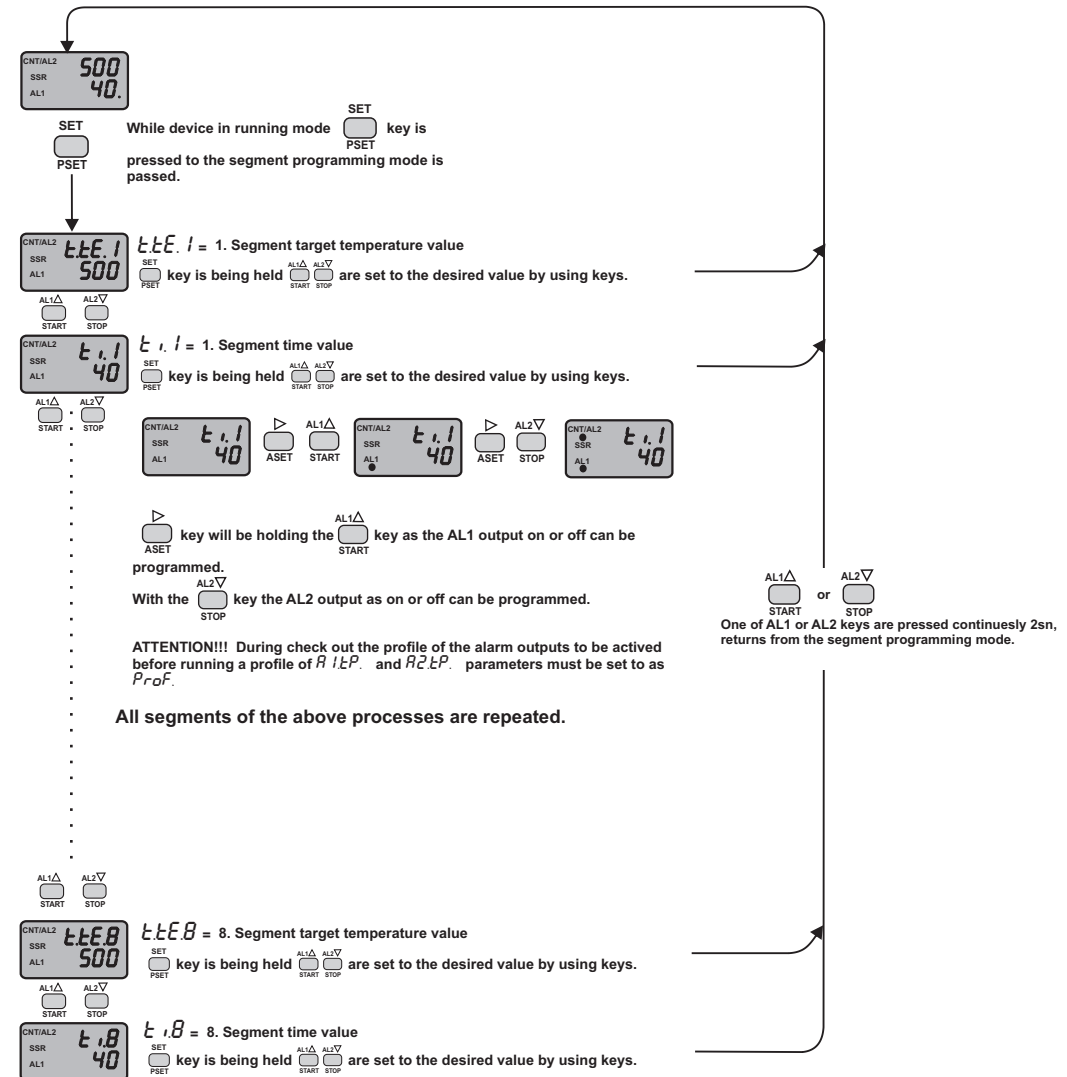

TIMER / THERMOSTAT OUTPUT EXAMPLES

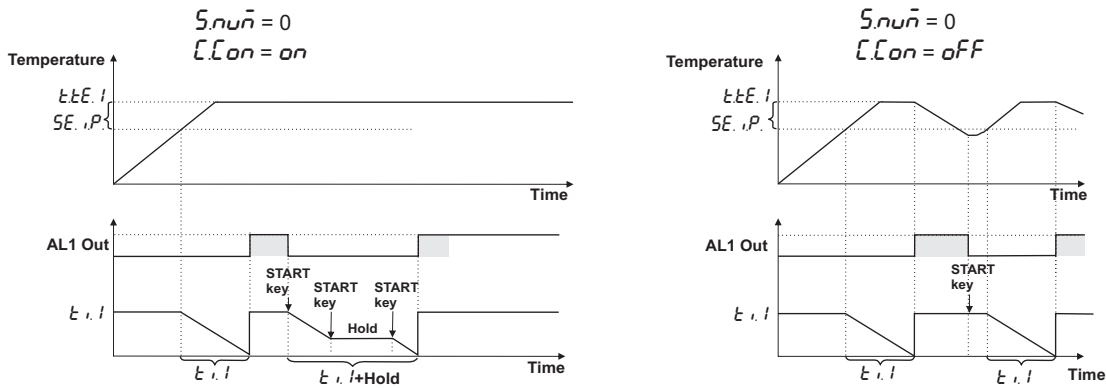


PROFILE CONTROL OUTPUT EXAMPLES

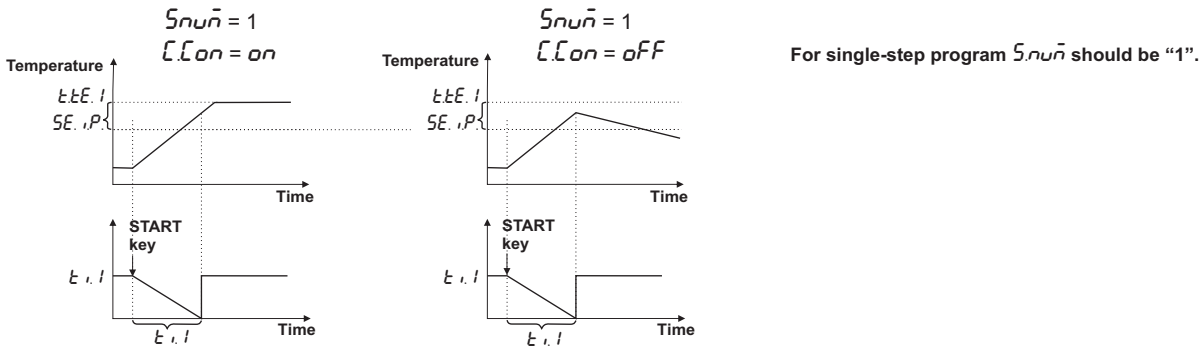

MULTI-STEP PROFILE CONTROL OUTPUT EXAMPLES

| | Seg1 | Seg2 | Seg3 | Seg4 | Seg5 |
|--------------------|------------------|------------------|------------------|------------------|------------------|
| Target Temperature | $t_{tE,1} = 100$ | $t_{tE,2} = 100$ | $t_{tE,3} = 300$ | $t_{tE,4} = 300$ | $t_{tE,5} = 100$ |
| Time | $t_{i,1} = 30$ | $t_{i,2} = 20$ | $t_{i,3} = 60$ | $t_{i,4} = 40$ | $t_{i,5} = 60$ |
| AL1 | ON | OFF | OFF | ON | OFF |
| AL2 | OFF | ON | OFF | ON | OFF |

For five-step program S_{nu_n} should be "5".

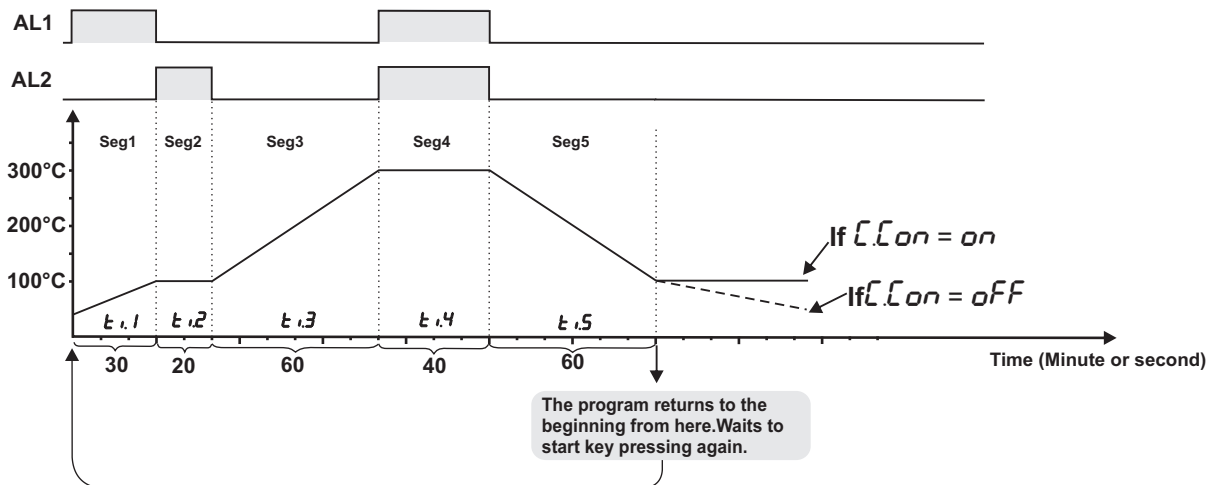

TERMS

(1) Measurement value (At running mode)
Parameter name (At programming mode)

(2) Set value (At running mode)
Parameter value (At programming mode)

Timer run LED

(3) Value increment key (At running and programming mode)
START key (At running mode)
Parameter selection key (At programming mode)

(4) Value decrement key (At running and programming mode)
STOP key (At profile programming mode)
If only this key is pressed in running mode, software version number is seen.
Parameter selection key (At programming mode)


(5) Alarm set key (At running mode)
Menu selection key (At programming mode)

(6) The profile set values adjustment key (At running mode)
Parameter set key (At programming mode)


(7) State indicator

| | |
|------------------------|--|
| (1) PV display | 4 digits 7 segment red LED |
| (2) TIMER display | 4 digits 7 segment yellow LED |
| Character heights | PV display : 12mm TIMER display : 12mm |
| (3),(4),(5),(6) Keypad | Mikro switch |
| (7) State indicator | 3 red LEDs for Control, Alarm1 and SSR outputs |

ALARM1 AND ALARM2 OUTPUT TYPES

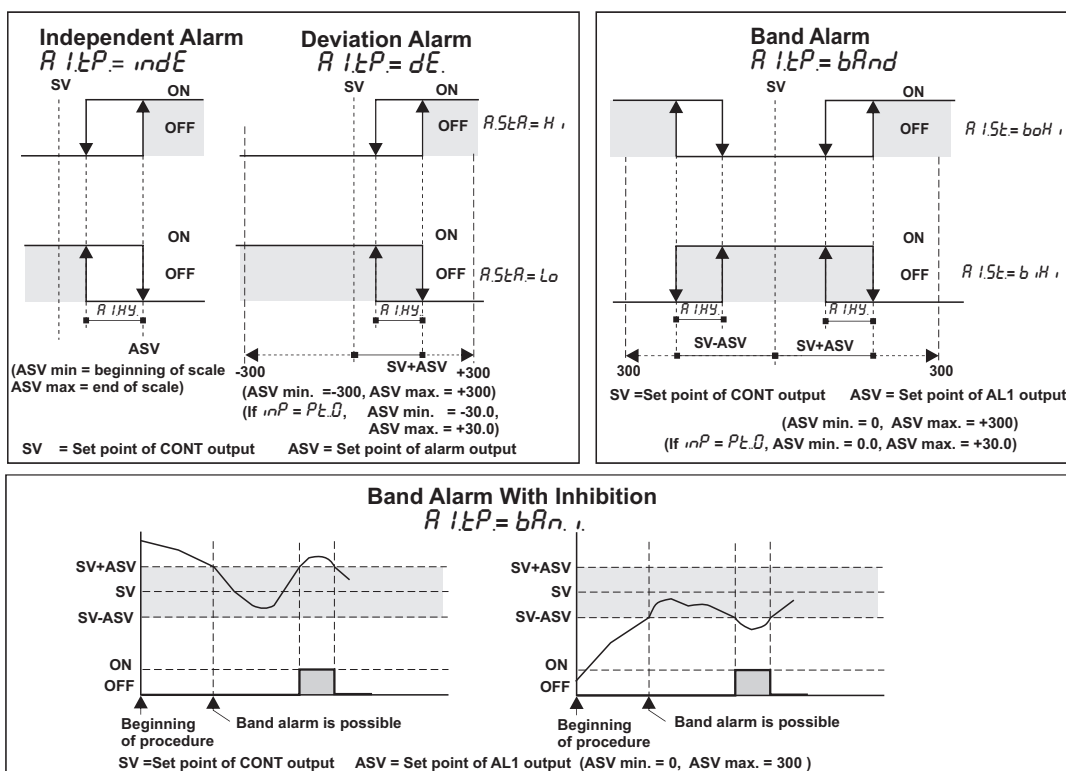

MODIFICATION OF CONTROL AND ALARM SET POINTS

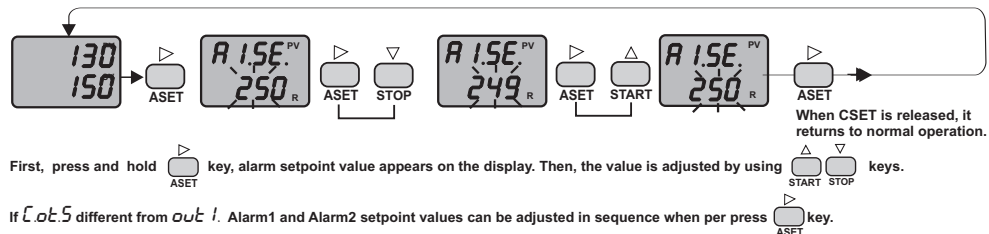

NOTE: The maximum of $CLSEt$ is the value of $CHiL$ parameter and the minimum of it is the value of $CLoL$ parameter.

If independent alarm is selected, $R1SE$ and $R2SE$ values can be adjusted between the limits of the full scale.

If deviation alarm is selected, $R1SE$ and $R2SE$ values can be adjusted between -300 and +300.

If band alarm is selected, $R1SE$ and $R2SE$ values can be adjusted between 0 and +300.

Error Messages


Temperature value is higher than the scale

Temperature value is lower than the scale

Temperature sensor is broken or over temperature

Pt 100 or a sensor line is short circuited



DIMENSIONS

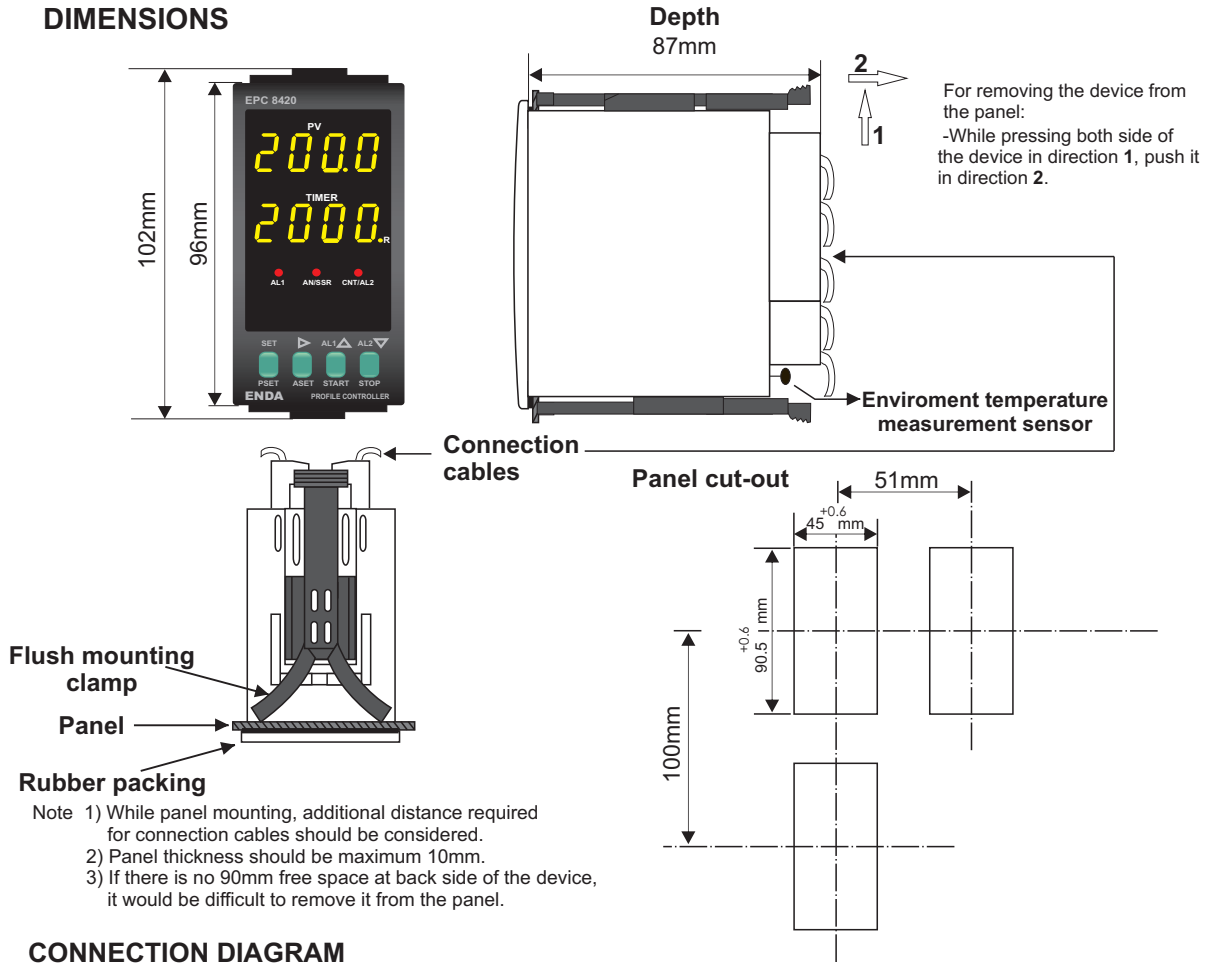

CONNECTION DIAGRAM



ENDA EPC8420 is intended for installation in control panels. Make sure that the device is used only for intended purpose. The shielding must be grounded on the instrument side. During an installation, all of the cables that are connected to the device must be free of energy. The device must be protected against inadmissible humidity, vibrations, severe soiling and make sure that the operation temperature is not exceeded. All input and output lines that are not connected to the supply network must be laid out as shielded and twisted cables. These cables should not be close to the power cables or components. The installation and electrical connections must be carried on by a qualified staff and must be according to the relevant locally applicable regulations.

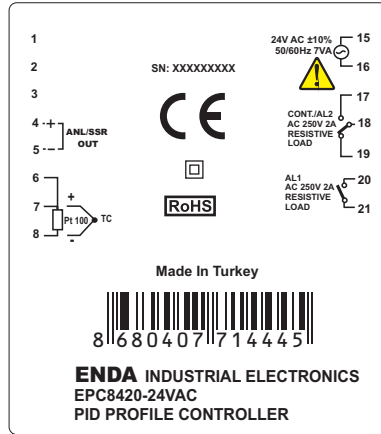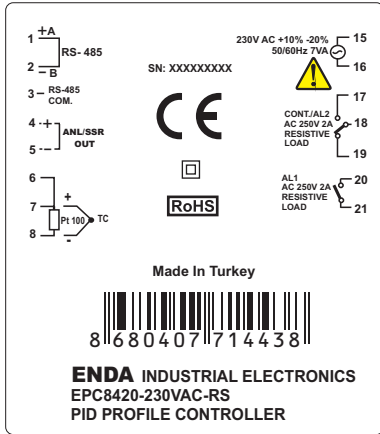

Logic output of the instrument is not electrically insulated from the internal circuits. Therefore, when using a grounding thermocouple, do not connect the logic output terminals to the ground.

Note: 1) Mains supply cords shall meet the requirements of IEC 60227 or IEC 60245. 2) In accordance with the safety regulations, the power supply switch shall bring the identification of the relevant instrument and it should be easily accessible by the operator.

Holding screw 0.4-0.5Nm

Equipment is protected throughout by DOUBLE INSULATION.

NOT :

BESLEME :

184-253V AC veya 21.6-26.4V AC 50/60Hz 5VA

Sigorta F 100 mA 250V AC


Anahtar

230V AC veya 24V AC Besleme Kablo ölçüsü: 1,5mm²

SENSÖR GİRİŞİ :

J-K-T-S-R tipi termokupl için : Doğru kompanzasyon kablo kullanınız. Ek yapmayınız. Termokupl kablolarının giriş terminalinde doğru yerlere bağlanmasına dikkat ediniz.

Rezistans termometre için : 2 telli Pt 100 kullanıldığında, giriş terminalinin 7 ve 8 nolu uçlarını kısa devre yapınız.

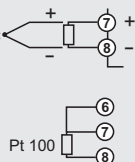

Order Code : EPC8420-□□□□□□-□□

1 2

1 - Supply Voltage

230VAC...230V AC
24VAC...24V AC
SM.....9-30V DC / 7-24V AC

2- Modbus Option

RS.....RS-485 Modbus communication
None....Don't support RS-485 Modbus communication