

CS475/575

Sensing and Sensors

Content adapted from

<http://www.cs.utexas.edu/~scottm/cs378/schedule.htm>

Used with permission

Sensors

- Deliver raw data to applications.
Measure and monitor
 - motion
 - orientation (aka position)
 - environmental conditions

Kinds

Sensor	Type	Description	Common Uses
<code>TYPE_ACCELEROMETER</code>	Hardware	Measures the acceleration force in m/s^2 that is applied to a device on all three physical axes (x, y, and z), including the force of gravity.	Motion detection (shake, tilt, etc.).
<code>TYPE_AMBIENT_TEMPERATURE</code>	Hardware	Measures the ambient room temperature in degrees Celsius ($^{\circ}\text{C}$). See note below.	Monitoring air temperatures.
<code>TYPE_GRAVITY</code>	Software or Hardware	Measures the force of gravity in m/s^2 that is applied to a device on all three physical axes (x, y, z).	Motion detection (shake, tilt, etc.).
<code>TYPE_GYROSCOPE</code>	Hardware	Measures a device's rate of rotation in rad/s around each of the three physical axes (x, y, and z).	Rotation detection (spin, turn, etc.).
<code>TYPE_LIGHT</code>	Hardware	Measures the ambient light level (illumination) in lx.	Controlling screen brightness.
<code>TYPE_LINEAR_ACCELERATION</code>	Software or Hardware	Measures the acceleration force in m/s^2 that is applied to a device on all three physical axes (x, y, and z), excluding the force of gravity.	Monitoring acceleration along a single axis.
<code>TYPE_MAGNETIC_FIELD</code>	Hardware	Measures the ambient geomagnetic field for all three physical axes (x, y, z) in μT .	Creating a compass.

Kinds

<code>TYPE_ORIENTATION</code>	Software	Measures degrees of rotation that a device makes around all three physical axes (x, y, z). As of API level 3 you can obtain the inclination matrix and rotation matrix for a device by using the gravity sensor and the geomagnetic field sensor in conjunction with the <code>getRotationMatrix()</code> method.	Determining device position.
<code>TYPE_PRESSURE</code>	Hardware	Measures the ambient air pressure in hPa or mbar.	Monitoring air pressure changes.
<code>TYPE_PROXIMITY</code>	Hardware	Measures the proximity of an object in cm relative to the view screen of a device. This sensor is typically used to determine whether a handset is being held up to a person's ear.	Phone position during a call.
<code>TYPE_RELATIVE_HUMIDITY</code>	Hardware	Measures the relative ambient humidity in percent (%).	Monitoring dewpoint, absolute, and relative humidity.
<code>TYPE_ROTATION_VECTOR</code>	Software or Hardware	Measures the orientation of a device by providing the three elements of the device's rotation vector.	Motion detection and rotation detection.
<code>TYPE_TEMPERATURE</code>	Hardware	Measures the temperature of the device in degrees Celsius (°C). This sensor implementation varies across devices and this sensor was replaced with the <code>TYPE_AMBIENT_TEMPERATURE</code> sensor in API Level 14	Monitoring temperatures.

Enumerating Sensors

- Obtain the *SensorManager* object
- Enumerate sensors via
`getSensorList(...)`

SensorManager

- Use SensorManager

```
private SensorManager mSensorManager;  
private PowerManager mPowerManager;  
private WindowManager mWindowManager;
```

```
/** Called when the activity is first created. */  
@Override  
public void onCreate(Bundle savedInstanceState) {  
    super.onCreate(savedInstanceState);
```

```
    // Get an instance of the SensorManager  
    mSensorManager = (SensorManager) getSystemService(SENSOR_SERVICE);
```

```
    // Get an instance of the PowerManager  
    mPowerManager = (PowerManager) getSystemService(PowerManager);
```

Listing Sensors on a Device

```
private void showSensors() {  
  
    List<Sensor> sensors  
        = sensorManager.getSensorList(Sensor.TYPE_ALL);  
  
    Log.d(TAG, sensors.toString());  
  
    for(Sensor s : sensors) {  
        Log.d(TAG, s.getName() + " - minDelay: "  
            + s.getMinDelay() + ", power: " + s.getPower());  
        Log.d(TAG, "max range: " + s.getMaximumRange()  
            + ", resolution: " + s.getResolution());  
    }  
}
```

See GetSensorList application

Sensor Capabilities

- Various methods in Sensor class to get capabilities of Sensor
- minDelay (in microseconds) between 2 events
- power consumption in mA (milliAmps)
- maxRange (of return values)
- getVendor ()
- getVersion ()

Choosing Specific Sensors

```
private SensorManager mSensorManager;
private Sensor mSensor;
...
mSensorManager = (SensorManager) getSystemService(Context.SENSOR_SERVICE);

if (mSensorManager.getDefaultSensor(Sensor.TYPE_GRAVITY) != null) {
    List<Sensor> gravSensors = mSensorManager.getSensorList(Sensor.TYPE_GRAVITY);
    for(int i=0; i<gravSensors.size(); i++) {
        if ((gravSensors.get(i).getVendor().contains("Google Inc. ")) &&
            (gravSensors.get(i).getVersion() == 3)){
            // Use the version 3 gravity sensor.
            mSensor = gravSensors.get(i);
        }
    }
}
else{
    // Use the accelerometer.
    if (mSensorManager.getDefaultSensor(Sensor.TYPE_ACCELEROMETER) != null){
        mSensor = mSensorManager.getDefaultSensor(Sensor.TYPE_ACCELEROMETER);
    }
    else{
        // Sorry, there are no accelerometers on your device.
        // You can't play this game.
    }
}
```

Using Sensors

- Obtain the *SensorManager* object
- create a *SensorEventListener* for *SensorEvents*
 - logic that responds to sensor event
 - various amounts of data from sensor depending on type of sensor
- Register the listener (with a particular sensor) in `onResume()`
- UnRegister the listener in `onPause()`

SensorEventListener

- Interface with two methods:
 - void onAccuracyChanged (Sensor sensor, int accuracy)
 - void onSensorChanged (SensorEvent event)
 - Sensor values have changed
 - this is the key method to override
 - don't hold onto the event
 - part of pool and the values may be altered soon

OnSensorChanged

```
@Override
public void onSensorChanged(SensorEvent event) {
    if (event.sensor.getType() == Sensor.TYPE_ACCELEROMETER) {
        float[] values = event.values;

        //get movements
        float xx = values[0];
        float yy = values[1];
        float zz = values[2];

        // display them
        x.setText(Float.toString(xx));
        y.setText(Float.toString(yy));
        z.setText(Float.toString(zz));
    }
}
```

- Lots of events here, so do not block method

(Un)Registering a listener


- **IMPORTANT**
 - Register in onResume()
 - Release in onPause()

```
@Override
protected void onResume() {
    super.onResume();
    // register this class as a listener for the orientation and
    // accelerometer sensors
    sensorManager.registerListener(this,
        sensorManager.getDefaultSensor(Sensor.TYPE_ACCELEROMETER),
        SensorManager.SENSOR_DELAY_NORMAL);
}
```

```
@Override
protected void onPause() {
    // unregister listener
    super.onPause();
    sensorManager.unregisterListener(this);
}
```

Sensor Coordinate System

- For most motion sensors
- +x to the right
- +y up
- +z out of front face
- relative to device

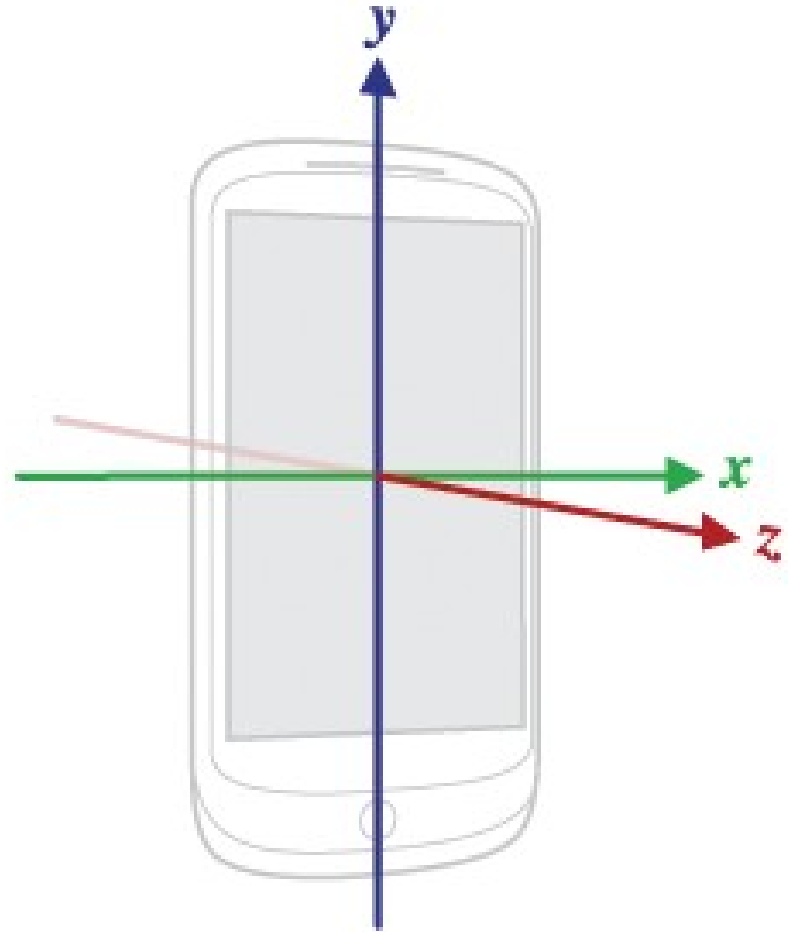

AccelerationTest

Simple Sensor Example

- App that demos linear acceleration
- displays current
- And average

Odds and Ends

- Register/Unregister sensor listeners
- Harder to use emulator
- Don't block on `onSensorChanged()`
- Don't use deprecated sensor methods or types
- Verify that sensors are there before using

- <http://www.vogella.com/articles/AndroidSensor/article.html>
- http://developer.android.com/guide/topics/sensors/sensors_overview.html