

**The PHANTOM  
I N S T R U C T I O N S**

**PLEASE READ THIS  
BOOKLET BEFORE  
USING THE PHANTOM**

## INTRODUCTION:

Thank-you for buying the NEW! Phantom. The parallel disk turbo system every 1541 wants!

- Expert Compatible – Program the Expert in less than 2 seconds
- Speeds up ALL drive functions
- Full error checking retained – essential for reliability. Other systems sacrifice this crucial function to achieve speed increases but are in fact NO FASTER, only LESS RELIABLE.
- 8 function key commands for major functions.
- 60 additional commands including
  - File lock and unlock
  - Write protect ignore, no need to notch disks
  - Set device number
  - Screen on/off
  - G01541 – reverts to standard 1541
  - Many more useful commands aid compatibility (disable function keys, disable extra ram etc.)
  - Drive monitor – commands include disassemble, fill, compare, hunt, assemble, execute etc etc.
- Compatible with most commercial software.
- Reliable – does not corrupt disks unlike rival products.
- Switchable kernel replacement included for 64 or 128 (in 64 mode)
- British designed and manufactured, available exclusively from Trilogic
- Upgradable – DOS, Kernal & Copier upgrades will be available soon to give extra features for a nominal sum.

The Phantom consists of three major components.

1. The Phantom Drive Board
2. The Phantom Kernal Replacement
3. The Parallel Cable

Please read/reference the installation section of this manual for correct installation of your new Phantom. Trilogic cannot be held responsible for any damage caused due to incorrect installation.

## **Keyboard Shortcuts:**

The following are various keyboard shortcuts incorporated into the Phantom hardware to assist in making your computing experience more productive.

### **<CTRL- RESTORE>:**

Resets the screen colors to the original factory default state of dark blue screen, light blue border and light blue text. Does not affect the contents of memory.

### **<RUNSTOP- RESTORE>:**

Resets the screen colors to the PHANTOM default state of dark grey screen, light grey border and yellow text. Does not affect the contents of memory.

### **<RUNSTOP- (← key) >:**

Resets the computer as though you pressed a hardware reset button or issued an SYS64738 reset command.

### **<CommodoreKey- RUNSTOP>:**

Loads the first file on your diskette into basic memory space. The command that's issued is  
LOAD"0: \*", 8

### **<SHIFT- RUNSTOP>:**

Loads the first file on your diskette into the memory space where the program was originally saved from. The command that's issued is  
LOAD"0: \*", 8, 1

## **Function Keys:**

f1 - @8\$: \*  
f2 - @9\$: \*

f3 - LOAD  
f4 - SAVE"  
f5 - RUN:  
f6 - LIST  
f7 - @  
f8 - sys61916

## Commands:

### **@ : Command Character:**

This is the character that prefixes all DOS commands. It is interchangeable with the > command.

### **> : Command Character:**

This is the character that prefixes all DOS commands. It is interchangeable with the @ command.

### **@& : <<< unknown >>>:**

This command generates 39, file not found, 00, 00 error.

#### Syntax/variants:

Have yet to determine the syntax for this.

### **@f : <<< unknown >>>:**

This command generates 62, file not found, 00, 00 error.

#### Syntax/variants:

Have yet to determine the syntax for this.

### **@= : System Status:**

This command displays a list of current option status' as well as the drive rom identification.

This may also do a soft reset on the drive at the same time (unconfirmed)

Syntax/variants:

Displays the following information.

```
73, 8K PHANTOM DOS V1.1E, 08, 08
90, RAM ENABLED, 00, 00
91, TURBO ENABLED, 00, 00
92, SCREEN BLANKING ENABLED, 00, 00
98, BUMPS ENABLED, 00, 00
99, WRITE PROTECT ENABLED, 00, 00
```

**@\$ : Directory:**

This command will display the contents of the directory on the diskette. The <Commodore-key> will pause the directory listing, and the RUNSTOP key will stop the directory listing. These are ideally suited for when you're looking at a very long directory or you want to stop part way through when you've found what you've been looking for.

Syntax/variants:

```
@$
@0:$ (directory of drive 0 of current device)
@0:$pa (only shows files starting with "pa")
```

**@1 : Enable TAPE Support:**

I'm listing this separately to bring it to your attention that this is how you enable TAPE support. Normally, when powered up, TAPE support is not available, as the default commands are focused directly to the disk drive. By issuing this command you are redirecting focus to the TAPE drive. All subsequent I/O commands that

would normally be directed to the drive now go to TAPE.

Syntax:

@1

Functional Example:

Once the command is issued, LOAD or SAVE will access the plugged in datasette recorder.

**@n : Directing DOS commands to a specific Drive number:**

In order to “focus” your machine on a specific drive number, you can issue the @<number> command. This will direct focus of all future DOS commands for your computing session or until you change it to a specific drive number.

Syntax:

@<drive number>

Functional Example:

@8 – Will direct all DOS commands to drive 8

@9 – Will direct all DOS commands to drive 9

@10 – Will direct all DOS commands to drive 10

**@An : Soft Re-Numbering your Drive:**

The disk drive, by default from the factory, is device #8. Unless you’ve physically changed this on the 1541 logic board, your drive will have that drive number assigned to it when you power it on. Soft renumbering allows you to change the device number of your drive without any physical changes.

Syntax:

@A <device-number>

### Functional Example:

In order to use this command, DOS must have focus on your current active drive. By default, we will assume that your drive is device 8. To ensure DOS focus on drive 8, you can issue the @8 command. After that you can change the device to another number.

@A9 will then soft renumber your 1541 to device 9.

To change it back, or to issue any DOS commands on the newly renumbered drive, you need to first issue an @9 to direct your DOS focus to that drive.

Then, you can issue any DOS command and it will be directed by your computer to device 9.

To change it back, or to any other device number, simply issue the @A8 command to change your drives number back to device 8. Don't forget to re-focus DOS to device 8 now using the @8 command.

### **@BH : Seek Drive Head to Track Zero:**

The purpose of this is to force the drive to find track 0 on your floppy drive. There are times when your floppy drive head may become "lost", that could prevent you from loading a directory or any software for that matter. Issuing an @BH will correct that problem.

### Syntax:

@BH

### Functional Example:



@BH <return>

From the basic prompt, type @BH and press return. The drive will spin, and you will hear a slight banging in your drive. This is a normal sound. Once the drive stops spinning, the process is complete.

**@BQ : <<<unknown>>>:**

The purpose of this command is unknown.

Syntax / Functional Example:

This command issued as @BQ will generate a machine response of:

10, no track 1 sensor, 00, 00

**@CD : <<<unknown>>>:**

The purpose of this command is unknown.

Syntax / Functional Example:

This command issued as @BQ will generate a machine response of:

26, write protect on, 18, 01

**@EA : System Status:**

The purpose of this command is to display various system settings regarding their current state.

Syntax :

@EA

Functional Example:

Returns a response on the screen as the example shows:

@EA <return>

```
90, RAM ENABLED, 00, 00
91, TURBO ENABLED, 00, 00
92, SCREEN BLANKING ENABLED, 00, 00
93, PHANTOM COMMANDS ENABLED, 00, 00
94, FAST SAVER ENABLED, 00, 00
95, FAST FORMAT ENABLED, 00, 00
96, PARALLEL BUS ENABLED, 00, 00
98, BUMPS ENABLED, 00, 00
```

It should also be noted that the @EA command can be stacked with other single status commands that follow: Examples are as follows:

@EBC <return> will show the following

```
98, BUMPS ENABLED, 00, 00
93, PHANTOM COMMANDS ENABLED, 00, 00
```

@ENP <return> will show the following

```
94, FAST SAVER ENABLED, 00, 00
96, PARALLEL BUS ENABLED, 00, 00
```

```
26, write protect on, 18, 01
```

### **@EB : Bumps Status:**

The purpose of this command is to display the "Bumps Enabled" current state.

Syntax :

@EB

Functional Example:

Returns a response on the screen as the example shows:

@EB <return>

```
98, BUMPS ENABLED, 00, 00
```

**@EC : Phantom Commands Status:**

The purpose of this command is to display the “Phantom Commands” current state.

Syntax :

@EC

Functional Example:

Returns a response on the screen as the example shows:

@EC <return>

93, PHANTOM COMMANDS ENABLED, 00, 00

**@EF : Fast Saver Status:**

The purpose of this command is to display the “Fast Saver” current state.

Syntax :

@EF

Functional Example:

Returns a response on the screen as the example shows:

@EF <return>

94, FAST SAVER ENABLED, 00, 00

**@EN : Fast Saver Status:**

The purpose of this command is to display the “Fast Saver” current state.

Syntax :

@EN

Functional Example:

Returns a response on the screen as the example shows:

@EN <return>

95, FAST FORMAT ENABLED, 00, 00

**@EP : Parallel Bus Status:**

The purpose of this command is to display the "Parallel Bus" current state.

Syntax :

@EP

Functional Example:

Returns a response on the screen as the example shows:

@EP <return>

96, PARALLEL BUS ENABLED, 00, 00

**@ER : RAM Status:**

The purpose of this command is to display the "RAM" current state.

Syntax :

@ER

Functional Example:

Returns a response on the screen as the example shows:

@ER <return>

90, RAM ENABLED, 00, 00

**@ES : Screen Blanking Status:**

The purpose of this command is to display the “Screen Blanking” current state.

Syntax :

@ES

Functional Example:

Returns a response on the screen as the example shows:

@ES <return>

92, SCREEN BLANKING ENABLED, 00, 00

**@ET : Turbo Status:**

The purpose of this command is to display the “Turbo” current state.

Syntax :

@ET

@+

@-

Functional Example:

Returns a response on the screen as the example shows:

@ET <return>

91, TURBO ENABLED, 00, 00

To toggle Turbo mode, perform the following commands

@+ enables Turbo mode

@- disables Turbo mode

**@FL : File Lock:**

The purpose of this command is to lock one or more files on diskette. This prevents deletion (scratching) of the file. The only way to wipe out a locked file is to unlock it first, or format the diskette.

File locking can be done to a single file, multiple specified files up to a maximum of 5 at once, or with a wildcard (\*). Using a wildcard will allow you to do all of the files on a diskette.

When doing a list of up to five filenames, you cannot allow them to wrap to the next line, as this command does not support wrapping.

Syntax :

@FL: <file1>, <file2>, <file3>, <file4>, <file5>

@FL: <filename>

@FL: \*

@FL: F\* (lock all files starting with F)

**@FU : File UnLock:**

The purpose of this command is to unlock one or more files on diskette. This allows deletion (scratching) of the file to be done if the user wishes to do so.

File unlocking can be done to a single file, multiple specified files up to a maximum of 5 at once, or with a wildcard (\*). Using a wildcard will allow you to do all of the files on a diskette.

When doing a list of up to five filenames, you cannot allow them to wrap to the next line, as this command does not support wrapping.

Syntax :

@FU: <file1>, <file2>, <file3>, <file4>, <file5>

@FU: <filename>

@FU: \*

@FU: F\* (unlock all files starting with F)

### **@G01541 : Revert to Stock ROM**

The purpose of this command is to allow the user to revert the drive back to the original factory Commodore 1541 Drive ROM

Syntax :

G01541

Functional Example:

Returns a response on the screen as the example shows:

@G01541 <return>

73, CBM DOS V2.6 1541, 00, 00

### **@H : Header:**

The purpose of this command is to rename the header (diskette name) of the diskette. This is the name that is used when formatting a diskette, and the name that appears reversed when listing a directory.

This is a non-destructive process with respect to the data on the diskette. You may perform this function without risk of loss of data.

Syntax :

@H0: <header name>

Functional Example:

@H0: Trilogic Phantom

Take note that the header name you choose must be at least 1 character long and no longer than 16 characters.

**@I : Initialize:**

The purpose of this command is to initialize the diskette.

Syntax :

@I0:

**@ME : <<< unknown >>>:**

The purpose of this command is unknown.

Syntax :

@ME:

Functional Example:

Returns a response on the screen as the example shows:

@ME <return>

The command accesses the 1541, then reports  
62, FILE NOT FOUND, 00, 00

**@ML : <<< unknown >>>:**

The purpose of this command is unknown.

Syntax :

@ML:

Functional Example:

Returns a response on the screen as the example shows:

@ML <return>



Reports “Memory Located and Protected”

**@MN** : <<< unknown >>>:

The purpose of this command is unknown.

Syntax :

@MN:

Functional Example:

Returns a response on the screen as the example shows:

@MN <return>

Reports “Memory Protection Enabled”

**@MP** : <<< unknown >>>:

The purpose of this command is unknown.

Syntax :

@MP:

Functional Example:

Returns a response on the screen as the example shows:

@MP <return>

Reports “Memory Protection Enabled”

**@MU** : <<< unknown >>>:

The purpose of this command is unknown.

Syntax :

@MU:

Functional Example:

Returns a response on the screen as the example shows:

@MU <return>

Reports "Memory Protection Disabled"

#### **@N : Format Diskette:**

The purpose of this command is to format/prepare a diskette such that files can be stored on the magnetic medium.

This command has an enhanced feature, that allows you to format a diskette to 40 tracks. Typical capacity on a stock 1541 is formatting to 35 tracks.

35 tracks equates to 664 blocks free

40 tracks equates to 749 blocks free

This higher capacity works fine on standard DSDD diskettes. This additional storage space is only accessible when the computer is in full Phantom mode.

The header name may only be 1 to 16 characters in length. The ID may only be 2 characters in length.

To enable the enhanced format, add a + after the ID value when formatting.

Syntax :

@N0: <header name>, <i d>{+}

Functional Example:

Formatting a standard 35 track/664 block free diskette.

@N0: TRI LOGIC PHANTOM, 35 <return>

Formatting a standard 40 track/749 block free diskette.

@NO: TRILOGIC PHANTOM, 40+ <return>

**@P0-9, PA-N : <<< unknown >>>:**

The purpose of this command is unknown.

Syntax :

@P0-9, @PA-N:

Functional Example:

Returns a response on the screen as the example shows:

@P0-9, @PA-N <return>

Reports 70, NO CHANNEL, 00, 00

**@P0 : <<< unknown >>>:**

The purpose of this command is unknown.

Syntax :

@po:

Functional Example:

Returns a response on the screen as the example shows:

@P0 <return>

Reports 64, FILE TYPE MISMATCH, 00, 00

**@Q : Kill DOS / Disable Function Keys:**

The overall purpose of this command is unknown. What is known is that the pre-programmed function key assignments go away, and the built in DOS

functions also disappear. No further testing has been done on this function at this time.

Syntax :

@Q:

Functional Example:

Returns a response on the screen as the example shows:

@Q <return>

Reports DOS KILLED

**@R : Display Drive Registers:**

The overall purpose of this command is unknown. What is known is that this command displays the 1541 drives registers it is believed.

Syntax :

@R:

Functional Example:

Returns a response on the screen as the example shows:

@R <return>

RST PC RA RX RY SP NV. BDI ZC  
>; C05C 10 00 FF 41 11111110

**@RI : Display Drive Registers:**

The overall purpose of this command is unknown. What is known is that this command displays the 1541 drives I/O registers it is believed.

Syntax :

@RI:

Functional Example:

Returns a response on the screen as the example shows:

@R <return>

```
>#1800 C1 FF 1A 00 C6 01 DF 01
>#1808 D9 AD FF 00 0B 40 82 FF
>#1C00 D2 11 6F 00 58 16 00 3A
>#1C08 2F 1B 01 41 EC 02 C0 22
```

**@S : Scratch/Delete files from Diskette:**

The purpose of this command is to delete individual or groups of files from a diskette that's inserted in your 1541 drive. Take note that if the files have been locked, then this command will not delete them. Instead, it will report an error. Also, if the diskette is write protected, the files also cannot be deleted.

Syntax :

@S0: <filename>

Functional Example:

```
@S0: PACMAN    ← deletes file named PACMAN
@S0: P*        ← deletes all files starting with P
```

**@U9 : <<< unknown >>>:**

The purpose of this command is unknown.

Syntax :

@U9:

Functional Example:

Returns a response on the screen as the example shows:

@U9 <return>

Reports 73, 8K PHANTOM DOS V1. 1E, 08, 08

**@V : Validate Diskette:**

The purpose of this command is to rebuild the BAM (block allocation map) on the floppy diskette. The BAM is located on track 18. This is the only way of removing a corrupted file from the directory. A corrupted file may have a file length of zero, and have an asterisk (\*) beside it. Once the validation command has completed, the BAM will have been rebuilt, and the corrupt file(s) will have been removed. This is a permanent modification that occurs.

Syntax :

@V:I      ← Validate and ignore read errors

@V:L      ← Validate and learn read errors

**@WC : Write Protect Ignore until disk change:**

The purpose of this command is to tell the disk drive that it should not observe the write protect sensor on the drive, even if the write protect tab is in place. This command will remain in place only while the current diskette is in the drive. As soon as it is removed from the drive, the drive sensor will return to normal function.

Syntax :

@WC

**@WI : Write Protect Ignore:**

The purpose of this command is to tell the disk drive that it should not observe the write protect sensor on the drive, even if the write

protect tab is in place. This command will remain in place until it is either switched off or the drive is powered down.

Syntax :

@WI

**@WN : Write Protect Return to Normal:**

The purpose of this command is to tell the disk drive to return to normal detection mode. Typically this command would be used if you wanted to reverse the @WI command.

Syntax :

@WN

**@WU : <<< unknown >>>:**

Not a lot is known about this function. What it appears to do is modify the diskette in some fashion such that it is no longer possible to write to the diskette. No reversal process has been found other than the destructive FORMAT (@N) command. Use with caution.

Syntax :

@WU

Functional Example:

Returns a response on the screen as the example shows:

26, WRITE PROTECT ON, 18, 00

**SYS61916 : RENEWED:**

Not a lot is known about this function. What it appears to do is some sort of "NEW" function, but

not a lot is known about it.



## Appendix: INSTALLATION:

Installation of this board into your drive will take approximately 30 minutes. Make sure you have a well lit and tidy work area before starting.

Additionally, your Commodore 64 will need to have a socketed kernel. If your Commodore 64 Kernal ROM (the chip marked as 901227-03) is soldered onto your computers mainboard, then please seek a qualified professional to remove the chip and install a socket. Attempting this yourself can cause irreparable damage to your computer. Trilogic cannot be held responsible for any damage to your Commodore 64.

Tools required are:

- Phillips head screw driver
- Small flat head screwdriver
- Anti-static grounding strap for yourself.

***STEP 1 : Remove / Replace the Kernal ROM in your 64.***

Estimated Install time: 10 minutes

In this step, you will be removing your Kernal ROM from your machine and replacing it with THE PHANTOM rom provided in your package. This Phantom kernal replacement rom actually contains TWO roms.

1. Original Commodore Kernal ROM
  2. Custom PHANTOM ROM The most current version of the PHANTOM ROM is v1.07
- Remove the screws from your Commodore 64 (the three screws along the bottom front edge of the machine, and lift up the top half of the computer (like you would the hood of your car).
  - Locate the kernal rom location on your Commodore 64 and remove it, taking note of the notch location on the chip.

- Insert the Phantom kernal rom adapter board into the same location, taking care to ensure the notch on the Phantom rom is oriented in the same fashion.
- Locate and install the provided switch in the case, or use the provided jumper if you prefer to always use the Phantom kernal on your machine.
- If you choose the jumper option, then unplug the switch and discard, and place the jumper across the two pins closes to the notch end of the chip on the Phantom kernal board.
- Close up your Commodore 64, and do a power on test of your Commodore 64. One of the switch positions will provide you with the factory start up screen, and the other position will be the Phantom start up screen that will look like figure 1.

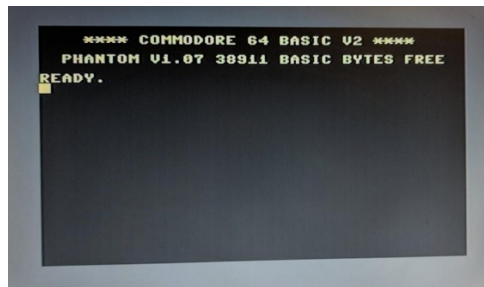


Figure 1

## **Step 2: *Install The Phantom Drive Board***

Estimated Install time: 30 minutes

In this step, you will be installing the brains and brawn of The Phantom. It may seem daunting, but take your time and ensure you have good lighting, to ensure everything is plugged in as it should