



Side Marker/Turn Signal/Hazard Flasher System

Component Location Index



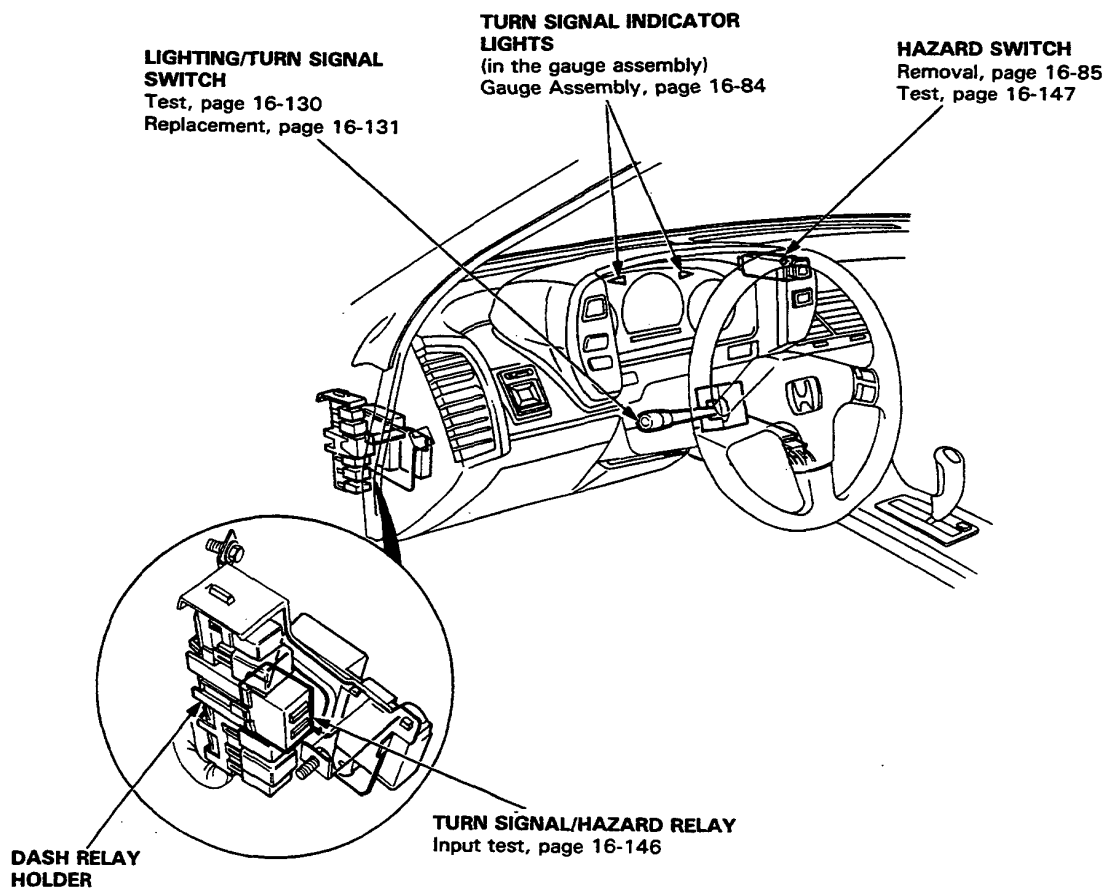

Circuit Diagram

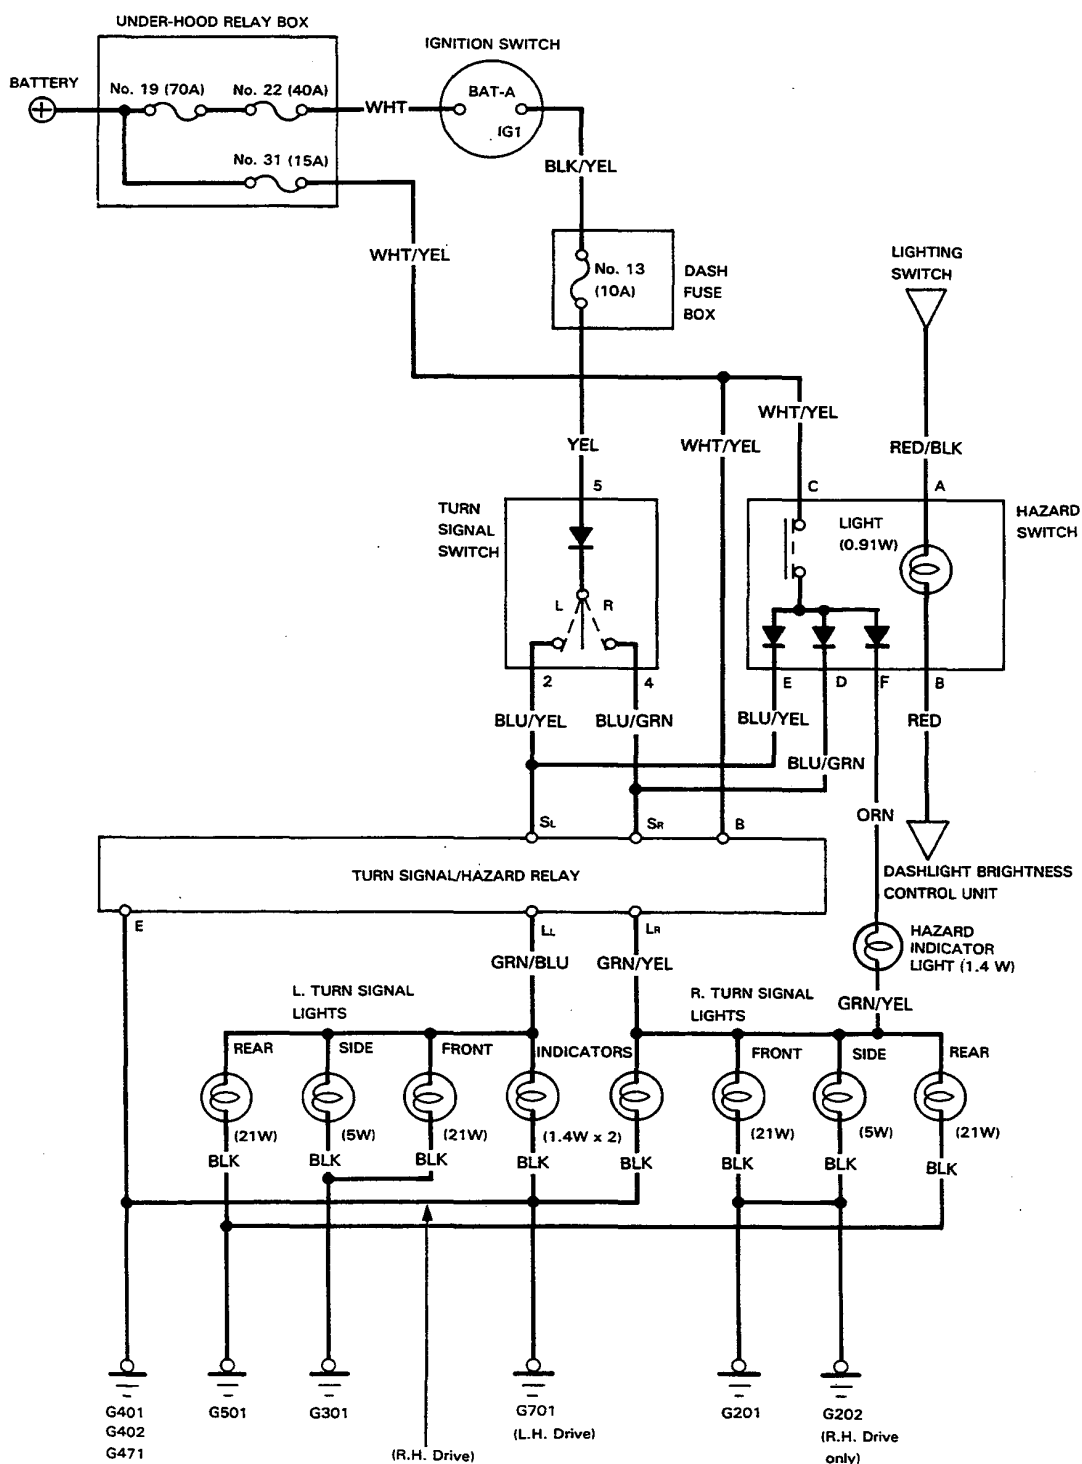


Side Marker/Turn Signal/Hazard Flasher System

Turn Signal/Hazard Relay Input Test

Remove the dashboard lower panel and the kick panel and the dash relay holder from the bracket to facilitate the input test, then remove the turn signal/hazard relay from the dash relay holder.

Make the following input tests at the relay holder pins. If all tests prove OK, but the relay fails to work, replace the turn signal/hazard relay.

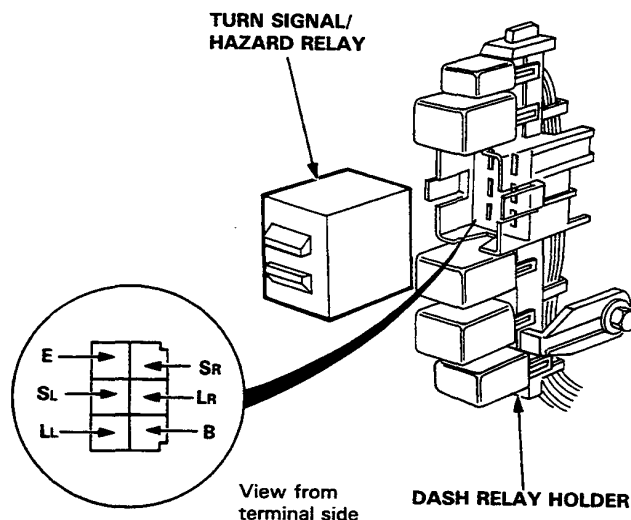

No.	Terminal	Test condition	Test: desired result	Possible cause (if result is not obtained)
1	E	Under all conditions.	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> • Poor ground (G401, 402, 471). • An open in the BLK wire.
2	B	Under all conditions.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 31 (15 A) fuse. • An open in the WHT/YEL wire.
3	SR	Ignition switch ON and turn signal switch in R.	Check for voltage to ground: should have battery voltage.	<ul style="list-style-type: none"> • Blown No. 13 (10 A) fuse. • Faulty turn signal switch. • An open in the YEL, BLU/GRN or BLU/YEL wire.
	SL	Ignition switch ON and turn signal switch in L.		
4	SR	Hazard switch ON.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> • Faulty hazard switch. • An open in the BLU/GRN or BLU/YEL wire.
	SL			
5	LR	Connect the B terminal to the LR terminal.	R. Turn signal lights should come on as the battery is connected	<ul style="list-style-type: none"> • Blown bulb. • Poor ground (L.H. Drive: G201) (R.H. Drive: G201, 202) • An open in the GRN/YEL wire.
6	LL	Connect the B terminal to the LL terminal.	L. Turn signal lights should come on as the battery is connected.	<ul style="list-style-type: none"> • Blown bulb. • Poor ground (G301). • An open in the GRN/BLU wire.



Hazard Switch Test

1. Remove the instrument panel from the meter visor.
2. Check for continuity between the terminals in each switch position according to the table.

Terminal Position	C		D	E	A		B
OFF							
ON	○	▶	○		○	○	○
	○	▶	○				

