


# Mapping for Mixxx

The Hercules MP3 e2 mapping for Mixxx is integrated in Mixxx so you don't have to download or install nothing.

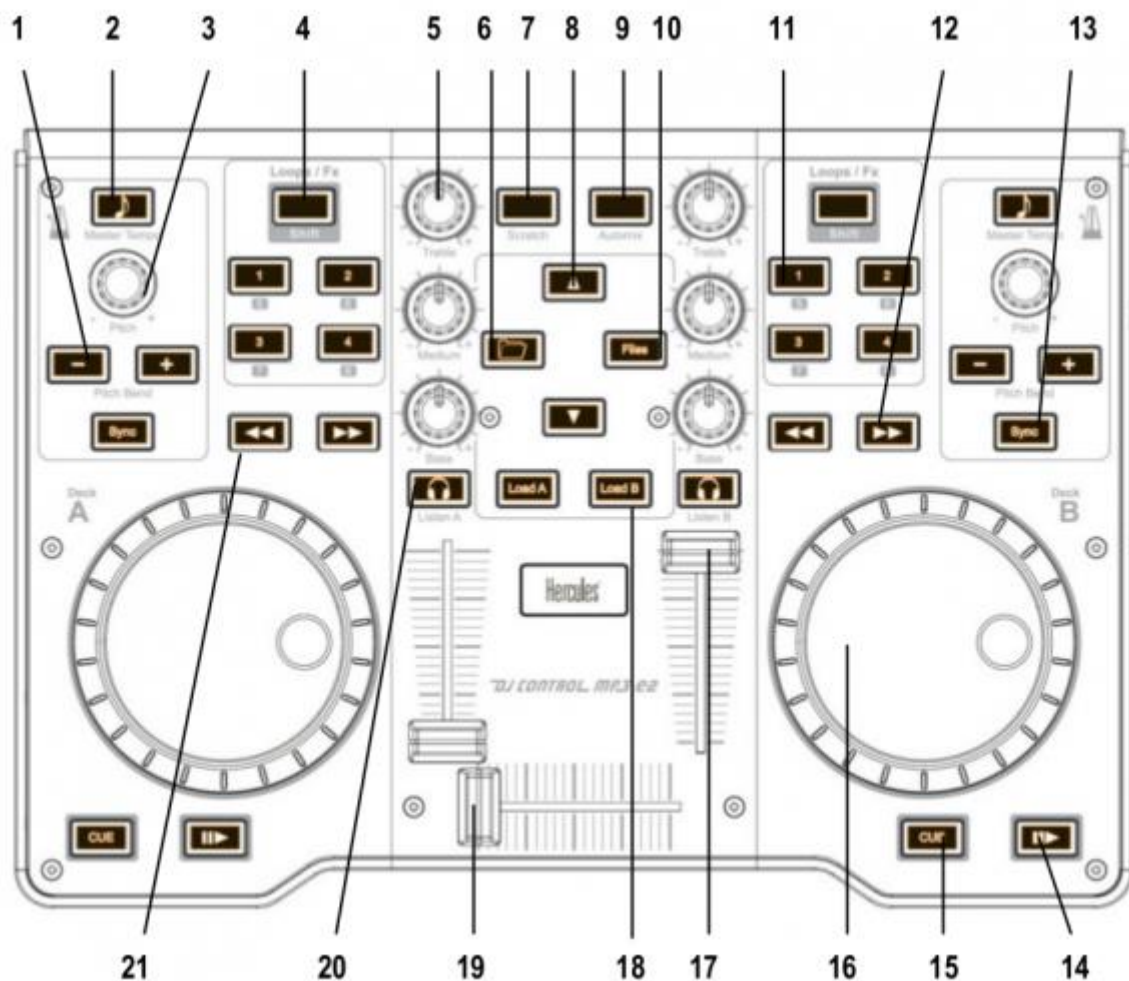

## Global controls

Number	Control	Function	shifted	supershifted
8	Arrow up/down	Up : goes one track down Down : Microphone TalkOver	Up : Goes one track up Down : Nothing	Nothing
6	Folder	Toggles (expands/collapses) the currently selected library sidebar item.	Play/pause sampler 1	
10	Files	Toggles (expands/collapses) the currently selected library sidebar item.	Play/pause sampler 2	
18	Load A/B	Loads the currently highlighted track into the corresponding deck (A or B)	Loads the current highlighted track into the corresponding sampler (Sampler 1 or Sampler 2)	
19	Crossfader	Fades between left and right deck		
9	Automix	Used as a master shift button to obtain more controls than those provided by Hercules.		
7	Scratch	Enable or disable the scratch mode on both decks	Used as a master supershift button to obtain even more controls.	

## Deck / Channel specific controls

Number	Control	Simple function	Shifted function	2 <sup>nd</sup> shifted
1	Pitchbend +/-	Temporary Holds the pitch 4% higher while pressed	+ double loop - half loop	+ Filter High Kill - Filter Low Kill
2	Master Tempo	Magnet	Enable key-lock for the specified deck (rate changes only affect tempo, not key)	Define loop (loop-in when pressed, loop-out when released)
3	Pitch knobs	Adjusts playback pitch/speed	Deck A: adjust the headphone volume Deck B: adjust the cue/main mix in the headphone output	Nothing
4	Loop/Fx	Toggle the Loop/Hotcue mode for the keys buttons. When the button is not lit up the loop buttons are enabled, when the button is lit up the hotcue's buttons are enabled		
5	Equalizer knobs	Adjusts the gain of the low/medium/high equalizer filter		
11	1/2/3/4 buttons	<b>Loop mode:</b> 1- loop-in 2- loop-out 3- Toggles current loop On or Off. 4- Loop 4	<b>Loop mode:</b> 1- Loop 1/4 2- Loop 1/2 3- Loop 1 4- Loop 2	<b>Loop mode:</b> 1- Clear loop 2- loop 1/8 3- Loop 8 4- Loop 16
		<b>Hotcue mode:</b> 1, 2, 3 and 4: If hotcue X is set, seeks the player to hotcue X's position. If hotcue X is not set, sets hotcue X to the current play position.	<b>Hotcue mode:</b> If hotcue X is set, clears its hotcue status.	<b>Hotcue Mode:</b> Nothing
12	Forward \ Backward	Move Forward/Backward in track	Adjust pregain	
13	Sync	Automatically sets pitch so the BPM of the other deck is matched	Adjust BeatGrid	Kill Mid
14	Play	Starts or stop a loaded track	Backward Play	Repeat
15	Cue	Sets the cue point if a track is stoped and not at the current cue point Stops track and returns to the current cue point if a track is playing. Plays preview if a track is stopped at the cue point for as long as it's held down		
16	Jog wheel	Seeks forwards and backwards in a stopped track. Temporarily changes the playback speed for playing tracks	Absolute sync of the track speed to the jog wheel if the scratch mode is enabled	Deck A: Select prev/next playlist Deck B: select prev/next track
17	Deck volume slider	Controls the deck output volume		
20	Headphone monitor	Toggles this deck output to the headphones monitor on/off		