



VTracker interface C++ library

v1.0.1

Table of contents

- [Overview](#)
- [Versions](#)
- [Required operating principles](#)
- [VTracker interface class description](#)
 - [VTracker class declaration](#)
 - [getVersion method](#)
 - [initVTracker method](#)
 - [setParam method](#)
 - [getParam method](#)
 - [getParams method](#)
 - [executeCommand method](#)
 - [processFrame method](#)
 - [getImage method](#)
 - [encodeSetParamCommand method](#)
 - [encodeCommand method](#)
 - [decodeCommand method](#)
- [Data structures](#)
 - [VTrackerCommand enum](#)
 - [VTrackerParam enum](#)
- [VTrackerParams class description](#)
 - [VTrackerParams class declaration](#)
 - [Serialize video tracker params](#)
 - [Deserialize video tracker params](#)
 - [Read params from JSON file and write to JSON file](#)
- [Build and connect to your project](#)

Overview

VTracker C++ library provides standard interface as well defines data structures and rules for different video trackers. **VTracker** interface class doesn't do anything, just provides interface and defines data structures. Different video trackers inherit interface from **VTracker** C++ class. **VTracker.h** file contains **VTrackerParams** class, **VTrackerCommand** enum, **VTrackerParam** enum and includes **VTracker** class declaration. **VTrackerParams** class contains video tracker params and includes methods to encode and decode params. **VTrackerCommand** enum contains IDs of commands. **VTrackerParam** enum contains IDs of params. All video trackers should include params and commands listed in **VTracker.h** file. Class dependency: [Frame](#) class which describes video frame structure and pixel formats, [ConfigReader](#) class which provides methods to work with JSON structures (read/write).

Versions

Table 1 - Library versions.

| Version | Release date | What's new |
|---------|--------------|----------------|
| 1.0.0 | 20.07.2023 | First version. |

Required operating principles

The video tracker shall provide the following principle of operation: each video frame without dropping must be send to the tracker for processing regardless of the current tracker operation mode. If the tracker is not in tracking mode, the tracker does not perform frame processing, but the processing function must be called by user. Tracker should calculate at least tracking rectangle position (aka object position) for each processed video frame. Figure 1 shows basic principles of object search on video frames.

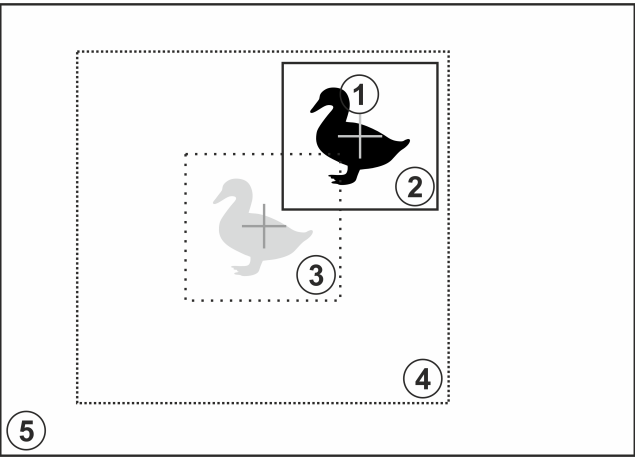


Figure 1 - Basic principles of object search. (1 - object image on the current frame, 2 - tracking rectangle calculated after processing of the current frame, 3 - position of the tracking rectangle on the previous frame, 4 - object search window on the current frame relative to the position of the tracking rectangle on the previous frame, 5 - current video frame)

At the moment of object capturing, the rectangular area of the video frame (capture rectangle) specified in the capture parameters (position and size) is taken as the object reference image, on the basis of which the pattern is formed. The algorithm then searches an object in each frame of the video in particular search window. Search window is area bounded by the algorithm's parameters with the center coinciding with the calculated center of the tracking rectangle on the previous video frame (or the center of the capture rectangle if the first frame after capture is being processed, position of search window can be change by user for any video frame). The calculated most probable position of the tracking object (with highest value of correlation function) in the current video frame (calculated center of the tracking rectangle) is taken as the coordinates of the object. Figure 1 shows a schematic representation of a video frame **(5)** that contains an image of a object **(1)**. Assume that on the previous video frame the object was in the area corresponding to area **(3)**, which is the area of the tracking rectangle (the most probable position of the object) in the previous video frame. The library performs object search in the area **(4)** whose center coincides with the position of the center of the tracking rectangle **(3)** in the previous video frame. Tracker should support (if it possible) follow modes.

Table 2 - Tracking algorithm operating modes.

| Mode | Description |
|------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| FREE - free mode. | In this mode, video tracker does not perform any calculations. Video tracker only adds video frames to the frame buffer. Conditions for entering FREE mode: 1. Once the video tracker has been initialized. This mode is the default mode. 2. Automatically when the automatic tracking reset criteria are met. 3. After command RESET. |
| TRACKING - tracking mode. | In this mode the video tracker calculates the automatic tracking and updates all calculated (estimated) object parameters. Criteria for entering TRACKING mode: 1. After the CAPTURE command. 2. Automatically from LOST mode when object detection criteria are met. |
| LOST - object loss mode. | In this mode, the video tracker searches object for automatic recapturing (switching to TRACKING mode) and updates it's coordinates in one of the ways specified in the parameters. LOST mode contains the following additional modes: 0. Tracking rectangle coordinates are not updated (remain the same as before entering LOST mode). 1. The tracking rectangle coordinates are updated based on the components of the object's speed calculated before going into LOST mode. When the tracking rectangle reaches any edge of the frame, the coordinate update in the corresponding direction stops. 2. The tracking rectangle coordinates are updated based on the components of the speed of objects in the video frames calculated before going into LOST mode. When the tracking reset criteria is met, the device switches to FREE mode. Criteria for entering LOST mode: 1. Automatically when object loss is detected. 2. On command from TRACKING mode. 3. On command from INERTIAL mode. 4. On command from STATIC mode. |
| INERTIAL - inertial tracking mode. | In this mode the video tracker does not search for an object to recapture automatically, but only updates the coordinates of the tracking rectangle based on the previously calculated velocity components of the objects. Criteria for entering INERTIAL mode: 1. On command from TRACKING mode. 2. On command from LOST mode. 3. On command from STATIC mode. |

| Mode | Description |
|-----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| STATIC - static mode. | This mode does not perform any calculations and the tracking rectangle coordinates remain the same as before going into this mode. This mode is necessary to “freeze” the tracking algorithm for a certain number of frames. For example, if the tracking system is exposed to strong vibrations, it is possible to “freeze” the tracking algorithm until the vibration ends. |

Figure 2 shows the operating mode graph and the possible transitions between them. The words auto in figure 2 indicate the ability to change the mode automatically if the relevant criteria are met. the words command indicated the ability to change mode by user's command.

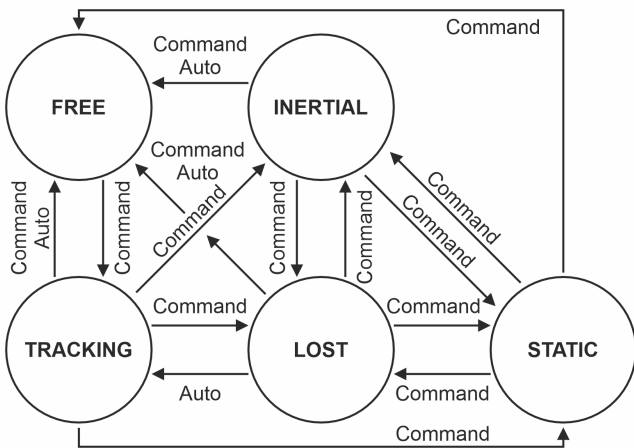


Figure 2 - Operation modes of the tracking algorithm. (Auto – automatic mode change capability)

Figure 2 shows the graph of operation modes. There are the following conditions for automatic mode changes (word “Auto” in figure 2): **1.** Automatic switching from TRACKING to FREE mode is possible only if the tracking rectangle center has touched (coincided in coordinates) any of the video frame edges. **2.** The automatic switching from TRACKING to LOST mode is possible when an object loss is detected – when the calculated object detection probability falls below the threshold. **3.** Automatic switching from LOST to TRACKING mode is possible when an object is detected again after a loss - when the calculated object detection probability exceeds the threshold. **4.** Automatic reset of tracking in the LOST mode (switch to FREE mode) is possible when the center of the tracking rectangle touches the edge of the video frame (if the LOST mode option set to 2), as well as when the number of frames specified in the parameters has expired, at which the algorithm is continuously in LOST mode. **5.** Automatic reset of tracking in INERTIAL mode (switch to FREE mode) is possible when the center of the tracking rectangle reaches the edge of the frame.

VTracker interface class description

VTracker class declaration

VTracker interface class declared in **VTracker.h** file. Class declaration:

```

class VTracker
{
public:
    /**

```

```

    * @brief Get string of current library version.
    * @return String of current library version.
    */
static std::string getVersion();
/**
    * @brief Init video tracker. All params will be set.
    * @param params Parameters class.
    * @return TRUE if the video tracker init or FALSE if not.
    */
virtual bool initVTracker(VTrackerParams& params) = 0;
/**
    * @brief Set video tracker param.
    * @param id Param ID.
    * @param value Param value to set.
    * @return TRUE if param was set of FALSE.
    */
virtual bool setParam(VTrackerParam id, float value) = 0;
/**
    * @brief Get video tracker param value.
    * @param id Param ID.
    * @return Param value or -1.
    */
virtual float getParam(VTrackerParam id) = 0;
/**
    * @brief Get video tracker params (results).
    * @return Video tracker params structure.
    */
virtual VTrackerParams getParams() = 0;
/**
    * @brief Execute command.
    * @param id Command ID.
    * @param arg1 First argument. Value depends on command ID.
    * @param arg2 Second argument. Value depends on command ID.
    * @param arg3 Third argument. Value depends on command ID.
    * @return TRUE if the command accepted or FALSE if not.
    */
virtual bool executeCommand(VTrackerCommand id,
                           float arg1 = 0,
                           float arg2 = 0,
                           float arg3 = 0) = 0;
/**
    * @brief Process frame. Must be used for each input video frame.
    * @param frame Source video frame.
    * @return TRUE if video frame was processed or FALSE if not.
    */
virtual bool processFrame(cr::video::Frame& frame) = 0;
/**
    * @brief Get image of internal surfaces.
    * @param type Type of image to get. Depends on implementation.
    * @param image Pointer to image buffer. Must be 128x128 = 16384 bytes.
    */
virtual void getImage(int type, cr::video::Frame& image) = 0;
/**
    * @brief Encode set param command.
    * @param data Pointer to data buffer. Must have size >= 11.

```

```

    * @param size Size of encoded data.
    * @param id Param id.
    * @param value Param value.
    */
static void encodeSetParamCommand(
    uint8_t* data, int& size, VTrackerParam id, float value);
/**
    * @brief Encode command.
    * @param data Pointer to data buffer. Must have size >= 11.
    * @param size Size of encoded data.
    * @param id Command ID.
    * @param arg1 First argument. Value depends on command ID.
    * @param arg2 Second argument. Value depends on command ID.
    * @param arg3 Third argument. Value depends on command ID.
    */
static void encodeCommand(
    uint8_t* data, int& size, VTrackerCommand id,
    float arg1 = 0, float arg2 = 0, float arg3 = 0);
/**
    * @brief Decode command.
    * @param data Pointer to command data.
    * @param size Size of data.
    * @param paramId Output command ID.
    * @param commandId Output command ID.
    * @param value1 Param or command argument 1.
    * @param value2 Command argument 2.
    * @param value3 Command argument 3.
    * @return 0 - command decoded, 1 - set param command decoded, -1 - error.
    */
static int decodeCommand(uint8_t* data,
    int size,
    VTrackerParam& paramId,
    VTrackerCommand& commandId,
    float& value1,
    float& value2,
    float& value3);
};

```

getVersion method

getVersion() method returns string of current version of **VTracker** class. Particular video tracker class can have it's own **getVersion()** method. Method declaration:

```
static std::string getVersion();
```

Method can be used without **VTracker** class instance:

```
cout << "VTracker class version: " << VTracker::getVersion() << endl;
```

Console output:

initVTracker method

initVTracker(...) method initializes video tracker by set of params. Method declaration:

```
virtual bool initVTracker(VTrackerParams& params) = 0;
```

| Parameter | Value |
|-----------|------------------------------------------------------------------------------------------------------|
| params | Video tracker params class. Video tracker should initialize all parameters listed in VTrackerParams. |

Returns: TRUE if the video tracker initialized or FALSE if not.

setParam method

setParam(...) method designed to set new video tracker parameter value. Method declaration:

```
virtual bool setParam(VTrackerParam id, float value) = 0;
```

| Parameter | Description |
|-----------|------------------------------------------------------|
| id | Parameter ID according to VTrackerParam enum. |
| value | Parameter value. Value depends on parameter ID. |

Returns: TRUE if the parameter was set or FALSE if not.

getParam method

getParam(...) method designed to obtain video tracker parameter value. Method declaration:

```
virtual float getParam(VTrackerParam id) = 0;
```

| Parameter | Description |
|-----------|------------------------------------------------------|
| id | Parameter ID according to VTrackerParam enum. |

Returns: parameter value or -1 if the parameters doesn't exist in particular video tracker.

getParams method

getParams(...) method designed to obtain video tracker params class and tracking results. Method declaration:

```
virtual VTrackerParams getParams() = 0;
```

Returns: video tracker parameters class (see **VTrackerParams** class description).

executeCommand method

executeCommand(...) method designed to execute video tracker command. Method declaration:

```
virtual bool executeCommand(VTrackerCommand id, float arg1 = 0, float arg2 = 0, float arg3 = 0) = 0;
```

| Parameter | Description |
|-----------|---------------------------------------------------------------------------------------------|
| id | Command ID according to VTrackerCommand enum. |
| arg1 | First argument. Value depends on command ID (see VTrackerCommand enum description). |
| arg2 | Second argument. Value depends on command ID (see VTrackerCommand enum description). |
| arg3 | Third argument. Value depends on command ID (see VTrackerCommand enum description). |

Returns: TRUE is the command was executed or FALSE if not.

processFrame method

processFrame(...) method designed to process video frame. Method declaration:

```
virtual bool processFrame(cr::video::Frame& frame) = 0;
```

| Parameter | Description |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| frame | Video frame for processing. Video tracker processes only RAW pixel formats (BGR24, RGB24, GRAY, YUYV24, YUYV, UYVY, NV12, NV21, YV12, YU12, see Frame class description). |

Returns: TRUE is the video frame was processed FALSE if not. If video tracker not in tracking mode the method should return TRUE.

getImage method

getImage(...) method designed to obtain images of internal matrixes. Depends on implementation. Method declaration:

```
virtual void getImage(int type, cr::video::Frame& image) = 0;
```

| Parameter | Description |
|-----------|-------------------------------------------------------|
| type | Image type. Depends on implementation. |
| frame | Output frame. Pixel format depends on implementation. |

encodeSetParamCommand method

encodeSetParamCommand(...) static method designed to encode command to change any parameter for remote video tracker. To control video tracker remotely, the developer has to design his own protocol and according to it encode the command and deliver it over the communication channel. To simplify this, the **VTracker** class contains static methods for encoding the control command. The **VTracker** class provides two types of commands: a parameter change command (SET_PARAM) and an action command (COMMAND). **encodeSetParamCommand(...)** designed to encode SET_PARAM command. Method declaration:

```
static void encodeSetParamCommand(uint8_t* data, int& size, VTrackerParam id, float value);
```

| Parameter | Description |
|-----------|---------------------------------------------------------------------------------------------|
| data | Pointer to data buffer for encoded command. Must have size >= 11. |
| size | Size of encoded data. Will be 11 bytes. |
| id | Parameter ID according to VTrackerParam enum. |
| value | Parameter value. Value depends on parameter ID (see VTrackerParam enum description). |

SET_PARAM command format:

| Byte | Value | Description |
|------|-------|------------------------------------------------------|
| 0 | 0x01 | SET_PARAM command header value. |
| 1 | 0x01 | Major version of VTracker class. |
| 2 | 0x00 | Minor version of VTracker class. |
| 3 | id | Parameter ID int32_t in Little-endian format. |
| 4 | id | Parameter ID int32_t in Little-endian format. |

| Byte | Value | Description |
|------|-------|-------------------------------------------------------|
| 5 | id | Parameter ID int32_t in Little-endian format. |
| 6 | id | Parameter ID int32_t in Little-endian format. |
| 7 | value | Parameter value float in Little-endian format. |
| 8 | value | Parameter value float in Little-endian format. |
| 9 | value | Parameter value float in Little-endian format. |
| 10 | value | Parameter value float in Little-endian format. |

encodeSetParamCommand(...) is static and used without **VTracker** class instance. This method used on client side (control system). Command encoding example:

```
outValue = (float)(rand() % 20);
VTracker::encodeSetParamCommand(
data, size, VTrackerParam::MULTIPLE_THREADS, outValue);
```

encodeCommand method

encodeCommand(...) static method designed to encode command for remote video tracker. To control video tracker remotely, the developer has to design his own protocol and according to it encode the command and deliver it over the communication channel. To simplify this, the **VTracker** class contains static methods for encoding the control command. The **VTracker** class provides two types of commands: a parameter change command (SET_PARAM) and an action command (COMMAND). **encodeCommand(...)** designed to encode COMMAND (action command). Method declaration:

```
static void encodeCommand(uint8_t* data, int& size, VTrackerCommand id, float arg1 = 0,
float arg2 = 0, float arg3 = 0);
```

| Parameter | Description |
|-----------|---------------------------------------------------------------------------------------------|
| data | Pointer to data buffer for encoded command. Must have size >= 19. |
| size | Size of encoded data. Will be 19 bytes. |
| id | Command ID according to VTrackerCommand enum. |
| arg1 | First argument. Value depends on command ID (see VTrackerCommand enum description). |
| arg2 | Second argument. Value depends on command ID (see VTrackerCommand enum description). |
| arg3 | Third argument. Value depends on command ID (see VTrackerCommand enum description). |

COMMAND format:

| Byte | Value | Description |
|------|-------|---------------------------------------------------------------------|
| 0 | 0x00 | COMMAND header value. |
| 1 | 0x01 | Major version of VTracker class. |
| 2 | 0x00 | Minor version of VTracker class. |
| 3 | id | Command ID int32_t in Little-endian format. |
| 4 | id | Command ID int32_t in Little-endian format. |
| 5 | id | Command ID int32_t in Little-endian format. |
| 6 | id | Command ID int32_t in Little-endian format. |
| 7 | arg1 | First command argument value float in Little-endian format. |
| 8 | arg1 | First command argument value float in Little-endian format. |
| 9 | arg1 | First command argument value float in Little-endian format. |
| 10 | arg1 | First command argument value float in Little-endian format. |
| 11 | arg2 | Second command argument value float in Little-endian format. |
| 12 | arg2 | Second command argument value float in Little-endian format. |
| 13 | arg2 | Second command argument value float in Little-endian format. |
| 14 | arg2 | Second command argument value float in Little-endian format. |
| 15 | arg3 | Third command argument value float in Little-endian format. |
| 16 | arg3 | Third command argument value float in Little-endian format. |
| 17 | arg3 | Third command argument value float in Little-endian format. |
| 18 | arg3 | Third command argument value float in Little-endian format. |

encodeCommand(...) is static and used without **VTracker** class instance. This method used on client side (control system). Command encoding example:

```
uint8_t data[1024];
int size = 0;
float outValue = (float)(rand() % 20);
float arg1 = (float)(rand() % 20);
float arg2 = (float)(rand() % 20);
float arg3 = (float)(rand() % 20);
VTracker::encodeCommand(data, size, VTrackerCommand::CAPTURE, arg1, arg2, arg3);
```

decodeCommand method

decodeCommand(...) static method designed to decode command on video tracker side (edge device).

Method declaration:

```
static int decodeCommand(uint8_t* data, int size, VTrackerParam& paramId,  
VTrackerCommand& commandId, float& value1, float& value2, float& value3);
```

| Parameter | Description |
|-----------|----------------------------------------------------------------------------------------------------------------------------|
| data | Pointer to input command. |
| size | Size of command. Should be 11 bytes. |
| paramId | Parameter ID according to VTrackerParam enum. After decoding SET_PARAM command the method will return parameter ID. |
| commandId | Command ID according to VTrackerCommand enum. After decoding COMMAND the method will return command ID. |
| value1 | Parameter value or first command argument 1. After decoding SET_PARAM and COMMAND. |
| value2 | Parameter value or second command argument 1. After decoding COMMAND. |
| value3 | Parameter value or third command argument 1. After decoding COMMAND. |

Returns: **0** - in case decoding COMMAND, **1** - in case decoding SET_PARAM command or **-1** in case errors.

decodeCommand(...) is static and used without **VTracker** class instance. Command decoding example:

```
// Encode command.  
uint8_t data[1024];  
int size = 0;  
float outValue = (float)(rand() % 20);  
float arg1 = (float)(rand() % 20);  
float arg2 = (float)(rand() % 20);  
float arg3 = (float)(rand() % 20);  
VTracker::encodeCommand(data, size, VTrackerCommand::CAPTURE, arg1, arg2, arg3);  
  
// Decode command.  
VTrackerCommand commandId;  
VTrackerParam paramId;  
float inArg1 = (float)(rand() % 20);  
float inArg2 = (float)(rand() % 20);  
float inArg3 = (float)(rand() % 20);  
if (VTracker::decodeCommand(data, size, paramId, commandId, inArg1, inArg2, inArg3) != 0)  
{  
    cout << "Command not decoded" << endl;  
    return false;  
}
```

Data structures

VTrackerCommand enum

VTrackerCommand enum describes commands supported by video tracker. **VTrackerCommand** enum declared in **VTracker.h** file. Enum declaration:

```
enum class VTrackerCommand
{
    /// Object capture. Arguments:
    /// arg1 - Capture rectangle center X coordinate. -1 - default coordinate.
    /// arg2 - Capture rectangle center Y coordinate. -1 - default coordinate.
    /// arg3 - frame ID. -1 - Capture on last frame.
    CAPTURE = 1,
    /// Object capture command. Arguments:
    /// arg1 - Capture rectangle center X coordinate, percents of frame width.
    /// arg2 - Capture rectangle center Y coordinate, percents of frame width.
    CAPTURE_PERCENTS,
    /// Reset command. No arguments.
    RESET,
    /// Set INERTIAL mode. No arguments.
    SET_INERTIAL_MODE,
    /// Set LOST mode. No arguments.
    SET_LOST_MODE,
    /// Set STATIC mode. No arguments.
    SET_STATIC_MODE,
    /// Adjust tracking rectangle size automatically once. No arguments.
    ADJUST_RECT_SIZE,
    /// Adjust tracking rectangle position automatically once. No arguments.
    ADJUST_RECT_POSITION,
    /// Move tracking rectangle (change position). Arguments:
    /// arg1 - add to X coordinate, pixels. 0 - no change.
    /// arg2 - add to Y coordinate, pixels. 0 - no change.
    MOVE_RECT,
    /// Set tracking rectangle position in FREE mode. Arguments:
    /// arg1 - Rectangle center X coordinate.
    /// arg2 - Rectangle center Y coordinate.
    SET_RECT_POSITION,
    /// Set tracking rectangle position in FREE mode in percents of frame size.
    /// Arguments:
    /// arg1 - Rectangle center X coordinate, percents of frame width.
    /// arg2 - Rectangle center X coordinate, percents of frame height.
    SET_RECT_POSITION_PERCENTS,
    /// Move search window (change position). Arguments:
    /// arg1 - add to X coordinate, pixels. 0 - no change.
    /// arg2 - add to Y coordinate, pixels. 0 - no change.
    MOVE_SEARCH_WINDOW,
    /// Set search window position. Arguments:
    /// arg1 - Search window center X coordinate.
    /// arg2 - Search window center Y coordinate.
    SET_SEARCH_WINDOW_POSITION,
```

```

    /// Set search window position in percents of frame size. Arguments:
    /// arg1 - Search window center X coordinate, percents of frame width.
    /// arg2 - Search window center X coordinate, percents of frame height.
    SET_SEARCH_WINDOW_POSITION_PERCENTS,
    /// Change tracking rectangle size. Arguments:
    /// arg1 - horizontal size add, pixels.
    /// arg2 - vertical size add, pixels.
    CHANGE_RECT_SIZE
};

```

Table 3 - Video tracker commands description. Some commands maybe unsupported by particular video tracker class. Necessary arguments for **executeCommand(...)** and **encodeCommand(...)** methods described.

| Command | Description |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CAPTURE | Object capture. Arguments: arg1 - Capture rectangle center X coordinate. -1 - default coordinate, arg2 - Capture rectangle center Y coordinate. -1 - default coordinate, arg3 - frame ID. -1 - Capture on last frame. |
| CAPTURE_PERCENTS | Object capture command. Arguments: arg1 - Capture rectangle center X coordinate, percents of frame width, arg2 - Capture rectangle center Y coordinate, percents of frame width. |
| RESET | Reset command. No arguments. |
| SET_INERTIAL_MODE | Set INERTIAL mode. No arguments. |
| SET_LOST_MODE | Set LOST mode. No arguments. |
| SET_STATIC_MODE | Set STATIC mode. No arguments. |
| ADJUST_RECT_SIZE | Adjust tracking rectangle size automatically once. No arguments. |
| ADJUST_RECT_POSITION | Adjust tracking rectangle position automatically once. No arguments. |
| MOVE_RECT | Move tracking rectangle (change position). Arguments: arg1 - add to X coordinate, pixels. 0 - no change, arg2 - add to Y coordinate, pixels. 0 - no change. |
| SET_RECT_POSITION | Set tracking rectangle position in FREE mode. Arguments: arg1 - Rectangle center X coordinate, arg2 - Rectangle center Y coordinate. |

| Command | Description |
|-------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SET_RECT_POSITION_PERCENTS | Set tracking rectangle position in FREE mode in percents of frame size. Arguments: arg1 - Rectangle center X coordinate, percents of frame width, arg2 - Rectangle center Y coordinate, percents of frame height. |
| MOVE_SEARCH_WINDOW | Move search window (change position). Arguments: arg1 - add to X coordinate, pixels. 0 - no change, arg2 - add to Y coordinate, pixels. 0 - no change. |
| SET_SEARCH_WINDOW_POSITION | Set search window position. Arguments: arg1 - Search window center X coordinate, arg2 - Search window center Y coordinate. |
| SET_SEARCH_WINDOW_POSITION_PERCENTS | Set search window position in percents of frame size. Arguments: arg1 - Search window center X coordinate, percents of frame width, arg2 - Search window center Y coordinate, percents of frame height. |
| CHANGE_RECT_SIZE | Change tracking rectangle size. Arguments: arg1 - horizontal size add, pixels, arg2 - vertical size add, pixels. |

VTrackerParam enum

VTrackerParam enum describes parameters supported by video tracker. **VTrackerParam** enum declared in **VTracker.h** file. Enum declaration:

```
enum class VTrackerParam
{
    /// width of search window, pixels. Set by user.
    SEARCH_WINDOW_WIDTH = 1,
    /// Height of search window, pixels. Set by user.
    SEARCH_WINDOW_HEIGHT,
    /// Tracking rectangle width, pixels. Set in user or can be changed by
    /// tracking algorithm if rectAutoSize == true.
    RECT_WIDTH,
    /// Tracking rectangle height, pixels. Set in user or can be changed by
    /// tracking algorithm if rectAutoSize == true.
    RECT_HEIGHT,
    /// Option for LOST mode. Parameter that defines the behavior of the
    /// tracking algorithm in LOST mode. Default is 0. Possible values:
    /// 0. In LOST mode, the coordinates of the center of the tracking
    /// rectangle are not updated and remain the same as before entering
    /// LOST mode.
    /// 1. The coordinates of the center of the tracking rectangle are updated
    /// based on the components of the object's speed calculated before
    /// going into LOST mode. If the tracking rectangle "touches" the edge
    /// of the video frame, the coordinate updating for this component
```

```

    /// (horizontal or vertical) will stop.
    /// 2. The coordinates of the center of the tracking rectangle are
    /// updated based on the components of the object's speed calculated
    /// before going into LOST mode. The tracking is reset if the center of
    /// the tracking rectangle touches any of the edges of the video frame.
    LOST_MODE_OPTION,
    /// Size of frame buffer (number of frames to store). Set by user.
    FRAME_BUFFER_SIZE,
    /// Maximum number of frames in LOST mode to auto reset of algorithm. Set
    /// by user.
    MAX_FRAMES_IN_LOST_MODE,
    /// Use tracking rectangle auto size flag: 0 - no use, 1 - use. Set by user.
    RECT_AUTO_SIZE,
    /// Use tracking rectangle auto position: 0 - no use, 1 - use. Set by user.
    RECT_AUTO_POSITION,
    /// Use multiple threads for calculations. 0 - one thread, 1 - multiple. Set
    /// by user.
    MULTIPLE_THREADS,
    /// Number of channels for processing. E.g., number of color channels. Set
    /// by user.
    NUM_CHANNELS,
    /// Tracker type. Depends on implementation. Set by user.
    TYPE,
    /// Custom parameter. Depends on implementation.
    CUSTOM_1,
    /// Custom parameter. Depends on implementation.
    CUSTOM_2,
    /// Custom parameter. Depends on implementation.
    CUSTOM_3
};

```

Table 4 - Video tracker params description. Some params maybe unsupported by particular video tracker.

| Parameter | Access | Description |
|----------------------|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SEARCH_WINDOW_WIDTH | read / write | Width of search window, pixels. Set by user. (see Required operating principles). |
| SEARCH_WINDOW_HEIGHT | read / write | Height of search window, pixels. Set by user. (see Required operating principles). |
| RECT_WIDTH | read / write | Tracking rectangle width, pixels. (see Required operating principles). Set in user or can be changed by tracking algorithm if RECT_AUTO_SIZE == 1. |
| RECT_HEIGHT | read / write | Tracking rectangle height, pixels (see Required operating principles). Set in user or can be changed by tracking algorithm if RECT_AUTO_SIZE == 1. |

| Parameter | Access | Description |
|-------------------------|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LOST_MODE_OPTION | read / write | <p>Option for LOST mode. Parameter that defines the behavior of the tracking algorithm in LOST mode. Default is 0. Possible values:</p> <p>0. In LOST mode, the coordinates of the center of the tracking rectangle are not updated and remain the same as before entering LOST mode.</p> <p>1. The coordinates of the center of the tracking rectangle are updated based on the components of the object's speed calculated before going into LOST mode. If the tracking rectangle "touches" the edge of the video frame, the coordinate updating for this component (horizontal or vertical) will stop.</p> <p>2. The coordinates of the center of the tracking rectangle are updated based on the components of the object's speed calculated before going into LOST mode. The tracking is reset if the center of the tracking rectangle touches any of the edges of the video frame.</p> |
| FRAME_BUFFER_SIZE | read / write | Size of frame buffer (number of frames to store). Set by user. |
| MAX_FRAMES_IN_LOST_MODE | read / write | Maximum number of frames in LOST mode to auto reset of algorithm. Set by user. |
| RECT_AUTO_SIZE | read / write | Use tracking rectangle auto size flag: 0 - no use, 1 - use. Set by user. |
| RECT_AUTO_POSITION | read / write | Use tracking rectangle auto position: 0 - no use, 1 - use. Set by user. |
| MULTIPLE_THREADS | read / write | Use multiple threads for calculations. 0 - one thread, 1 - multiple. Set by user. |
| NUM_CHANNELS | read / write | Number of channels for processing. E.g., number of color channels. Set by user. |
| TYPE | read / write | Tracker type. Depends on implementation. Set by user. |
| CUSTOM_1 | read / write | Custom parameter. Depends on implementation. |
| CUSTOM_2 | read / write | Custom parameter. Depends on implementation. |
| CUSTOM_3 | read / write | Custom parameter. Depends on implementation. |

VTrackerParams class description

VTrackerParams class declaration

VTrackerParams class used for video tracker initialization (**initVTracker(...)** method) or to get all actual params and tracking results (**getParams()** method). Also **VTrackerParams** provide structure to write/read params from JSON files (**JSON_READABLE** macro, see [ConfigReader](#) class description) and provides methods to encode and decode params. Class declaration:

```
class VTrackerParams
{
public:
    /// Tracker mode index: 0 - FREE, 1 - TRACKING, 2 - INERTIAL, 3 - STATIC.
    /// Set by video tracker according to processing results or after command
    /// execution.
    int mode{0};
    /// Tracking rectangle horizontal center position. Calculated by tracking
    /// algorithm.
    int rectX{0};
    /// Tracking rectangle vertical center position. Calculated by tracking
    /// algorithm.
    int rectY{0};
    /// Tracking rectangle width, pixels. Set in user or can be changed by
    /// tracking algorithm if rectAutoSize == true.
    int rectwidth{72};
    /// Tracking rectangle height, pixels. Set in user or can be changed by
    /// tracking algorithm if rectAutoSize == true.
    int rectHeight{72};
    /// Estimated horizontal position of object center, pixels. Calculated by video
    /// tracker.
    int objectX{0};
    /// Estimated vertical position of object center, pixels. Calculated by video
    /// tracker.
    int objectY{0};
    /// Estimated object width, pixels. Calculated by video tracker.
    int objectwidth{72};
    /// Estimated object height, pixels. Calculated by video tracker.
    int objectHeight{72};
    /// Frame counter in LOST mode. After switching in LOST mode the video
    /// tracker start counting from 0. After switching to another mode from
    /// LOST mode the video tracker will reset this counter.
    int lostModeFrameCounter{0};
    /// Counter for processed frames after capture object. After reset tracking
    /// the video tracker will reset counter.
    int frameCounter{0};
    /// Width of processed video frame. Set by video tracker after processing
    /// first video frame.
    int framewidth{0};
    /// Height of processed video frame. Set by video tracker after processing
    /// first video frame.
```

```

int frameHeight{0};
/// Width of search window, pixels. Set by user.
int searchWindowWidth{256};
/// Height of search window, pixels. Set by user.
int searchWindowHeight{256};
/// Horizontal position of search window center. This position will be used
/// for next video frame. Usually it coincides with data tracking rectangle
/// center but can be set by user to move search window for new video frame.
int searchWindowX{0};
/// Vertical position of search window center. This position will be used
/// for next video frame. Usually it coincides with data tracking rectangle
/// center but can be set by user to move search window for new video frame.
int searchWindowY{0};
/// Option for LOST mode. Parameter that defines the behavior of the
/// tracking algorithm in LOST mode. Default is 0. Possible values:
/// 0. In LOST mode, the coordinates of the center of the tracking
/// rectangle are not updated and remain the same as before entering
/// LOST mode.
/// 1. The coordinates of the center of the tracking rectangle are updated
/// based on the components of the object's speed calculated before
/// going into LOST mode. If the tracking rectangle "touches" the edge
/// of the video frame, the coordinate updating for this component
/// (horizontal or vertical) will stop.
/// 2. The coordinates of the center of the tracking rectangle are
/// updated based on the components of the object's speed calculated
/// before going into LOST mode. The tracking is reset if the center of
/// the tracking rectangle touches any of the edges of the video frame.
int lostModeOption{0};
/// Size of frame buffer (number of frames to store). Set by user.
int frameBufferSize{128};
/// Maximum number of frames in LOST mode to auto reset of algorithm. Set
/// by user.
int maxFramesInLostMode{128};
/// ID of last processed frame in frame buffer. Set by video tracker.
int processedFrameId{0};
/// ID of last added frame to frame buffer. Set by video tracker.
int frameId{0};
/// Horizontal velocity of object on video frames (pixel/frame). Calculated
/// by video tracker.
float velX{0.0f};
/// Vertical velocity of object on video frames (pixel/frame). Calculated
/// by video tracker.
float velY{0.0f};
/// Estimated probability of object detection. Calculated by video tracker.
float detectionProbability{0.0f};
/// Use tracking rectangle auto size flag: false - no use, true - use. Set
/// by user.
bool rectAutoSize{false};
/// Use tracking rectangle auto position: false - no use, true - use. Set
/// by user.
bool rectAutoPosition{false};
/// Use multiple threads for calculations. Set by user.
bool multipleThreads{false};
/// Number of channels for processing. E.g., number of color channels. Set
/// by user.

```

```

int numChannels{3};
/// Tracker type. Depends on implementation. Set by user.
int type{0};
/// Processing time for last frame, mks. Calculated by video tracker.
int processingTimeMks{0};
/// Custom parameter. Depends on implementation.
float custom1{0.0f};
/// Custom parameter. Depends on implementation.
float custom2{0.0f};
/// Custom parameter. Depends on implementation.
float custom3{0.0f};

JSON_READABLE(VTrackerParams, rectwidth, rectHeight, searchwindowwidth,
              searchwindowHeight, lostModeOption, frameBufferSize,
              maxFramesInLostMode, rectAutoSize, rectAutoPosition,
              multipleThreads, numChannels, type, custom1, custom2,
              custom3);

/**
 * @brief operator =
 * @param src Source object.
 * @return VTrackerParams object.
 */
VTrackerParams& operator= (const VTrackerParams& src);

/**
 * @brief Encode params.
 * @param data Pointer to data buffer.
 * @param size Size of data.
 * @param mask Pointer to parameters mask.
 */
void encode(uint8_t* data, int& size, VTrackerParamsMask* mask = nullptr);

/**
 * @brief Decode params.
 * @param data Pointer to data.
 * @return TRUE is params decoded or FALSE if not.
 */
bool decode(uint8_t* data);
};

```

Table 5 - VTrackerParams class fields description.

| Field | Type | Description |
|-----------|------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| mode | int | Tracker mode index: 0 - FREE, 1 - TRACKING, 2 - INERTIAL, 3 - STATIC. Set by video tracker according to processing results or after command execution. |
| rectX | int | Tracking rectangle horizontal center position, pixels. Calculated by tracking algorithm. |
| rectY | int | Tracking rectangle vertical center position, pixels. Calculated by tracking algorithm. |
| rectWidth | int | Tracking rectangle width, pixels. Set in user or can be changed by tracking algorithm if rectAutoSize == true. |

| Field | Type | Description |
|----------------------|------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| rectHeight | int | Tracking rectangle height, pixels. Set in user or can be changed by tracking algorithm if rectAutoSize == true. |
| objectX | int | Estimated horizontal position of object center, pixels. Calculated by video tracker. |
| objectY | int | Estimated vertical position of object center, pixels. Calculated by video tracker. |
| objectWidth | int | Estimated object width, pixels. Calculated by video tracker. |
| objectHeight | int | Estimated object height, pixels. Calculated by video tracker. |
| lostModeFrameCounter | int | Frame counter in LOST mode. After switching in LOST mode the video tracker start counting from 0. After switching to another mode from LOST mode the video tracker will reset this counter. |
| frameCounter | int | Counter for processed frames after capture object. After reset tracking the video tracker will reset counter. |
| frameWidth | int | Width of processed video frame. Set by video tracker after processing first video frame. |
| frameHeight | int | Height of processed video frame. Set by video tracker after processing first video frame. |
| searchWindowWidth | int | Width of search window, pixels. Set by user. |
| searchWindowHeight | int | Height of search window, pixels. Set by user. |
| searchWindowX | int | Horizontal position of search window center. This position will be used for next video frame. Usually it coincides with data tracking rectangle center but can be set by user to move search window for new video frame. |
| searchWindowY | int | Vertical position of search window center. This position will be used for next video frame. Usually it coincides with data tracking rectangle center but can be set by user to move search window for new video frame. |

| Field | Type | Description |
|----------------------|-------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| lostModeOption | int | <p>Option for LOST mode. Parameter that defines the behavior of the tracking algorithm in LOST mode. Default is 0. Possible values:</p> <p>0. In LOST mode, the coordinates of the center of the tracking rectangle are not updated and remain the same as before entering LOST mode.</p> <p>1. The coordinates of the center of the tracking rectangle are updated based on the components of the object's speed calculated before going into LOST mode. If the tracking rectangle "touches" the edge of the video frame, the coordinate updating for this component (horizontal or vertical) will stop.</p> <p>2. The coordinates of the center of the tracking rectangle are updated based on the components of the object's speed calculated before going into LOST mode. The tracking is reset if the center of the tracking rectangle touches any of the edges of the video frame.</p> |
| frameBufferSize | int | Size of frame buffer (number of frames to store). Set by user. |
| maxFramesInLostMode | int | Maximum number of frames in LOST mode to auto reset of algorithm. Set by user. |
| processedFrameId | int | ID of last processed frame in frame buffer. Set by video tracker. |
| frameId | int | ID of last added frame to frame buffer. Set by video tracker. |
| velX | float | Horizontal velocity of object on video frames (pixel/frame). Calculated by video tracker. |
| velY | float | Vertical velocity of object on video frames (pixel/frame). Calculated by video tracker. |
| detectionProbability | float | Estimated probability of object detection. Calculated by video tracker. |
| rectAutoSize | bool | Use tracking rectangle auto size flag: false - no use, true - use. Set by user. |
| rectAutoPosition | bool | Use tracking rectangle auto position: false - no use, true - use. Set by user. |
| multipleThreads | bool | Use multiple threads for calculations. Set by user. |
| numChannels | int | Number of channels for processing. E.g., number of color channels. Set by user. |
| type | int | Tracker type. Depends on implementation. Set by user. |
| processingTimeMks | int | Processing time for last frame, mks. Calculated by video tracker. |
| custom1 | float | Custom parameter. Depends on implementation. |
| custom2 | float | Custom parameter. Depends on implementation. |

| Field | Type | Description |
|---------|-------|----------------------------------------------|
| custom3 | float | Custom parameter. Depends on implementation. |

Serialize video tracker params

VTrackerParams class provides method **encode(...)** to serialize video tracker params (fields of VTrackerParams class, see Table 5). Serialization of params necessary in case when you need to send params via communication channels. Method provides options to exclude particular parameters from serialization. To do this method inserts binary mask (5 bytes) where each bit represents particular parameter and **decode(...)** method recognizes it. Method doesn't encode initString. Method declaration:

```
void encode(uint8_t* data, int& size, VTrackerParamsMask* mask = nullptr);
```

| Parameter | Value |
|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| data | Pointer to data buffer. Buffer size should be at least 43 bytes. |
| size | Size of encoded data. |
| mask | Parameters mask - pointer to VrackerParamsMask structure. VTrackerParamsMask (declared in VTracker.h file) determines flags for each field (parameter) declared in VTrackerParams class. If the user wants to exclude any parameters from serialization, he can put a pointer to the mask. If the user wants to exclude a particular parameter from serialization, he should set the corresponding flag in the VTrackerParamsMask structure. |

VTrackerParamsMask structure declaration:

```
typedef struct VTrackerParamsMask
{
    bool mode{true};
    bool rectX{true};
    bool rectY{true};
    bool rectwidth{true};
    bool rectHeight{true};
    bool objectX{true};
    bool objectY{true};
    bool objectwidth{true};
    bool objectHeight{true};
    bool lostModeFrameCounter{true};
    bool frameCounter{true};
    bool framewidth{true};
    bool frameHeight{true};
    bool searchwindowwidth{true};
    bool searchwindowHeight{true};
    bool searchwindowX{true};
    bool searchwindowY{true};
    bool lostModeOption{true};
    bool frameBufferSize{true};
    bool maxFramesInLostMode{true};
}
```

```

    bool processedFrameId{true};
    bool frameId{true};
    bool velX{true};
    bool velY{true};
    bool detectionProbability{true};
    bool rectAutoSize{true};
    bool rectAutoPosition{true};
    bool multipleThreads{true};
    bool numChannels{true};
    bool type{true};
    bool processingTimeMks{true};
    bool custom1{true};
    bool custom2{true};
    bool custom3{true};
} VTrackerParamsMask;

```

Example without parameters mask:

```

// Prepare random params.
VTrackerParams in;
in.mode = rand() % 255;
in.rectX = rand() % 255;
in.rectY = rand() % 255;

// Encode data.
uint8_t data[1024];
int size = 0;
in.encode(data, size);
cout << "Encoded data size: " << size << " bytes" << endl;

```

Example with parameters mask:

```

// Prepare random params.
VTrackerParams in;
in.mode = rand() % 255;
in.rectX = rand() % 255;
in.rectY = rand() % 255;

// Prepare mask.
VTrackerParamsMask mask;
mask.mode = true;
mask.rectX = false;
mask.rectY = true;

// Encode data.
uint8_t data[1024];
int size = 0;
in.encode(data, size, &mask);
cout << "Encoded data size: " << size << " bytes" << endl;

```


Deserialize video tracker params

VTrackerParams class provides method **decode(...)** to deserialize params (fields of VTrackerParams class, see Table 5). Deserialization of params necessary in case when you need to receive params via communication channels. Method automatically recognizes which parameters were serialized by **encode(...)** method. Method declaration:

```
bool decode(uint8_t* data);
```

| Parameter | Value |
|-----------|--------------------------------|
| data | Pointer to encode data buffer. |

Returns: TRUE if data decoded (deserialized) or FALSE if not.

Example:

```
// Prepare random params.
VTrackerParams in;
in.mode = rand() % 255;
in.rectX = rand() % 255;
in.rectY = rand() % 255;

// Encode data.
uint8_t data[1024];
int size = 0;
in.encode(data, size);
cout << "Encoded data size: " << size << " bytes" << endl;

// Decode data.
VTrackerParams out;
if (!out.decode(data))
{
    cout << "Can't decode data" << endl;
    return false;
}
```

Read params from JSON file and write to JSON file

VTracker library depends on **ConfigReader** library which provides method to read params from JSON file and to write params to JSON file. Example of writing and reading params to JSON file:

```
// Prepare random params.
VTrackerParams in;
in.mode = rand() % 255;
in.rectX = rand() % 255;
in.rectY = rand() % 255;

// Write params to file.
cr::utils::ConfigReader inConfig;
inConfig.set(in, "VTrackerParams");
```

```

inConfig.writeToFile("VTrackerParams.json");

// Read params from file.
cr::utils::ConfigReader outConfig;
if(!outConfig.readFromFile("VTrackerParams.json"))
{
    cout << "Can't open config file" << endl;
    return false;
}

// Obtain params from config reader.
VTrackerParams out;
if(!outConfig.get(out, "VTrackerParams"))
{
    cout << "Can't read params from file" << endl;
    return false;
}

```

VTrackerParams.json will look like:

```

{
  "VTrackerParams": {
    "custom1": 155.0,
    "custom2": 239.0,
    "custom3": 79.0,
    "frameBufferSize": 130,
    "lostModeOption": 65,
    "maxFramesInLostMode": 111,
    "multipleThreads": true,
    "numChannels": 47,
    "rectAutoPosition": true,
    "rectAutoSize": true,
    "rectHeight": 18,
    "rectWidth": 2,
    "searchWindowHeight": 19,
    "searchWindowWidth": 195,
    "type": 213
  }
}

```

Build and connect to your project

Typical commands to build **VTracker** library:

```

git clone https://github.com/ConstantRobotics-Ltd/VTracker.git
cd VTracker
git submodule update --init --recursive
mkdir build
cd build
cmake ..
make

```

If you want connect **VTracker** library to your CMake project as source code you can make follow. For example, if your repository has structure:

```
CMakeLists.txt
src
  CMakeList.txt
  yourLib.h
  yourLib.cpp
```

You can add repository **VTracker** as submodule by commands:

```
cd <your repository folder>
git submodule add https://github.com/ConstantRobotics-Ltd/VTracker.git 3rdparty/VTracker
git submodule update --init --recursive
```

In you repository folder will be created folder **3rdparty/VTracker** which contains files of **VTracker** repository with subrepositories **Frame** and **ConfigReader**. New structure of your repository:

```
CMakeLists.txt
src
  CMakeList.txt
  yourLib.h
  yourLib.cpp
3rdparty
  VTracker
```

Create CMakeLists.txt file in **3rdparty** folder. CMakeLists.txt should contain:

```
cmake_minimum_required(VERSION 3.13)

#####
## 3RD-PARTY
## dependencies for the project
#####
project(3rdparty LANGUAGES CXX)

#####
## SETTINGS
## basic 3rd-party settings before use
#####
# To inherit the top-level architecture when the project is used as a submodule.
SET(PARENT ${PARENT}_YOUR_PROJECT_3RDPARTY)
# Disable self-overwriting of parameters inside included subdirectories.
SET(${PARENT}_SUBMODULE_CACHE_OVERWRITE OFF CACHE BOOL "" FORCE)

#####
## CONFIGURATION
## 3rd-party submodules configuration
#####
SET(${PARENT}_SUBMODULE_VTRACKER ON CACHE BOOL "" FORCE)
if (${PARENT}_SUBMODULE_VTRACKER)
  SET(${PARENT}_VTRACKER ON CACHE BOOL "" FORCE)
  SET(${PARENT}_VTRACKER_TEST OFF CACHE BOOL "" FORCE)
```

```
endif()

#####
## INCLUDING SUBDIRECTORIES
## Adding subdirectories according to the 3rd-party configuration
#####
if (${PARENT}_SUBMODULE_VTRACKER)
    add_subdirectory(VTracker)
endif()
```

File **3rdparty/CMakeLists.txt** adds folder **VTracker** to your project and excludes test application (VTracker class test applications) from compiling. Your repository new structure will be:

```
CMakeLists.txt
src
    CMakeList.txt
    yourLib.h
    yourLib.cpp
3rdparty
    CMakeLists.txt
    VTracker
```

Next you need include folder 3rdparty in main **CMakeLists.txt** file of your repository. Add string at the end of your main **CMakeLists.txt**:

```
add_subdirectory(3rdparty)
```

Next you have to include VTracker library in your **src/CMakeLists.txt** file:

```
target_link_libraries(${PROJECT_NAME} VTracker)
```

Done!