

<b>DTC</b>	<b>C1242 / 42</b>	<b>IG2 Power Source Circuit</b>
------------	-------------------	---------------------------------


## CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1242 / 42	With the vehicle running, open circuit in IG2 is detected for more than 7 sec.	<ul style="list-style-type: none"> <li>• Battery</li> <li>• IC regulator</li> <li>• Power source circuit</li> </ul>

Fail safe function:


If trouble occurs in the power source circuit, the ECU cuts off current to the ABS solenoid relay and prohibits ABS & BA & TRC & VSC controls and the brake system becomes normal.

## WIRING DIAGRAM

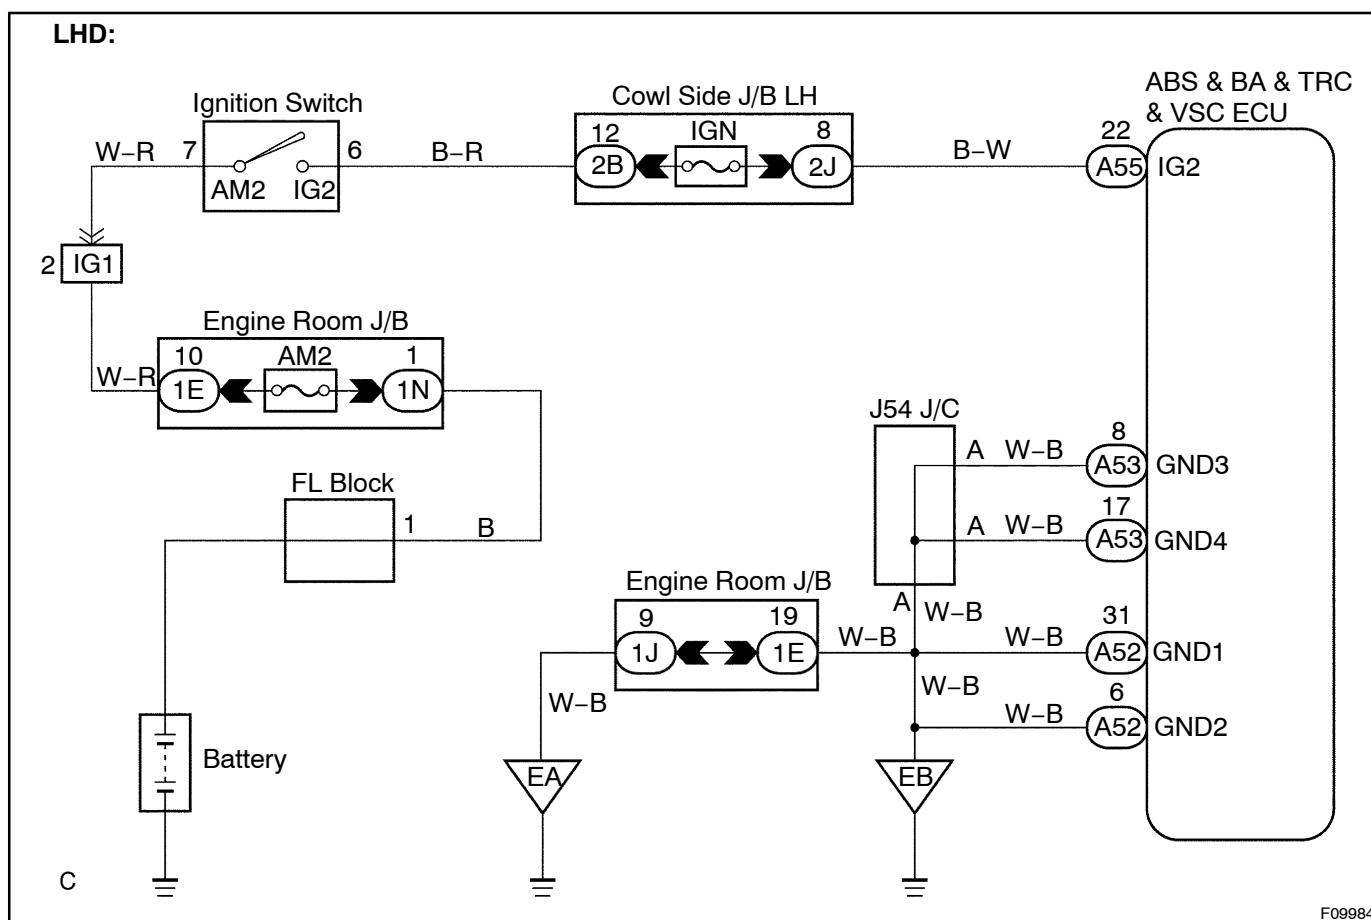

F09984

RHD:

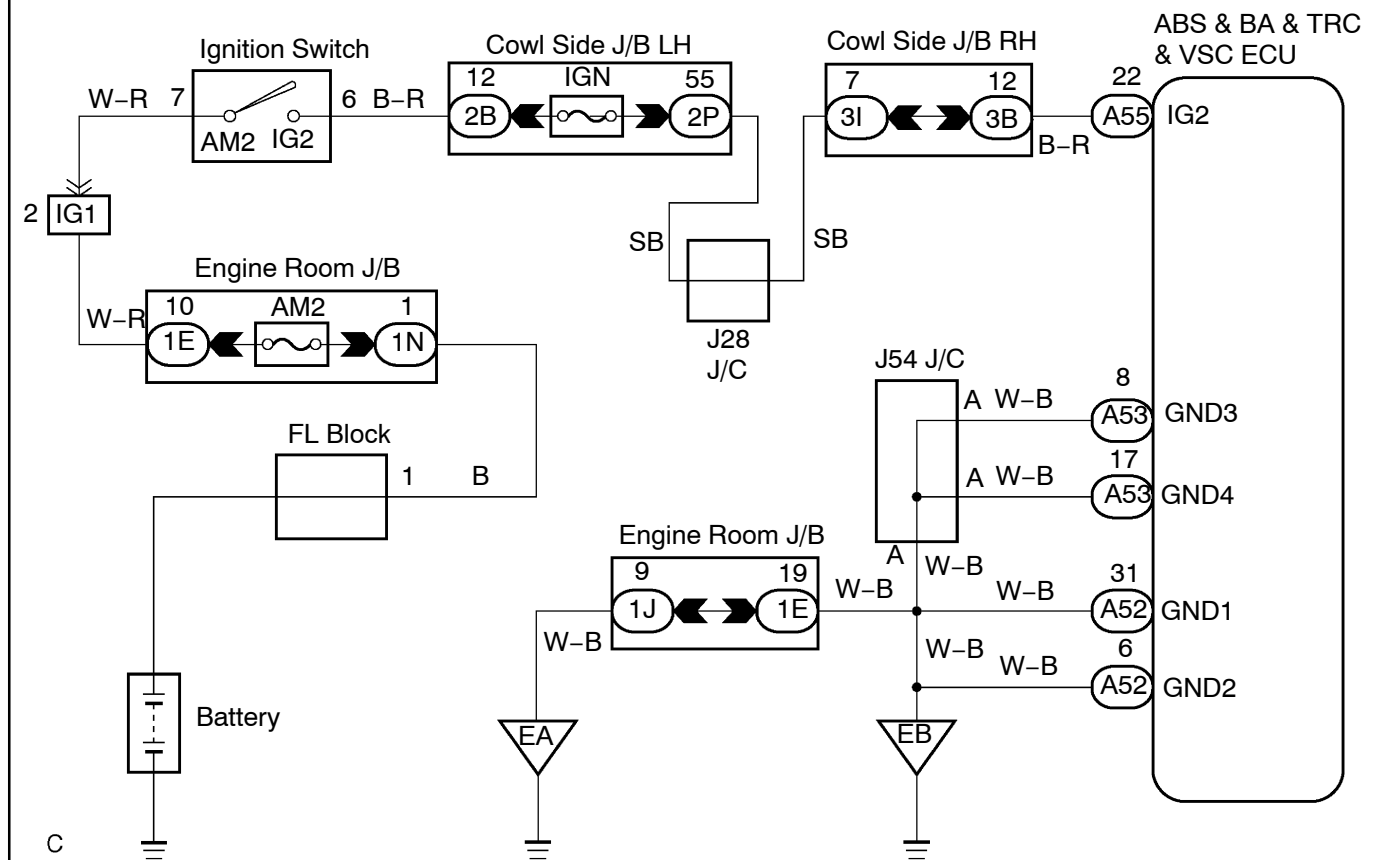

F10013

## INSPECTION PROCEDURE

### 1 Check battery voltage.

**OK:**

Voltage: 10 – 14 V

**NG**

Check and repair the charging system.

**OK**

### 2 Check voltage of the ECU IG power source.

**In case of using the hand-held tester:**

**PREPARATION:**

- (a) Connect the hand-held tester to the DLC3.
- (b) Turn the ignition switch ON and push the hand-held tester main switch ON.
- (c) Select the DATALIST mode on the hand-held tester.


**CHECK:**

Check the voltage condition output from the ECU displayed on the hand-held tester.

**OK:**

"Normal" is displayed.

**In case of not using the hand-held tester:**

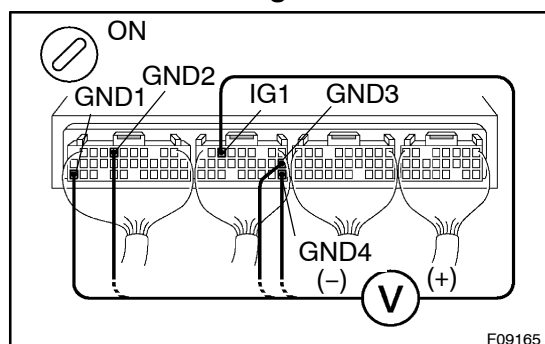

**PREPARATION:**

Remove ABS & BA & TRC & VSC ECU with connectors still connected.

**CHECK:**

- (a) Turn the ignition switch ON.
- (b) Measure voltage between terminals IG2 and GND of ABS & BA & TRC & VSC ECU connector.

**OK:**


Voltage: 10 – 14 V

**OK**

Turn ignition switch OFF, check and replace ABS & BA & TRC & VSC ECU.

**NG**

**3** Check continuity between terminal GND of ABS & BA & TRC & VSC ECU connector and body ground.

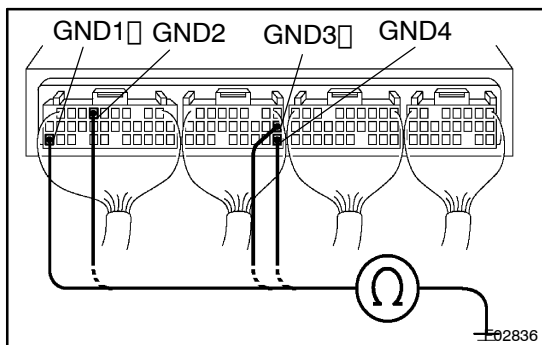**CHECK:**

Measure resistance between terminal GND of ABS & BA & TRC & VSC ECU connector and body ground.

**OK:**

Resistance: 1 Ω or less

NG

Repair or replace harness or connector.

OK

Check for open circuit in harness and connector between ABS & BA & TRC & VSC ECU and battery (See page IN-35).