

## Door Key Lock and Unlock Switch Circuit (Lock Side)


### CIRCUIT DESCRIPTION

Refer to [page DI-609](#).

Transistor inside the wireless door lock ECU coming ON causes the theft deterrent ECU to output a signal to lock all the doors.


### WIRING DIAGRAM

LHD Models:

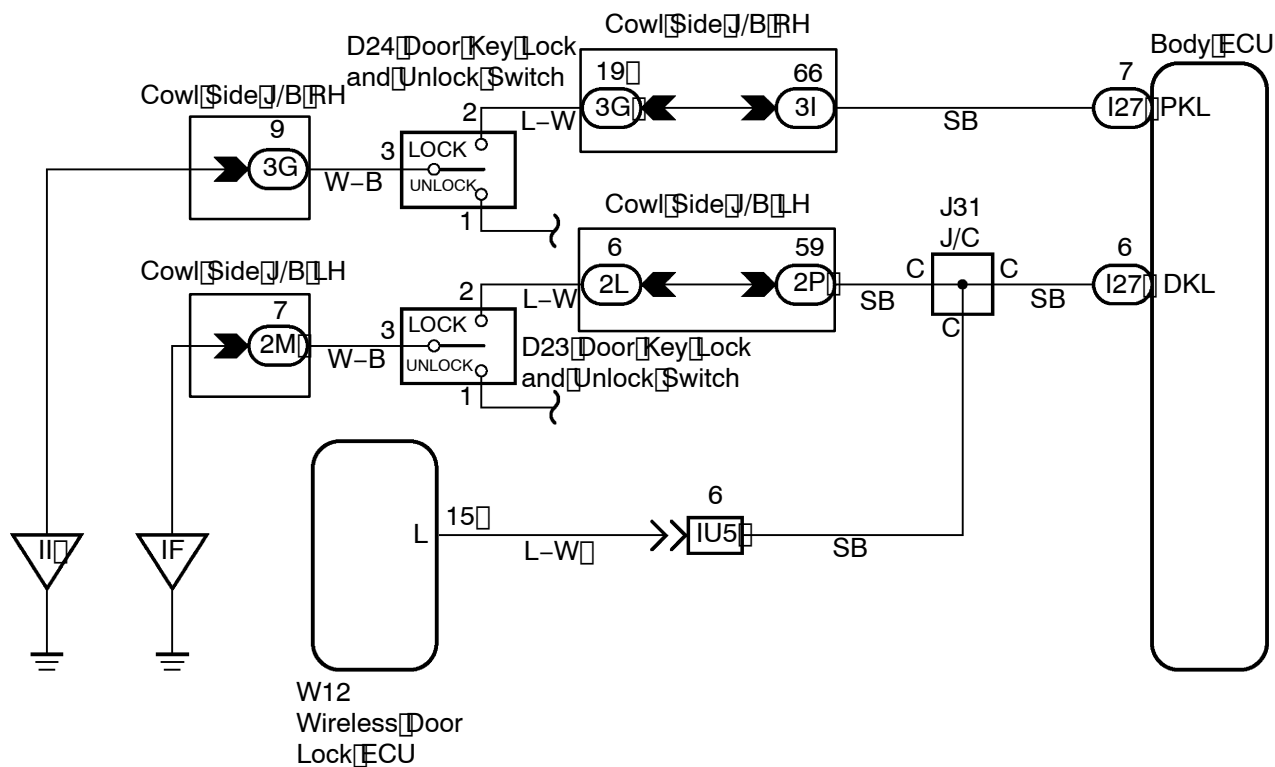

106292


## RHD Models:

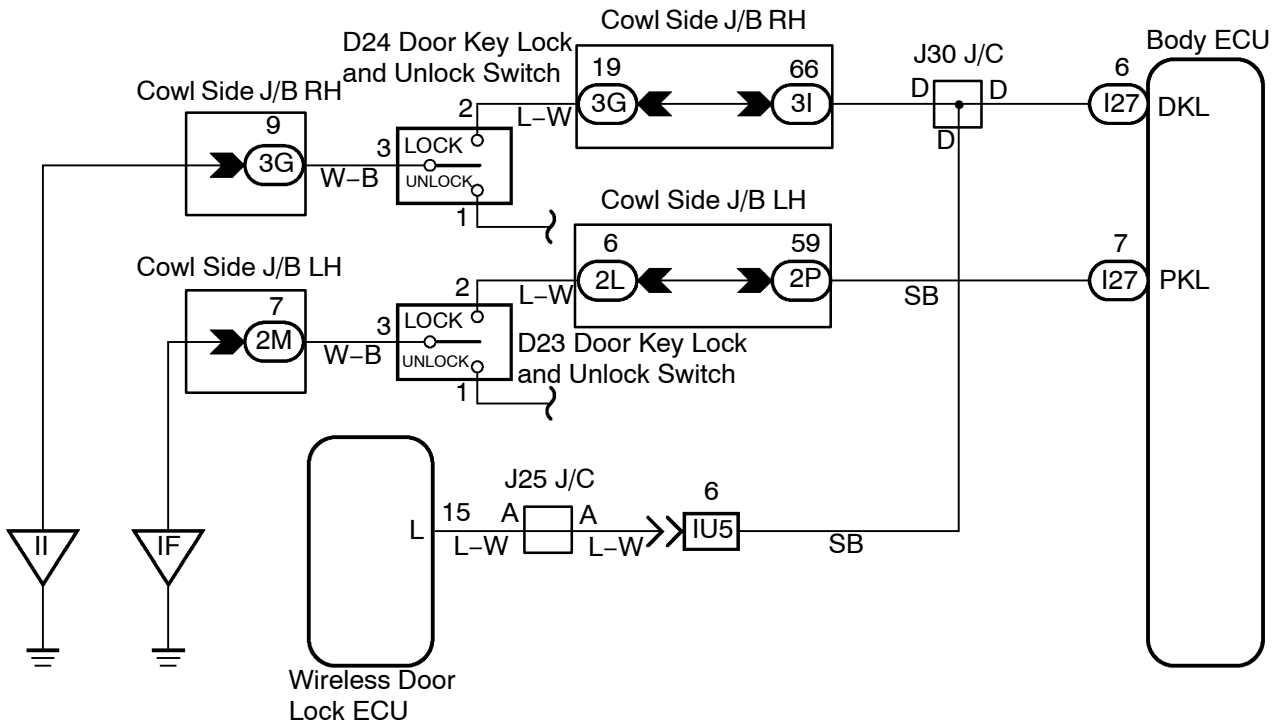

I09091

## INSPECTION PROCEDURE

- 1 Check voltage between terminal L of wireless door lock ECU connector and body ground.

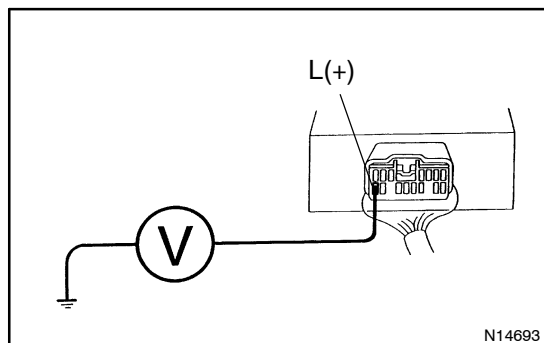**PREPARATION:**

Remove the wireless door lock ECU from instrument panel brace.

**CHECK:**

Measure voltage between terminal L of wireless door lock ECU connector and body ground.

**OK:**

**Voltage 10 – 14 V**

OK

Proceed to next circuit inspection shown on problem symptom table (See page DI-600).

NG

Check and repair harness and connector between wireless door lock ECU and door key lock and unlock switch.