

## IGNITION TIMING INSPECTION

### 1. WARM UP ENGINE

Allow the engine to warm up to normal operating temperature.

### 2. CONNECT TIMING LIGHT TO ENGINE



Connect the tester probe of a timing light to the No. 1 high-tension cord for No. 4 cylinder.

### 3. CHECK IDLE SPEED

(See page EM-4)

### 4. INSPECT IGNITION TIMING

- (a) Using SST, connect terminals TC and CG of the DLC1.  
SST 09843-18020

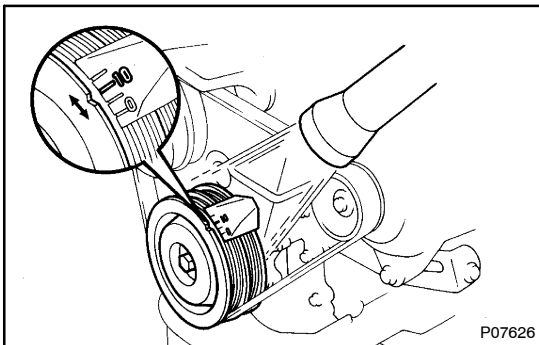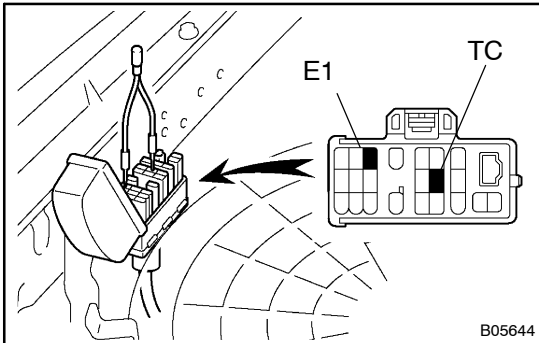

- (b) Using a timing light, check the ignition timing.

**Ignition timing:**

**3° BTDC @ Idle**

**(Transmission in neutral position)**

- (c) Remove the SST from the check connector.

SST 09843-18020

### 5. FURTHER CHECK IGNITION TIMING

**Ignition timing:**

**0 - 13° BTDC @ Idle**

**(Transmission in neutral position)**

**HINT:**

The timing mark moves in a range between 20° and 46°.

### 6. DISCONNECT TIMING LIGHT FROM ENGINE