


## ACC Power Source Circuit

### CIRCUIT DESCRIPTION

This is the power source for A/C amplifier and servomotors, etc.


### WIRING DIAGRAM

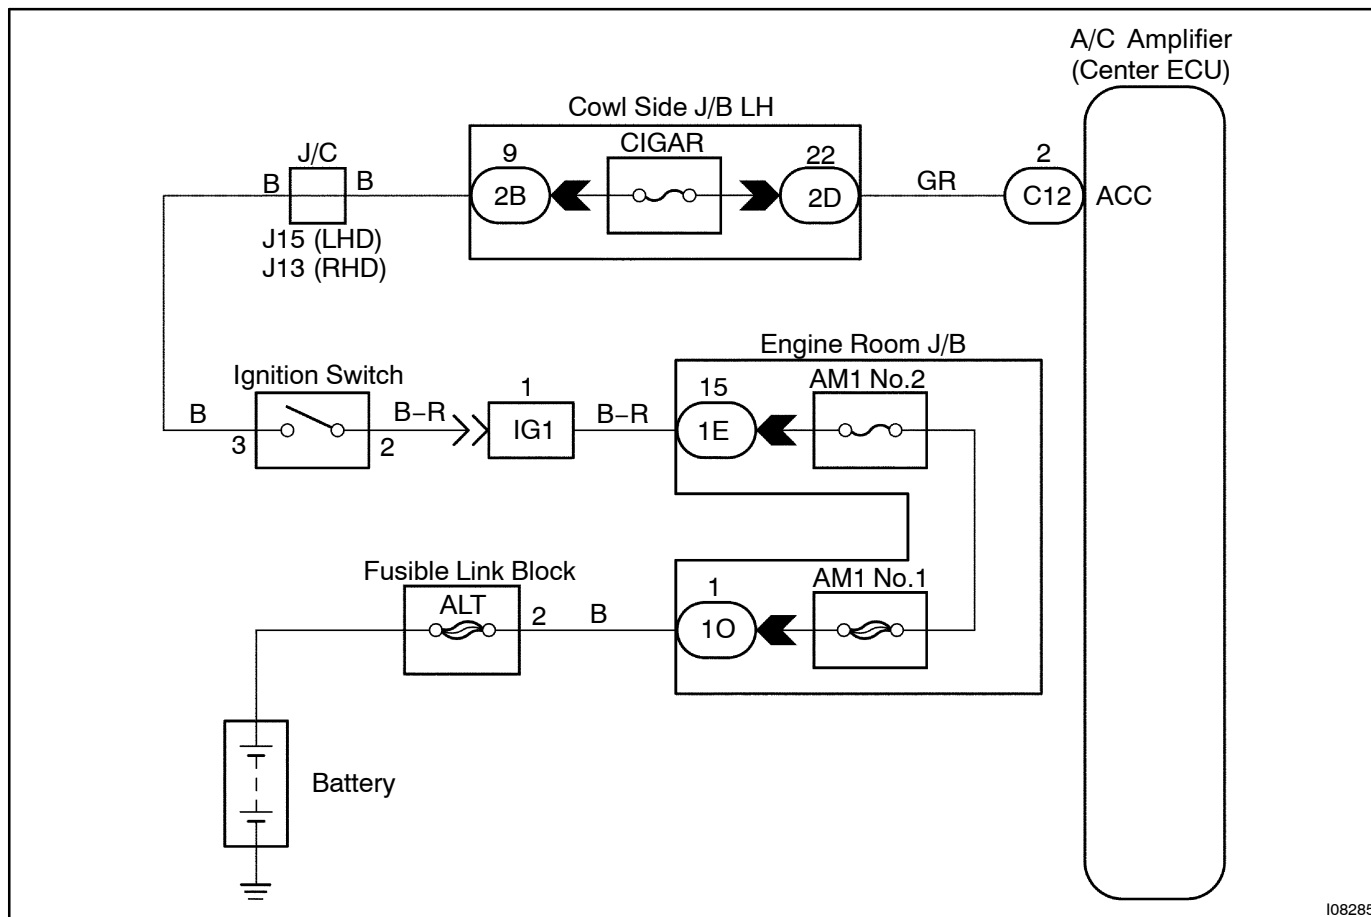

108285

# INSPECTION PROCEDURE


1	Check voltage between terminals ACC and GND of A/C amplifier connector.
---	---

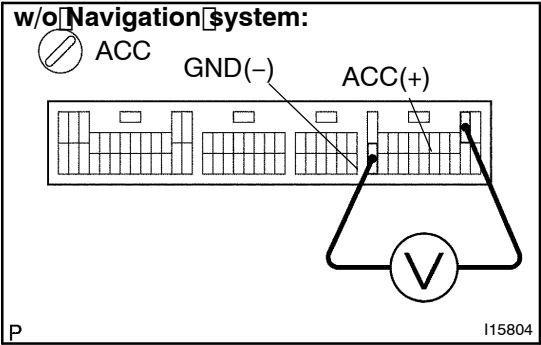

**PREPARATION:**  
 Remove A/C amplifier with connectors still connected.


**CHECK:**  
 (a) Turn ignition switch ON.  
 (b) Measure voltage between terminals ACC and GND of A/C amplifier.

**OK:**  
 Voltage: Battery positive voltage

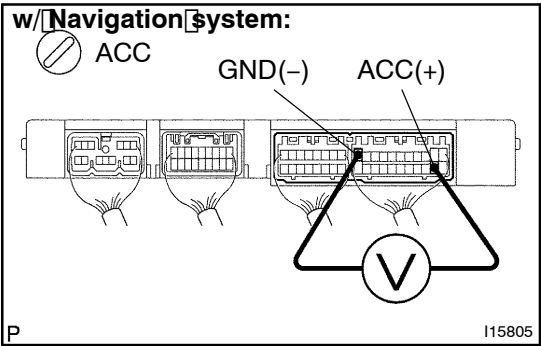

**OK:** Proceed to next circuit inspection shown on problem symptoms table (See page DI-130).


**NG**

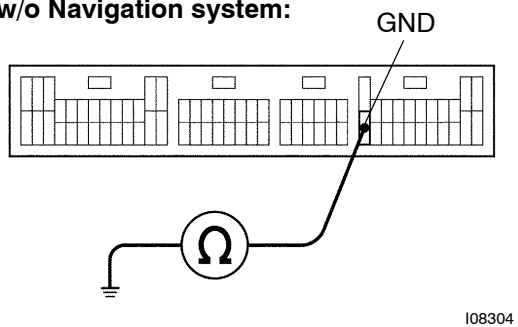**2 Check continuity between terminal GND of A/C amplifier and body ground.****w/o Navigation system:****CHECK:**

Measure resistance between terminal GND of A/C amplifier and body ground.


**OK:**

**Resistance : 0 Ω (continuity)**

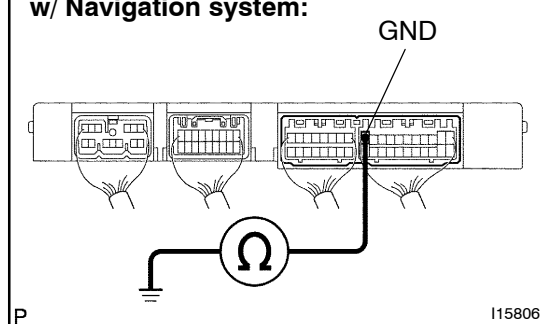**NG****Repair or replace harness or connector.****w/ Navigation system:****OK**

**3 Check IGN fuse.**

Cowl Side J/B

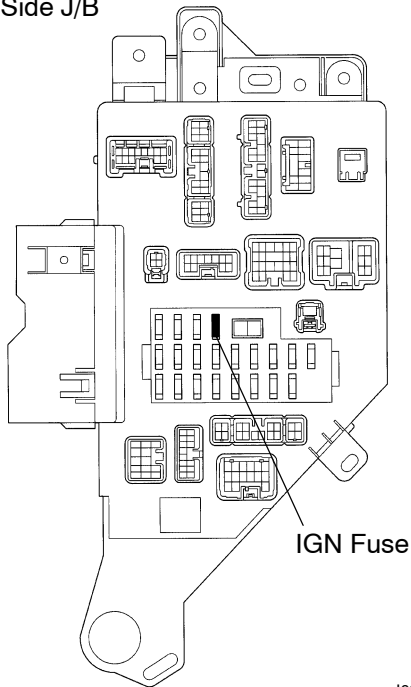**PREPARATION:**

Remove IGN fuse from cowl side J/B.

**CHECK:**

Check continuity of IGN fuse.

**OK:****Continuity****NG**

**Check for short in all the harness and components connected to the IGN fuse (See attached wiring diagram).**

**OK**

**Check and repair harness and connector between A/C amplifier.**