
RYLR993 AT COMMAND SET

Contents

1.	General information	1
2.	Overview	1
3.	AT commands	2
3.1	AT_RX_ERROR	3
3.2	AT command overview	3
3.3	Event table	5
3.4	General commands	5
3.4.1	AT	5
3.4.2	AT?	6
3.4.3	ATZ - MCU reset	6
3.4.4	AT+VL - Verbose level	7
3.4.5	AT+LTIME - Local time in UTC format	7
3.4.6	AT+OPMODE – Set operating mode	8
3.5	Keys, IDs and EUIs management	9
3.5.1	AT+APPEUI - Application identifier	9
3.5.2	AT+NWKKEY - Network root key	9
3.5.3	AT+APPKEY - Application root key	10
3.5.4	AT+APPSKEY - Application session key	11
3.5.5	AT+NWKSKEY - Network session key	12
3.5.6	AT+DADDR - Device address	12
3.5.7	AT+DEUI - Device EUI	13
3.5.8	AT+NWKID - Network ID	13
3.6	Join and send data on LoRa network	14
3.6.1	AT+JOIN - Join LoRa network	14
3.6.2	AT+LINKC - Link check request	14
3.6.3	AT+SEND - Send data to LoRa network	15
3.7	LoRa network management	15
3.7.1	AT+VER - Firmware version	15
3.7.2	AT+ADR - Adaptive data rate functionality	16
3.7.3	AT+DR - Data rate	16
3.7.4	AT+BAND - Active region	17
3.7.5	AT+CLASS - LoRa class	18
3.7.6	AT+DCS - Duty cycle settings	18
3.7.7	AT+JN1DL - Join delay on Rx window 1	19
3.7.8	AT+JN2DL - Join delay on Rx window 2	19
3.7.9	AT+RX1DL - Delay of the Rx window 1	20
3.7.10	AT+RX2DL - Delay of the Rx window 2	20
3.7.11	AT+RX2DR - Data rate of the Rx window 2	21

3.7.12	AT+RX2FQ - Frequency of the Rx window 2.....	21
3.7.13	AT+TXP - Transmit power.....	22
3.7.14	AT+PGSLOT - Ping slot.....	22
3.8	Radio test commands.....	23
3.8.1	AT+TTONE - RF tone test.....	23
3.8.2	AT+TRSSI - RF RSSI tone test.....	23
3.8.3	AT+TCONF - LoRa RF test configuration	23
3.8.4	AT+TTX - Packets to be sent for PER RF TX test	26
3.8.5	AT+TRX - Packets to be received for PER RF RX test	27
3.8.6	AT+TTH - RF Tx hopping test.....	28
3.8.7	AT+CERTIF - Module in LoRaWAN certification with join mode.....	29
3.8.8	AT+TOFF - RF test	29
3.9	Information.....	30
3.9.1	AT+BAT - Battery level.....	30
3.9.2	AT+TEMP – Temperature	30
4.	Examples.....	31
4.1	Join and send in unconfirmed mode.....	31
4.2	Join and send in confirmed mode	31
4.3	Rx received data	31
4.4	Class B enable request	32
5.	Proprietary mode.....	33
5.1	Proprietary mode network structure.....	33
5.2	THE SEQUENCE OF USING AT COMMAND	34
5.3	Proprietary mode AT Commands	34
5.3.1	AT	34
5.3.2	Software RESET	34
5.3.3	AT+BAND– Set the RF Frequency	35
5.3.4	AT+PARAMETER – Set the RF parameter	36
5.3.5	AT+ADDRESS – Set the ADDRESS ID of module LoRa®	37
5.3.6	AT+CPIN – Set the domain password	37
5.3.7	AT+CRFOP – Set the RF output power.....	38
5.3.8	AT+SEND – Send data to the appointed address by Command Mode.....	38
5.3.9	+RCV – Show the received data actively	39
5.3.10	AT+UID – To inquire module ID. 12BYTES.....	39
5.3.11	AT+VER – To inquire the firmware version.....	40
5.3.12	AT+FACTORY – Set all current parameters to manufacturer defaults.....	40
5.3.13	Other Message.....	40
5.3.14	Error result code.....	40

List of tables

Table 1. Acronyms1

Table 2. AT commands3

Table 3. Event table5

1. General information

The document applies to the REYAX RYLR993 module that are LoRa SOC core-based devices.
It compatible with LoRaWAN® 1.0.3 Specification.

Table 1. Acronyms

Acronym	Definition
ABP	Activation by personalization
ETSI	European telecommunications standards institute
LoRa	Long range radio technology
LoRaWAN	LoRa wide-area network
OTAA	Over-the-air activation
RF	Radio frequency
RSSI	Received signal strength indicator
SNR	Signal-to-noise ratio

2. Overview

The following sections contain the interface description, the AT commands definition, and the description of some use cases and of the embedded software.

3. AT commands

The AT command set is a standard developed by REYAX to control module. The command set consists of a series of short text strings for performing operations such as joining, dataexchange and parameters setting.

The AT commands are used to drive the LoRa module and to send data. The ATcommands are sent through the UART.

- Baud rate: 9600
- Data: 8 bits
- Parity: none
- Stop: 1 bit
- Flow control: none

All commands are of the form AT+XXX, with XXX denoting the command. The following command behaviors are available:

- AT+XXX? provides a short help of the given command (such as AT+DEUI?).
- AT+XXX is used to run a command (such as AT+JOIN).
- AT+XXX=? is used to get the value of a given command (such as AT+CFS=?).
- AT+XXX=<value> is used to provide a value to a command (such as AT+SEND=2:Hello).

Output of the commands is provided on the UART. The output format is typically:

```
<value><CR><LF>
<CR><LF><Status><CR><LF>
```

Considering:

- `<value><CR><LF>` is returned when `help AT+XXX?` and `get AT+XXX=?` commands are run.
- `<CR>` and `<LF>` stands for the carriage return and line feed.
- When no value is returned, then `<value><CR><LF>` is not returned at all.
- Every command, except `ATZ` (MCU reset), returns a status string, that is preceded and followed by `<CR><LF>`. Possible status are:
 - `OK`: command run correctly without error.
 - `AT_ERROR`: generic error
 - `AT_PARAM_ERROR`: parameter of the command is wrong.
 - `AT_BUSY_ERROR`: LoRa network is busy, so the command could not complete.
 - `AT_TEST_PARAM_OVERFLOW`: parameter is too long.
 - `AT_NO_NETWORK_JOINED`: LoRa network is not joined.
 - `AT_RX_ERROR`: error detection during the reception of the command

More details on each command description and examples are given in the next sections. Each command preceded by `#` is provided by the host to the module, then the return of the module is printed.

3.1 AT_RX_ERROR

In case of `AT_RX_ERROR`, the command is corrupted when received in `AT_Slave`. Hence the command is not run. However, in case of long commands, some spurious characters can still be in the queue, ready to be processed as a command. So, in case the user receives an `AT_RX_ERROR`, the user must first send `<CR><LF>` to purge the queue, and then send back the same command so that it is processed.

Example

```
# AT+APPKEY=2b:7e:15:16:28:ae:d2:a6:ab:f7:15:88:09:cf:4f:3c<CR><LF>
<CR><LF>AT_RX_ERROR<CR><LF> /* a RX error has been encountered */
<CR><LF>AT_ERROR<CR><LF> /* after the command, AT_Slave have processed "something" which is
not a command - that could result in an error */
# <CR><LF> /* newline to purge */
<CR><LF>AT_ERROR<CR><LF> /* purge could result in an error */
/* now it is ok to resend the command */
# AT+APPKEY=2b:7e:15:16:28:ae:d2:a6:ab:f7:15:88:09:cf:4f:3c<CR><LF>
```

3.2 AT command overview

Table 2. AT commands

Command	Parameters	Description
General Commands		
AT	None	Check if the interface is available.
AT	[?]	Help of all supported commands.
ATZ	None	Reset
AT+VL	[=verb_lvl], where verb_lvl = [0:3]	Sets/gets the verbose level.
AT+LTIME	[=?]	Gets the local time in UTC format.
Keys, IDs and EUIs management commands		
AT+APPEUI	[=01:02:03:04:05:06:07:08]	Sets/gets the application EUI.
AT+NWKEY	[=2B:7E:15:16:28:AE:D2:A6:AB:F7:15:88:09:CF:4F:3C]	Sets/gets the network root key
AT+APPKEY	[=2B:7E:15:16:28:AE:D2:A6:AB:F7:15:88:09:CF:4F:3C]	Sets/gets the application root key.

Command	Parameters	Description
AT+APPSKEY	[=2B:7E:15:16:28:AE:D2:A6:AB:F7:15:88:09:CF:4F:3C]	Sets/gets the application session key.
AT+NWKSKEY	[=2B:7E:15:16:28:AE:D2:A6:AB:F7:15:88:09:CF:4F:3C]	Sets/gets the network session key.
AT+DADDR	[=01:02:0A:0B]	Sets/gets the device address.
AT+DEUI	[=01:23:45:67:89:AB:CD:EF]	Sets/gets the module unique ID.
AT+NWKID	[=127]	Sets/gets the network ID.
LoRa join and send data commands		
AT+JOIN	[=mode] where mode = 0 (ABP) or mode = 1 (OTAA)	Joins the network.
AT+LINKC	None	Piggyback link check MAC command request to the next uplink
AT+SEND	[=port_nb:confirmedmode:data] where confirmedmode = 0 or 1.	Sends packets to the network.
LoRa network management commands		
AT+VER	[=?]	Gets the LoRaWAN version.
AT+ADR	[=adr_enable] where adr_enable = 0 or 1	Sets/gets the adaptive data rate functionality.
AT+DR	[=datarate] where datarate = [0:7]	Sets/gets the data rate.
AT+BAND	[=region] where region = [0:9]	Sets/gets the active region
AT+CLASS	[=class] where class = [A, B or C]	Sets/gets the LoRa class.
AT+DCS	[=dutycycle] where dutycycle = 0 or 1	Sets/gets duty cycle settings.
AT+JN1DL	[=delay] where delay in ms	Sets/gets the join delay on Rx window 1.
AT+JN2DL		Sets/gets the join delay on Rx window 2.
AT+RX1DL		Sets/gets the delay of the Rx window 1.
AT+RX2DL		Sets/gets the delay of the Rx window 2.
AT+RX2DR	[=datarate] where X = [0:7]	Sets/gets data rate of the Rx window 2.
AT+RX2FQ	[=freq] where freq in Hz	Sets/gets the frequency of the Rx window 2.
AT+TXP	[=txpow] where txpow = [0:7]	Sets/gets the transmit power.
AT+PGSLOT	[=periodicity]	Sets/gets the ping slot.
Radio tests commands		
AT+TTONE	None	Sets the RF tone test.
AT+TRSSI		Sets the RF RSSI tone test.
AT+TCONF	[=freq:pow:bw:sf:cr:lna:pa:mod:paylen:freqdev:lowdropt:BT] [=868000000:14:125:12:4/5:0:0:1:255:0:0:0 for example]	Sets/gets the config LoRa RF test.
AT+TTX	[=nb_packets_sent]	Sets the number of packets to be sent for PER RF Tx test.
AT+TRX	[=nb_packets_received]	Sets the number of packets to be received for PER RF Rx test.

Command	Parameters	Description
AT+CERTIF	[=mode] where mode = 0 (ABP) or mode = 1 (OTAA)	Sets the module in LoRaWAN certification with join mode.
AT+TTH	[=<Fstart>, <Fstop>, <FDelta>, <PacketNb>]	Starts RF Tx hopping test from Fstart to Fstop (in Hz or MHz), Fdelta in Hz
AT+TOFF	None	Stops RF tests.
Information command		
AT+BAT	[=?]	Gets the battery level.
AT+TEMP	[=?]	Gets the temperature of module (in Celsius degree °C).

3.3 Event table

The table below details the events that the AT_Slave application sends as a notification to the host module.

Table 3. Event table

Event	Return value	Description
+EVT:JOINED	None	Notifies an host module has been join on the gateway by OTAA.
+EVT:JOIN_FAILED	None	Notifies the host module has not completed the join transaction (ID/Keys error, Tx not received by the gateway, Rx not received or not decrypted). In this case, the AT+JOIN must be recalled.
+EVT:	:<port>:<size>:<payload>	Notifies the host module that an asynchronous frame has been received on a RX window with downlink frame.
+EVT:	RX_<slot>:<DR>:<RSSI>:<SNR>	Notifies the host module that an asynchronous frame has been received on a RX window with downlink parameters.
+EVT:	RX_<slot>:<DR>:<RSSI>:<SNR>: :<DMODM>:<GWN>	Notifies the host module that an asynchronous frame has been received on a RX window with extended downlink parameters. This event replaces the previous event when at least one link check request (AT+LINKC) has been executed.
+EVT:SEND_CONFIRMED	None	Notifies the host module that a Tx frame has been acknowledge by the gateway.

3.4 General commands

3.4.1 AT

Description	Attention is used to check if the link is working properly.
Syntax	AT<CR>
Arguments	None
Response	None
Result code	<CR><LF>OK<CR><LF>

Example:

```
/* Example: check the AT link is working properly*/
# AT<CR>
<CR><LF>
OK<CR><LF>
```

3.4.2 AT?

Description	Provides the short help of all supported commands.
Syntax	AT?<CR>
Arguments	None
Response	None
Result code	Display a list of all commands.

Example:

```
/* Example: Get the short help of ALL AT commands*/
# AT?<CR>
AT+<CMD>?
AT+<CMD>      : Run <CMD>
AT+<CMD>=<value> : Set the value
AT+<CMD>=?     : Get the value
<List of all commands help>
<CR>
OK<CR>
```

3.4.3 ATZ - MCU reset

Description	The command generates a NVIC reset: resets the whole system including radio and microprocessor.
Syntax	ATZ<CR>
Arguments	None
Response	None
Result code	None (NVIC_Reset action)

Example:

```
/* Example: set NVIC system reset */
# ATZ<CR>
REYAX RYLR993<CR><LF>
BAND:US915<CR><LF>
+READY<CR><LF>
```

3.4.4 AT+VL - Verbose level

Description	Sets/gets the verbose level of the application.
Syntax	AT+VL=<verbose_level><CR> AT+VL=?<CR>
Arguments	<verbose_level>, the default is 1 (VLEVEL_L) 0: VLEVEL_OFF 1: VLEVEL_L 2: VLEVEL_M 3: VLEVEL_H
Response	<verbose_level><CR><LF>
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>

Examples:

```
/* Example1: set verbose level */
# AT+VL=3<CR>
<CR><LF>OK
<CR><LF>

/* Example2: get verbose level */# AT+VL =?<CR>
3<CR><LF>
<CR><LF>
OK<CR><LF>
```

3.4.5 AT+LTIME - Local time in UTC format

Description	Gets the local time in UTC format.
Syntax	AT+LTIME=?<CR>
Arguments	None
Response	<local time><CR><LF>
Result code	<CR><LF>OK<CR><LF>

Example:

```
/* Example: Get the local time in UTC format */
#AT+ LTIME =?<CR>
LTIME:02h14m52s on 01/01/1970<CR><LF>
<CR><LF>
OK<CR><LF>
```

3.4.6 AT+OPMODE – Set operating mode

Description	Select LoRaWAN mode or REYAX RYLR998 proprietary mode
Syntax	AT+OPMODE=<mode><CR> AT+OPMODE=?<CR>
Arguments	<mode>, the default is 0 (LoRaWAN mode) 0: LoRaWAN mode 1: REYAX RYLR998 proprietary mode *RYLR993 can't set up the NETWORKID, only accept the default NETWORKID=18 of the RYLR998. When entry this mode please refer to the AT command of RYLR998. * It will work after RESET.
Response	<mode><CR><LF>
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>

Example:

```
/* Example 1: set operating mode*/
#AT+OPMODE=1<CR>
Need RESET!<CR><LF>
<CR><LF>
OK<CR><LF>

/* Example 2: get operating mode*/
#AT+OPMODE=?<CR>
1<CR><LF>
<CR><LF>
OK<CR><LF>
```

3.5 Keys, IDs and EUIs management

3.5.1 AT+APPEUI - Application identifier

Description	Sets/gets the application EUI.
Syntax	AT+APPEUI=<id><CR> AT+APPEUI=?<CR>
Arguments	<id>, 8-bits value separated by ":", the total length is 8 Bytes. (hexadecimal format string)
Response	<id><CR><LF>
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_ERROR<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>

Examples:

```
/* Example1: set APP EUI */
# AT+APPEUI=01:02:03:04:05:06:07:08<CR>
<CR><LF>
OK<CR><LF>

/* Example2: get APP EUI */
# AT+APPEUI=?<CR>
01:02:03:04:05:06:07:08<CR><LF>
<CR><LF>
OK<CR><LF>
```

3.5.2 AT+NWKEY - Network root key

Description	Sets/gets the network root key. This key is used only in OTAA mode.
Syntax	AT+NWKEY=<key><CR> AT+NWKEY=?<CR>
Arguments	<key>, 8-bits value separated by ":", the total length is 16 Bytes. (hexadecimal format string)
Response	<key><CR><LF>
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_ERROR<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>

Examples:

```
/* Example1: set NWK Key */
# AT+NWKEY=2B:7E:15:16:28:AE:D2:A6:AB:F7:15:88:09:CF:4F:3C<CR>
<CR><LF>OK
<CR><LF>

/* Example2: get NWK Key */
# AT+NWKEY=?<CR>
2B:7E:15:16:28:AE:D2:A6:AB:F7:15:88:09:CF:4F:3C<CR><LF>
<CR><LF>
OK<CR><LF>
```

3.5.3 AT+APPKEY - Application root key

Description	Sets/gets the application root key. This key is used only in OTAA mode.
Syntax	AT+APPKEY=<key><CR> AT+APPKEY=?<CR>
Arguments	<key>, 8-bits value separated by ":", the total length is 16 Bytes. (hexadecimal format string)
Response	<key><CR><LF>
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_ERROR<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>

Examples:

```
/* Example1: set APP Key */
# AT+APPKEY=2B:7E:15:16:28:AE:D2:A6:AB:F7:15:88:09:CF:4F:3C<CR>
<CR><LF>
OK<CR><LF>

/* Example2: get APP Key */
# AT+APPKEY=?<CR>
2B:7E:15:16:28:AE:D2:A6:AB:F7:15:88:09:CF:4F:3C<CR><LF>
<CR><LF>
OK<CR><LF>
```

3.5.4 AT+APPSKEY - Application session key

Description	Sets/gets the application session key. This key is used only in OTAA and APB modes. In OTAA mode, this key is replaced during the derivation process with the application root key and JoinAccept response information.
Syntax	AT+APPSKEY=<key><CR> AT+APPSKEY=?<CR>
Arguments	<key>, 8-bits value separated by ":", the total length is 16 Bytes. (hexadecimal format string)
Response	<key><CR><LF>
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_ERROR<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>

Example:

```
/* Example1: set APP Session Key */
# AT+APPSKEY=2B:7E:15:16:28:AE:D2:A6:AB:F7:15:88:09:CF:4F:3C<CR>
<CR><LF>
OK<CR><LF>

/* Example2: get APP Session Key */
# AT+APPSKEY=?<CR>
2B:7E:15:16:28:AE:D2:A6:AB:F7:15:88:09:CF:4F:3C<CR><LF>
<CR><LF>
OK<CR><LF>
```

3.5.5 AT+NWKSKEY - Network session key

Description	Sets/gets the network session key. This key is used in OTAA and ABP modes. In OTAA mode, this key is replaced during the derivation process with the network's root key and JoinAccept response information.
Syntax	AT+NWKSKEY=<key><CR> AT+NWKSEY=?<CR>
Arguments	<key>, 8-bits value separated by ":", the total length is 16 Bytes. (hexadecimal format string)
Response	<key><CR><LF>
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_ERROR<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>

Example:

```
/* Example1: set NWK Session Key */
# AT+NWKSKEY=2B:7E:15:16:28:AE:D2:A6:AB:F7:15:88:09:CF:4F:3C<CR>
<CR><LF>
OK<CR><LF>

/* Example2: get NWK Session Key */
# AT+NWKSKEY=?<CR>
2B:7E:15:16:28:AE:D2:A6:AB:F7:15:88:09:CF:4F:3C<CR><LF>
<CR><LF>
OK<CR><LF>
```

3.5.6 AT+DADDR - Device address

Description	Sets/gets the device address.
Syntax	AT+DADDR=<address><CR> AT+DADDR=?<CR>
Arguments	<address>, 8-bits value separated by ":", the total length is 4 Bytes. (hexadecimal format string)
Response	<address><CR><LF>
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_ERROR<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>

Examples:

```
/* Example1: set device address*/
# AT+DADDR=01:02:0A:0B<CR>
<CR><LF>
OK<CR><LF>

/* Example2: get device address*/
# AT+DADDR=?<CR>
01:02:0A:0B<CR><LF>
<CR><LF>
OK<CR><LF>
```


3.5.7 AT+DEUI - Device EUI

Description	Sets/gets the device EUI.
Syntax	AT+DEUI=<EUI><CR> AT+DEUI=?<CR>
Arguments	<EUI>, 8-bits value separated by ":", the total length is 8 Bytes. (hexadecimal format string)
Response	<EUI><CR><LF>
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_ERROR<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>

Examples:

```
/* Example1: set device EUI */
# AT+DEUI=01:02:03:04:05:06:07:08<CR>
<CR><LF>
OK<CR><LF>

/* Example2: get device EUI */
# AT+DEUI=?<CR>
01:02:03:04:05:06:07:08<CR><LF>
<CR><LF>
OK<CR><LF>
```

3.5.8 AT+NWKID - Network ID

Description	Sets/gets the network ID.
Syntax	AT+NWKID=<id><CR> AT+NWKID=?<CR>
Arguments	<id>, 1-byte decimal value from 0 to 127
Response	<id><CR><LF>
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_ERROR<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>

Examples:

```
/* Example1: set the network ID */
# AT+NWKID=127<CR>
<CR><LF>
OK<CR><LF>

/* Example2: get the network ID */
# AT+NWKID=?<CR>
127<CR><LF>
<CR><LF>
OK<CR><LF>
```

3.6 Join and send data on LoRa network

3.6.1 AT+JOIN - Join LoRa network

Description	Join the LoRa network.
Syntax	AT+JOIN=<mode><CR>
Arguments	<mode> 0: join to a network by ABP 1: join to a network by OTAA
Response	+EVT: JOINED or +EVT: JOIN_FAILED
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>

Examples:

```
/* Example1: Join a network by ABP */
#AT+JOIN=0<CR>
+EVT: JOINED<CR><LF> /* event: ABP configuration done. Ready to start Tx */
<CR><LF>
OK<CR><LF>

/* Example2: Join a network by OTAA (Success result) */
#AT+JOIN=1<CR>
<CR><LF>
OK<CR><LF>

+EVT: JOINED<CR><LF> /* Event : OTAA join successful event */

/* Example3: Join a network by OTAA (Fail result) */
#AT+JOIN=1<CR>
<CR><LF>
OK<CR><LF>

+EVT: JOIN_FAILED<CR><LF> /* Event : OTAA join failed event. LoRaWAN network offline or keys
notaligned with the network configuration */
```

3.6.2 AT+LINKC - Link check request

Description	Piggyback link check MAC command request to the next uplink. The DemodMargin and NbGateways output information is provided into the extended Rx events +EVT:RX.
Syntax	AT+LINKC<CR>
Arguments	None
Response	None
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>

Examples:

```
/* Example: Piggyback Link Check Request to the next uplink */
#AT+LINKC<CR>
<CR><LF>
OK<CR><LF>
```

3.6.3 AT+SEND - Send data to LoRa network

Description	Sends application packets with specified AppPort and payload to LoRaWAN network.
Syntax	AT+SEND=<port>:<ack>:<payload><CR>
Arguments	<ul style="list-style-type: none"> <port>: application port to be transmitted <ack> <ul style="list-style-type: none"> 0: unconfirmed message 1: confirmed message <payload>: payload in hexadecimal format strings (maximum length is 242 bytes)
Response	+EVT:SEND_CONFIRMED
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF> <CR><LF>AT_DUTYCYCLE_RESTRICTED<CR><LF> <CR><LF>AT_NO_NET_JOINED<CR><LF> <CR><LF>AT_BUSY_ERROR<CR><LF> <CR><LF>AT_CRYPTO_ERROR<CR><LF> <CR><LF>AT_ERROR<CR><LF>

Examples:

```

/* Example1: Send a packet to the gateway in unconfirmed mode */
#AT+SEND=2:0:ABCD<CR> /* send a packet : "ABCD", with APP port is 2, unconfirmed message */
<CR>
OK<CR>

/* Example2: Send a packet to the gateway in confirmed mode */
# AT+SEND=10:1:7FFF<CR> /* send a packet : "7FFF", with APP port is 10, confirmed message */
<CR>
OK<CR>

+EVT:SEND_CONFIRMED

```

3.7 LoRa network management

3.7.1 AT+VER - Firmware version

Description	Gets the version of the AT_Slave firmware.
Syntax	AT+VER=?<CR>
Arguments	None
Response	None
Result code	RYLR993_FW_VERSION: Vx.y.z<CR><LF> MW_LORAWAN_VERSION: Va.b.c<CR><LF> MW_RADIO_VERSION: Vd.e.f<CR><LF>

Example:

```

/* Example: Get the Application and Middleware versions */
#AT+VER=?
RYLR993_FW_VERSION: V0.4.6<CR><LF>
MW_LORAWAN_VERSION: V2.3.0<CR><LF>
MW_RADIO_VERSION: V1.1.0<CR><LF>
<CR><LF>
OK<CR><LF>

```

3.7.2 AT+ADR - Adaptive data rate functionality

Description	Sets/gets the adaptive data rate functionality.
Syntax	AT+ADR=<enabled><CR> AT+ADR=?<CR>
Arguments	<enabled> <ul style="list-style-type: none"> 0: ADR disabled 1: ADR enabled (default)
Response	<enabled><CR><LF>
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>

Examples:

```
/* Example1: Disable ADR */
#AT+ADR=0<CR> /* Disable ADR */
<CR><LF>
OK<CR><LF>

/* Example2: Check ADR status */
# AT+ADR=?<CR>
0<CR><LF> /* module returns ADR status */
<CR><LF>
OK<CR><LF>
```

3.7.3 AT+DR - Data rate

Description	Sets/gets the Tx data rate.
Syntax	AT+DR=<data rate><CR> AT+DR=?<CR>
Arguments	<data rate> in the range [0,1,2,3,4,5,6,7]
Response	<data rate><CR><LF>
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_ERROR<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>

Note: To be able to set data rate, the ADR must be disabled.

Examples:

```
/* Example1: Set TX Data Rate with Adaptive Data Rate disabled */
#AT+DR=2<CR> /* Set TX Data Rate */
<CR><LF>
OK<CR><LF>

/* Example2: Set TX Data Rate with Adaptive Data Rate enabled */
#AT+ADR=2<CR>
<CR><LF>
AT_ERROR<CR><LF>

/* Example2: Get Data rate */
#AT+ADR=?<CR>
0<CR><LF> /* module returns TX data rate */
<CR><LF>
OK<CR><LF>
```

3.7.4 AT+BAND - Active region

Description	Sets/gets the active region.
Syntax	AT+BAND=<band><CR> AT+BAND=?<CR>
Arguments	<band>: number corresponding to active regions 0:AS923_1 1:AS923_2 2:AS923_3 3:AS923_4 4:AU915 5:CN470 6:CN779 7:EU433 8:EU868 9:KR920 10:IN865 11:US915<Default> 12:RU864
Response	<band><CR><LF>
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>

Examples:

```
/* Example1: Set Active region */
#AT+BAND=0<CR> /* Set AS923 as active region*/
<CR><LF>
OK<CR><LF>

/* Example2: Get Active region */
# AT+BAND=?<CR>
0:AS923<CR><LF> /* module returns Active region */
<CR><LF>
OK<CR><LF>
```

3.7.5 AT+CLASS - LoRa class

Description	Sets/gets the LoRa class.
Syntax	AT+CLASS=<class><CR> AT+CLASS=?<CR>
Arguments	<class>: must be A, B or C.
Response	<class><CR><LF>
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_ERROR<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF> <CR><LF>AT_NO_CLASS_B_ENABLE<CR><LF> <CR><LF>AT_NO_NET_JOINED<CR><LF>

Examples:

```
/* Example1: Set the LoRa Class */
#AT+CLASS=C<CR> /* Set Class C on device */
<CR><LF>
OK<CR><LF>

/* Example2: IF RYLR993 not connect to Gateway */
#AT+CLASS=C<CR> /* Set Class C on device */
<CR><LF>
AT_ERROR<CR><LF>

/* Example3: Get the LoRa Class */
# AT+CLASS=?<CR>
C<CR><LF> /* module returns Active Class */
<CR><LF>
OK<CR><LF>
```

Note: To be able to set LoRa class, the RYLR993 must be connect to Gateway.

3.7.6 AT+DCS - Duty cycle settings

Description	Sets/gets the duty cycle settings.
Syntax	AT+DCS=<dutyCycleEnable><CR> AT+DCS=?<CR>
Arguments	<dutyCycleEnable> 0: duty cycle disabled 1: duty cycle enabled
Response	<dutyCycleEnable><CR><LF>
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>

Examples:

```
/* Example1: Enable Duty cycle */
#AT+DCS=1<CR>
<CR><LF>
OK<CR><LF>

/* Example2: Get Duty cycle */
# AT+DCS=?<CR>
1<CR><LF> /* module returns Duty cycle */
<CR><LF>
OK<CR><LF>
```

3.7.7 AT+JN1DL - Join delay on Rx window 1

Description	Sets/gets the join accept delay between the end of the Tx and the join Rx window 1 (in ms).
Syntax	AT+JN1DL=<delay><CR> AT+JN1DL=?<CR>
Arguments	<delay>: value in ms
Response	<delay><CR><LF>
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>

Examples:

```
/* Example1: Set Join Delay on RX window 1*/
#AT+JN1DL=5000<CR>
<CR><LF>
OK<CR><LF>

/* Example2: Get Join Delay on RX window 1*/
# AT+JN1DL=?<CR>
5000<CR><LF> /* module returns Join Delay on RX window 1 in ms*/
<CR><LF>
OK<CR><LF>
```

3.7.8 AT+JN2DL - Join delay on Rx window 2

Description	Sets/gets the join accept delay between the end of the Tx and the join Rx window 2 (in ms).
Syntax	AT+JN2DL=<delay><CR> AT+JN2DL=?<CR>
Arguments	<delay>: value in ms
Response	<delay><CR><LF>
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>

Examples:

```
/* Example1: Set Join Delay on RX window 2*/
#AT+JN2DL=8000<CR>
<CR><LF>
OK<CR><LF>

/* Example2: Get Join Delay on RX window 2*/
# AT+JN2DL=?<CR>
8000<CR><LF> /* module returns Join Delay on RX window 2 in ms*/
<CR><LF>
OK<CR><LF>
```

3.7.9 AT+RX1DL - Delay of the Rx window 1

Description	Sets/gets the delay between the end of the Tx and the Rx window 1 (in ms).
Syntax	AT+RX1DL=<delay><CR> AT+RX1DL=?<CR>
Arguments	<delay>: value in ms
Response	<delay><CR><LF>
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>

Examples:

```
/* Example1: Set Delay on RX window 1*/
#AT+RX1DL=1500<CR>
<CR><LF>
OK<CR><LF>

/* Example2: Get Delay on RX window 1*/
# AT+RX1DL=?<CR>
1500<CR><LF> /* module returns Delay on RX window 1 in ms*/
<CR><LF>
OK<CR><LF>
```

3.7.10 AT+RX2DL - Delay of the Rx window 2

Description	Sets/gets the delay between the end of the Tx and the Rx window 2 (in ms).
Syntax	AT+RX2DL=<delay><CR> AT+RX2DL=?<CR>
Arguments	<delay>: value in ms
Response	<delay><CR><LF>
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>

Examples:

```
/* Example1: Set Delay on RX window 2*/
#AT+RX2DL=2500<CR>
<CR><LF>
OK<CR><LF>

/* Example2: Get delay on RX window 2*/
# AT+RX2DL=?<CR>
2500<CR><LF> /* module returns Delay on RX window 2 in ms*/
<CR><LF>
OK<CR><LF>
```


3.7.11 AT+RX2DR - Data rate of the Rx window 2

Description	Sets/gets the Rx window 2 data rate (0-7 corresponding to DR_X).
Syntax	AT+RX2DR=<datarate><CR> AT+RX2DR=?<CR>
Arguments	<datarate>: value in range [0:15]
Response	<datarate><CR><LF>
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>

Examples:

```
/* Example1: Set RX window 2 Data rate*/
#AT+RX2DR=5<CR>
<CR><LF>
OK<CR><LF>

/* Example2: Get RX window 2 Data rate */
# AT+RX2DR=?<CR>
5<CR><LF> /* module returns RX window 2 Data rate */
<CR><LF>
OK<CR><LF>
```

3.7.12 AT+RX2FQ - Frequency of the Rx window 2

Description	Sets/gets the Rx window 2 frequency.
Syntax	AT+RX2FQ=<freq><CR> AT+RX2FQ=?<CR>
Arguments	<freq>: value in Hz
Response	<freq><CR><LF>
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>

Examples:

```
/* Example1: Set RX window 2 Frequency */
#AT+RX2FQ=869535000<CR>
<CR><LF>
OK<CR><LF>

/* Example2: Get RX window 2 Frequency */
# AT+RX2FQ=?<CR>
869535000<CR><LF> /* module returns RX window 2 Frequency */
<CR><LF>
OK<CR><LF>
```

3.7.13 AT+TXP - Transmit power

Description	Sets/gets the transmit power.
Syntax	AT+TXP=<TxPow><CR> AT+TXP=?<CR>
Arguments	<TxPow>: must be in the range of the region activated in the range [0:15].
Response	<TxPow><CR><LF>
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>

Examples:

```
/* Example1: Set Transmit power */
#AT+TXP=3<CR>
<CR><LF>
OK<CR><LF>

/* Example2: Get Transmit power */
# AT+TXP=?<CR>
3<CR><LF>          /* module returns Transmit power */
<CR><LF>
OK<CR><LF>
```

3.7.14 AT+PGSLOT - Ping slot

Description	Sets/gets the unicast ping slot periodicity.
Syntax	AT+PGSLOT=<periodicity><CR> AT+PGSLOT=?<CR>
Arguments	<periodicity>: periodicity to be transmitted, must be in the range [0:7] Ping slot periodicity is $2^{\text{periodicity}}$, in seconds.
Response	<periodicity><CR><LF>
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>

Example:

```
/* Example1: Set Ping Slot */
#AT+PGSLOT=4<CR> /* Set Ping Slot periodicity to 2^4= 16 seconds*/
<CR><LF>
OK<CR><LF>

/* Example2: Set Ping Slot */
#AT+PGSLOT=?<CR>
4<CR><LF>
<CR><LF>
OK<CR><LF>
```

3.8 Radio test commands

3.8.1 AT+TTONE - RF tone test

Description	Starts a RF tone test.
Syntax	AT+TTONE<CR>
Arguments	None
Response	None
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_BUSY_ERROR<CR><LF>

Example:

```
/* Example: starts a RF Tone test */
# AT+TTONE<CR>
[TimeDisplay]: Tx FSK Test<CR><LF>
<CR><LF>
OK<CR><LF>
```

3.8.2 AT+TRSSI - RF RSSI tone test

Description	Starts a RF RSSI tone test.
Syntax	AT+TRSSI<CR>
Arguments	None
Response	<rssi_lvl><CR><LF>: value in dBm
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_BUSY_ERROR<CR><LF>

Example:

```
/* Example: starts a RSSI tone test */
# AT+TRSSI<CR>
[TimeDisplay]: Rx FSK Test<CR><LF>
[TimeDisplay]:>>> RSSI Value= -7 dBm<CR><LF>
<CR><LF>
OK<CR><LF>
```

3.8.3 AT+TCONF - LoRa RF test configuration

Description	Sets/gets the LoRa RF test configuration.
Syntax	AT+TCONF=<freq>:<pow>:<bw>:<sf>:<cr>:<lna>:<pa>:<mod>:<paylen>:<freq dev>:<lowdropt>:<BT><CR> AT+TCONF=?<CR>

Arguments	<ul style="list-style-type: none"> • <code><freq></code>: frequency in Hz • <code><pow></code>: Tx power in range [-9:22] dBm • <code><bw></code>: <ul style="list-style-type: none"> – LoRa (in kHz) <ul style="list-style-type: none"> 0: 7.8125 1: 15.625 2: 31.25 3: 62.5 4: 125 5: 250 6: 500 – FSK: 4800 to 467000 Hz • <code><sf></code>: <ul style="list-style-type: none"> – LoRa: SF5 to SF12 bit/s – FSK: 600 to 300000 bit/s • <code><cr></code>: LoRa only <ul style="list-style-type: none"> – 1: 4/5 – 2: 4/6 – 3: 4/7 – 4: 4/8 • <code><lna></code>: low-noise amplifier <ul style="list-style-type: none"> – 0: Off – 1: On • <code><pa></code>: PA boost <ul style="list-style-type: none"> – 0: Off – 1: On • <code><mod></code>: modulation <ul style="list-style-type: none"> – 0: FSK – 1: LoRa – 2: BPSK(Tx) • <code><paylen></code>: payload length 1 to 256 • <code><freqdev></code>: FSK only 4800 to 467000 • <code><lowdropt></code>: low DR optimization, LoRa only <ul style="list-style-type: none"> – 0: Off – 1: On – 2: Auto (1 when SF11 or SF12, 0 otherwise) • <code><BT></code>: FSK only <ul style="list-style-type: none"> – 0: no Gaussian filter applied – 1: BT = 0,3 – 2: BT = 0,5 – 3: BT = 0,7 – 4: BT = 1
-----------	---

Response	<ul style="list-style-type: none"> • Freq= <freq> Hz<CR><LF> • Power= <pow> dBm<CR><LF> • Bandwidth= <bw> (=125000 Hz) <CR><LF> • SF= <sf><CR><LF> • CR= <cr> (=4/5) <CR><LF> • LNA State= <lna><CR><LF> • PA Boost State= <pa><CR><LF> • Modulation <mod><CR><LF> • Payload len= <paylen> Bytes<CR><LF> • <freqdev><CR><LF> • LowDRopt[0 to 2]= <lowdropt><CR><LF> • <BT><CR><LF>
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>

Note: <pa>, <freqdev>, <lowdropt> and <BT> arguments are required by the command syntax but are not used on the RYLR993 platform.

Examples:

```

/* Example1: Set LoRa RF test configuration */
#AT+TCONF=868000000:14:4:12:4/5:0:0:1:16:25000:2:3<CR>
<CR><LF>
OK<CR><LF> /* module returns the command error code */

/* Example2: Get LoRa RF test configuration */
# AT+TCONF=?<CR>
1: Freq= 868000000 Hz<CR><LF>
2: Power= 14 dBm<CR><LF>
3: Bandwidth= 4 (=125000 Hz)<CR><LF>
4: SF= 12 <CR><LF>
5: CR= 1 (=4/
2024/7/16 18:18:24.508 [RX] - 5) <CR><LF>
6: LNA State= 0 <CR><LF>
7: PA Boost State= 0 <CR><LF>
8: modulation LORA<CR><LF>
9: Payload len= 16 Bytes<CR><LF>
10
2024/7/16 18:18:24.608 [RX] - : Frequency deviation not applicable<CR><LF>
11: LowDRopt[0 to 2]= 2 <CR><LF>
12 BT product not applicable<CR><LF>
ca
2024/7/16 18:18:24.708 [RX] - n be copy/paste in set cmd:
AT+TCONF=868000000:14:4:12:4/5:0:0:1:16:25000:2:3<CR><LF>
<CR><LF>
OK<CR><LF>

```

3.8.4 AT+TTX - Packets to be sent for PER RF TX test

Description	Starts a PER RF TX test with the number of packets to be sent.
Syntax	AT+TTX=<nb_packets><CR>
Arguments	<nb_packets>
Response	None
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF> <CR><LF>AT_BUSY_ERROR<CR><LF>

Example:

```

/* Example: Starts a PER RF TX test with the number of packets to be sent. */
# AT+TTX=4<CR>
[TimeDisplay]:Tx LoRa Test<CR><LF>
[TimeDisplay]:Tx 1 of 4<CR><LF>
[TimeDisplay]:OnTxDone<CR><LF>
[TimeDisplay]:Tx 2 of 4<CR><LF>
[TimeDisplay]:OnTxDone<CR><LF>
[TimeDisplay]:Tx 3 of 4<CR><LF>
[TimeDisplay]:OnTxDone<CR><LF>
[TimeDisplay]:Tx 4 of 4<CR><LF>
[TimeDisplay]:OnTxDone<CR><LF>
<CR><LF>
OK<CR><LF>

```

3.8.5 AT+TRX - Packets to be received for PER RF RX test

Description	Starts a PER RF RX test with the number of packets to be received.
Syntax	AT+TRX=<nb_packets><CR>
Arguments	<nb_packets>
Response	None
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF> <CR><LF>AT_BUSY_ERROR<CR><LF>

Example:

```

/* Example: Starts a PER RF RX test with the number of packets to be received. */
# AT+TRLRA=4<CR>
[TimeDisplay]:OnRxDone<CR><LF>
[TimeDisplay]:RssiValue=-7 dBm, SnrValue=7dB<CR><LF>
[TimeDisplay]:Rx: 1 of 4 >>> PER= 0 %<CR><LF> /* PER percentage is updated/displayed after
eachreception*/
[TimeDisplay]:OnRxDone<CR><LF>
[TimeDisplay]:RssiValue=-7 dBm, SnrValue=6dB<CR><LF>
[TimeDisplay]:Rx: 2 of 4 >>> PER= 0 %<CR><LF> /* PER percentage is updated/displayed after
eachreception*/
[TimeDisplay]:OnRxDone<CR><LF>
[TimeDisplay]:RssiValue=-7 dBm, SnrValue=5dB<CR><LF>
[TimeDisplay]:Rx: 3 of 4 >>> PER= 0 %<CR><LF> /* PER percentage is updated/displayed after
eachreception*/
[TimeDisplay]:OnRxDone<CR><LF>
[TimeDisplay]:RssiValue=-7 dBm, SnrValue=6dB<CR><LF>
[TimeDisplay]:Rx: 4 of 4 >>> PER= 0 %<CR><LF> /* PER percentage is updated/displayed after
eachreception*/
<CR><LF>
OK<CR><LF>

```

3.8.6 AT+TTH - RF Tx hopping test

Description	Starts RF Tx hopping test from Fstart to Fstop, with Fdelta steps.
Syntax	AT+TTH=<Fstart>,<Fstop>,<FDelta>,<nb_packets><CR>
Arguments	<ul style="list-style-type: none"> <Fstart>: frequency start (in Hz or MHz) <Fstop>: frequency stop (in Hz or MHz) <FDelta>: frequency bandwidth (in Hz) <nb_packets>: number of packets to be sent
Response	None
Result code	<CR><LF> OK <CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF> <CR><LF>AT_BUSY_ERROR<CR><LF>

Example:

```
/* Example: set TX hopping test from 868 to 868,5 MHz with 6 steps of 100 kHz */

# AT+TTH=868000000,868500000,100000,6<CR>
[TimeDisplay]: Tx Hop at 868000000Hz. 0 of 6<CR><LF>
[TimeDisplay]:Tx LoRa Test<CR><LF>
[TimeDisplay]:Tx 1 of 1<CR><LF>
[TimeDisplay]:OnTxDone<CR><LF>
[TimeDisplay]:Tx Hop at 868100000Hz. 1 of 6<CR><LF>
[TimeDisplay]:Tx LoRa Test<CR><LF>
[TimeDisplay]:Tx 1 of 1<CR><LF>
[TimeDisplay]:OnTxDone<CR><LF>
[TimeDisplay]:Tx Hop at 868200000Hz. 2 of 6<CR><LF>
[TimeDisplay]:Tx LoRa Test<CR><LF>
[TimeDisplay]:Tx 1 of 1<CR><LF>
[TimeDisplay]:OnTxDone<CR><LF>
[TimeDisplay]:Tx Hop at 868300000Hz. 3 of 6<CR><LF>
[TimeDisplay]:Tx LoRa Test<CR><LF>
[TimeDisplay]:Tx 1 of 1<CR><LF>
[TimeDisplay]:OnTxDone<CR><LF>
[TimeDisplay]:Tx Hop at 868400000Hz. 4 of 6<CR><LF>
[TimeDisplay]:Tx LoRa Test<CR><LF>
[TimeDisplay]:Tx 1 of 1<CR><LF>
[TimeDisplay]:OnTxDone<CR><LF>
[TimeDisplay]:Tx Hop at 868500000Hz. 5 of 6<CR><LF>
[TimeDisplay]:Tx LoRa Test<CR><LF>
[TimeDisplay]:Tx 1 of 1<CR><LF>
[TimeDisplay]:OnTxDone<CR><LF>
<CR><LF>
OK<CR><LF>
```


3.8.7 AT+CERTIF - Module in LoRaWAN certification with join mode

Description	Starts the module in LoRaWAN certification and with the choice of join mode.
Syntax	AT+CERTIF=<mode><CR>
Arguments	<mode> 0: join to a network by ABP 1: join to a network by OTAA
Response	+EVT:JOINED +EVT:JOIN_FAILED
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>

Examples:

```
/* Example1: Set the module in LoRaWAN certification and Join network by ABP */
#AT+CERTIF=0<CR>
+EVT:JOINED<CR><LF> /* event: ABP configuration done. Ready to start Tx */
<CR><LF>
OK<CR><LF>

/* Example2: Set the module in LoRaWAN certification and Join network by OTAA */
#AT+CERTIF=1<CR><LF>
<CR><LF>
OK<CR><LF>

+EVT:JOINED<CR><LF> /* Event : OTAA join successful event */
```

3.8.8 AT+TOFF - RF test

Description	Stops the RF test.
Syntax	AT+TOFF<CR>
Arguments	None
Response	None
Result code	<CR><LF>OK<CR><LF>

Example:

```
/* Example: stops RF test */
# AT+TOFF<CR>
Test Stop<CR><LF>
<CR><LF>
OK<CR><LF> /* module returns the command error code */
```

3.9 Information

3.9.1 AT+BAT - Battery level

Description	Gets the battery level (in mV).
Syntax	AT+BAT=?<CR>
Arguments	None
Response	<level><CR><LF>: value is in mV
Result code	<CR><LF>OK<CR><LF>

Example:

```
/* Example: Get the battery level in mV */
#AT+ BAT=?<CR>
3300<CR><LF> /* battery level in mV */
<CR><LF>
OK<CR><LF>
```

3.9.2 AT+TEMP – Temperature

Description	Gets the temperature of module (in Celsius degree °C).
Syntax	AT+TEMP=?<CR>
Arguments	None
Response	<Celsius degree><CR><LF>: value is in Celsius degree.
Result code	<CR><LF>OK<CR><LF>

Example:

```
/* Example: Get the temperature */
#AT+TEMP=?<CR>
25<CR><LF> /* value is in Celsius degree. */
<CR><LF>
OK<CR><LF>
```

4. Examples

Here are some basic examples that describe how to use the AT commands. In the following sections, commands provided by the host are preceded by #, and comments are embraced with /* */.

4.1 Join and send in unconfirmed mode

```
/* Check AT Link is OK */
#AT<CR>
<CR><LF>
OK<CR><LF>
/* Join in OTAA mode */
#AT+JOIN=1<CR>
+EVT:JOINED<CR><LF> /* Event: OTAA join successful event */
<CR><LF>
OK<CR><LF>
/* Network is joined, now data can be sent */
#AT+SEND=50:0:01234ABCD<CR> /* Send hexadecimal values in unconfirmed mode to port 50 */
<CR><LF>
OK<CR><LF>
```

4.2 Join and send in confirmed mode

```
/* Check AT Link is OK */
#AT<CR>
<CR><LF>
OK<CR><LF>
/* Join in OTAA mode */
#AT+JOIN=1<CR>
+EVT:JOINED<CR><LF> /* Event: OTAA join successful event */
<CR><LF>
OK<CR><LF>
/* Network is joined, now data can be sent */
#AT+SEND=50:1:01234ABCD<CR> /* Send hexadecimal values in confirmed mode to port 50 */
+EVT:SEND_CONFIRMED<CR><LF>
<CR><LF>
OK<CR><LF>
```

4.3 Rx received data

It is possible to retrieve data sent from a specified port, when +EVT:RX is received.

```
/* Check AT Link is OK */
#AT<CR>
<CR><LF>
OK<CR><LF>
/* Join in OTAA mode */
#AT+JOIN=1<CR>
JOINED<CR><LF> /* Event: OTAA join successful event */
<CR><LF>
OK<CR><LF>
/* Network is joined, now data can be sent */
#AT+SEND=50:0:01234ABCD<CR> /* Send hexadecimal values in unconfirmed mode to port 50 */
<CR><LF>
OK<CR><LF>
+EVT:50:4:ABCD<CR><LF> /*Receive downlink frame */
+EVT:RX_1, DR 0, RSSI -49, SNR 5 <CR><LF> /*Receive downlink parameters */
```

4.4 Class B enable request

The example below shows how to do a Class B request through an AT command sequence.

```
/* Join request in OTAA mode */
#AT+JOIN=1<CR>
<CR><LF>
OK<CR><LF>
/* wait for few seconds to wait for join to complete */
+EVT:JOINED<CR><LF> /* end-device has joined the network */

/* now the network is joined, a request to enter into a Class B mode can be made */
#AT+CLASS=B<CR> /* Request to switch to Class B "enable" */
OK<CR><LF>

/* A built-in MAC message is sent to the network to acquire the system time "Device Time
Req" */
#AT+SEND=50:0:0123<CR> /* Send data will allow piggybacking the MAC Device Time Req - could
be a dummy message */
OK<CR><LF>

/* --> MAC Ping Device Time ANS is received by end-node in hidden way */
#AT+CLASS=?<CR>
B, S0<CR><LF> /* Beacon Acquisition on-going */
OK<CR><LF>
/* Loop on AT+CLASS=? until Beacon Acquisition on-going */

#AT+CLASS=?<CR>
B, S1<CR><LF> /* Beacon Acquisition locked */
OK<CR><LF>

#AT+PGSLOT=4<CR> /* Set Ping Slot periodicity to 2^4= 16 seconds and Send PingSlotInfoReq */
OK<CR><LF>
/* --> MAC Ping Slot Info ANS is received by end-node in hidden way */

/* now the end-node is Class B "enable" */
#AT+CLASS=?<CR>
B<CR><LF> /*Class B "enable"*/
OK<CR><LF>

/* example: Local Time can be requested */
#AT+LTIME=?<CR>
LTIME:01h01m01s on 01/01/2021<CR><LF>
<CR><LF>
OK<CR><LF>
```

5. Proprietary mode

The REYAX RYLR993 can support REYAX RYLR998 proprietary mode by sending the command "AT+OPMODE" to select operation mode.

Description	Select LoRaWAN mode or REYAX RYLR998 proprietary mode
Syntax	AT+OPMODE=<mode><CR> AT+OPMODE=?<CR>
Arguments	<mode>, the default is 0 (LoRaWAN mode) 0: LoRaWAN mode 1: REYAX RYLR998 proprietary mode *RYLR993 can't set up the NETWORKID, only accept the default NETWORKID=18 of the RYLR998. When entry this mode please refer to the AT command of RYLR998.
Response	<mode><CR><LF>
Result code	<CR><LF>OK<CR><LF> <CR><LF>AT_PARAM_ERROR<CR><LF>


Example:

```
/* Example 1: set operating mode*/
#AT+OPMODE=1<CR>
Need RESET!<CR><LF>
<CR><LF>
OK<CR><LF>

/* Example 2: get operating mode*/
# AT+OPMODE=?<CR>
1<CR><LF>
<CR><LF>
OK<CR><LF>
```

5.1 Proprietary mode network structure

With the own LoRa® wireless transceiver function and the application program designed by customers, the RYLR993 can achieve different network architectures such as "Point to Point", "Point to Multipoint" or " Multipoint to Multipoint ". The figure below shows that the modules can communicate with each other in same network ID.

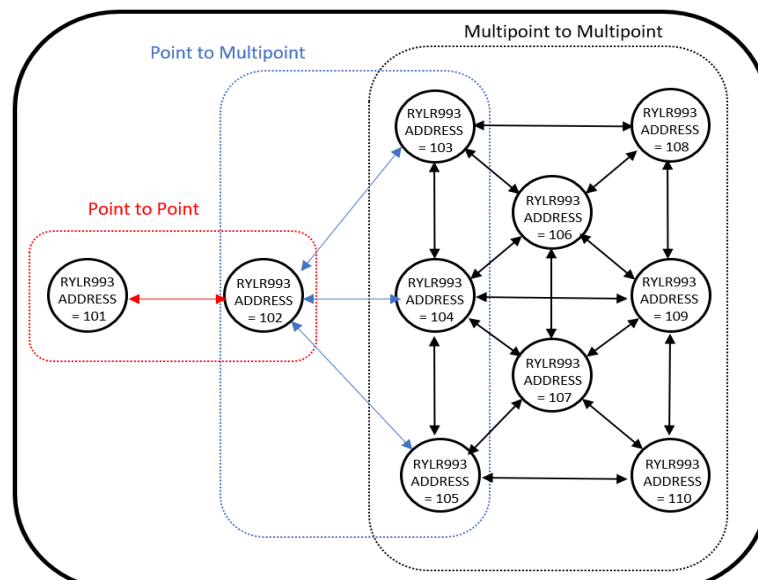

5.2 THE SEQUENCE OF USING AT COMMAND

1. Use "**AT+ADDRESS**" to set ADDRESS. The ADDRESS is regard as the identification of transmitter or specified receiver.
2. Use "**AT+BAND**" to set the center frequency of wireless band. The transmitter and the receiver are required to use the same frequency to communicate with each other.
3. Use "**AT+PARAMETER**" to set the RF wireless parameters. The transmitter and the receiver are required to set the same parameters to communicate with each other. The parameters of which as follows:
 - [1] <Spreading Factor>: The larger the SF is, the better the sensitivity is. But the transmission time will take longer.
 - [2] <Bandwidth>: The smaller the bandwidth is, the better the sensitivity is. But the transmission time will take longer.
 - [3] <Coding Rate>: The coding rate will be the fastest if setting it as 1.
 - [4] <Programmed Preamble>: Preamble code. If the preamble code is bigger, it will result in the less opportunity of losing data. Generally, preamble code can be set above 10 if under the permission of the transmission time. Recommend to set "**AT + PARAMETER = 9,7,1,12**"
 - [5] When the Payload length is greater than 100Bytes, Recommend to set "**AT + PARAMETER = 8,7,1,12**"
4. Use "**AT+SEND**" to send data to the specified ADDRESS. Please use "LoRa® Modem Calculator Tool" to calculate the transmission time. Due to the program used by the module, the payload part will increase more 8 bytes than the actual data length.

5.3 Proprietary mode AT Commands

It is required to key in "**enter**" or "**\r\n**" in the end of all AT Commands.

Add "**=?**" in the end of the commands to ask the current setting value.

It is required to wait until the module replies "**OK**" so that you can execute the next AT command.

5.3.1 AT

Description	Test if the module can respond to Commands.
Syntax	AT<CR>
Arguments	None
Response	None
Result code	<CR><LF>OK<CR><LF>

5.3.2 Software RESET

Description	Software Reset
Syntax	ATZ<CR>
Arguments	None
Response	None
Result code	REYAX RYLR993<CR><LF> FREQ:915000000<CR><LF> +READY<CR><LF>

5.3.3 AT+BAND– Set the RF Frequency

Description	Set the RF Frequency
Syntax	AT+BAND=<parameter><CR> AT+BAND=?<CR>
Arguments	<parameter> is the RF Frequency, unit is "Hz". 915000000:915000000Hz (default)
Response	None
Result code	<CR><LF>OK<CR><LF> +BAND=<parameter><CR><LF> OK<CR><LF>

Examples:

```
/* Example1: Set the frequency as 868500000Hz
# AT+BAND=868500000
<CR><LF>OK<CR><LF>

/* Example2: Check the current Frequency band
# AT+BAND=?
+BAND=<868500000><CR><LF>
OK<CR><LF>
```

5.3.4 AT+PARAMETER – Set the RF parameter

Description	Set the RF parameter
Syntax	AT+PARAMETER=<Spreading Factor>,<Bandwidth>,<Coding Rate>,<Programmed Preamble><CR> AT+PARAMETER=?<CR>
Arguments	<p><Spreading Factor>:5~11(default:9) <i>*SF7to SF9 at 125kHz, SF7 to SF10 at 250kHz, and SF7 to SF11 at 500kHz</i></p> <p><Bandwidth>: 7~9, list as below 7: 125 KHz (default) 8: 250 KHz 9: 500 KHz</p> <p><Coding Rate>:1~4,(default:1) 1: Coding Rate 4/5 2 :Coding Rate 4/6 3 :Coding Rate 4/7 4 :Coding Rate 4/8</p> <p><Programmed Preamble>:(default 12) The value can be configured to 4~24.</p>
Response	None
Result code	<CR><LF>OK<CR><LF> +PARAMETER=<Spreading Factor>,<Bandwidth>,<Coding Rate>, <Programmed Preamble><CR><LF> OK<CR><LF>

Examples:

```

/* Example1: Set the parameters as:<Spreading Factor>7,<Bandwidth>500KHz,<Coding Rate>4, <Programmed Preamble>12
# AT+PARAMETER=7,9,4,12
<CR><LF>OK<CR><LF>

/* Example2: Check the current RF parameter
# AT+PARAMETER=?
+PARAMETER=7,9,4,12<CR><LF>
OK<CR><LF>
*The settings will be memorized in Flash.

```


5.3.5 AT+ADDRESS – Set the ADDRESS ID of module LoRa®

Description	Set the ADDRESS ID of module LoRa®
Syntax	AT+ADDRESS=<Address><CR> AT+ADDRESS=?<CR>
Arguments	<Address> : 0~65535(default 0)
Response	None
Result code	<CR><LF>OK<CR><LF> +ADDRESS=<Address><CR><LF> OK<CR><LF>

Examples:

```
/* Example1: Set the address of module as 120.
# AT+ADDRESS=120
<CR><LF>OK<CR><LF>

/* Example2: Check the current address
# AT+ADDRESS=?
+ADDRESS=120<CR><LF>
OK<CR><LF>

*The settings will be memorized in Flash.
```

5.3.6 AT+CPIN – Set the domain password

Description	Set the domain password
Syntax	AT+CPIN=<password><CR> AT+CPIN=?<CR>
Arguments	<Password>An 8 character long password from 00000001 to FFFFFFFF, Only by using same password can the data be recognized. After resetting, the previously password will disappear. After resetting, the previously password will disappear.
Response	None
Result code	<CR><LF>OK<CR><LF> +CPIN=00000000<CR><LF> OK<CR><LF> +CPIN=EEDCAA90<CR><LF> OK<CR><LF>

Examples:

```
/* Example1: Set the password to EEDCAA90
# AT+CPIN=EEDCAA90
<CR><LF>OK<CR><LF>

/* Example2: Check the current password (default)
# AT+CPIN=?
+CPIN=00000000<CR><LF>
OK<CR><LF>

/* Example3: Check the current password (after setting the password)
# AT+CPIN=?
+CPIN= EEDCAA90<CR><LF>
OK<CR><LF>
```

5.3.7 AT+CRFOP – Set the RF output power

Description	Set the RF output power
Syntax	AT+CRFOP=<power><CR> AT+CRFOP=?<CR>
Arguments	<power>: 0~22 dBm 22: 22dBm(default) 21: 21dBm 20: 20dBm 01: 1dBm 00: 0dBm
Response	None
Result code	<CR><LF>OK<CR><LF> +CRFOP=<power><CR><LF> OK<CR><LF>

Examples:

```
/* Example1: Set the output power as 10dBm
# AT+CRFOP=10
<CR><LF>OK<CR><LF>

/* Example2: Check the current output power
# AT+CRFOP=?
+CRFOP=10<CR><LF>
OK<CR><LF>

* RF Output Power must be set to less than AT+CRFOP=14 to comply CE certification
*The settings will be memorized in Flash.
```

5.3.8 AT+SEND – Send data to the appointed address by Command Mode.

Description	Send data to the appointed address by Command Mode.
Syntax	AT+SEND=<address>,<Payload Length>,<Data><CR> AT+SEND=?<CR>
Arguments	<Address>: 0~65535, When the <Address> is 0, it will send data to all address (From 0 to 65535.) <Payload Length>: Maximum 240bytes <Data>: ASCII Format
Response	None
Result code	OK +SEND=<address>,<Payload Length>,<Data><CR><LF> OK<CR><LF>

Examples:

```
/* Example1: Send HELLO string to the Address 50
# AT+SEND=50,5,HELLO
OK

/* Example2: Search last transmit data,
# AT+SEND=?
+SEND=50,5,HELLO<CR><LF>
OK<CR><LF>
```

5.3.9 +RCV – Show the received data actively

Description	Show the received data actively
Syntax	None
Arguments	<Address> : Transmitter Address ID <Length> : Data Length <Data> : ASCII Format Data <RSSI> : Received Signal Strength Indicator <SNR> : Signal-to-noise ratio
Response	None
Result code	+RCV=<Address>,<Length>,<Data>,<RSSI>,<SNR><CR><LF>

Examples:

```
/* Example1: Module received the ID Address 50 send 5 bytes data, Content is HELLO string, RSSI
is -99dBm, SNR is 40, It will show as below.
#+RCV=50,5,HELLO,-99,-40<CR><LF>
```

5.3.10 AT+UID – To inquire module ID. 12BYTES

Description	To inquire module ID. 12BYTES
Syntax	AT+UID=?<CR>
Arguments	None
Response	None
Result code	+UID=00:00:00:00:00:00:00:00<CR><LF> <CR><LF> OK<CR><LF>

5.3.11 AT+VER – To inquire the firmware version

Description	To inquire the firmware version
Syntax	AT+VER=?<CR>
Arguments	None
Response	None
Result code	RYLR993_FW_VERSION: V0.2.6<CR><LF> MW_LORAWAN_VERSION: V2.3.0<CR><LF> MW_RADIO_VERSION: V1.1.0<CR><LF> OK<CR><LF>

5.3.12 AT+FACTORY – Set all current parameters to manufacturer defaults

Description	Set all current parameters to manufacturer defaults
Syntax	AT+FACTORY<CR>
Arguments	Manufacturer defaults: BAND : 915MHz UART : 9600 Spreading Factor : 9 Bandwidth : 125kHz Coding Rate : 1 Preamble Length : 12 Address : 0 Network ID : 18 CRFOP : 22
Response	None
Result code	<CR><LF>OK<CR><LF>

5.3.13 Other Message

Narrative	After Reset
Arguments	None
Response	None
Result code	REYAX RYLR993<CR><LF> FREQ:915000000<CR><LF> +READY<CR><LF>

5.3.14 Error result code

1. If the head of AT command is not “AT string” or if it’s a “unknown command”, the device will show “AT_ERROR”
2. If the parameters are set incorrectly, the device will show “AT_PARAM_ERROR”