


DDJ-SZ/SX2/SRT OVERVIEW:

- Overview (Pad Modes)
- Overview (Jog Screens)
- Overview (Decks)
- Overview (Mixer)
- MixerFX and Beat FX
- Loop section
- Beatjump section
- Sync modes
- Deck Layout
- Browser
- Transport
- Beatgrid
- Settings
- Pad hotcues
- Pad padFX/Rolls
- Pad macroFX/mixerFX
- Pad jogFX
- Pad keyboard
- Pad beatjump/loop
- Pad slicer
- Pad remix decks



DDJ-SZ: General overview - Deck

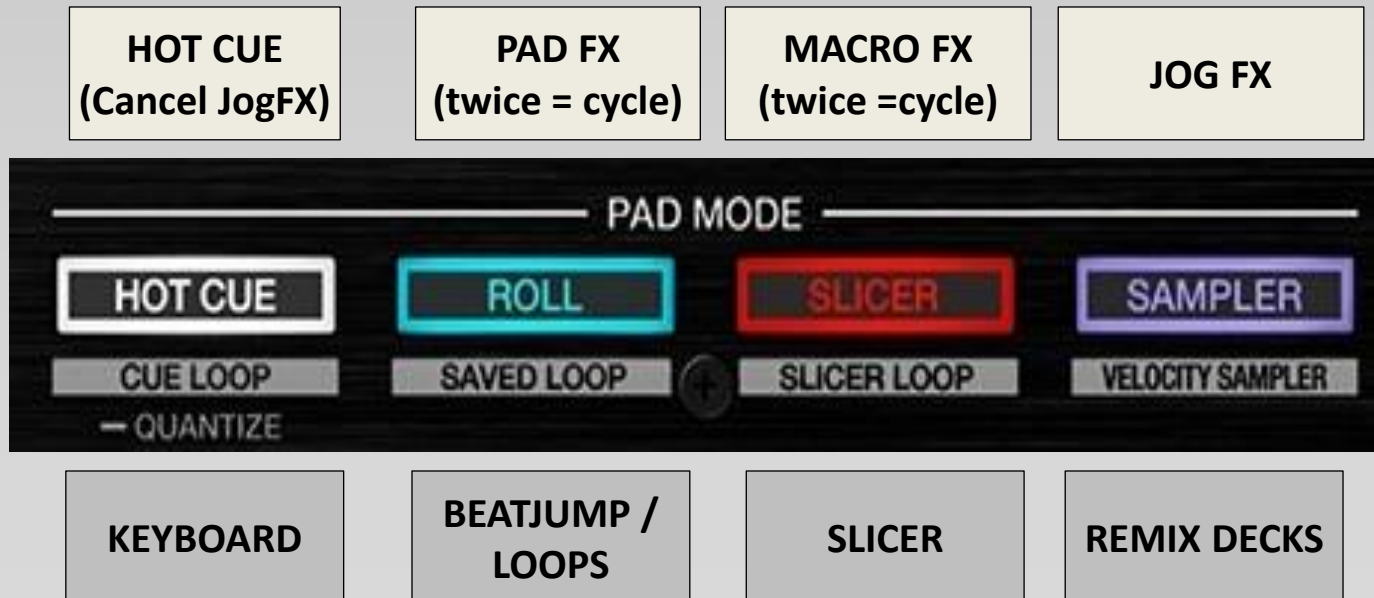

DDJ-SX2: General overview - Deck



DDJ-1000SRT: General overview - Deck

4-beat Loop /
Active Loop / Move 1-beat

LoopSize / MoveSize /
BeatJump

TP3 Slip Reverse

Layout change

JogFX / Quick Search
CDJ / Grid Adjust

Second shift

Main shift

BeatJump / Jump
Size/ Move by 1

Track begin

Vinyl Stop /
Release FX

Quantize + Snap (toggle)

CDJ mode (per deck)

List Browse / Tree Browse
Zoom / Preview player

Only Browser (toggle)

Preview Player
(using browser)

Sync Toggle / Sync Off / Master


Keylock / 6%->10%->16%->100%

BPM Slide / Set Marker / Auto

Key reset / BPM Adjust
Reset Marker / Lock



DDJ-SZ General overview - Mixer

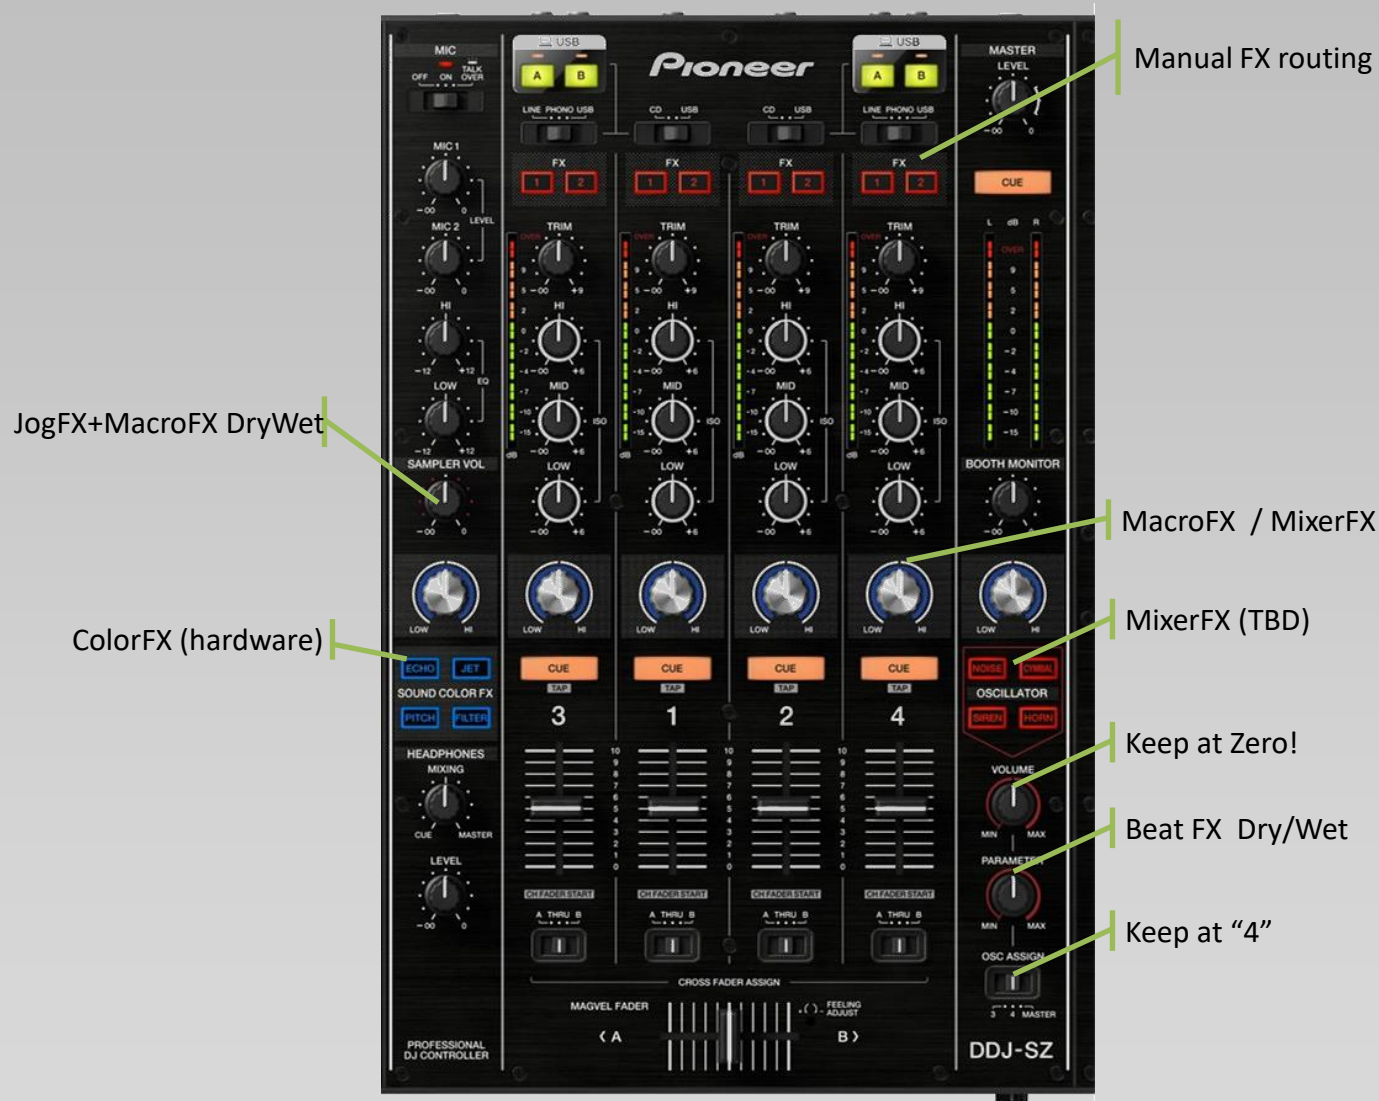


DDJ-SX2: General overview - Mixer

Only Browser (toggle)

List Browse / Tree Browse
Zoom / Preview player

Preview Player
(using browser)

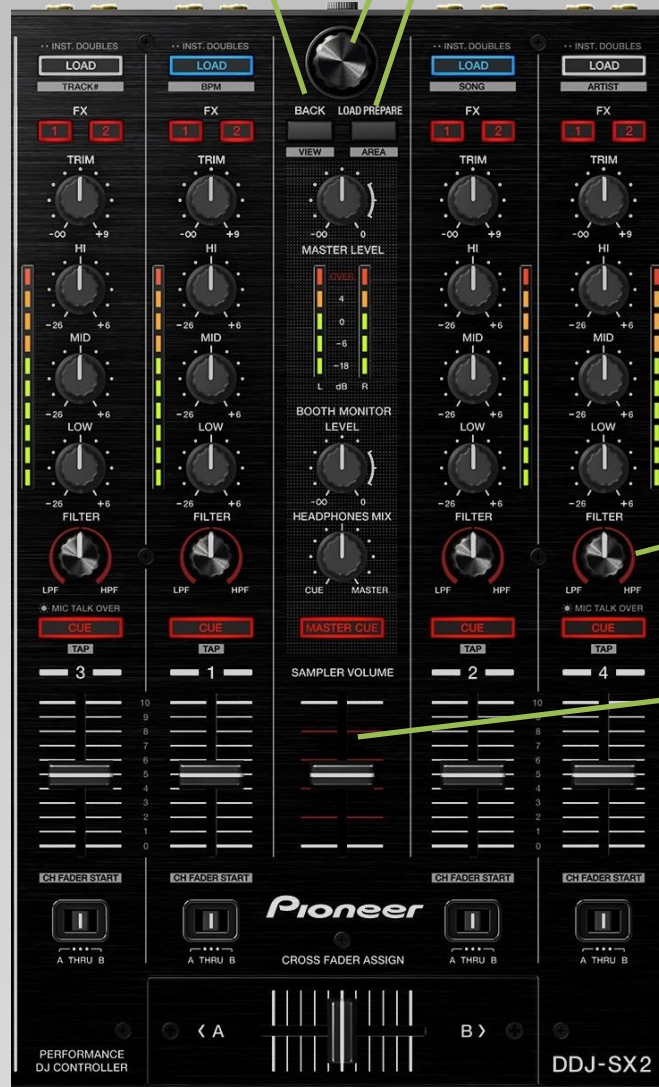

MacroFX / MixerFX

JogFX+MacroFX DryWet

DDJ-1000SRT: General overview - Mixer



DDJ-SZ: MixerFX and UserFX

COLORFX
hardware



MacroFX (twice=cycle)



Dlb delay

Noise

T. Gater

Crush

Filter



Keep at zero!

Dry/Wet BeatFX

Keep at "4"

DDJ-1000/SRT: Loop Section

Regular: Loop In
Loop Engaged: 1/2x

Regular: Loop Out
Loop Engaged: 2x

4-beat Loop
Loop Exit



Whole loop adjust
+memory: Loop In adjust



+



+



Select 1/2x

Select 2x

AutoLoop
(selected size)



+



(DDJ-SX2/SZ)



+



+




Select 1/2x

Select 2x



DDJ-1000/SRT: BeatJump Section

Beatjump Left
Loop move left

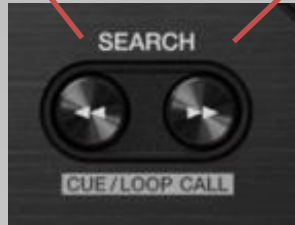


Beatjump right
Loop move right

Select Size 1/2



+

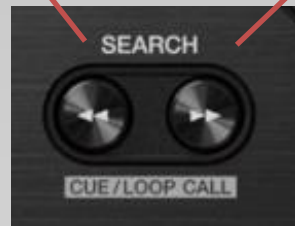


Select Size 2x

Beatjump 1-beat left
Loop 1-beat left



+

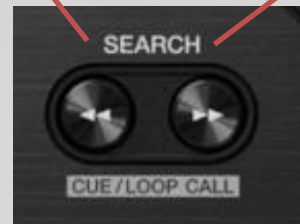

Beatjump 1-beat right
Loop 1-beat right

(DDJ-SX2/SZ)






+



+



DDJ: Sync Section


	<u>TRAKTOR MODE</u>	<u>SERATO MODE</u>	<u>ELASTIC GRID MODE</u>
Preferences / Transport	BeatSync	Tempo Sync	BeatSync
	Toggle ON/OFF	Sync On	Sync On
			Sync On
			Sync Off



+



Set master deck

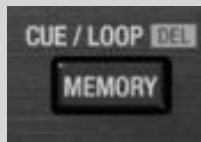


+



Sync Off



+

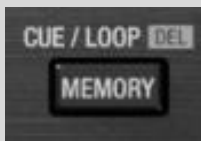


+




Toggle between 3x sync modes

DDJ-1000/SRT: Deck layout


(DDJ-SX2/SZ)

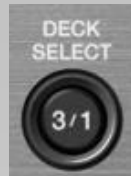

Toggle 2-deck / 4-deck view

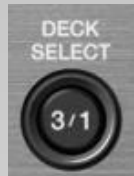

(Double Tap)
+

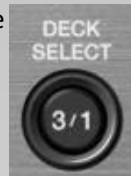


Toggle Parallel / Classic view



+



Enable/ disable layout change

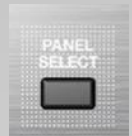

+



ALL DDJs: Browser

(BROWSER)



Turn: Browse List
Press: Load Track


Load+Start Preview player

Only browser

(BROWSER TREE)



+

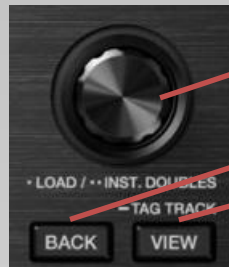

Turn: Scroll Tree
Press: Expand Folder


Scroll Favorites

Goto Collection

(PREVIEW PLAYER)



+

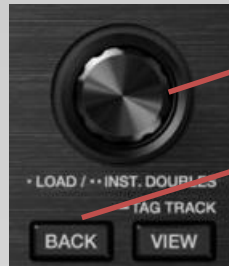

Turn: Seek Preview player
Press:

Load/Unload Preview player

(DECK ZOOM)



+



Turn: Zoom deck
Press: Zoom reset

DDJ-1000/SRT: Transport

Main shift


Second shift



regular: Cue
+shift: Move to front




regular: Pause
+shift: Vinyl quick stop
+memory: Vinyl long stop

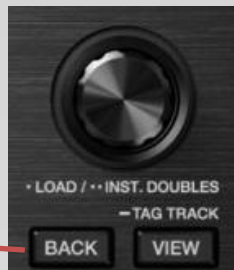

+shift: Unload deck

(DDJ-SX2/SZ)

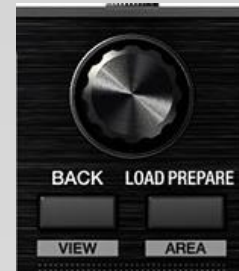

DDJ-1000/SRT: Beatgrid

+shift: BPM set
+Jog: grid slide
+KeyReset: BPM Auto

Regular: key reset
+shift: BPM delete
+Jog: grid adjust
+KeySync: Analysis Lock



DDJ-SX2/SZ: Beatgrid



DDJ-1000: Mapping Settings



Toggle Traktor/Serato sync mode



Toggle Monitor cue external/internal




Screens Reset



Cross-fader curve select




Deck Unload

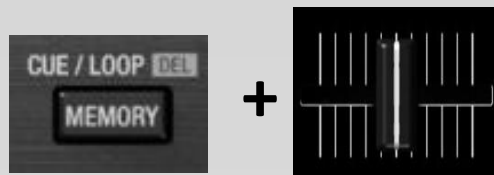


Crossfader Curve Adjust

Pad mode #1: HotCues

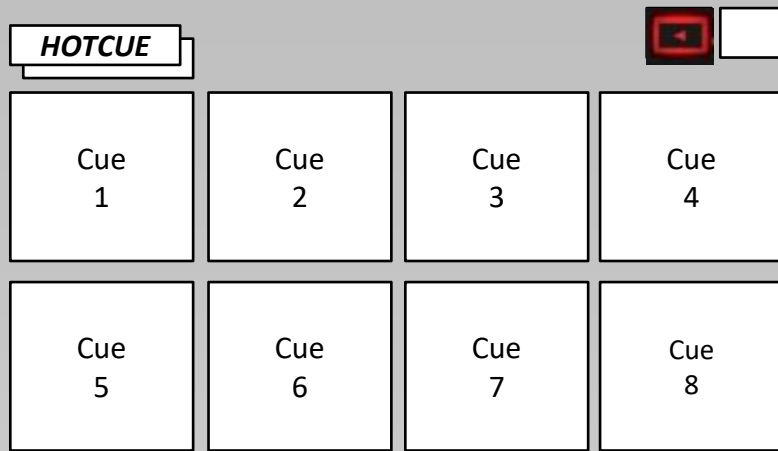


- Hotcues always move the temporary cue as well

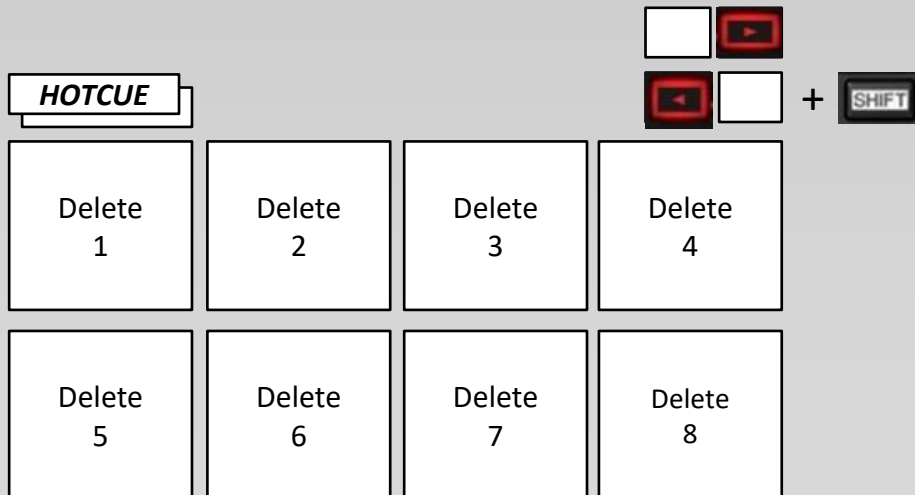



- Use shift or page "2" to delete hot cues

(Recommended:
"store beatmarker as hotcue" DISABLED)

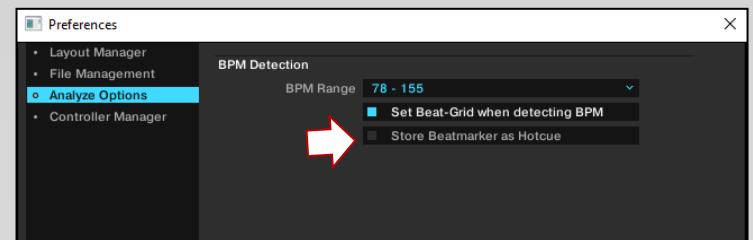

Pad mode #2: PadFX and Rolls (1)


MAIN PAGES:

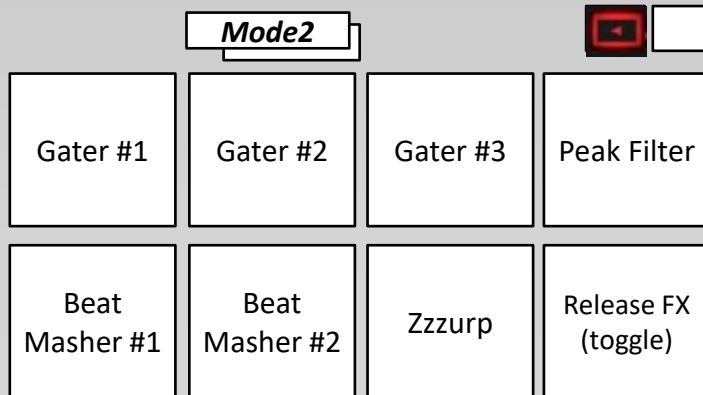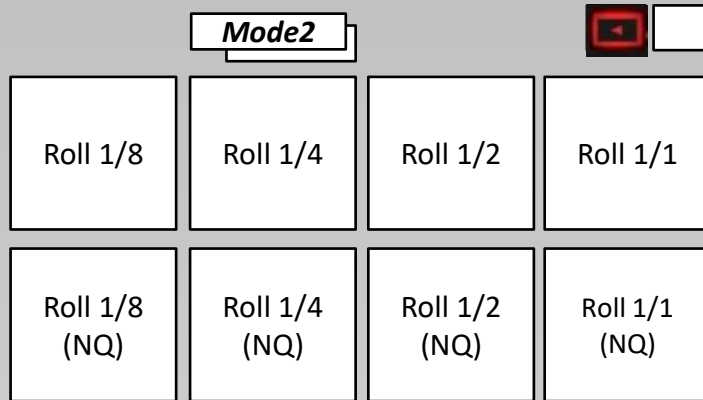


- Use “mode” button to cycle the top two pages

Pad mode #2: PadFX and Rolls (2)

EXTRA PAGES:

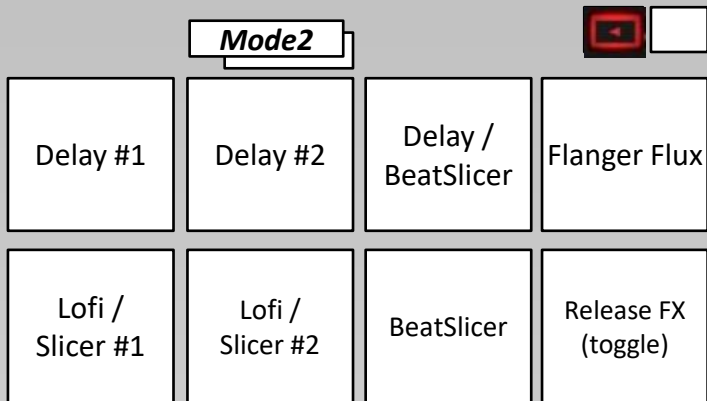


PAGE SELECTOR:

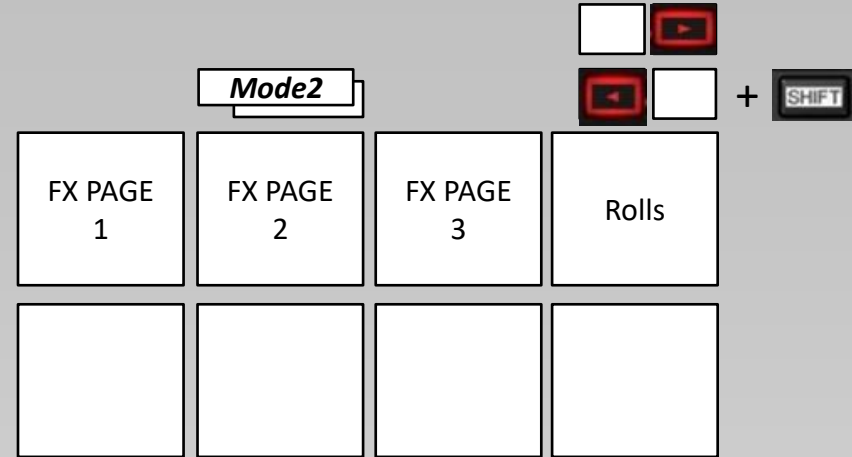

- Use "mode" button to cycle the top two pages
- Use "<" to cycle all pages
- Use ">" or "shift" to select a specific page

Pad mode #3: MixerFX and MacroFX


MIXER FX:

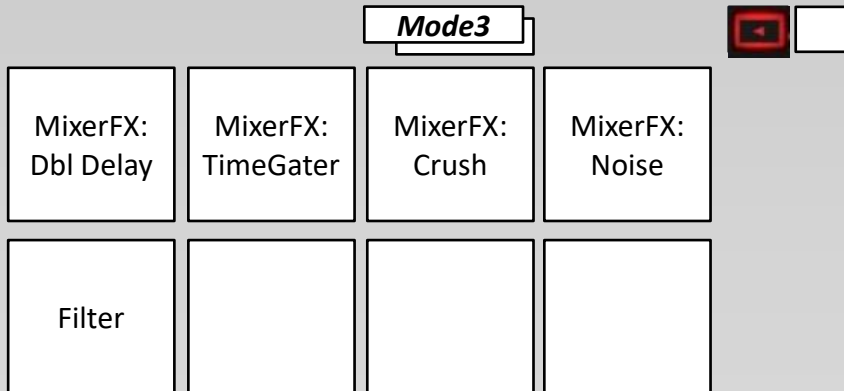


- Use “mode” button to cycle the top two pages
- Use direct shortcuts in DDJ-1000/SX3/etc

Pad mode #3: MixerFX and MacroFX

MAIN PAGES:

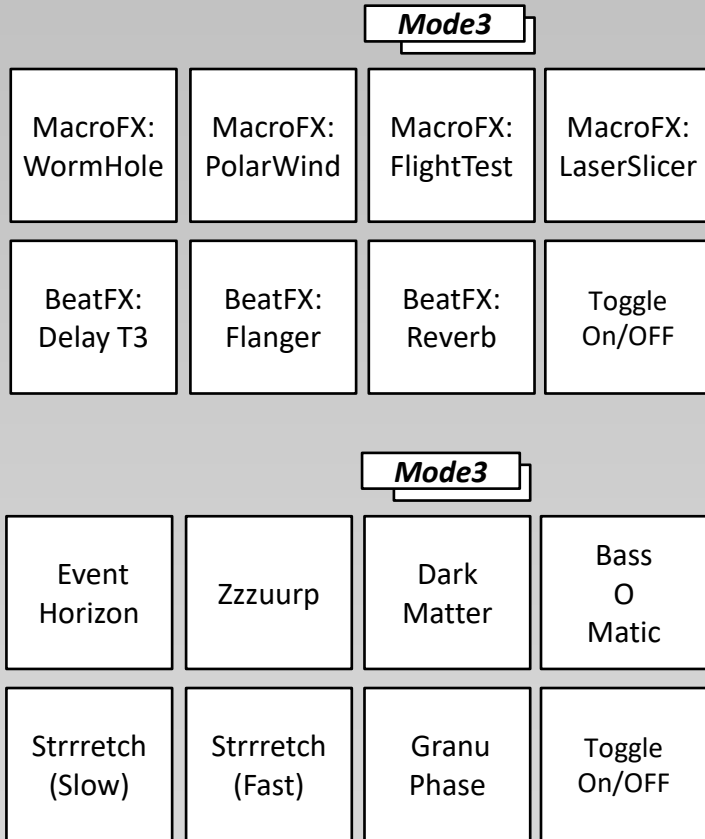

PAGE SELECTOR:

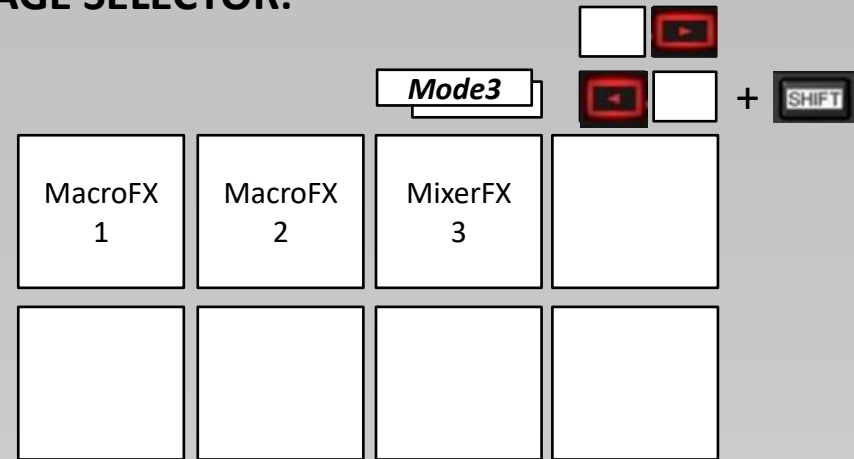

- Use “mode” button to cycle the top two pages
- Use “<” to cycle all pages
- Use “>” or “shift” to select a specific page



Pad mode #4: JogFX

Mode 4			
Beatmasher Digital filter Gater	Beatmasher Filter Reverb	EventHorizon (none) Gater	Gater Beatmasher Reverb
Flanger (None) Gater	Beatmasher Peak filter Gater	FormatFilter Peak filter Flightest	





- Enter jogFX mode on mode 4 (jog will blink)
- Touch jog to apply FX;
- Turn jog to change FX;
- Release jog to stop FX;
- Sampler volume to Dry/Wet
- Press “hotcues” to cancel jogFX (=scratch mode)


Pad #5: Tone Play

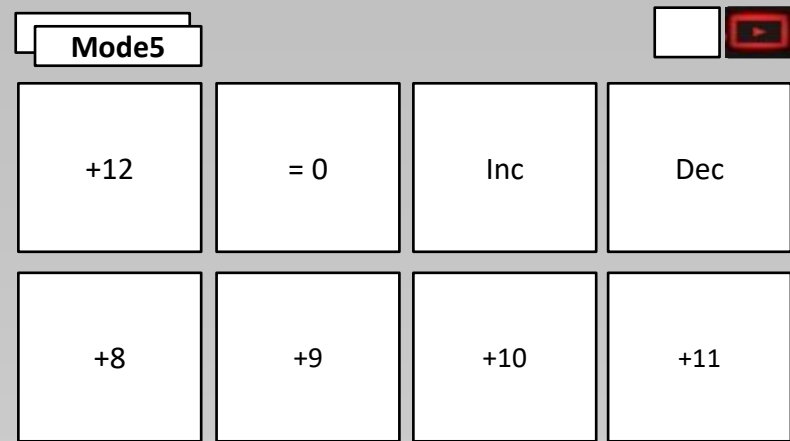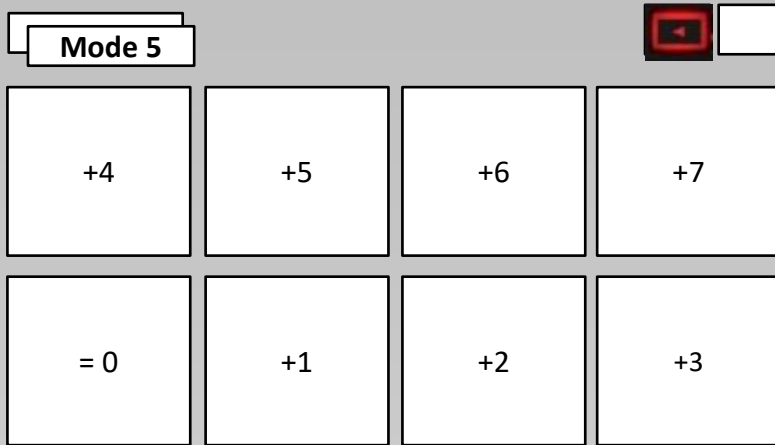

Use shift to choose between 3x modes:

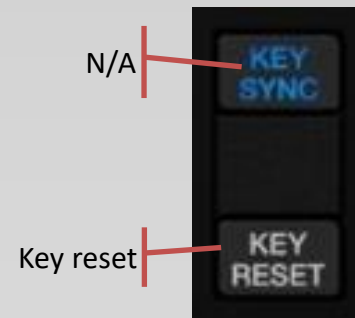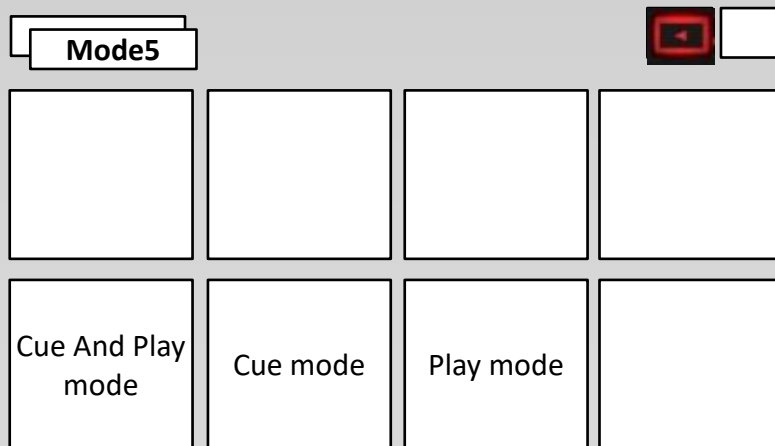


Pad mode #6: BeatJumps and Loops

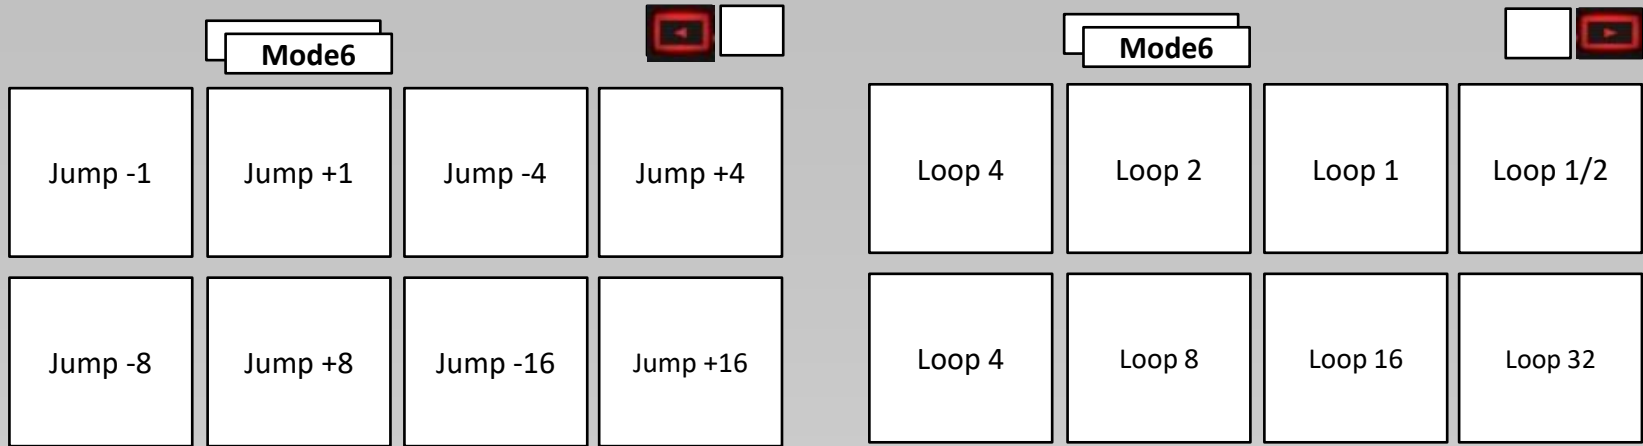


- Use "<" arrow to select "beatjump" mode
- Use ">" arrow to select "loop" mode


Pad mode #7: Slicer

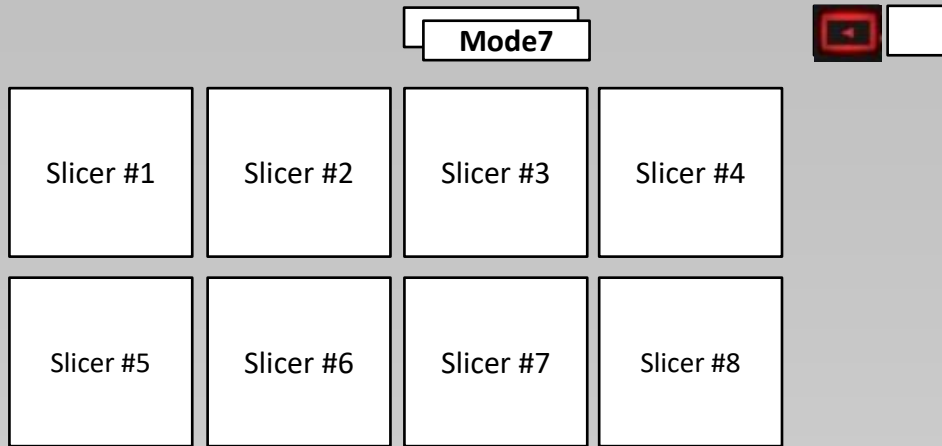

Use shift to choose between 3x modes:

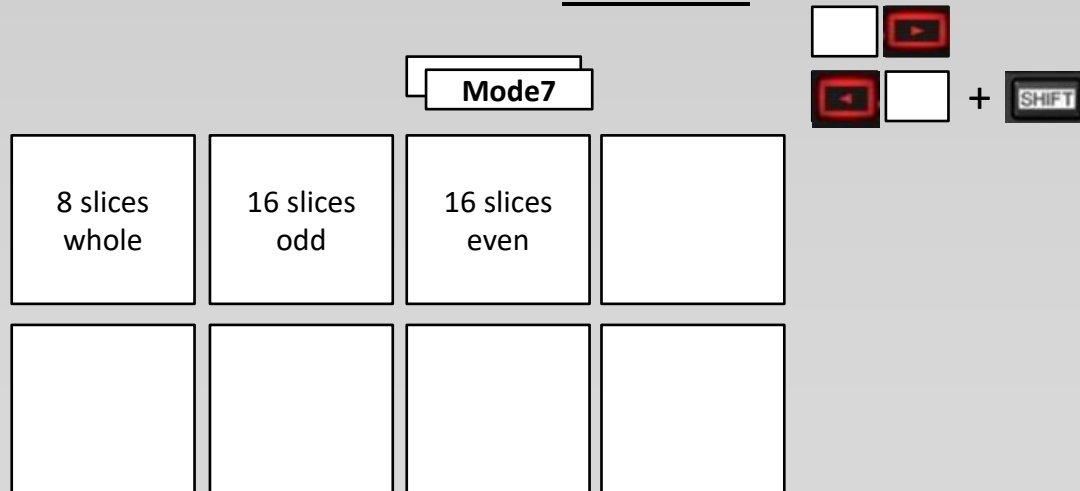

Pad mode #8: Sampler

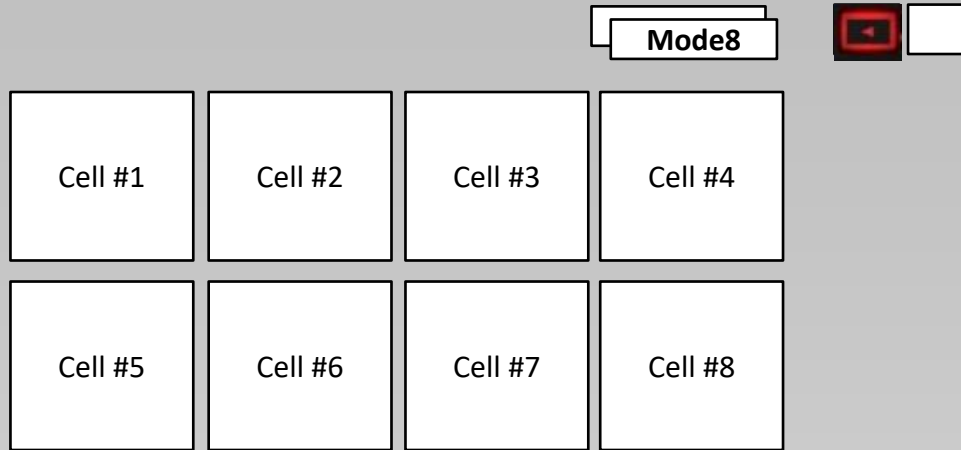

Use shift to mute / Toggle 1-shot

