


WeeNAS

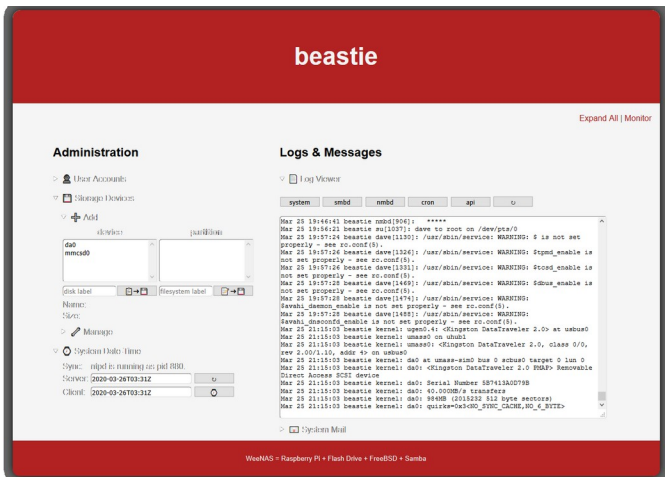

Installation Guide

This is an incomplete draft!

Everything you need to know to get your WeeNAS system up and running.

Trademarks, Copyrights, and Disclaimers

The term Raspberry Pi is a trademark of the Raspberry Pi foundation. <http://www.raspberrypi.org/>

FreeBSD is a registered trademark of the FreeBSD foundation. <https://www.freebsdoundation.org/>

Samba is a trademark of the Samba Project.
<https://www.samba.org/>

The text of this document is copyright (c)2020 David Horton, and is made available according to the terms of the Creative Commons Attribution Share-Alike (BY-SA) 4.0 license.

<https://creativecommons.org/licenses/by-sa/4.0/>

The source code of the WeeNAS API and its utilities are copyright (c)2020 David Horton and are made available under the conditions of the Simplified BSD license. See License.txt in the root of the WeeNAS software package.

Your data is important to you. You, and only you, are responsible for safeguarding it against loss. Using WeeNAS to store your data in no way removes that responsibility. Always maintain backups and have a recovery plan for when disaster strikes.

Installing WeeNAS on FreeBSD 12.1

This guide will help you get started with WeeNAS by outlining the procedure for installing FreeBSD, the operating system that is the foundation of WeeNAS.

To be successful, you should be familiar with the Raspberry Pi, know the basics of home network configuration, and also how to use Windows-based open-source network utilities. Most of the installation and configuration is scripted, but familiarity with using the command-line is helpful.

If you are an experienced Raspberry Pi tinkerer, you should be fine, but if this is your first RPi project, you may find it easier to start with one of the official Raspberry Pi distributions.

At a high level, these are the tasks:

1. Downloading the FreeBSD operating system image and writing it to an SD card.
2. Booting the Raspberry Pi with FreeBSD and connecting via secure shell.
3. Downloading and unpacking WeeNAS.
4. Running the WeeNAS installer to configure the system as a network attached storage device.
5. Adding users with the WeeNAS web-based administration tool.

What You Will Need

- A PC or laptop with access to the internet and a MicroSD card slot.
- A 32G Class 10 or faster MicroSD card that is compatible with Raspberry Pi.
- A Raspberry Pi 2B with power supply.
- An internet router with a wired connection for the Raspberry Pi.
- 7-Zip software to uncompress the FreeBSD image.
- Win32DiskImager to write the FreeBSD image to the MicroSD card.
- AngryIP Scanner to find your device's DHCP address.
- PuTTY Secure Shell (SSH) client for initial setup.
- Mozilla Firefox for web-based administration. (Firefox is best supported. Other browsers may work depending on their support for HTML5.)

Note:

All of the software listed above is open source licensed and costs nothing to use. However, if you find it useful, donations to these projects help keep them going.

Download FreeBSD

Use an FTP client to visit: <ftp.freebsd.org> or use a web browser and go the HTTP equivalent:

<http://ftp.freebsd.org/>

Browse to the directory for the 12.1 ISO images:
`/pub/FreeBSD/releases/ISO-IMAGES/12.1`


Find the .img.xz for your model of Raspberry Pi.

Remote site:	/pub/FreeBSD/releases/ISO-IMAGES/12.1
Filename	
 FreeBSD-12.1-RELEASE-arm-armv7-PANDABOARD.img.xz	
 FreeBSD-12.1-RELEASE-arm-armv7-RPI2.img.xz	
 FreeBSD-12.1-RELEASE-arm-armv7-WANDBOARD.img.xz	
 FreeBSD-12.1-RELEASE-arm64-aarch64-memstick.img	
 FreeBSD-12.1-RELEASE-arm64-aarch64-memstick.img.xz	
 FreeBSD-12.1-RELEASE-arm64-aarch64-mini-memstick.img	
 FreeBSD-12.1-RELEASE-arm64-aarch64-mini-memstick.img.xz	
 FreeBSD-12.1-RELEASE-arm64-aarch64-PINE64-LTS.img.xz	
 FreeBSD-12.1-RELEASE-arm64-aarch64-PINE64.img.xz	
 FreeBSD-12.1-RELEASE-arm64-aarch64-RPI3.img.xz	


This guide was written using the older Raspberry Pi 2B. Your experience may be different if you have a later revision board.

Write the Image to the MicroSD Card

First, uncompress the .xz image with 7-Zip by right-clicking the file and using the Extract Here option from the context menu.

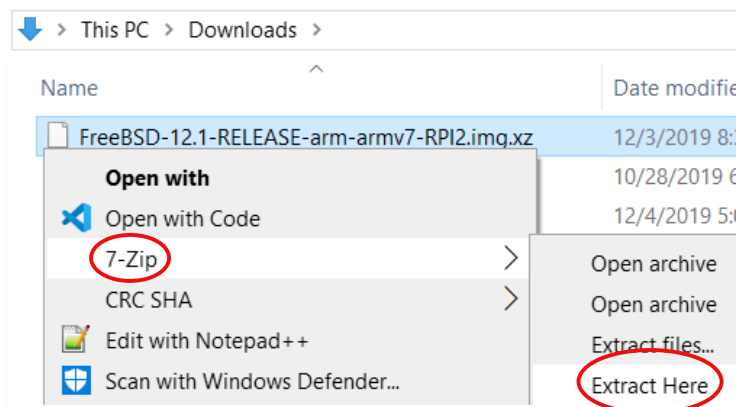


Next, use Win32DiskImager to copy the image onto the MicroSD card.

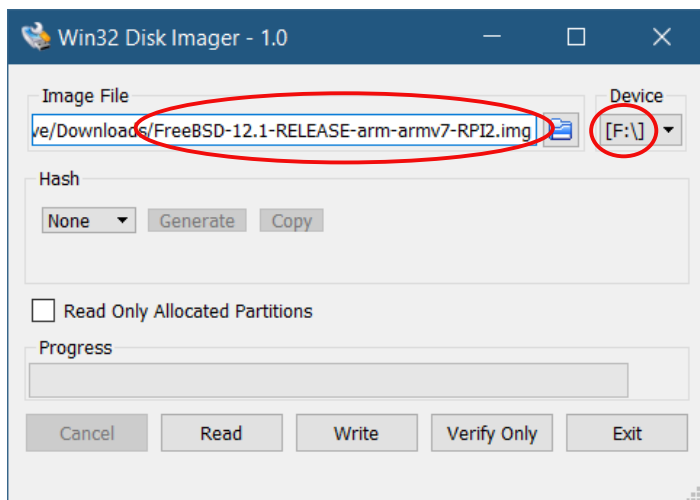


Verify that the correct .img file is selected and verify that the drive letter of the MicroSD card is correct.

If everything looks good, click the Write button to begin. The process takes about four minutes.

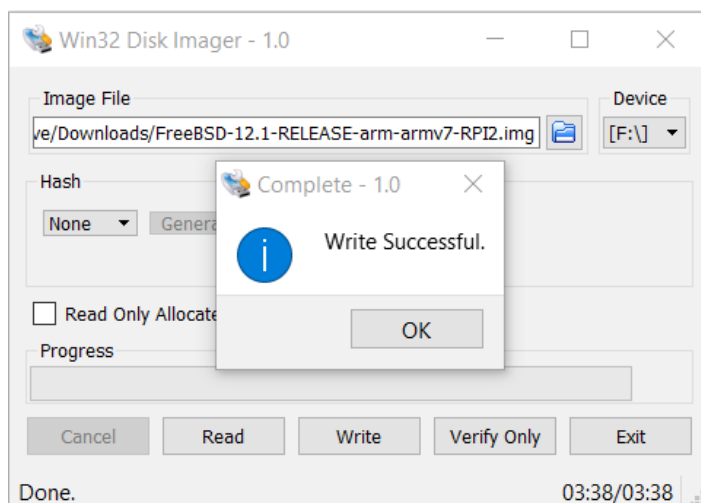


When complete, eject the media and remove the MicroSD card.



Booting FreeBSD

Insert the MicroSD card into the Raspberry Pi (left side of picture below, on the underside of the board.)

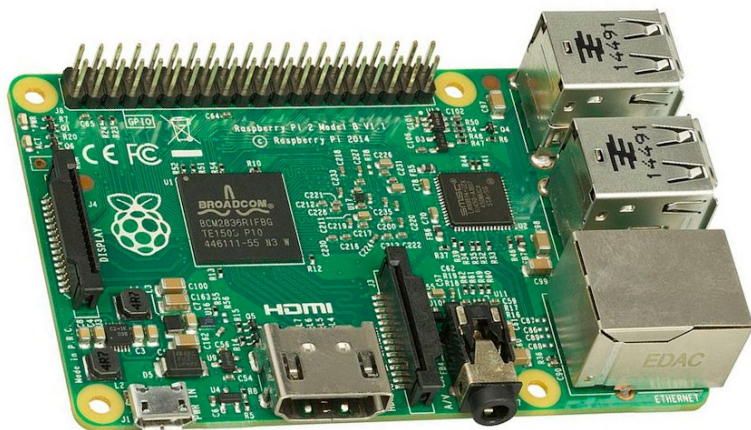

When inserting, remember that the label side of the MicroSD card faces down.

Next, attach an Ethernet cable between the Raspberry Pi's RJ-45 jack (lower right side of the picture) and a port on your internet router.

No USB devices should be plugged in at this time.

Finally, plug in the power cable (lower, left corner) and power up the Raspberry Pi.

The initial boot process takes some time and with no monitor attached, it's difficult to see how things are progressing. You can watch the LEDs on the Raspberry Pi to get a rough idea of the status.

After a bit of time, the red LED on the MicroSD socket side of the board will turn off. This means FreeBSD has started booting. Normally, this takes a minute at most. If the LED stays on longer than that, there may be a problem with the image written to the MicroSD card or the card itself.

Next in the boot process, the network link light and traffic indicator LEDs will illuminate, turn off, and come back on. This means the network subsystem is starting and is a good indication that FreeBSD is nearly ready for you to log in. Wait for the link light to remain on for a while before proceeding.

Finding Your IP Address

Before you can log into FreeBSD on the Raspberry Pi, you have to know the IP address. If your internet router shows a table of connected devices, look for it there under the host name of 'generic'. Otherwise, you can use Angry IP Scanner to find it.

Under the Angry IP Scanner menu, Tools > Fetchers, you can configure the columns of information that will be shown about each device. Add MAC Vendor to the default list.

 IP Range - Angry IP Scanner

Scan Go to Commands Favorites Tools Help

IP Range:	192.168.0.0	to	192.168.0.255	IP Range ▾	⚙
Hostname:		IP↑	Netmask ▾	Start	☰
IP	Ping	Hostname	Ports [12+]	MAC Vendor	

Fetchers

Here you can select fetchers for scanning. Fetchers are represented by columns.

Selected fetchers

Ping

Hostname

Ports

MAC Vendor

↑

↓

←

→

⚙

Available fetchers

TTL

Filtered Ports

Web detect

HTTP Sender

Comments

NetBIOS Info

MAC Address

Packet Loss

HTTP Proxy

OK


Cancel

Run a scan of your network and look for “Raspberry Pi Foundation” or “Raspberry Pi Trading” in the MAC Vendor column. Once you find it, note the IP address listed in the output.

 192.168.0.23	11 ms	[n/a]	22	Raspberry Pi Foundation
--	-------	-------	----	-------------------------

Logging in via SecureShell (SSH)


Open up PuTTY and enter the IP address you found into the field labeled 'Host Name (or IP address)'.

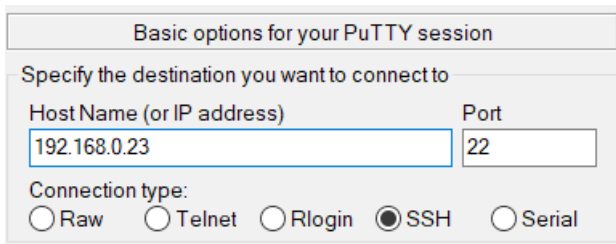

The screenshot shows the 'Basic options for your PuTTY session' dialog box. It has a title bar with the same text. Below the title bar, it says 'Specify the destination you want to connect to'. There are two input fields: 'Host Name (or IP address)' containing '192.168.0.23' and 'Port' containing '22'. Below these fields, it says 'Connection type:' followed by five radio buttons: 'Raw', 'Telnet', 'Rlogin', 'SSH' (which is selected), and 'Serial'.

Click the Open button.

Since this is the first login to this device, you'll get a security alert. You have to choose yes to continue.

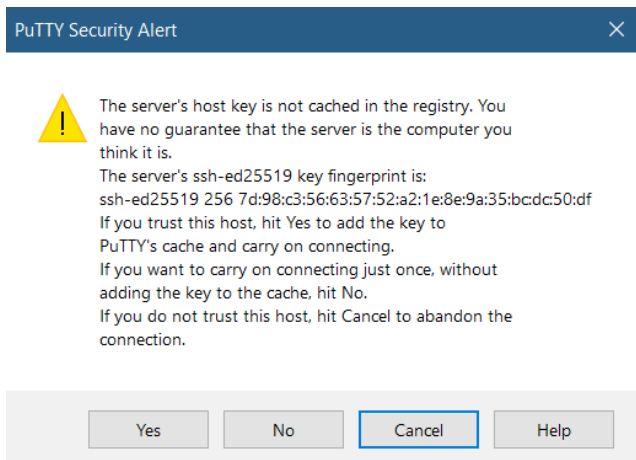

The screenshot shows the 'PuTTY Security Alert' dialog box. It has a title bar with the text 'PuTTY Security Alert' and a close button (X) on the right. Below the title bar, there is a yellow warning triangle icon. To the right of the icon, the text reads: 'The server's host key is not cached in the registry. You have no guarantee that the server is the computer you think it is. The server's ssh-ed25519 key fingerprint is: ssh-ed25519 256 7d:98:c3:56:63:57:52:a2:1e:8e:9a:35:bcdc:50:df If you trust this host, hit Yes to add the key to PuTTY's cache and carry on connecting. If you want to carry on connecting just once, without adding the key to the cache, hit No. If you do not trust this host, hit Cancel to abandon the connection.' At the bottom of the dialog box, there are four buttons: 'Yes', 'No', 'Cancel' (which is highlighted with a blue border), and 'Help'.

After that, a login prompt will appear. Log in with the default username/password combination of `freebsd/freebsd`.

```
login as: freebsd
Using keyboard-interactive authentication.
Password for freebsd@generic:
```

You'll be treated to some welcome messages and be left at a command prompt. Type `'su -'` and enter `'root'` when prompted for a password.

```
freebsd@generic:~ % su -
Password:
root@generic:~ #
```

Follow this same procedure any time you need gain superuser access via SSH (Passwords will be different after configuration.)

Downloading WeeNAS

In this guide, the WeeNAS package will be installed into the /root directory. It can be installed in other locations, but /root is what the guide will use.

Change directory to /root and download the latest version of WeeNAS using the 'fetch' program and the following link: <https://github.com/DavesCodeMusings/WeeNAS/archive/master.zip>

`fetch --no-verify-peer [github link]`

The `--no-verify-peer` option avoids "Certificate verification failed" errors that crop up.

After downloading, unzip it with 'unzip master.zip'.

```
root@generic:~ # fetch --no-verify-peer
https://github.com/DavesCodeMusings/WeeNAS/archive/master.zip
fetch: https://github.com/DavesCodeMusings/WeeNAS/archive/master.zip: size of
remote file is not known
master.zip                                2202 kB 2530 kBps    01s
root@generic:~ # unzip master.zip
Archive: master.zip
```

The directory name WeeNAS-master comes from the GitHub platform. It must be renamed to weenas before use. The command 'mv WeeNAS-master weenas' will change the directory name to weenas.

```
root@generic:~ # mv WeeNAS-master weenas
```

The remainder of this guide will refer to /root/weenas as the installation location.


Installing WeeNAS

WeeNAS comes bundled with a script called `install.sh`. This script will detect and configure the USB storage device used for home drives as well as install the Samba and Node.js packages it requires.

First, plug in the USB storage device you want to use for home drives. No other USB flash drives should be plugged in at this time.


Then, run the script from the `/root/weenas` directory, like this:

```
cd /root/weenas  
sh ./install2.sh
```

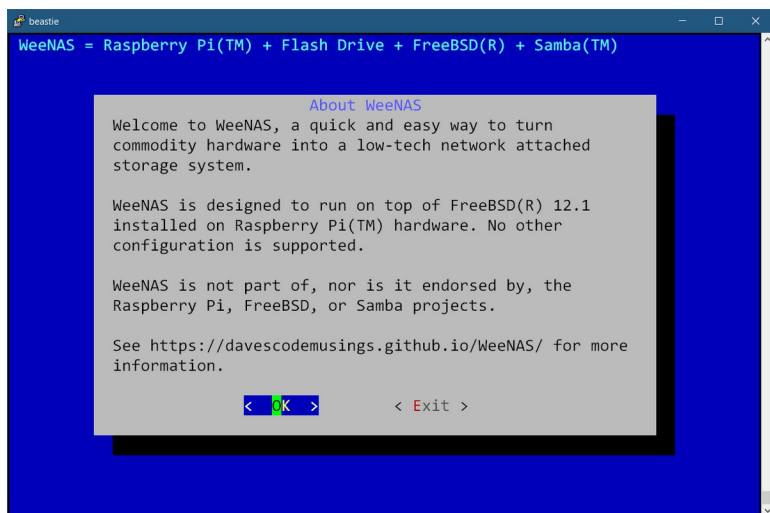


You'll be shown a brief introduction.

You can press Enter or click the mouse on OK to proceed.

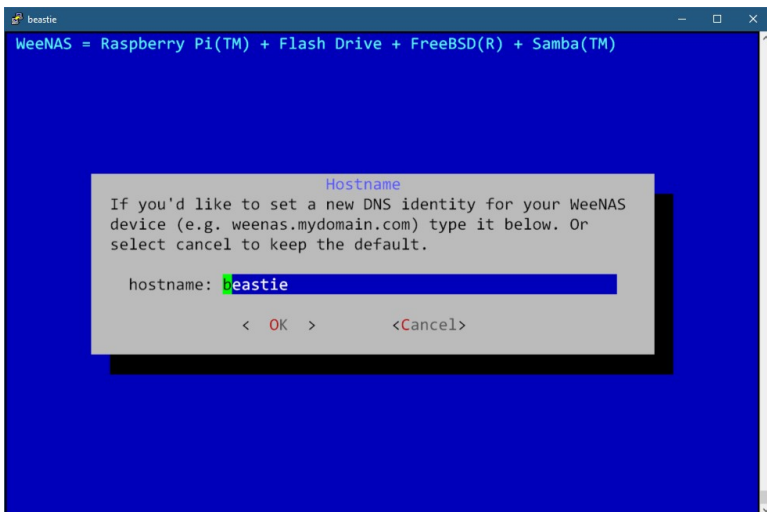

You'll be given the option to name you WeeNAS device with a hostname. If you cancel this, the generic FreeBSD hostname will be used.

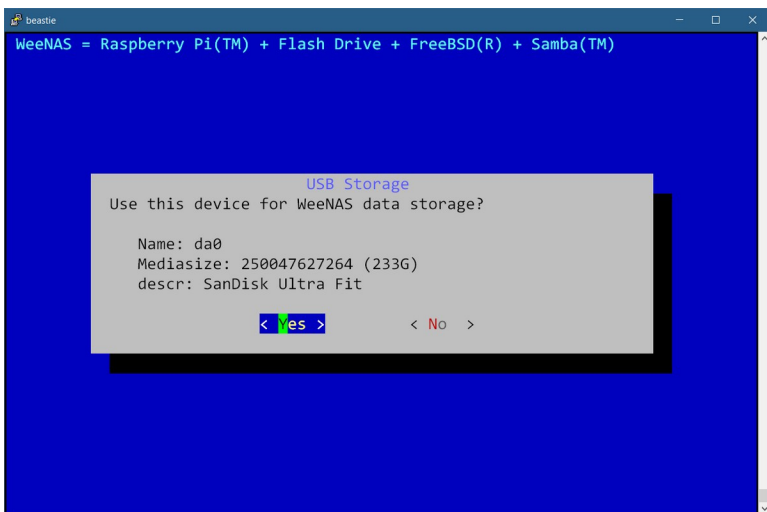


Your USB flash drive will be detected and information displayed to help you identify it.

If there is more than one USB storage device, you will see the following screen instead.




Remove any other devices and choose Rescan. Installation will proceed once the installer detects there is only one flash drive.

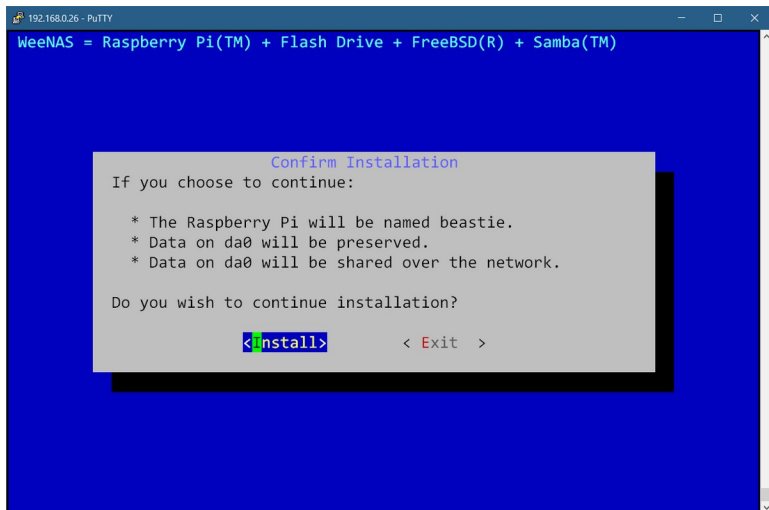

You will be asked to confirm installation. This includes overwriting the contents of the USB flash drive if you have directed the installer to do so.

As installation progresses, you will be shown checklists for each task.


For example:

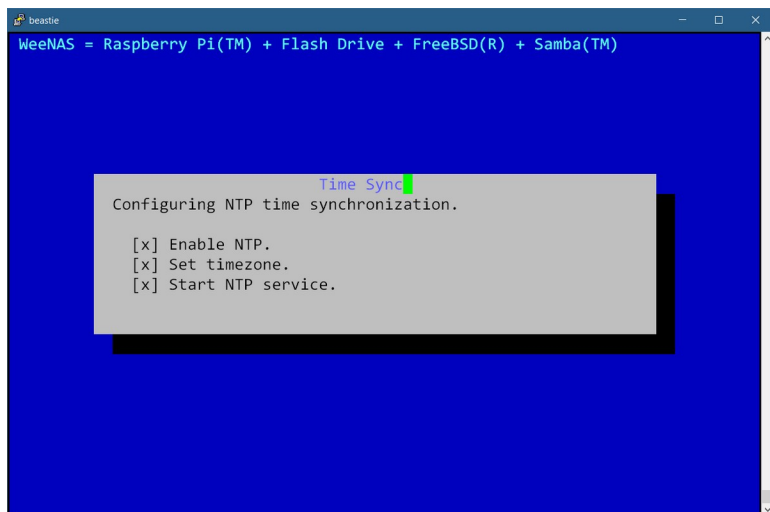

This screen shows that all of the tasks for time synchronization have been completed.


Several informational screens will be shown. The checklists will update automatically and do not require any interaction.

The last item that needs your attention is the root password. The default FreeBSD password is simply 'root' and is well documented.

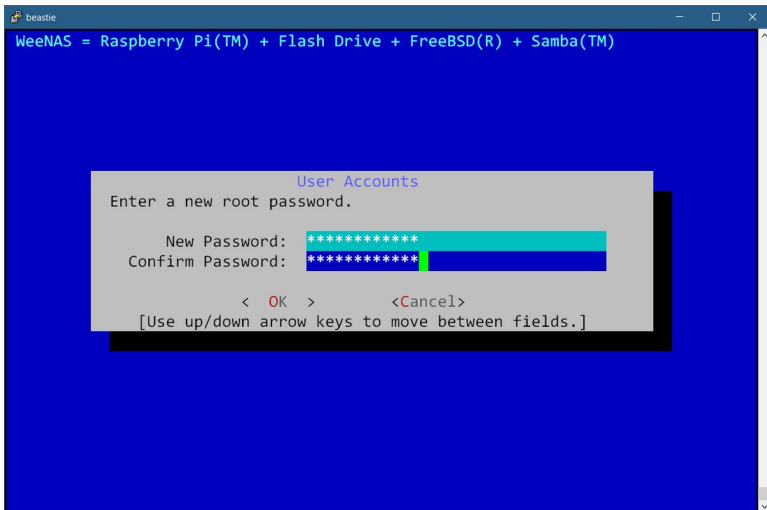


Change the password should to something more challenging or click cancel to keep the FreeBSD default.

In the end, you will see a message directing you to open a web browser to customize the system.

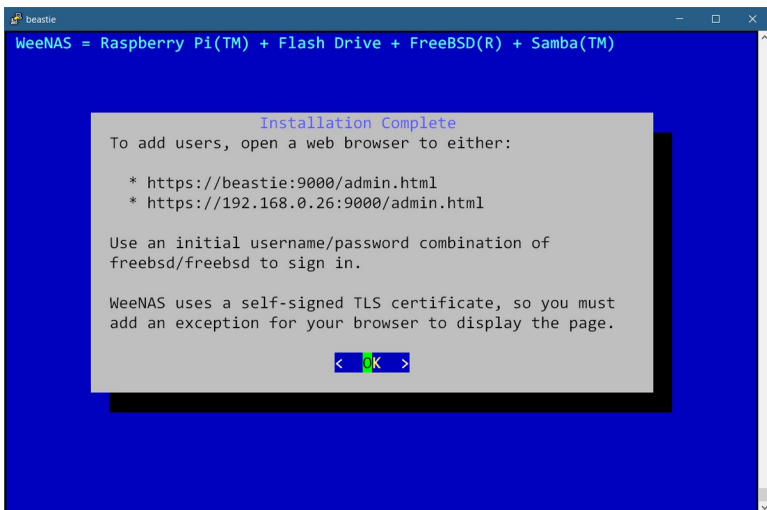

When you open the browser, you will get a security warning because of a self-signed encryption certificate.

Here is an example from the Firefox browser:

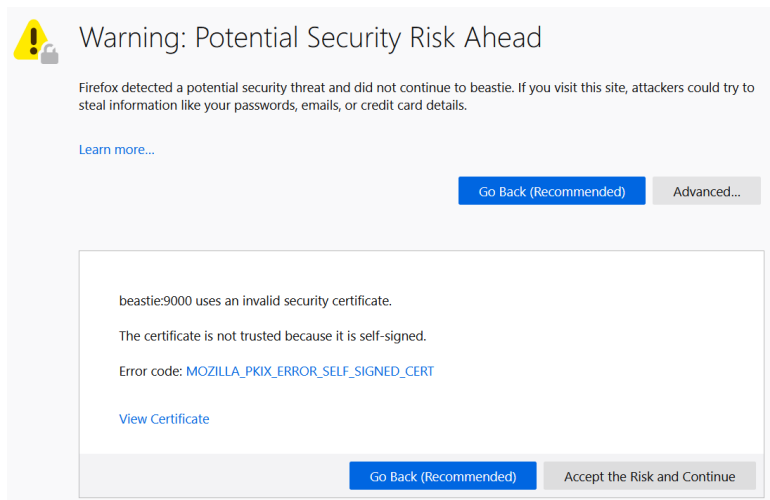


Despite the ominous warning, it is safe to proceed. All data will still be encrypted.

For a more thorough explanation see this article:

https://en.wikipedia.org/wiki/Self-signed_certificate

After the certificate is accepted, the admin page will appear. It looks like this:

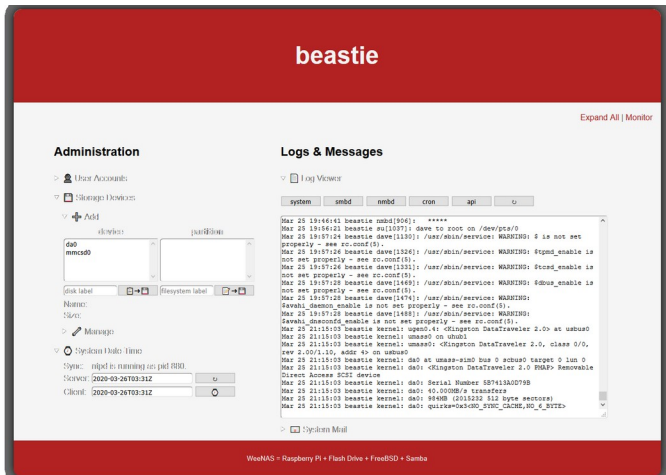


Use the admin page to add and remove users, view device statistics and system log files.


Testing Connectivity (SSH)

Secure Shell is your way to access the underlying FreeBSD operating system. This test is very important, because if it does not succeed, you will have no way to access the system.


Open another PuTTY window and enter the IP address of your WeeNAS Raspberry Pi. Log in with the trusted user account and the password given to the 'passwd' command.

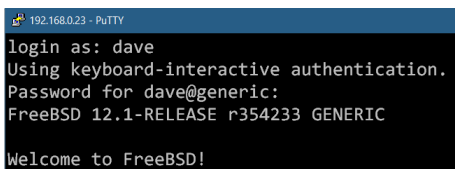A screenshot of a PuTTY terminal window. The title bar shows a small icon, the IP address '192.168.0.23', and the application name 'PuTTY'. The terminal text shows a login prompt 'login as: dave', followed by 'Using keyboard-interactive authentication.', 'Password for dave@generic:', and the system banner 'FreeBSD 12.1-RELEASE r354233 GENERIC'. The session ends with 'Welcome to FreeBSD!'.

Enter the command 'su -' to switch to the root user. If all is successful, go ahead and lock the built-in accounts of freebsd and toor.

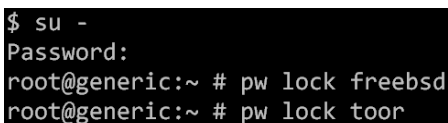A screenshot of a terminal window showing a user prompt '\$ su -', followed by a 'Password:' prompt. The user then enters two commands: 'root@generic:~ # pw lock freebsd' and 'root@generic:~ # pw lock toor'.


This is also a good time to change the root password to something else. Do that with the 'passwd' command.

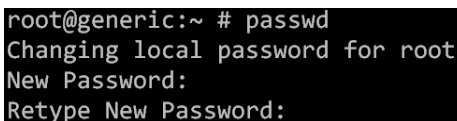A screenshot of a terminal window showing a root prompt 'root@generic:~ # passwd'. The user enters the command, and the system responds with 'Changing local password for root', followed by prompts for 'New Password:' and 'Retype New Password:'.


Testing Connectivity (SMB)

SMB is the Windows way of connecting to network shares. This is how you will access the files stored on the WeeNAS system.


Open up Windows Explorer and enter the IP address of the WeeNAS server preceded by a double backslash.

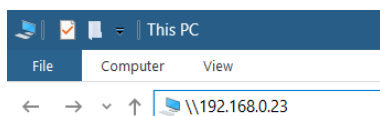

You should be prompted for a username and password. Enter the trusted username and the password given to the 'smbpasswd' command. You do not need to check the box labeled 'Remember my credentials' at this time.

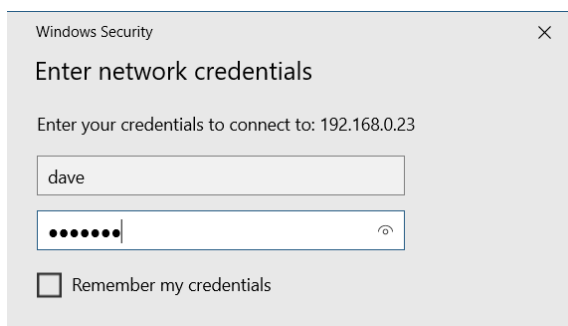

If all goes well, you should see a network folder with your user account name and possibly a shared folder if you elected to include that in the configuration.

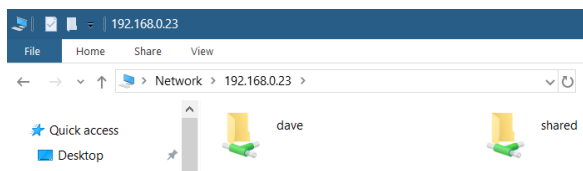

Reboot for Config Changes

Congratulations! You've installed, configured and tested the installation of your WeeNAS system. The last thing to do is reboot. This will ensure that changes to the hostname or network configuration take effect. It's also good way to find out if there are any problems with the system.

But, before you reboot, you may want to configure the WeeNAS API as a service that will start automatically when the system comes up. That's covered in the upcoming section.

When you're ready, you can reboot by logging in as a trusted user, 'su -' to root, and then enter the command 'shutdown -r now'.

Next Steps

Now that the initial installation is complete, regular day to day maintenance can be performed using the WeeNAS web-based admin page. To access it, simply open a web browser to:

`http://[weenas host]:9000/admin.html`

Replace [weenas host] with the hostname or IP address of your WeeNAS FreeBSD Raspberry Pi.