

# **H24VLP Location Technology Project 2 Introduction to Inertial Explorer**

Dr Lukasz Kosma Bonenberg

18th February 2016

# Contents

	Page
<b>1 Layout of the practical</b>	<b>2</b>
1.1 Dataset used . . . . .	2
1.2 Handling of data . . . . .	2
1.3 Supporting Document . . . . .	3
<b>2 Workflow</b>	<b>3</b>
<b>3 Creating a project</b>	<b>4</b>
<b>4 Processing SPAN GNSS data</b>	<b>4</b>
4.1 Precise Clocks/Orbits . . . . .	5
4.2 Processing GNSS data . . . . .	5
4.3 Introducing static data in GNSS processing . . . . .	5
<b>5 Processing Loosely Coupled GNSS/IMU data</b>	<b>6</b>
5.1 Processing POSRS . . . . .	7
5.2 Processing SPAN . . . . .	8
5.3 Processing Microstrain . . . . .	8
<b>6 Processing IMU on its own</b>	<b>9</b>
<b>7 Simulating GNSS outage</b>	<b>9</b>
<b>8 Exporting final results</b>	<b>10</b>
8.1 Graphical results . . . . .	10
8.2 Coordinates . . . . .	10
8.3 Checking results . . . . .	11

## Introduction

The goal of this practical is to assess the performance of integrated GNSS and INS for navigation and tracking applications, using a moving platform and to develop a full understanding of the advantages and limitations of integrated GNSS and INS system.

To this end you will analyse the performance of three types of IMU sensors (navigation grade, tactical grade and low cost MEMS one) collected during route combining three different environments:

- semi-urban;
- rural;
- dense urban (down town).

You will first process GNSS data (as outlined in sections 4) to create good GNSS trajectory to be used for processing each IMU separately (section 5). After obtaining understanding of each system performance you will introduce artificial GNSS denied environment, by

introducing gaps (outages) in the GNSS data set (section 7). Duration of those gaps should allow you to properly characterise each of the IMUs and combined with exploratory analysis of all results should allow you to answer the following:

**Characterise the performance of each integrated GNSS and INS system for navigation and tracking applications.**

We expect you to both visualise and summarise your work. While a brief description of outputs provided by IE can be found in section 8, you are expected to show your own judgement and expertise in selecting output supporting your narrative. It is likely that IE output will be sufficient for that, but you are welcome to summarise some of the results in the tables or plot additional graphs using comparing exported coordinates.

## 1 Layout of the practical

This practical will span two supervised lab classes, giving you knowledge to complete the task. Apart from that, you are expected to work in your own time, and to facilitate this, each group will be provided with two IE dongles for the duration of three weeks.

**Week 1** Introduction to the practical. By the end you should have processed all your GNSS data and started processing IMU data.

**Week 2** IMU processing. By the end you should have processed all IMU data and start introducing data gaps.

**Week 3** Group presentation.

### 1.1 Dataset used

Approximately 90 minutes long dataset was collected using NGI van, equipped with three types of IMU. Trial was run in around Nottingham (see figure 2). Each dataset should have static period at the beginning and the end, and you will explore both GNSS and IMU data to identify those periods properly. NGB2 was used as a reference station for the duration of the trials. Experiment setup is summarised in figure ?? and table ??.

All data was converted to *Inertial Explorer* native format. Those files are:

**NGB2.\*** GNSS data from NGB2 reference station;

**POSRS.\*** IMU and GNSS data for POSRS receiver (navigation grade);

**SPAN\_54.\*** IMU and GNSS data for SPAN receiver (tactical grade);

**microstrain.imr** IMU data for low cost Microstrain receiver;

### 1.2 Handling of data

During the first week you will be provided with all relevant data files, which you should copy to local folder on your computer. Please make a backup of all your work before

leaving the Photogrammetry Lab. This should include all RAW data files and any *Inertial Explorer* generated files. It is recommended that all project files are placed in the same directory.

## 1.3 Supporting Document

Following document are also provided for your reference:

**POSRS.pdf** Document outlining POSRS characteristics;

**SPAN.pdf** Document outlining SPAN characteristics;

**Microstrain.pdf** Document outlining Microstrain characteristics;

**InertialExplorer850\_Manual.pdf** Full manual for IE 8.50 (reference only).

## 2 Workflow

In order to process the data, you will be required to:

1. Create a separate project for each IMU (SPAN, POSRS, MicroStrain);
2. Process GNSS data, ideally using SPAN receiver, until you satisfied with results;
  - a) Identify static periods for IMU processing;
  - b) Rename final GNSS results as GNSS.cmb.
3. Process LC IMU data:
  - a) Process POSRS, using GNSS.cmb and within static periods ranges, as described in 5.1;
  - b) Process SPAN, using GNSS.cmb and transferring alignment from POSRS, as described in 5.2;
  - c) Process Microstrain, using GNSS.cmb and transferring alignment from POSRS, as described in 5.3).
4. Process IMU data only:
  - a) Process each IMU using transfer alignment as described in section 6;
  - b) Draw estimation of required GNSS gaps for each IMU system.
5. Introduce GNSS data gaps as described in section
6. Export plots, data ect.
7. Draw conclusions.

Introduction to Inertial Explorer Following section explains basics of using IE. If you require additional information please refer to Inertial Explorer Manual provided.

### 3 Creating a project

You need to create a separate project file for each IMU and put them in the same folder. Please name each project accordingly (SPAN, POSRS, MicroStrain ect).

To create a new project open *Inertial Explorer* and go to **File->New Project->Project Wizard**

- Navigate to project folder and create a new project (call it SPAN, POSRS, MicroStrain ect).
- For SPAN project
  1. Select required GNSS & IMU files (SPAN\_54.\*)
  2. antenna height 0m, Measured to APR, use antenna profile as per figure 1
  3. Next
  4. I would like add Base Station Data
  5. Add Station From File
  6. Select NGB2.\* files as base
  7. antenna height 0.502m, profile *LEIAR25.R4*
  8. position 52°57'06.95636"N 1°11'02.39879"W 91.2006m
  9. Measured to APR
  10. NEXT, NEXT, Finish, Finish
- For other projects (POSRS, Microstrain)
  1. Select required IMU files only (\*.imr)
  2. antenna height 0m, Measured to APR, use antenna profile as for SPAN
  3. Next
  4. I would like add Base Station Data
  5. Finish, Next, Finish

### 4 Processing SPAN GNSS data

As you are only interested in performance of IMU component, you will use the same GNSS data set for each project. To start with check your data overlap using **Output->Plot Results** and selecting *File Data Coverage* plot. Does rover and base station data overlap? What about IMU data?

## 4.1 Precise Clocks/Orbits

The precise orbits/clocks latency is 12-18 days and the GPS rapid ones its less then a day. If observation are available and you haven't downloaded them in last step, use ***File->Add precise Files***

- Set proper time and date, check GLONASS and press Download for combined GPS and GLONASS data (some files will be overwritten);
- *Set proper time and date, uncheck GLONASS and press Download for GPS data (clocks are higher resolution then a combined GPS and GLONASS ones);*
- Press OK to exit window.
- In ***View->Project Overview*** you should be able to see all the files you added.

## 4.2 Processing GNSS data

Go to ***Process->Process GNSS***

- Processing Method: *Differential GNSS*;
- Processing Direction: *Both*;
- Profile GNSS: *Ground Vehicle*, don't change any *Advanced..* options;
- Add description/User name.

To check quality of the position first check overview summary using ***View->Processing summary*** and then use following plots (***output->Plot Results*** or F7):

- Combined Separation
- Combined Separation(Fix)
- Estimated Position Accuracy
- Quality factor
- Float/Fixed Ambiguity Status

To check baseline data use following plots:

- Local Level Vector (pay attention to height component !)
- Distance Separation
- RMS - Carrier Phase

## 4.3 Introducing static data in GNSS processing

For the initialisation of IMU we need to identify static periods at the beginning and end of dataset. We can do using GNSS data only, and also try to improve its accuracy:

- use *Acceleration Profile* or *Velocity Profile* plots to identify static periods.
- create new file Static.txt with each row identifying static period as NAME START\_TIME END\_TIME (see IE manual page 32 for details). Compare example below:

1	NGI_Start	201200.0	203505.0	Intial_Period_NGB_Yard
2	NGI_End	221200.0	223505.0	End_Period_NGB_Yard

- use **View->GNSS Observations->Remote->Insert Static/Kinematic Markers** and select *Use user generated file to define static periods* to import static data
- plot *File data coverage* to check if data is properly changed;
- process GNSS data again
- Use *Static Session Convergence* plot to assess each period
- Use any of plots described in previous section to compare results.

Once you happy with identified static periods (they should be between 5-10 min long) note beginning and end of whole dataset (that is from first static period to end of last static period identified). Whole processing generated SPAN.cmb file (combined GPS file). You are going to be using this file later, so please make a copy of it and re-namne it, for example GoodData.cmb. You should not need to re-process GNSS.

#### NOTES

Every plot have menu accessible by right clicking on it. Selecting *Properties* allows to modify plot display. Plot range can be modified from same menu using *X-Axis* and *Y-Axis*. *Apply to All* subcommand match all open plots to the current one. *Compute statistics for...* provide quantification of plot data. Use **Ctrl+C** to copy window content. If you ever close background map, use **Output->Show Map window**.

## 5 Processing Loosely Coupled GNSS/IMU data

To process Loosely Coupled GNSS/IMU data use **Process->Process LC**. For every dataset, you should select **Advanced->System** and in *IMU Time Range* input beginning and end of correct dataset (that is from first static period to end of last static period identified in section 4).

#### NOTES

To verify static periods always plot *File Data Coverage* and *Velocity profile*. Before proceeding check orientation of axis and level arms (those are values AFTER the rotation) are as provided in table 1.

Following subsection explain settings and workflow for each sensor.

## 5.1 Processing POSRS

In *Process->Process LC* choose:

**update data** *External Trajectory*; Use *Browser External* to select \*.cmb file.

**POSRS Profile** *SPAN Airborne (uIRS)*

**Lever Arm Offset** use POSRS lever arms from table 1 and select *Z to ARP*

**Body to IMU Rotation:** *180,0,90*

### 5.1.1 POSRS Workflow

1. Run all automatic. There should be small separation between pitch and roll (70 arc-sec), aligned with large jumps in heading at the beginning and the end (up to 700 arc-sec). This tend to indicate weak starting (and finishing) angle estimate. Everything else should be smooth (within 70 arc-sec).
2. Plot *Acceleration Profile* and *Velocity Profile* to check if static periods are matching ones from GNSS only processing. Make sure that dataset start and finish on static period changing *IMU Time Range* in **Advanced...** if necessary.
3. Knowing static periods go to **Advanced...**and in **Method for Initial Alignment** select *Static Coarse+Fine align* for both reverse and forward. Use Coarse: 60-100s, Fine 100-200s. If you have longer static dataset extend fine alignment period. Results should be within 10 arc-sec and there should be no separation between pitch and roll. There will be large jumps in heading at the beginning and end (up to 100 arc-sec)
4. Transfer alignment that is use reverse value for forward solution and vice versa.
  - In **Advanced...** for the **Method for Initial Alignment** select *Transfer Alignment (enter known attitude)* and press *Enter Attitude* button. You will do the same for forward and reverse solution.
  - Click *Get From Trajectory* and select *reverse* POSRS data (\*.rim) for forward and *forward* POSRS data (\*.fim) for reverse. Estimated StdDev for both should be similar. Increase it tenfold (x10) to loosen EKF.
  - Click OK
  - Click *Enter Position and Velocity*, click *Get from Trajectory* and select the same files (they should be already selected). Click *Extract*.
  - I suggest increase estimated StdDev tenfold (x10) to loosen EKF.
  - Click OK three times to get back to *Process Loosely Coupled* screen.
  - Process data
5. Results should be within 10 arc-sec for heading and 2 arc-sec for rest. There should be no separation between pitch and roll. Heading separation should be largest in the middle and no jumps at the beginning/end.



### 5.1.2 Checking results

To check quality of solution:

- To check lever arm in **Process->Process LC** go to **Advanced...->States** and check *Solve for lever arms*. After reprocessing the data plot *IMU/IMU-GPS Level Arm* and compare results with values given. Make sure to reprocess data without *Solve for lever arms* for final results and remaining plots.
- Plot *Attitude Separation* to check IMU initialisation.
- Heading (orientation of axis) can be checked by *IMU Heading COG difference* and *Attitude(Azimuth/Heading)* plots.
- To check final position, and quality of LC results plot *Combined Separation*, *Combined Separation (fix)* and *IMU/GPS position misclosure*.

## 5.2 Processing SPAN

In **Process->Process LC** select:

**update data:** *External Trajectory* (select same \*.cmb file as for POSRS processing)

**SPAN** Profile: *SPAN Ground (LCI)*

**Lever Arm Offset** use SPAN lever arms from table 1

**Body2IMU** Rotation: *0,0,90*

### 5.2.1 SPAN Workflow

1. Run all automatic. This is purely to check if data is ok.
2. After checking for static data run *Static Coarse+Fine align*, suggested settings are Coarse: 120s, Fine 480s. If you have longer static dataset extend fine alignment period. Results should show improvement over previous one
3. If all is correct transfer alignment from POSRS as described in section 5.1.

### 5.2.2 Checking results

Same as for POSRS.

## 5.3 Processing Microstrain

In **Process->Process LC** select:

**update data** External Trajectory; Use Browser External to select \*.cmb file.

**Profile:** *SPAN Ground (ADIS16488)*

- go to **Advanced...->States**
- Under *Error Model* uncheck *Lock Selection* and select **Automotive (Low Precision)** error model

**Lever Arm Offset** use POSRS lever arms from table ??

**Body2IMU** Rotation: *180,0,90*

Follow section ?? to obtain all results. Bear in mind that this sensor is of much lower accuracy the other ones and it might be more logical to focus on the small set of data.

## 6 Processing IMU on its own

After defining starting and ending orientation and position for IMU (using *Transfer Alignment*) it is possible to process IMU only data. To do so:

1. In **Process->Process LC** check **Process IMU Data only** box;
2. Depending on desired outcome select Both/Forward/Reverse in **Processing Direction**;
3. Provide proper description;
4. Click **Process**.

## 7 Simulating GNSS outage

As a part of your assignment you will simulate a GNSS outage. To do this you need to remove epochs from GNSS generated trajectory (see section 4 for more details). Each epoch is saved in following record

```

1 Out {Tim: 121252.00 121252.000000 1777                                     %GPS second HHMMSS.SSS GPS
2 Geo: 52 57 07.03189 -1 11 00.40441 80.5757 0.061                       %vehicle location
3 Loc: 37.235 2.335 -10.564 0.054 -0.028 -0.002
4 Sta: 2 0.025500 1.31 1.420 0.960 1.040
5 Rms: 0.0282 2.180 0.000 0.023 0.0406 7.880 1.126
6 Var: 3.85994e-003 6.52259e-004 ...
7 Ecf: -7.457 37.397 -7.025
8 Acc: -0.010 0.013 0.025
9 Flg: K L 7 6
10 Sep: 0.136 -0.211 0.151 0.069 0.108 0.077
11 Wgt: 2 2 39 61
12 Cov: -4.00800e-004 7.41043e-005 ...
13 }
```

Delete *Out{...}* to remove whole epoch. Make sure you don't remove static data used by IMU to initialise. Start with small data gaps and slowly increase their duration. Make sure you copy and rename relevant \*.cmb file and you work on COPY! I suggest experimenting with different settings of **Processing Direction** in **Process->Process LC** to fully understand system accuracy.

## 8 Exporting final results

### 8.1 Graphical results

To save all active plots use **Output->Build HTML Report** . Data will be saved in .\Html folder. Save and check all the plots listed in this walk-through. You should have at least two set of plots (testing and final) for each sensor! To output trajectory to Google Earth use **Output->Export to Google Earth...**

In case of multiple exports it is recommended to change the output parameters. To do so right click on the background map window, go to **Export** tab and set the following:

**Optimize output for trajectory comparison in GE** creates new colour for the each export (it also means that export don't follow Quality Numbers any more), files are not overwritten and a new folder is created if the *Run* descriptor has changed.

**Use concise epoch description for lower memory usage** shortens output information allowing for quick display in Google Earth

First and last option of this menu (*Hold epochs and events to ground* and *Output MSL height for better compatibility with GE elevation data, using*) are mutually exclusive and should be used respectively for terrestrial (ground) and aviation data only.

### 8.2 Coordinates

#### NOTES

To use **Export Wizard** combined solution (\*.cmb) must exist. It is generated after each LC/TC processing run but it can be also created using **Process->Combine Solution**. Use extreme caution if using this option.

To output post-processed coordinates as ASCII go to **Output->Export Wizard**

- Select output profile.
  - Most likely you will create your own profile using Modify or New buttons.
  - I suggest outputting either in local grid (East, North, Ellipsoidal Height) or Absolute ECEF-XYZ.
  - Once happy click OK and Next

#### NOTES

IE does not produce correct OSGB coordinates. For this experiment you can compare in any grid coordinates, including quasi-OSGB, as long as you mention it. For any other assignment, to obtain those export data as ECEF XYZ and convert it to OSGB use Grid InQuest<sup>a</sup>.

<sup>a</sup><http://www.ordnancesurvey.co.uk/docs/gps/grid-inquest-executable.zip>

- Select *Use processing datum* and click Next
- In this window you define your output parameters
  - Define time interval for output (you can interpolate up to 200Hz with POSRS/SPAN but I would recommend outputs of few Hz to keep file sizes reasonable)
  - Define lever arm using table 1 but read following note in this section before proceeding.

#### NOTES


If you followed instruction correctly, your GNSS and IMU level arm will be calculated to antenna ARP but output lever arm will be estimated to antenna phase centre. This means that for EXPORT ONLY your level arm has to be calculated using equation  $Arm_{exprt}^Z = Arm^Z - AntProfile_{L1}^Z - AntHeight$ . Relevant Arm values can be read from table 1 and antenna profile (**View->Project Overview**).

- Uncheck *View ASCII* and click *Finish*.


## 8.3 Checking results

Check IMU solution against GNSS one. Export values at ARP (**SUBTRACT antenna L1 height offsets**). It should agree to few mm in clean environment. Check between different IMU solutions. SPAN/POSRS should agree on mm to cm level.

Appendixes

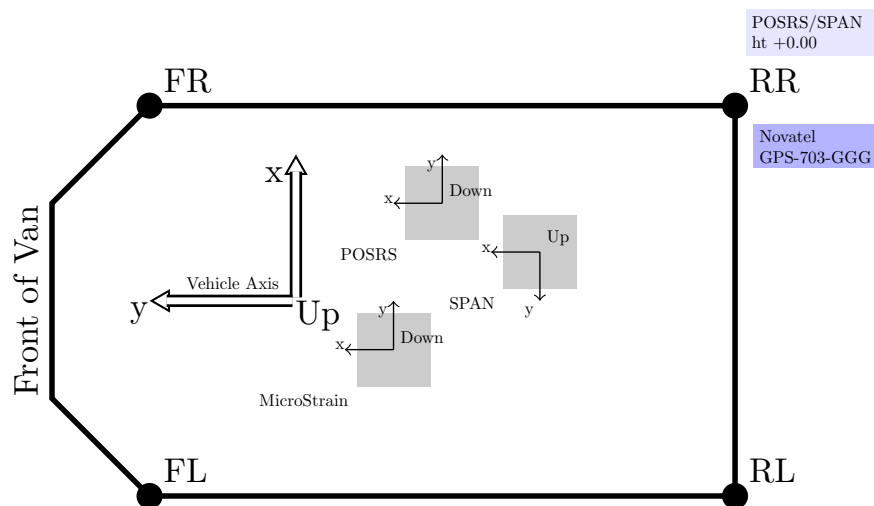

**Figure 1** – Van experiment layout

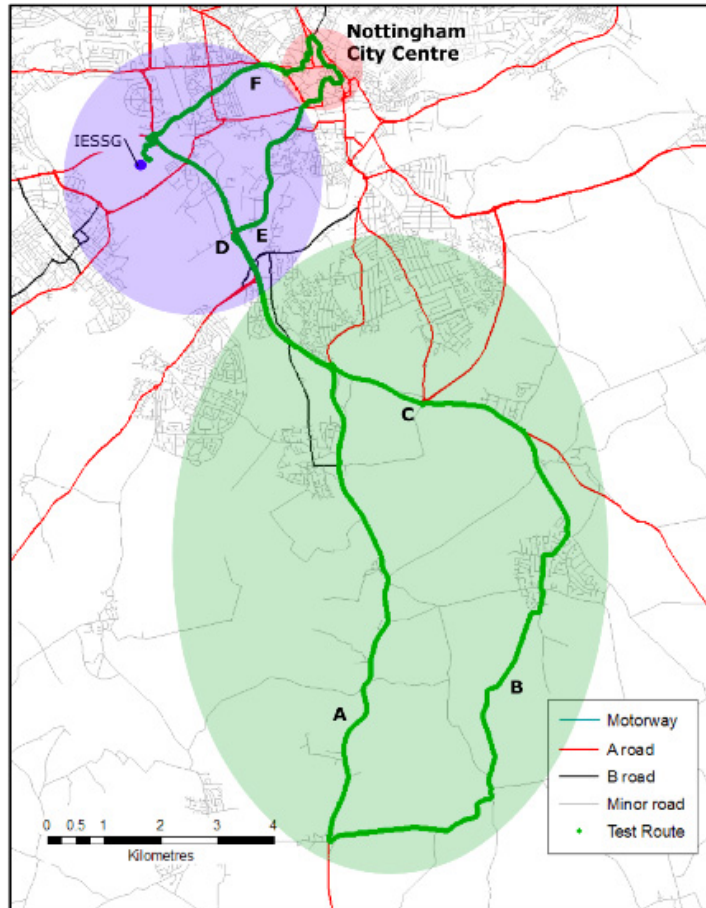

**Figure 2** – Test route plan

Sensor	Antenna	Lever Arm <sup>a</sup>		
		X	Y	Z
<b>POSRS</b>	RR	0.198	-0.830	0.552
	FL	-1.134	2.338	0.557
<b>SPAN</b>	RR	0.307	-0.626	0.543
	FL	-1.025	2.542	0.583

**Table 1** – Lever Arms for POSRS and SPAN

<sup>a</sup>Lever arm is estimated to the ARP. Direction IMU to antenna.

QN	Color	Description	3D Accuracy (m)
1	Green <sup>a</sup>	Fixed integer	0.00 – 0.15
2	Cyan <sup>a</sup>	Converged float or noisy fixed integer	0.05 – 0.40
3	Blue	Converging float	0.20 – 1.00
4	Purple	Converging float	0.50 – 2.00
5	Magenta <sup>b</sup>	DGPS	1.00 – 5.00
6	Red <sup>b</sup>	DGPS	2.00 – 10.00
	Grey	Not processed	

**Table 2** – IE Quality Number description

<sup>a</sup>Suggested accuracy for quality testing

<sup>b</sup>Not recommended for LC